 
 


INSTALLATION

Product Manual

 
 
Version: 150251US-01-25A-DY

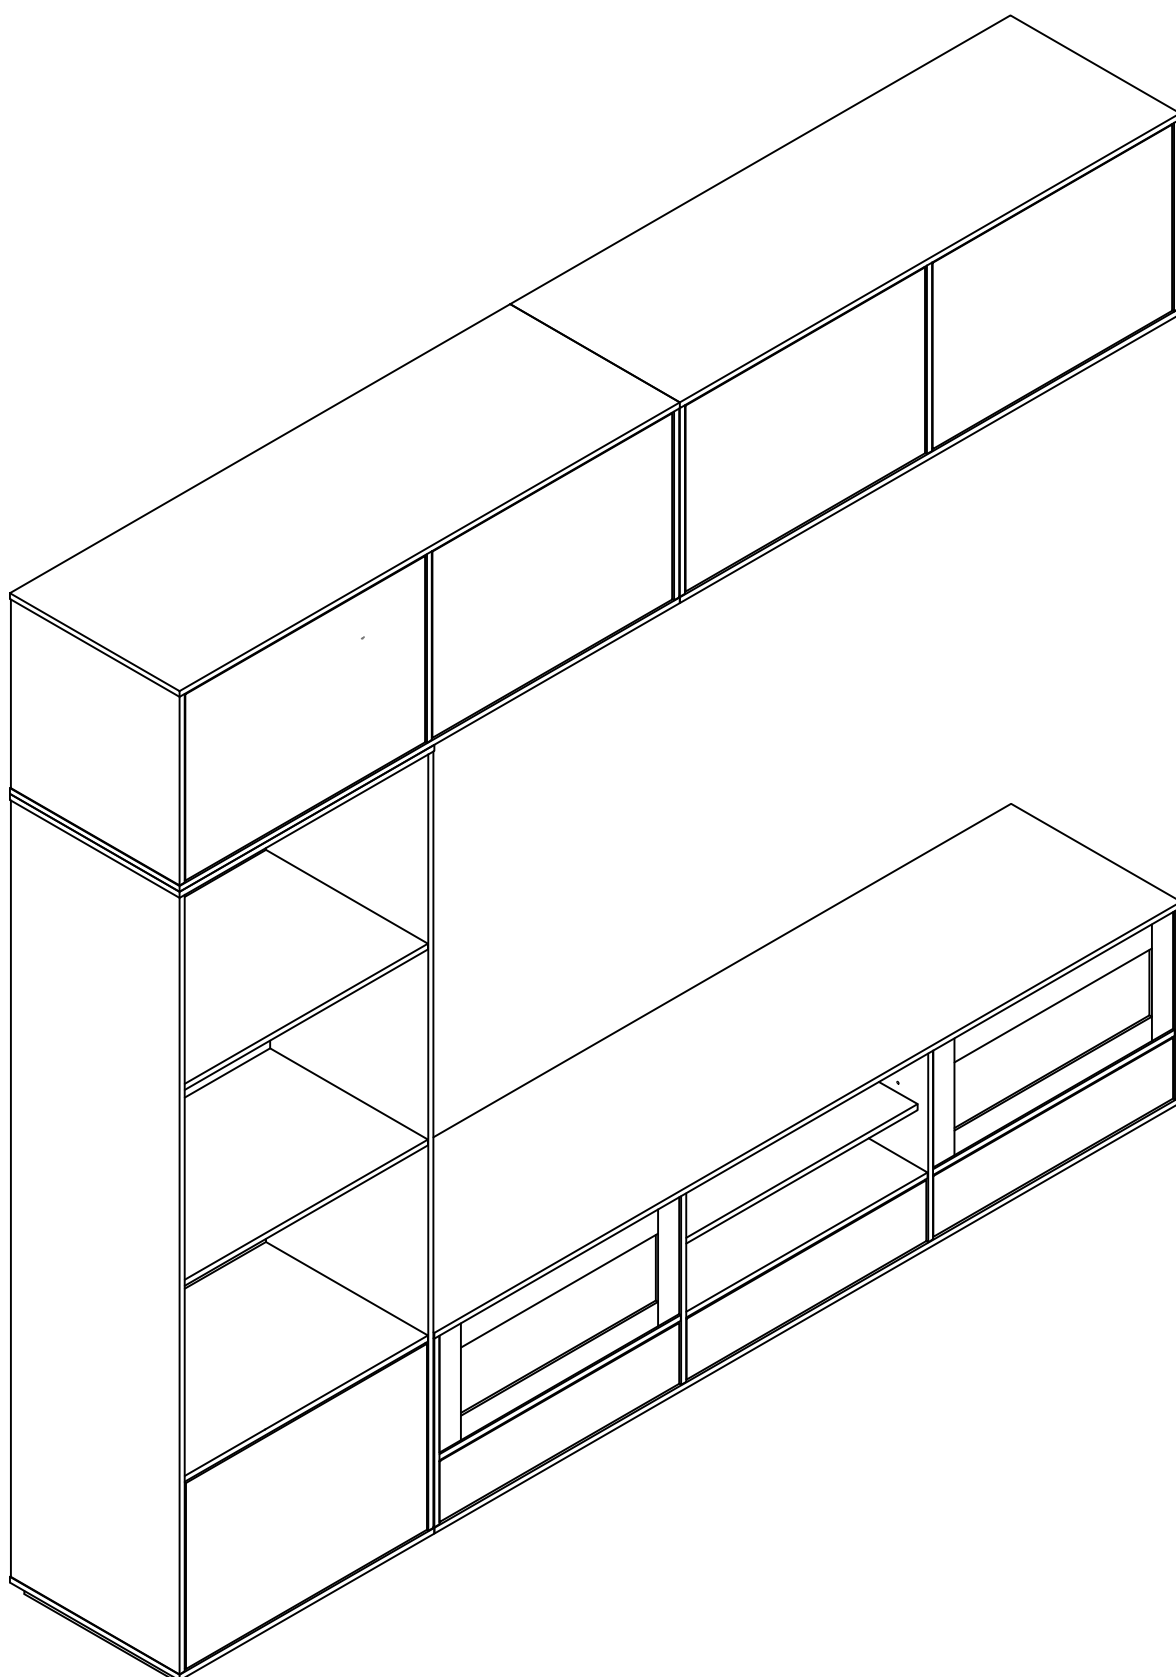

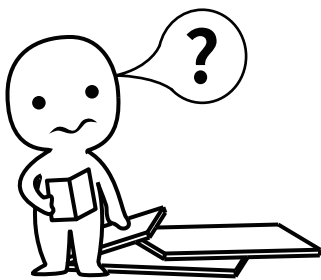


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

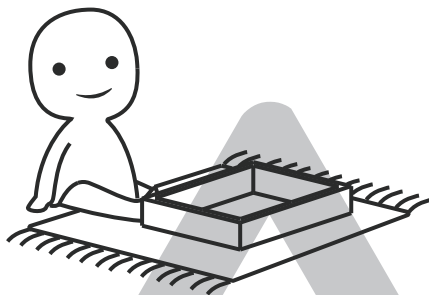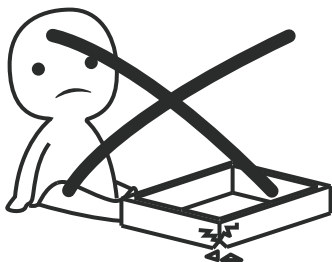



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

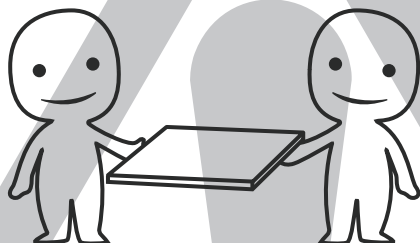

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

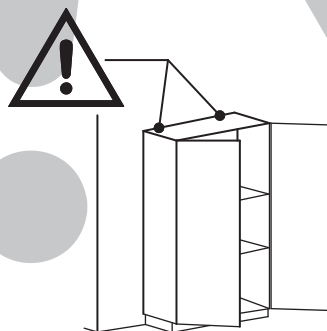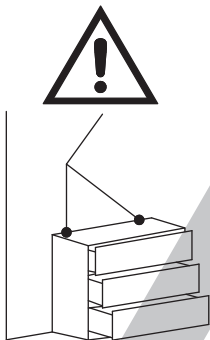

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.













Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

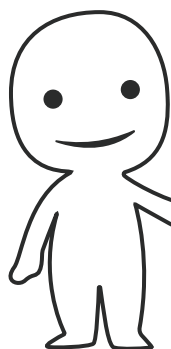


Please prepare the following tools

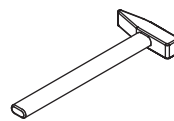   


            When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

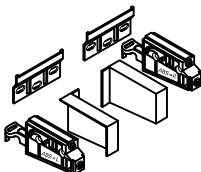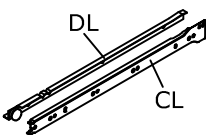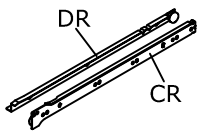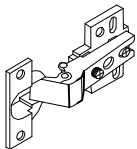A × 110+1  Ø6×35mm	B × 110+4  Ø15×9.5mm	C × 72+2  Ø6×30mm	D × 74+6  Ø3×12mm	E × 84+6  Ø3.5×12mm	F × 18+1  Ø4×20mm
G × 30+1  Ø4×40mm	H × 10  38mm×38mm	J × 36  Ø3×14mm	K × 3  300mm	L × 3  300mm	M × 3  300mm
N × 14  Ø6×20mm	P × 4  Ø4×12mm	Q × 2  Ø5×40mm	R × 20  Ø20mm	S × 110  Ø4×40mm	T × 8  Ø4×25mm
U × 12+1  Ø4×25mm					

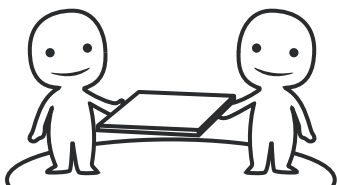 

ASSEMBLED BY 2 ADULTS

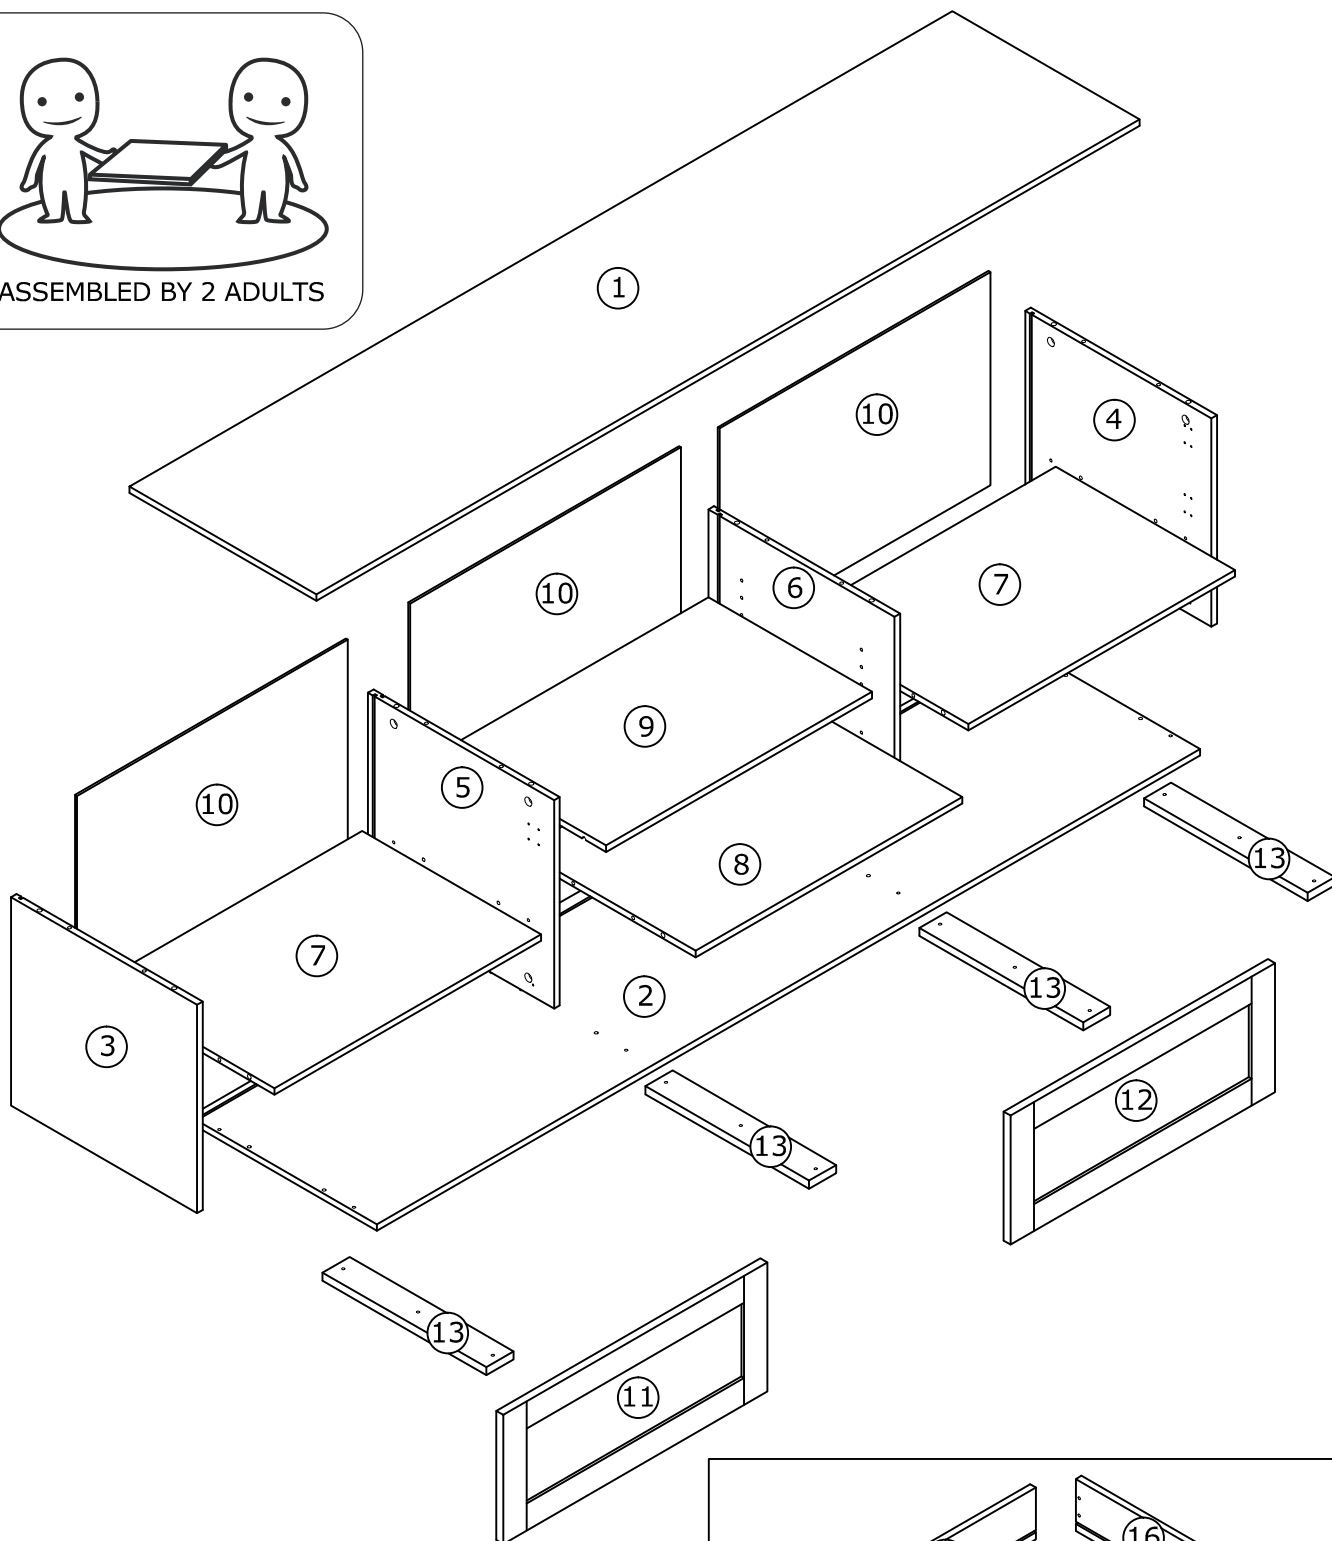 



⚠ WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

  *This is a permanent label.
Do not remove!*

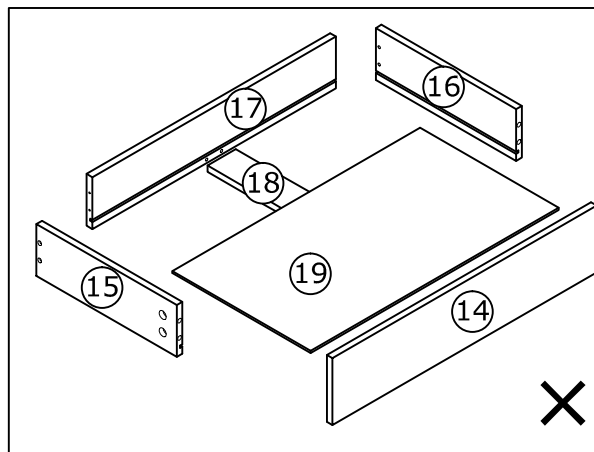

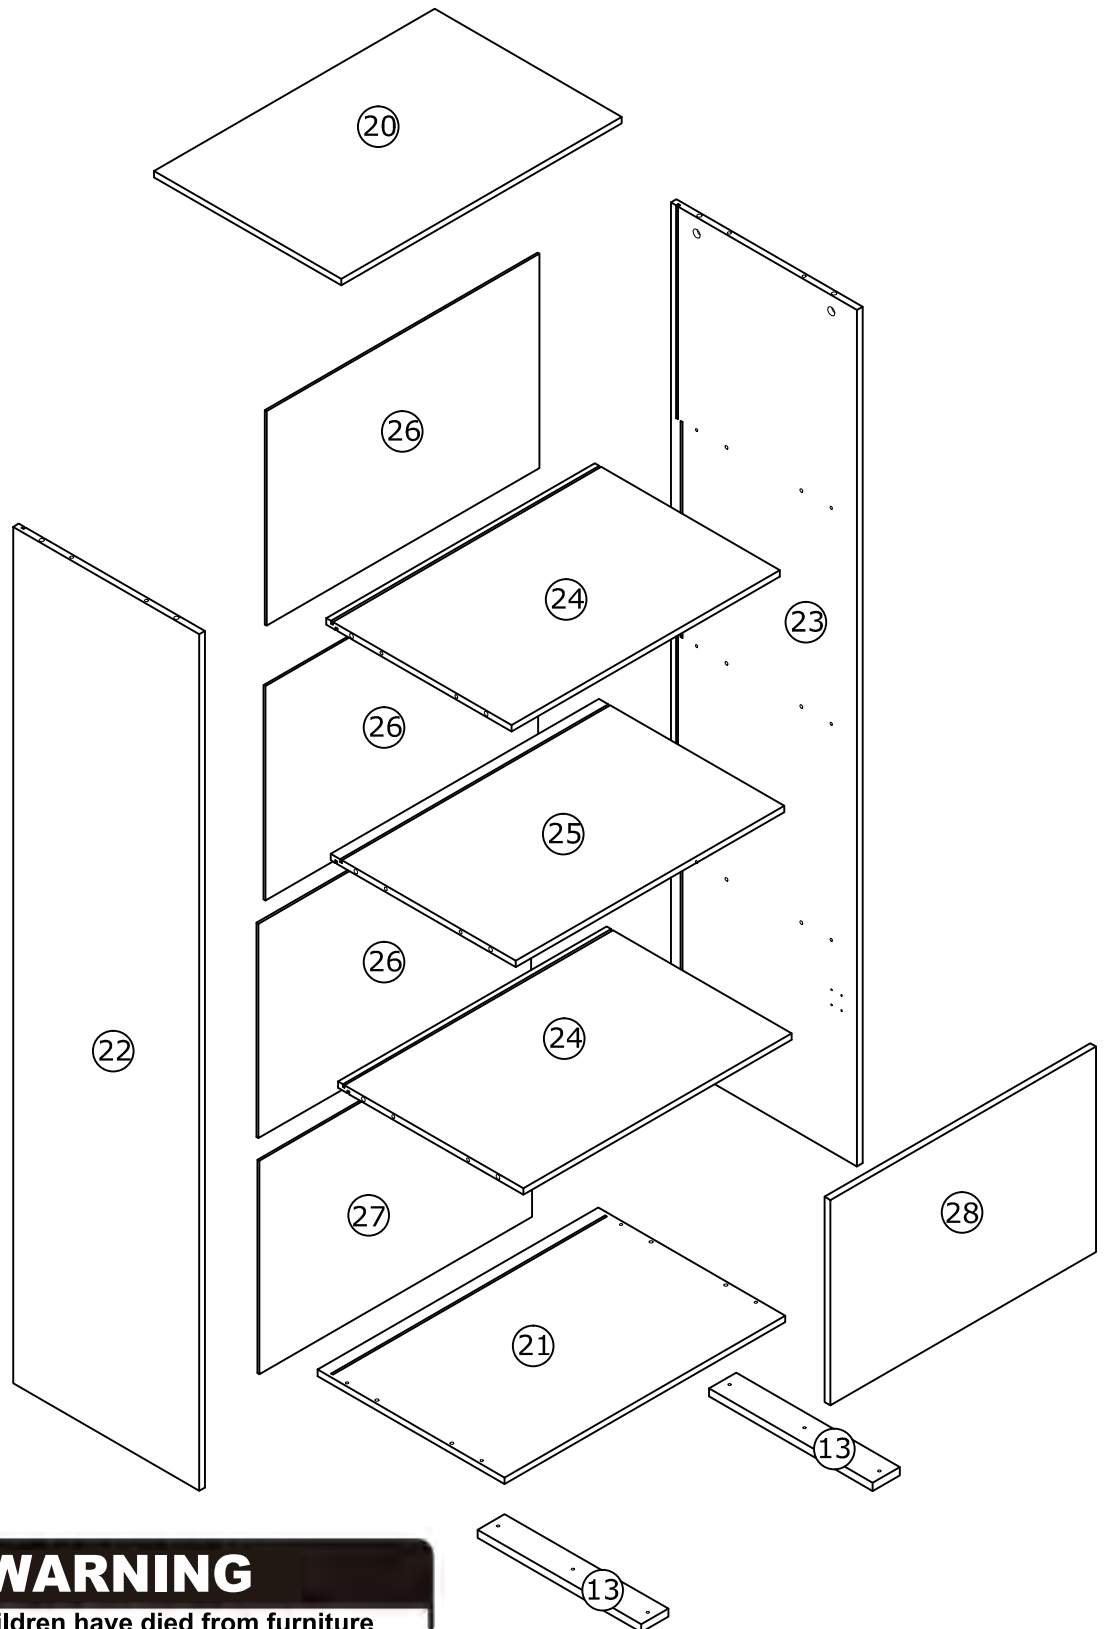


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*

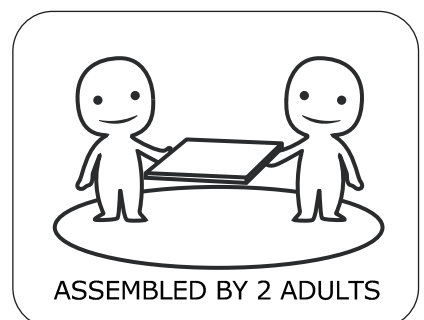

⚠ WARNING

 
 


Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.









*This is a permanent label.
Do not remove!*

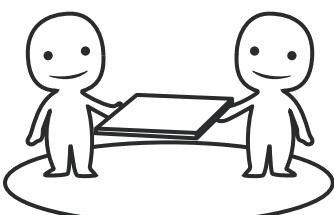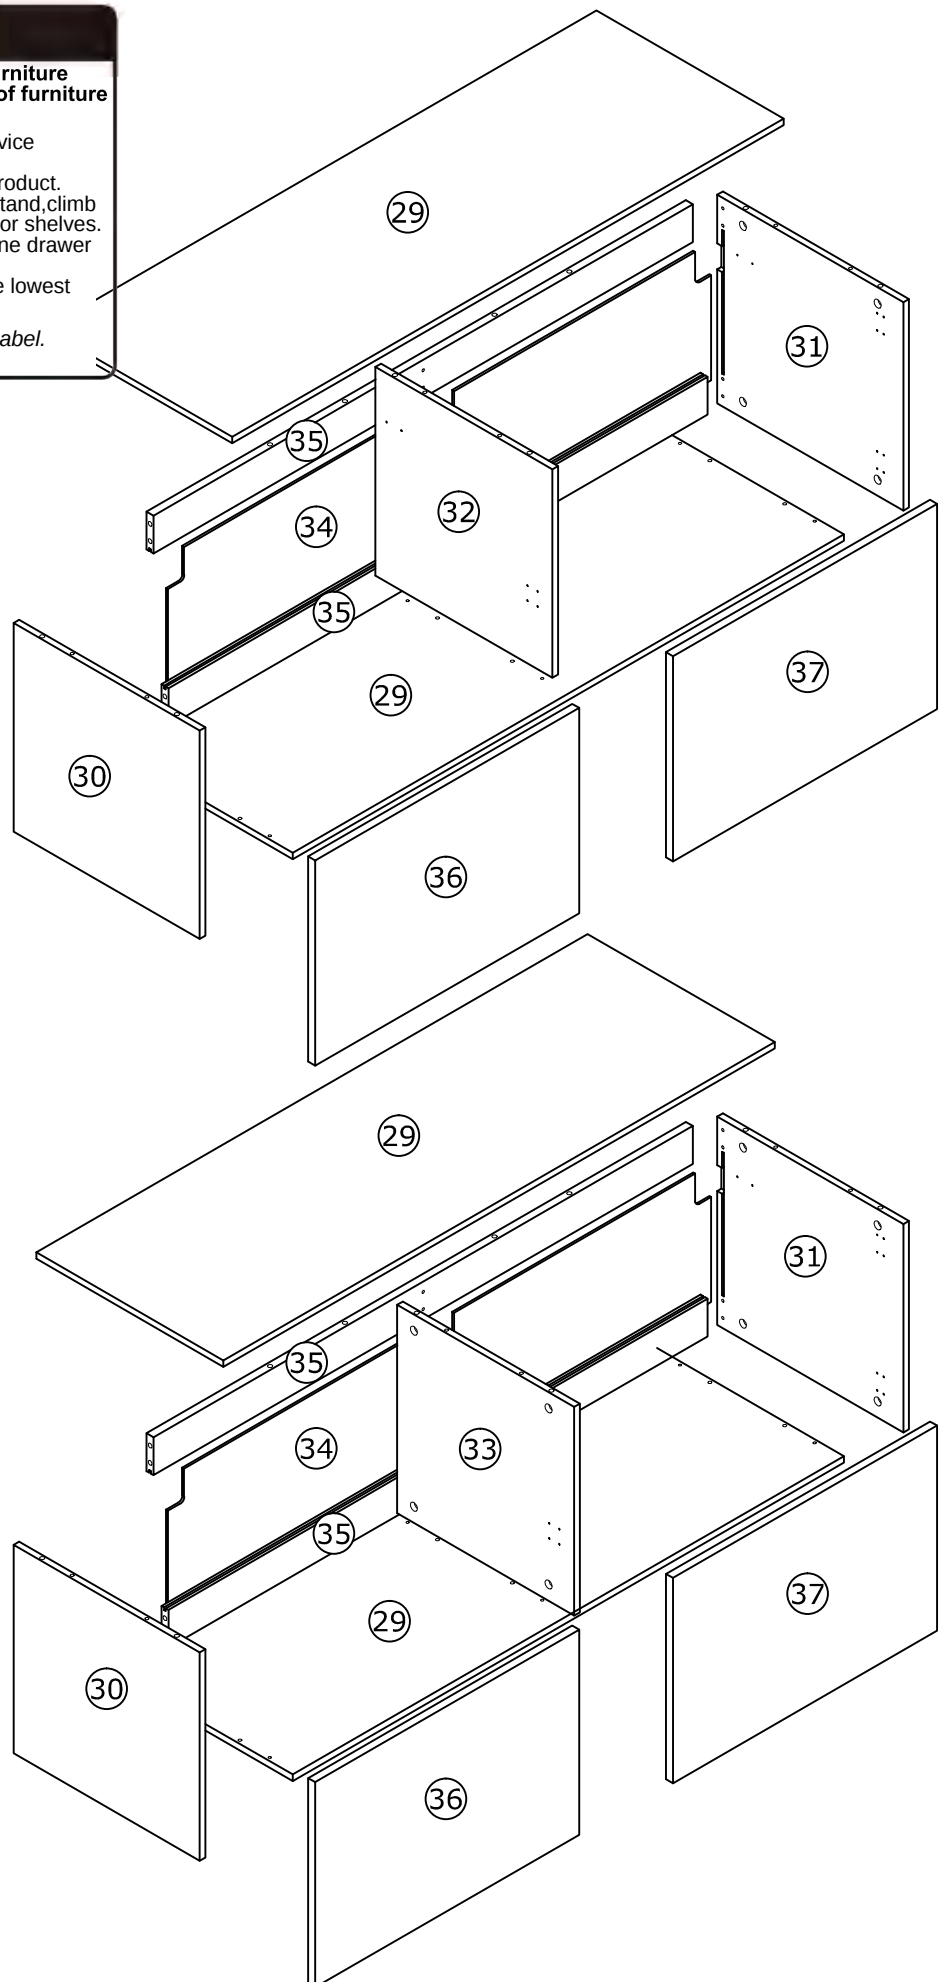

ASSEMBLED BY 2 ADULTS

   
1

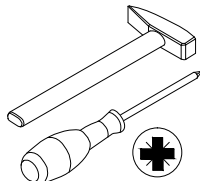A × 4  Ø6×35mm	C × 4  Ø6×30mm	D × 16  Ø3×12mm	H × 3  38mm×38mm	L × 1  300mm	M × 1  300mm	
---	---	--	---	--	---	---

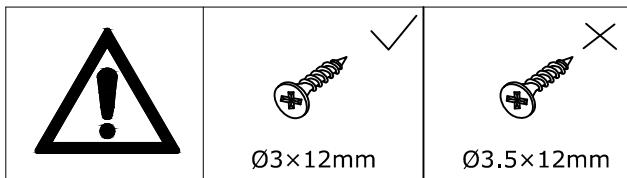 
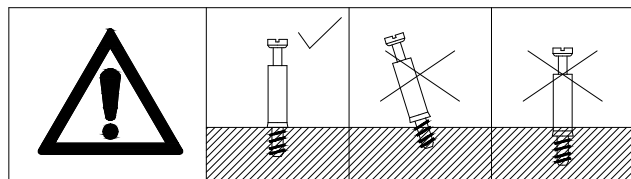 
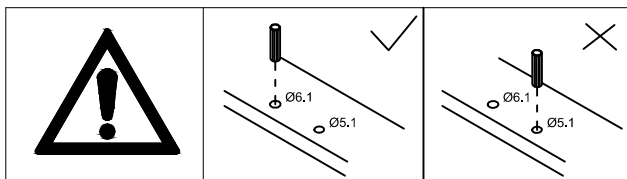 


Fix rail(L)(M) to board 3 and 4 with screw(D).


 
Screw eccentric rod(A) and insert wooden dowel(C) into as shown.



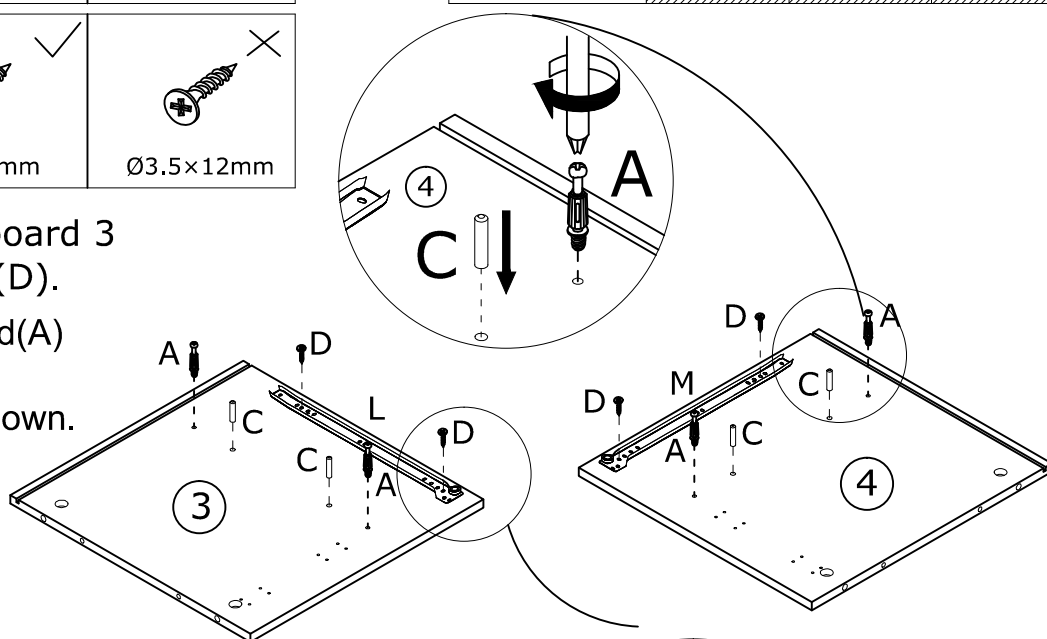


   Fix part(H) to panel 7 and 8 with screw(D) as shown.

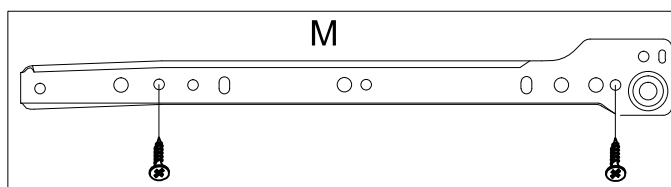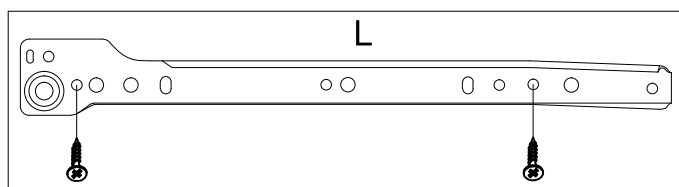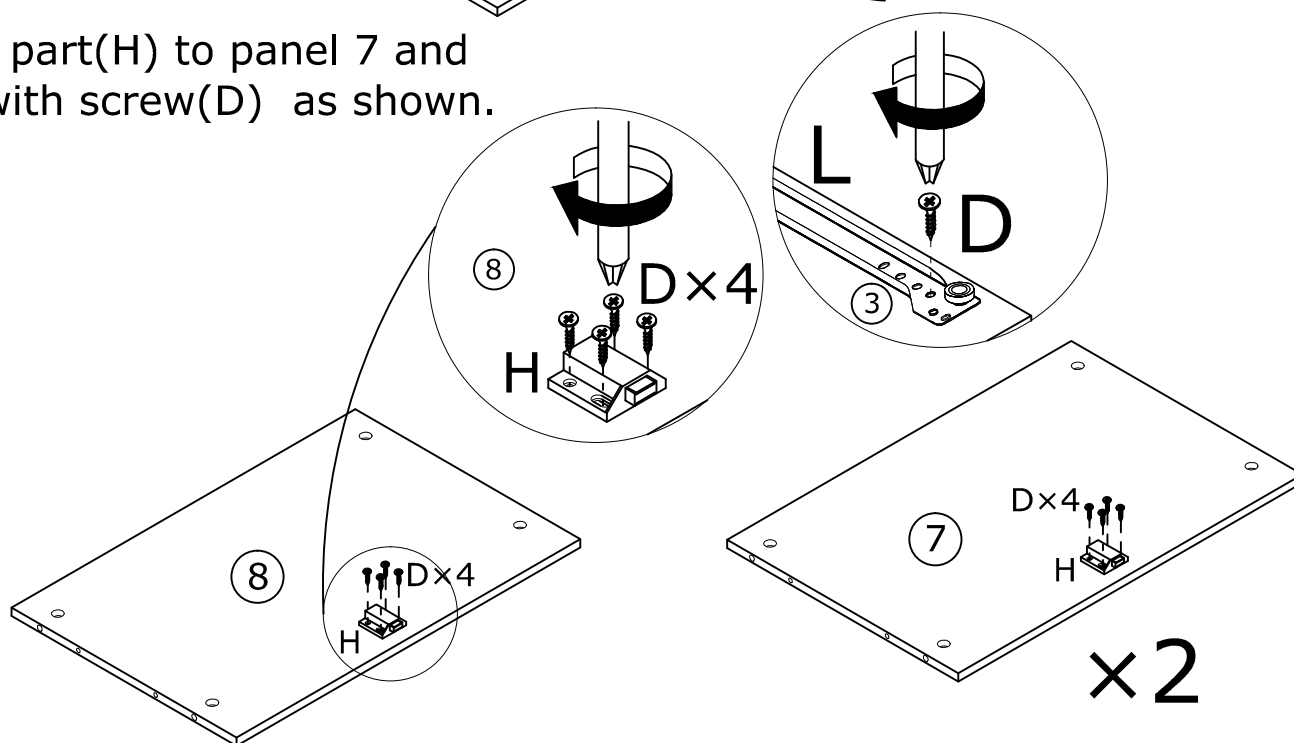

2

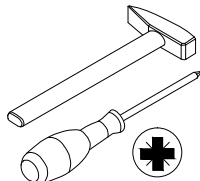  A × 8  Ø6×35mm	C × 8  Ø6×30mm	D × 16  Ø3×12mm	H × 2  38mm×38mm	L × 2  300mm	M × 2  300mm	
---	---	--	---	--	---	---

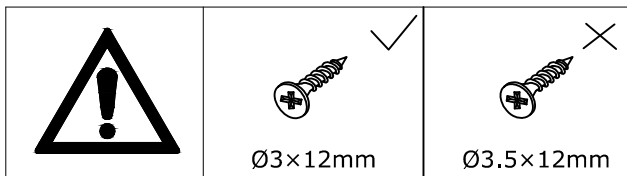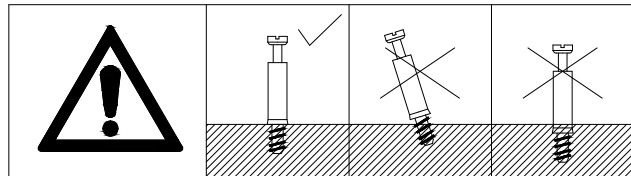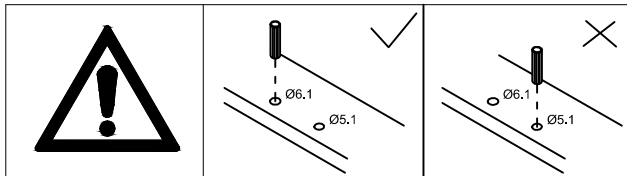   


Fix rail (L) (M) to board 5 and 6 with screw(D).




Then flip the board to back

Fix rail (L) (M) to board 5 and 6 with screw (D).

 Screw eccentric rod(A) and insert wooden dowel (C) into board 5 and 6 as shown.

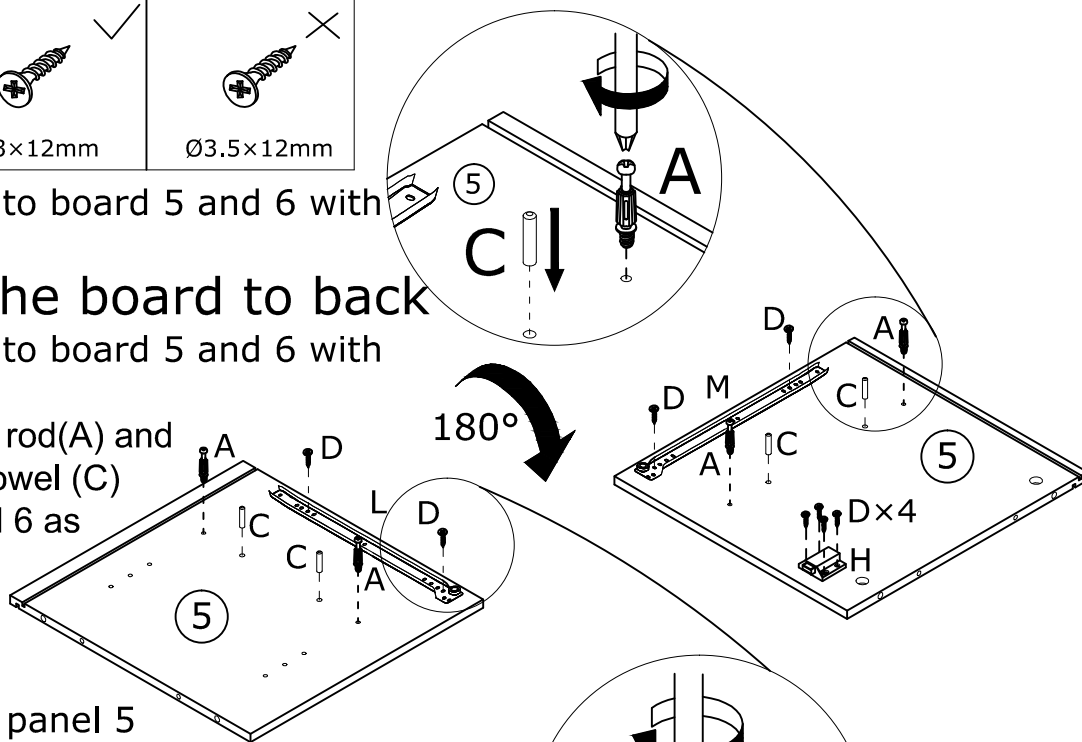

   Fix part(H) to panel 5 and 6 with screw (D) as shown.

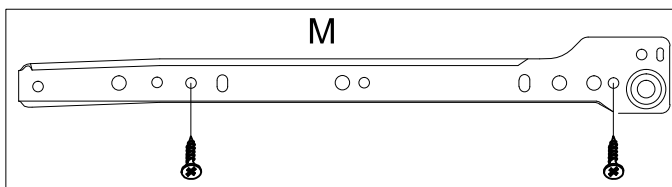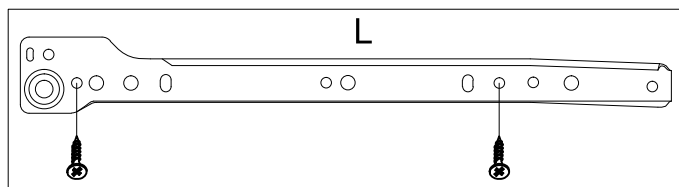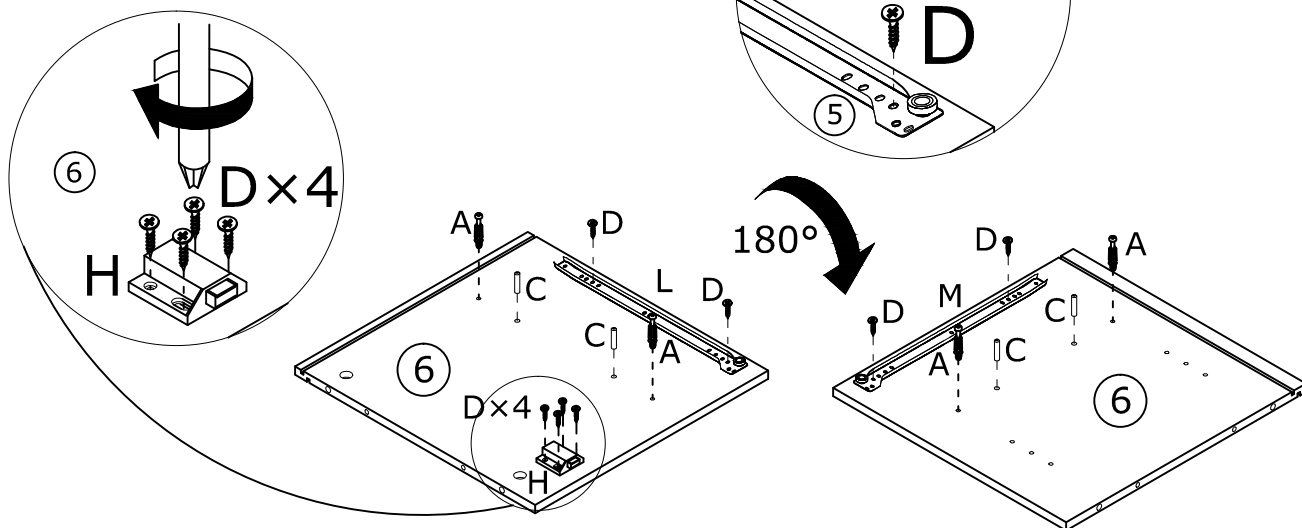


3



B × 4



 Ø15×9.5mm



  Attach board 5 and 6 to board 8, add cam lock (B) into 8 then turn clockwise to tighten as shown.

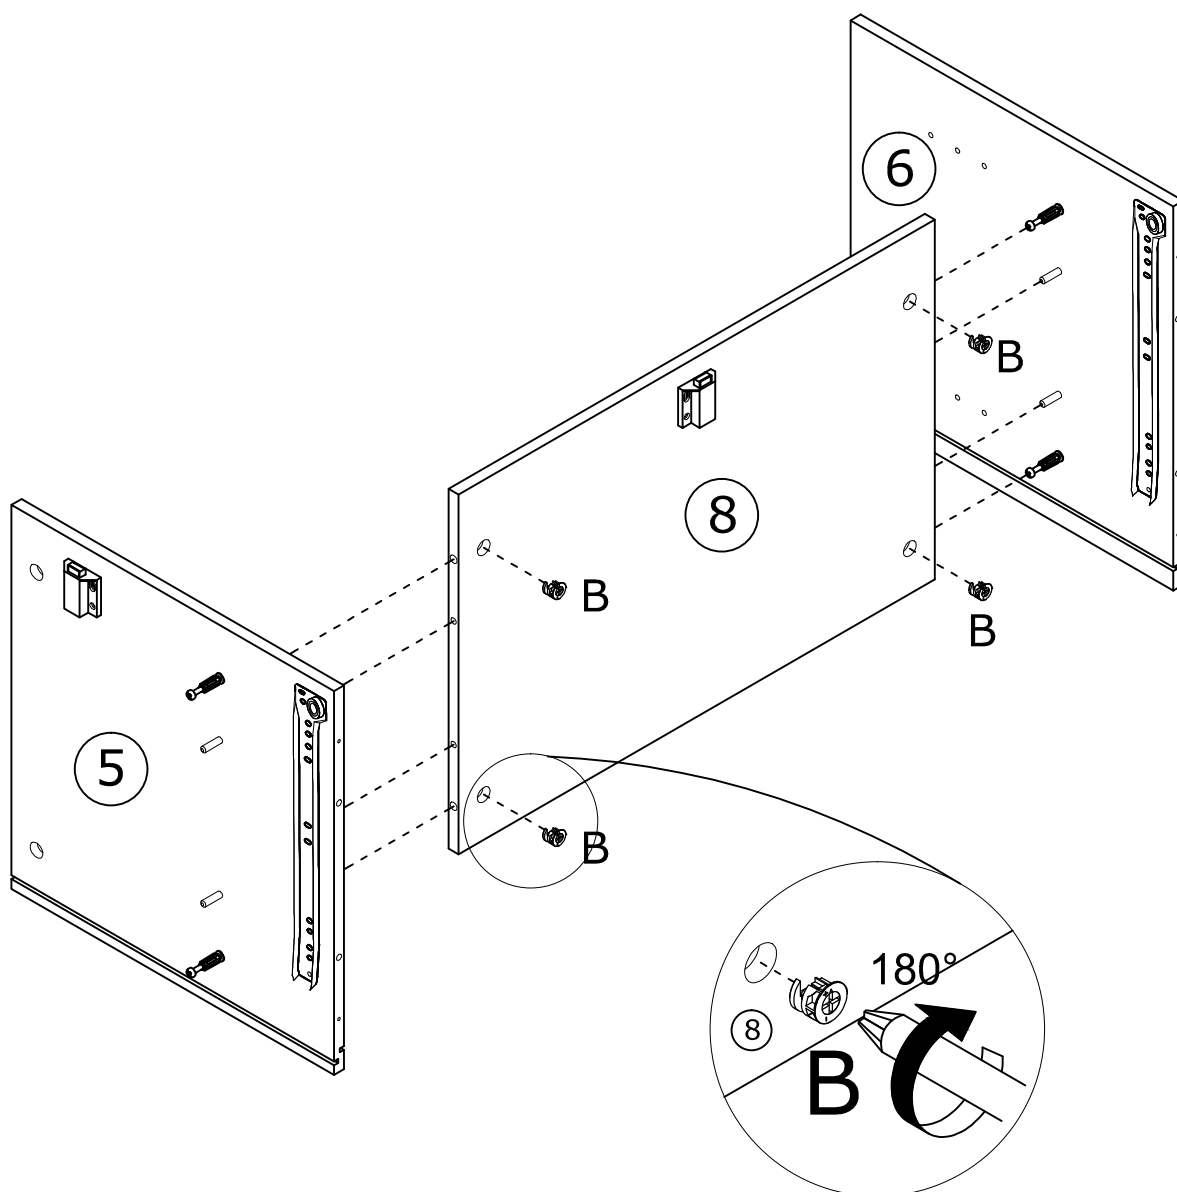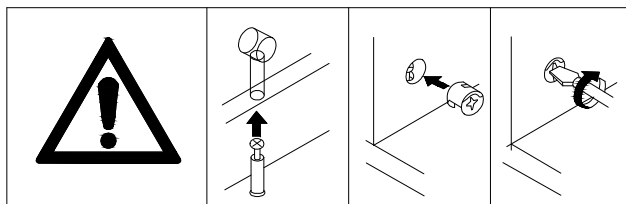


4



B × 8



 
Ø15×9.5mm



  
Attach board 3 and 4 to board 7, add cam lock (B) into 7 then turn clockwise to tighten as shown.

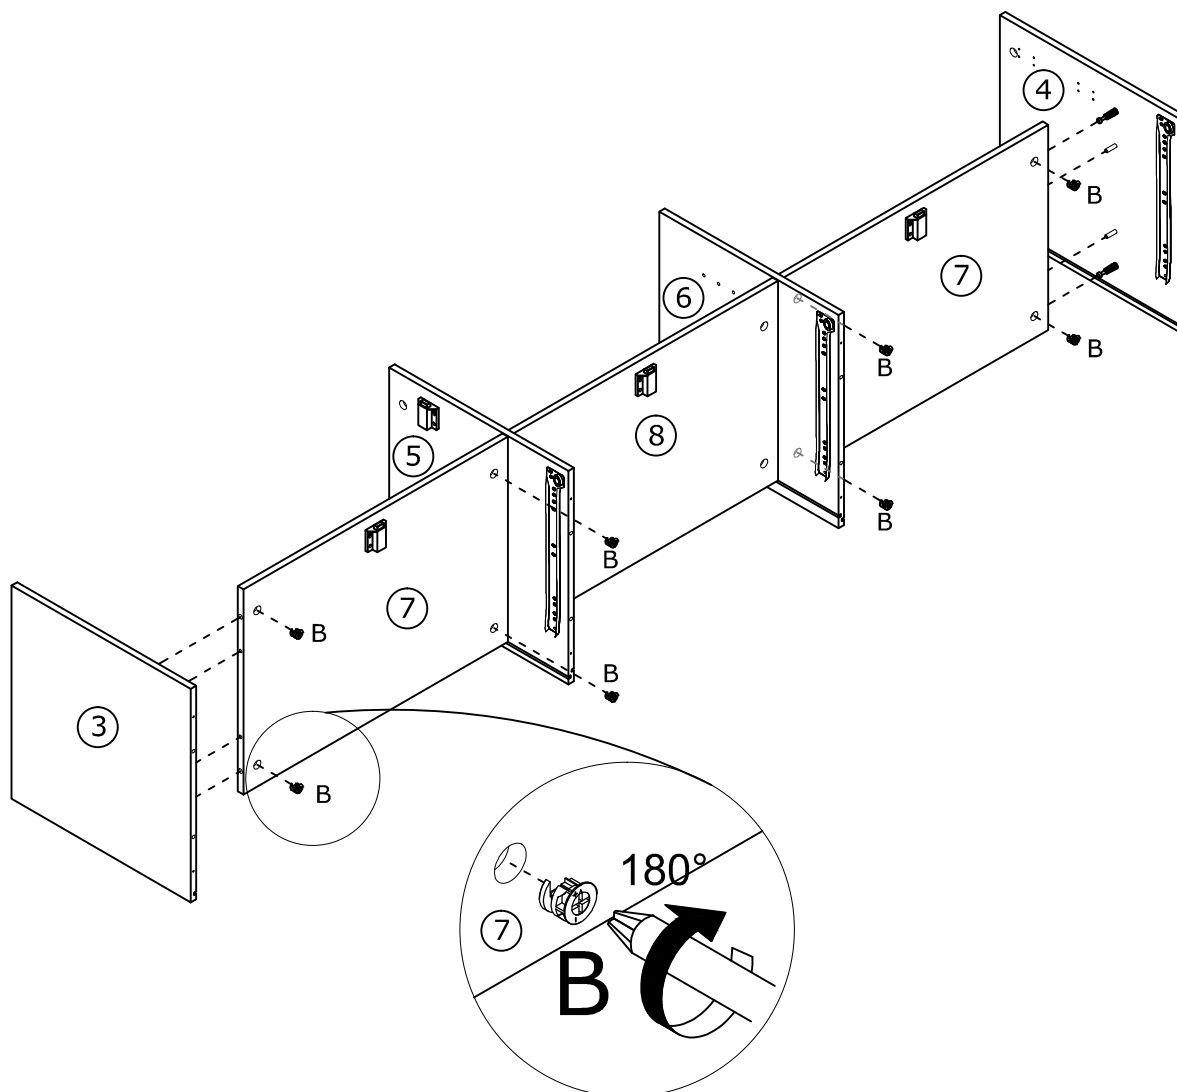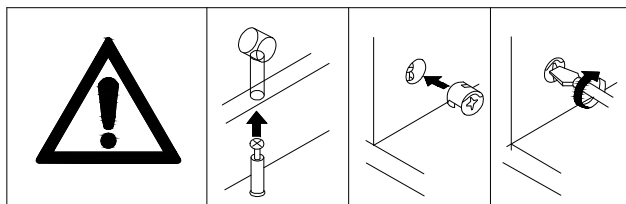

5

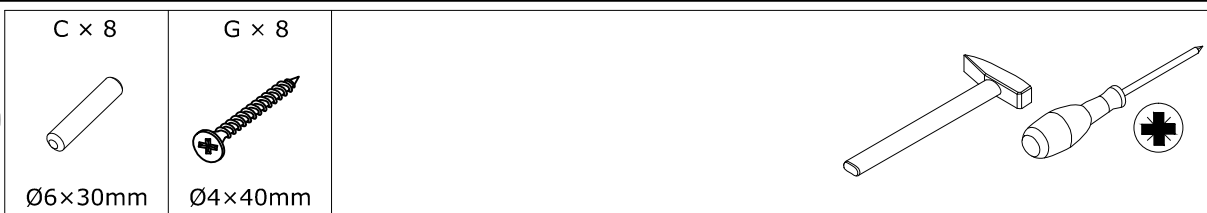 

 insert wooden dowel (C) into board 3 , 4, 5 and 6 as shown.
Fix board 2 to board 3 , 4, 5 and 6 with screw(G) as shown.


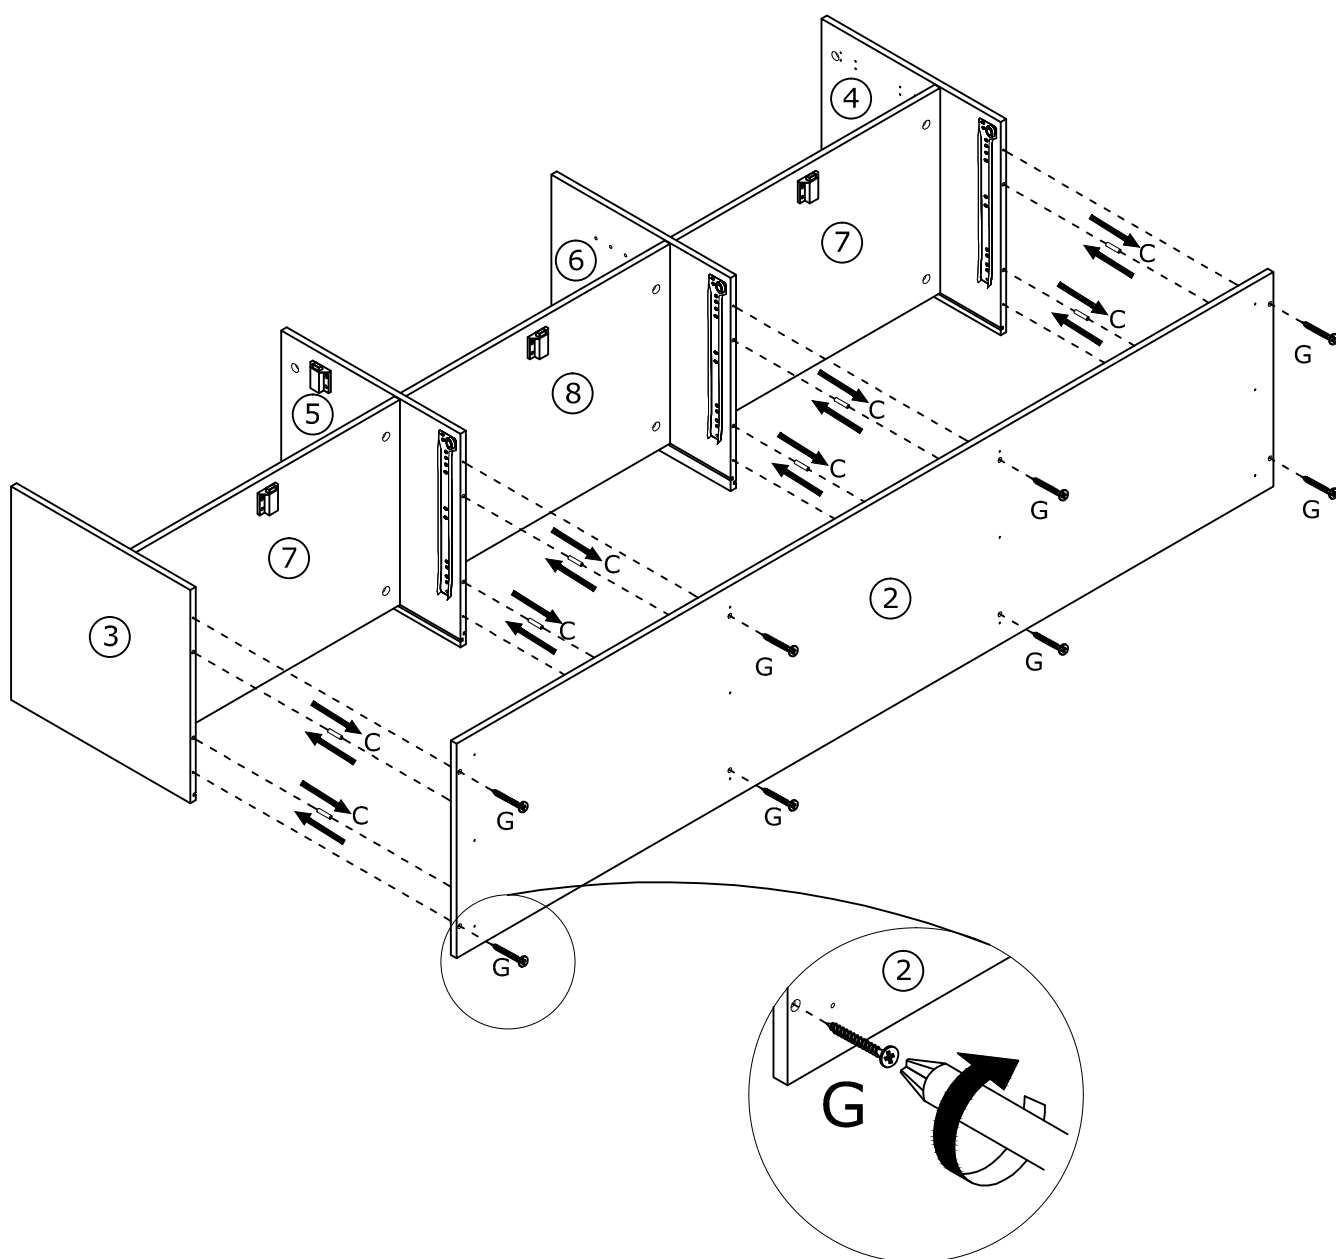


6


F × 12



  Ø4×20mm




Ø4×20mm








 


Ø4×25mm

 
Fix board 13 to board 2 with screw (F) as shown.

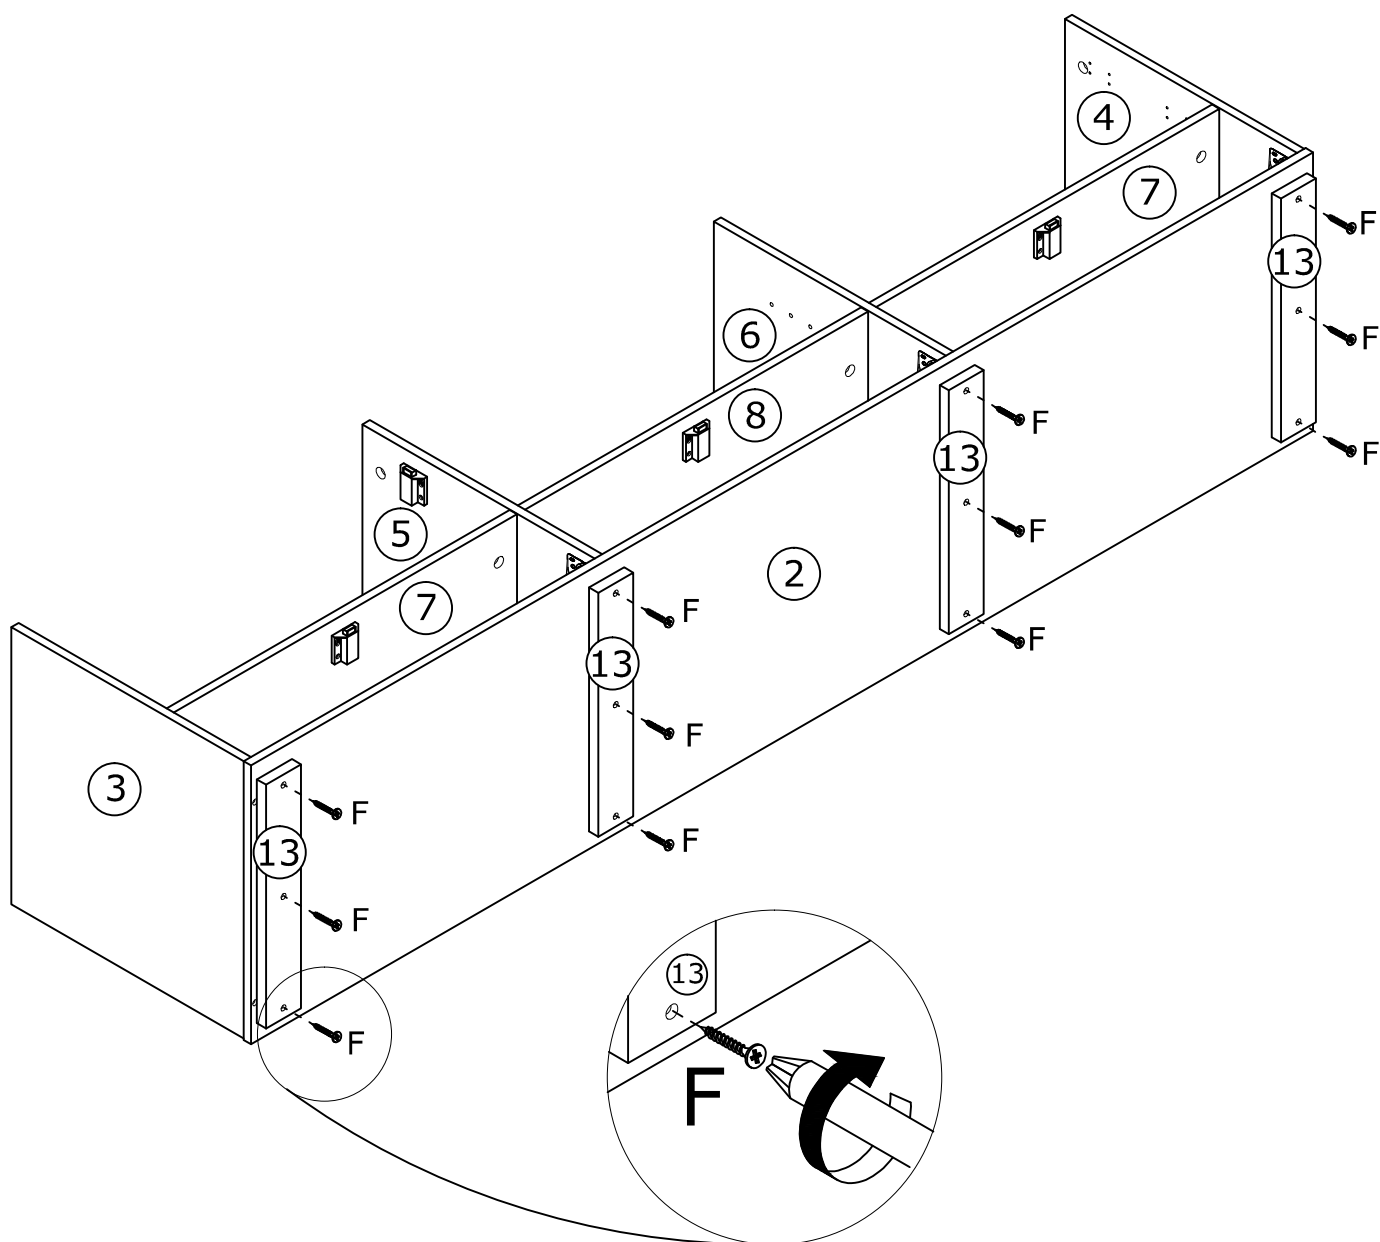

7

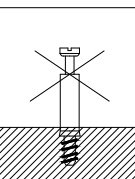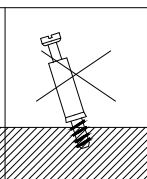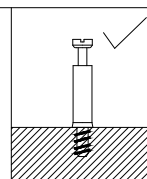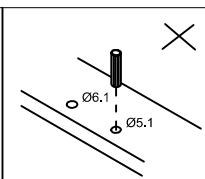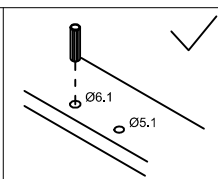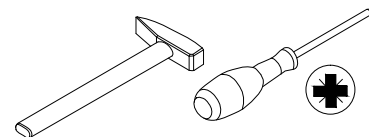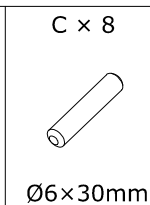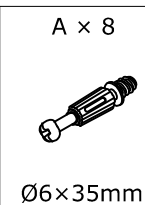        


 Screw eccentric rod(A) and insert wooden dowel(C)
into board 1 as shown.

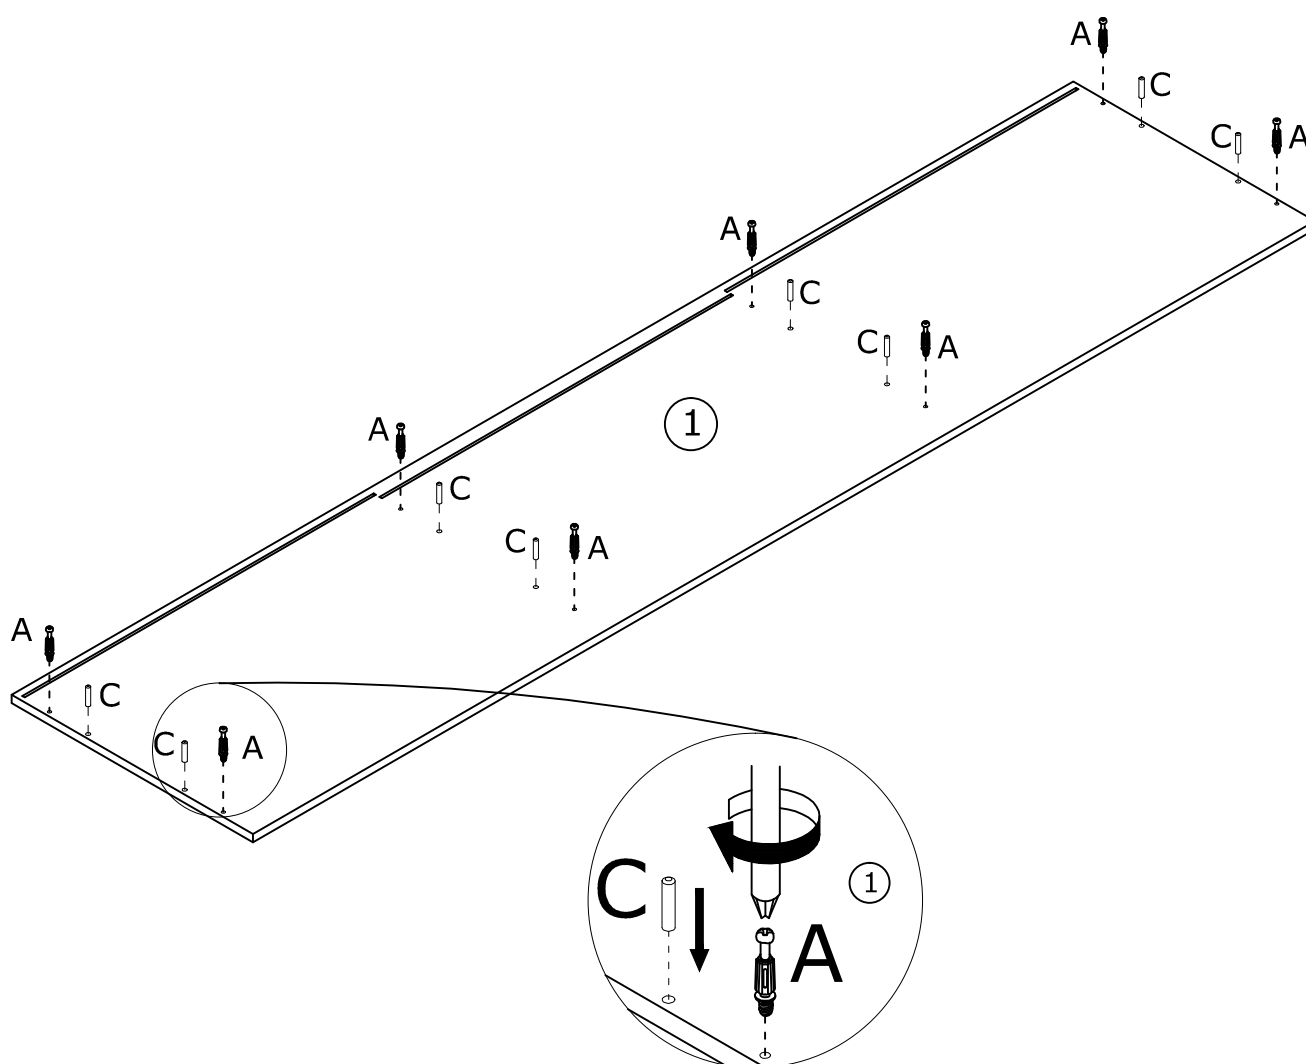

8

 Insert back board 10 along available grooves as shown.

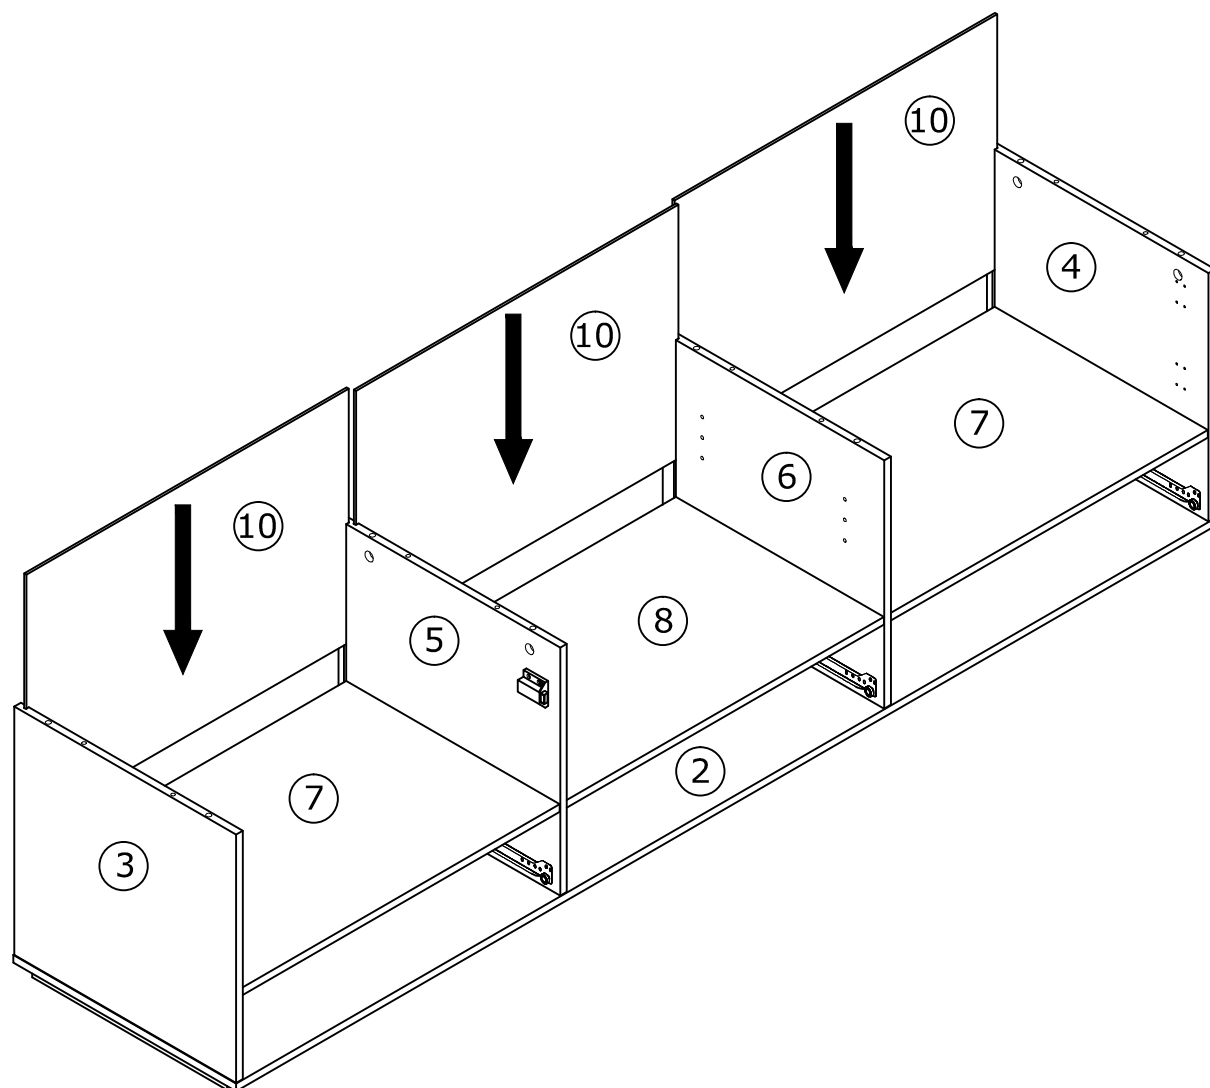


9



B × 8



 
Ø15×9.5mm






  Attach board 1 to board 3, 4, 5 and 6 add cam lock(B) into 3, 4, 5 and 6 then turn clockwise to tighten as shown.

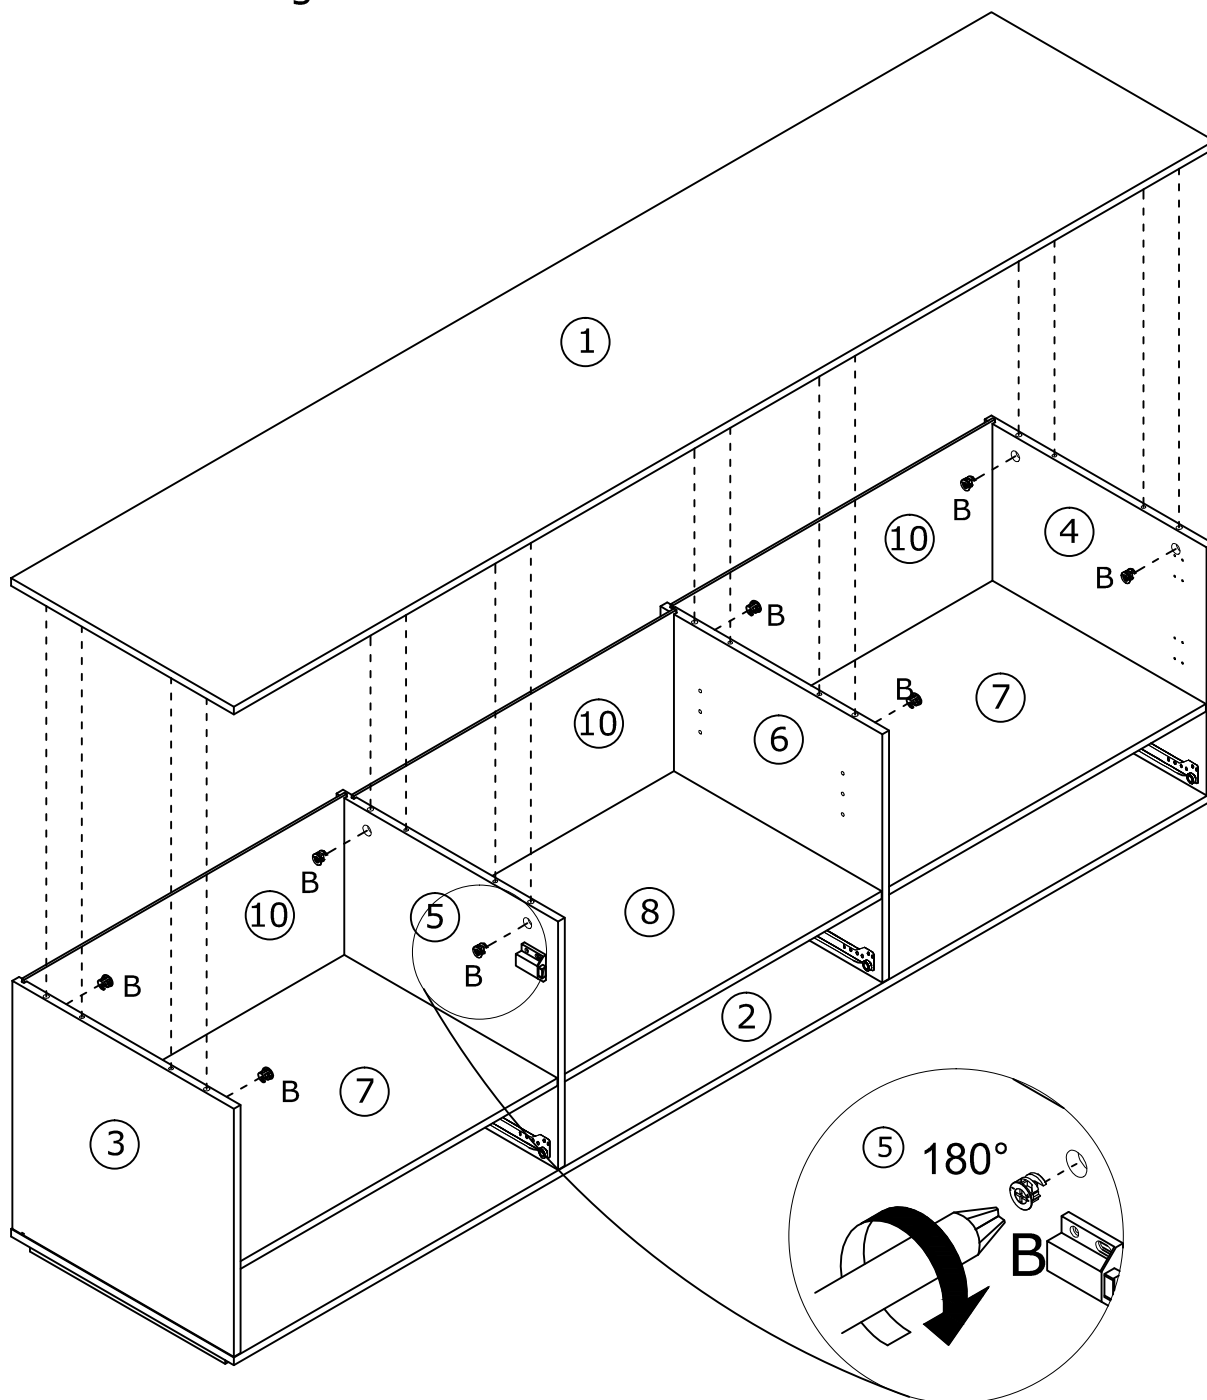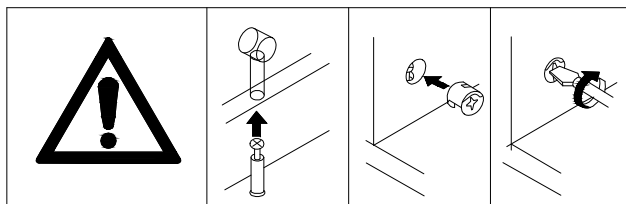


10

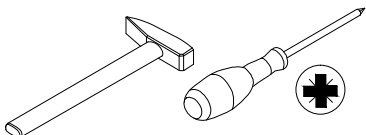 
A × 12  Ø6×35mm	C × 12  Ø6×30mm	D × 4  Ø3×12mm	H × 1  38mm×38mm	
---	---	--	--	---

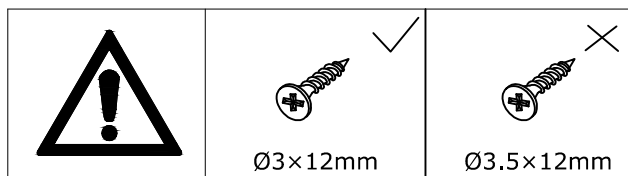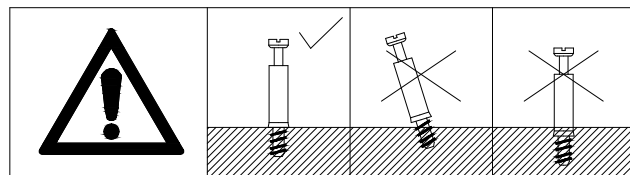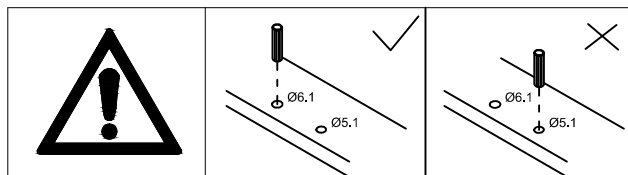   

 Eccentric rod (A) and insert wooden dowel (C) into board 22 and 23 as shown.

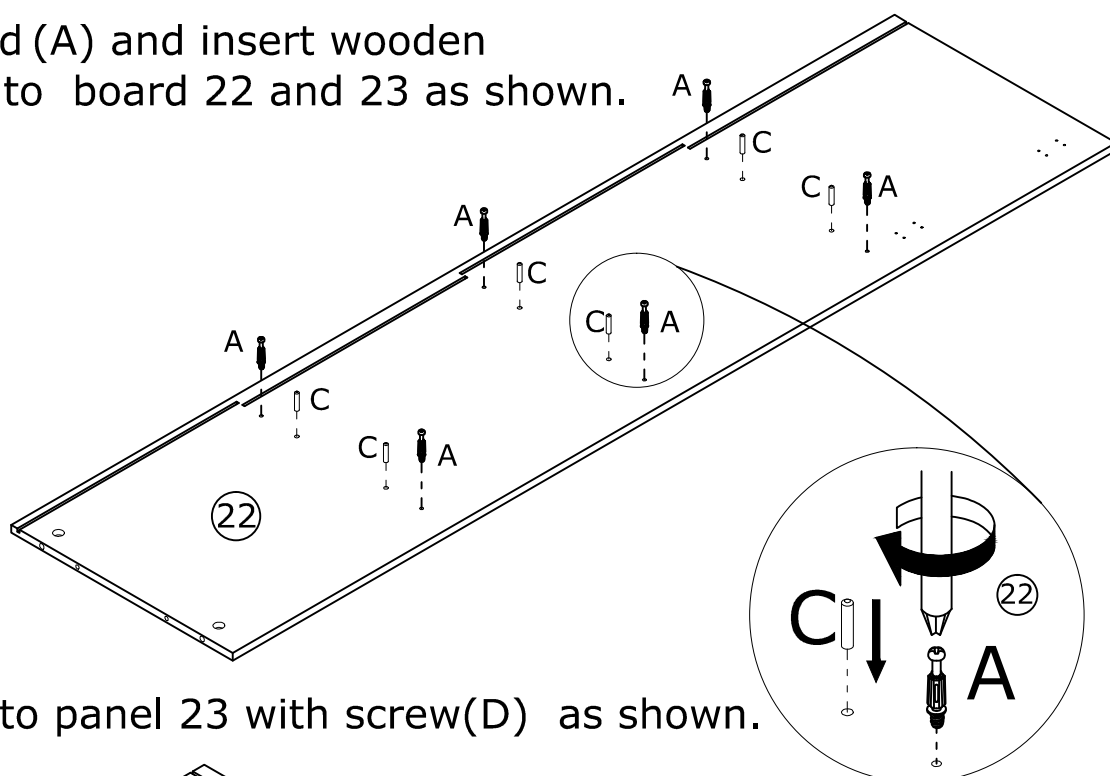

 Fix part(H) to panel 23 with screw(D) as shown.

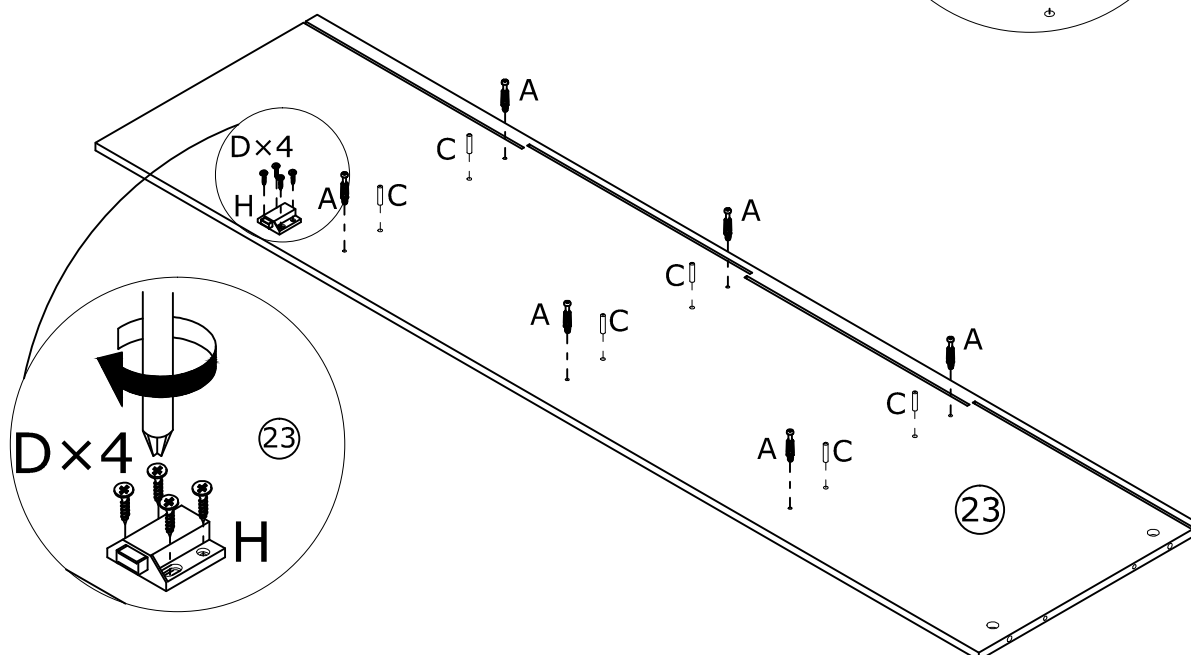


11



B × 6



 Ø15×9.5mm

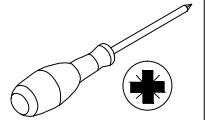


  Attach board 23 to board 24 and 25 add cam lock (B) into 24 and 25 then turn clockwise to tighten as shown.

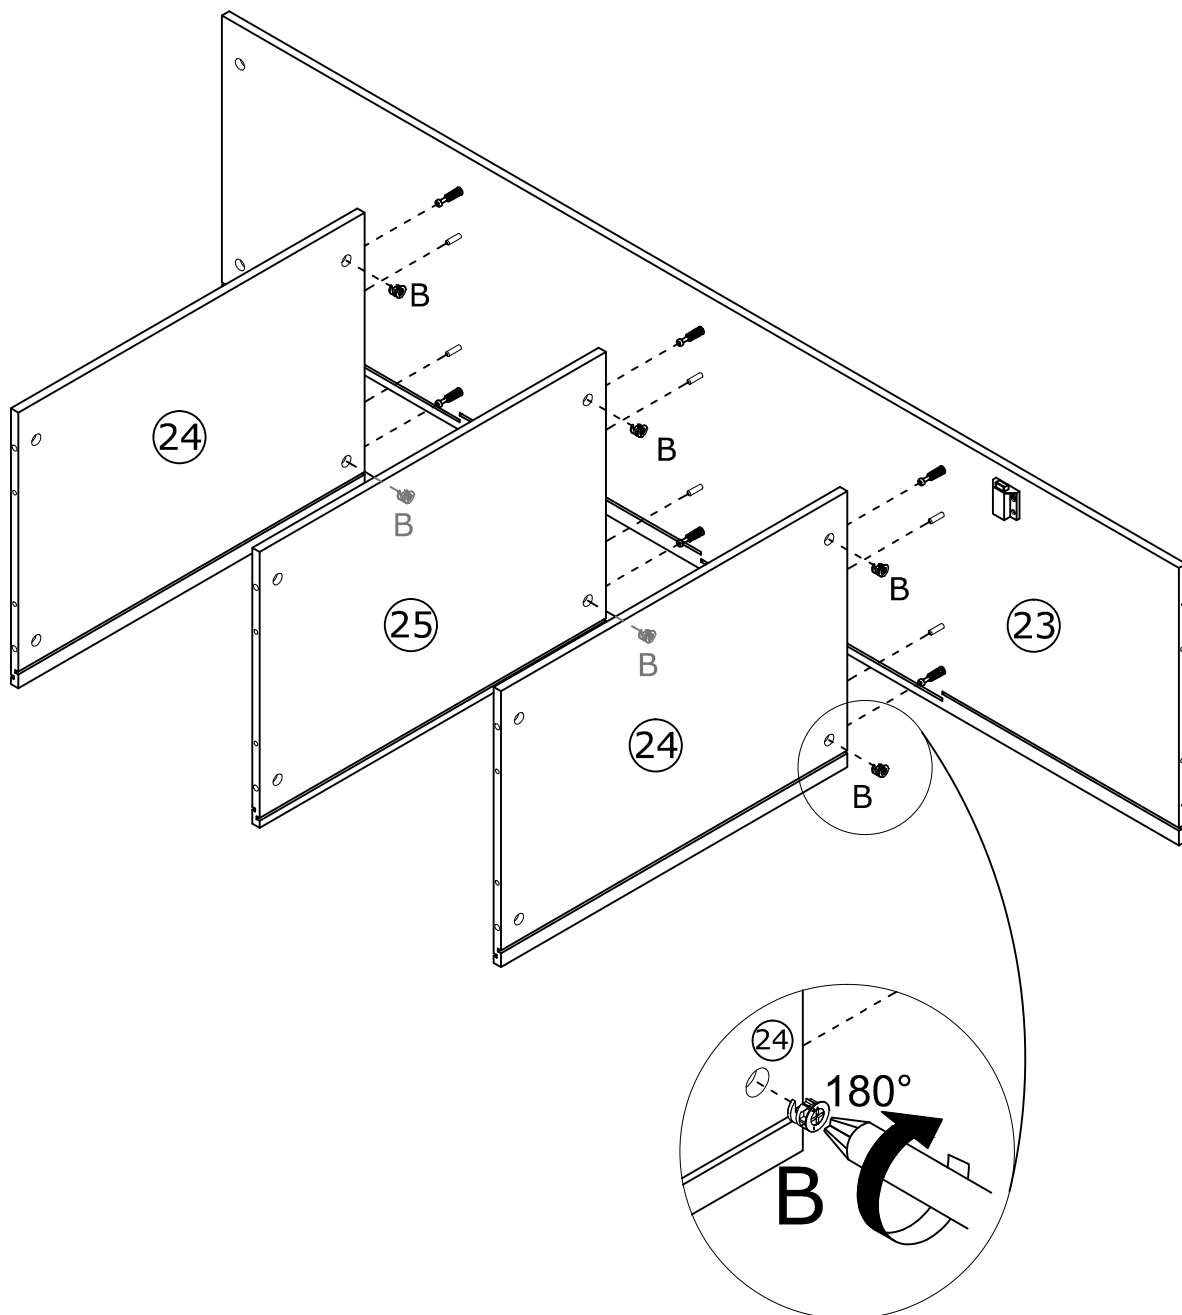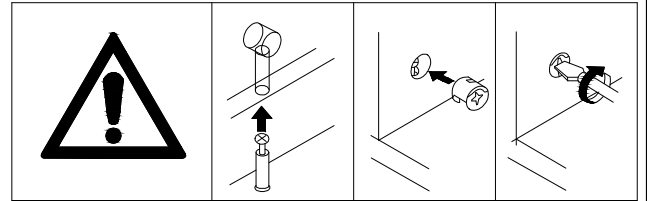

12

 Insert back board 26 along available grooves as shown.

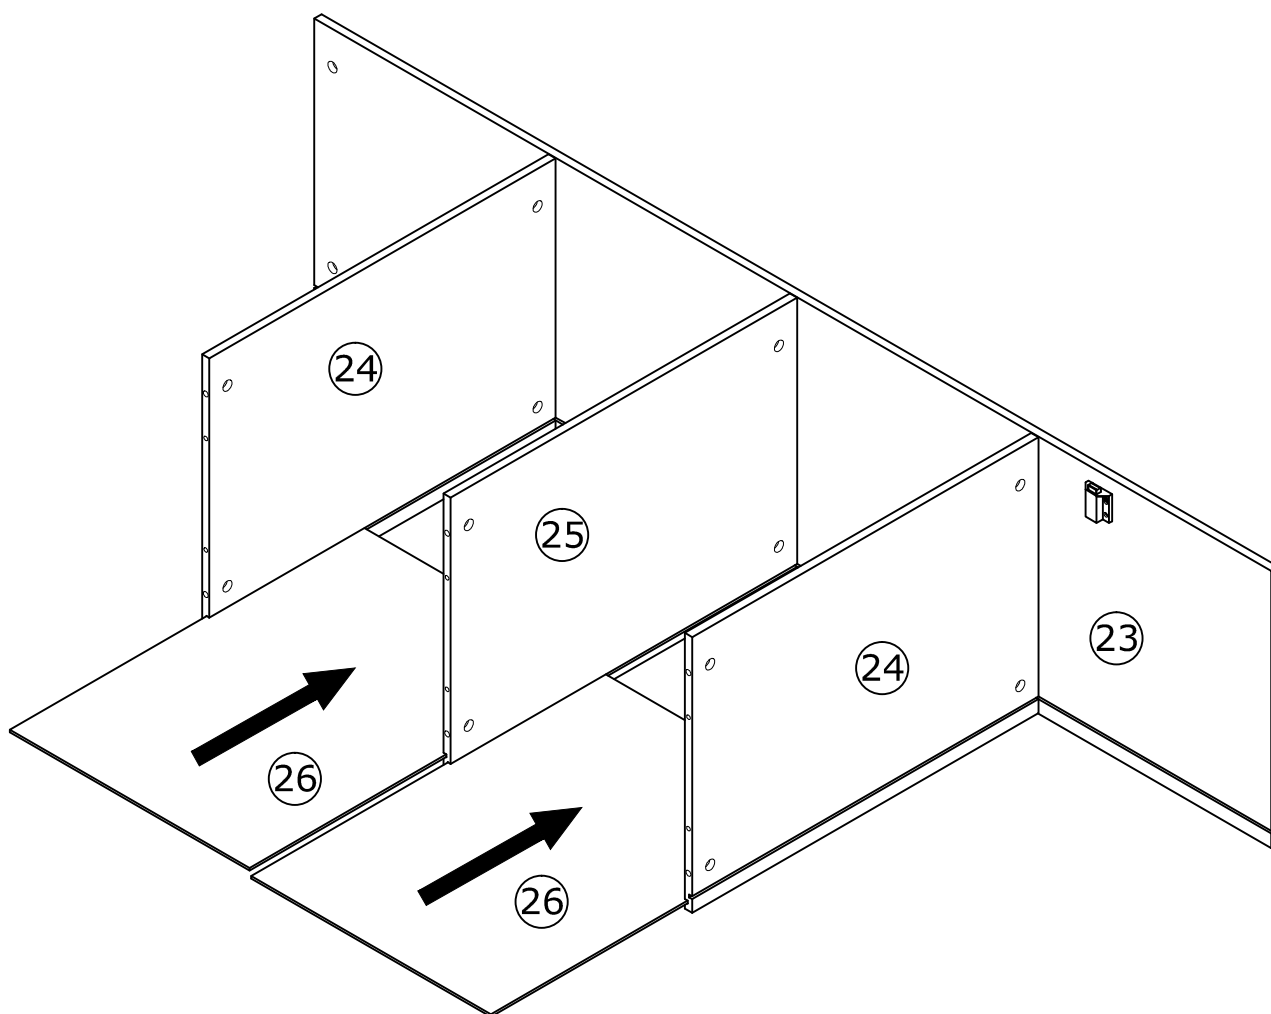


13



B × 6



 Ø15×9.5mm




  Attach board 22 to board 24 and 25 add cam lock (B) into 24 and 25 then turn clockwise to tighten as shown.

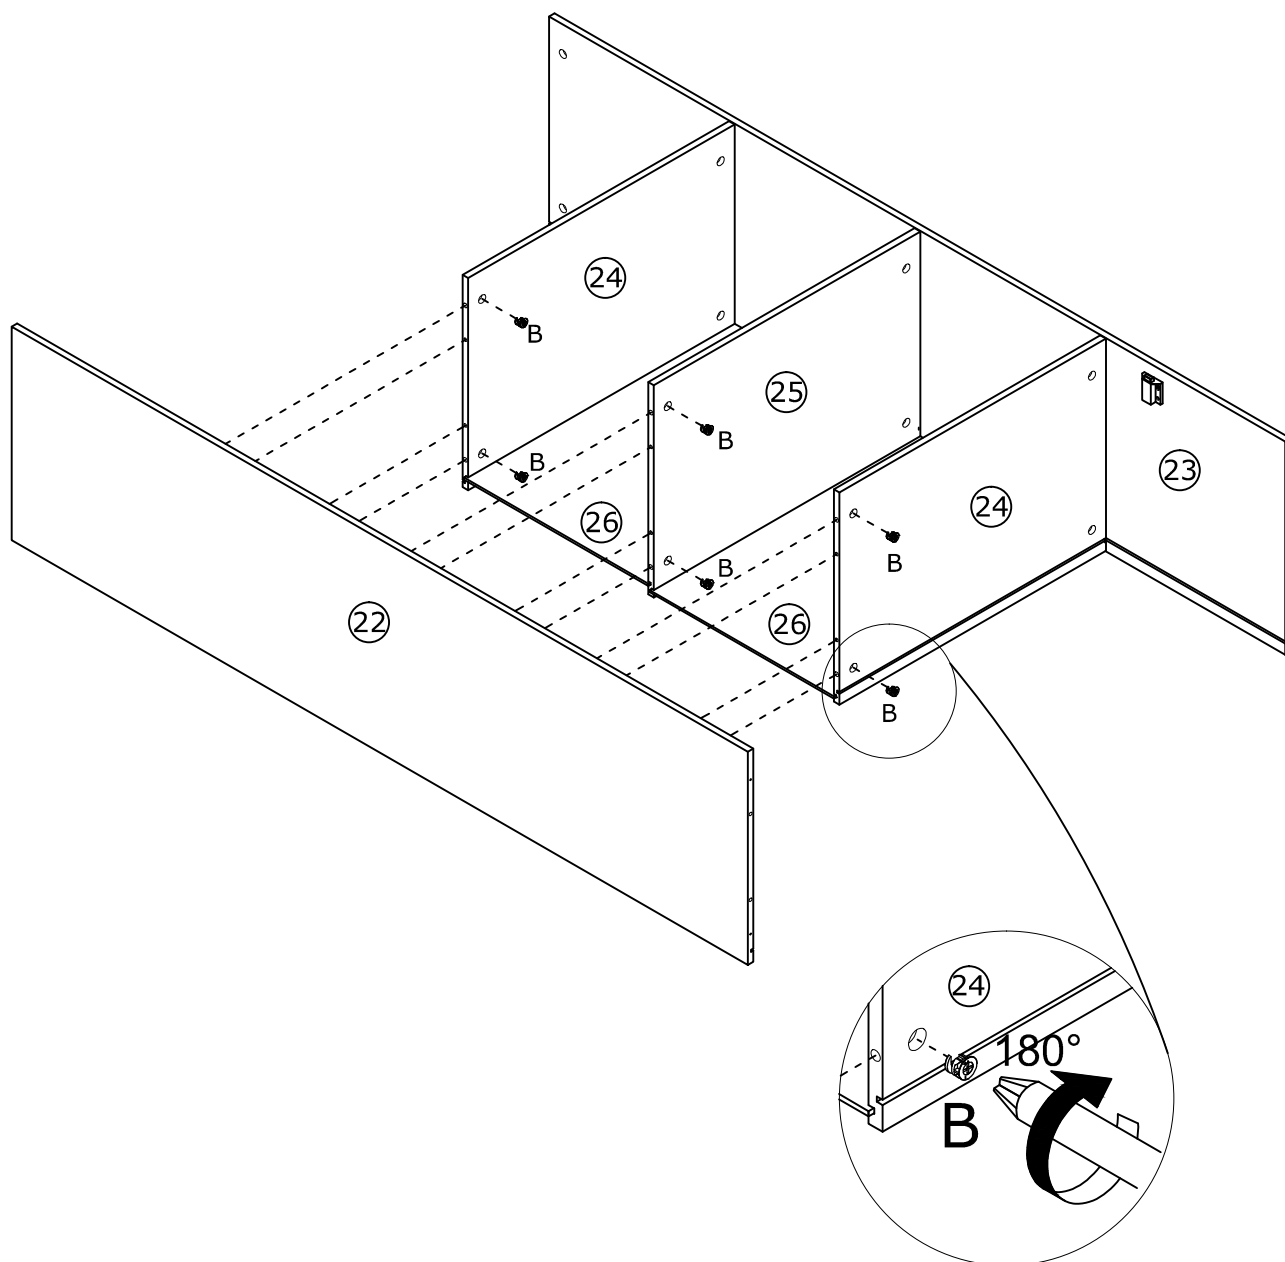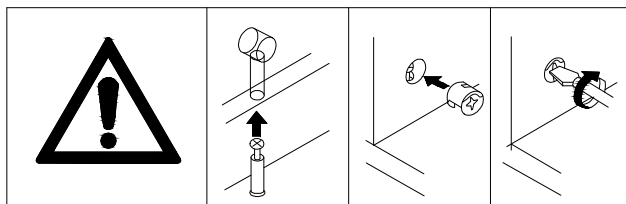


14

 Insert back board 27 along available grooves as shown.

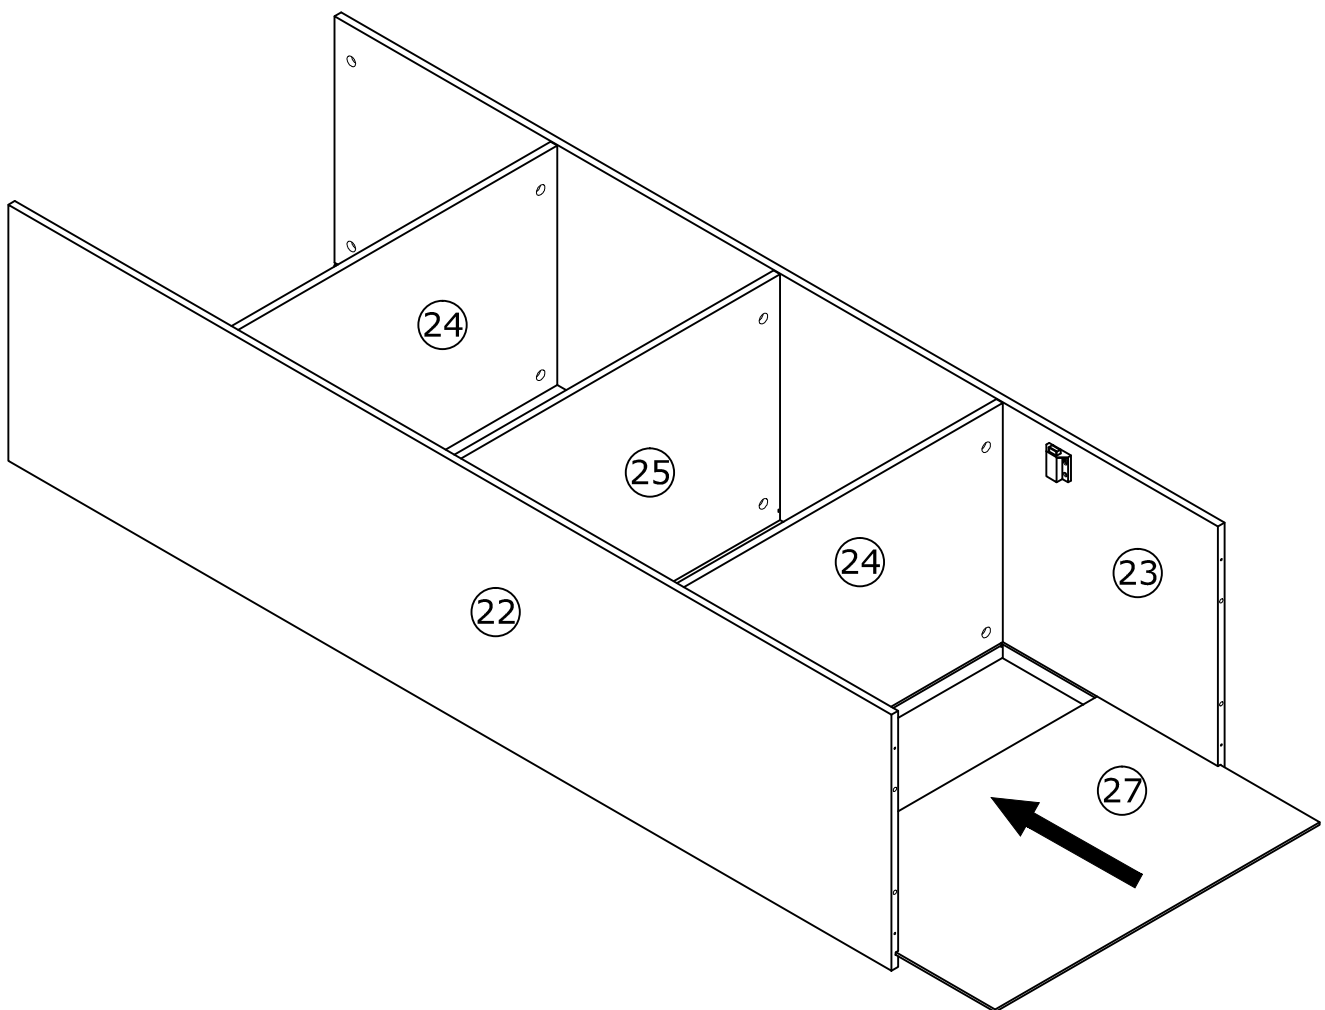


15




C × 4	G × 4
	
Ø6×30mm	Ø4×40mm

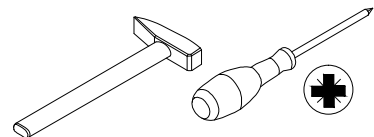 

 
insert wooden dowel (C) into board 22 and 23 as shown.
Fix board 21 to board 22 and 23 with screw (G) as shown.

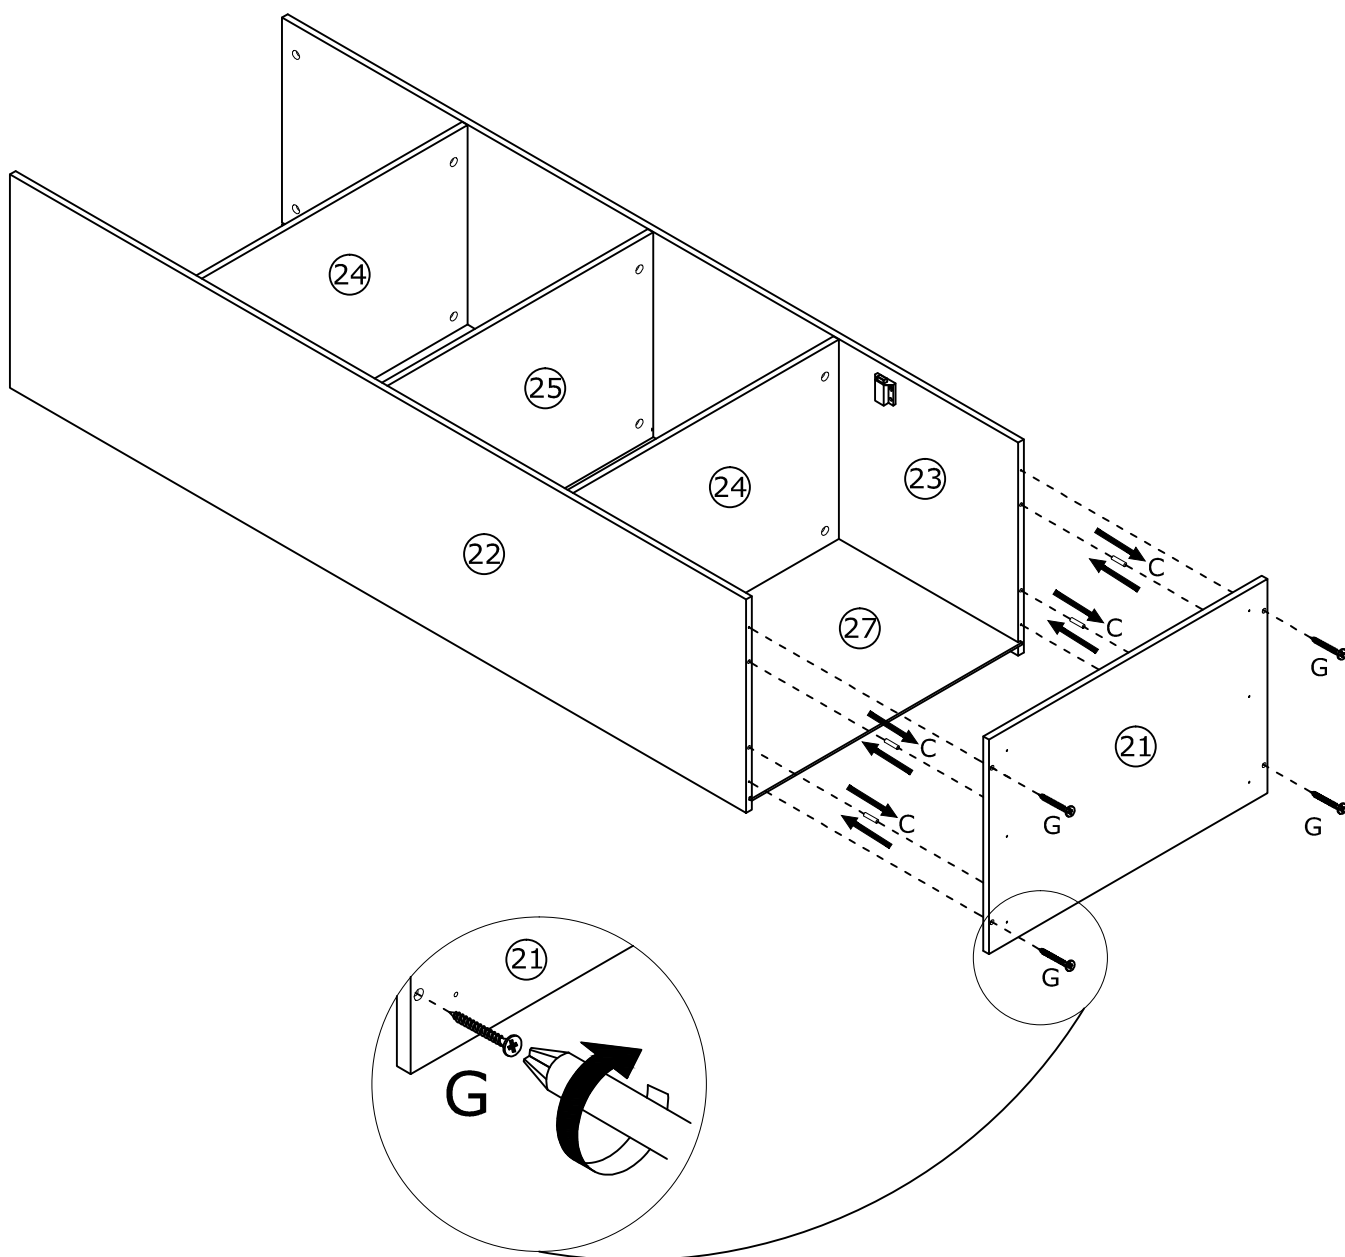






16

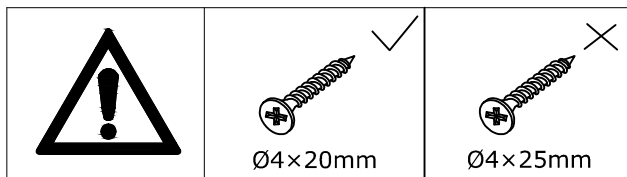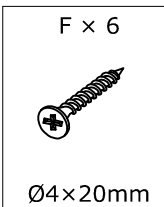   

 
Fix board 13 to board 21 with screw (F) as shown.

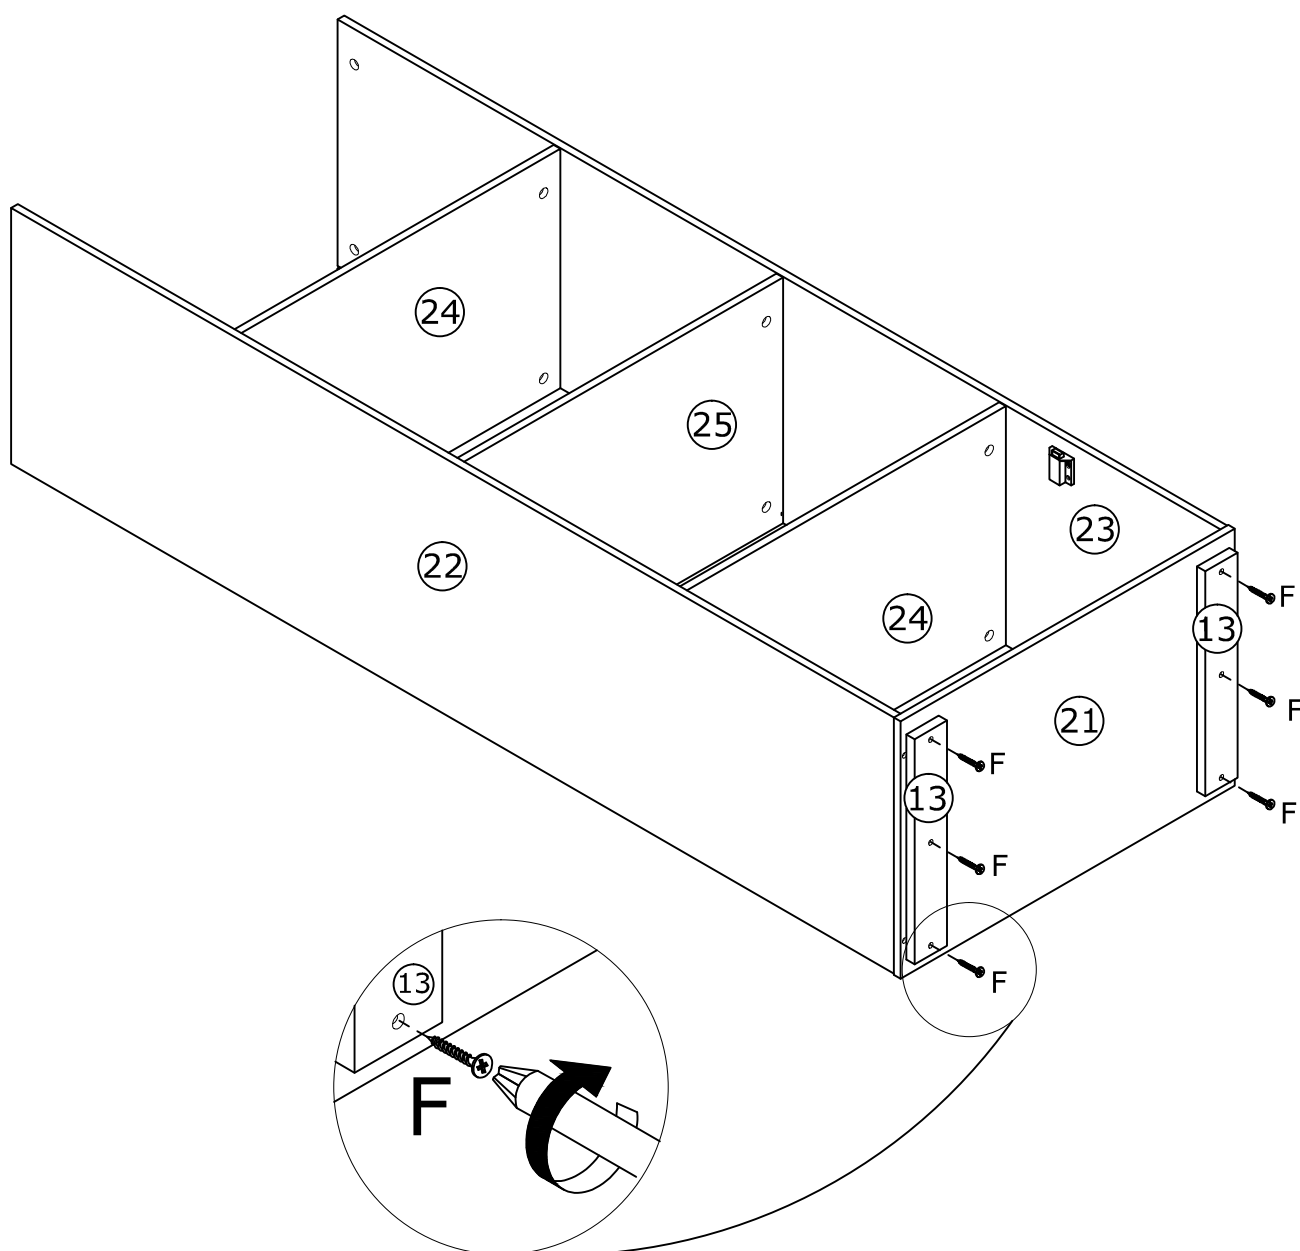

17

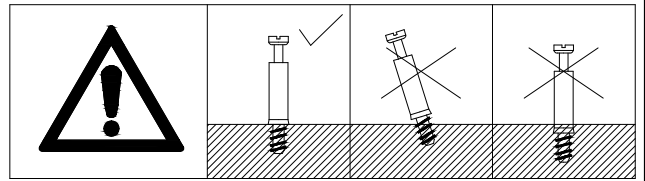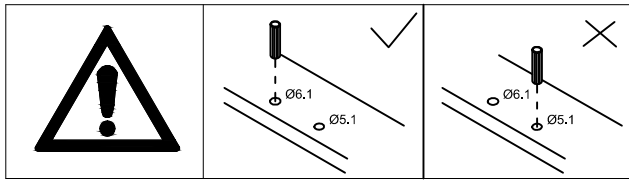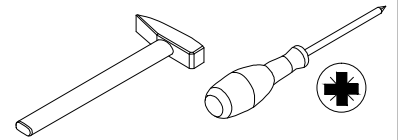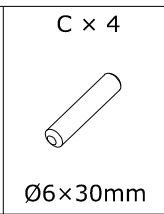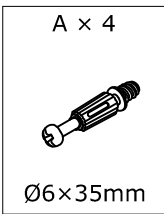     


 Eccentric rod (A) and insert wooden dowel (C) into board 20 as shown.

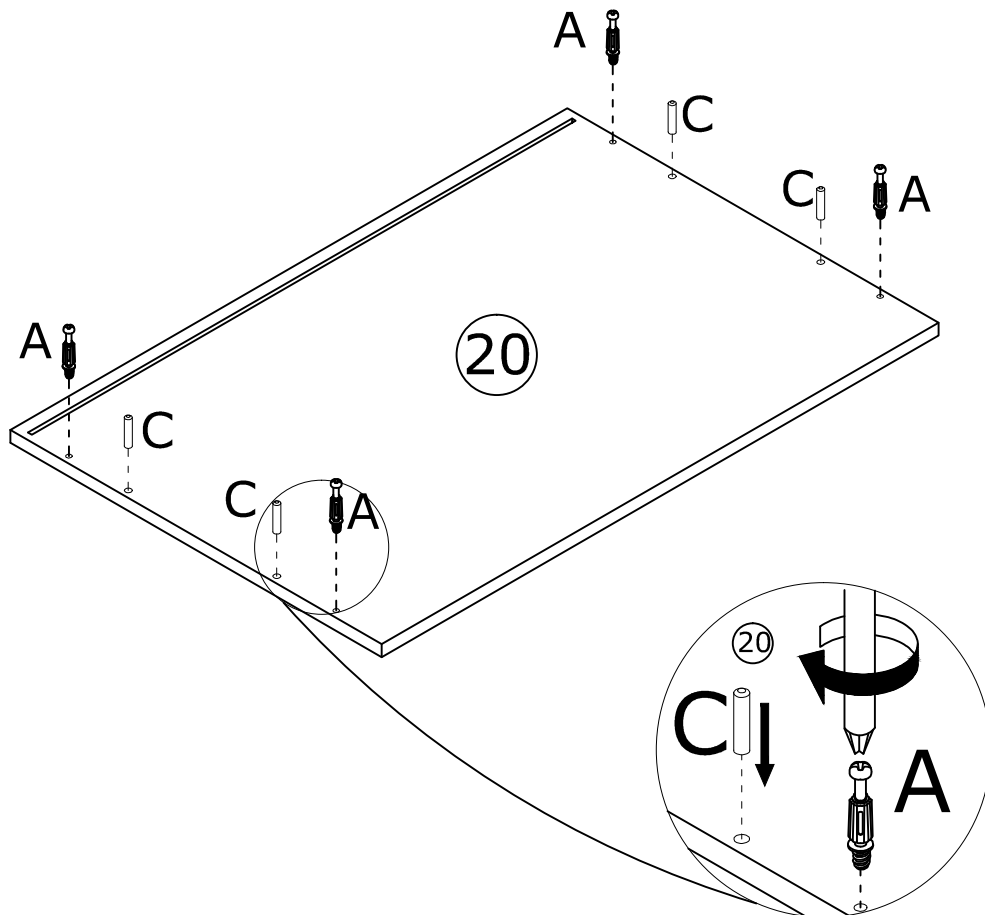

18

 Insert back board 26 along available grooves as shown.

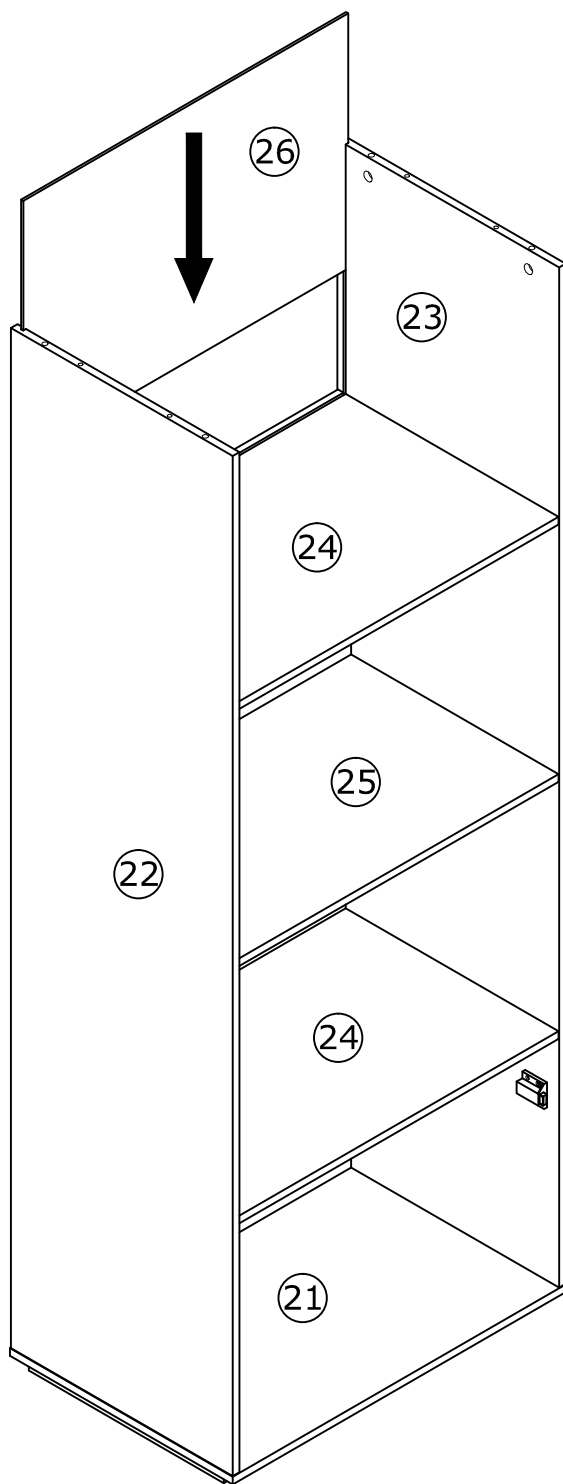


19




B × 4




 
Ø15×9.5mm






   Attach board 20 to board 22 and 23 add cam lock (B) into 22 and 23 then turn clockwise to tighten as shown.

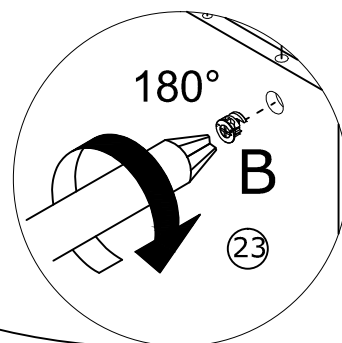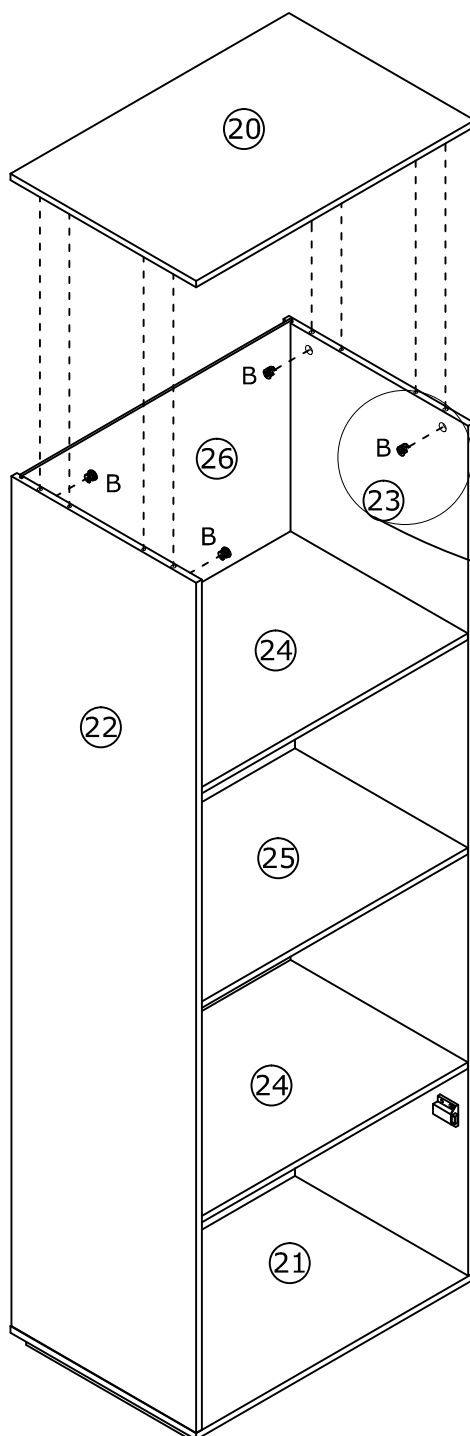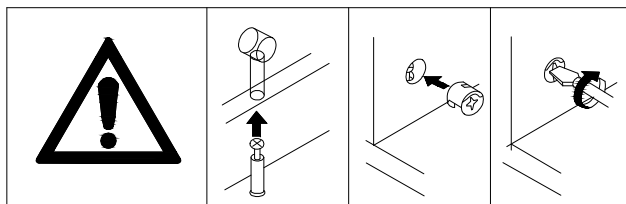


20

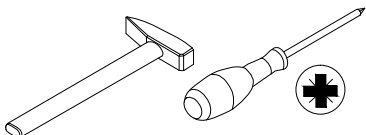  A × 56  Ø6×35mm	C × 24  Ø6×30mm	K × 2 	U × 8  Ø4×25mm	
---	---	---	--	---

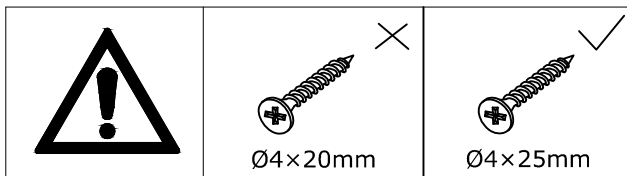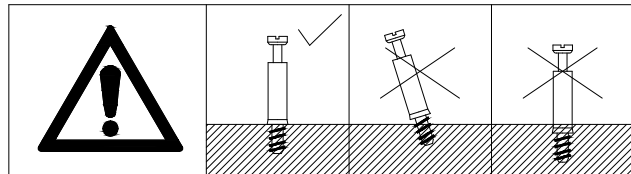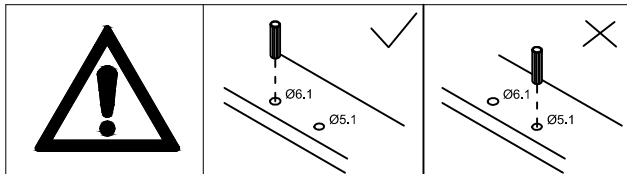   


 Screw eccentric rod (A) and insert wooden dowel (C) into board 29 , 30 and 31 as shown.

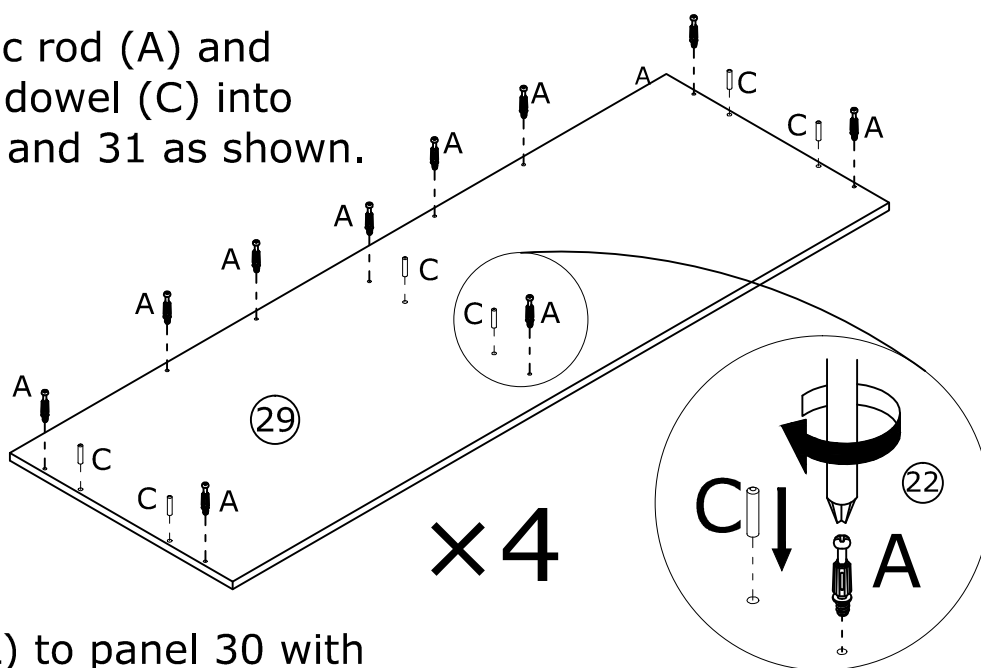


Fix part(K-L) to panel 30 with screw(U) as shown.

 Fix part(K-R) to panel 31 with screw(U) as shown.

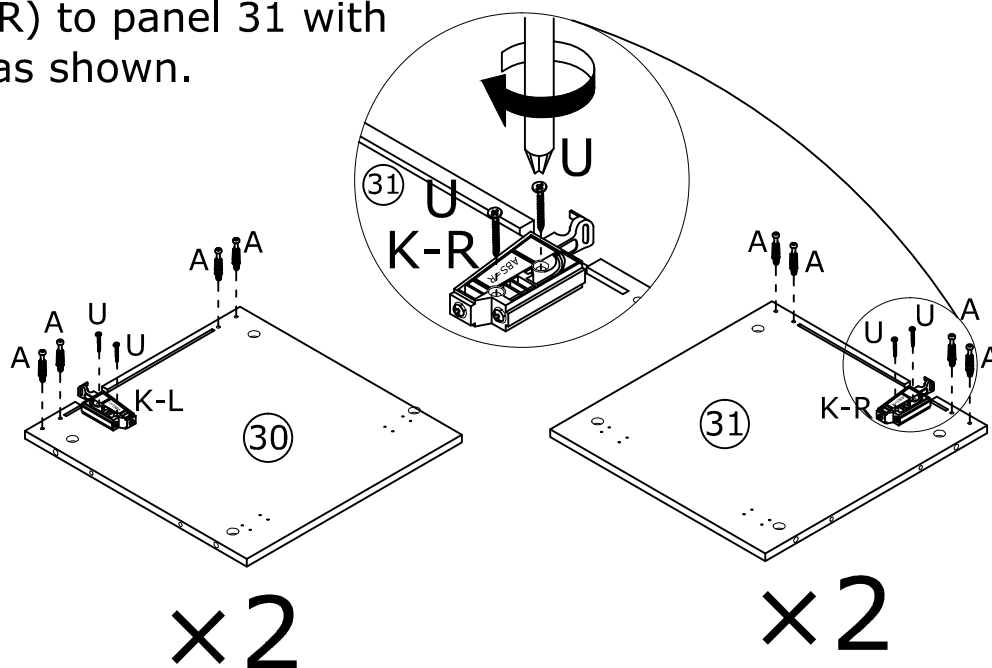

21

 
$D \times 16$  $\varnothing 3 \times 12 \text{ mm}$	$H \times 4$  $38 \text{ mm} \times 38 \text{ mm}$	
--	---	---

	 $\varnothing 3 \times 12 \text{ mm}$	 $\varnothing 3.5 \times 12 \text{ mm}$
--	---	---

Fix part(H) to panel 32 and 33 with screw (D) as shown.

Then flip the board to back

 Fix part (H) to panel 32 and 33 with screw (D) as shown.

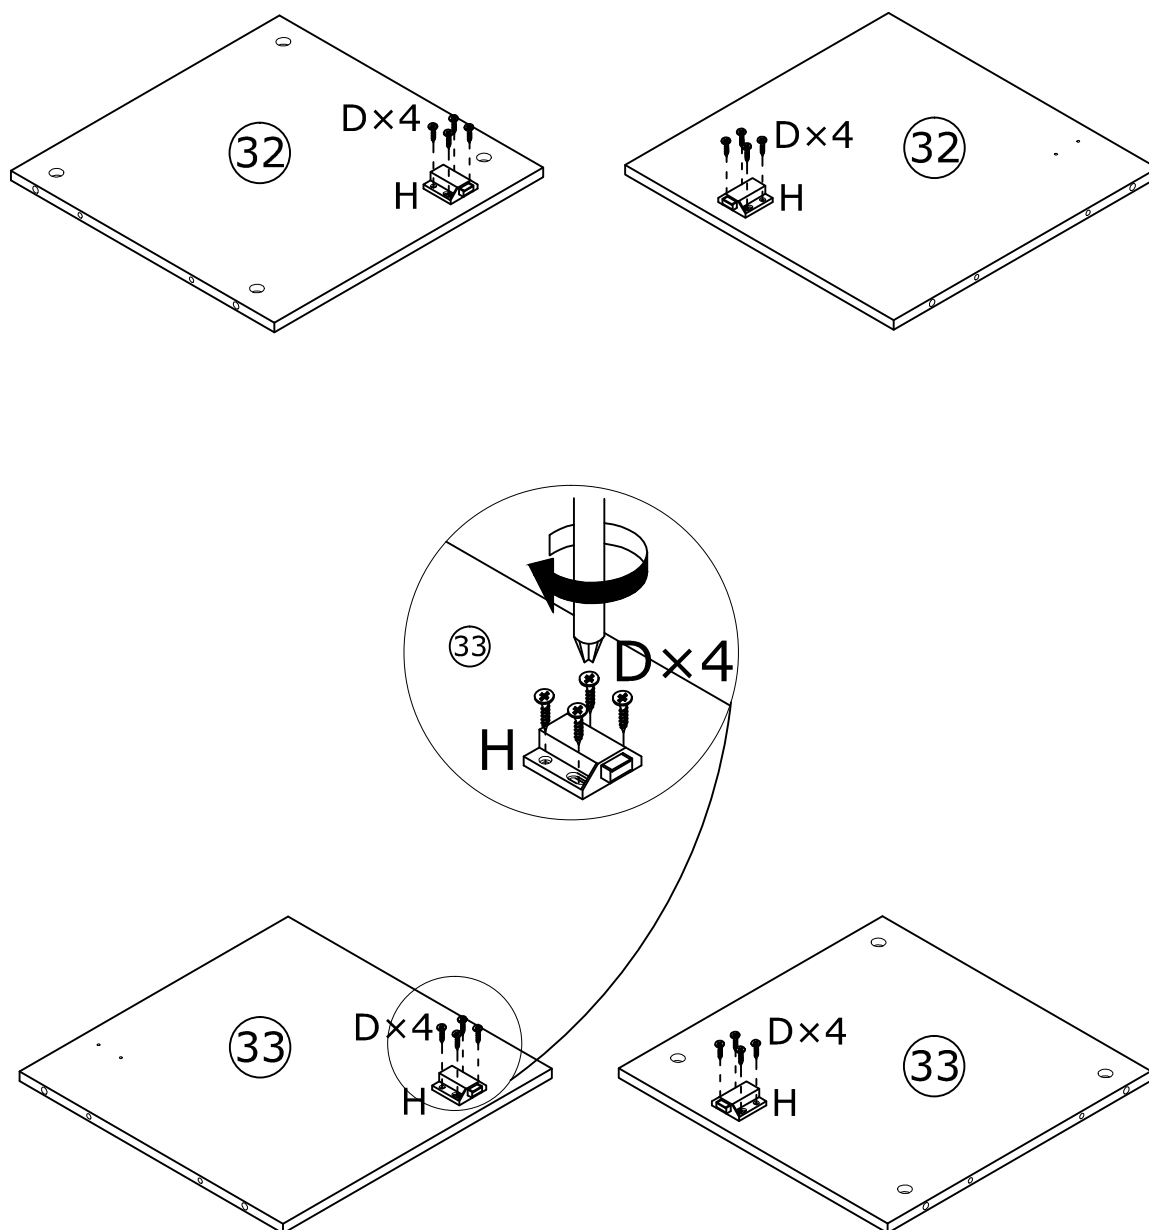


22



B × 8



 Ø15×9.5mm



  Attach board 31 to board 35 add cam lock (B) into 35 then turn clockwise to tighten as shown.

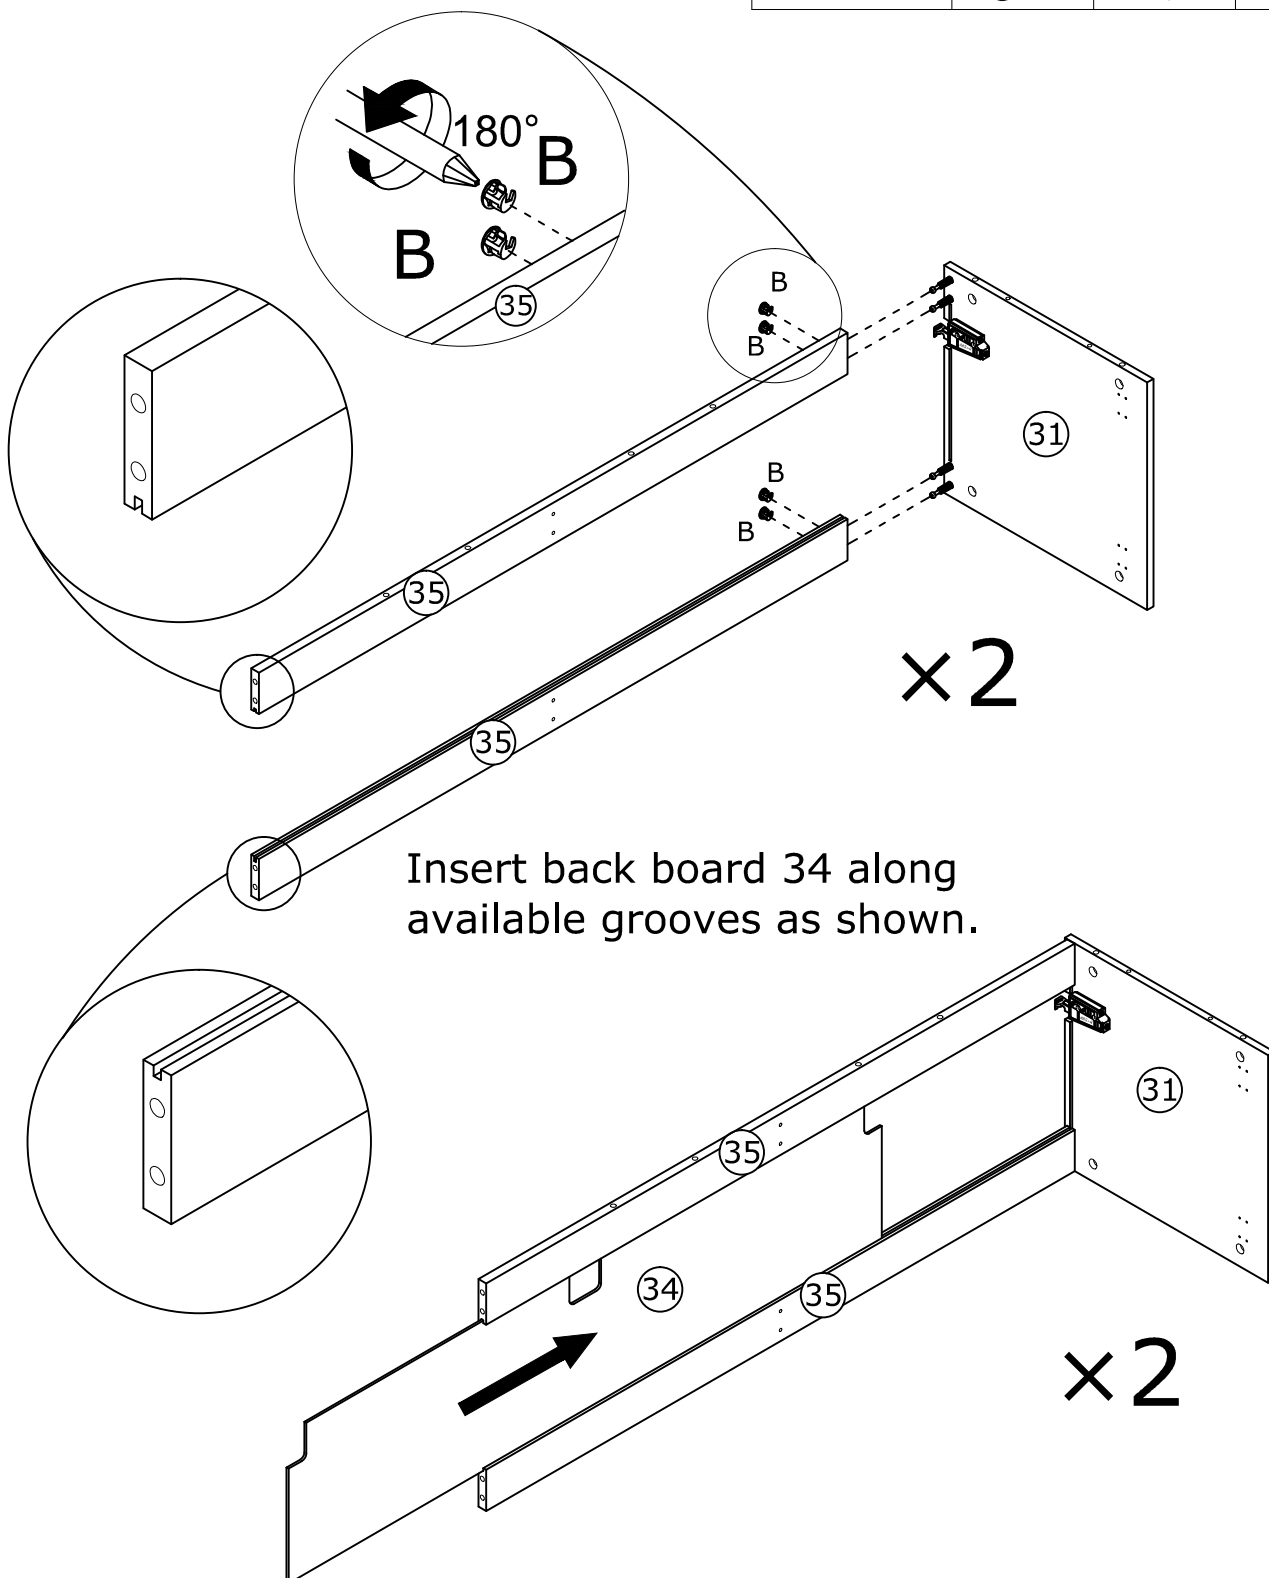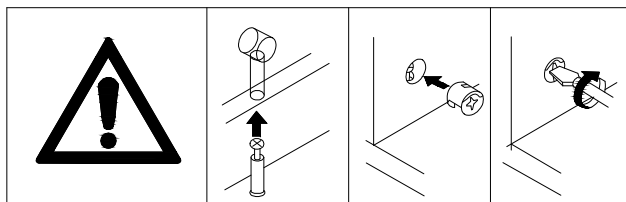


23



B × 8



 Ø15×9.5mm



  Attach board 30 to board 35 add cam lock (B) into 35 then turn clockwise to tighten as shown.

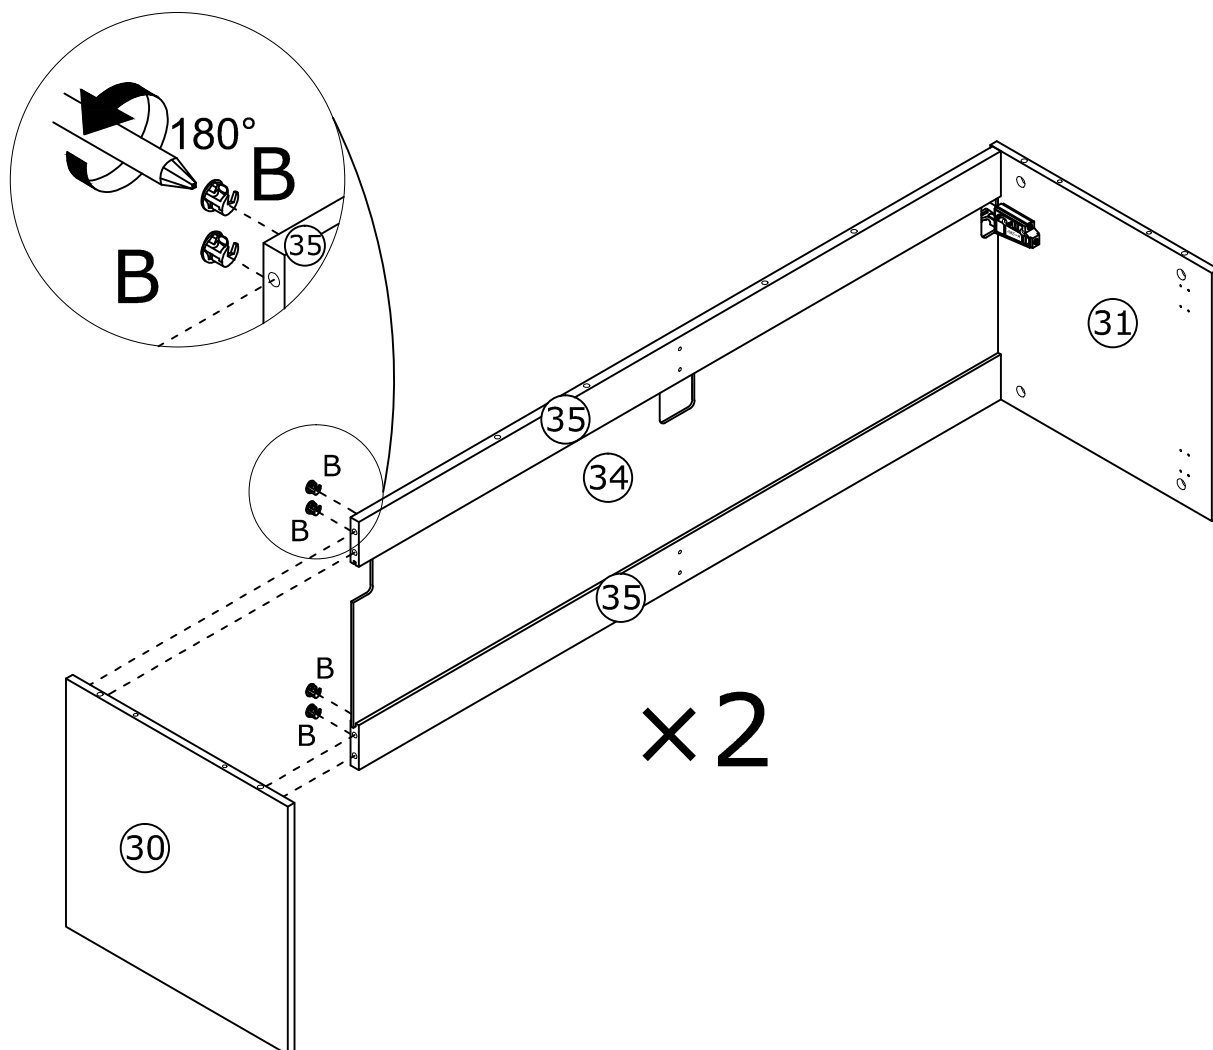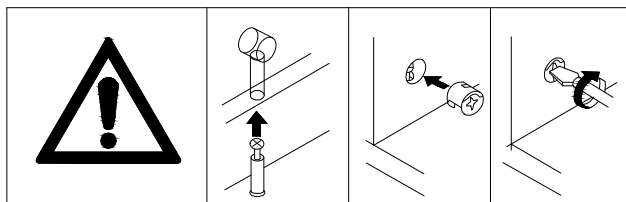


24



B × 20



 
Ø15×9.5mm










 
 
Attach board 29 to board 30 ,
31 and 32 add cam lock(B) into
30 , 31 and 32 then turn
clockwise to tighten as shown.

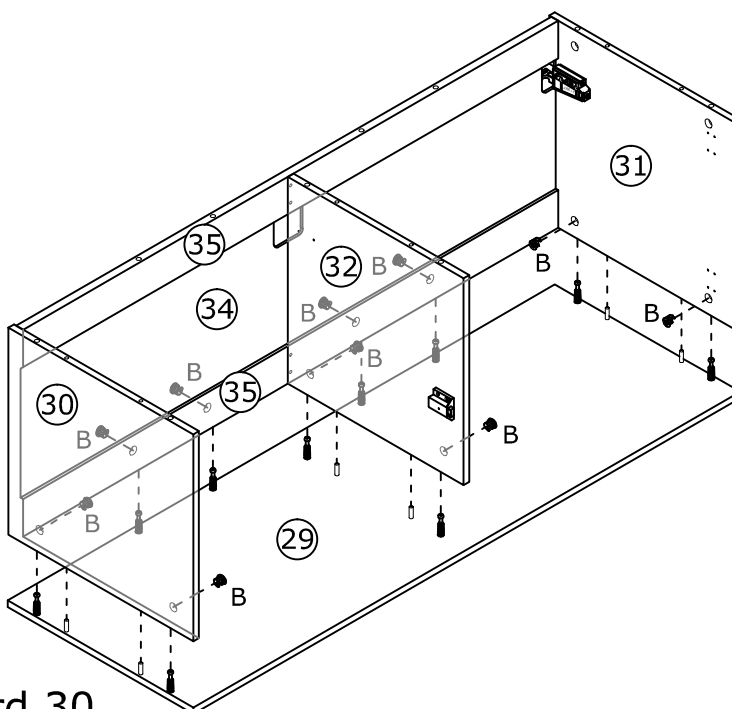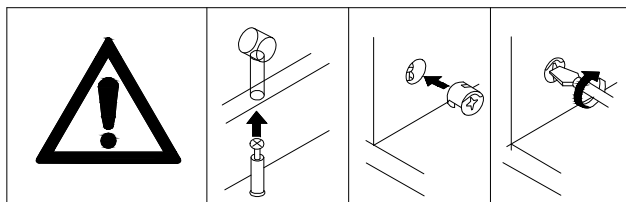

 Attach board 29 to board 30 ,
31 and 33 add cam lock(B) into
30 , 31 and 33 then turn
clockwise to tighten as shown.



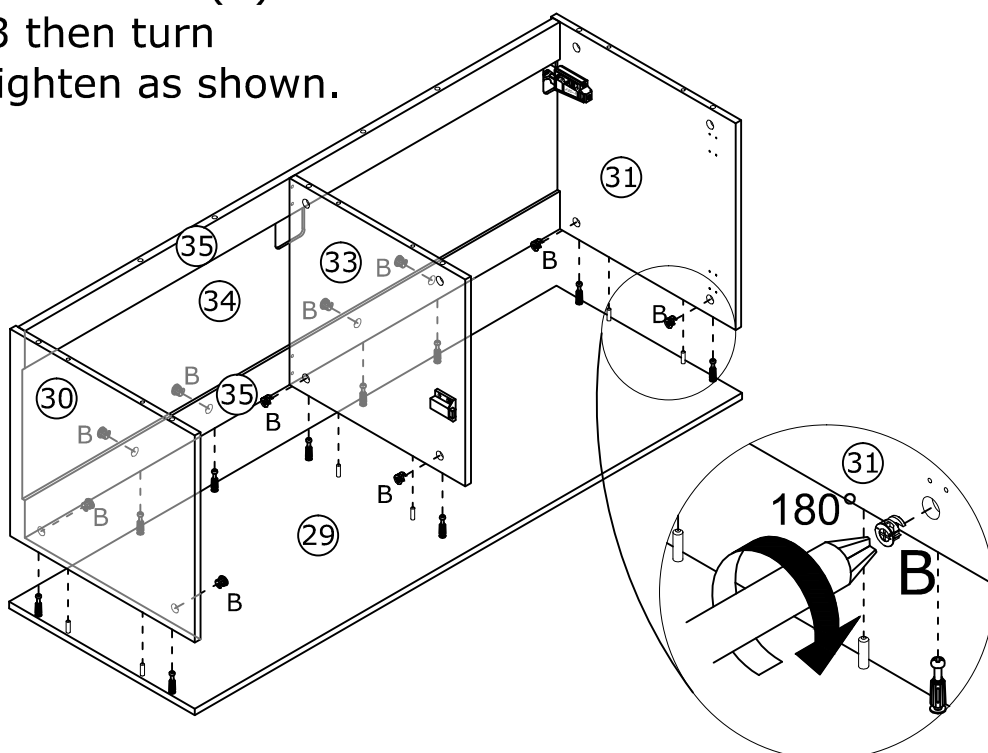


25

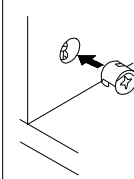  
 
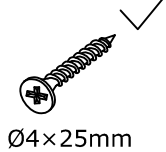 
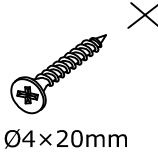 
 
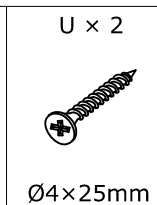 
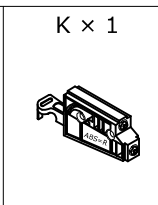 
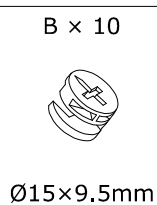 


Attach board 29 to board 30 ,
31 and 32 add cam lock(B) into
30 , 31 and 31 then turn
clockwise to tighten as shown.

   Fix part(K-R) to panel 32 with
screw(U) as shown.

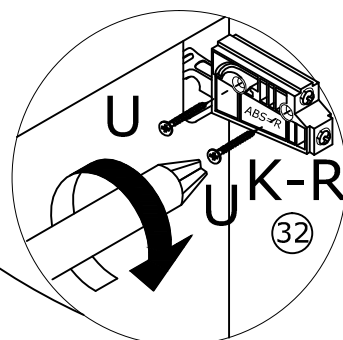
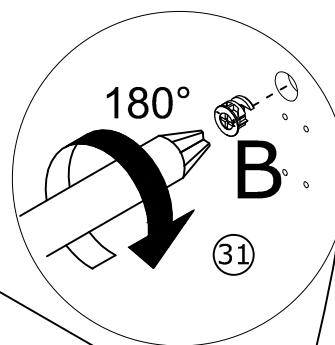
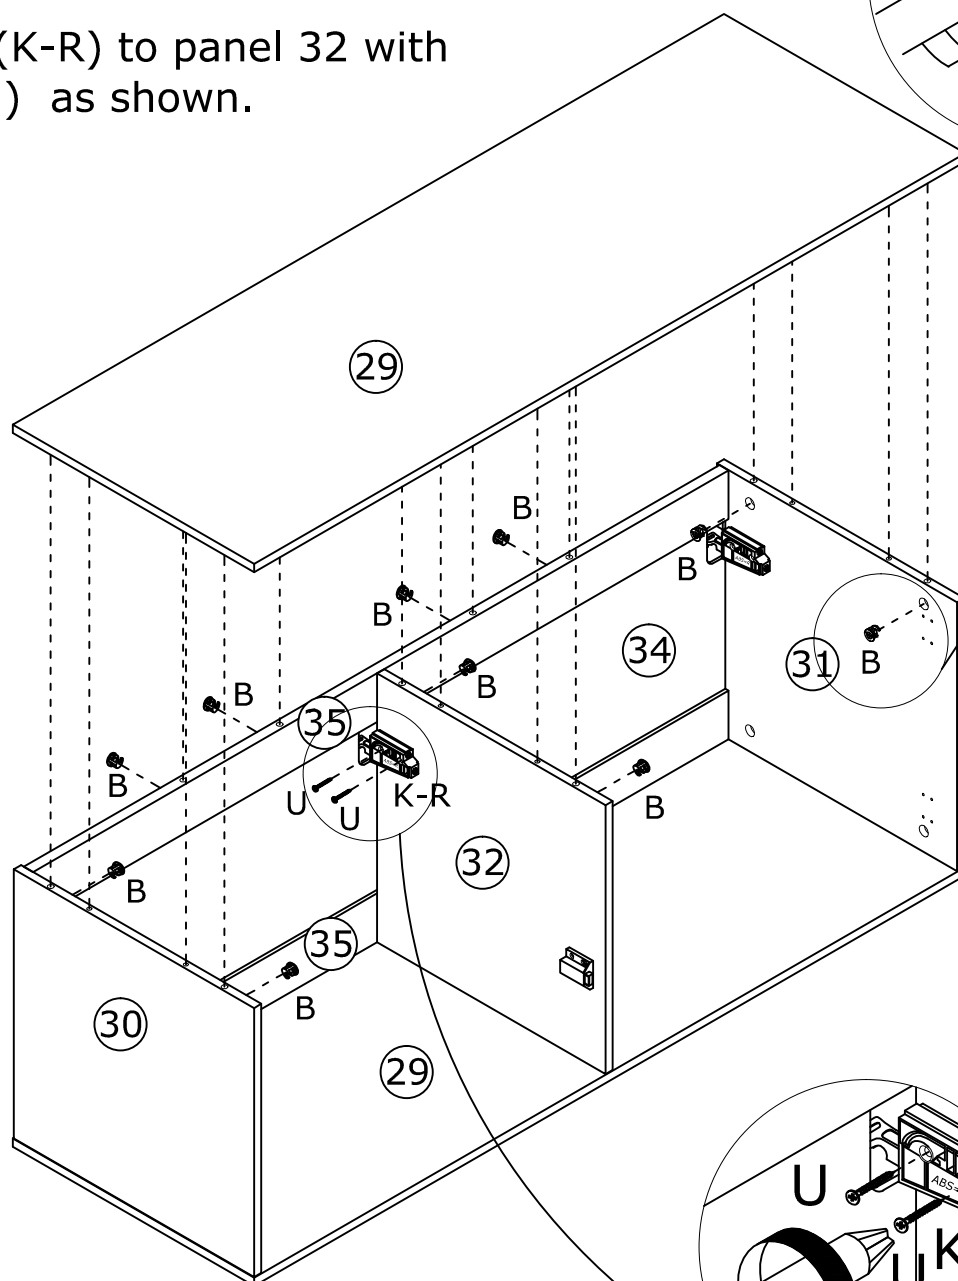


26

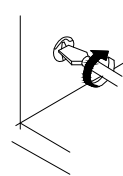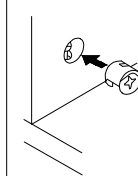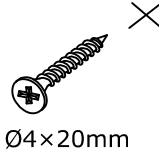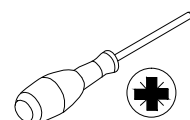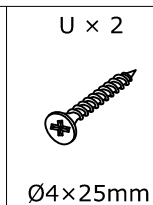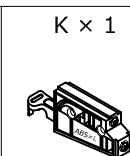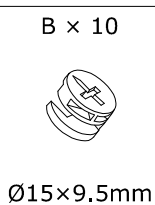        



Attach board 29 to board 30 ,
31 and 33 add cam lock(B) into
30 , 31 and 33 then turn
clockwise to tighten as shown.

   Fix part(K-L) to panel 33 with
screw(U) as shown.

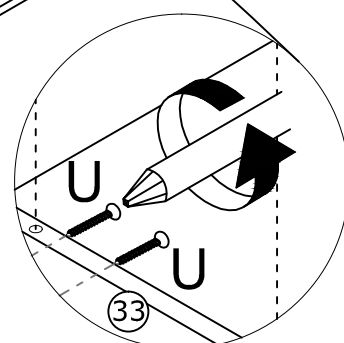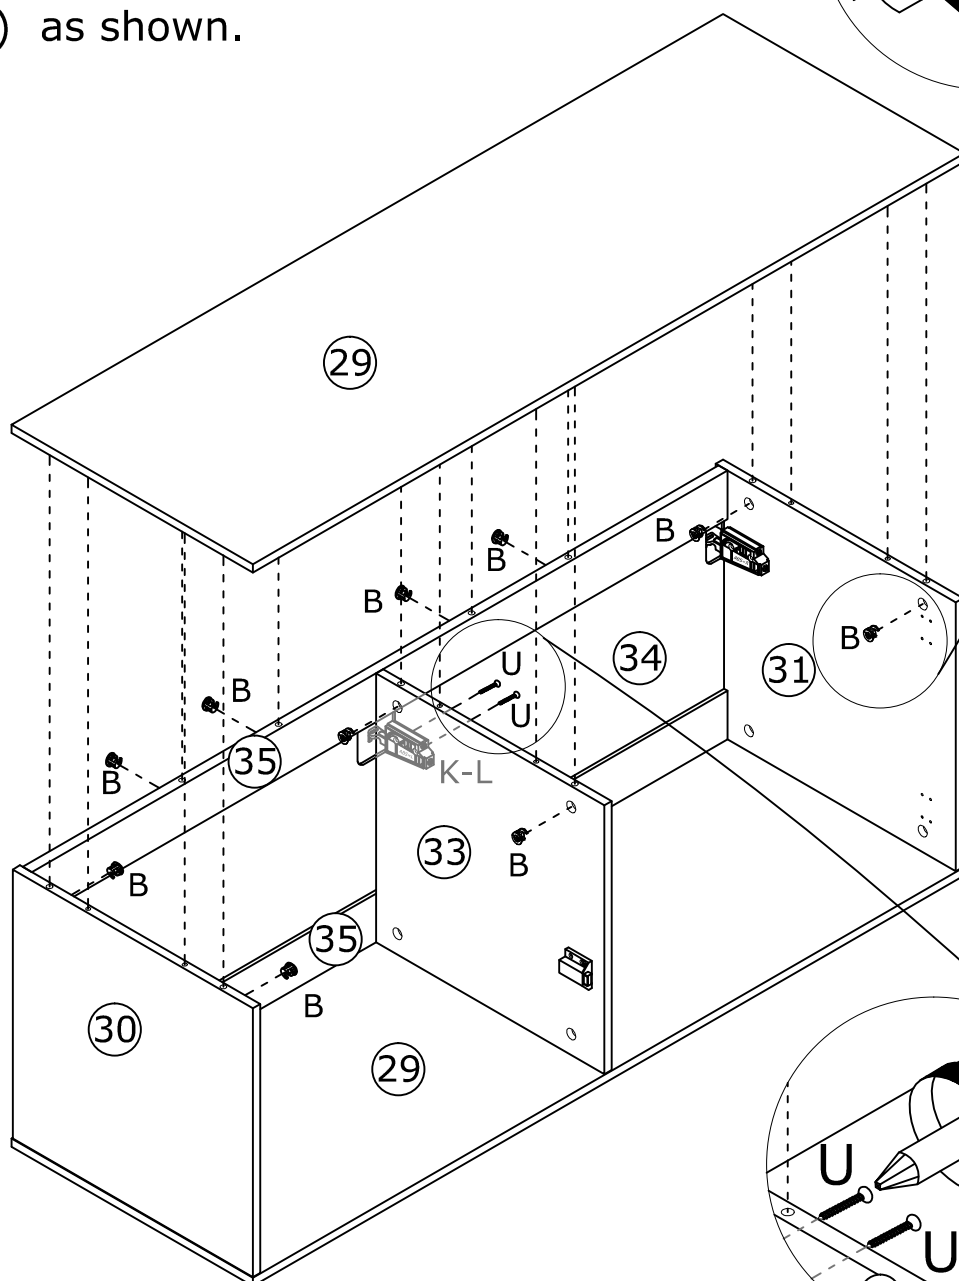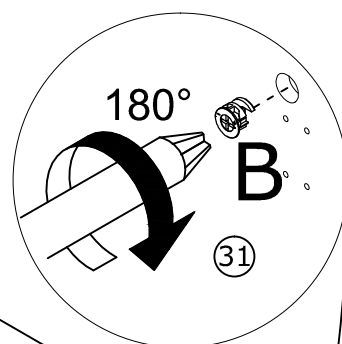


27

 
J × 12

  Ø3×14mm

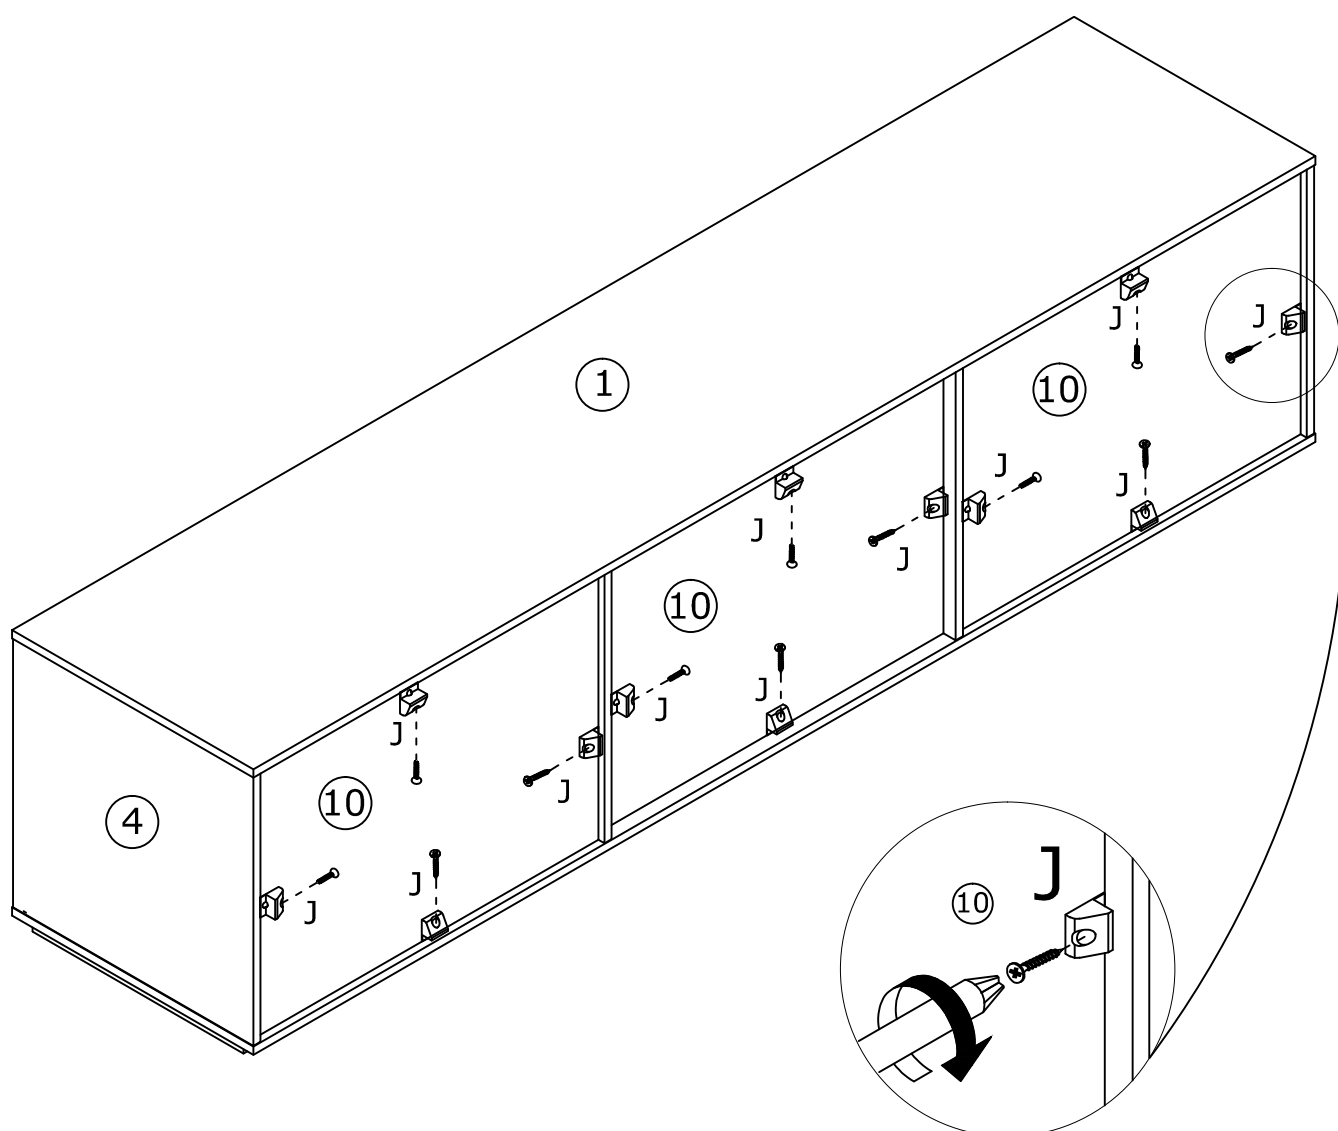 


 Insert buckle (J) into back slots and fix to tighten as shown.





28



 
J × 16

 Ø3×14mm

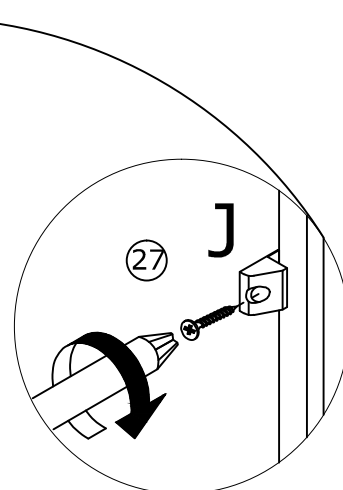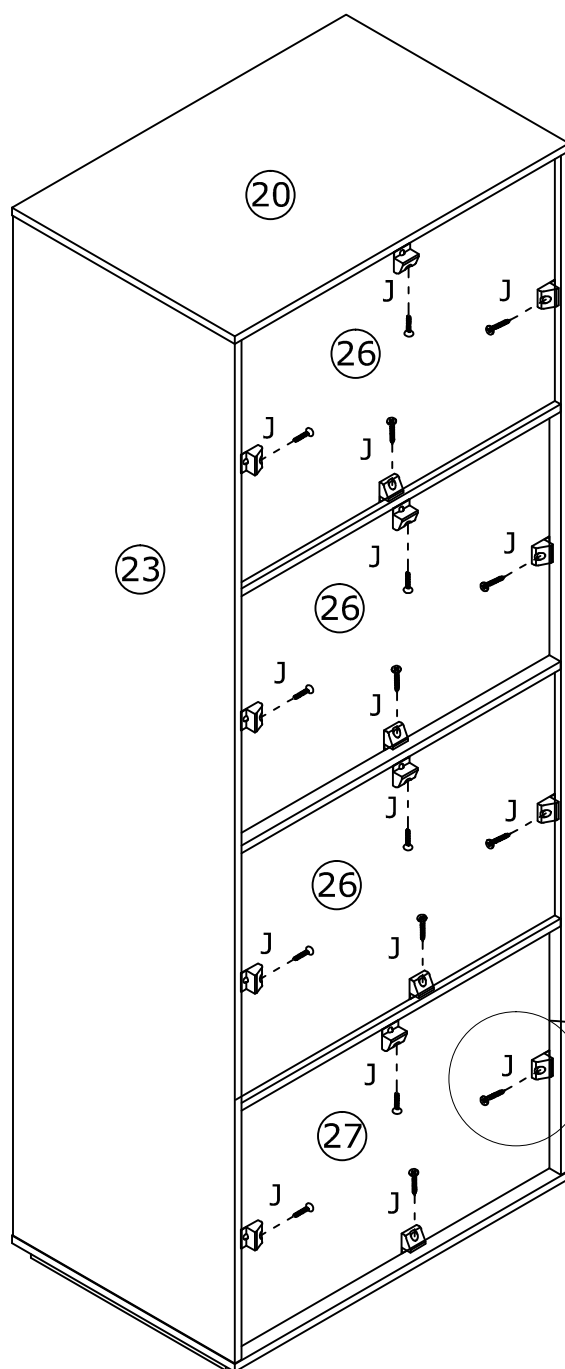  

  
 
Insert buckle (J) into back slots and fix to tighten as shown.

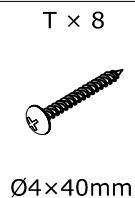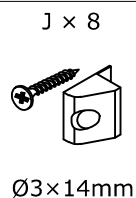

29




  Insert buckle (J) into back slots and fix to tighten as shown.
Fix board 35 to board 32 with screw (T) as shown.

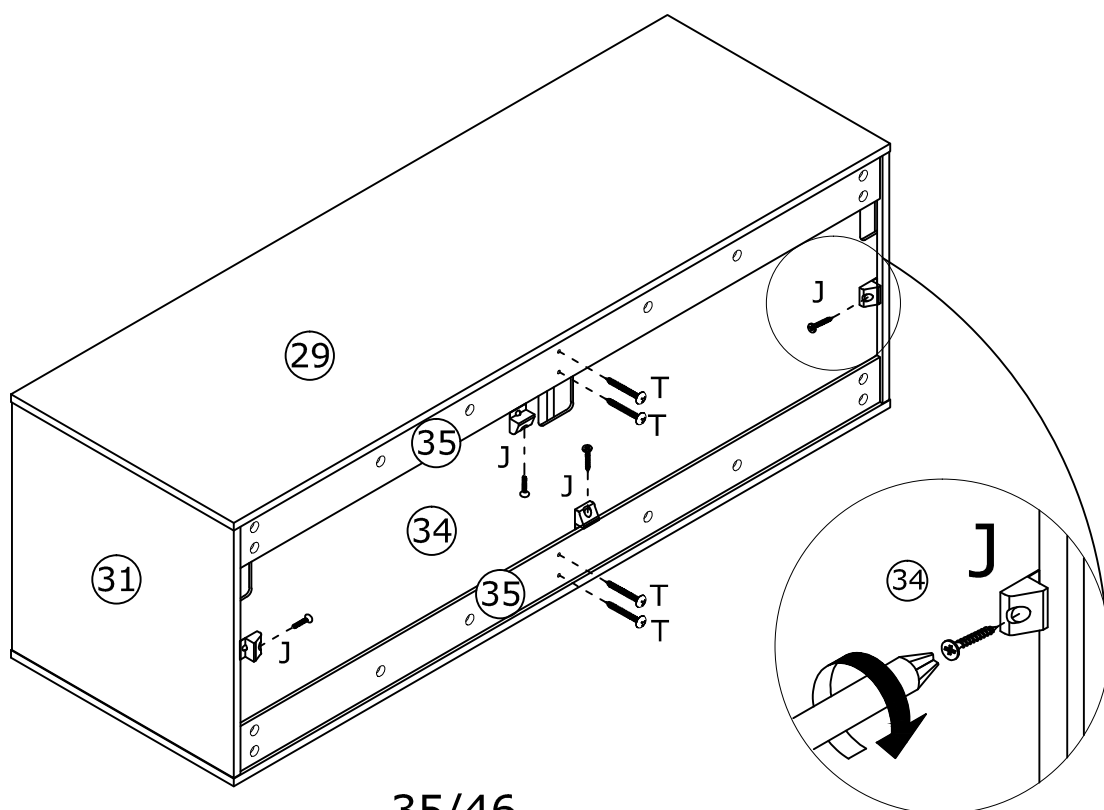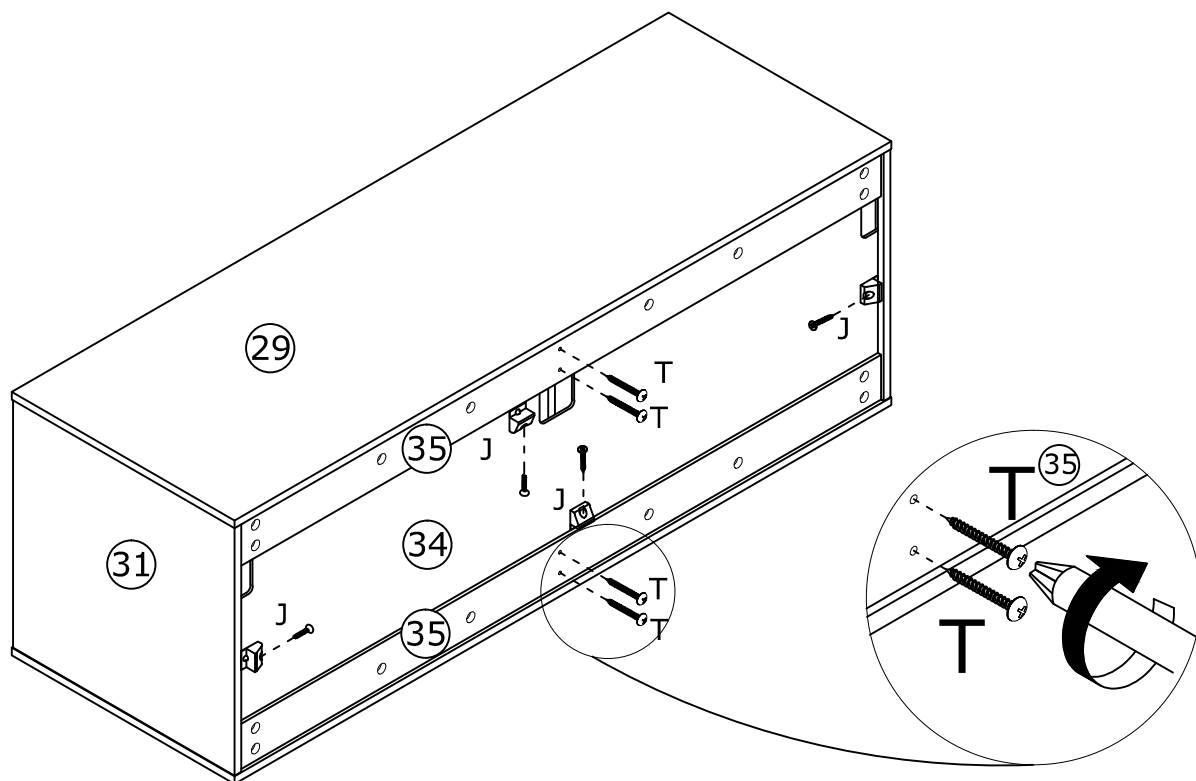




30

K × 3	R × 18
	
	Ø5×40mm

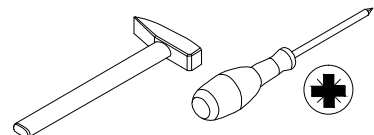 


Fix part (K) to Wall with screw(R) as shown.

   WALL

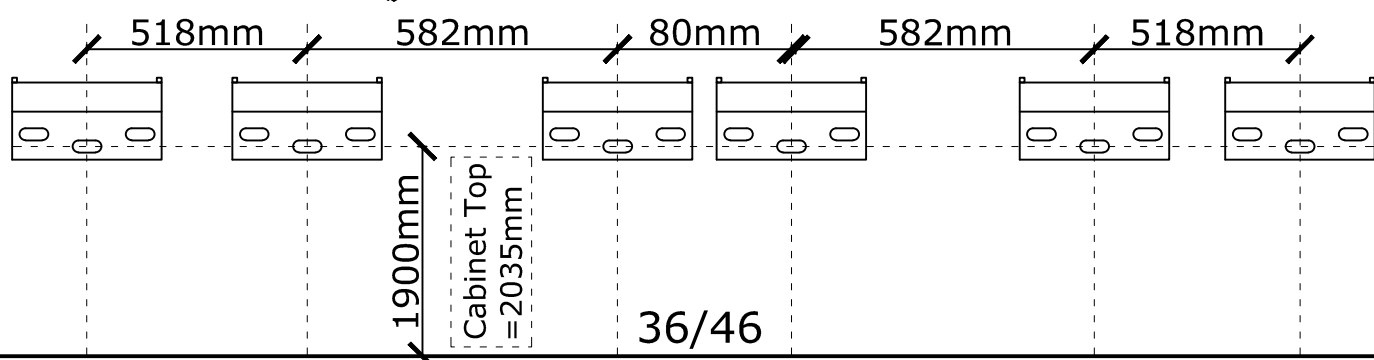
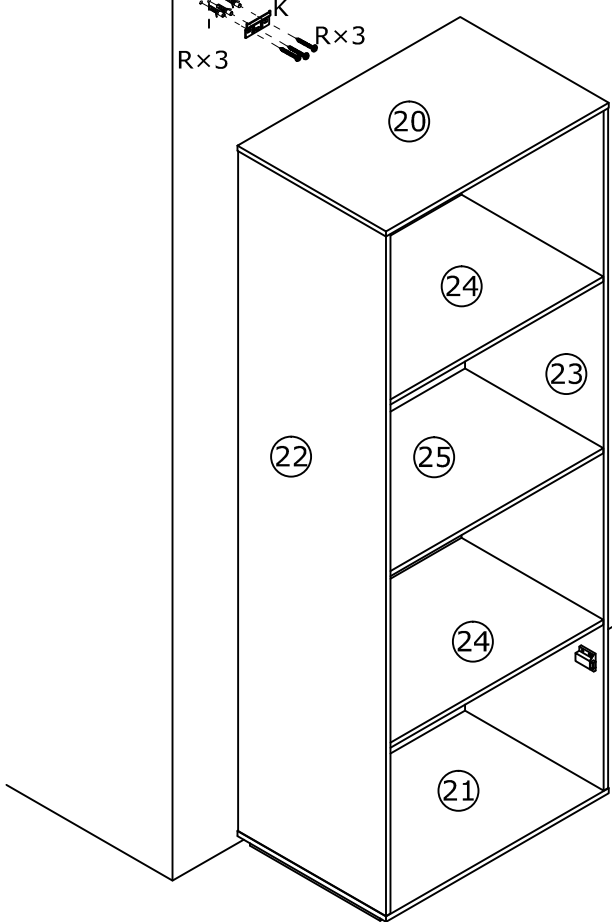
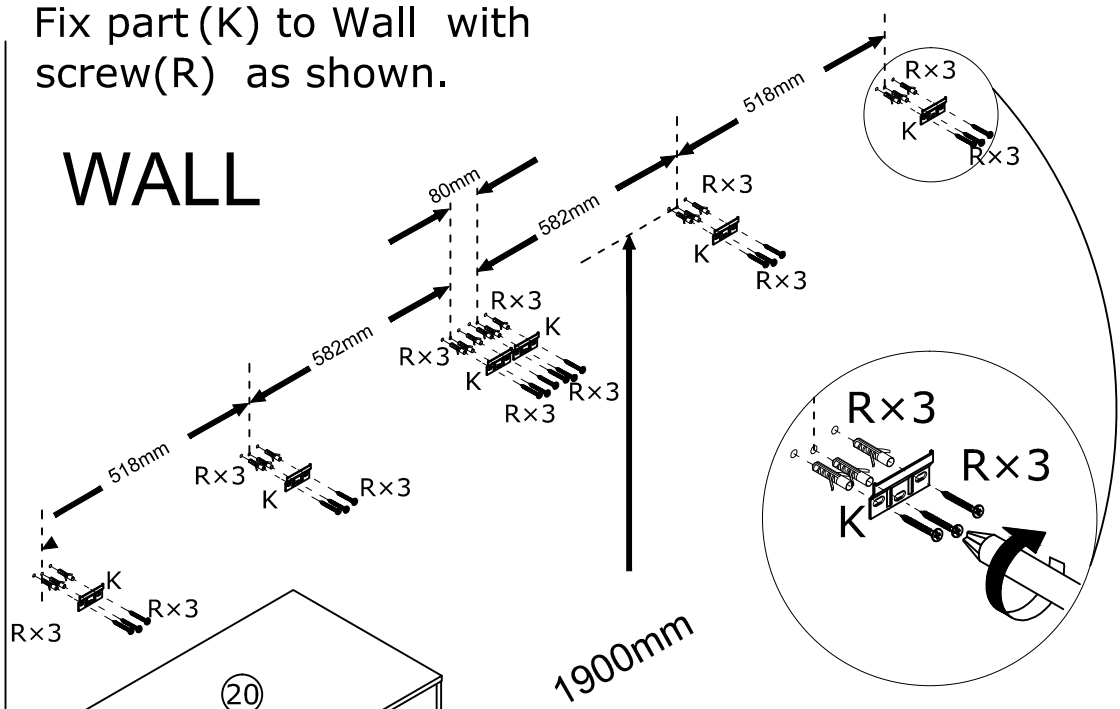


31

 
K x 3




WALL

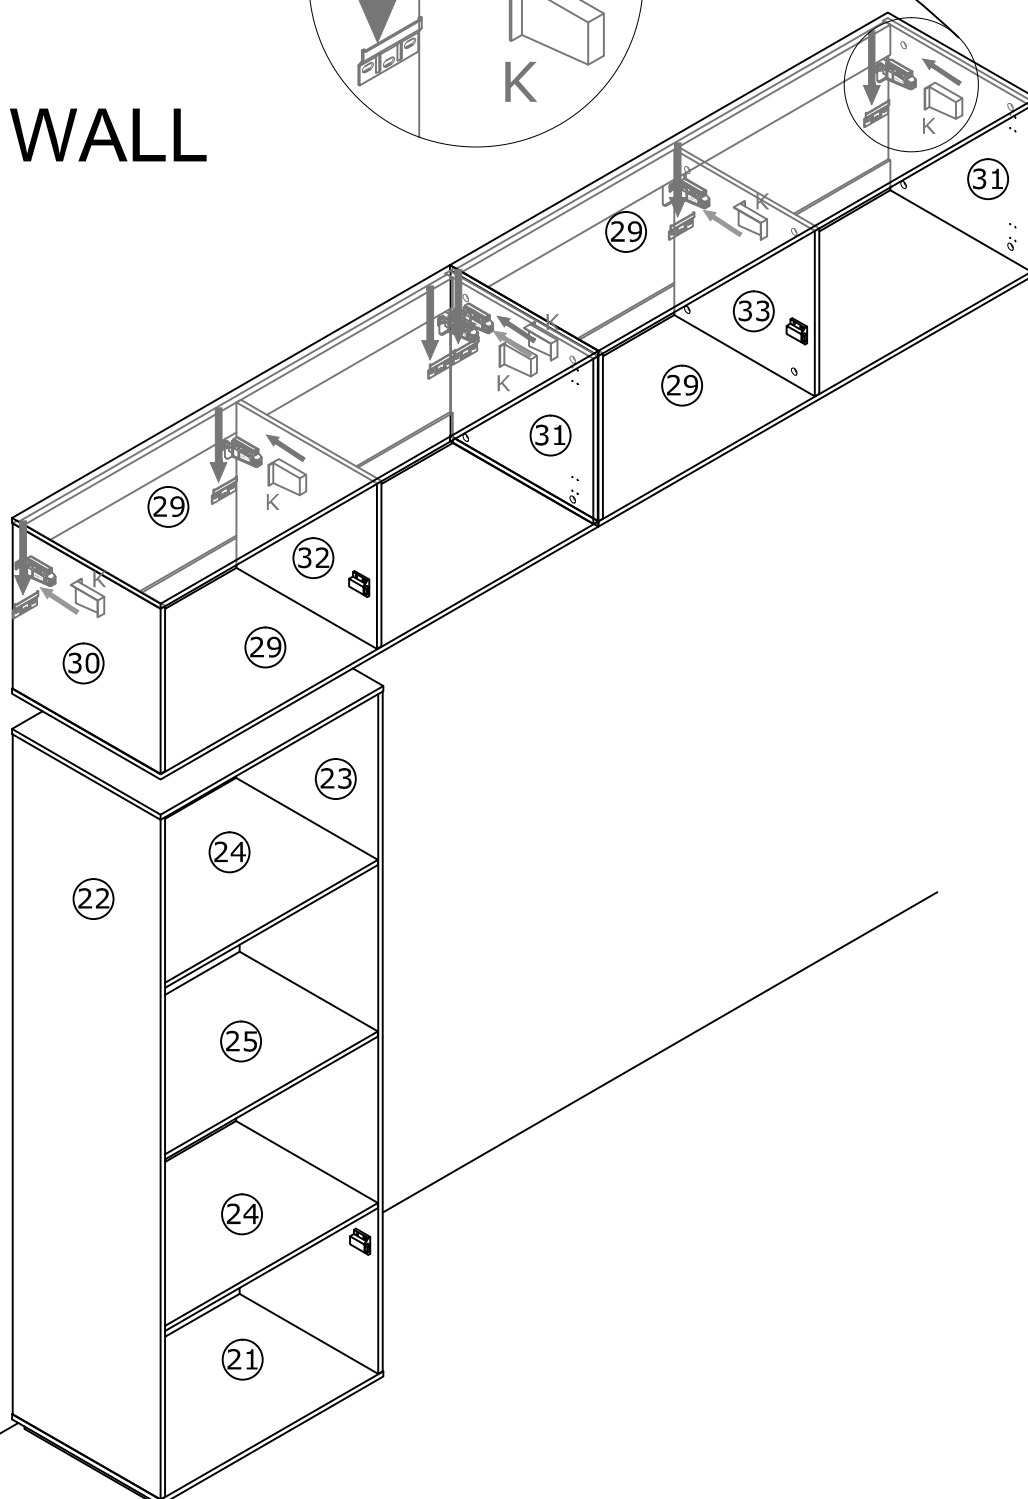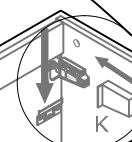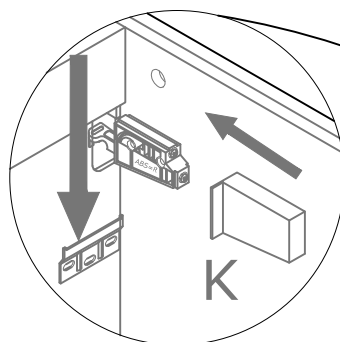   



32

 

 
Adjust to a reasonable height, tighten the screw, and cover with plastic as shown

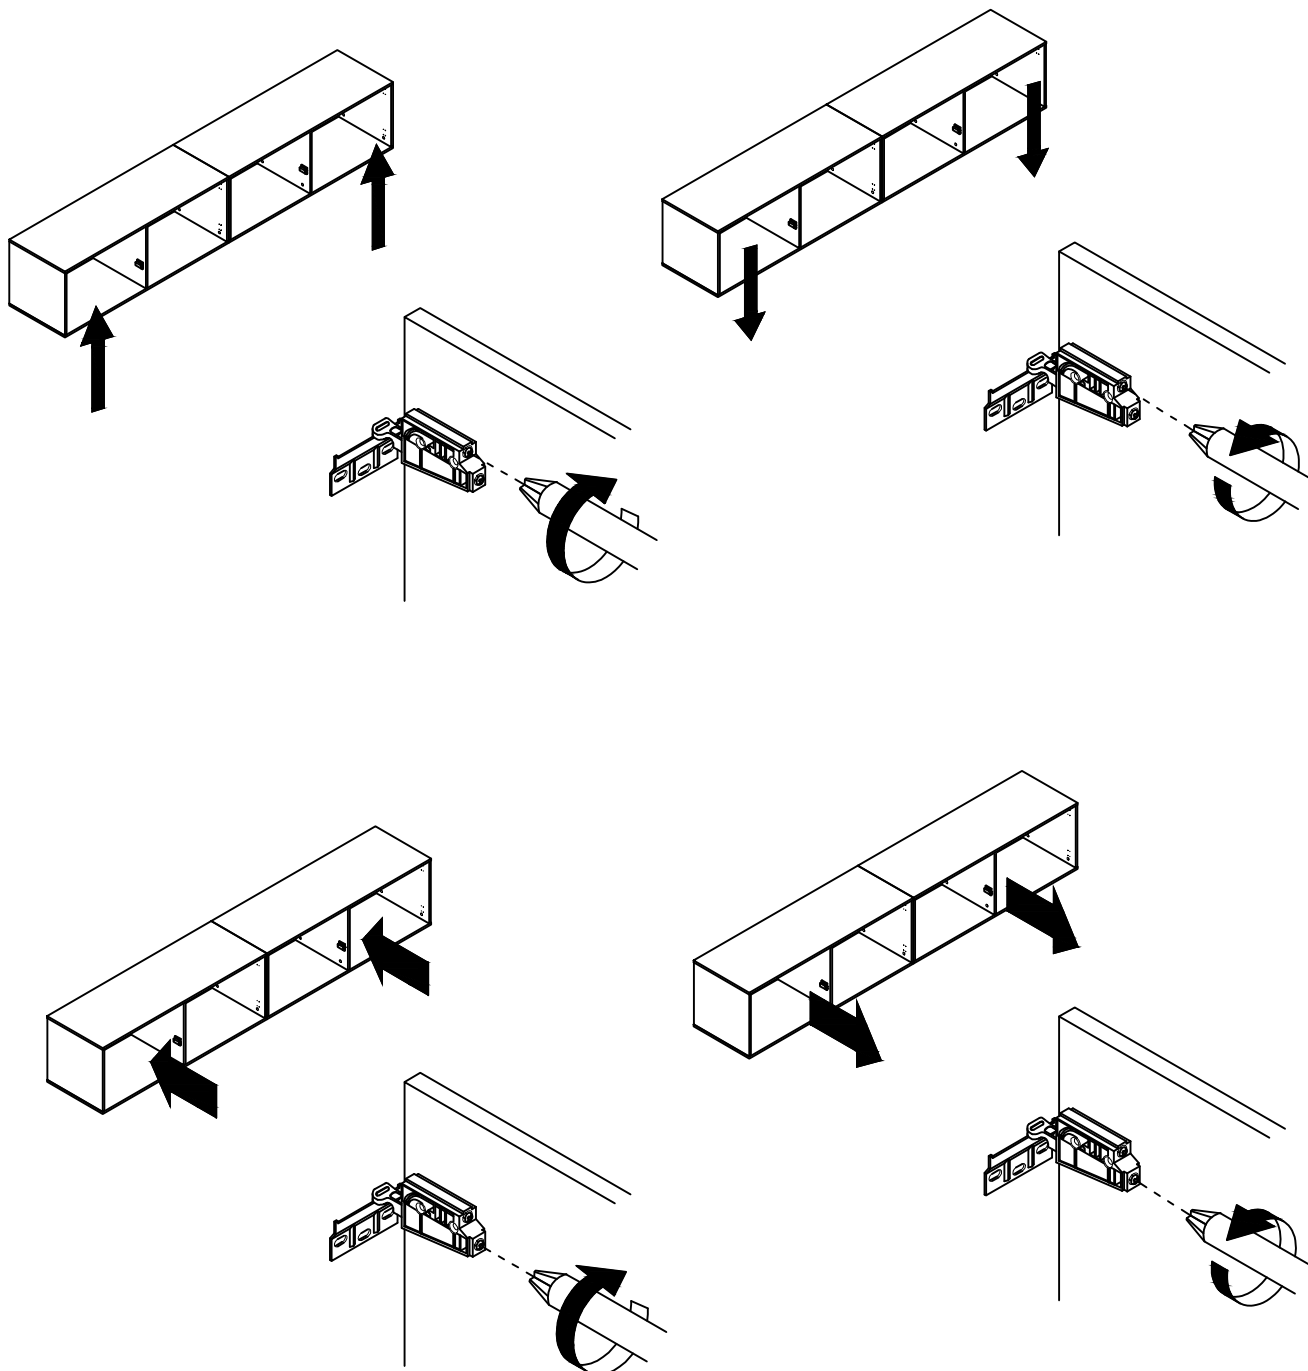

33

  
A × 18  Ø6×35mm	D × 5  Ø3×12mm	E × 8  Ø3.5×12mm	H × 5 	N × 4 	
--	---	---	--	---	---

 Fix hinge (N) to the door board 11 and 12 with screw (E) as shown.


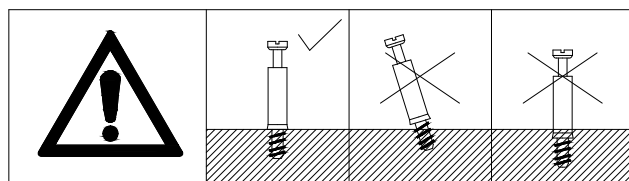


Fix part (H) to panel 11 and 12 with screw (D) as shown.

 Screw eccentric rod (A) and insert wooden dowel (C) into board 14 as shown.

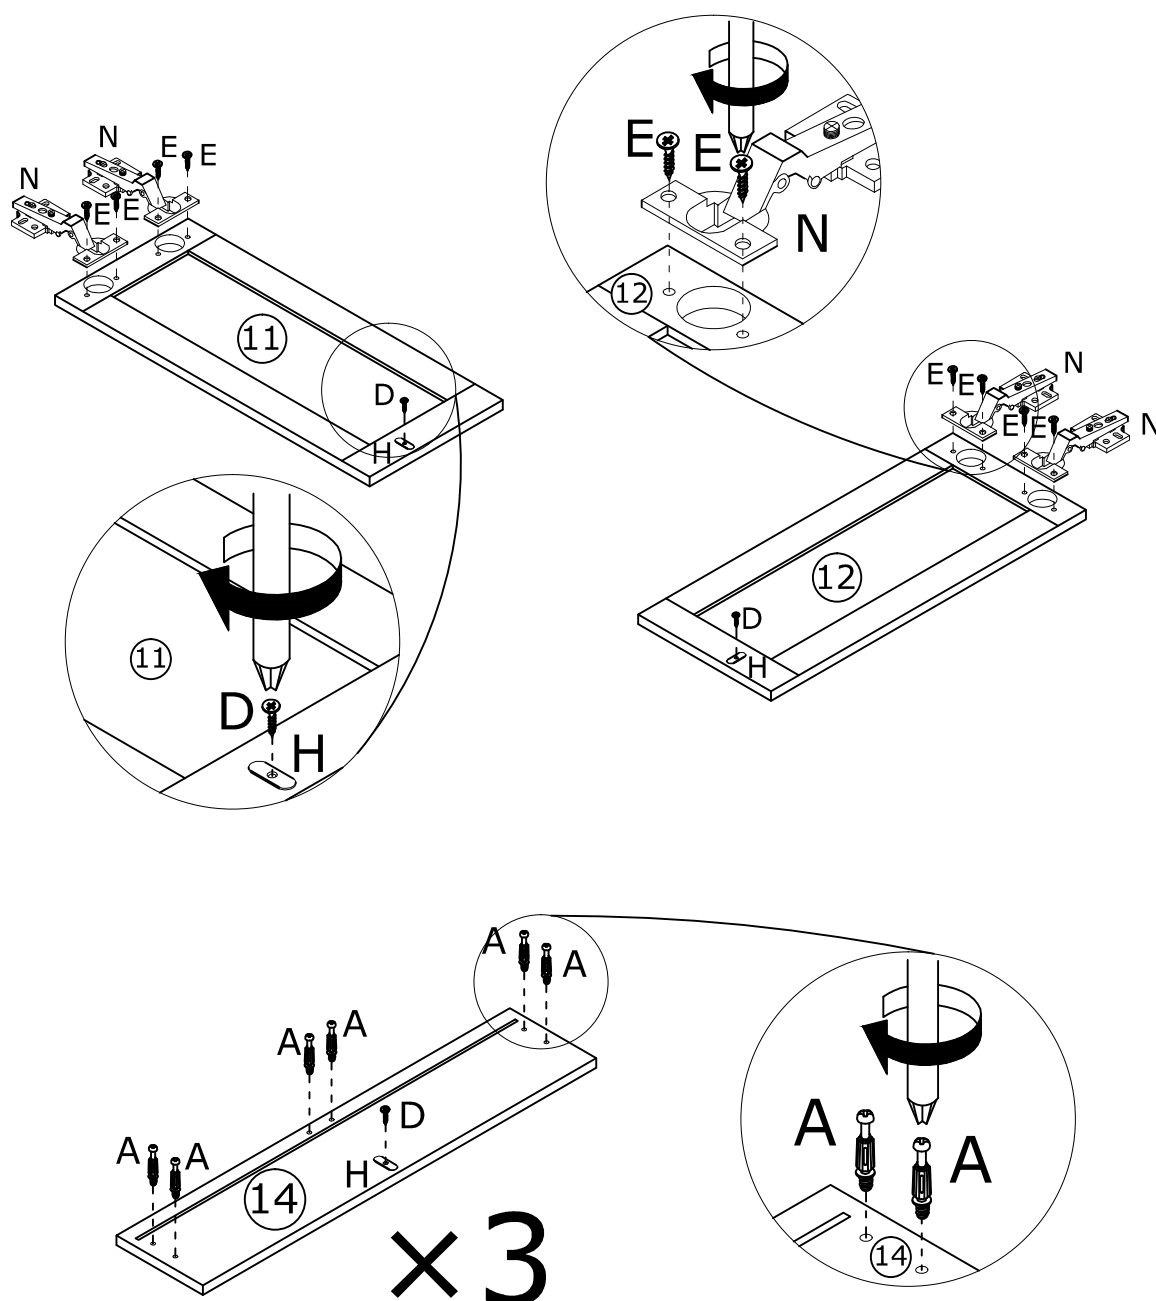


34

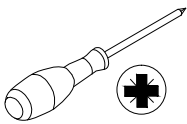  $D \times 5$  $\varnothing 3 \times 12 \text{mm}$	$E \times 20$  $\varnothing 3.5 \times 12 \text{mm}$	$H \times 5$ 	$N \times 10$ 	
--	---	---	--	---

Fix hinge(N) to the door board 36 , 37 and 28 with screw(E) as shown.

 
Fix part(H) to panel 36 , 37 and 28 with screw(D) as shown.

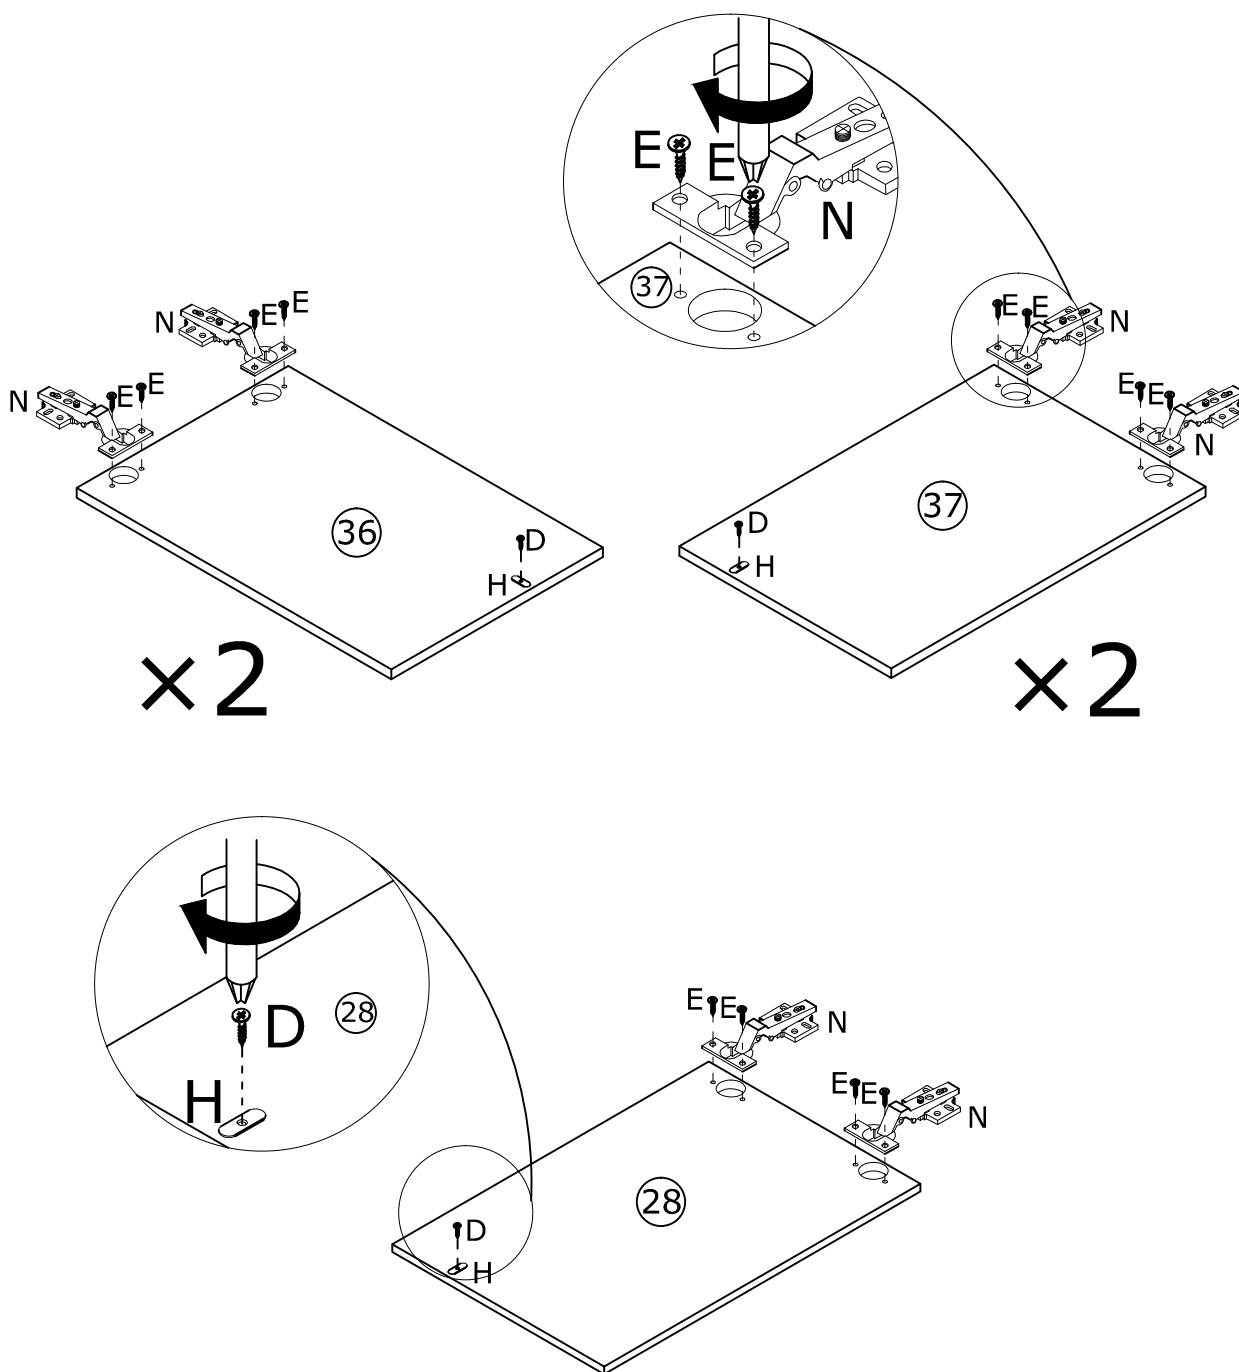

35


G × 18

  Ø4×40mm




Fix board 16 and 15 to board 17 with screw (G) as shown.

 Fix board 17 to board 18 with screw (G) as shown.

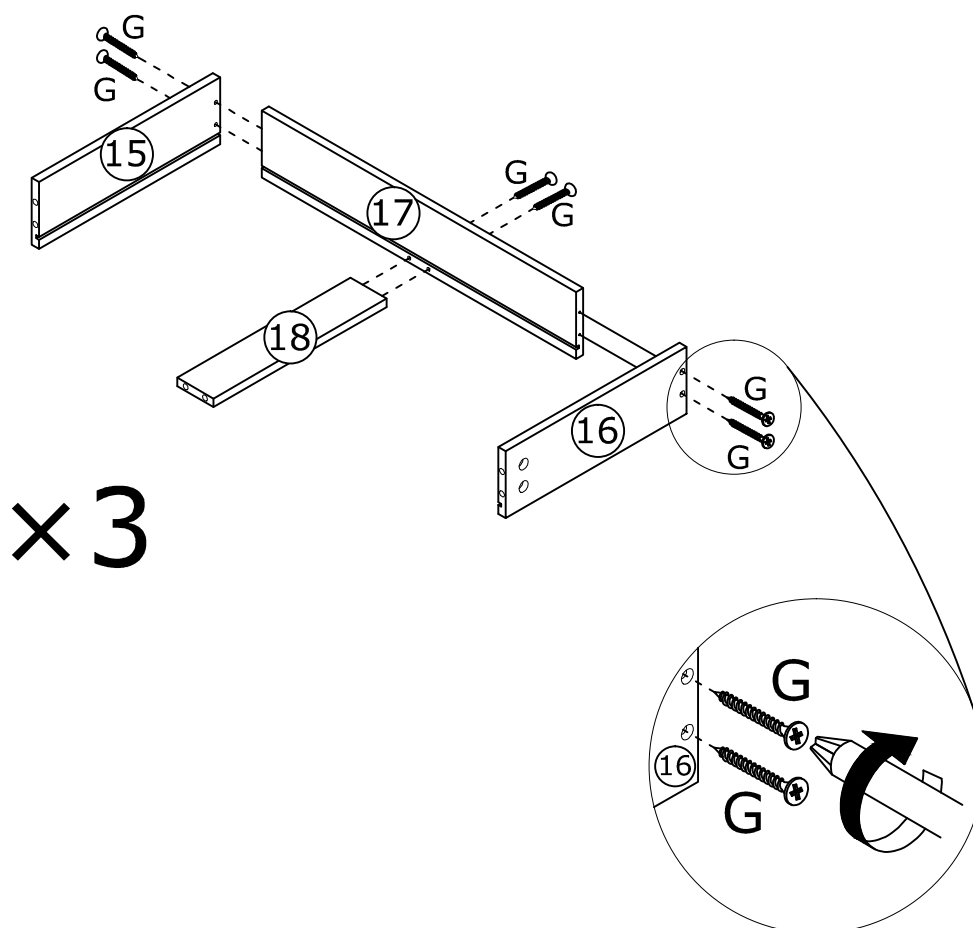

 Insert back board 19 along available grooves as shown.

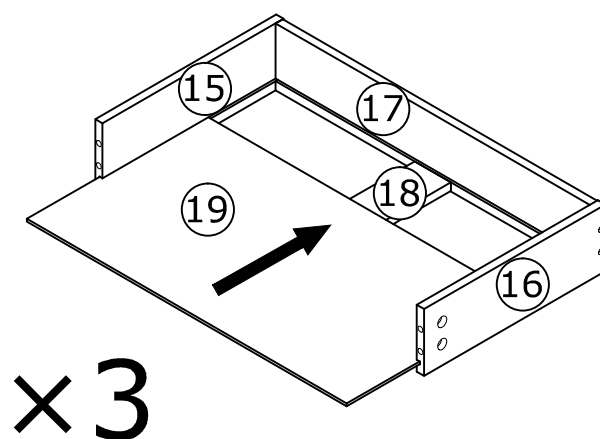





36

B × 18


 Ø15×9.5mm

D × 12

   
 
 Ø3×12mm

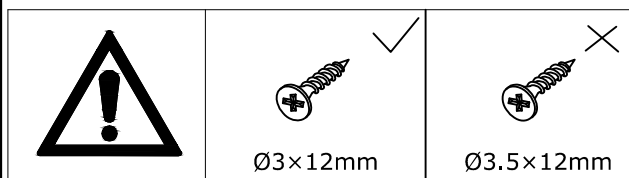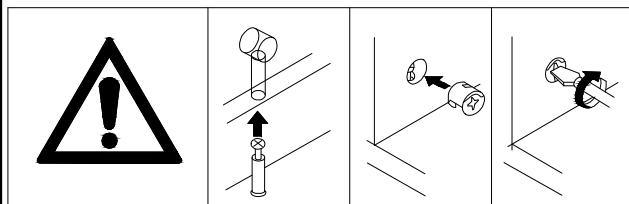

 
Attach board 14 to board 15 , 16 and 18 add cam lock(B) into 15 , 16 and 18 then turn clockwise to tighten as shown.

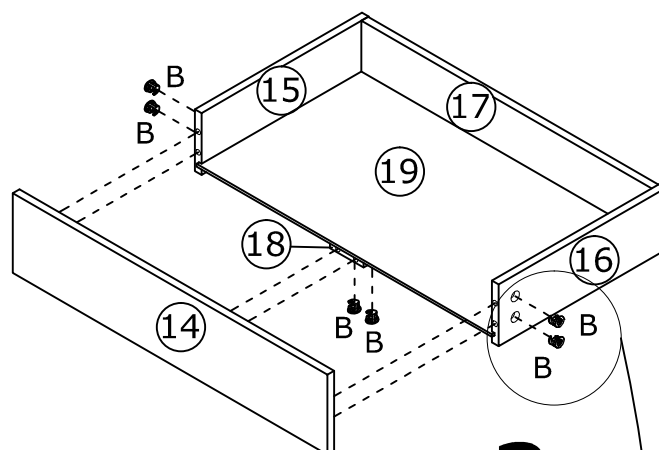

  Fix runner(L) and (M) to board 15 and 16 with screw(D) as shown.

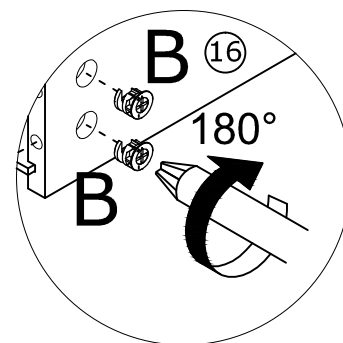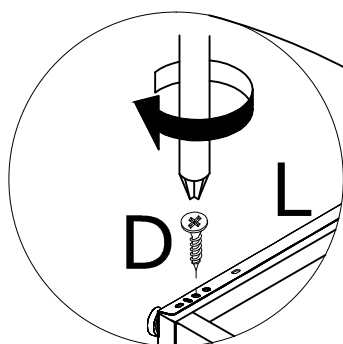

x3

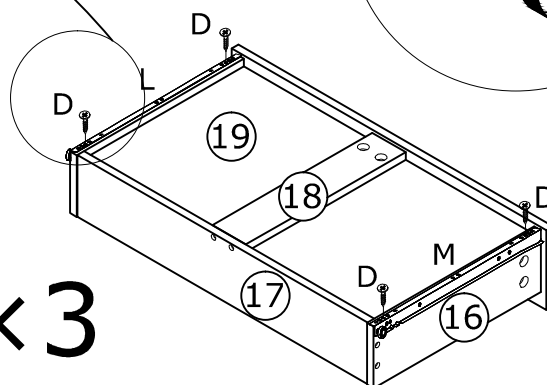 


37

P × 4	S × 110
Ø6×20mm	Ø20mm

Insert layer pin(P) into board 5 and 6 then place shelf board 9 in as shown.

 Align rails, insert drawers in.

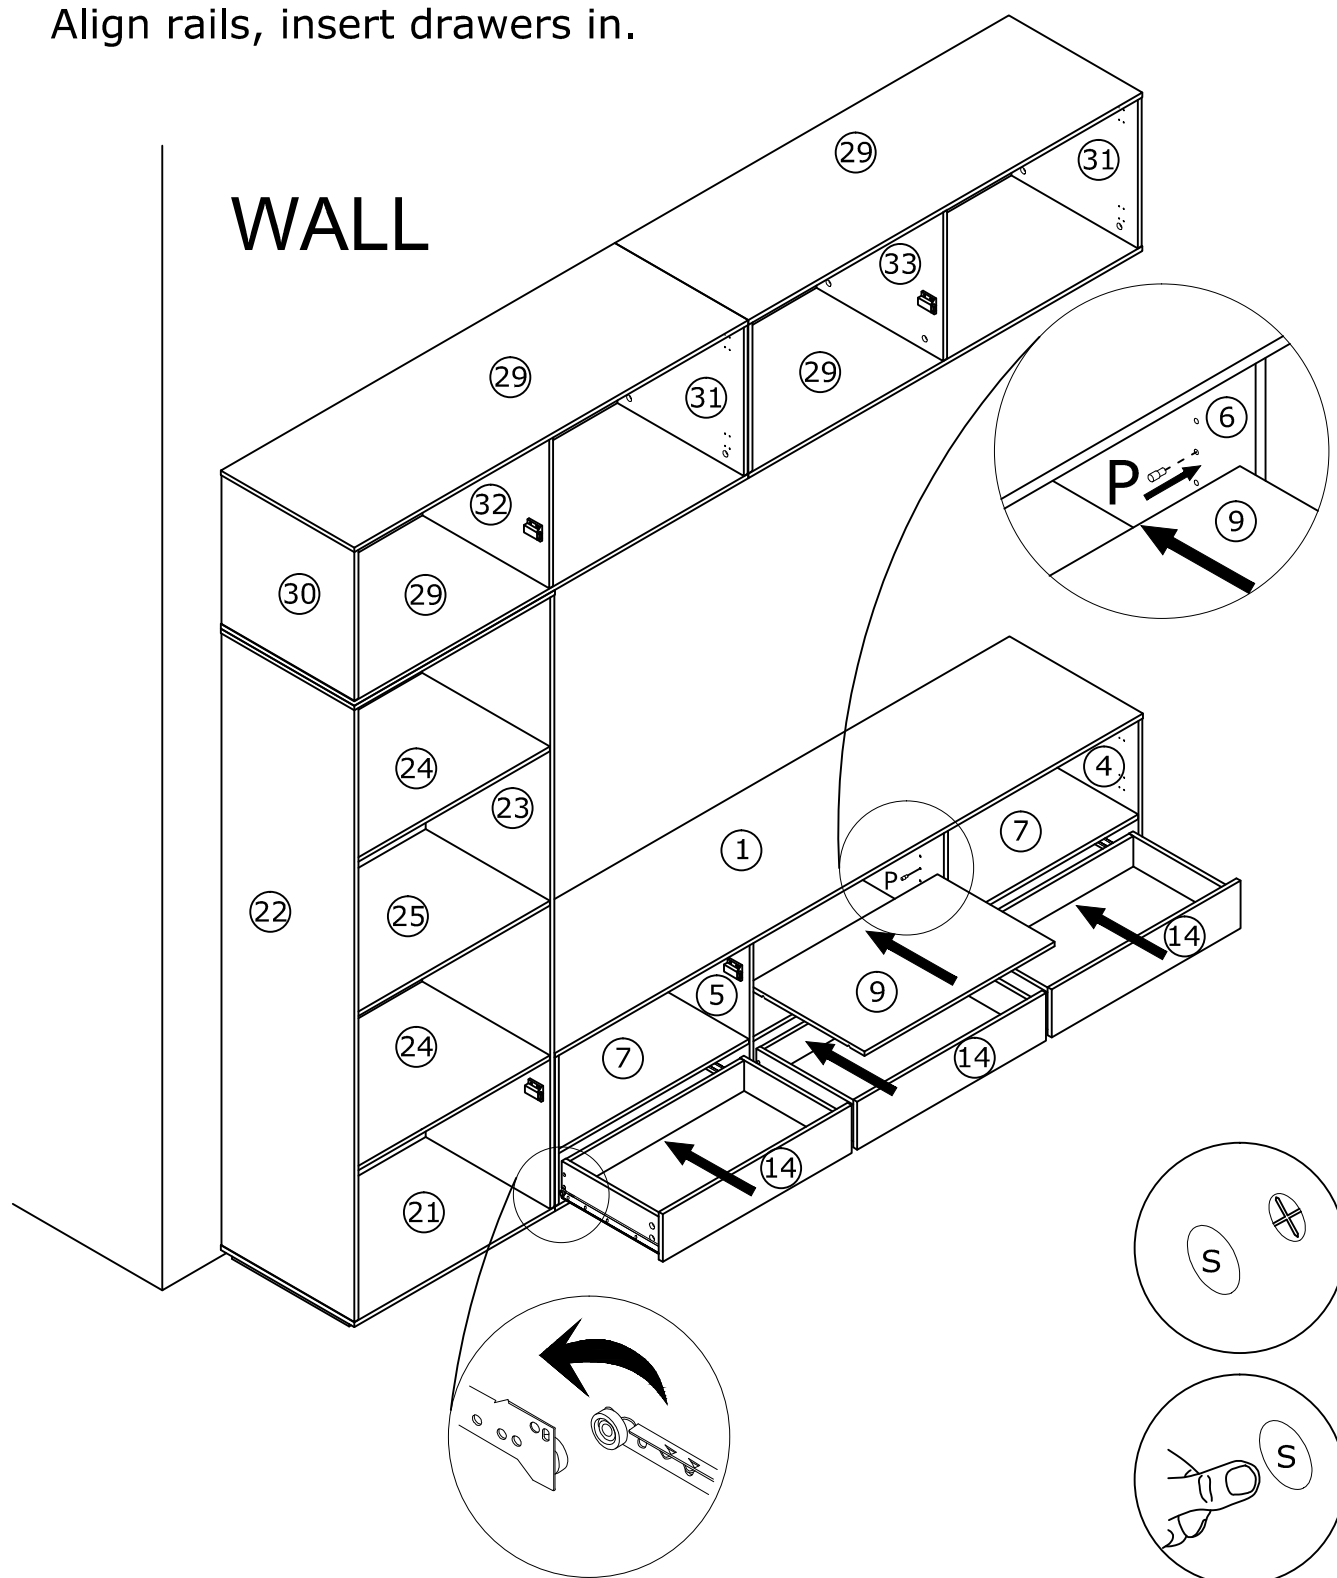


38

E × 56



 Ø3.5×12mm




Ø3×12mm



Ø3.5×12mm

 Fix the hinge of door board 36 , 37 , 28 , 11 and 12 to cabinet with screw(E) as shown.

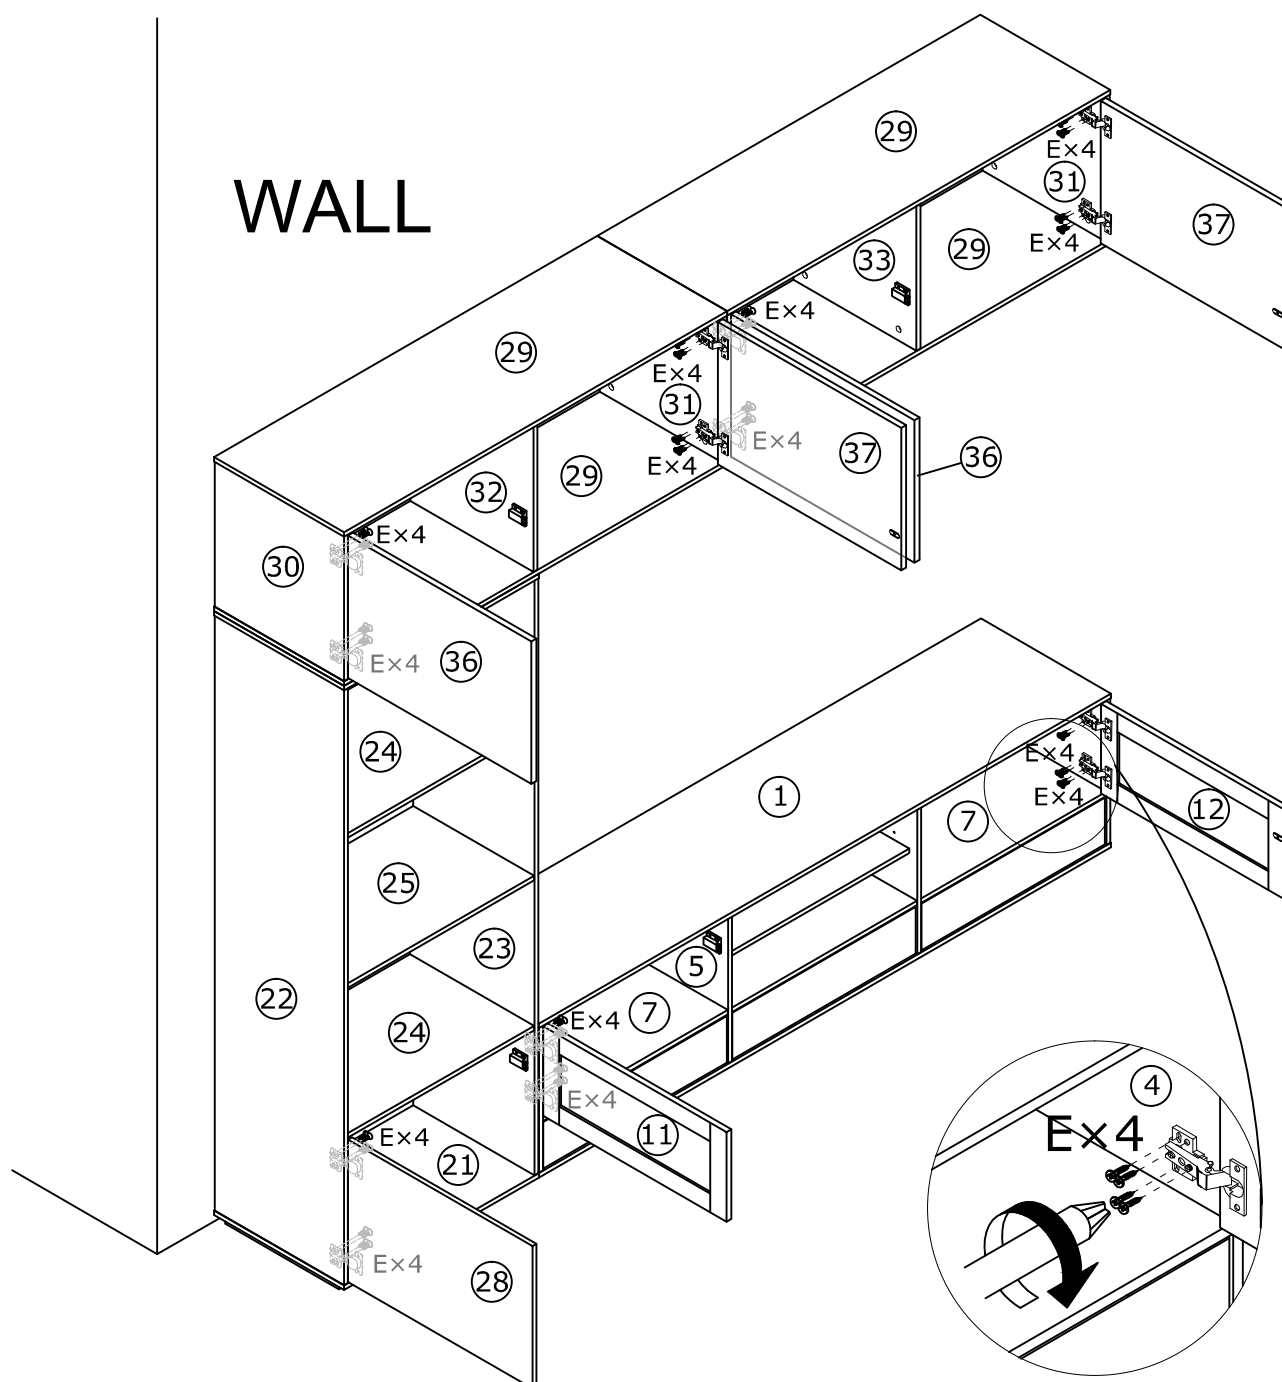



39




Using screw (Q) to lock the metal (Q) to the board 22 and 23 as shown.

Drill holes on wall, knock part (R) into the holes.

  Install anti-tipping device as shown.






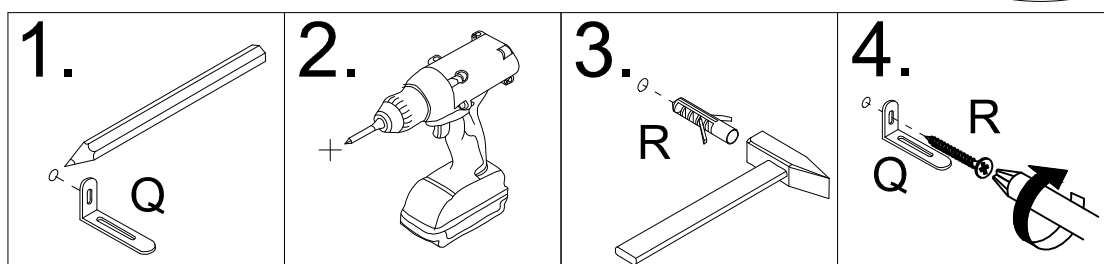
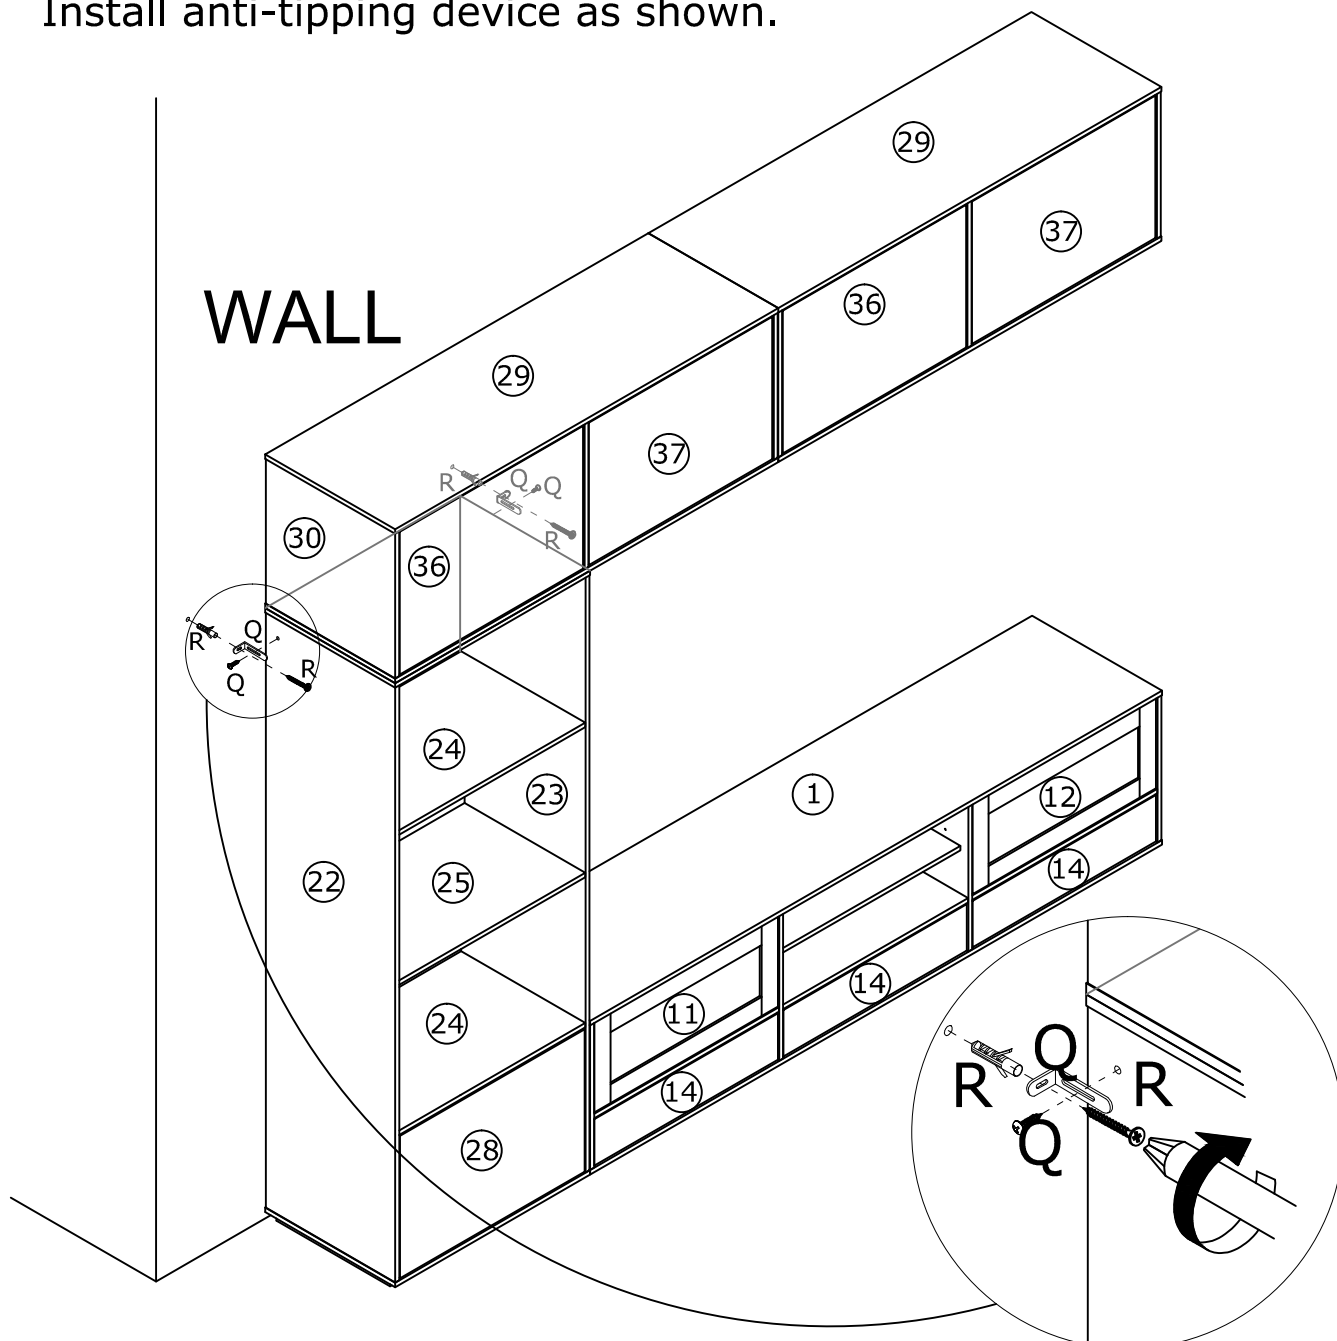


40

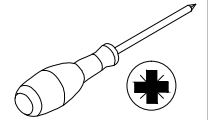 

If doors are still not aligned if the hinges are properly correctly,
please watch the video.
       
<https://youtu.be/n0Lb36SoODM>

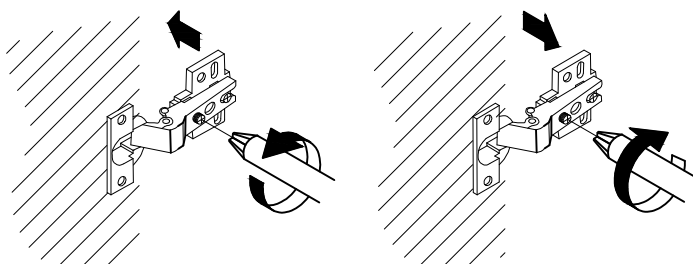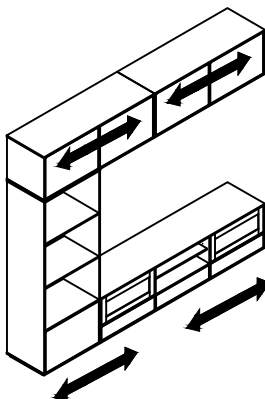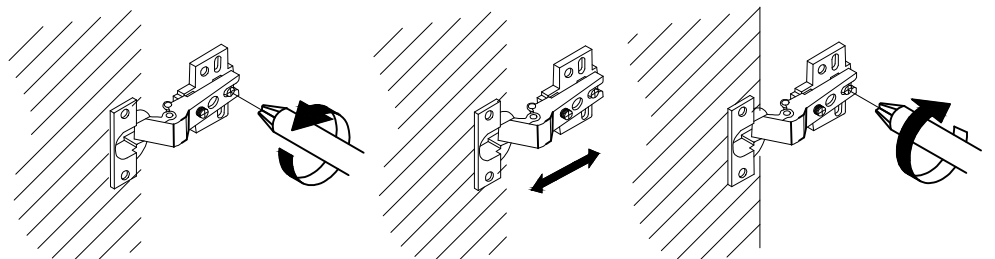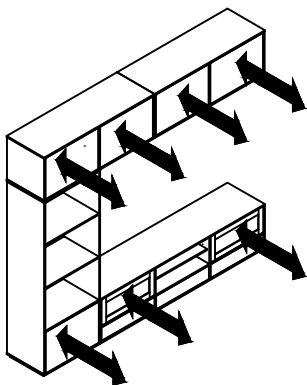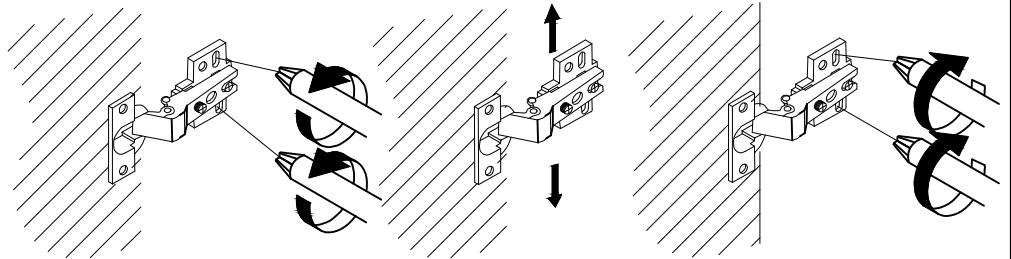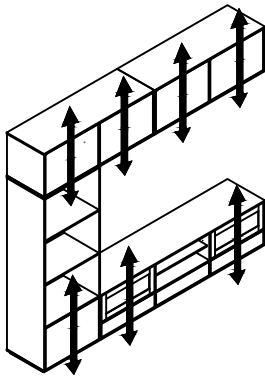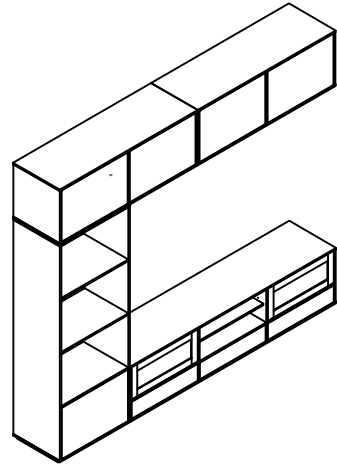

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



01203 310000



01203 310000