
TV STAND-N724P170547

Assembly Instructions - Please keep for future reference.

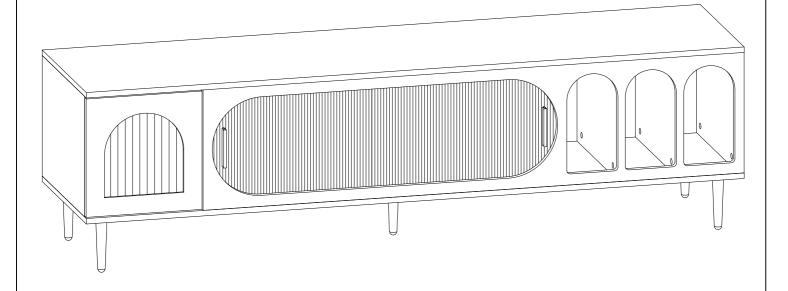

DIMENSIONS

width - 70.87inch

Depth - 17.72inch


Height - 20.08inch

Important - Please read these instructions fully before starting assembly.

components - fittings

Please check you have all the panels listed below.

Note: The quantitie below are the correcet amount to complete the assembly. In some cases more fittings may be supplied than are required.

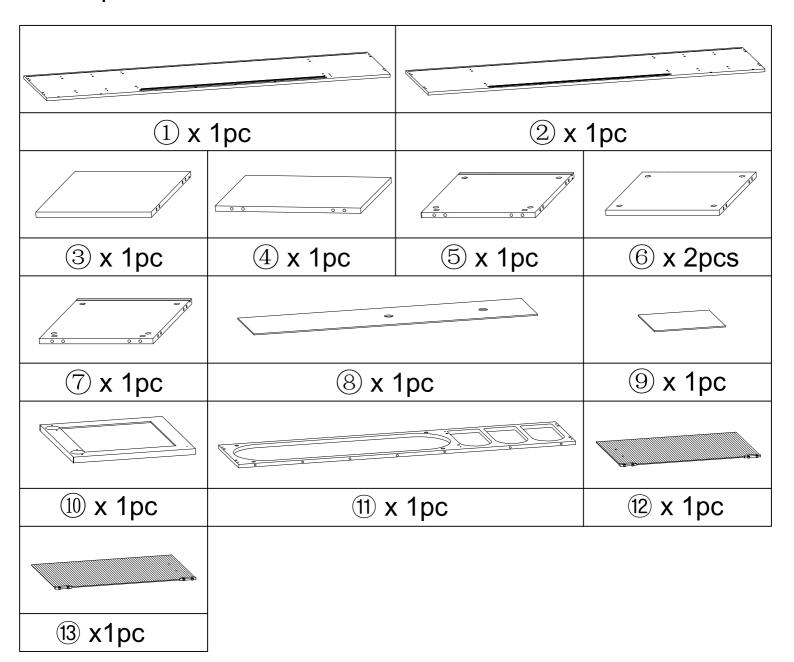



components - fittings


Please check you have all the panels listed below.


Note: The quantitie below are the correcet amount to complete the assembly. In some cases more fittings may be supplied than are required.


M6x35mm	Ф15х9mm	Ф8х30mm	M4x14mm
A x 34pcs	B x 34pcs	C x 40pcs	D x 36pcs
		M3x12mm	
E x 5pcs	F x 2pcs	G x 1pc	H x 2pcs
I x 1pc	J x 1pc	К х 1рс	L x 4pcs
M x 4pcs			

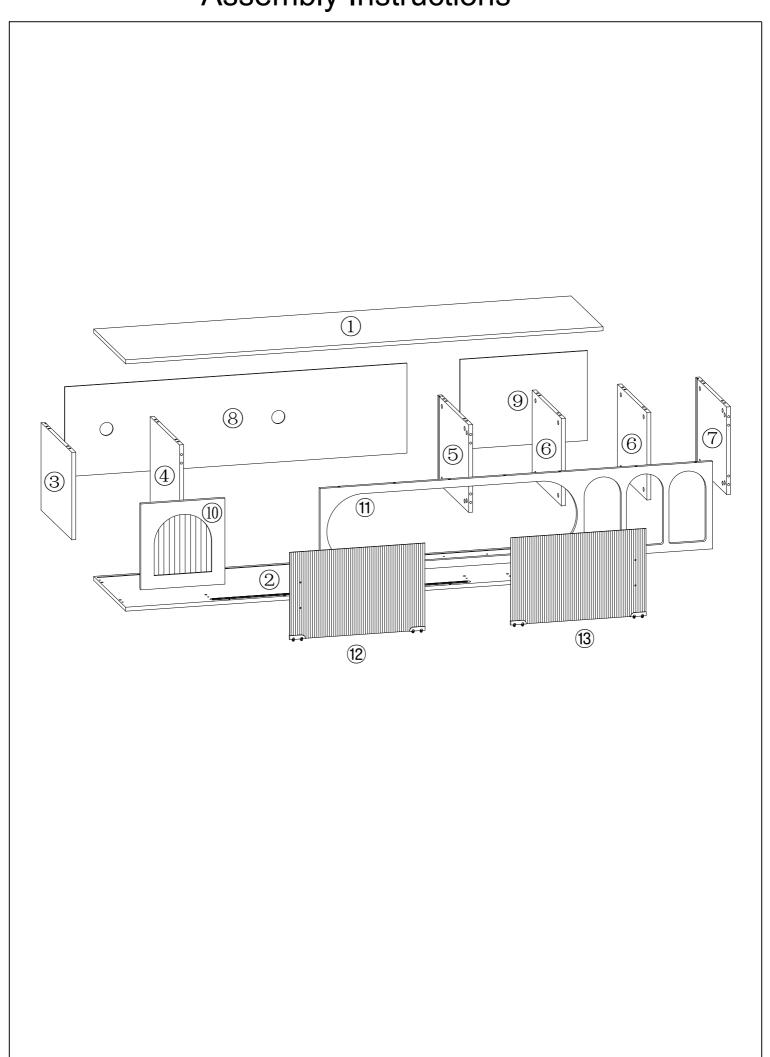


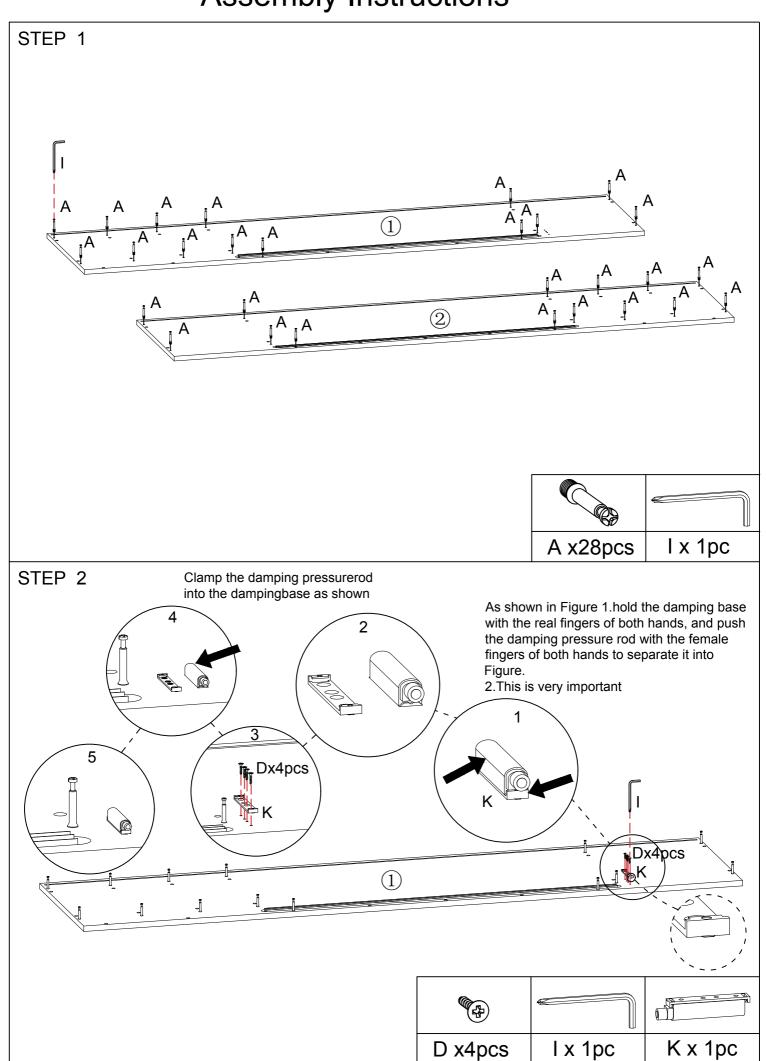


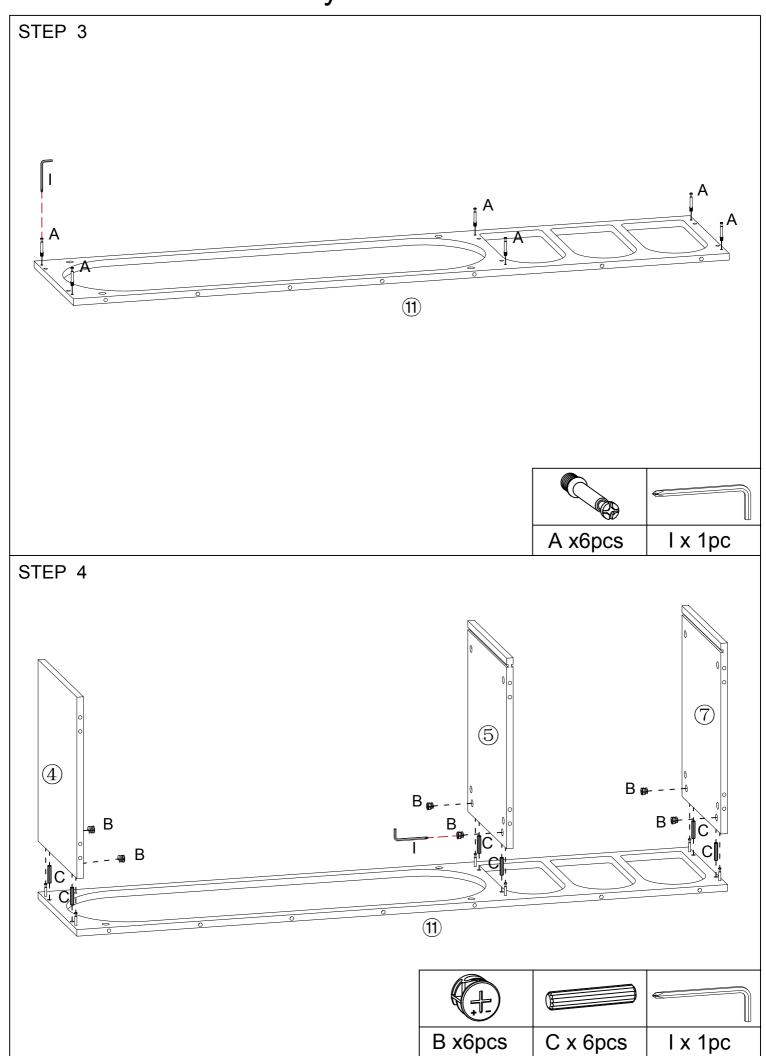

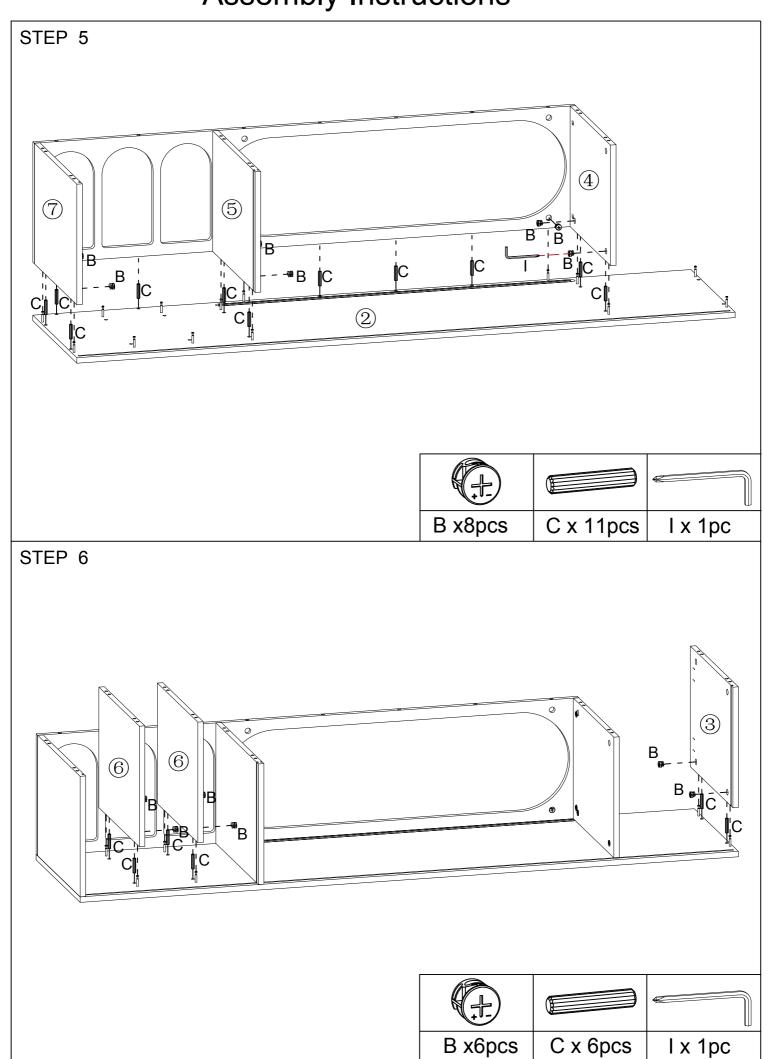


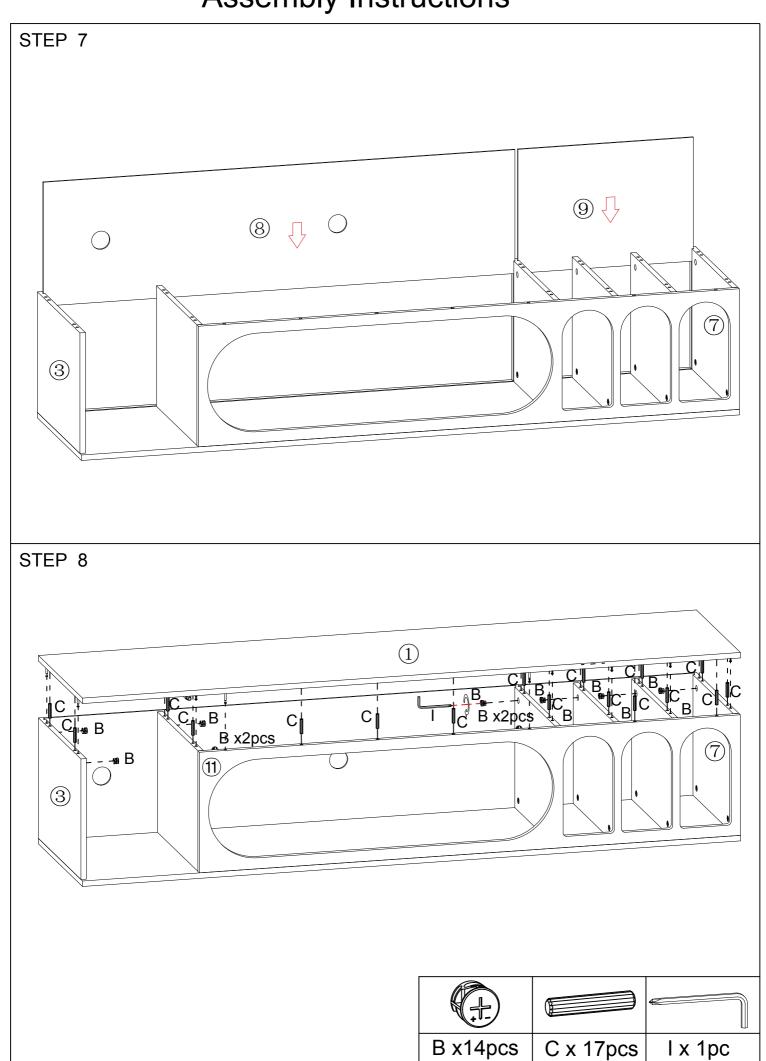

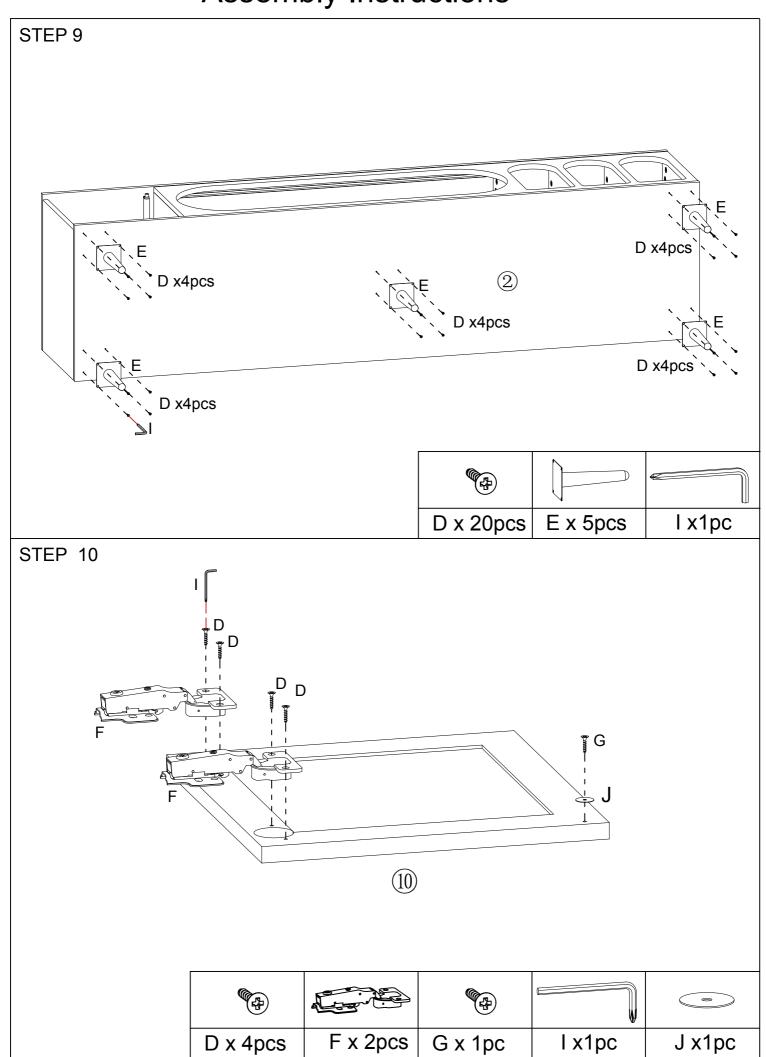

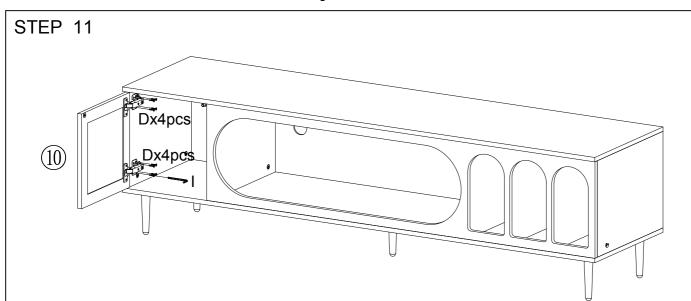

When the hinges are installed, you can refer to the pictures to adjust crevice of the doors till it's perfect:

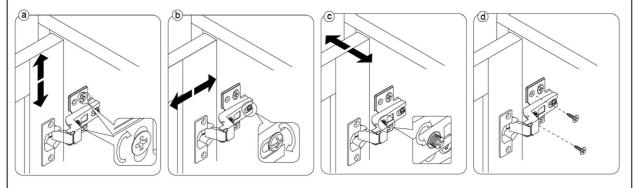

- 1. To adjust the doors up and down, please refer to step (a)
- 2. To adjust the distance between the doors and side panels, please refer to step(b)
- 3. To adjust the gap between two doors, please refer to step (c)
- 4. After the adjustment finished, please tight the screws, refer to step (d)

