

52-INCH DEROCATE CEILING FAN **USE AND CARE GUIDE**

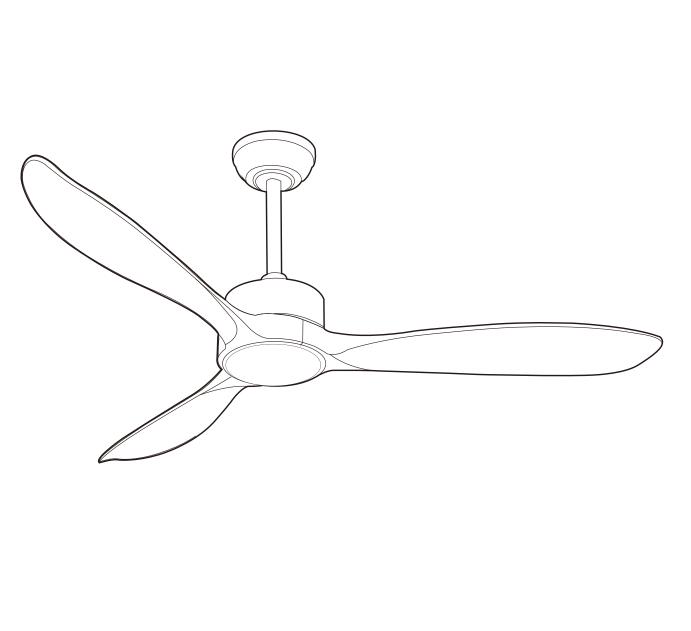



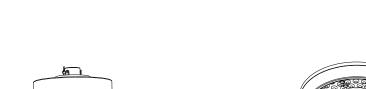




Fan-Motor assembly \times 1PCS

Pre-Installation

Light kit fitter assemlly $\times 1$ PCS LED $\times 1$ PCS

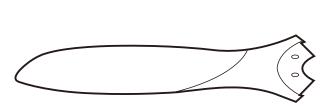




Blade X 3PCS

assembly X 1PCS




(inside canopy) X 1PCS

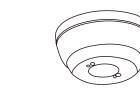




Canopy X 1PCS Coupling cover X 1PCS

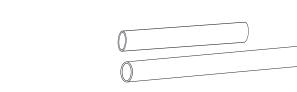


5/10 inch Ball/downrod assembly X 2PCS




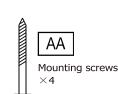


NOTE

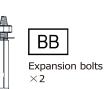

Slide - on mounting bracket 4.92 inch Ball/downrod

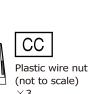


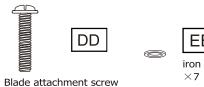






Hardware not shown to actual size.

Install downrod assembly

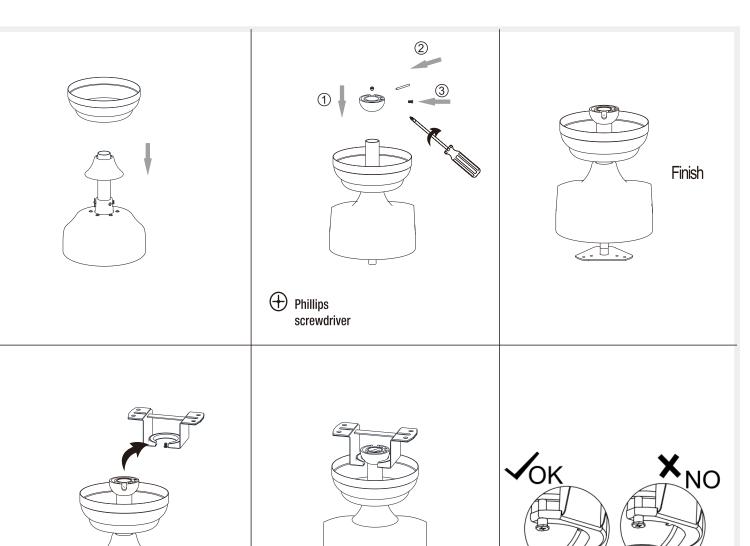

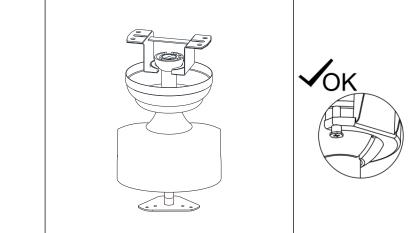

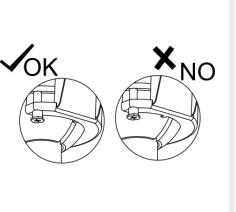


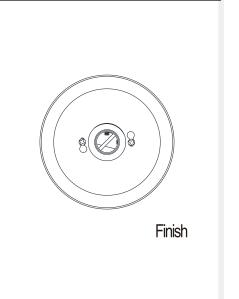

1.Remove the pre installed screws and install the lamp at the specified position

LED screws

Fastening the blade arms to the motor

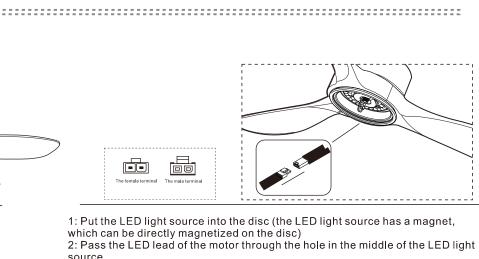


1.Remove the pre installed screws

2.Install the fan blade on the corresponding screw hole, and then install and fix it with the removed screws

Fasten the arm to the fan-motor assembly by inserting the aligment post int the slot on the bottom of the motor and tightening the pre-installed armscews.

Repeat this step for the remaining blade assemblies

3: Then plug the male terminal of LED lead into the female terminal of LED light source (as shown in figure)

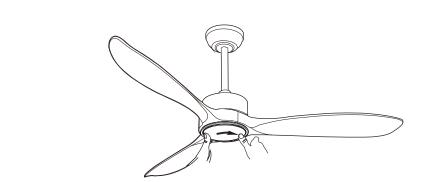

1. Screw the glass lampshade into the lamp in a counterclockwise direction. Make sure the glass lampshade is locked.

Installation of the hanging bracket

CONCRETE CEILING **Expansion Bolts** Flat Washers Flat Washers

For concrete ceiling, use the percussion bit with diameter 8mm to drill holes according to the length of expansion screws. Then use the attached expansion screws to fix the hanging bracket onto the ceiling (selection is made according to actual requirements of the customers).


STEP 1 A-CONCRETE CEILING

SWITCH OFF THE ELECTRICAL MAINS AT THE CIRCUIT BREAKER FUSE BOX. 1)Use the Mounting Bracket as a guide, mark the spots where the 4 Expansion Bolts will be drilled.

2)Remove the Mounting Bracket , drill 2 holes and insert 2 Expansion Bolts into the concrete ceiling, install the mounting bracket and secure with Flat Washers, Spring Washers and Nuts.



IMPORTANT : SCREWS & NUTS MUST BE TIGHTENED TILL SNUG

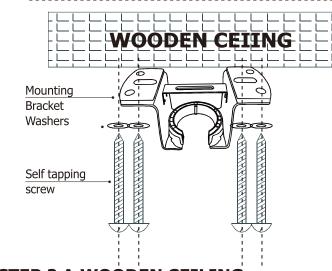

For wooden ceiling, use wood screw to drill on the wooden beam or the "junction box" to fix the hanging bracket(selection is made according to actual requirements of the customers)


STEP 2 A-WOODEN CEILING

SWITCH OFF THE ELECTRICAL MAINS AT THE CIRCUIT BREAKER FUSE BOX.

1) Use the Mounting Bracket as a guide, mark the spots where the 4 Self Tapping Screws will be drilled.

2) Remove the Mounting Bracket , drill 4 holes for 3MM diameter, install the mounting bracket onto wooden ceillng with the 4Self Tapping Screws &Washers

Install downrod assembly

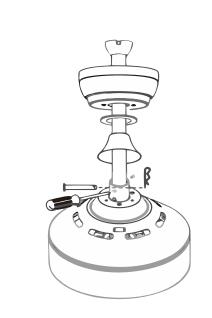

- ☐ Carefuly feed the molor wires up though the downrod
- \square Align the holes and replace hanger pin and locking pin.
- ☐ Tighten the two colar setscrews.
- ☐ Slip coupling cover, canopy coverand canopy onto the downrod.

Hang the fan




☐ Lift the fan motor assembly up to the mounting bracket and seat the hanger ball in the mounting bracket socket.Rotate the fan motor assembly until the check groove drops into the registration slot and seats firmly. The downrod should not rotate if the is done correctly

Install canopy



- ☐ Ensure the loosened screws is inserted into the key holes on the mounting bracket.
- ☐ Carefully raise the canopy up to the mounting bracket.Rotate the canopy clockwise.
- ☐ Secure the canopy by replacing the screws previously removed and tightening the screw previously loosened ☐ Place the canopy cover (if applicable) and rotate the canopy cover clockwise until it locks into position.

Making the electrical connections

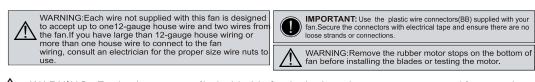


WARNING: Each wire not supplied with this fan is designed to accept up to one12-gauge house wire and two wires from the fan. If you have larger than 12-gauge house wiring or more than one

house wire to connect to the fan wiring, consult an electrician for the proper size wire nuts to use. WARNING: Remove the rubber motor stops on the bottom of the fan before installing the blades or

Phillips

IMPORTANT: Use the plastic wire connectors(BB) supplied with your fan. Secure the connectors with electrical tape and ensure there are no loose strands or

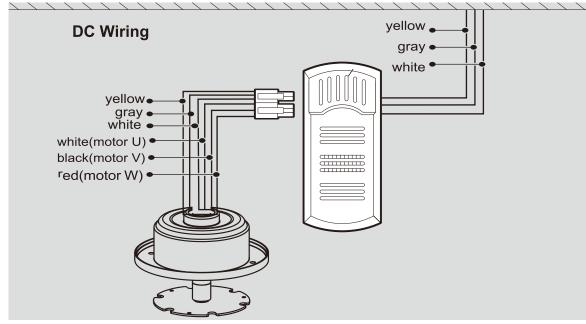

The receiver is connected to the motor power cord and the ceiling power cord respectively.


Connect wires color to color, plug to plug.

Live Wire

Neutral Wire

Ground Wire


Install remote control

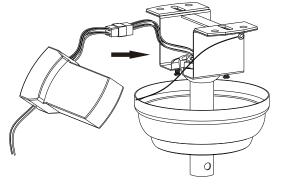

1.Carefully push the canopy to the bottom of the mounting bracket, make two sliding holes aligned to the two prominent screws on the mounting bracket, and then turn clockwise until tight.

2. Push the canopy ring to the bottom of the canopy, slide the inner holes aligned to the two prominent screws on the mounting bracket again, and turn the canopy ring clockwise until tight.

Preparing for mounting

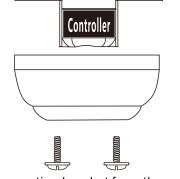


1:Remove the mounting bracket from the canopy by loosening the two canopy screws located in the L shaped slots. 2:Remove and save the two canopy screws in the round holes. This will enable you to remove the mountingbracket

LIGHT MUST BE KEPT AT THE ON POSITION FAN MUST BE KEPT AT THE HIGH SPEED

Use of remote control

REMOTE CONTROL MANUAL

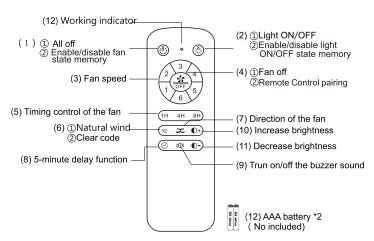

The remote controller only needs to be paired once. After the paired product, the controller will have memory. The products have been paired before leaving the factory. When the remote contrl is damaged

- or lost, it is necessary to implement remote control pairing before using a new remote control.
- Turn OFF the Fan and Light together.
- Long press:press and hold the key for 2-3 seconds. A long press produces a long beep to activate the memory function for the fan's state before power-off. A long pressing again will produce two short beeps to deactivate the memory function. (2) Light ON/OFF:
- Press the key to turn on or turn off the light. • Long press:press and hold the key for 2-3 seconds. A long press produces a long beep to activate the memory function for
- the light's state(on or off) before power-off.Along pressing again will produce two short beeps to deactivate the memory function.(Just remember the state (on or off) of the light, not the light's color temperature)
- (3) Fan speed:
- Press keys 1-6 to adjust the fan speed.
- (4) Fan OFF/Remote control pairing: Turn OFF the Fan.
- For remote control pairing, press and hold the button for 3-5 seconds within 30 seconds of powering on. The buzzer will emit a long beep to confirm that pairing is complete. Note: The remote controller only needs to be paired once. After pairing, it will retain memory. Products are pre-paired at the
- factory. If the remote control is damaged or lost, pairing with a new remote control is necessary before use. (5) Timing control of the Fan:
- Press the 1H/4H/8H keys to set the fan timer for 1,4,or 8 hours. The fan will automatically turn off when the timer ends.
- During the timing function, all functions of the ceiling fan can be operated . To cancel the timer setting, press key(1) or key(7) while the timing function is active.
- [©] Press the key to activate the natural wind mode, which automtically adjusts the fan speed between levels 1 and 6. o Press and hold this button until a long beep is heard to clear the code. Then, press and hold the "FAN OFF" button to re-pair and restore the program to factory settings.
- (7) Direction of the fan:
- Change the direction of the fan using the appropriate controls.
- (8) 5-minute delay function:
- Press the key to activate the 5-minute delay function for the light, after which it will automatically turn off. Note: After the delay, the fan remains unchanges. This function is primarily for pre-sleep lighting delays. If used before leaving, you'll need to manually turn off the fan with "FAN OFF".
- (9) Turn ON/OFF the buzzer sound: Press the key to toggle the buzzer sound on or off.
- (10) Increase brightness:
- Press the key to increase brightness.
- (10) Decrease brightness:
- Press the key to decrease brightness. AAA battery (2):
- Install 2 AAA batteries before use.
 Remove the batteries when not in use for an extended period.