

INSTALLATION

Product Manual

Version: 210287-01-24A-AA



IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.




AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.



IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

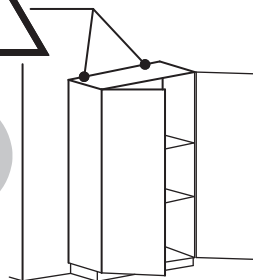

ANTI-TOPPLE WARNING !

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !



It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.




Please prepare the following tools

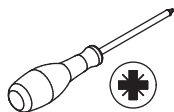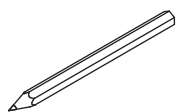

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 56



CRA0635A

B x 32




CRB1595A

C x 36




CRB1295A

 D x 6

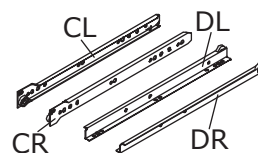


WX0812A

 E x 26




CRD3512A

 F x 24



CRD0312A

 G x 10




CRD0445A

H x 10




CRF0630A

 I x 36



CRC0540A

 J x 4




CRA0648A

K x 4




Ø9 x 10 mm

 L x 4

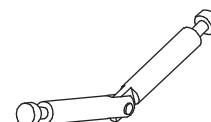

Ø6.5 x 84 mm

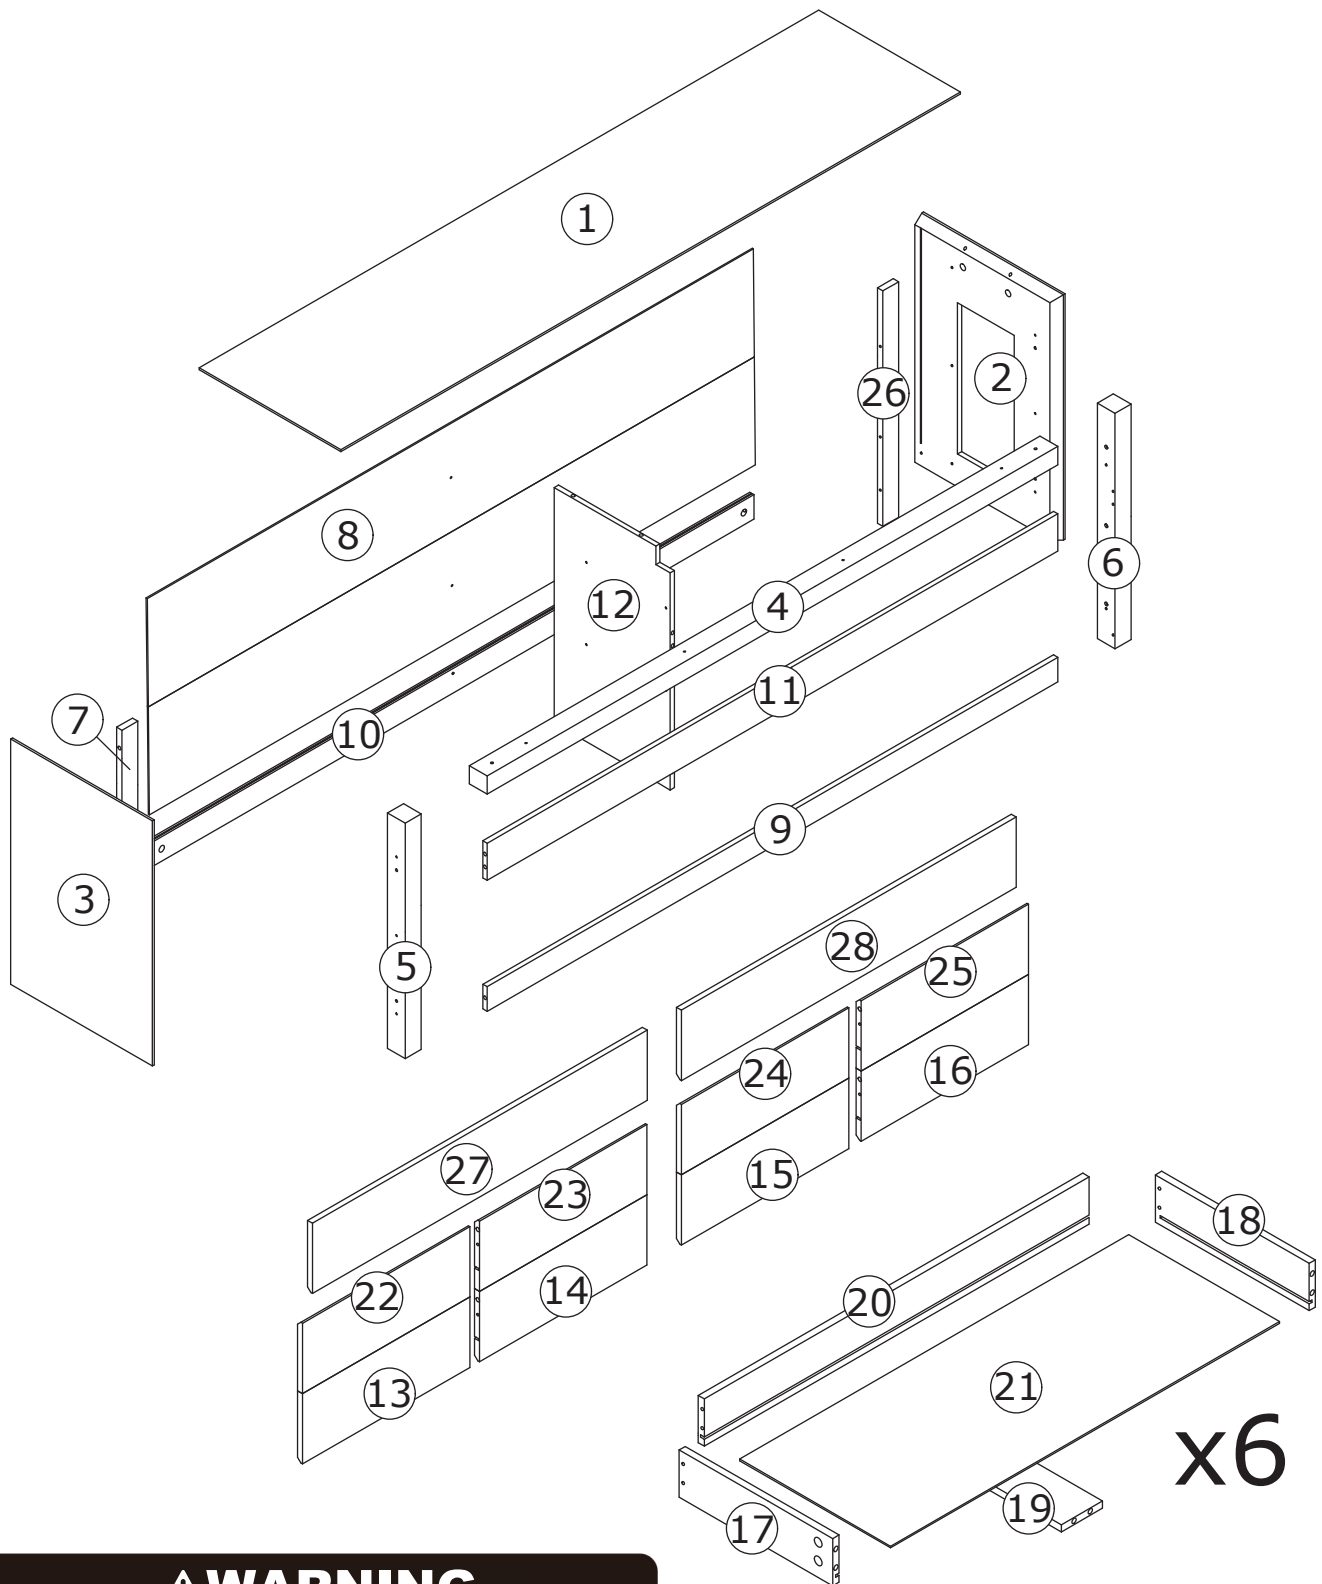 


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:



- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*


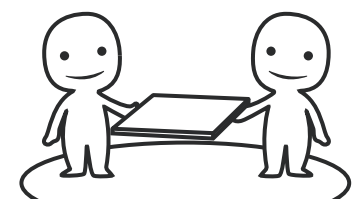


ASSEMBLED BY 2 ADULTS


 
 
1

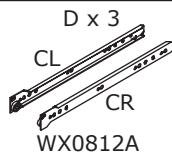

     
 
Fix rail(CR) to plate 12 with screw(E) at first, **flip to back**, fix rail(CL) as shown. Screw eccentric rod(A) into plate 9, 10 and 11 as shown.

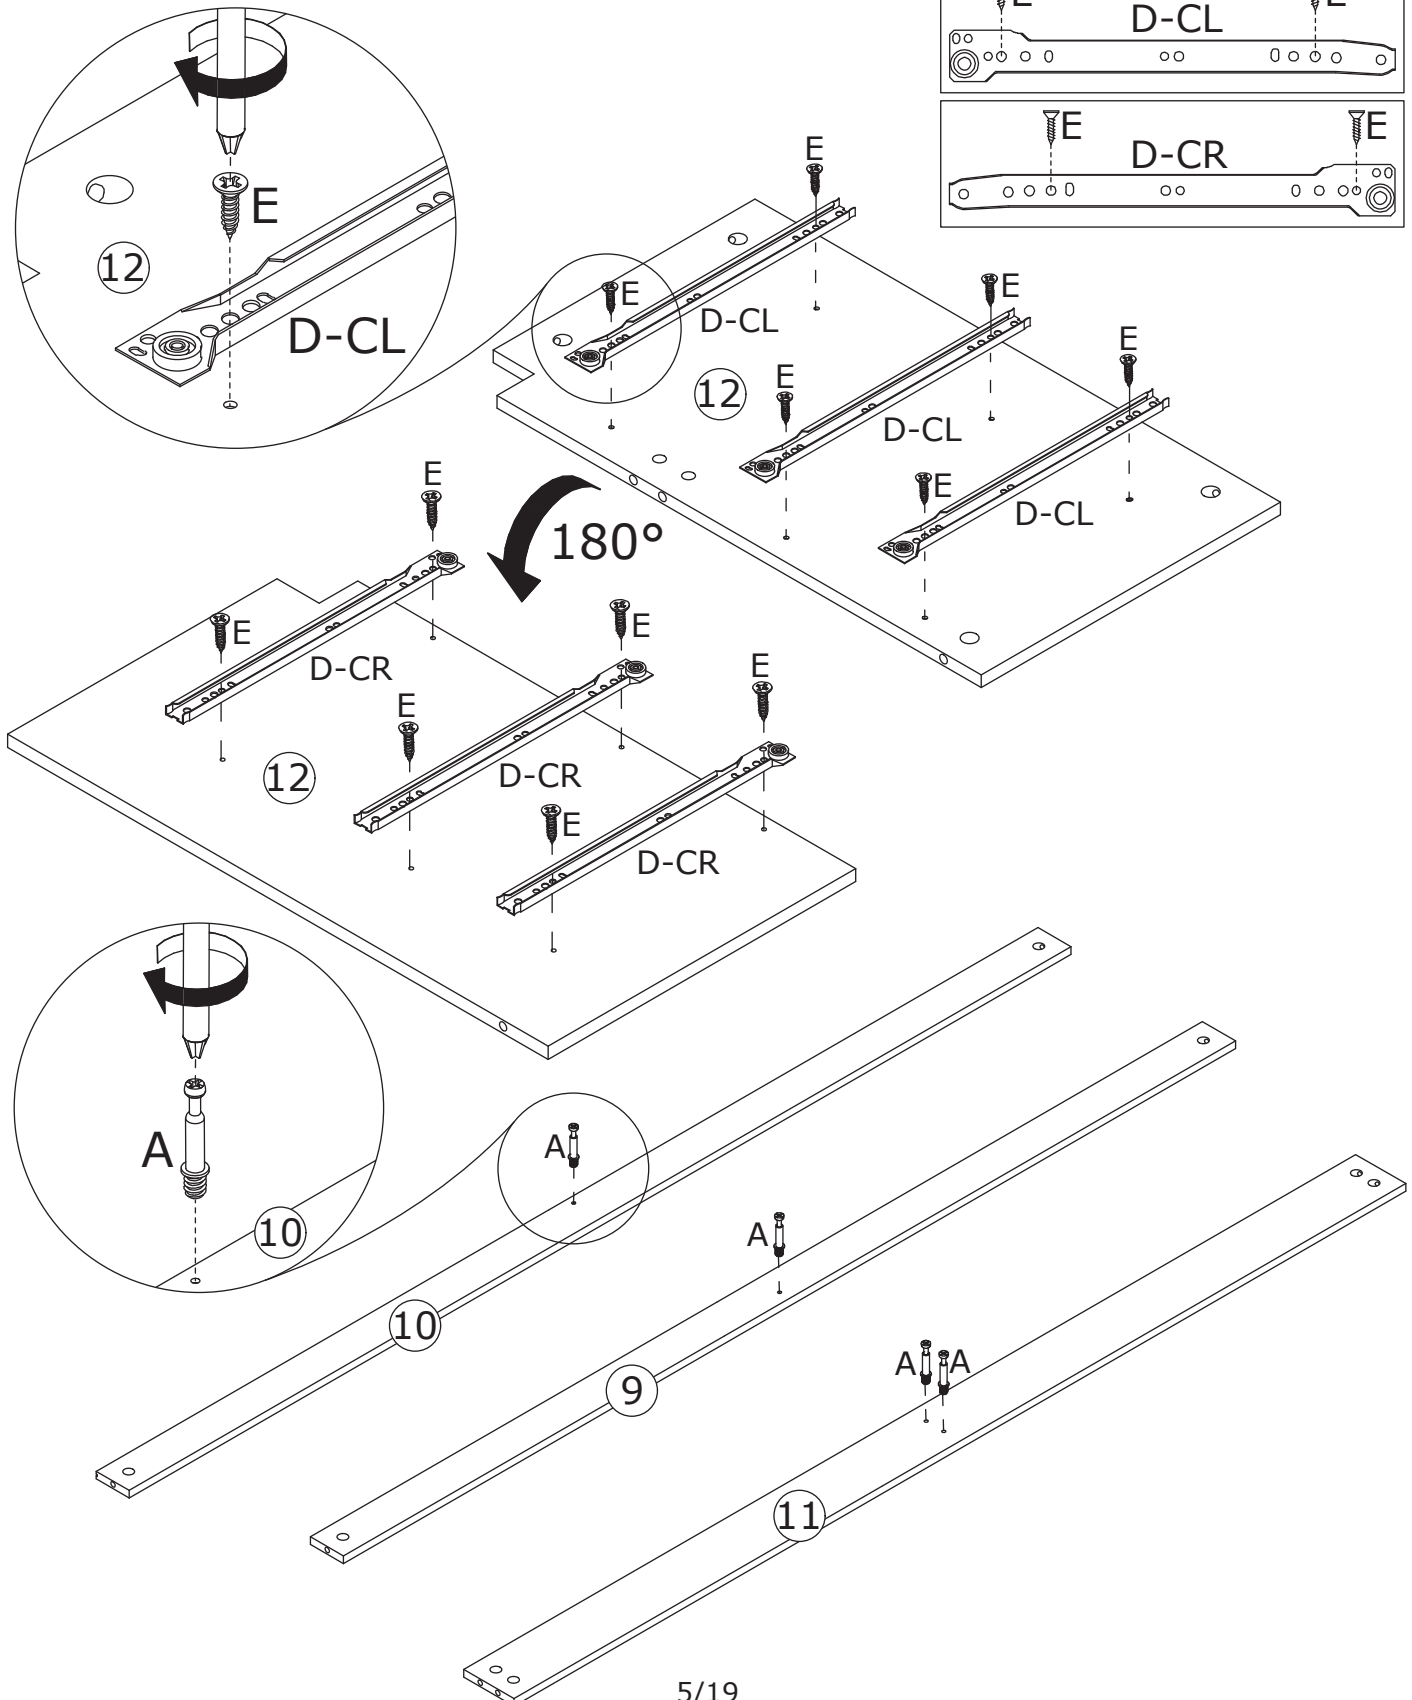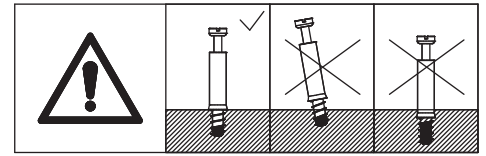

 

 
 
 
2

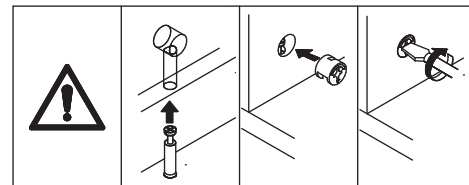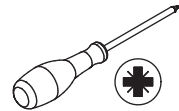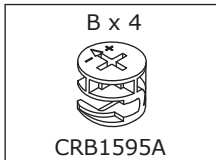



Attach plate 9, 10 and 11 to plate 12, add cam lock(B) into plate 12 and turn clockwise to tighten as shown.

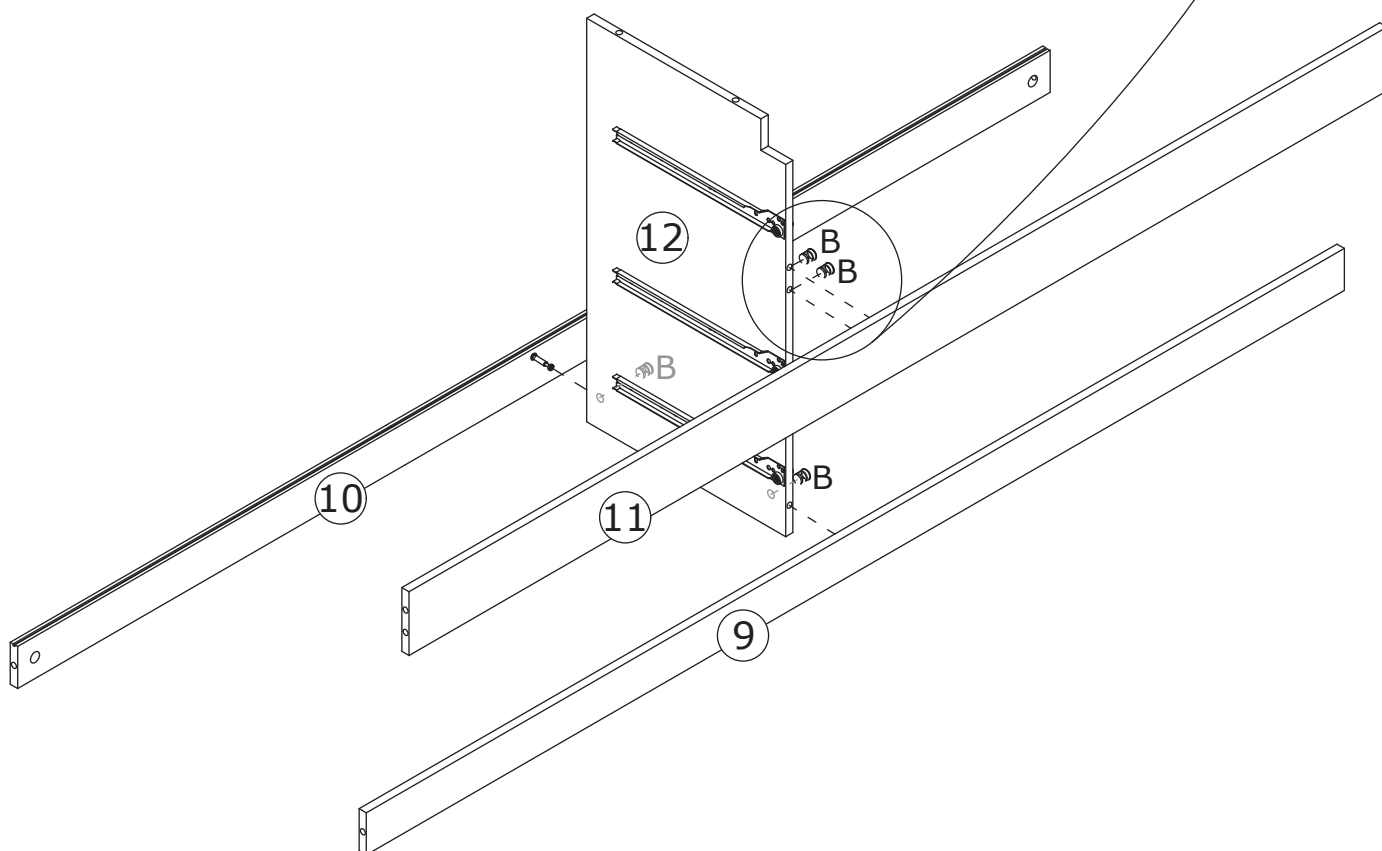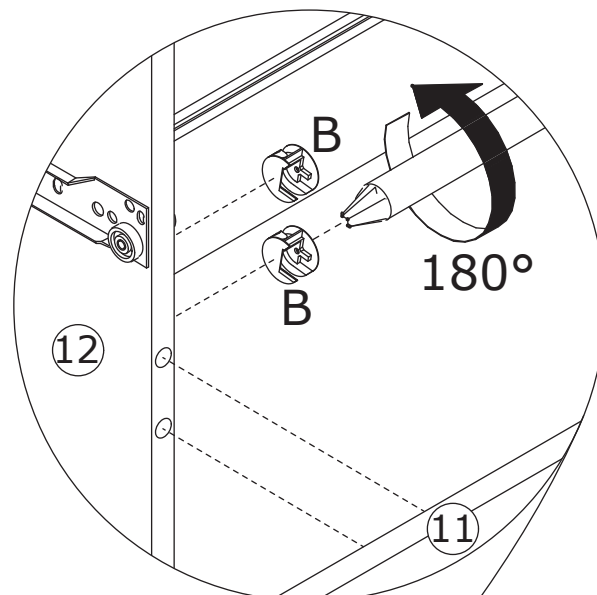


3

<p>A x 8</p>  <p>CRA0635A</p>	<p>B x 6</p>  <p>CRB1595A</p>	<p>G x 6</p>  <p>CRD0445A</p>	<p>H x 4</p>  <p>CRF0630A</p>	
--	--	--	---	---

  Screw eccentric rod(A) into plate 2 and 3 as shown. Attach plate 7 to plate 3, plate 26 to plate 2, add cam lock(B) into plate 7, 26 and turn clockwise to tighten as shown.

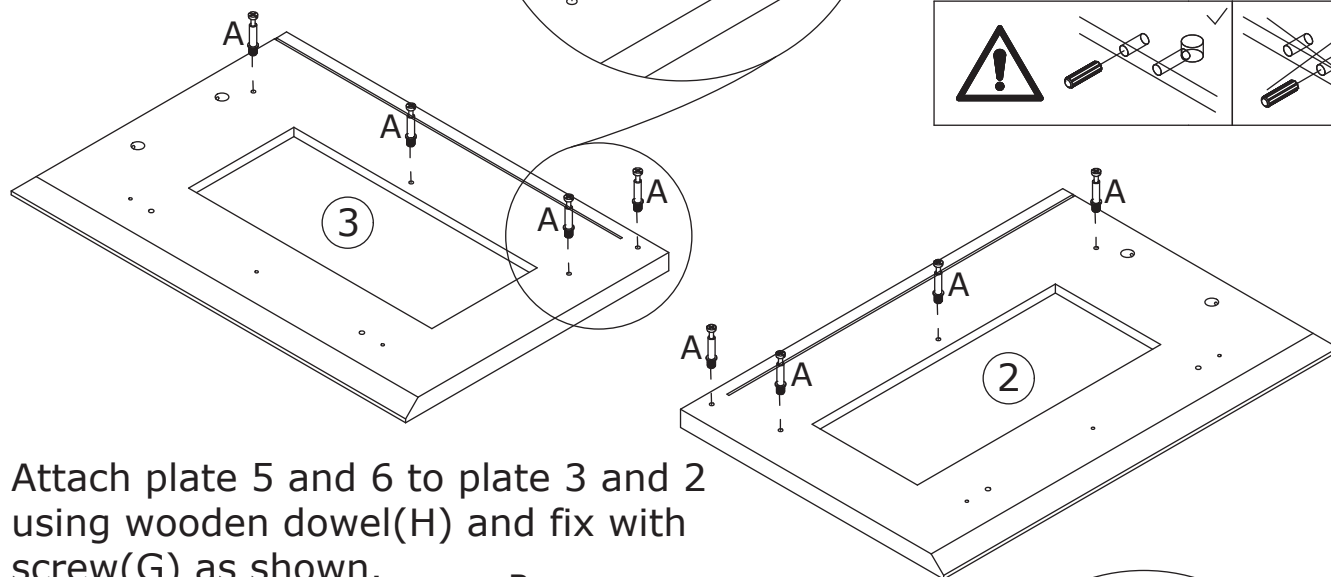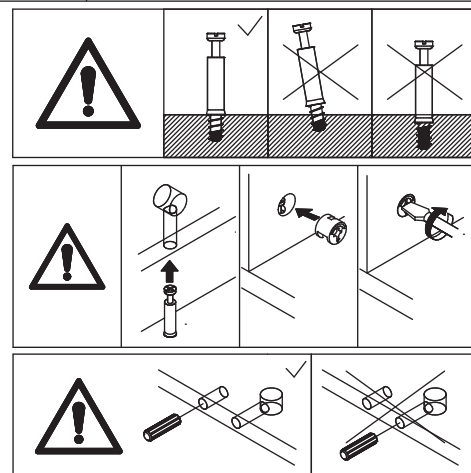


 Attach plate 5 and 6 to plate 3 and 2 using wooden dowel(H) and fix with screw(G) as shown.

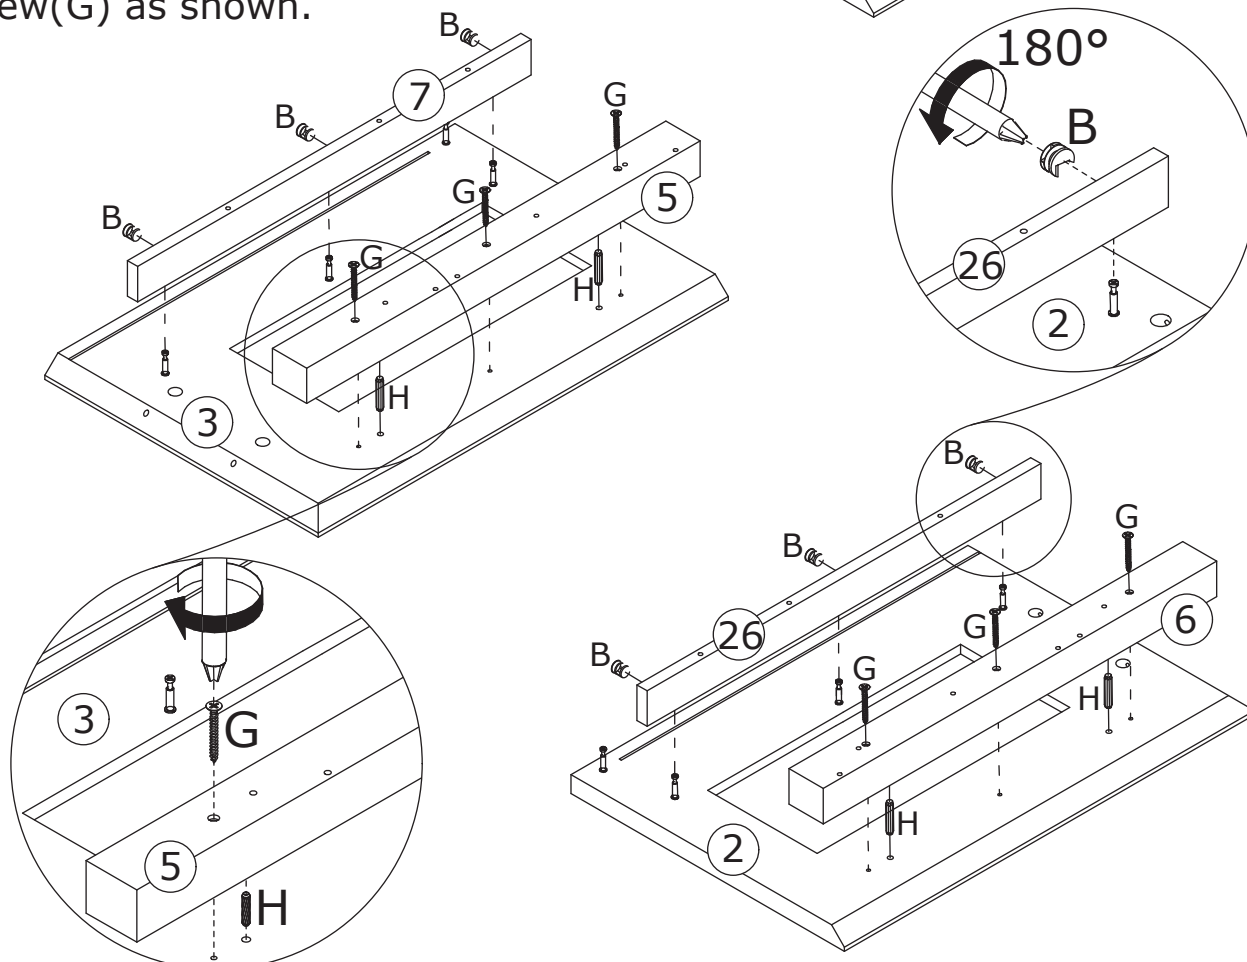


4




 
A x 6



CRA0635A

 


    Screw eccentric rod(A)
into plate 5 and 6 as
shown.

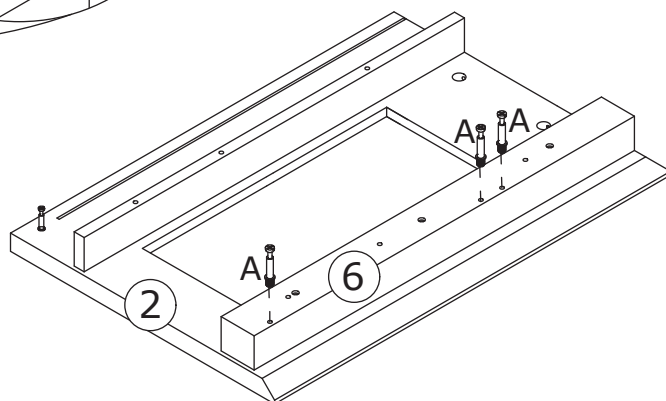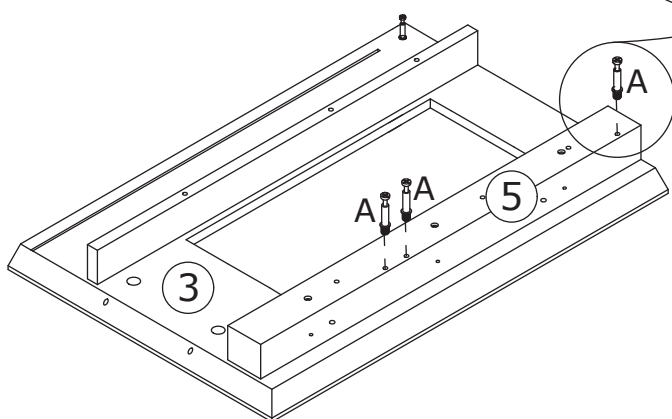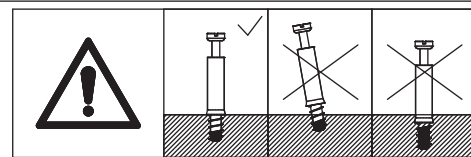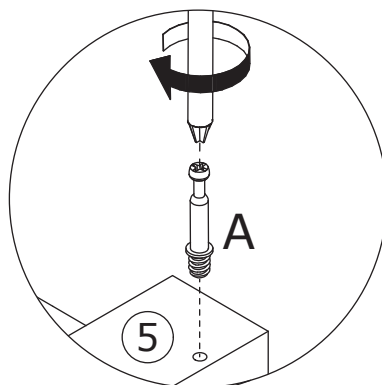


5

 D x 3





WX0812A



 
E x 12






CRD3512A

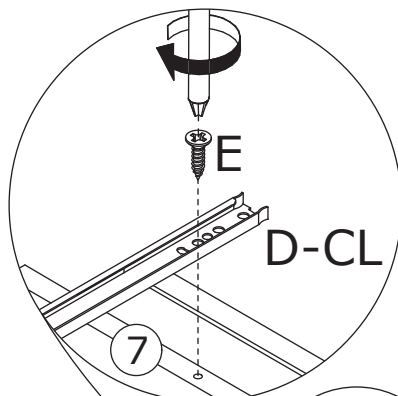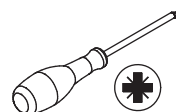 

   
Fix rail(CL) to plate 5 and 7
with screw(E) at first.
Fix rail(CR) to plate 6 and
26 as shown.

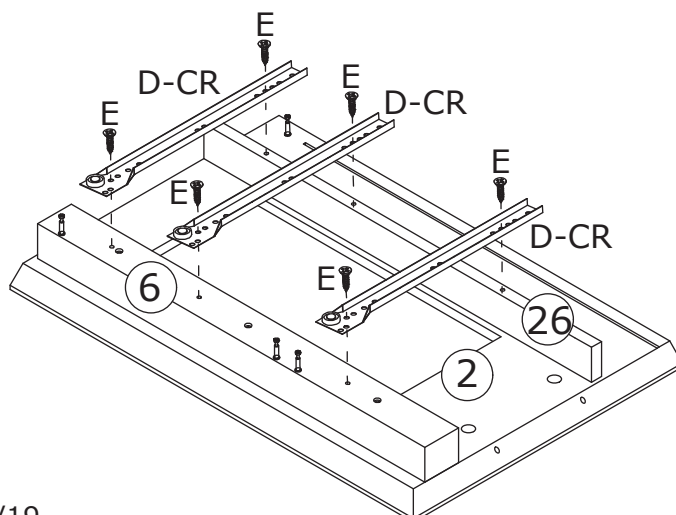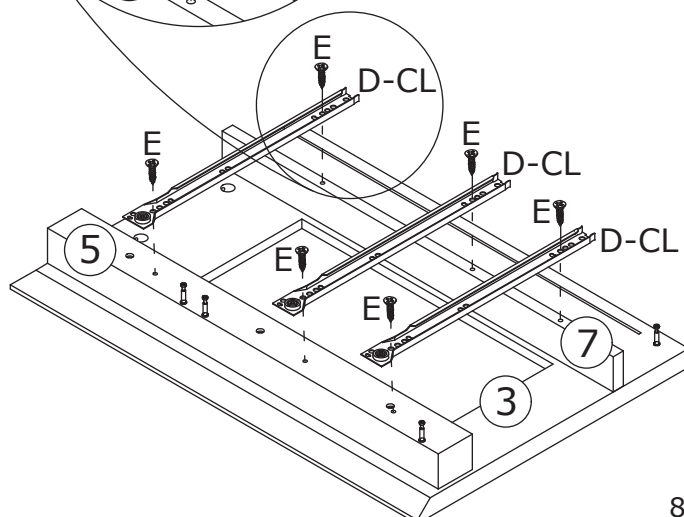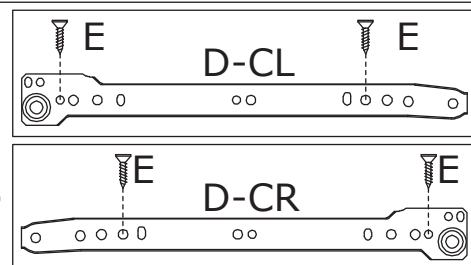

6

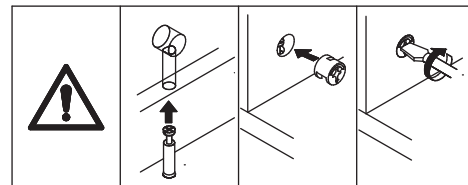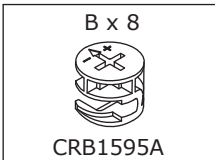   

 Connect plate 9, 10 and 11 to plate 5 and 6,
add cam lock(B) into plate 9,10,11 and turn
clockwise to tighten as shown.

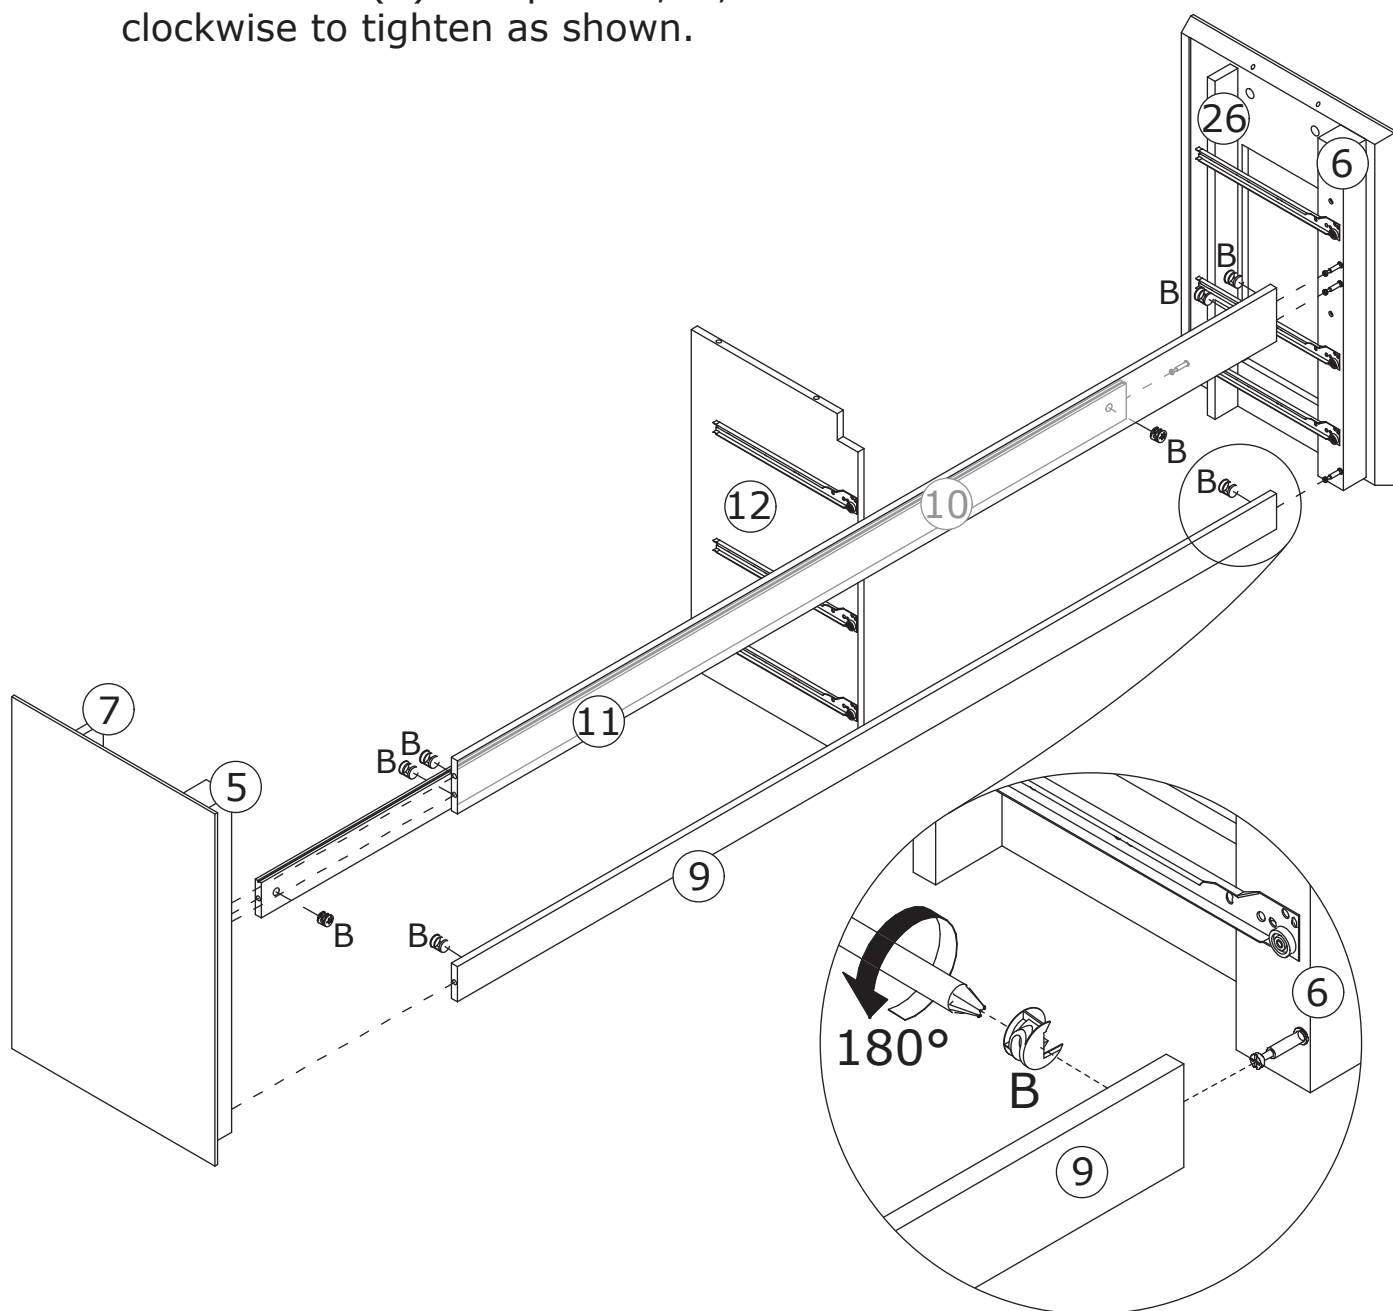


7


E x 2



 CRD3512A



 Fix back plate 8 to plate 12 using screw(E) as shown.




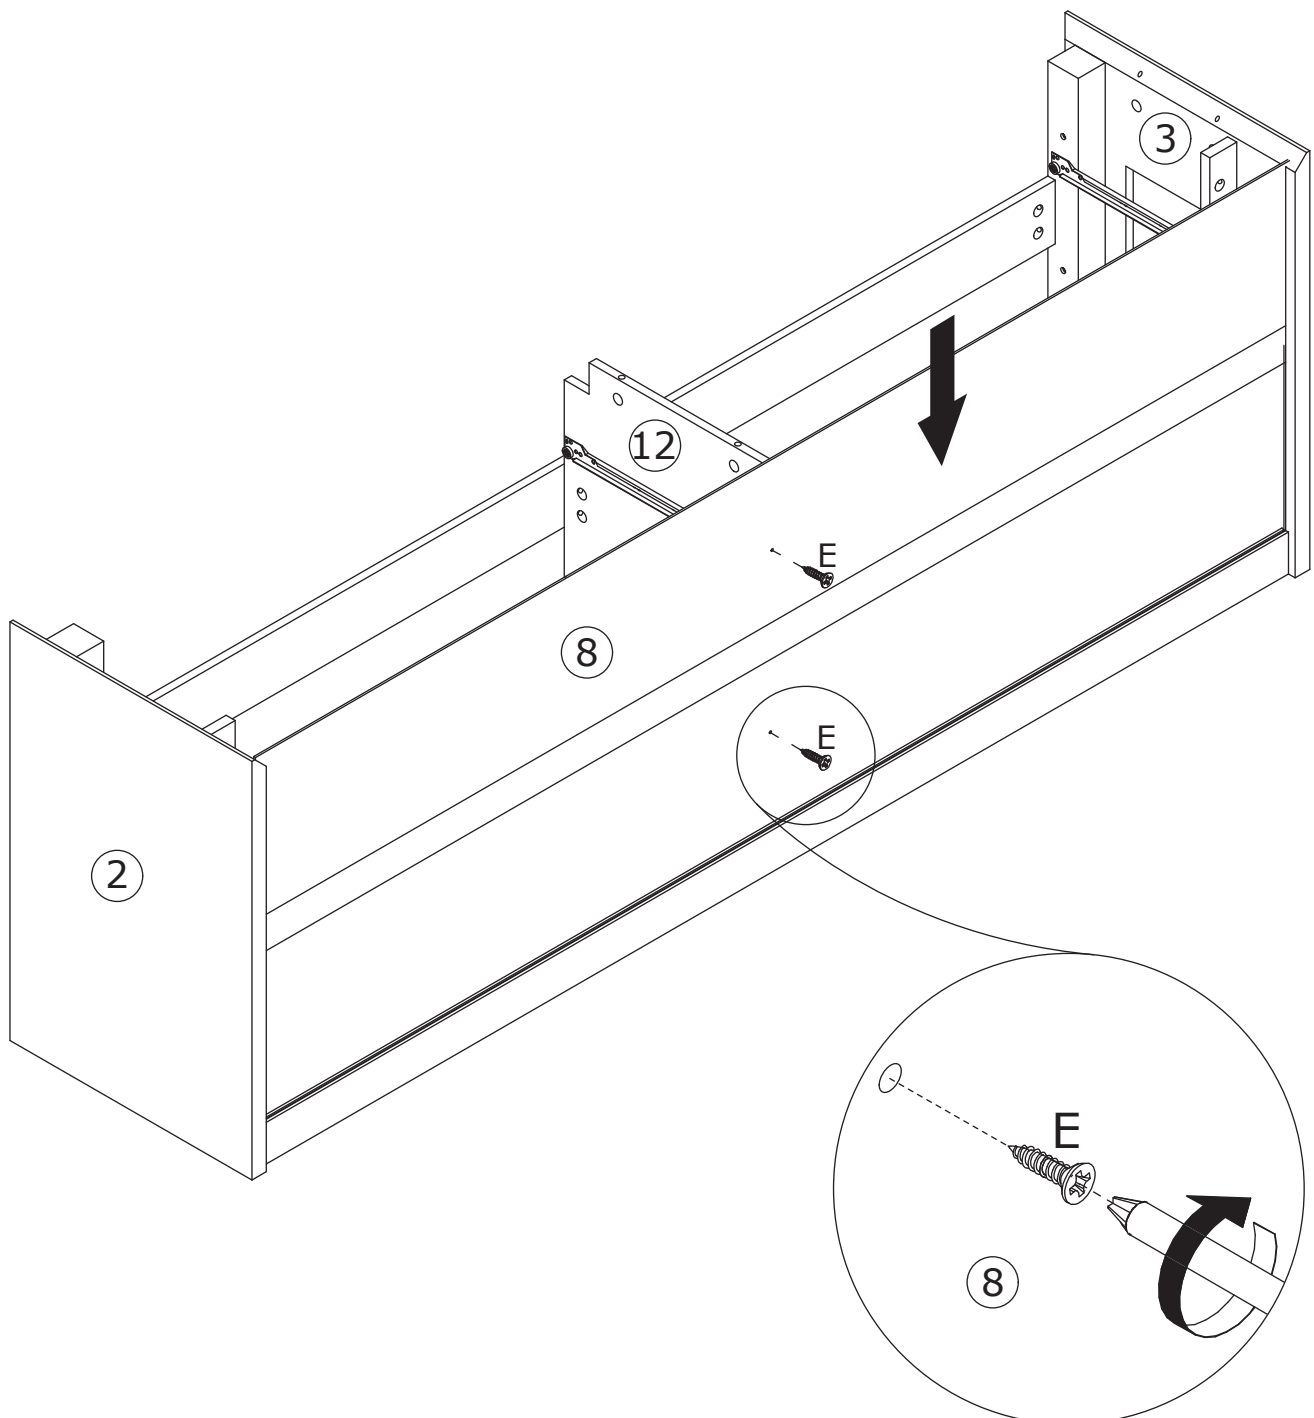


8

A x 2
CRA0635A

G x 4
CRD0445A

    H x 2
CRF0630A

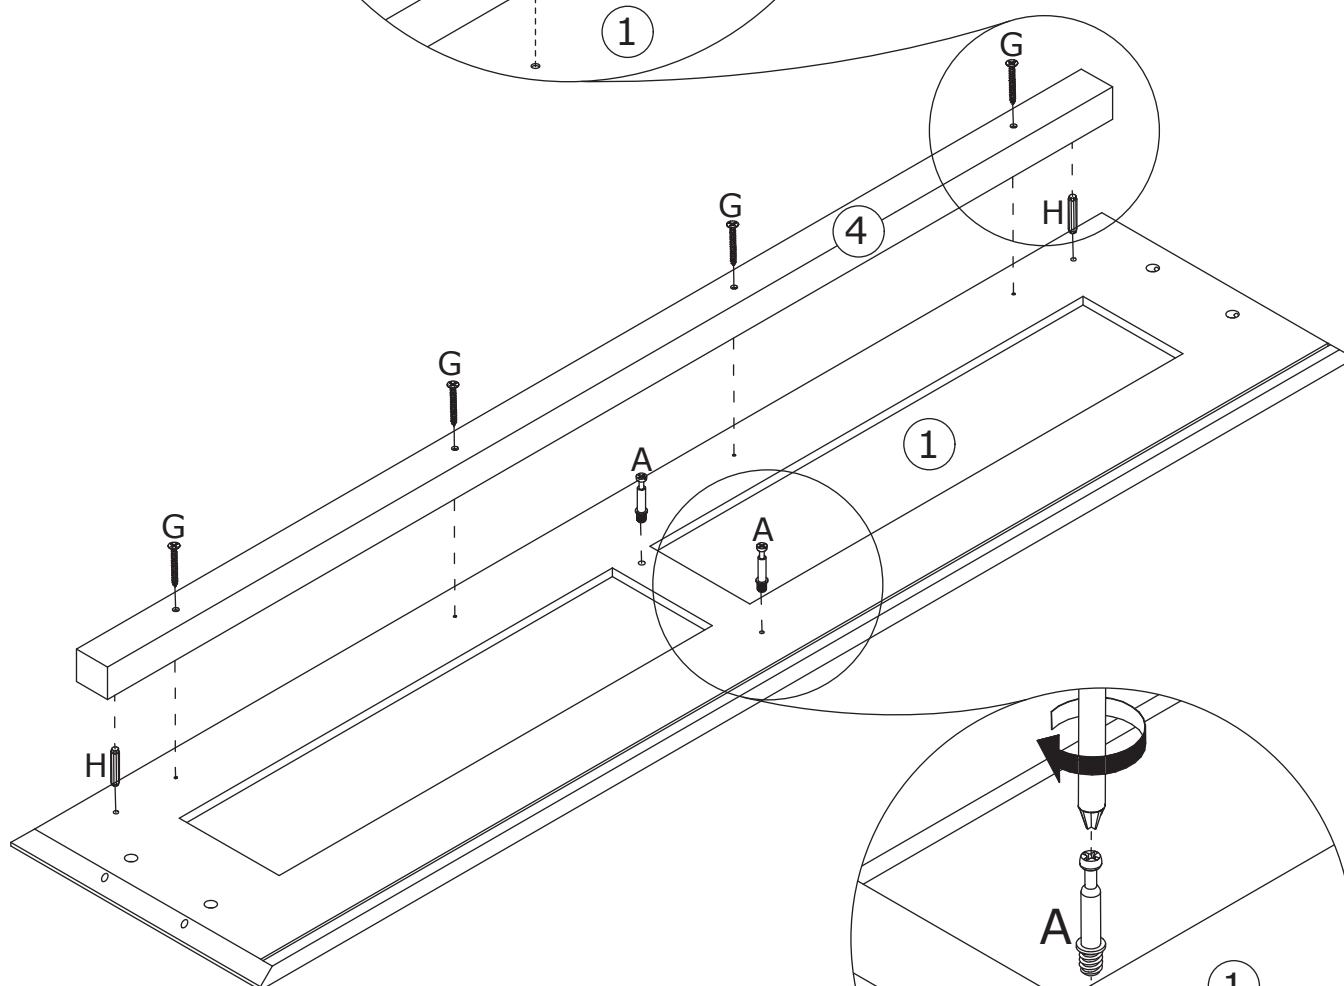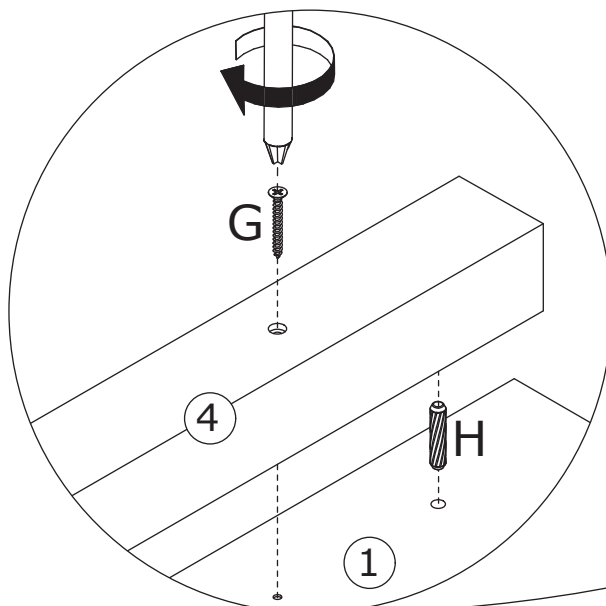
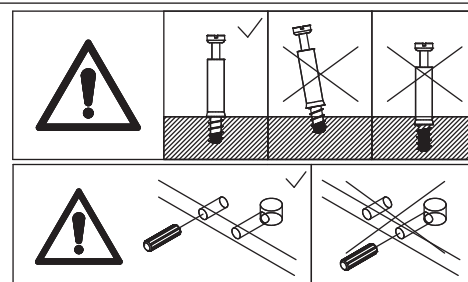



Attach plate 4 to plate 1 using wooden dowel(H) and fix with screw(G) as shown. Screw eccentric rod(A) into plate 1 as shown.


9

    B x 10
CRB1595A


 
 

 
L x 4
Ø6.5 x 84 mm

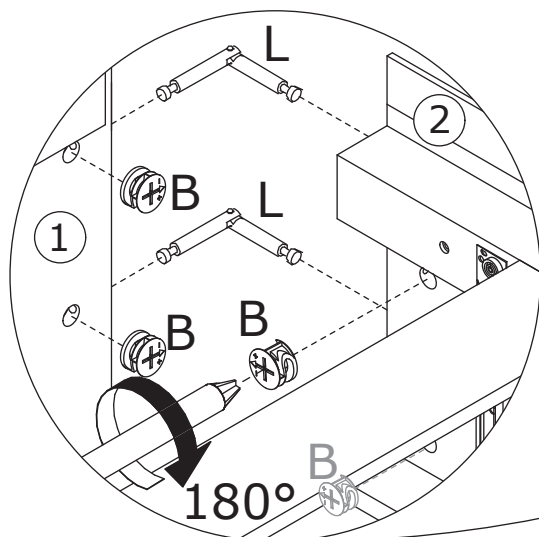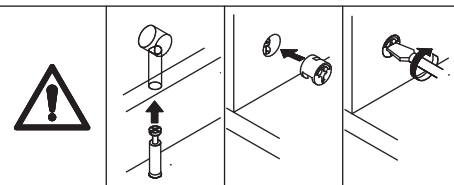


Screw eccentric rod(L) into plate 2 and 3 as shown. Attach plate 1 to plate 2 and 3, add cam lock(B) into plate 1,2,3 and turn clockwise to tighten as shown.

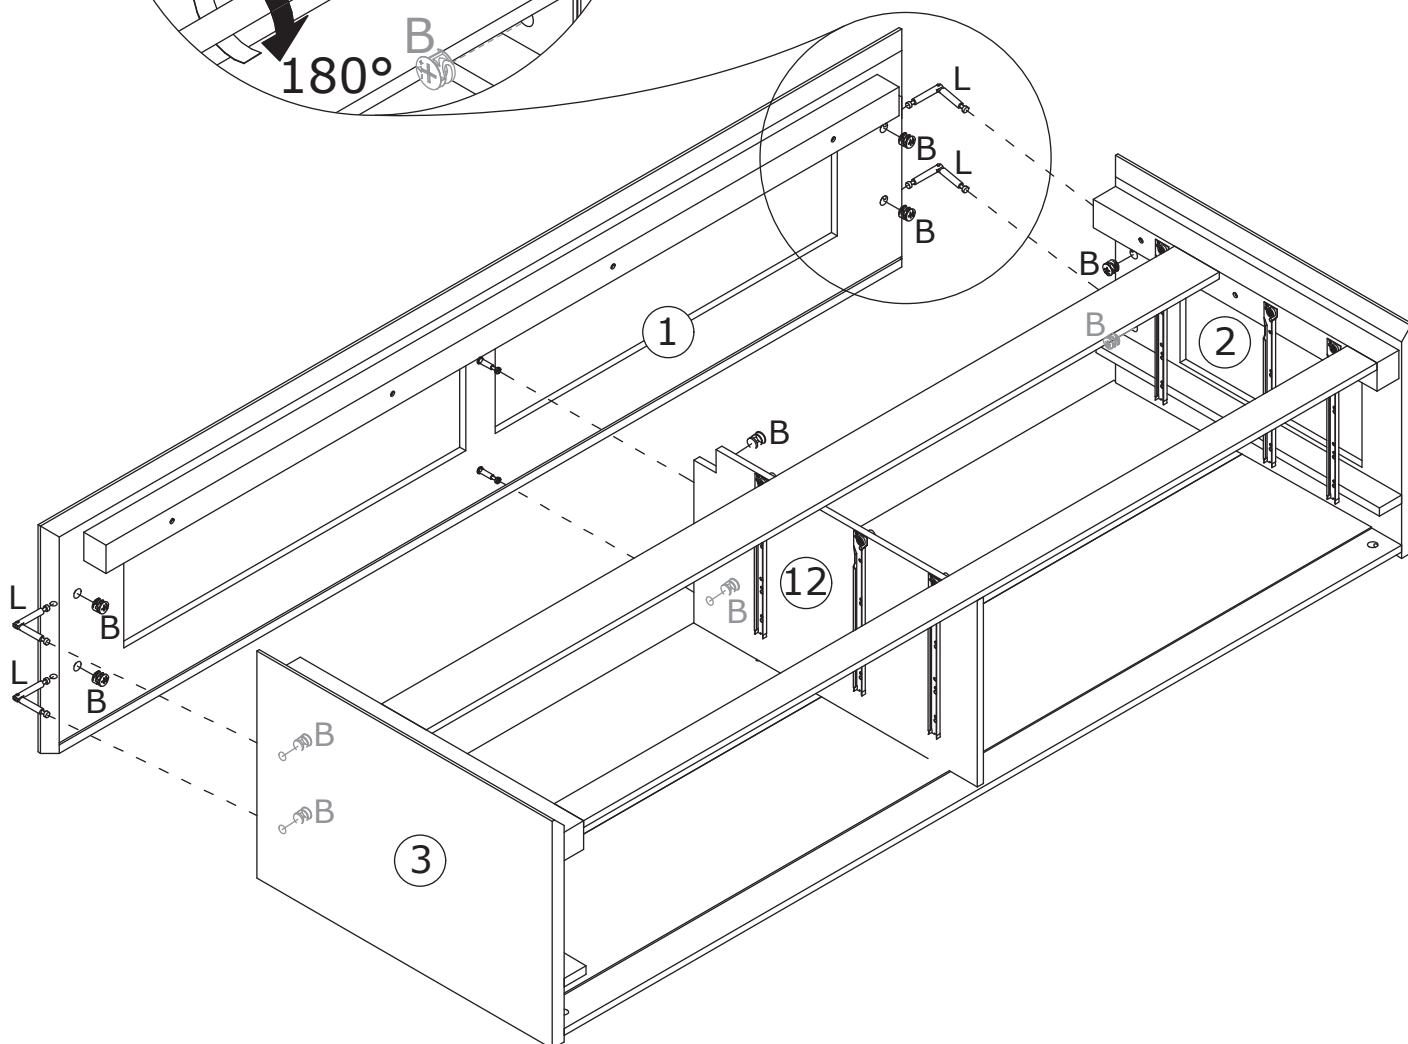


10

<p>B x 4</p>  <p>CRB1595A</p>	<p>H x 4</p>  <p>CRF0630A</p>	<p>J x 4</p>  <p>CRA0648A</p>	<p>K x 4</p>  <p>Ø 9 x 10 mm</p>	
--	--	--	--	---

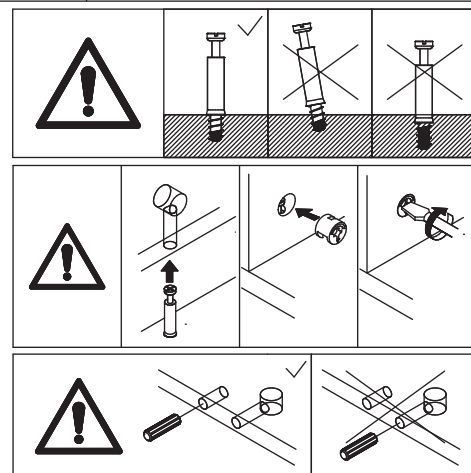 

 
Add nut(K) into plate 23, 14, 25 and 16 at first, and then screw eccentric rod(J) into.

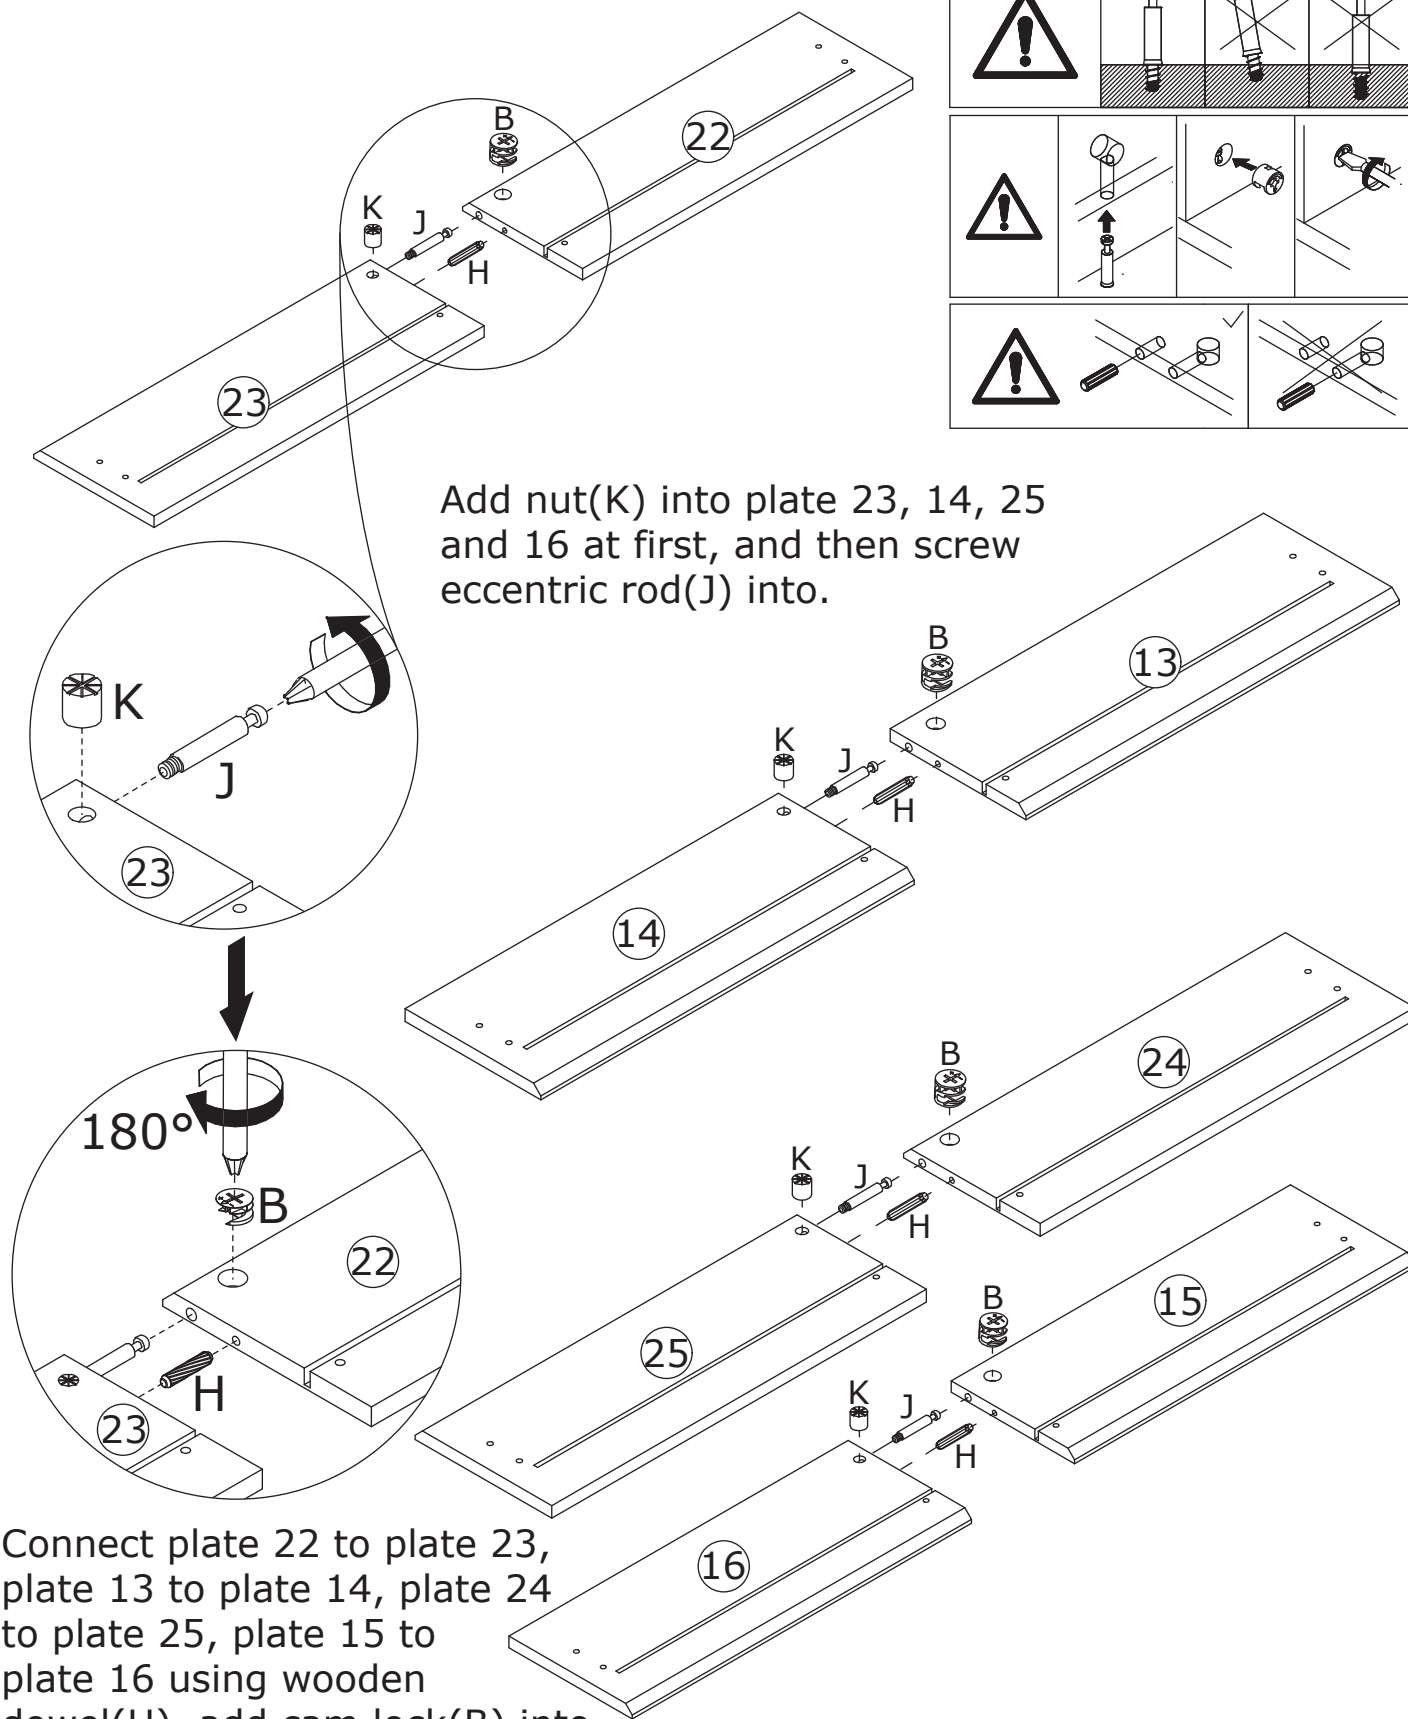





Connect plate 22 to plate 23, plate 13 to plate 14, plate 24 to plate 25, plate 15 to plate 16 using wooden dowel(H), add cam lock(B) into plate 13,22,15,24 and turn clockwise to tighten as shown.

11






 
A x 36



CRA0635A

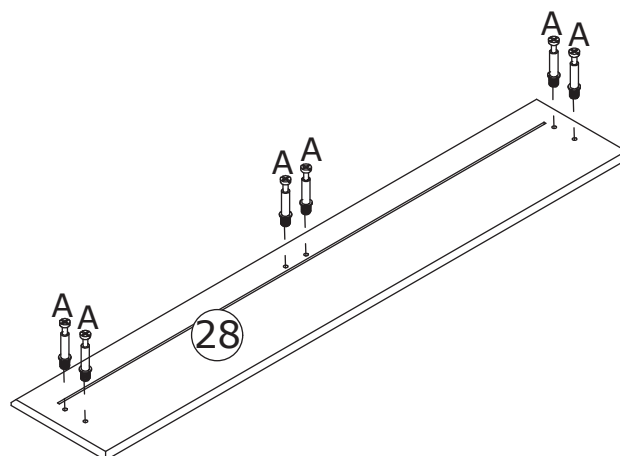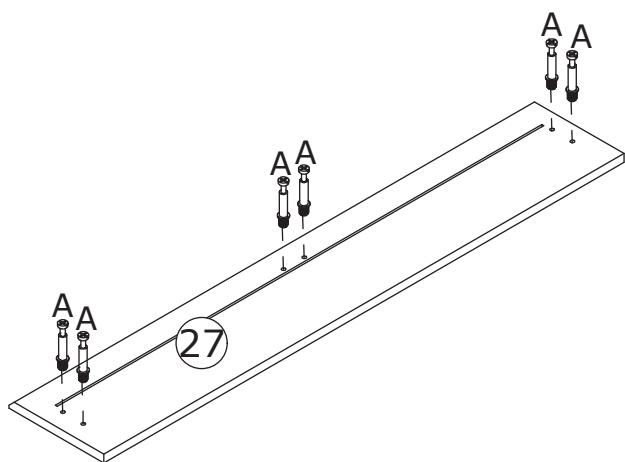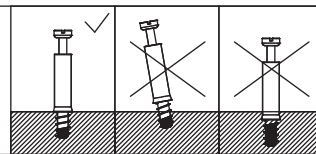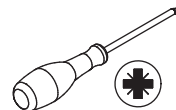   


      Screw eccentric rod(A) into plate 27, 28, 22, 23, 24, 25, 13, 14, 15 and 16 as shown.

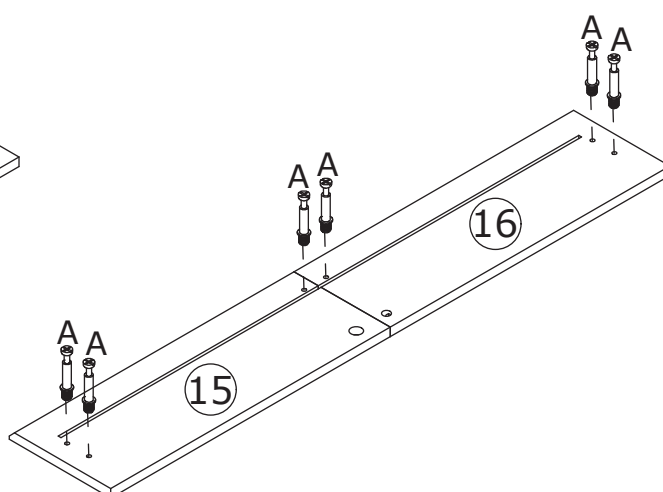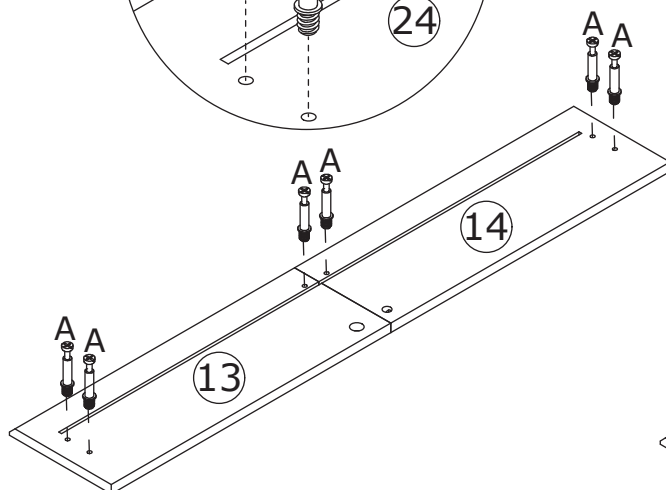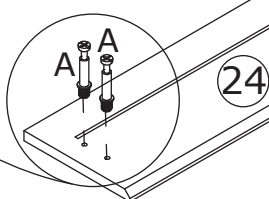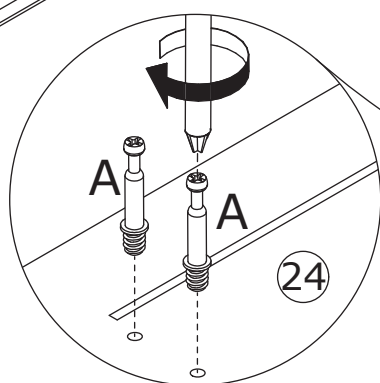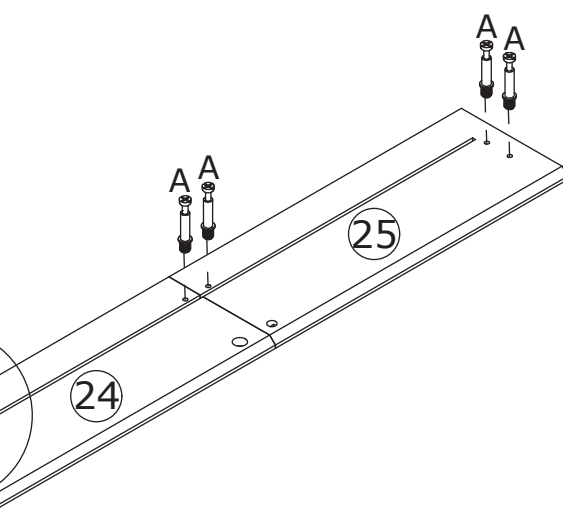
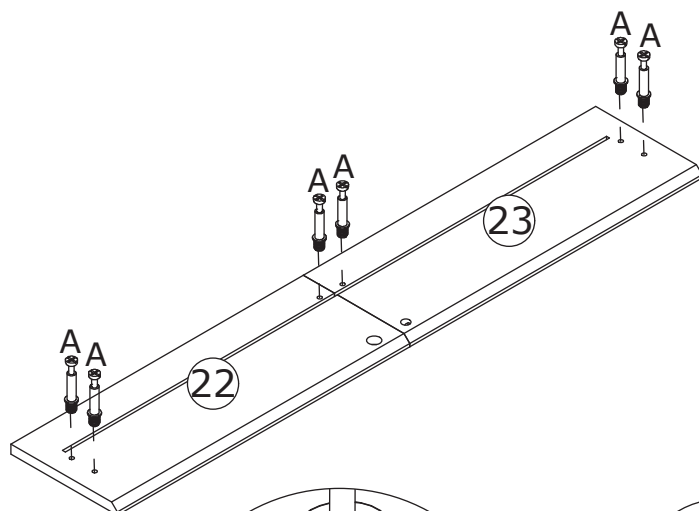


12

 
I x 36



CRC0540A




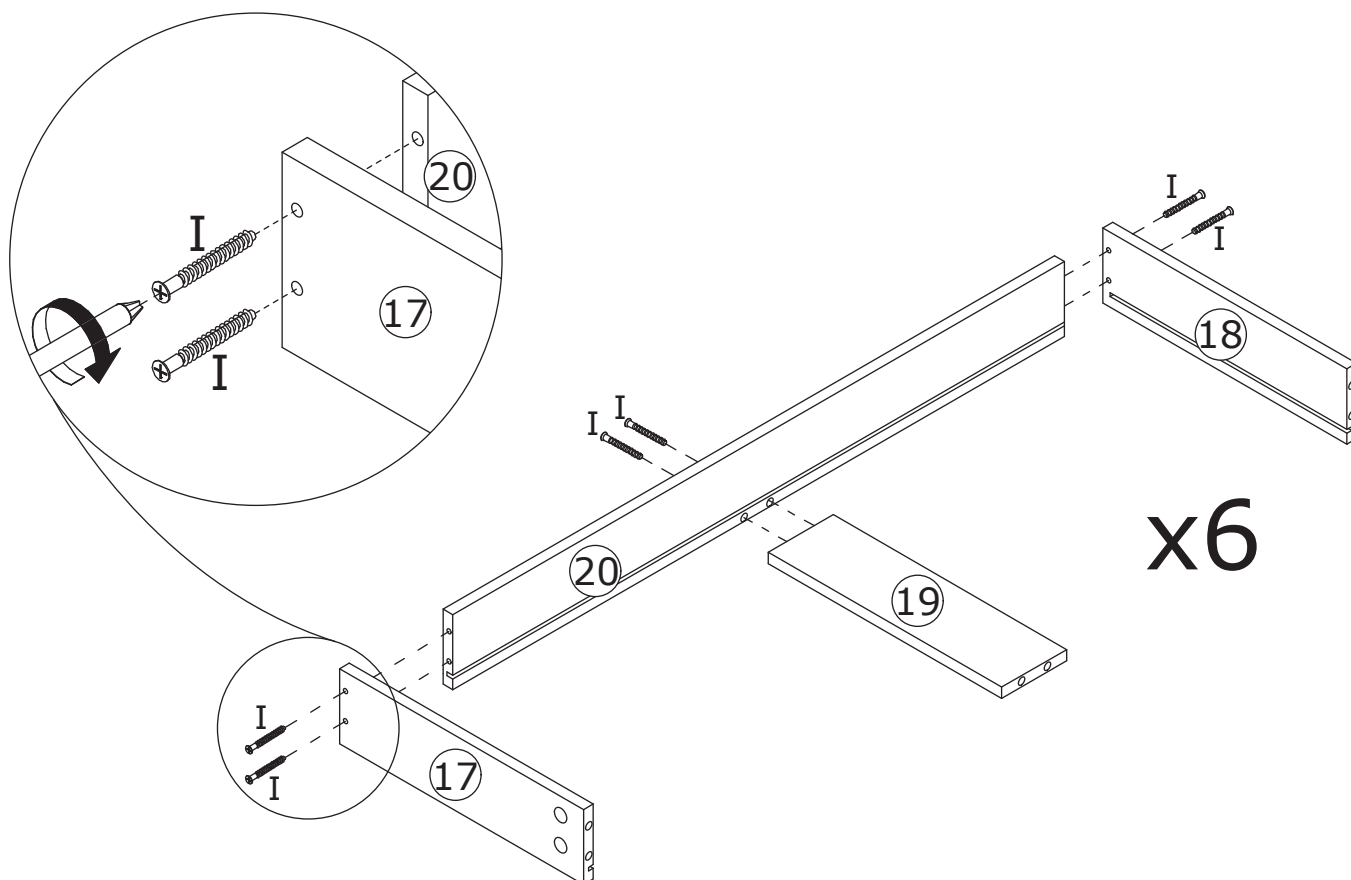 
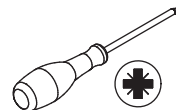


 Fix plate 18, 19 and 17 to plate 20 using screw(I) as shown.
Slide bottom plate 21 along available grooves as shown.

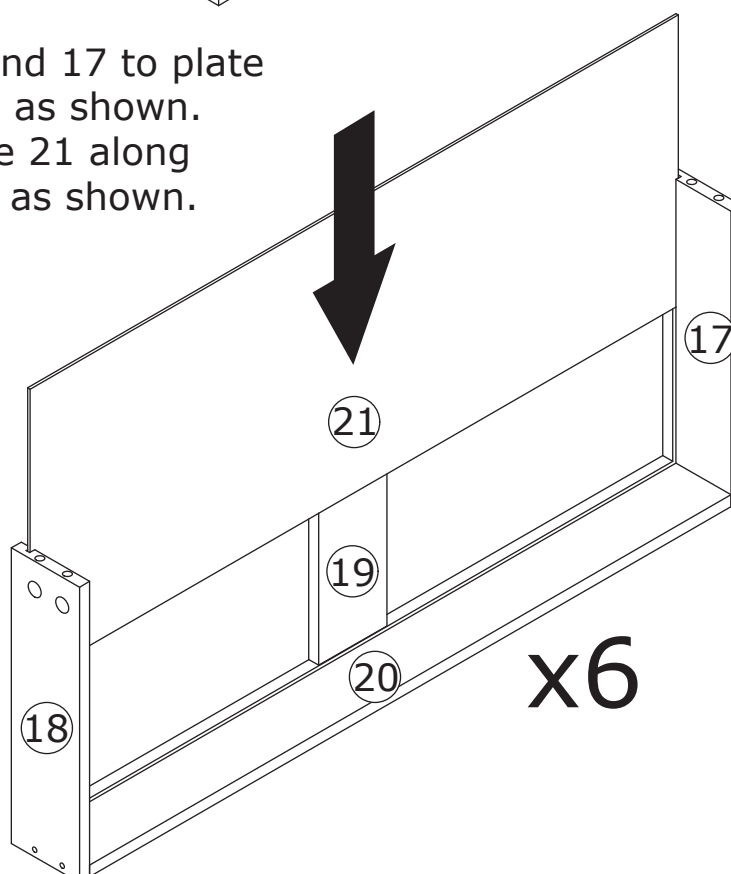


13

    C x 18
CRB1295A

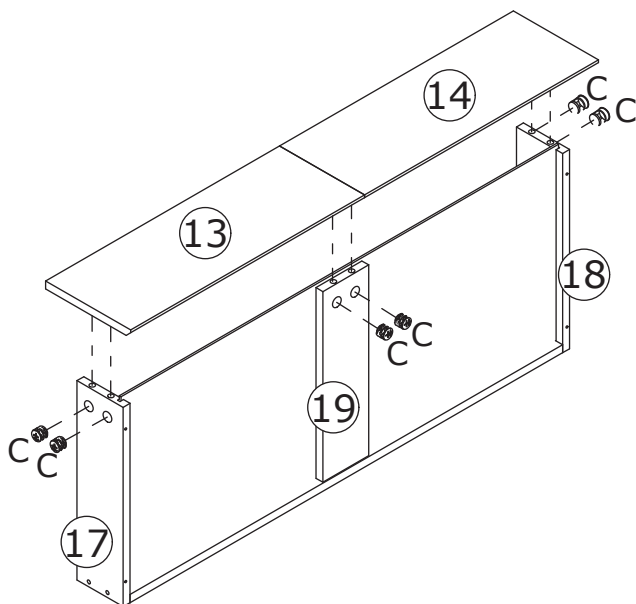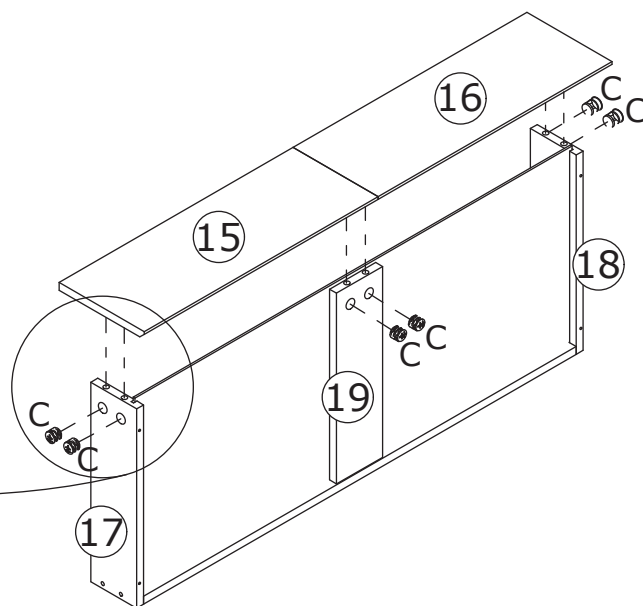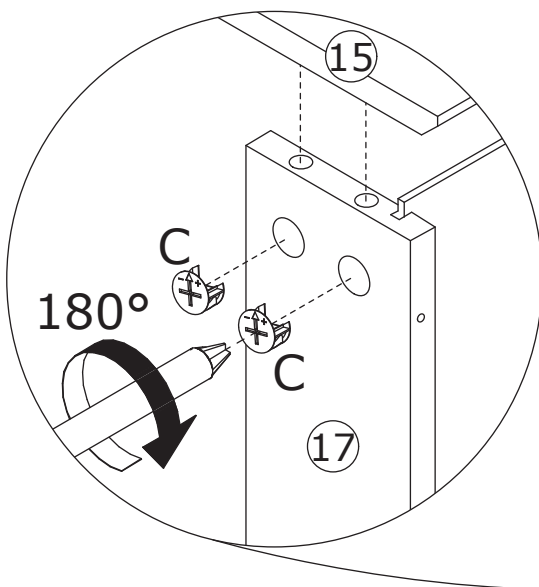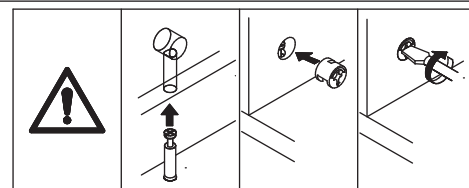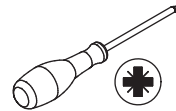

 Attach plate 13, 14, 15, 16, 22 and 23 to these components, add cam lock(C) into and turn clockwise to tighten as shown.






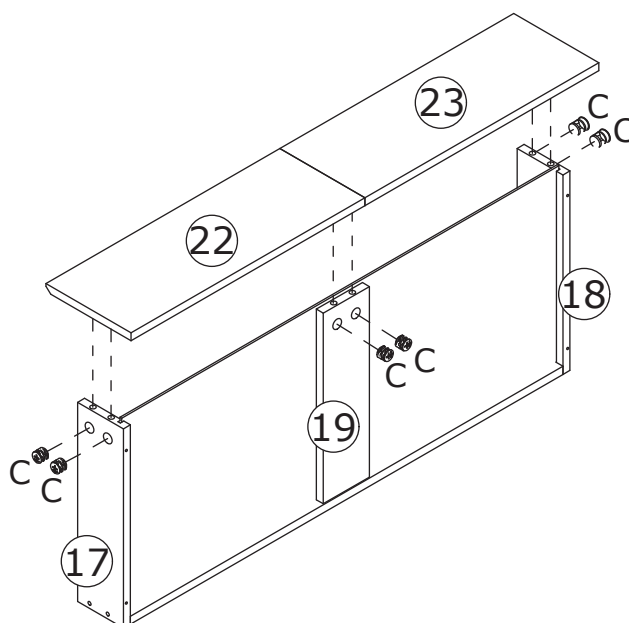


14

C x 18







     CRB1295A

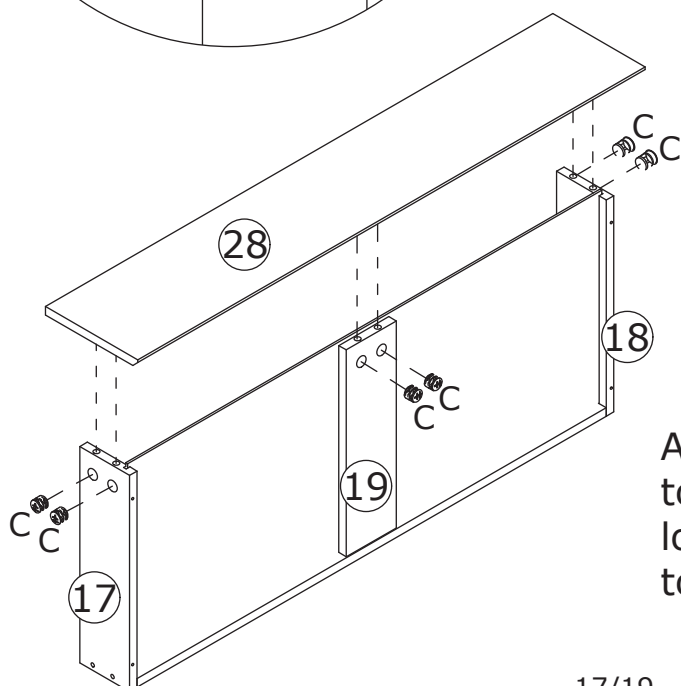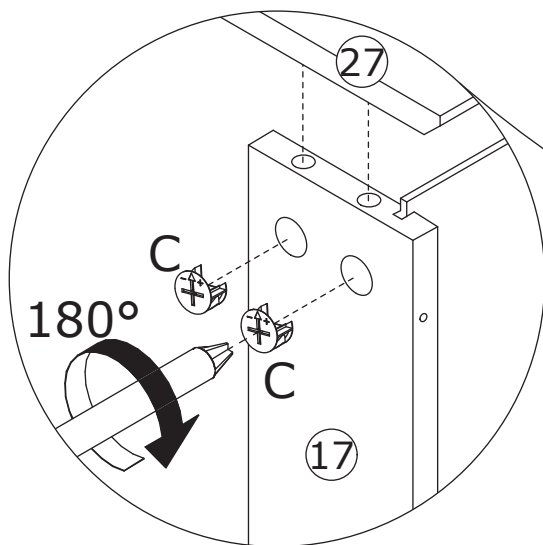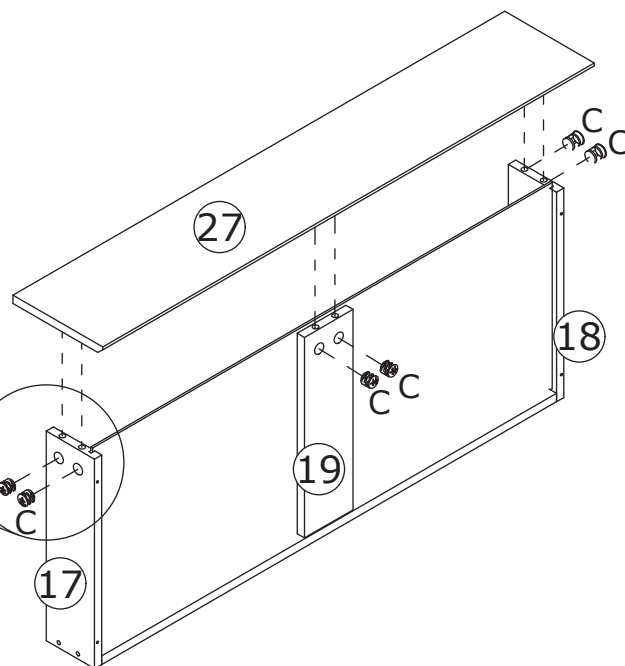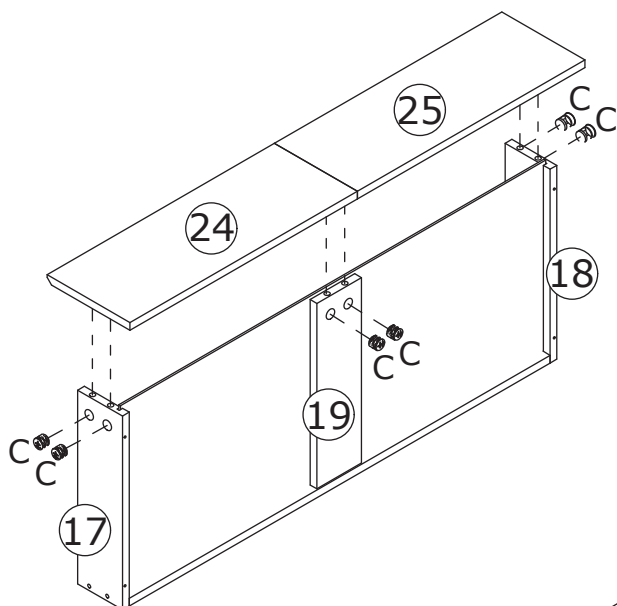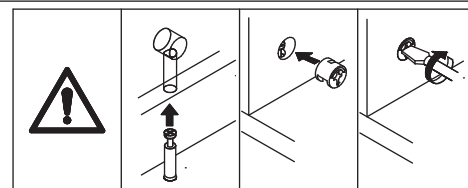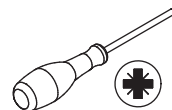


Attach plate 24, 25, 27 and 28 to these components, add cam lock(C) into and turn clockwise to tighten as shown.

    15

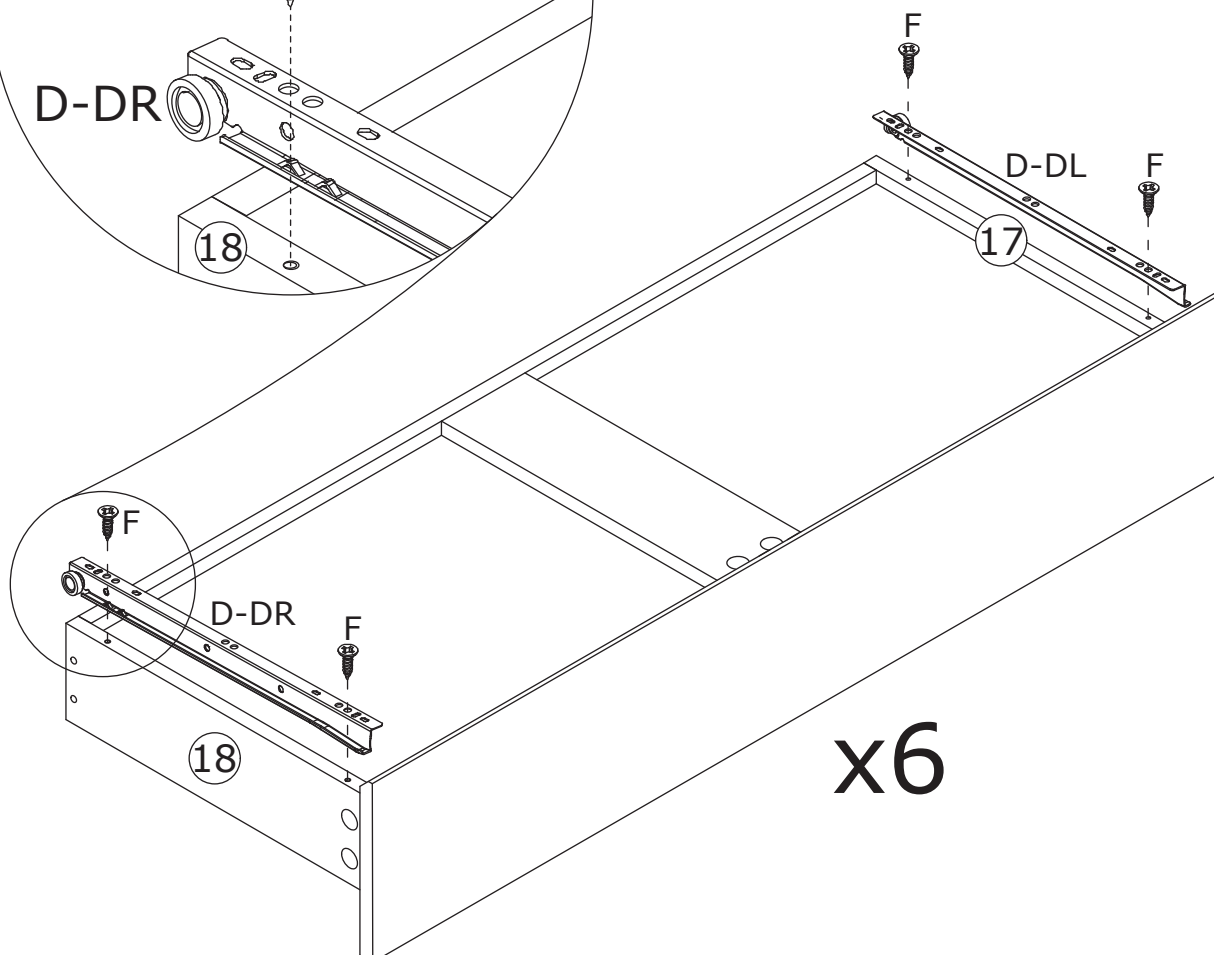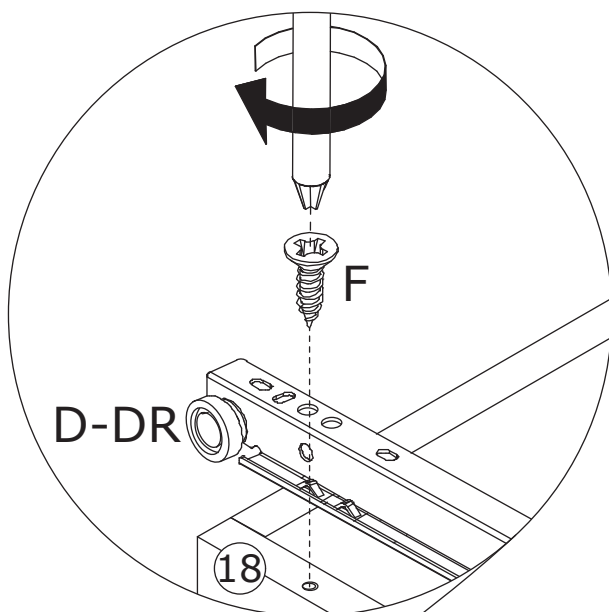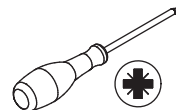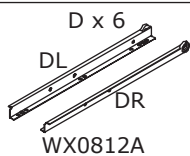

Fix rail(DL) and (DR) to plate 17 and 18 with screw(F) at first.

 16

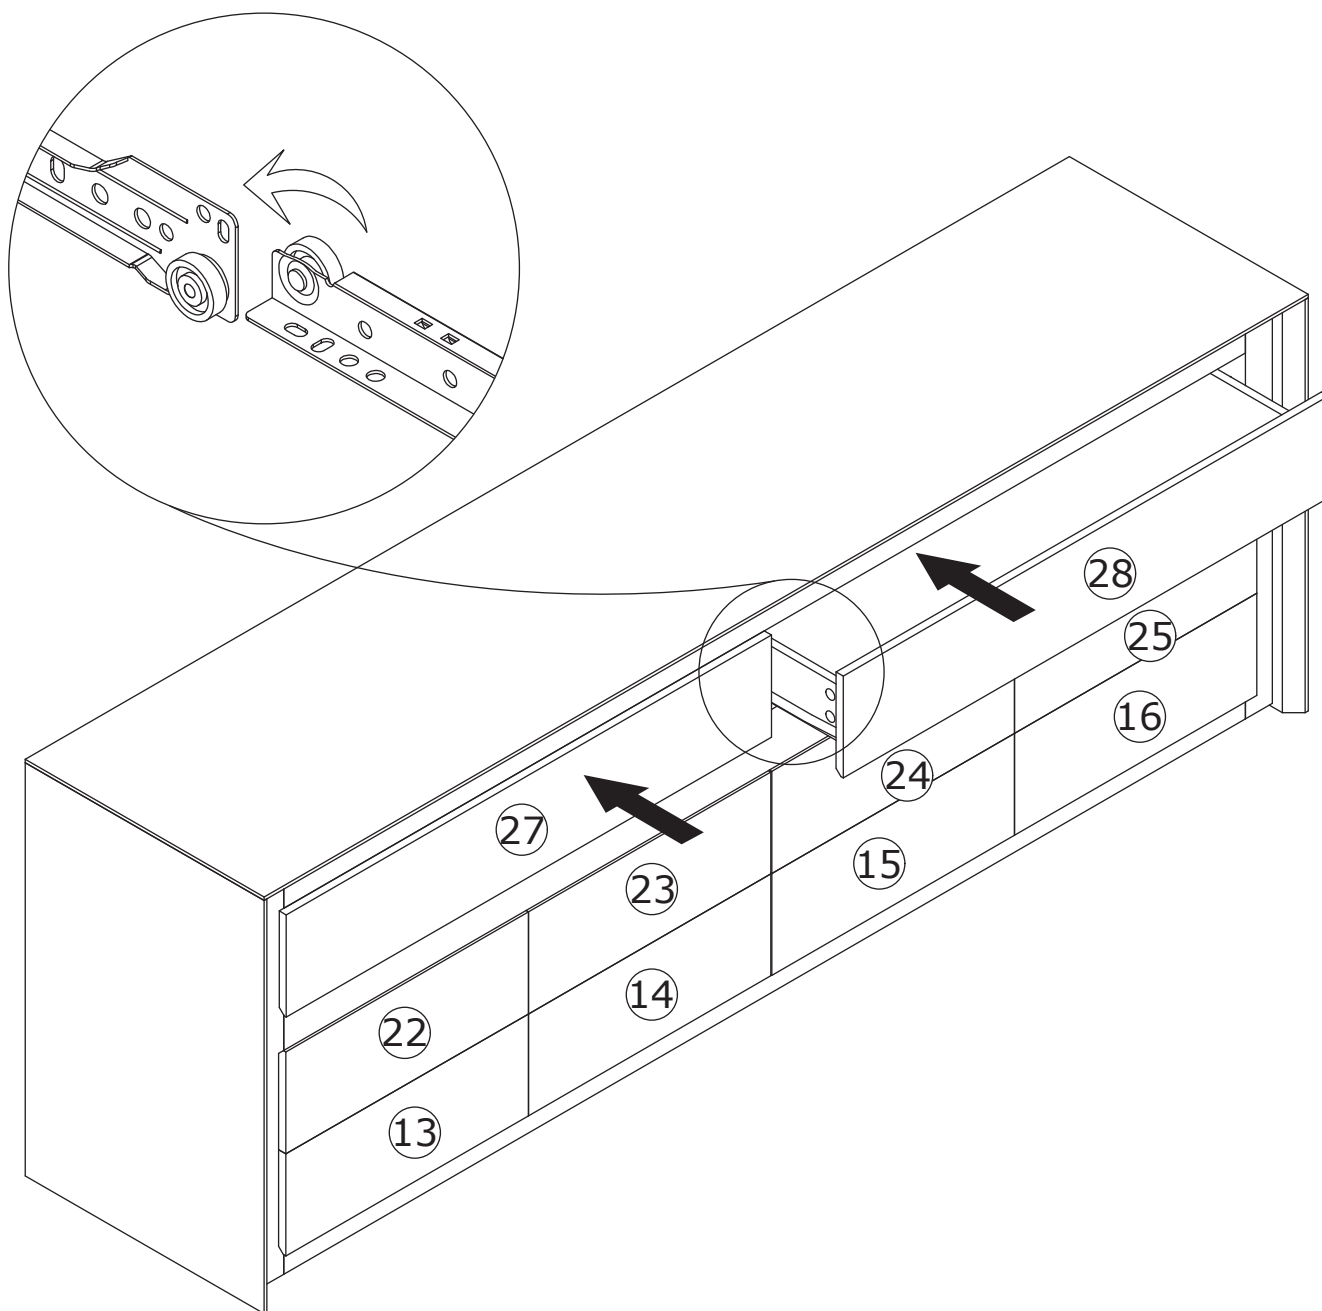

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



feedbackstation@163.com



(303)800-6387