

## **TOOLS REQUIRED**





(Not Included)



 
2 - People Recommended

## **ASSEMBLY RATING**



EASY — → DIFFICULT


The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.



Are you missing anything?	Check out our Quick Tips!
Double-check all parts, hardware and accessories listed are all acccounted for.	We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!
Should we send any replacements?  Are there any irregularities or flaws in the parts? We can send replacements!	Prep Time!
	Please review the assembly instructions and all diagrams prior to assembling.

# PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.

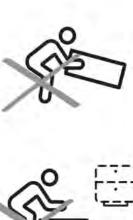



#### Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





#### Suitable Location

Assembling near the area of the intended location is highly recommended.





#### Sufficient Space

Make sure you have enough space to move around during the assembly.

 




#### **Avoid Scratches**

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.





#### Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

# **ASSEMBLY** AND CARE ADVICE



FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.



Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.




After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

# **KING BED**



- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

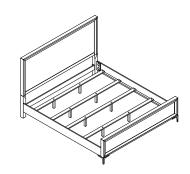


## **PARTS**











   







HEADBOARD 1pc



HEADBOARD LEGS L/R 2pcs



STRETCHER 1pc
















SIDE RAILS 2pcs

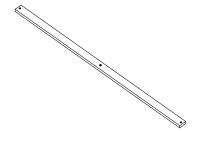


SLATS 5pcs



SUPPORT SLATS 10pcs

#### **HARDWARE**


#### **1.ASSEMBLY HEADBOARD**

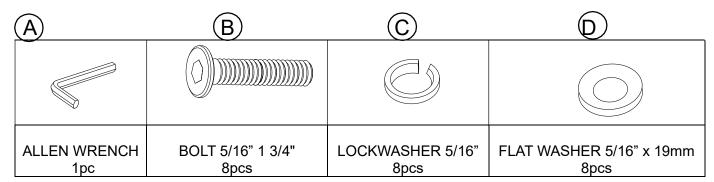


#### **2.ASSEMBLY FOOTBOARD**

E	F	G	H
ALLEN WRENCH 1pc	BOLT 5/16" 1 " 4pcs	LOCKWASHER 5/16" 4pcs	FLAT WASHER 5/16" x 19mm 4pcs


#### **3 .ASSEMBLY SIDE RAILS**

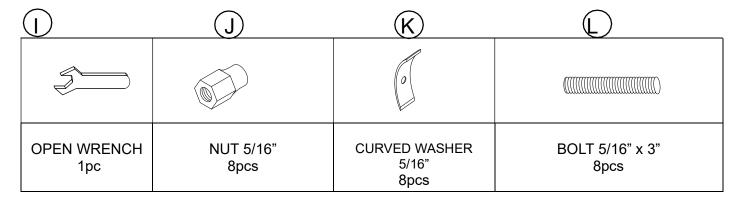



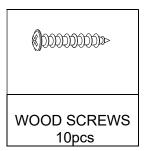

# **EXPLODED VIEW**

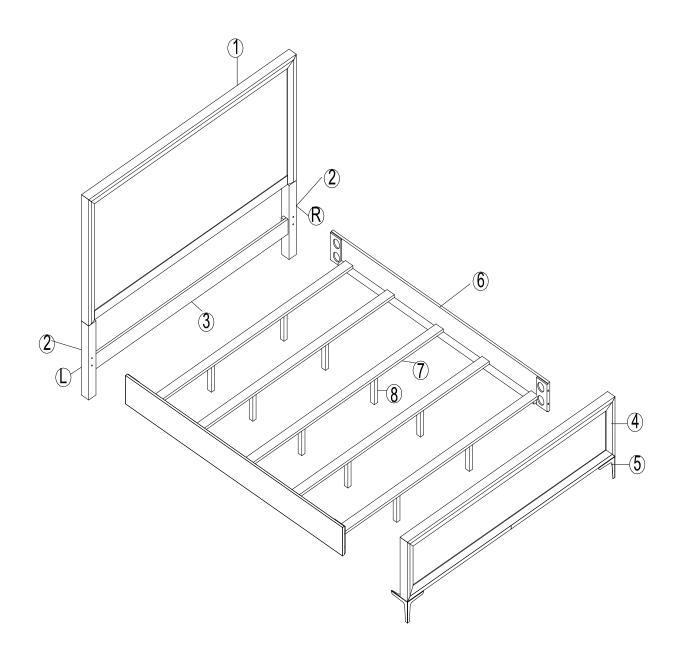


# packed in 3 cases

Carton	Disignation	Part		Hardware	
	Headboard	#1		# A x 1pc	
	Headboard legs L/R	#2		# C x 8pcs # D x 8pcs	
	Stretcher	#3			
	Footboard	# 4		#E x 1pc	
	Metal legs	# 5		# G x 4pcs # H x 4pcs	
	Side rails	# 6		# I x 1pc # J x 8pcs	
	Slats	#7		# K x 8pcs # L x 8pcs	
	Support Slats	#8		ე‱ # M x 10pcs	


1 . Part #1 x 1pc
Part 2# x 2pcs
Hardware # A x 1pc
Hardware # B x 6pcs
Hardware # C x 6pcs
Hardware # D x 6pcs

Attach the Headboard Legs (#2) to the Headboard (#1). Secure by using Bolt (#B) with Lock Washer (#C) and Flat washer (#D) Allen wrench(#A).

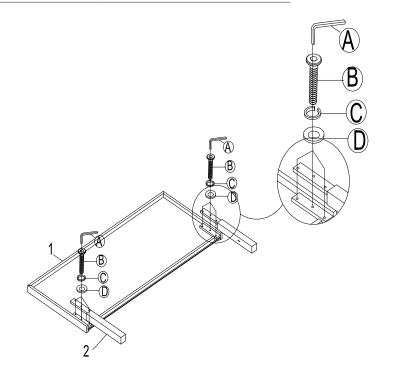

2 . Part #1 x 1pc
Part 2# x 2pcs
Part 3# x 1 pc
Hardware # A x 1pc
Hardware # B x 2pcs
Hardware # C x 2pcs
Hardware # D x 2pcs

Attach the Stretcher (#3) to the Legs (#2). Secure by using Bolt (#B) with Lock Washer (#C) and Flat washer (#D) Allen wrench(#A).

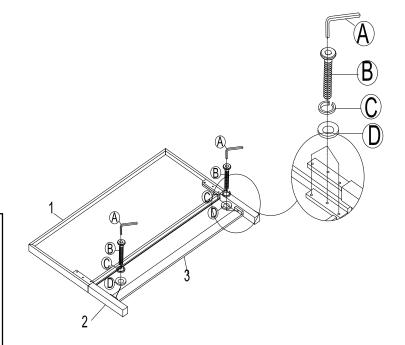



3. Part # 4 x 1pc
Part # 5 x 2pcs
Hardware # E x 1pc
Hardware # F x 4pcs
Hardware # G x 4pcs
Hardware # H x 4pcs

Attach the Metal Legs (#5) to the Footboard (#4). Secure by using Bolt (#F) with Lock Washer (#G) and Flat washer (#H). Allen wrench(#E).

4 .Headboard x 1pc
Footboard x 1pc
Part # 6 x 2pcs
Hardware # I x 1pc
Hardware # J x 8pcs
Hardware # K x 8pcs
Hardware # L x 8pcs


Screw the Bolt (L) into HB & FB. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using half moon washers (#K) and nuts (#J). Then use a hex wrench (#I) to tighten all the nuts.

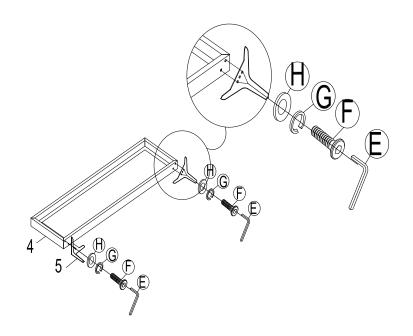


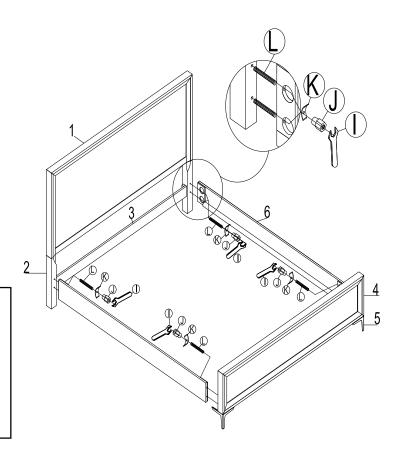

4 .Headboard x 1pc
Footboard x 1pc
Part # 6 x 2pcs
Part # 7 x 5pcs
Part # 8 x 10pcs
Hardware # M x 10pcs

Attach Support Slat (#8) to the Slat (#7) Rotating tightly and attach Slats(#7) to the Side rails (6) using wood screws (#M).

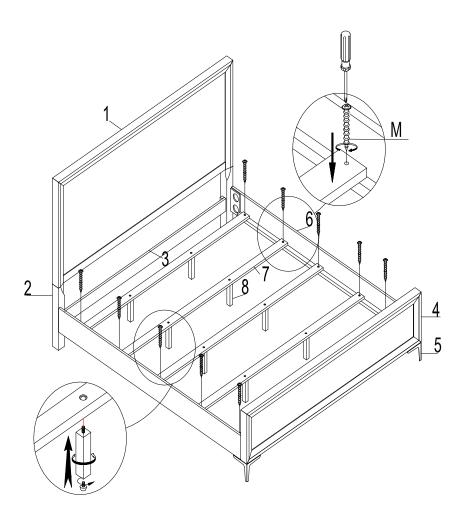

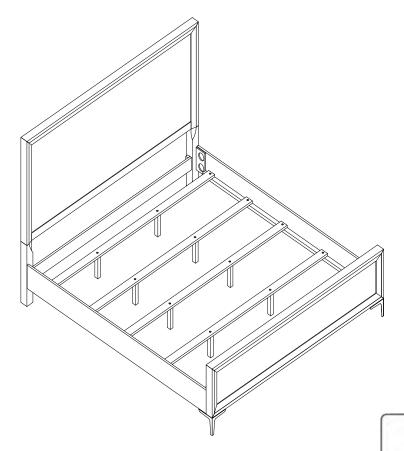

# ASSEMBLY COMPLETED




Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

#### ✓ Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

#### Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting of adjusting the placement.

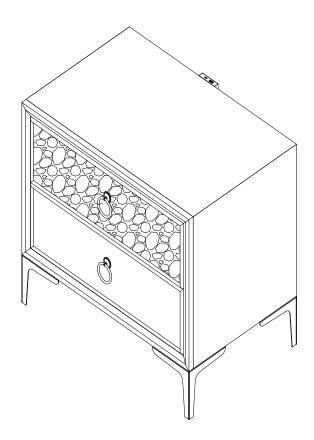

#### **TOOLS REQUIRED**



 
2 - People Recommended

## **ASSEMBLY RATING**



#### EASY — → DIFFICULT


The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.



Are you missing anything?	Check out our Quick Tips!
Double-check all parts, hardware and accessories listed are all acccounted for.	We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!
Should we send any replacements?  Are there any irregularities or flaws in the parts? We can send replacements!	Prep Time!
	Please review the assembly instructions and all diagrams prior to assembling.

# PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.

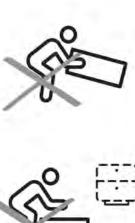



#### Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





#### Suitable Location

Assembling near the area of the intended location is highly recommended.





#### Sufficient Space

Make sure you have enough space to move around during the assembly.





#### **Avoid Scratches**

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.





#### Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

# **ASSEMBLY** AND CARE ADVICE



FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.



Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.




After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

# **NIGHTSTAND W/USB A&C**




- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

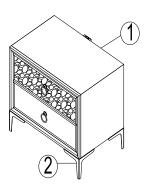

#### **PARTS**



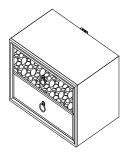

NIGHTSTAND 1 pc.





METAL LEGS

4pcs

#### **HARDWARE**



 














LOCK WASHER Ø5/16"

8pcs

 $\hat{O}$ 



ALLEN WRENCH



F LAT WASHER Ø5/16" x 19MM 8pcs

8pcs




ANTITIP KIT 1pc

1 . Part #1 x 1pc Part 2# x 4pcs Hardware # A x 1pc Hardware # B x 8pcs Hardware # C x 8pcs Hardware # D x 8pcs Take the leg box out of the drawer Align the Metal Legs (#2) to the bottom Nightstand (#1). Secure by using Bolt (#B) with Lock Washer(#C) and Flat washer (#D) Allen wrench(#A).

Use anti-tip kit to secure Nightstand to the wall.

## 2. Hardware #E x 1set

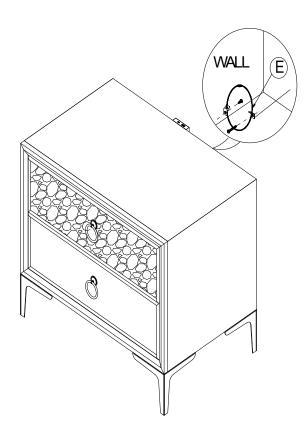

# ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

✓ Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting of adjusting the placement.

#### Wall Mounting and Fixing



#### **EXPANSION WALL ANCHOR**

Our provided expansion wall anchors are only suitable for masonry walls, such as drywall, plaster or concrete, and are best for holding lightweight items or for anti-tip prevention. If you are unsure of the correct wall anchor to use with the product, please request professional guidance. liability for product damage or failure due to using the incorrect anchors will fall on the installer.




#### CHECK BEFORE PROCEEDING

Prior to drilling or hammering, please check for wires or pipes. We recommend using a stud finder to locate a stud, which will offer more appropriate resistance and hold more weight.

#### QUICK TIPS


 If unsure of the proper size, always choose a larger screw and wall anchor.




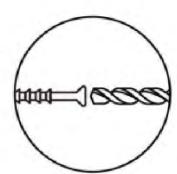

Match the drill bit to the wall anchor and hole size.

 Only drill horizontally.
 Do not force the drill or enlarge the hole for the wall anchor.

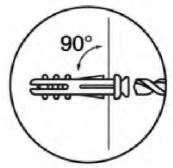

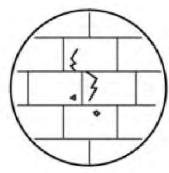

4. Take extra care when drilling into high walls or ceramic tiles. Wall anchors should be a tight fit for the hole. Never use wall anchors in ceilings.





We recommend a yearly check to see if the wall anchor or screw has loosened. If so, please remove the existing wall anchor and screw, and use a new anchor.