



WARRANTY CARD

(TO BE COMPLETED BY DEALER)

PRODUCT	MODEL	SERIAL NO.
CEILING FAN		
Customer's Name: Address: Email Address:		
		Tel.No.:
Dealer's Name & Address (Stamp)	Date of Purchase:	
	Day	Month
		Year

PRODUCT	MODEL	SERIAL NO.
CEILING FAN		
Customer's Name: Address: Email Address:		
		Tel.No.:
Dealer's Name & Address (Stamp)	Date of Purchase:	
	Day	Month
		Year
Remark:		

FAN LAMP INSTALLATION GUIDE





size	580mm*220mm
source	led three-color 36W
motor	DC110V
controller	Remote control/ dual control
material	Iron+pc

Tools required to installation:



electrical tape



phillips screwdriver



herringbone ladder




tape pliers



Installation steps of flying saucer hanger:

1. Install 2 diagonal screws.
2. Hang the installed host and rotate, and the remaining screws are fixed and locked.

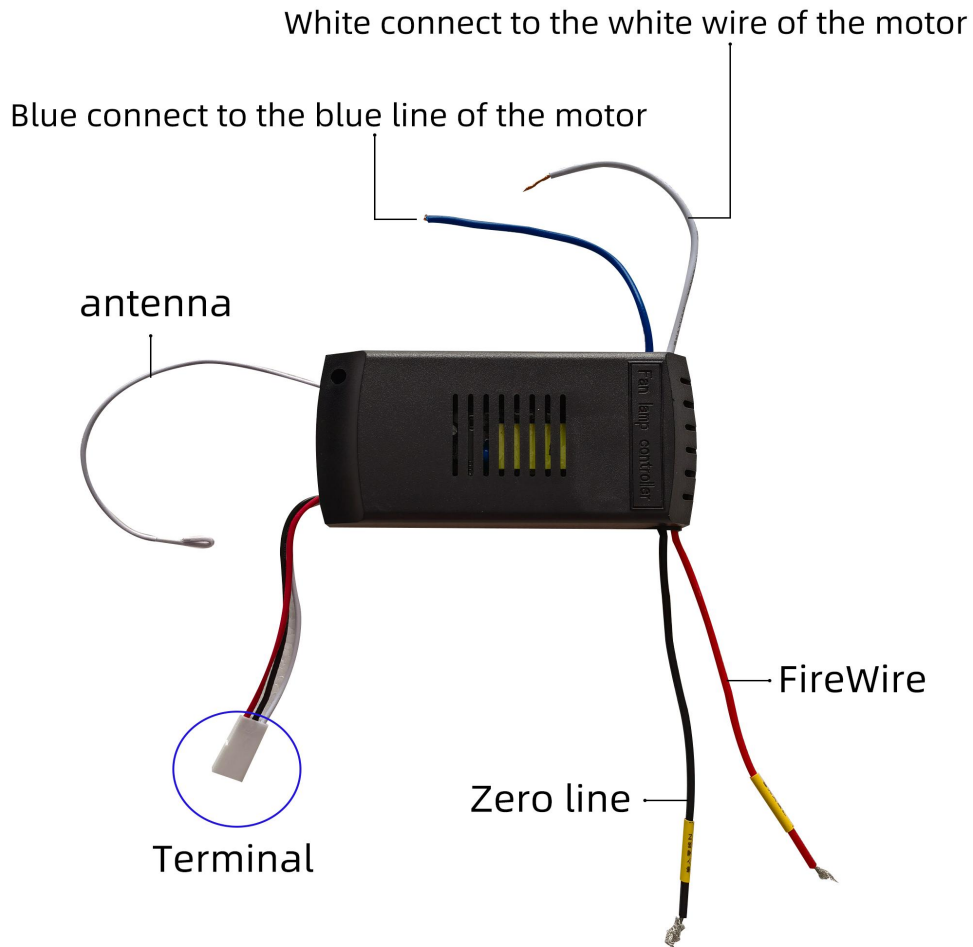

Installation step




Installation step 1:

The lamp panel corresponds to the three holes, and the screws are locked.




Installation step 2:

Light source and white driver, The interface is connected. White drive two wires connected Blue and white lines (Regardless of positive and negative)

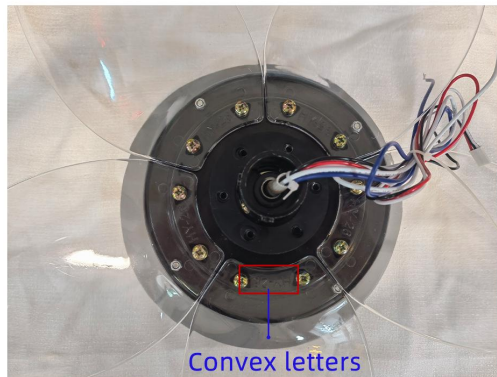


Installation step 3:

Convex letters in leaves,
Upward corresponding hole
position,
Mounting screws.

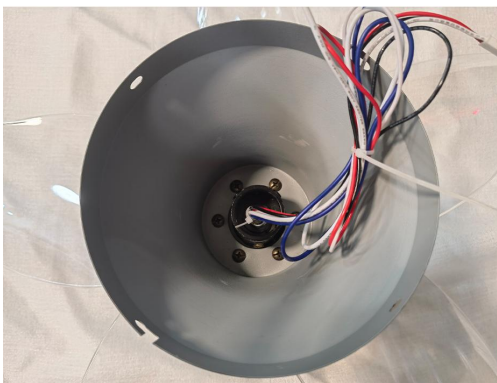

Installation step 4:

Horn bell and motor,
6 holes of black hanging head,
Corresponding mounting screws.

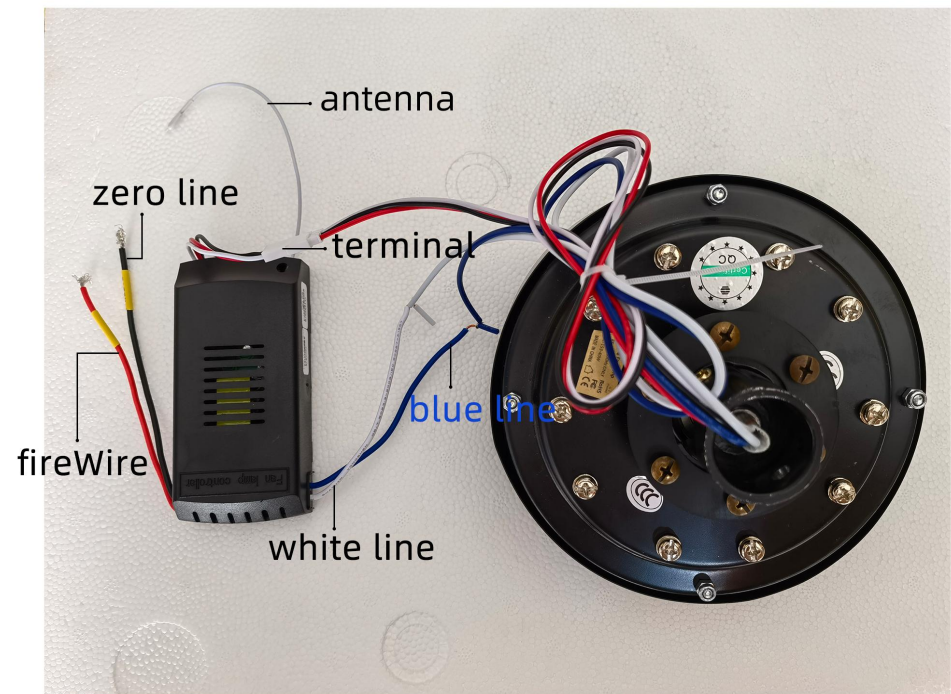

Remote control wiring steps:

The thinnest white line is the antenna;
Terminal to terminal socket;
The red wire is the input live wire, and the black wire is the input neutral wire;
Blue connect to the blue line of the motor;
Connect the white wire to the white wire of the motor.