


Support 7 days a week. Visit www.level.co/support for additional help. 2-year limited warranty. Visit www.level.co/warranty for more information.

□ level Bolt

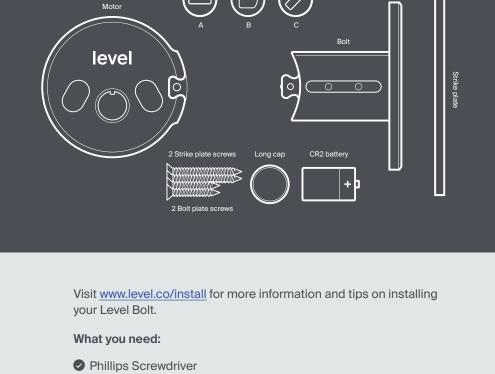

Make sure your current deadbolt throws

Compatible iOS® or Android Device™

- ⁰¹ Test your deadbolt.

smoothly without pushing or pulling the door.


Unscrew the lock housing, deadbolt, and strike plate. Store the deadbolt and strike plate in the

Disassemble your lock

and keep the pieces.

Level Bolt box.

02

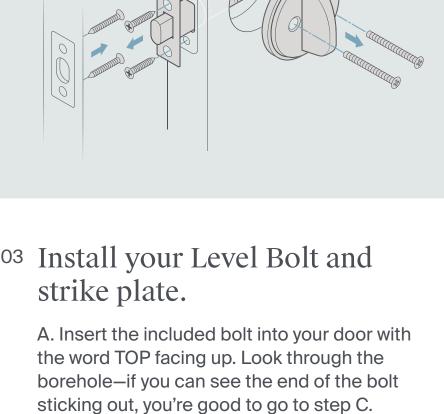

B. If you can't, simply take it out of your door and use a screwdriver to extend the bolt. Ensure the bolt snaps into place and put it

back in your door, with the word TOP facing up.

C. Fasten the bolt with the provided strike

D. Slide on the motor and make absolutely sure to tighten the connecting screw. E. Using your previous deadbolt for reference, select the correct tailpiece adapter and insert


it into the motor's center hole.

plate screws.

with the provided strike plate screws.

F. Fasten the strike plate to your door jamb



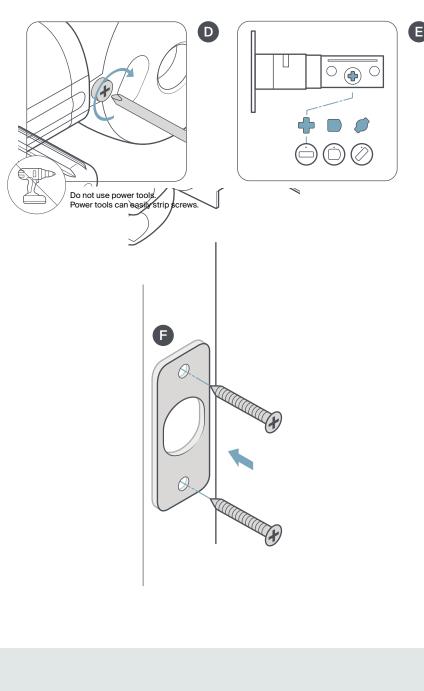

Reassemble your lock using the original pieces. 04 Completely rotate the tailpiece in the direction to unlock the door (away from the door edge). Thread the tailpiece through the adapter and screw your lock housing back together loosely using your original security bolts. Align the two sides of your lock and manually test your deadbolt. If it doesn't throw smoothly,

recenter the housing by lifting upwards, then

tighten the security bolts.

⁰⁵ Activate your Level Bolt. Unscrew the cap on the end of the bolt and insert the battery with the flat (negative) end towards the cap. If you adjusted the bolt to the long poisition, use the included long cap instead of the standard cap. Scree the cap on

tightly and you'll hear a welcome chirp.

your Level Bolt.

Download the Level Home app for iOS® or Android™, create an account, and connect to

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful

and responsibility in relation to the installation and performance of the lock and any third party components and services used in relation to the lock.

Please follow these suggestions and safeguards to decrease the chances of damage to your Level Lock and to lessen the risk of harm or injury: Use the lock for its intended purposes only. - Keep body parts away from the lock during operation to avoid injury.

- Do not use the lock or battery if they aren't working properly or have been - Dispose of the lock and battery in accordance with local requirements. - Do not charge CR2 lithium batteries.

Battery life varies with usage. Caution: This product comes with small parts and parts with sharp edges that may cause injury or create a choking hazard. To avoid injury or damage, keep away from children.

interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. For more information on FCC compliance, please go to www.level.co/FCC Although the Level Lock Bolt Edition is built to ANSI specifications, it is not an ANSI or BHMA certified door lock. You are responsible for proper installation of the Level Lock and its use with a compatible American standard deadbolt that is operating in good condition. You assume all risk

- Do not crush, perforate, drop, throw, or try to deform the lock or battery. - Do not short external contacts or circuits, expose your lock or battery to water, liquids, or open flames or lit substances, or dispose of them in fire, solvents, or water.

Revision 1.0

□ level