

INSTALLATION

Product Manual

Version: 210269-01-24A-PF



 
IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.




AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

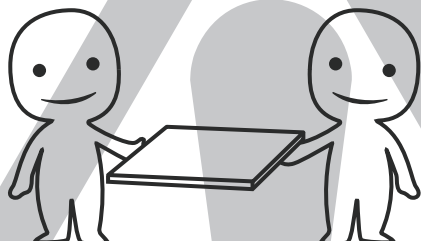

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

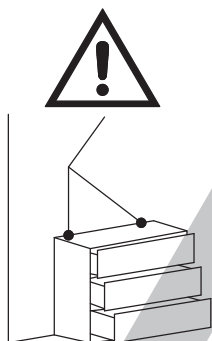

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !

 
 


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.




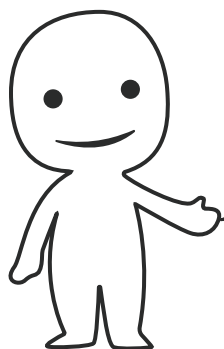


 
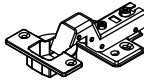
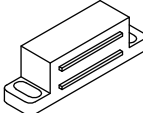
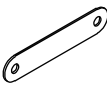

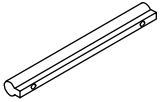
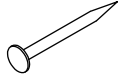
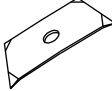

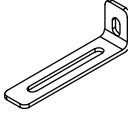
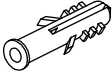

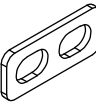

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

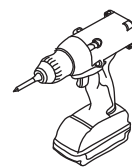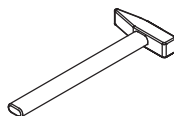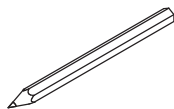


Please prepare the following tools

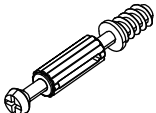

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

<p>A x 20</p>  <p>M5 x 42 mm</p>	<p>B x 20</p>  <p>Ø 15 x 10 mm</p>	<p>C x 24</p>  <p>M6 x 12 mm</p>	<p>D x 10</p>  <p>M6 x 20 mm</p>	<p>E x 4</p>  <p>M6 x 25 mm</p>
<p>F x 6</p>  <p>M6 x 35 mm</p>	<p>G x 62</p>  <p>M3.5 x 14 mm</p>	<p>H x 4</p>  <p>DW</p>	<p>I x 4</p> 	<p>J x 2</p>  <p>Ø 4 x 63 mm</p>
<p>K x 8</p>  <p>M4 x 18 mm</p>	<p>L x 4</p>  <p>220-96 mm</p>	<p>M x 18</p>  <p>Ø 1.5 x 15 mm</p>	<p>N x 12</p>  <p>15 x 10 mm</p>	<p>O x 4</p> 
<p>P x 2</p> 	<p>Q x 2</p>  <p>Ø 8 x 60 mm</p>	<p>R x 2</p>  <p>Ø 5 x 55 mm</p>	<p>T x 3</p> 	<p>x 1</p>  <p>#4</p>

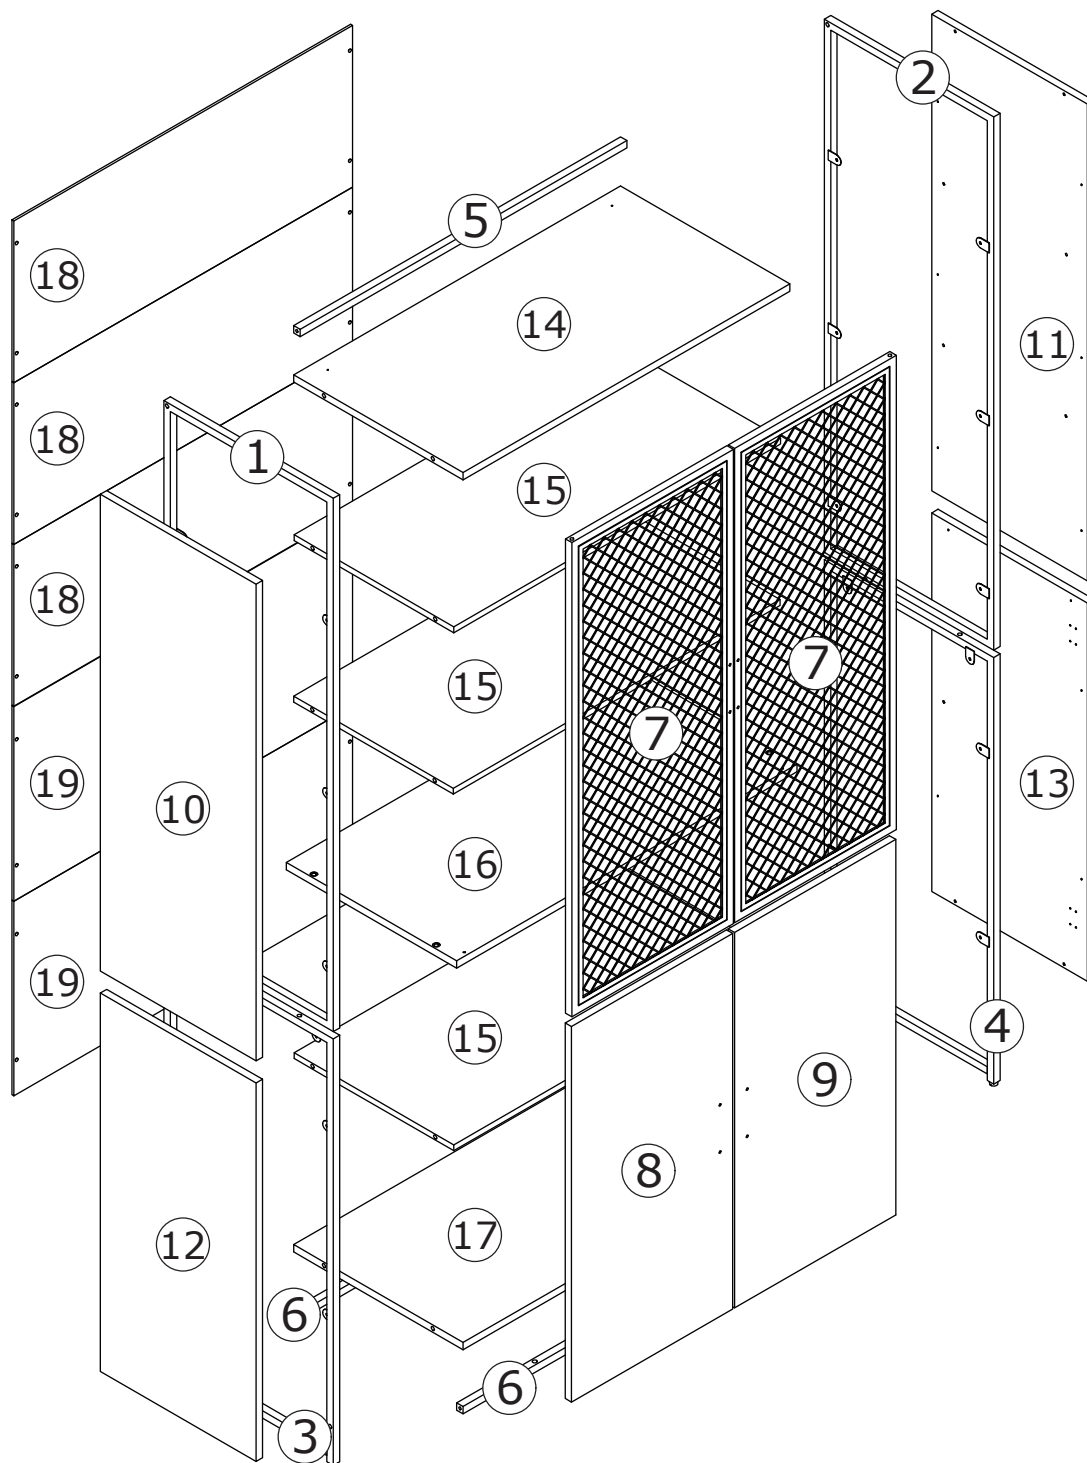 


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*

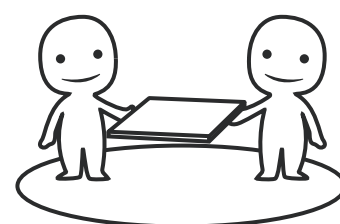


ASSEMBLED BY 2 ADULTS

1


G x 12





 
M3.5 x 14 mm



 
Fix iron frame plate 2 and 1 to plate 11 and 10 respectively with screw(G) as shown.

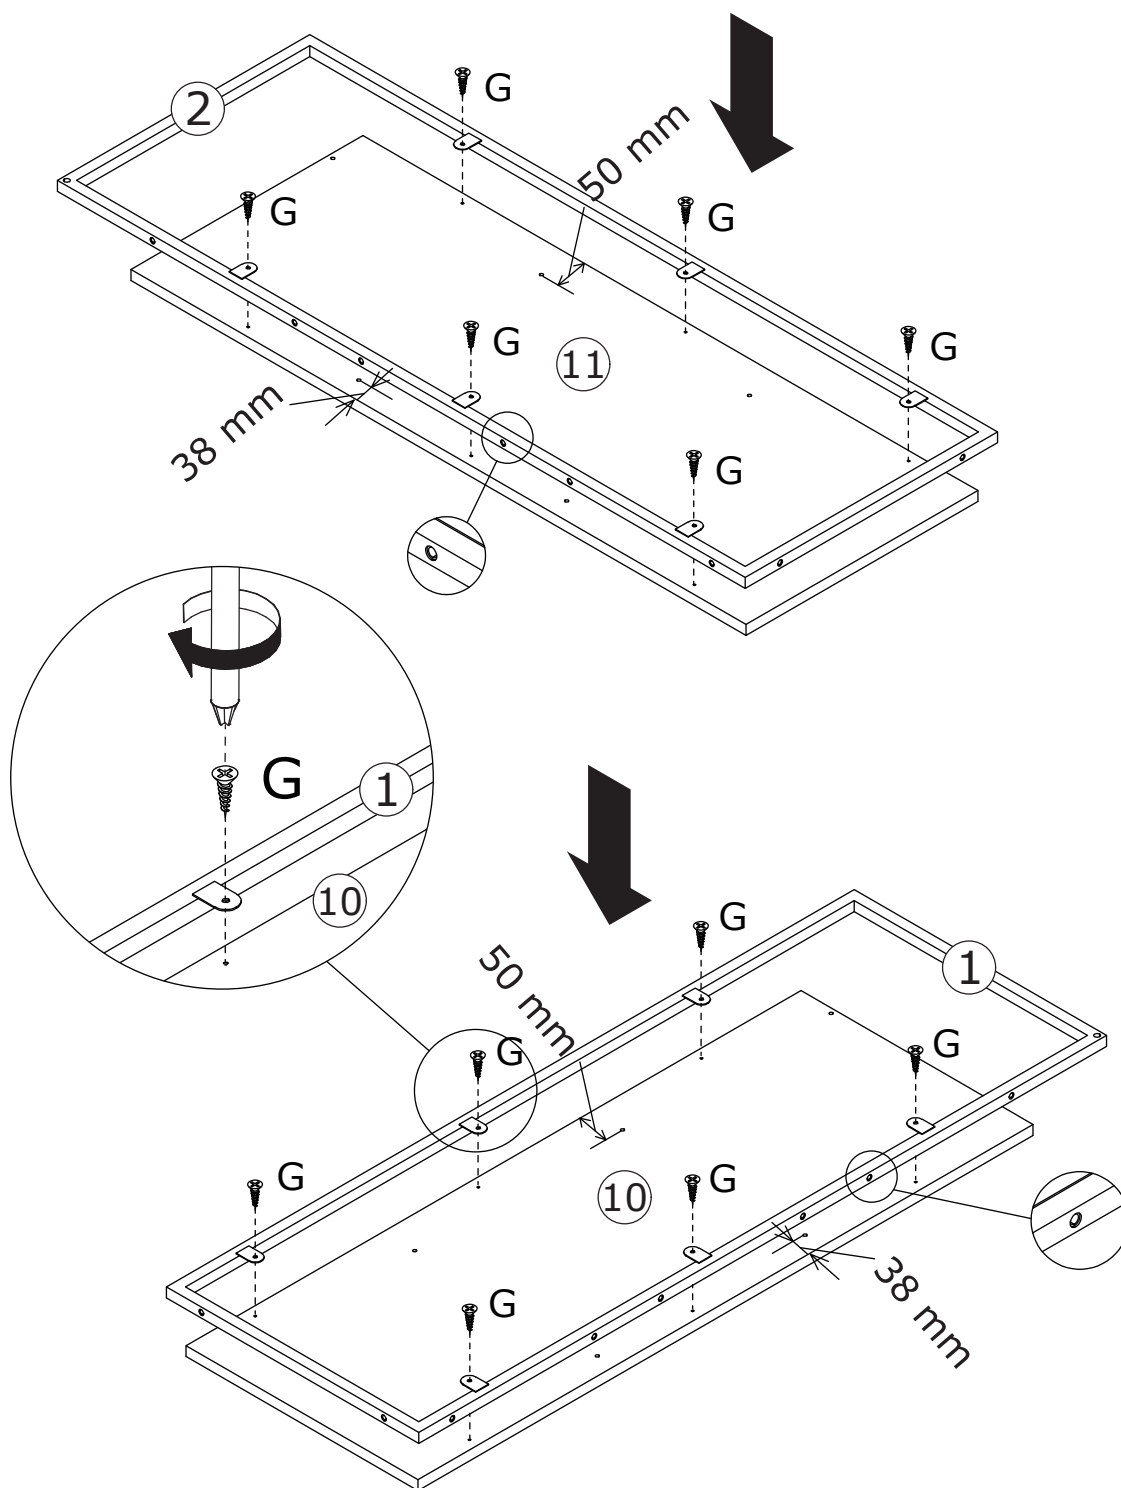

2

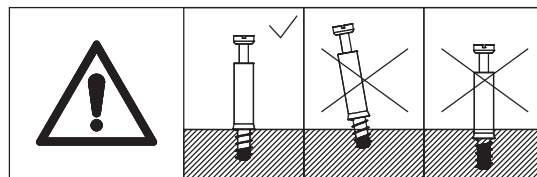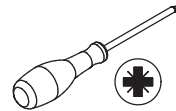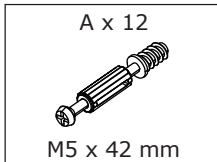  

 Screw eccentric rod(A) into plate 11 and 10 as shown.

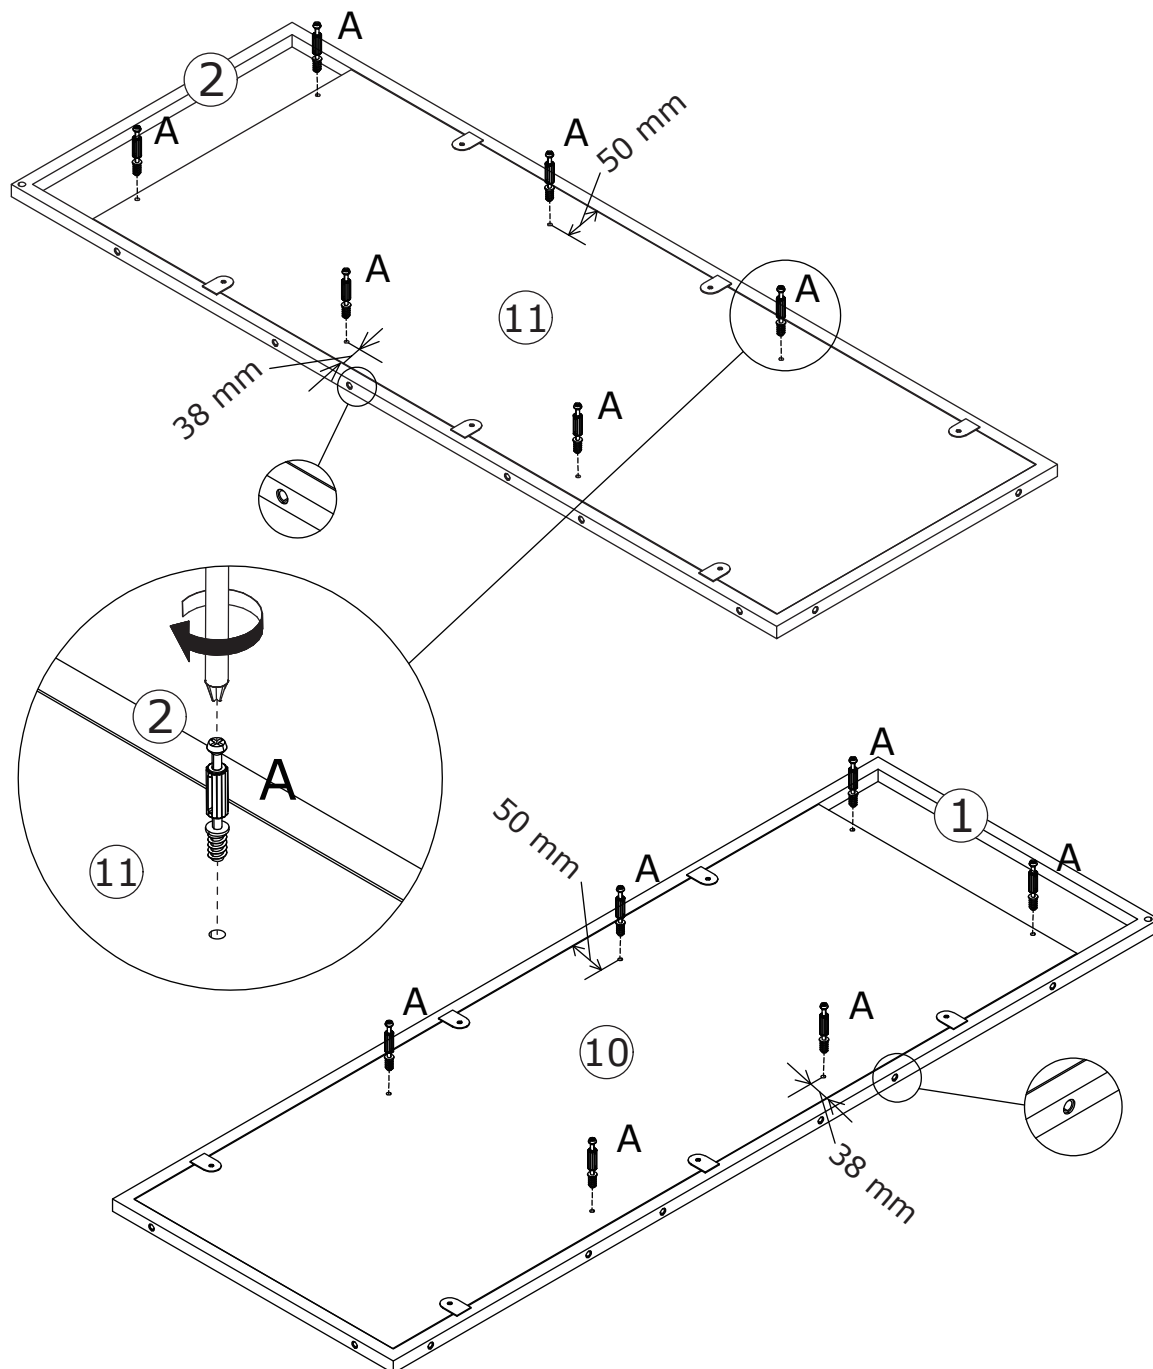



3

G x 4




M3.5 x 14 mm

  I x 2



 Fix magnet(I) to plate 14 with screw(G) as shown.

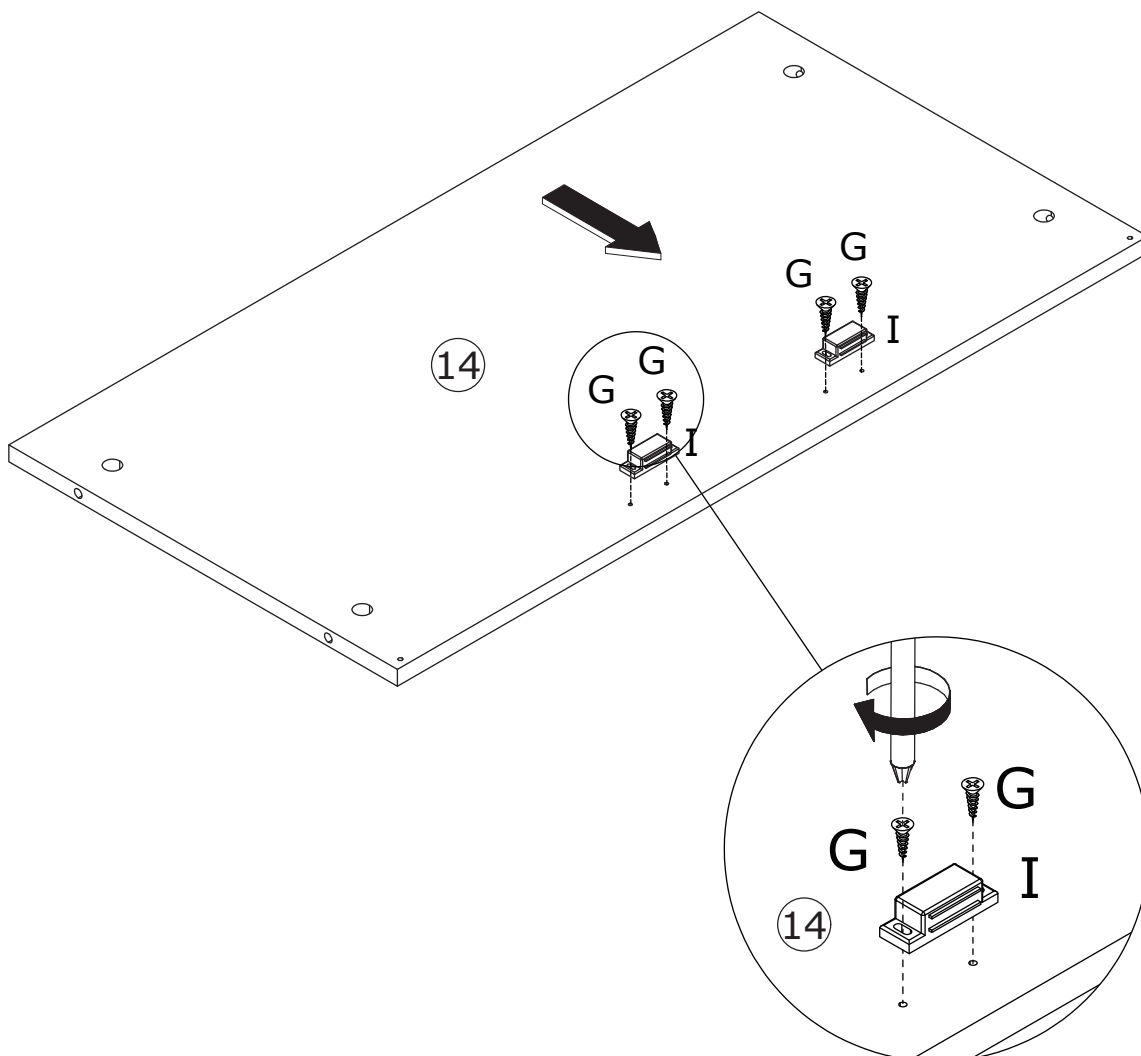

4

B x 12

 
 
 
 


Ø 15 x 10 mm

 
F x 2



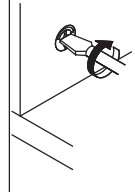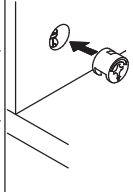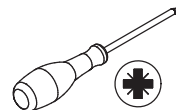



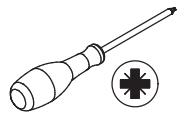
M6 x 35 mm

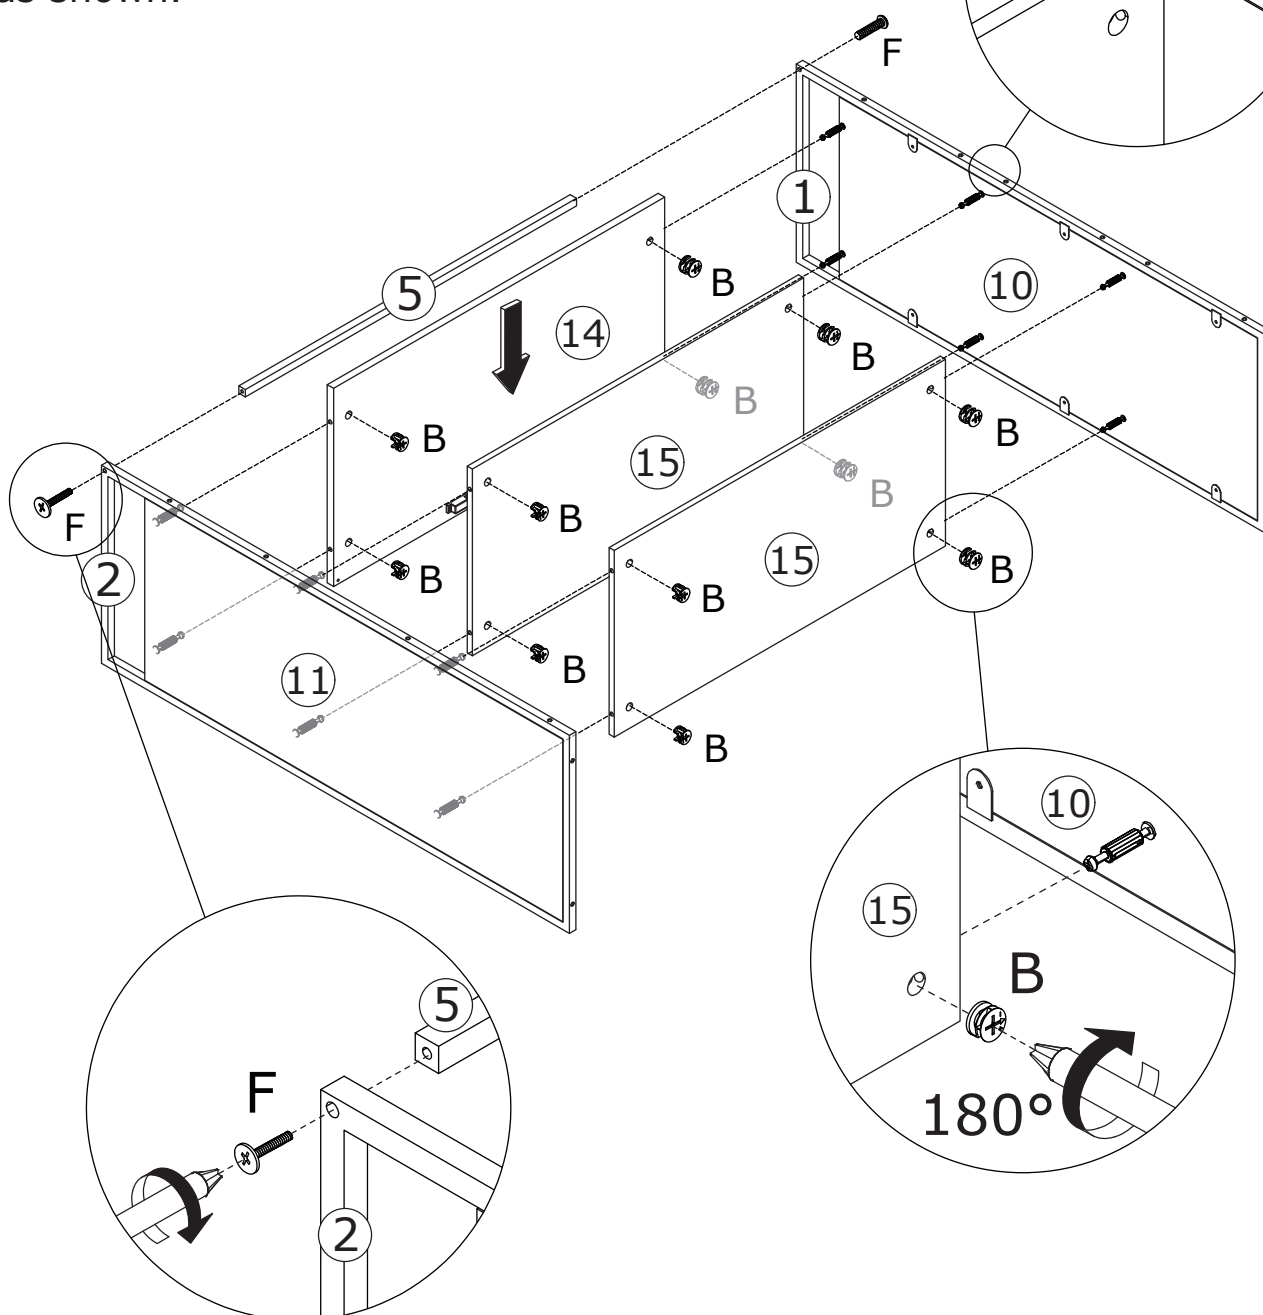


Connect plate 14 and 15 to plate 10 and 11, add cam lock(B) into plate 14,15 and turn clockwise to tighten as shown.
Fix tube 5 to iron plate 1 and 2 with screw(F) as shown.




5
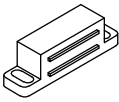
<p>D x 4</p>  <p>M6 x 20 mm</p>	<p>G x 4</p>  <p>M3.5 x 14 mm</p>	<p>I x 2</p> 	<p>x 1</p>  <p>#4</p>	
--	--	--	---	---

 
Fix magnet(I) to plate 16 with screw(G) as shown.
Fix plate 16 to iron plate 1 and 2 with screw(D) as shown.

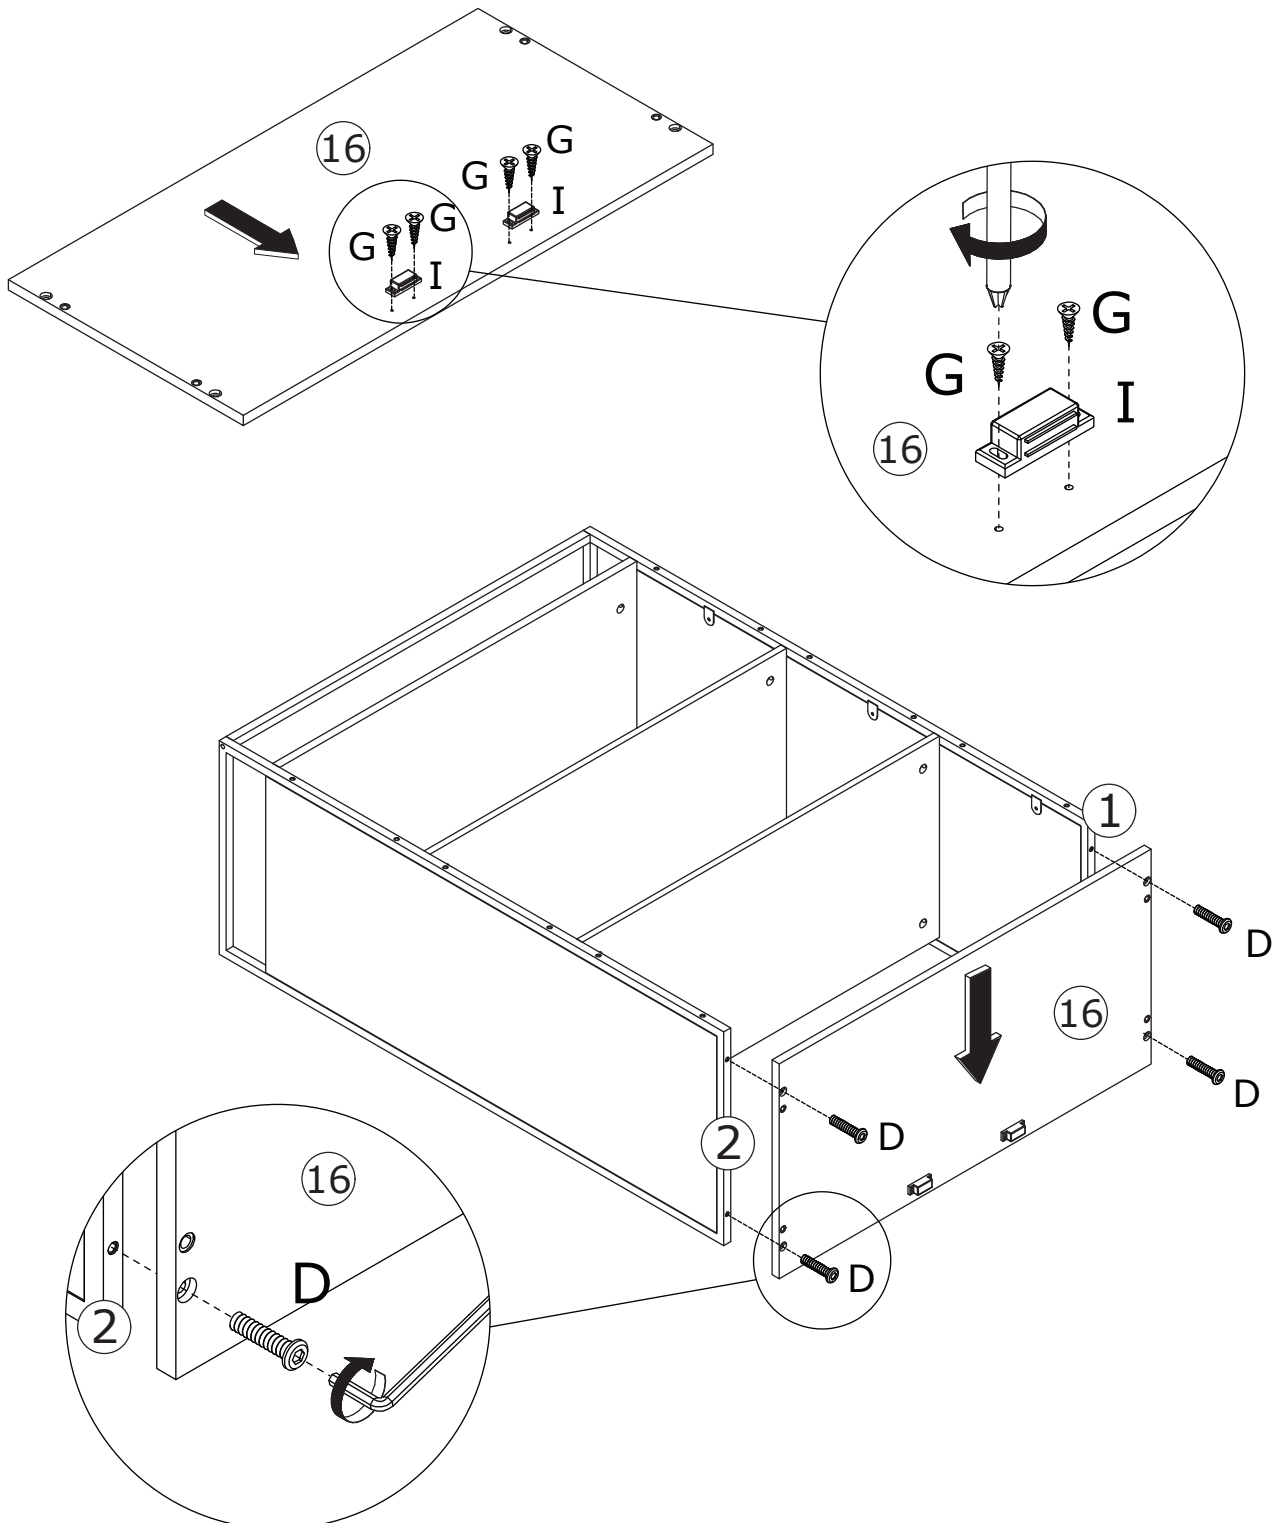

6

<p>E x 4</p>  <p>M6 x 25 mm</p>	<p>x 1</p>  <p>#4</p>	
--	--	--

 Fix tube 6 to plate 17
with screw(E) as shown.

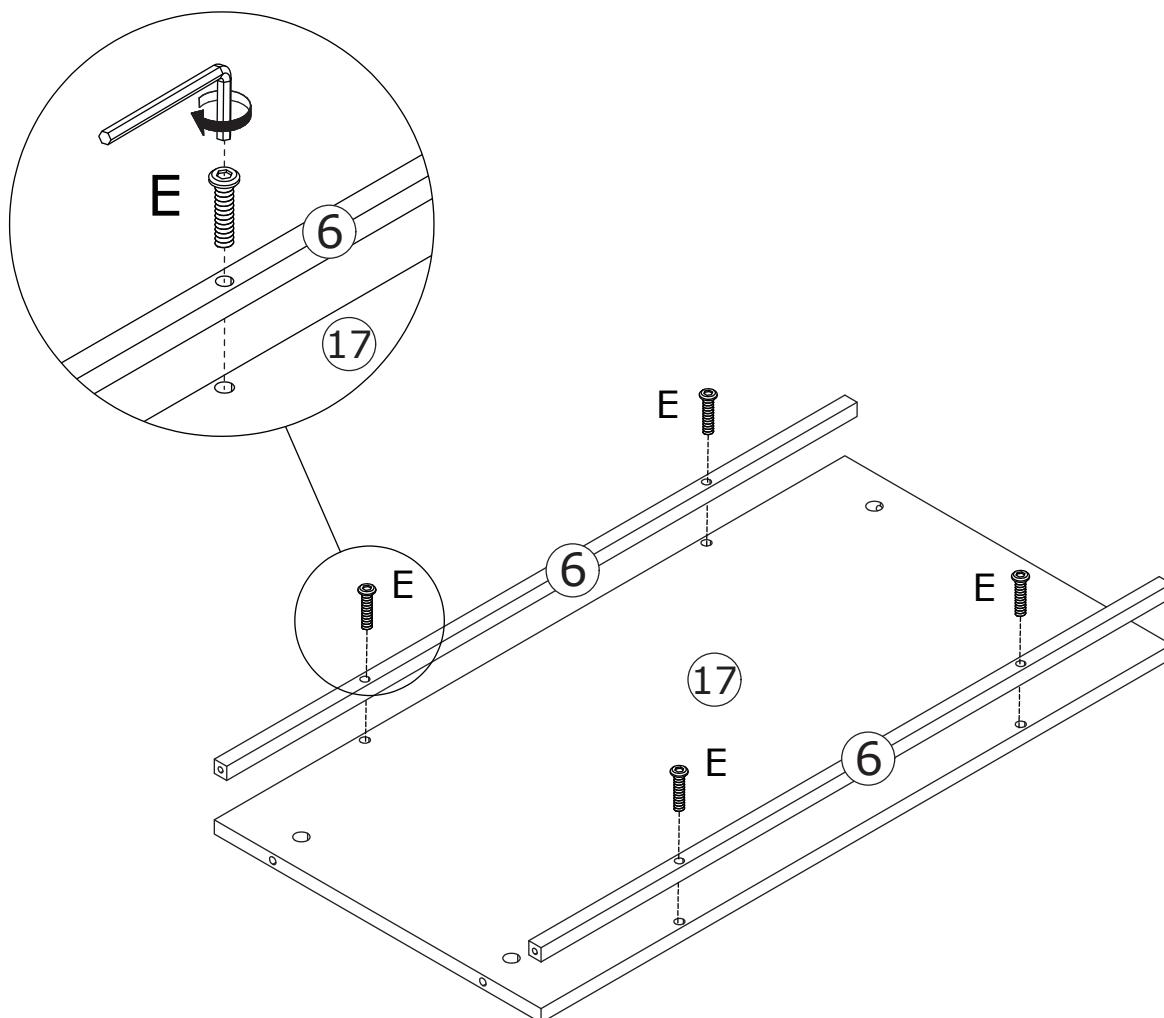


7


F x 4



 
M6 x 35 mm



 
Fix tube 6 to iron plate 3 and 4 with screw(F) as shown.

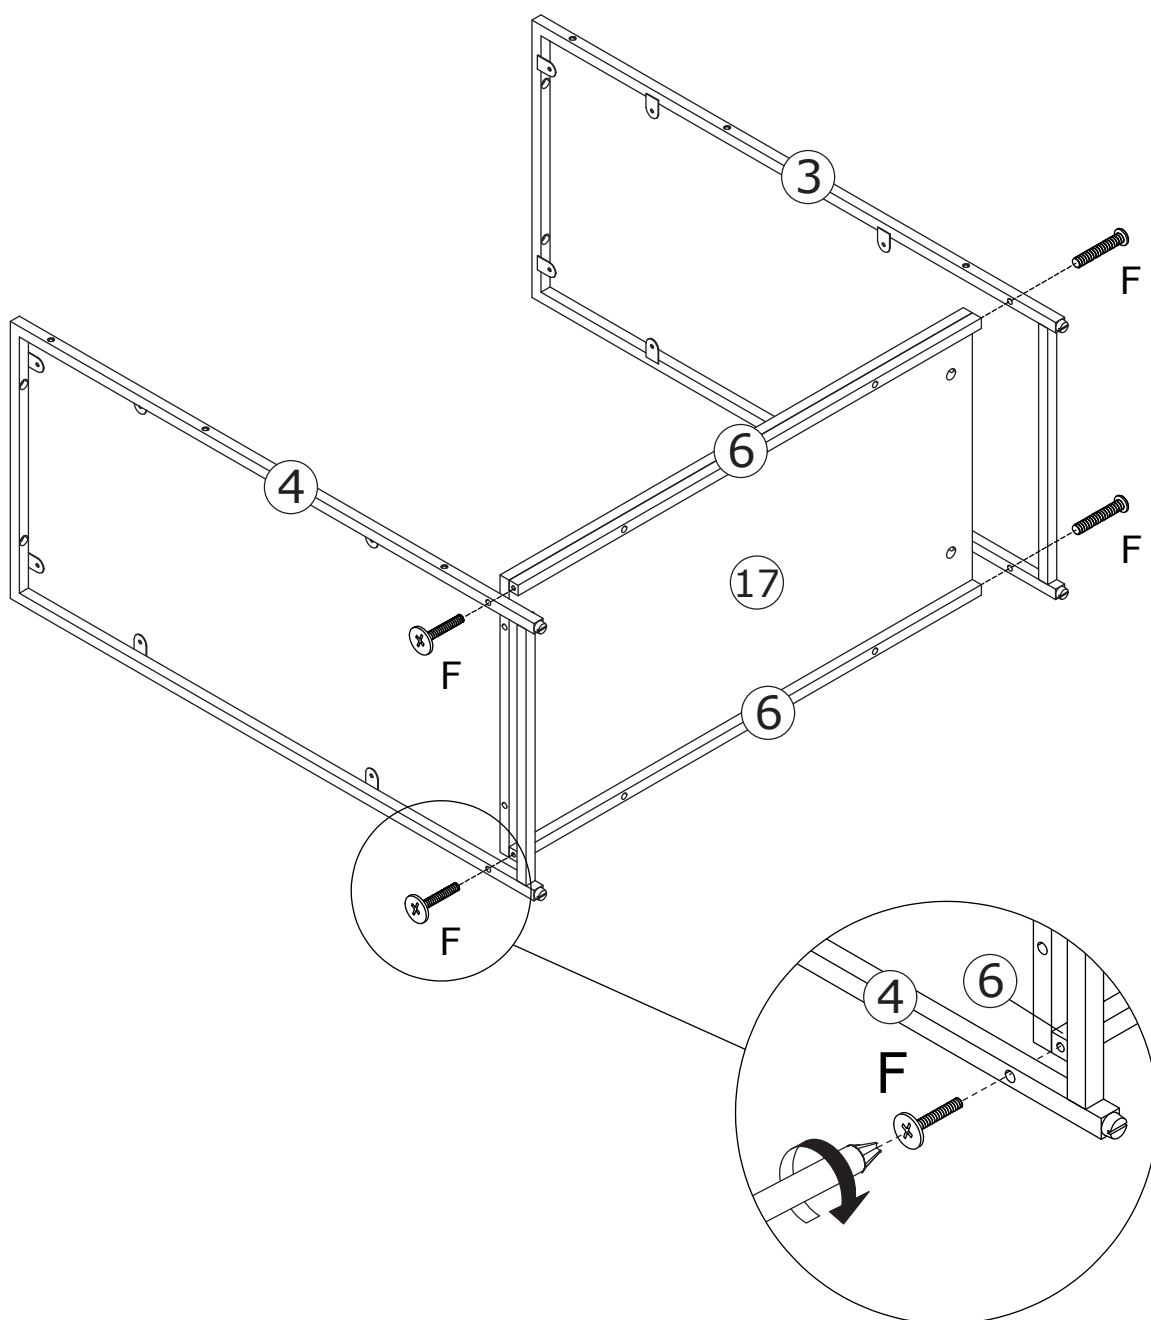

8



<p>C x 4</p>  <p>M6 x 12 mm</p>	<p>x 1</p>  <p>#4</p>	
--	--	--

 Fix iron plate 3 and 4 to plate 16 with screw(C) as shown.

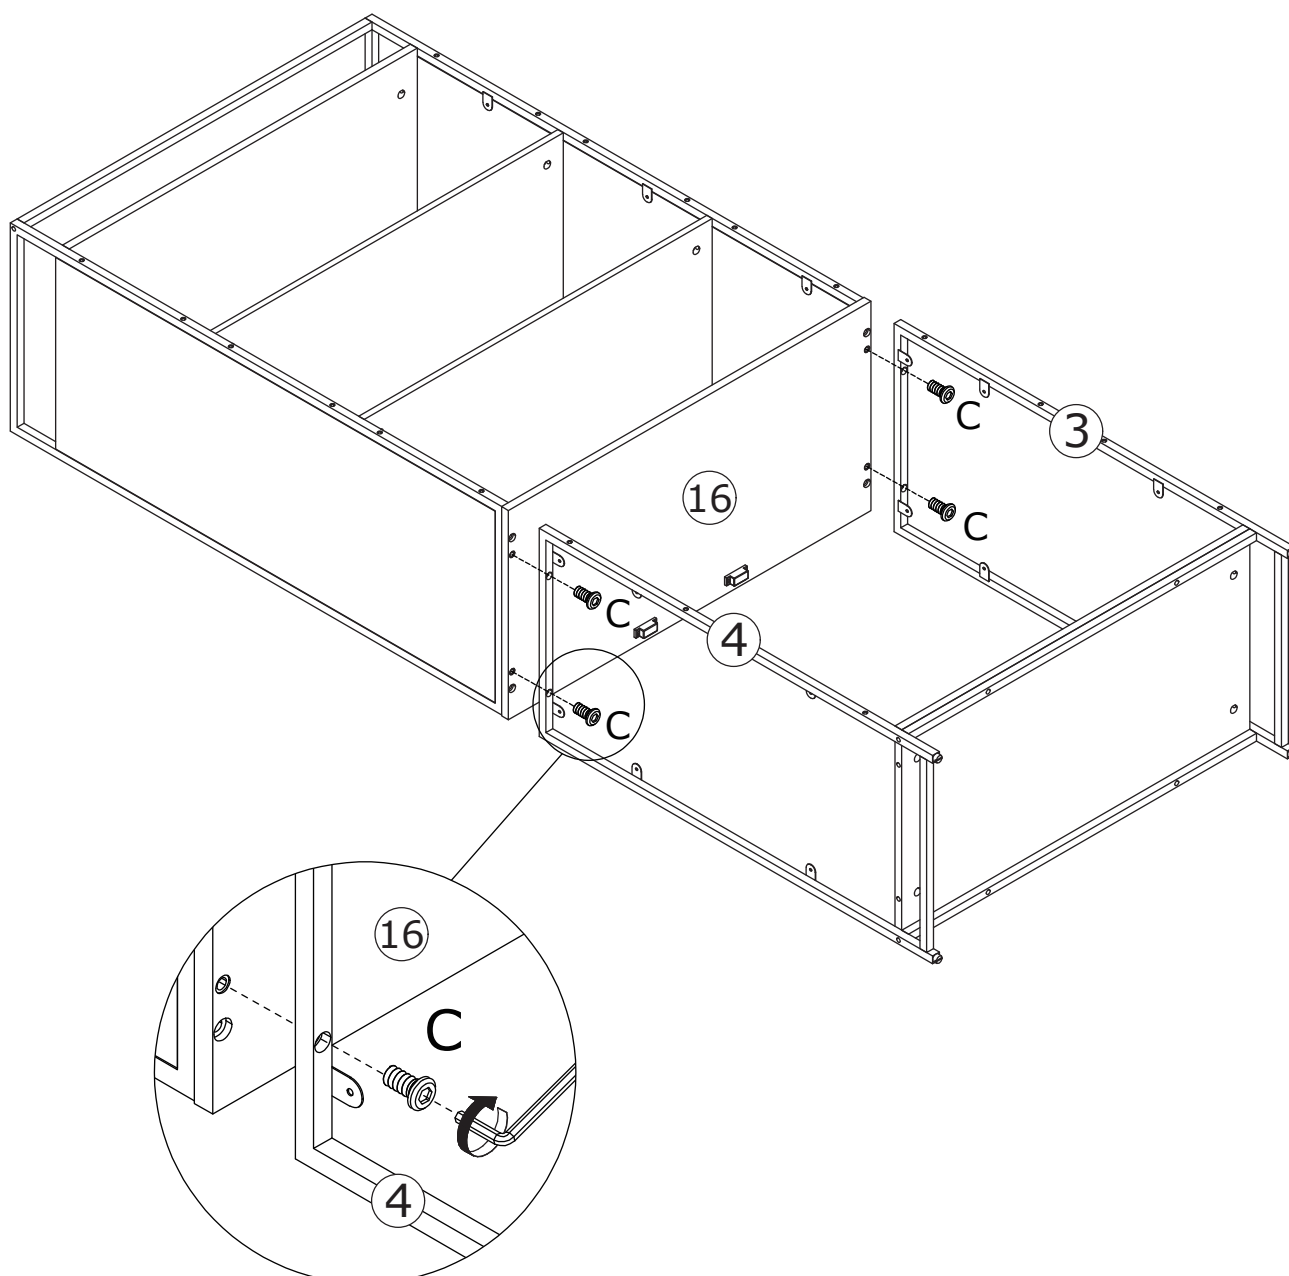


9

  A x 8
M5 x 42 mm

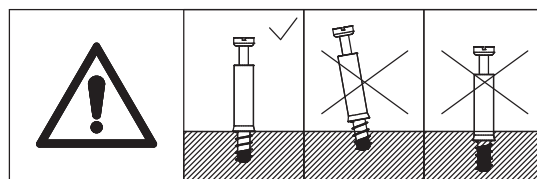

 Screw eccentric rod(A) into plate 12 and 13 as shown.

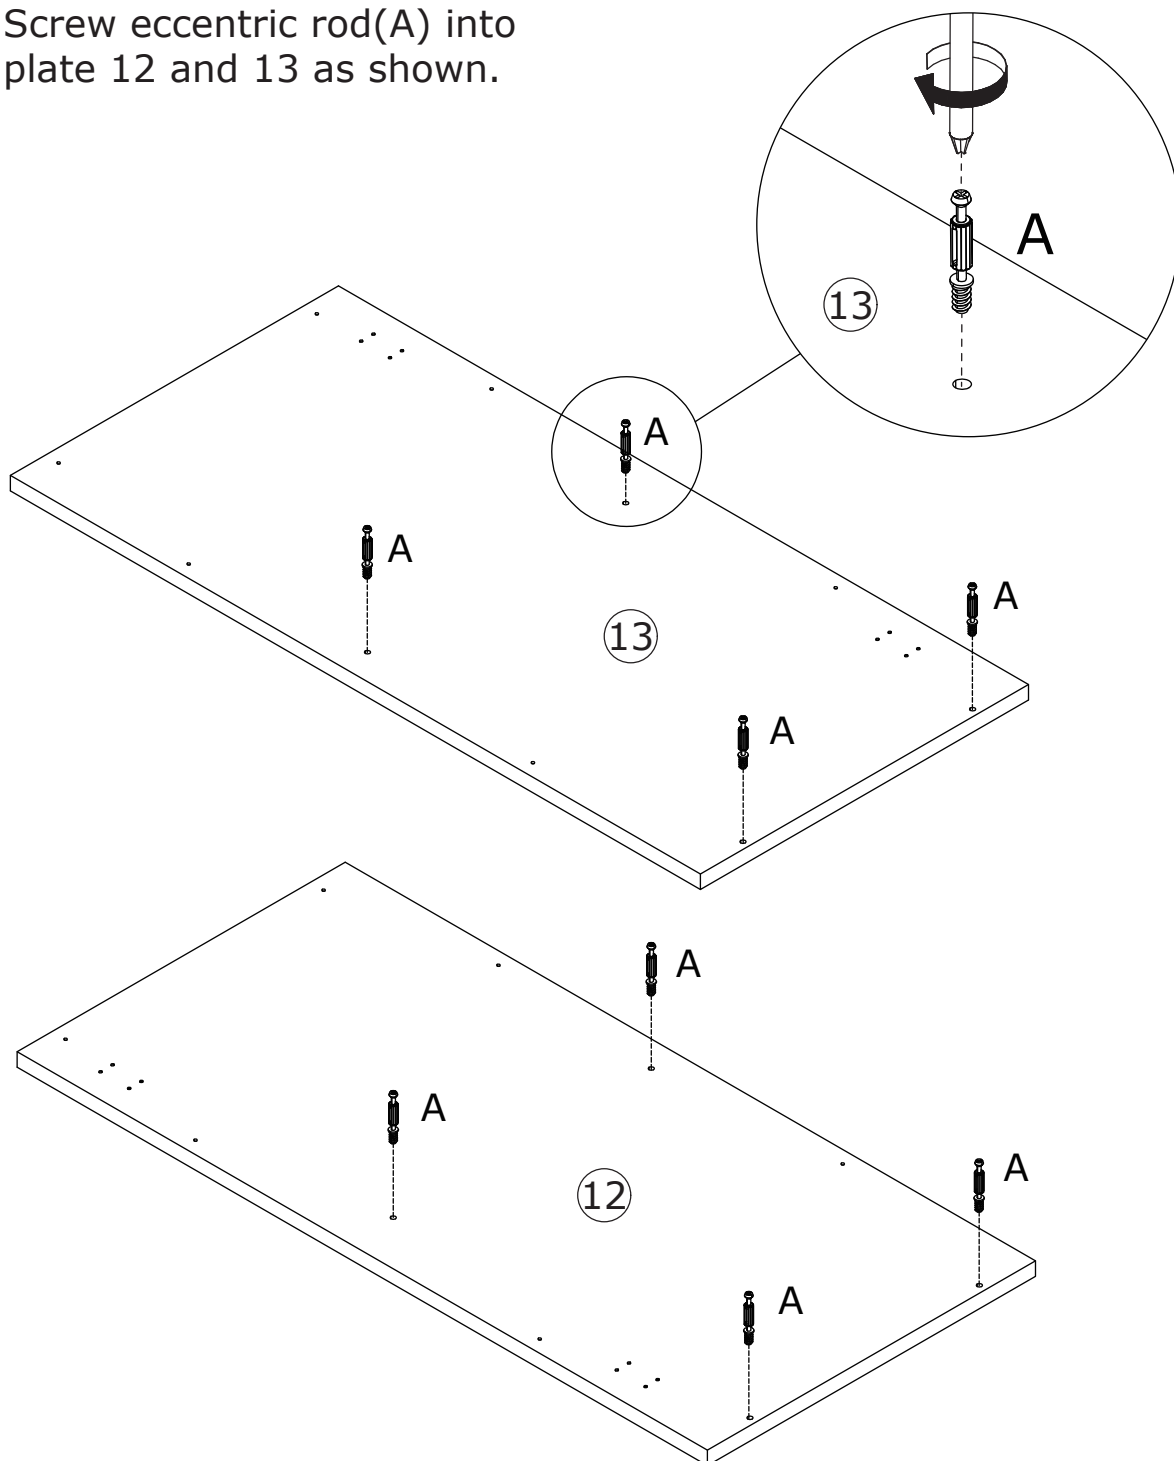

10

B x 8

 
 
 
 


Ø15 x 10 mm


G x 12



M3.5 x 14 mm

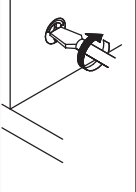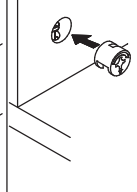

 Connect plate 12 and 13 to plate 15 and 17, add cam lock(B) into plate 15, 17 and turn clockwise to tighten as shown. Fix plate 13 and 12 to iron plate 3 and 4 with screw(G) as shown.

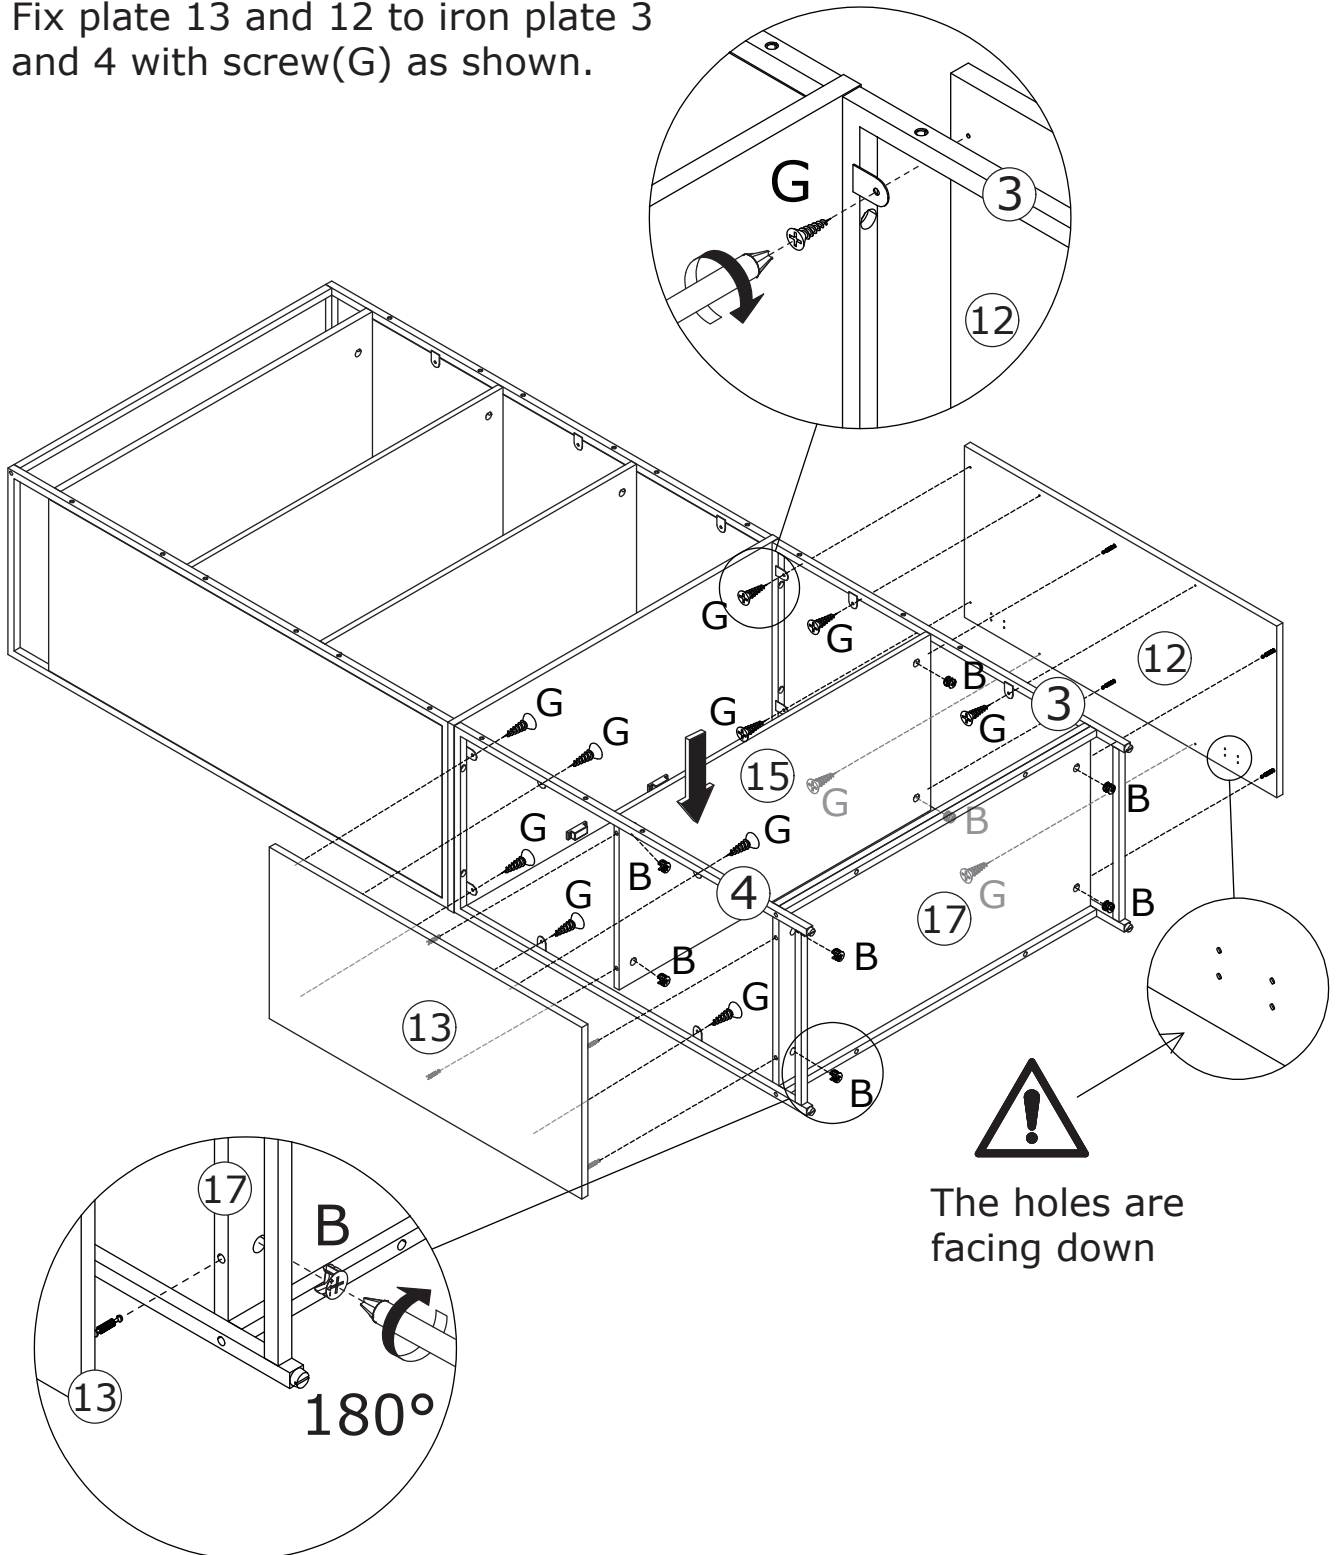

The holes are facing down

11

C x 20




M6 x 12 mm

x 1



#4

 Fix back plate 18 and 19 to iron plate 1, 2, 3 and 4 with screw(C) as shown.

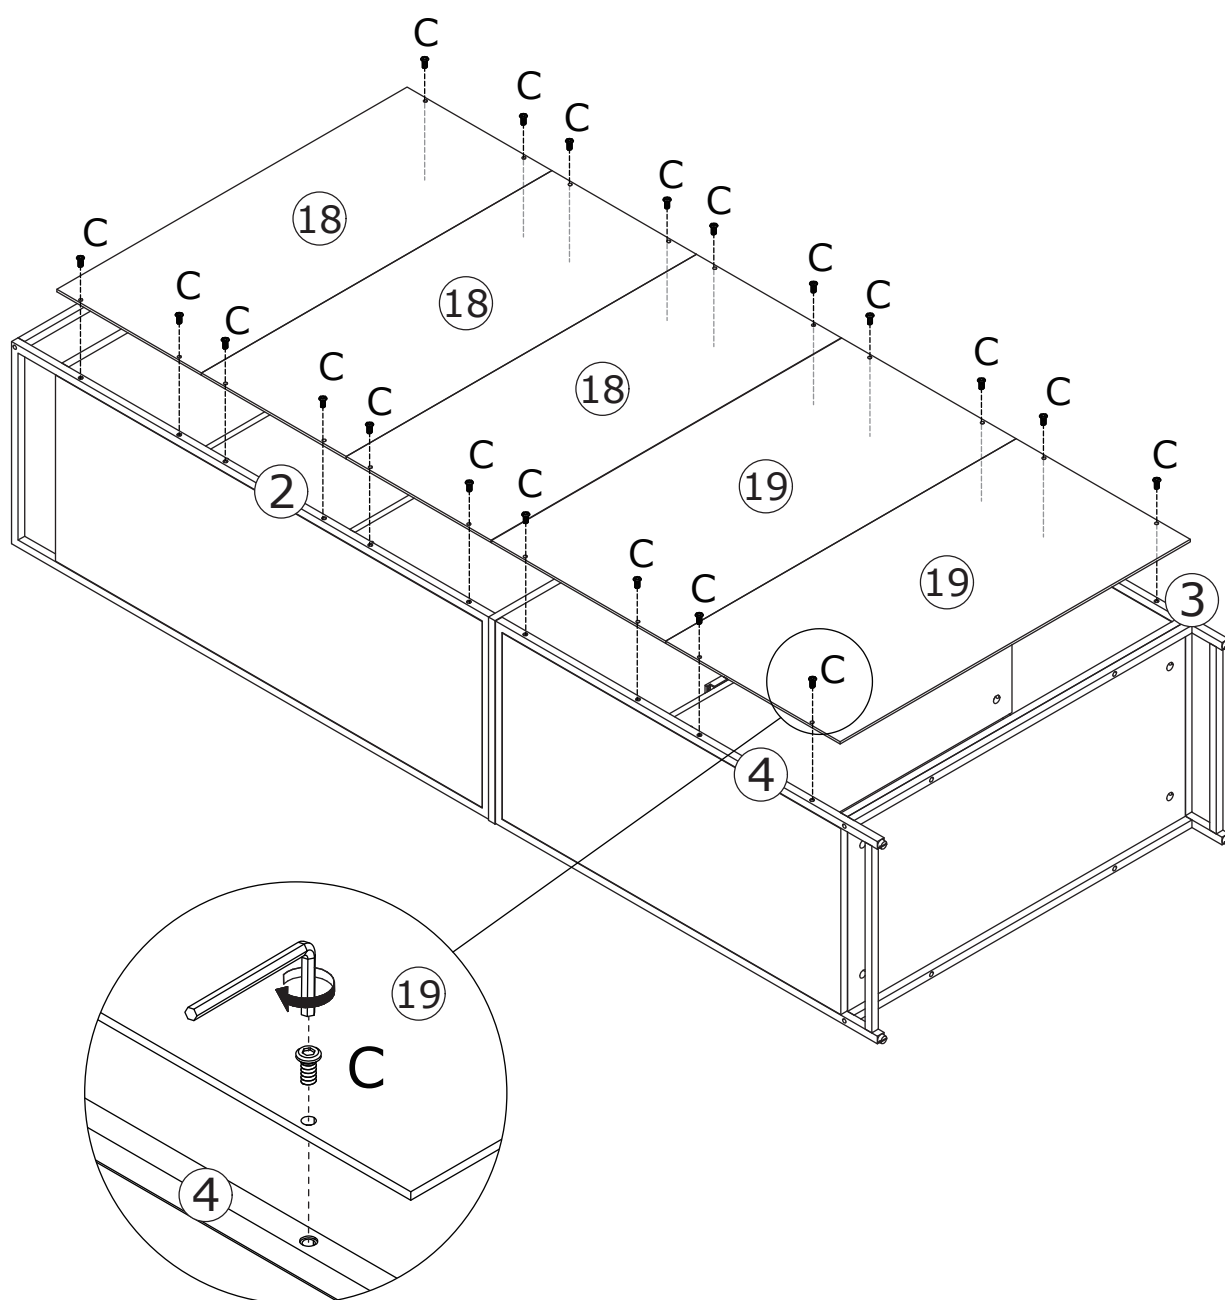

12

M x 18

 


Ø 1.5 x 15 mm

 
N x 12






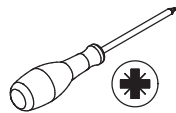


15 x 10 mm

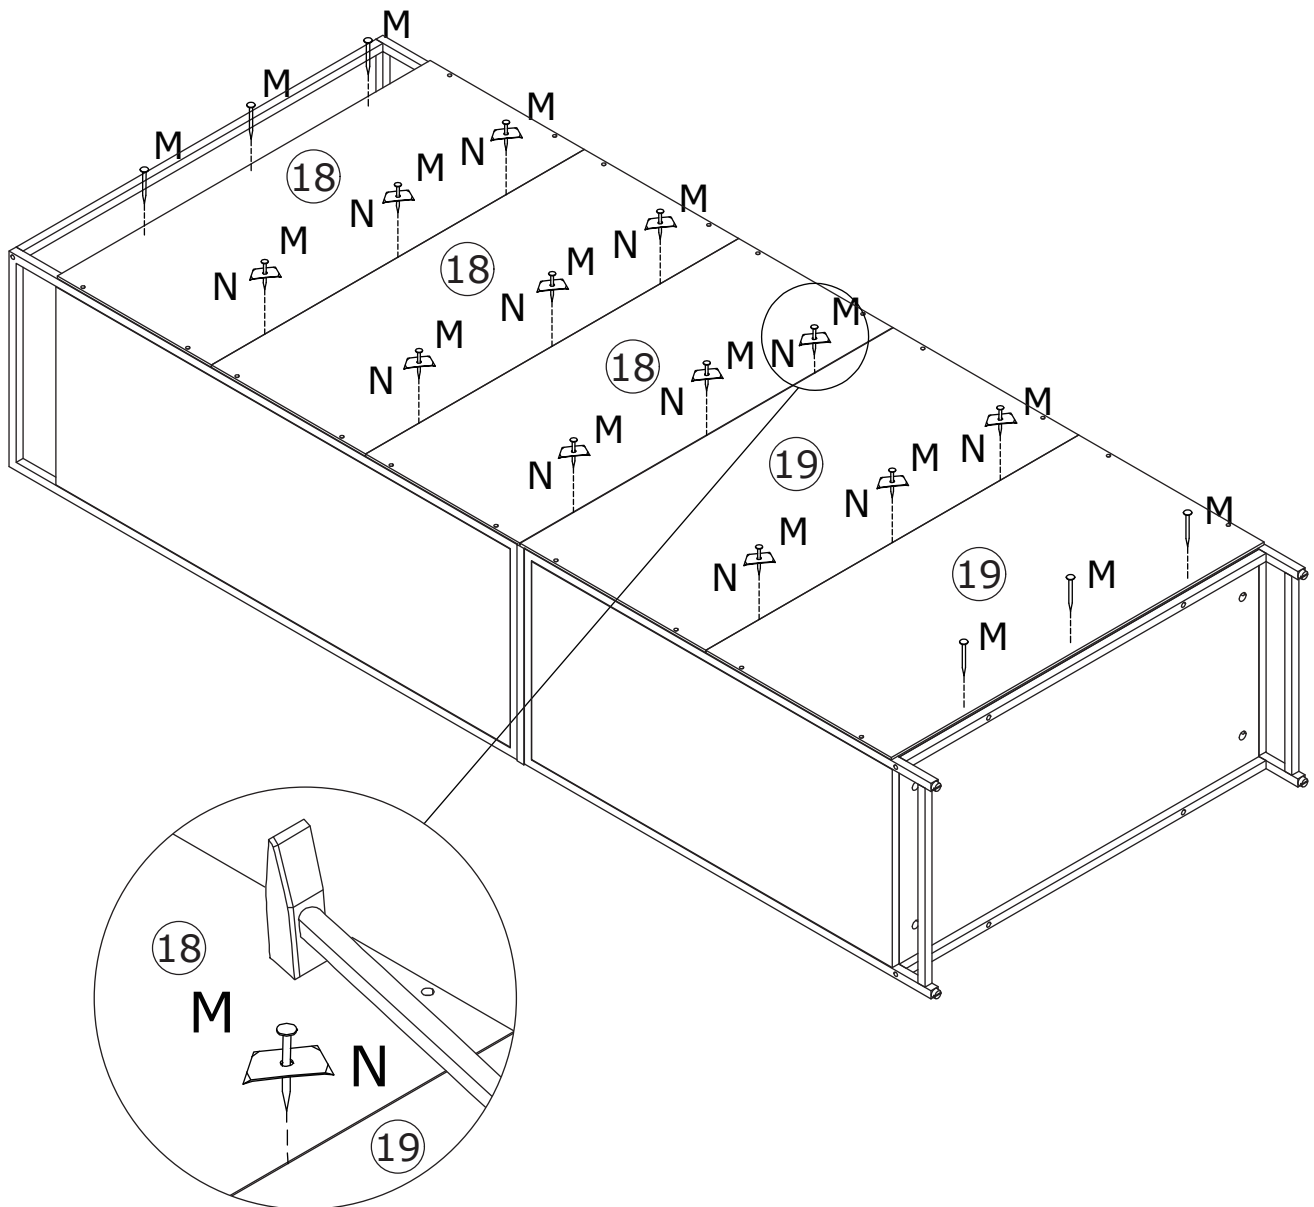


Fix back board 18 and 19 to the item with nail(M) as shown.
Use iron sheet(N) to connect each back boards with nail(M).



13

<p>G x 12</p>  <p>M3.5 x 14 mm</p>	<p>H x 4</p>  <p>DW</p>	<p>J x 2</p>  <p>Ø4 x 63 mm</p>	
<p>K x 4</p>  <p>M4 x 18 mm</p>	<p>L x 2</p>  <p>200-96 mm</p>		

 Fix hinge(H) to plate 8 and 9 with screw(G), and fix part(J) with screw(G) as shown.
Fix handle(L) with screw(K).

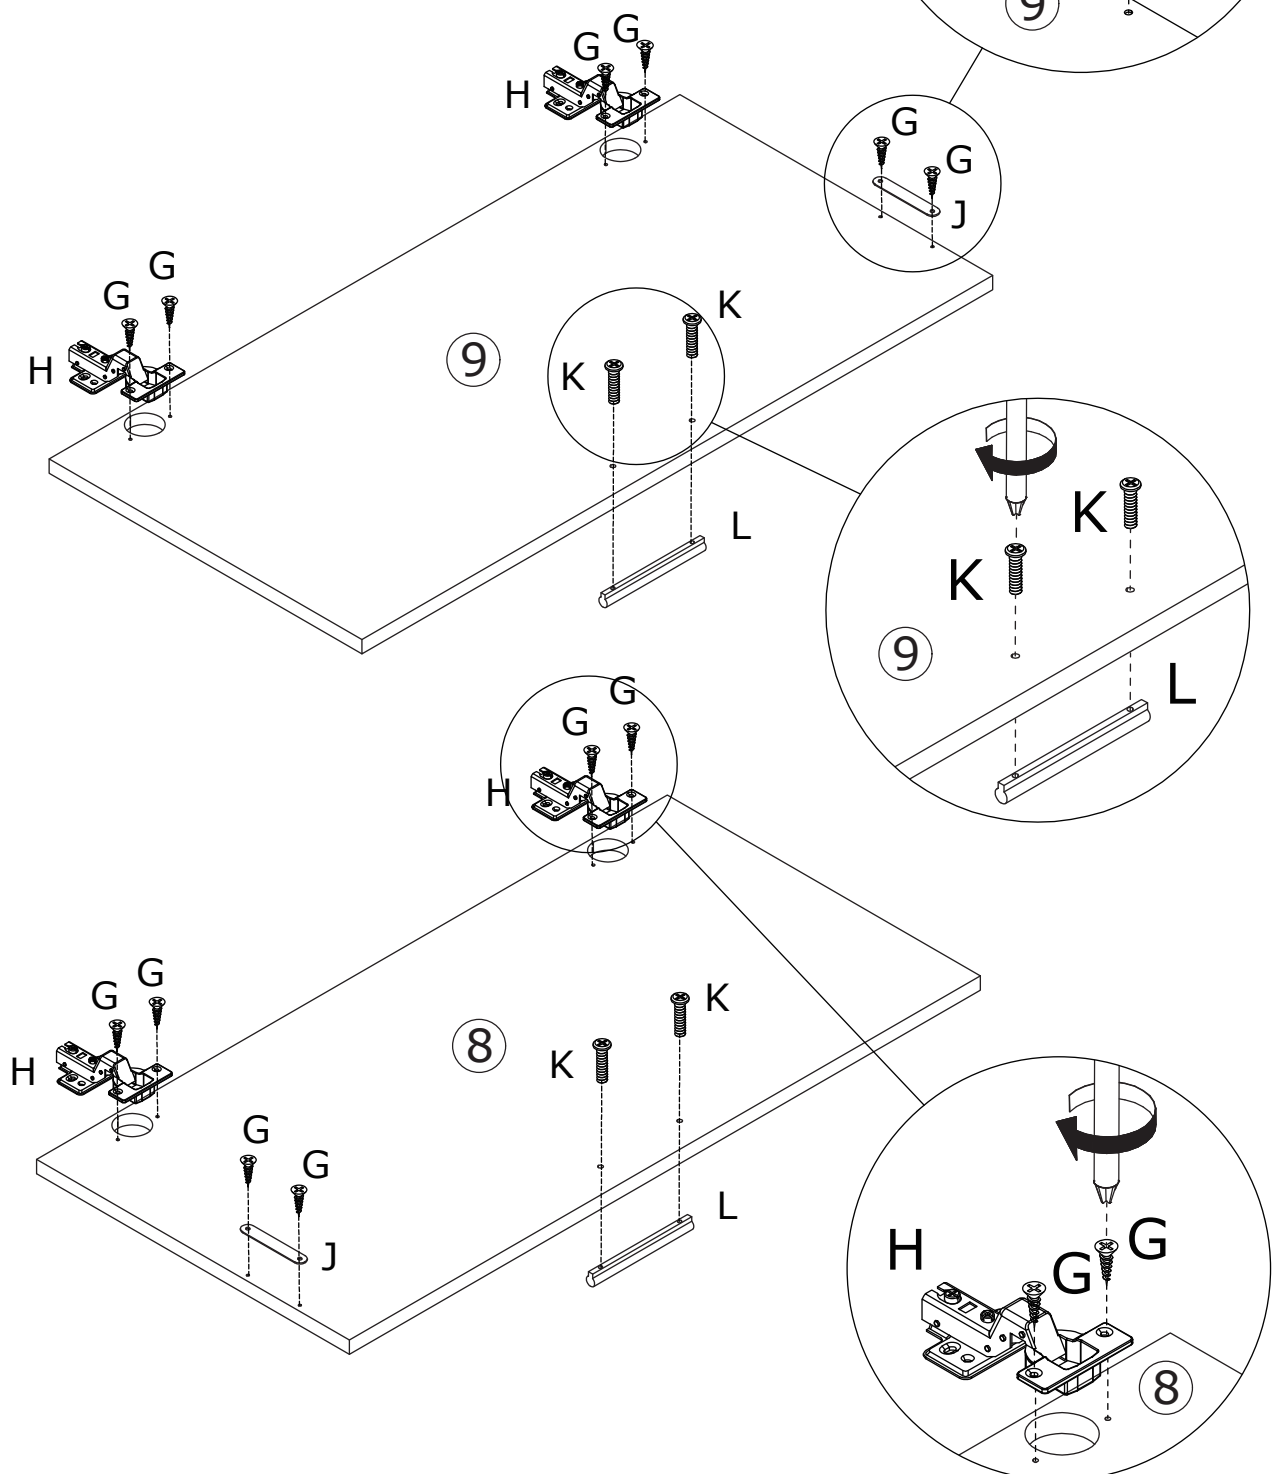


14



G x 16



 M3.5 x 14 mm



  Assemble door plate 8 and 9 to lower cabinet by fixing hinge with screw(G) as shown.

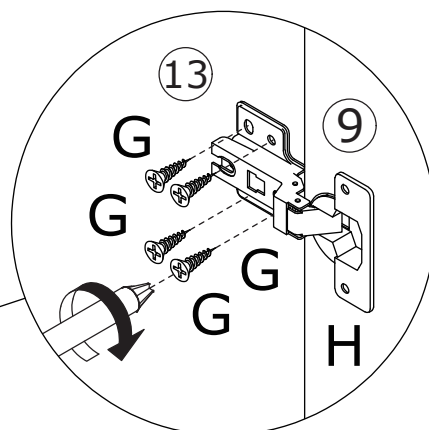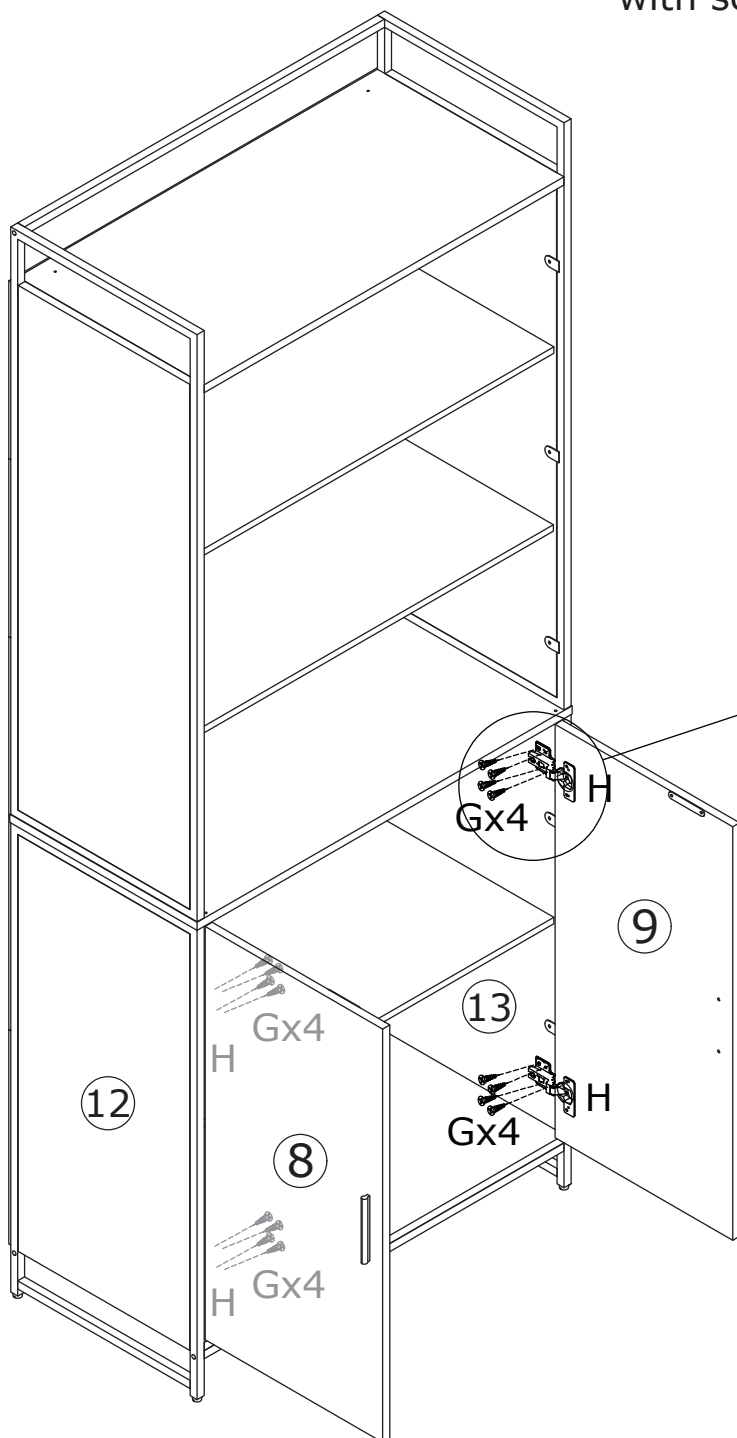


15

K x 4




M4 x 18 mm

 
L x 2



200-96 mm

 

 Fix handle(L) to mesh door 7 with screw(K) as shown.

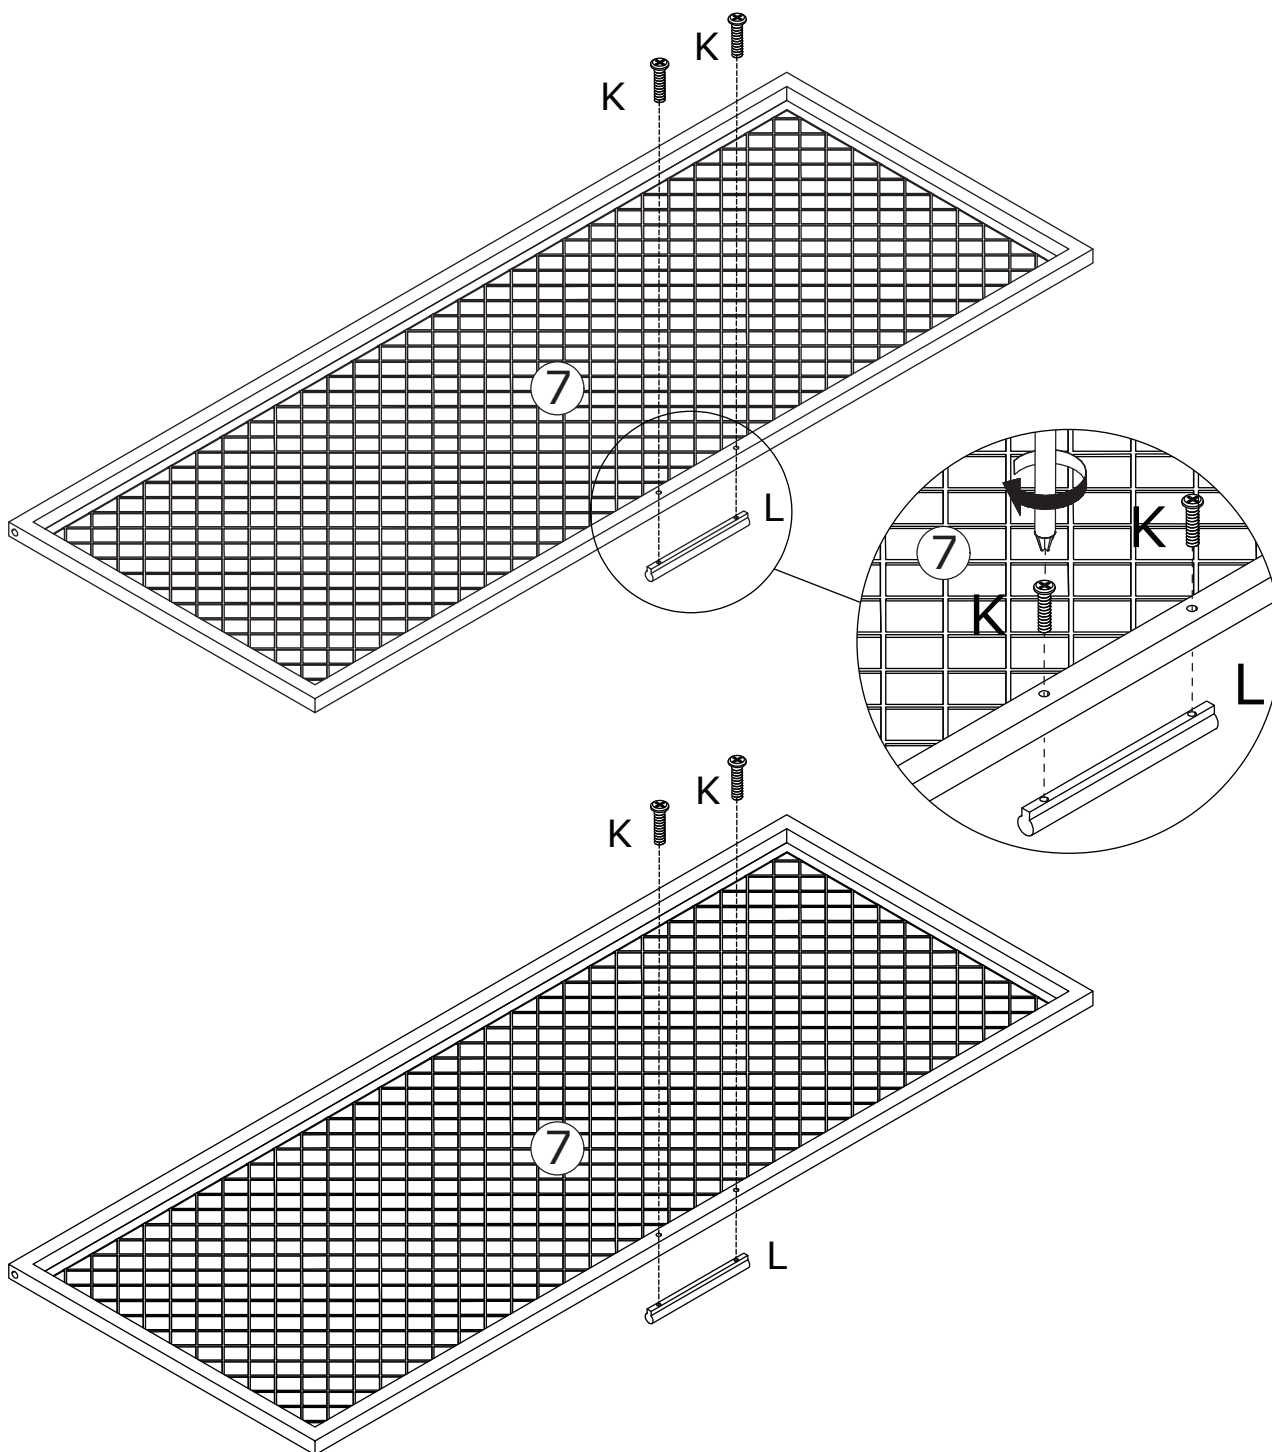


16

 
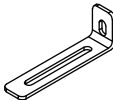


O x 4


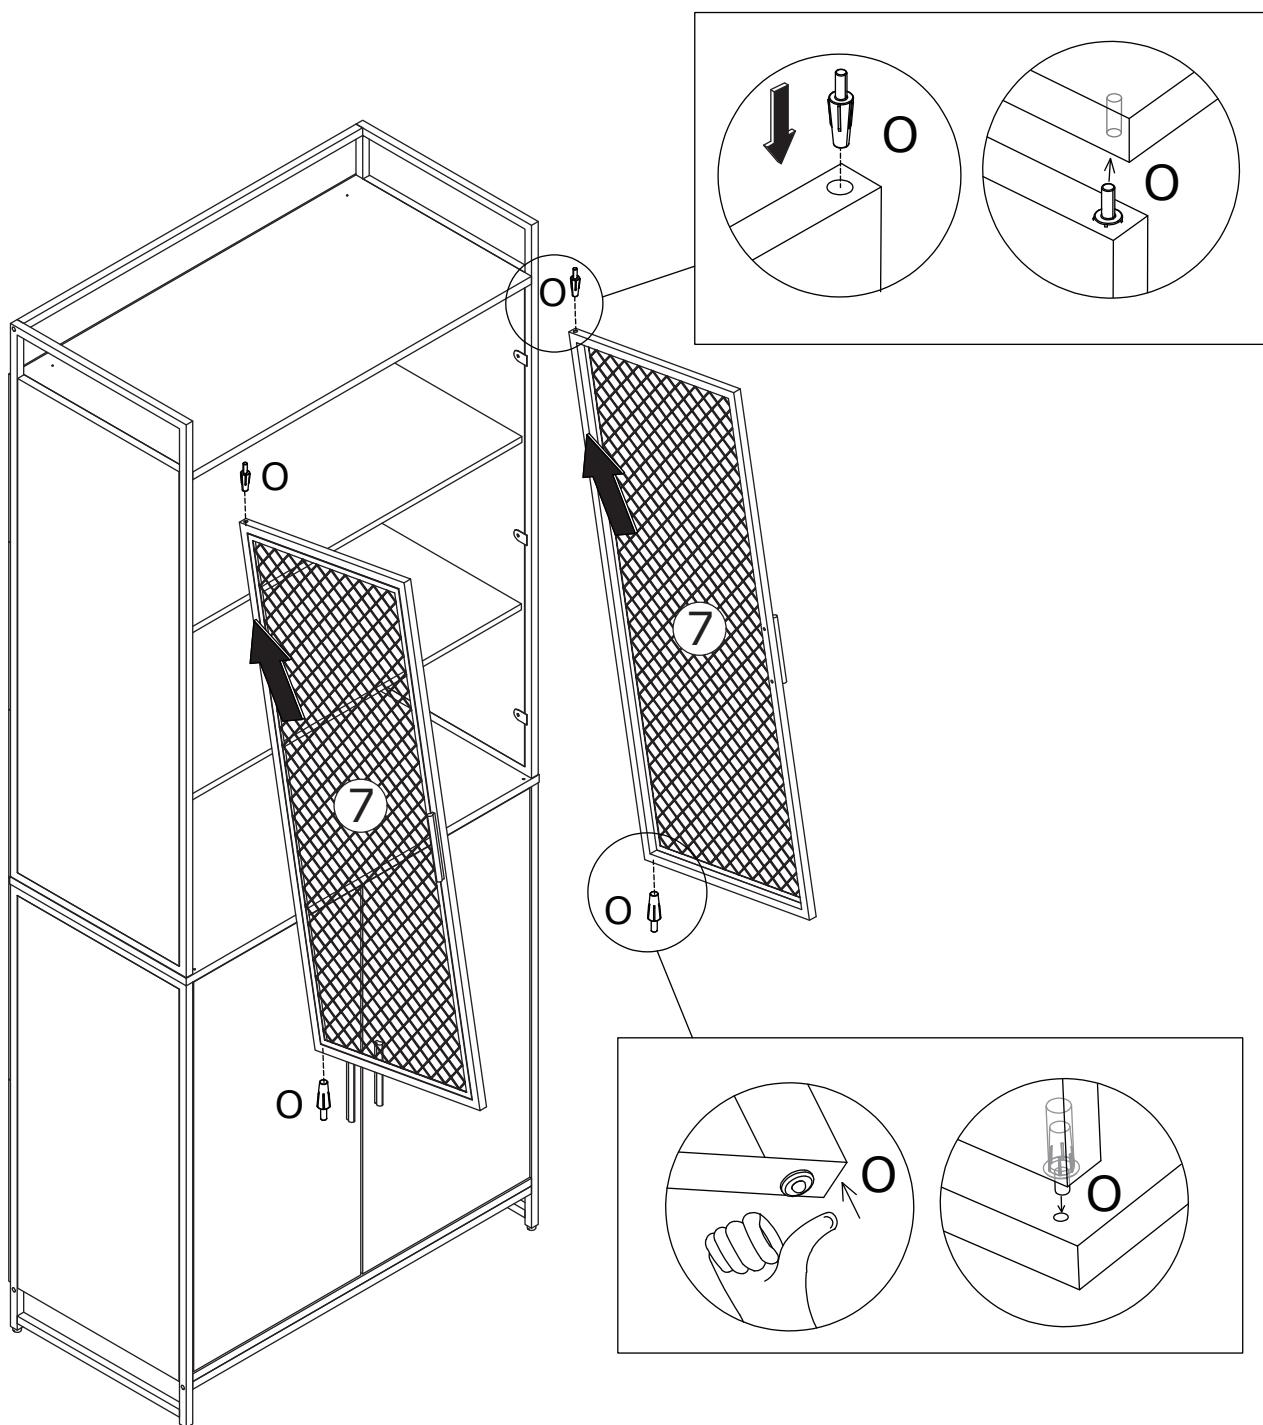


Insert part(O) into plate 7,
then assemble to upper cabinet.




17

<p>G x 2</p>  <p>M3.5 x 14 mm</p>	<p>P x 2</p> 
<p>Q x 2</p>  <p>Ø 8 x 60 mm</p>	<p>R x 2</p>  <p>Ø 5 x 55 mm</p>

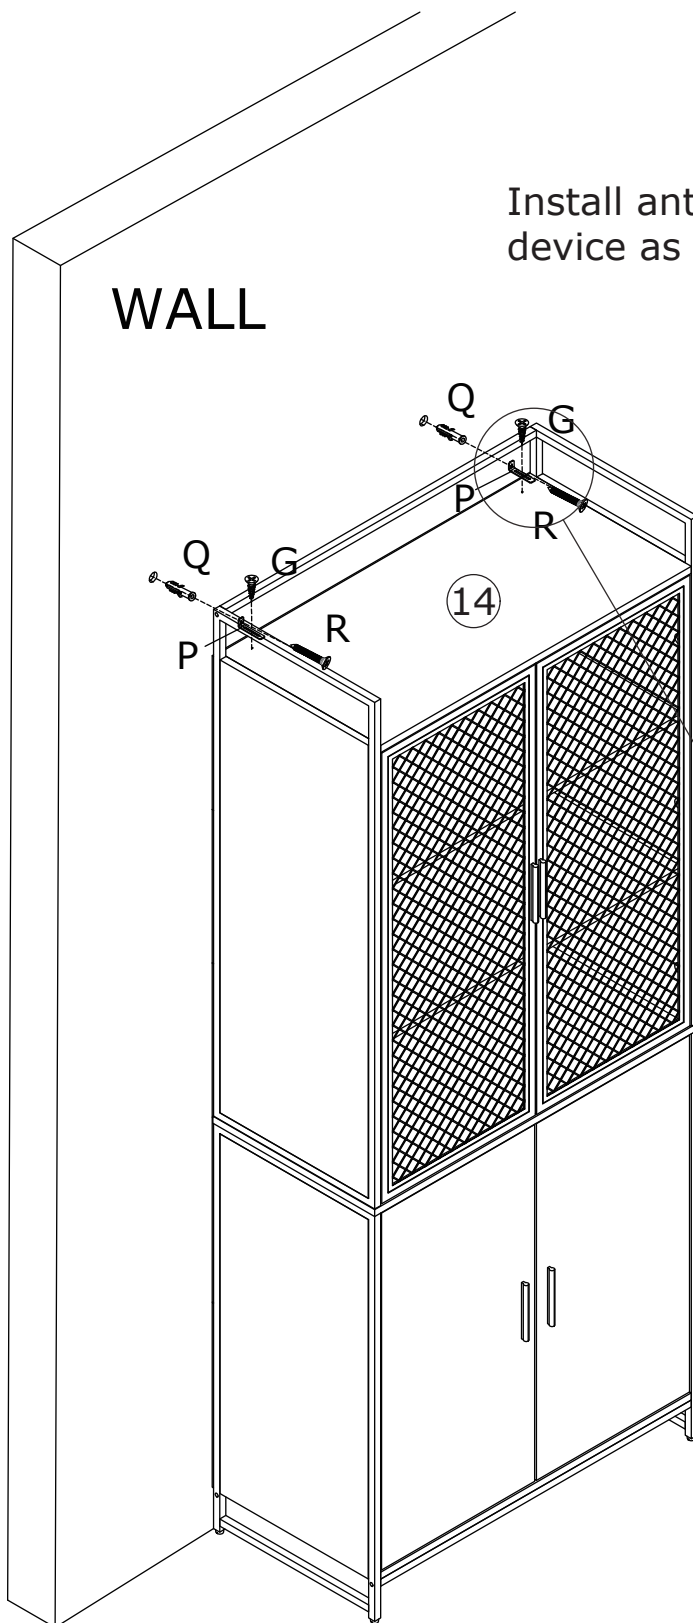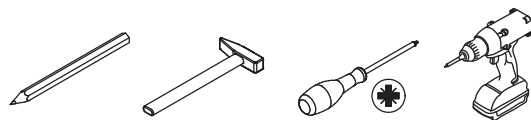  


Install anti-tipping device as shown.

 
1.

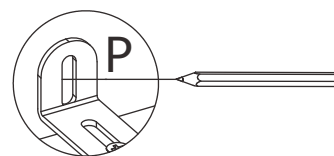


 
2.

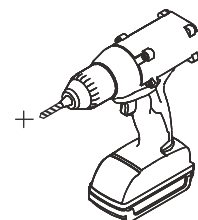


 3.

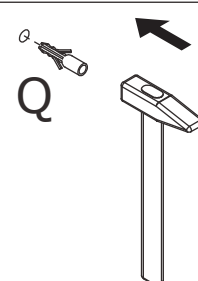

  
 
4.

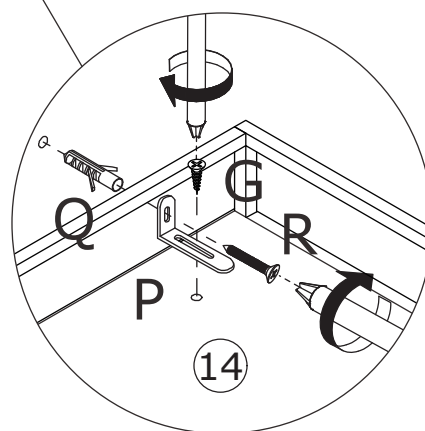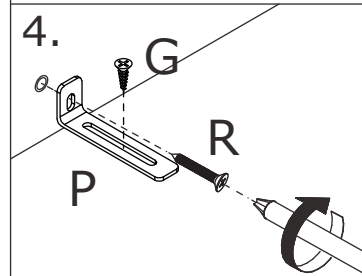




If doors are still not aligned if the hinges are properly correctly, please watch the video.


 
 
<https://youtu.be/n0Lb36SoODM>

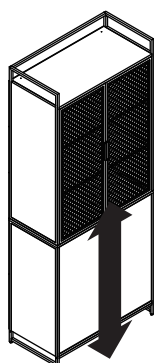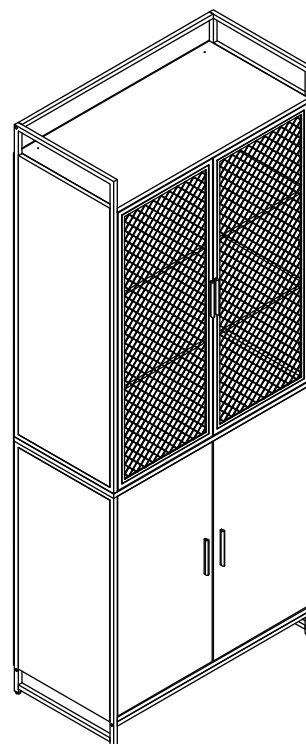


I

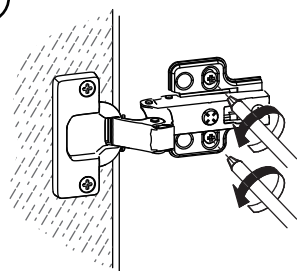 






II

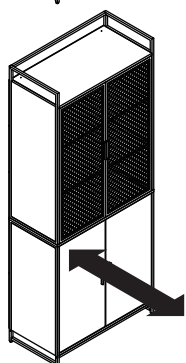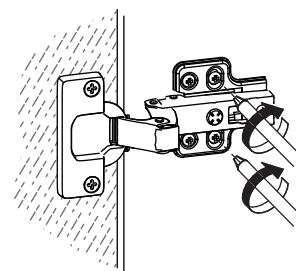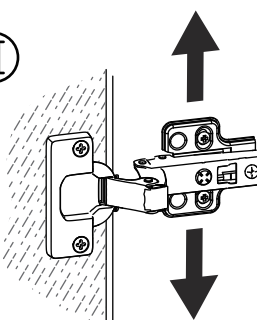   

I

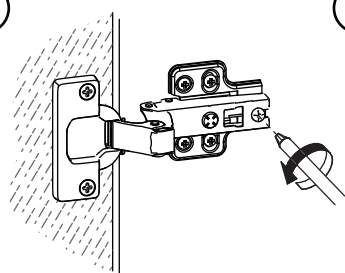 

II

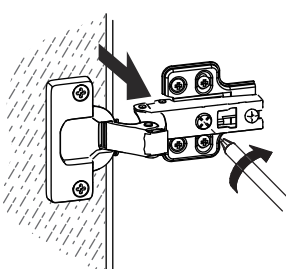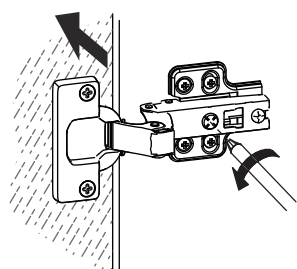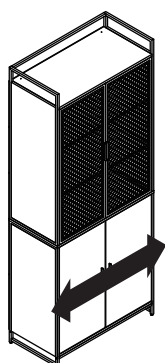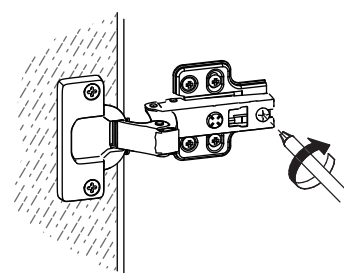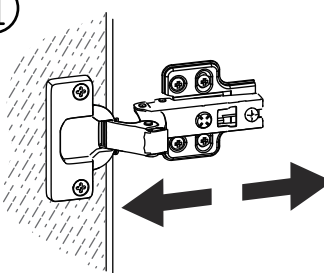     


19

D x 6



M6 x 20 mm

 T x 3




x 1



#4

 If you have multiple sets of similar products,
you can connect them together through screw D and T.

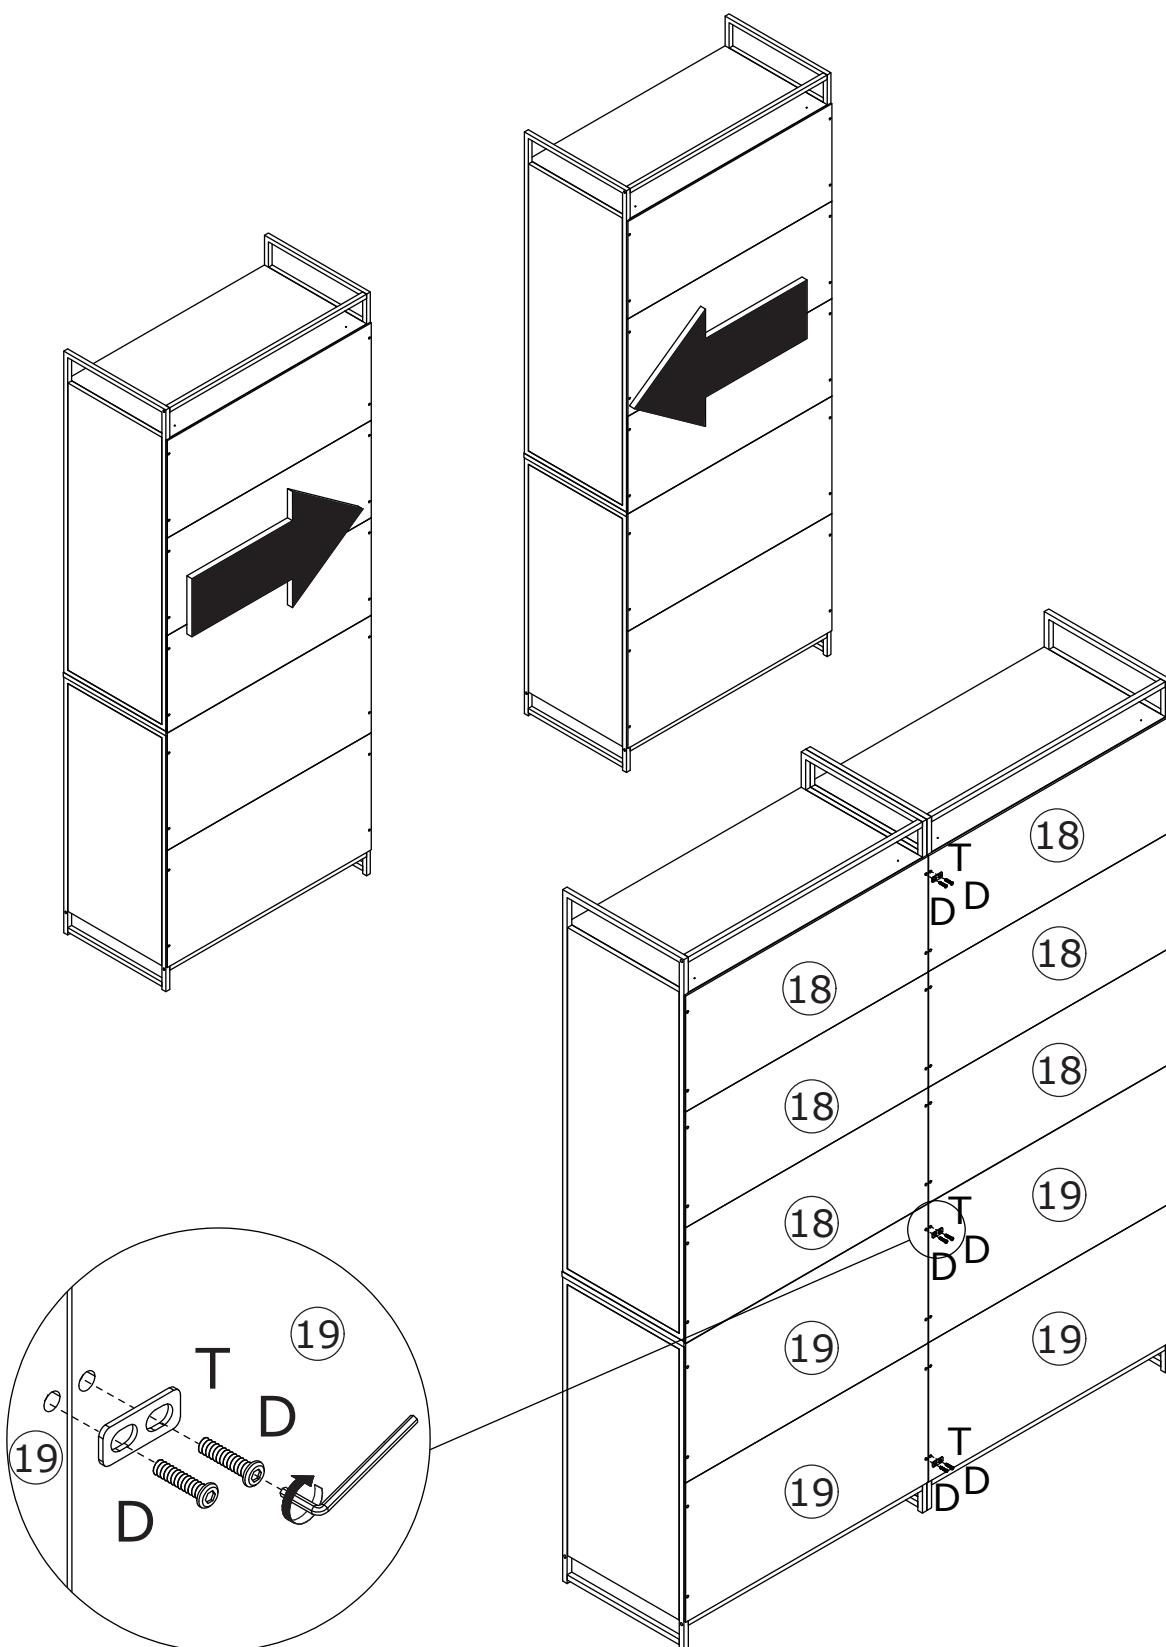

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



feedbackstation@163.com

 


(303)800-6387

INSTALLATION


Product Manual

Version: 210269-02+03-24A-PF

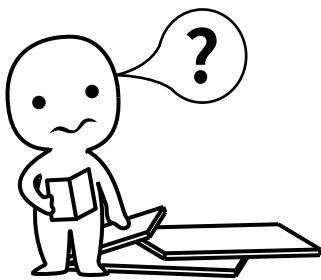


IMPORTANT INFORMATION!

 please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

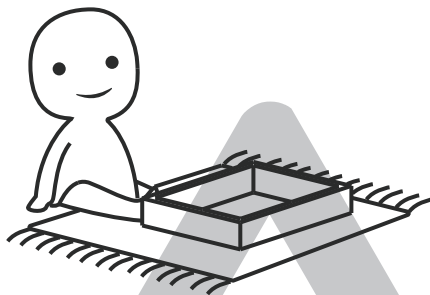



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

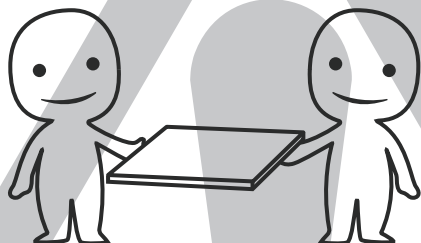

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

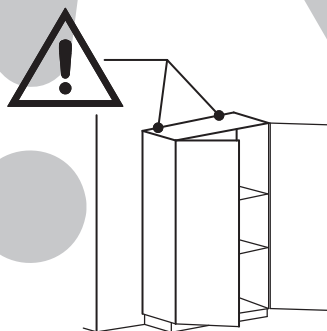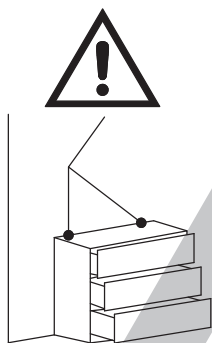

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !





It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.



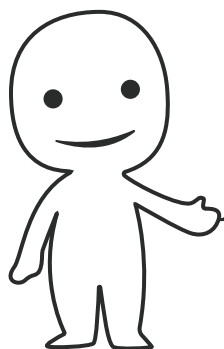


Please prepare the following tools

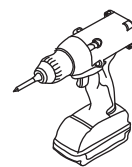    

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

<p>A x 34</p>  <p>M5 x 42 mm</p>	<p>B x 34</p>  <p>Ø 15 x 10 mm</p>	<p>C x 20</p>  <p>M6 x 12 mm</p>	<p>D x 6</p>  <p>M6 x 20 mm</p>	<p>E x 12</p>  <p>M6 x 25 mm</p>
<p>F x 10</p>  <p>M6 x 35 mm</p>	<p>G x 72</p>  <p>M3.5 x 14 mm</p>	<p>H x 4</p>  <p>DW</p>	<p>I x 3</p> 	<p>J x 2</p>  <p>Ø 4 x 63 mm</p>
<p>K x 12</p>  <p>M4 x 18 mm</p>	<p>L x 6</p>  <p>220-96 mm</p>	<p>M x 38</p>  <p>Ø 1.5 x 15 mm</p>	<p>N x 8</p>  <p>15 x 10 mm</p>	<p>O x 2</p> 
<p>P x 2</p> 	<p>Q x 2</p>  <p>Ø 8 x 60 mm</p>	<p>R x 2</p>  <p>Ø 5 x 55 mm</p>	<p>T x 3</p> 	<p>U x 12</p>  <p>M3.5 x 12 mm</p>
<p>V x 18</p>  <p>M5 x 40 mm</p>	<p>x 1</p>  <p>#4</p>			

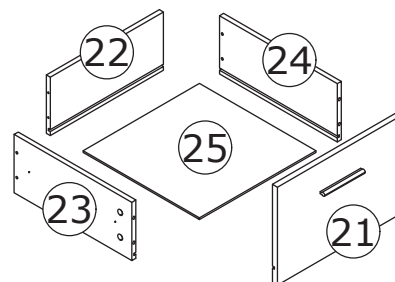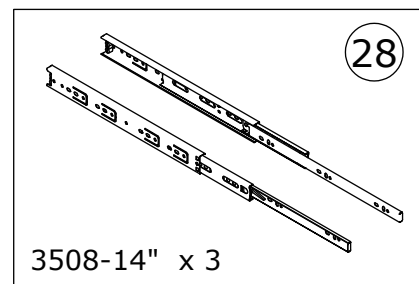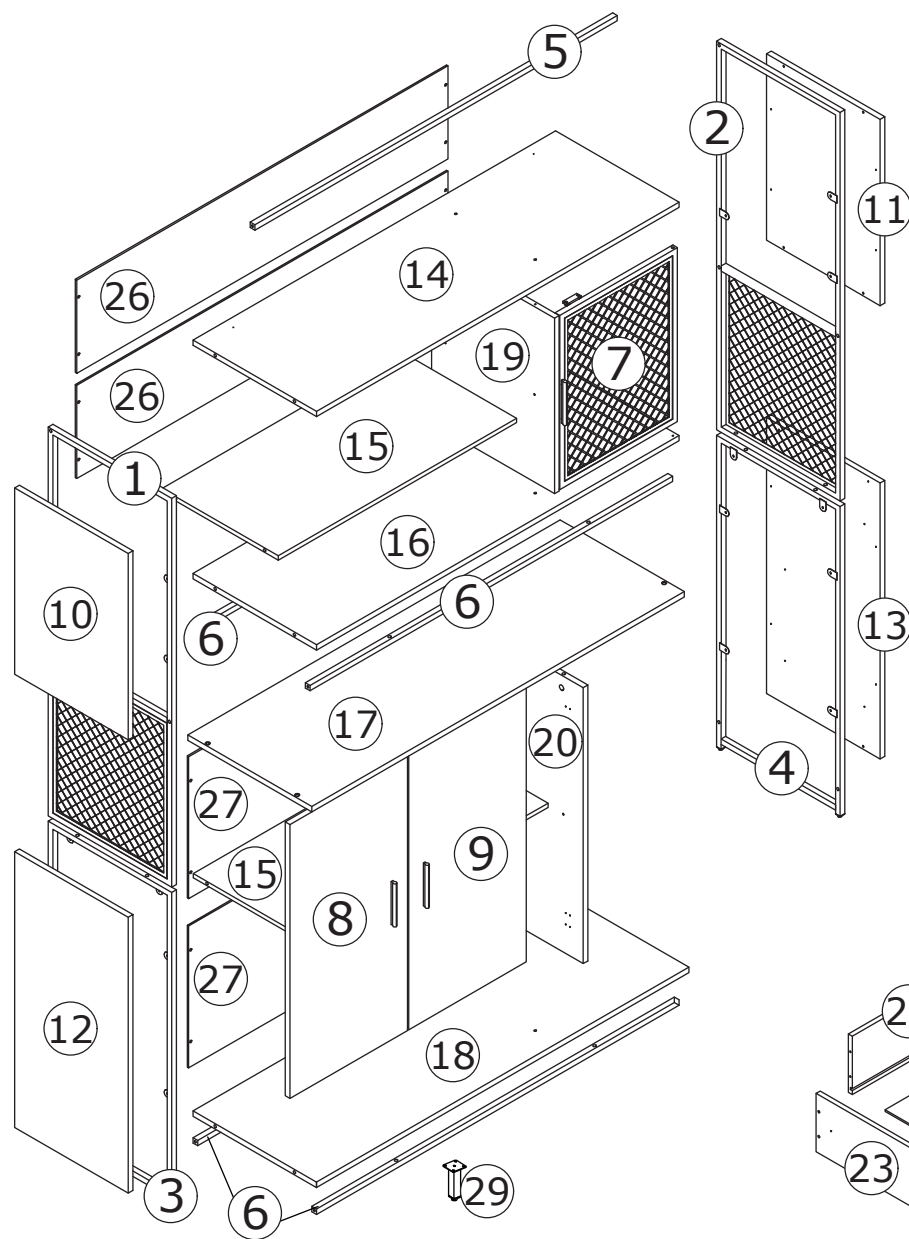   

x3

 
⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.


*This is a permanent label.
Do not remove!*

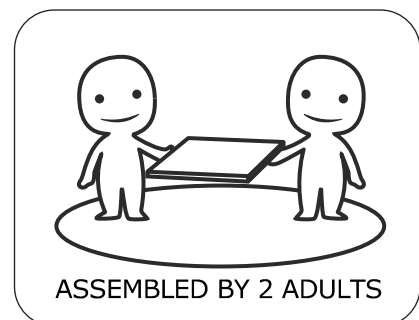


Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.

 
Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

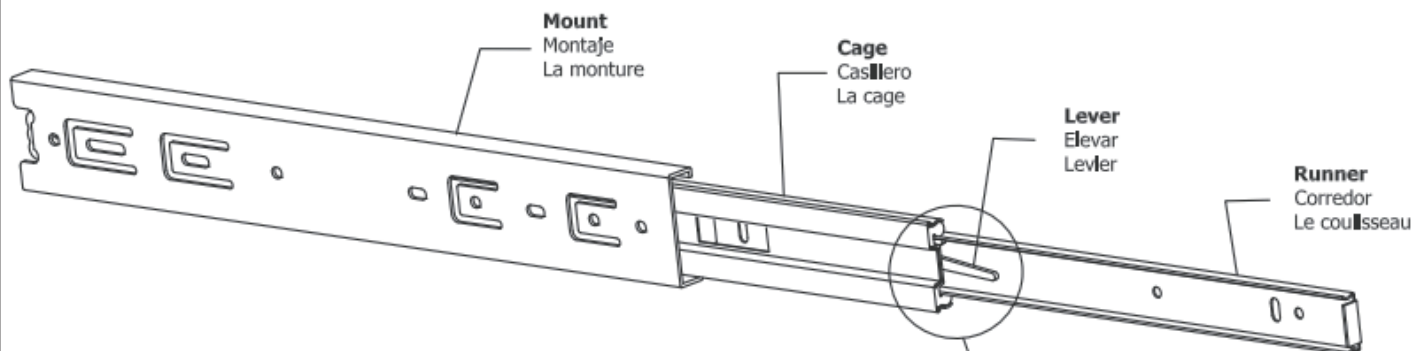

 
STEP 1: Extend Slide
Extender la diapositiva
Extendre la diapositive

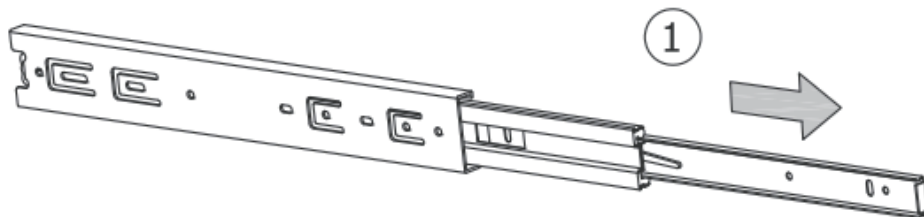

 STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier

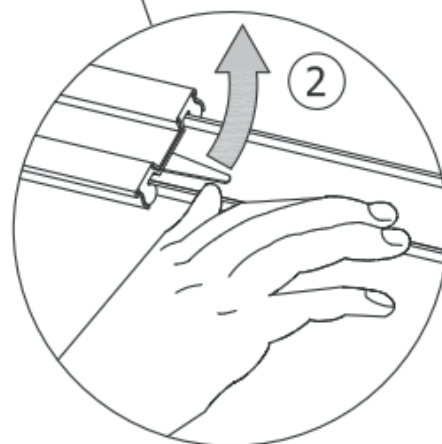

 
STEP 3: Remove Runner
Quitar el corredor
Enlever le coureur

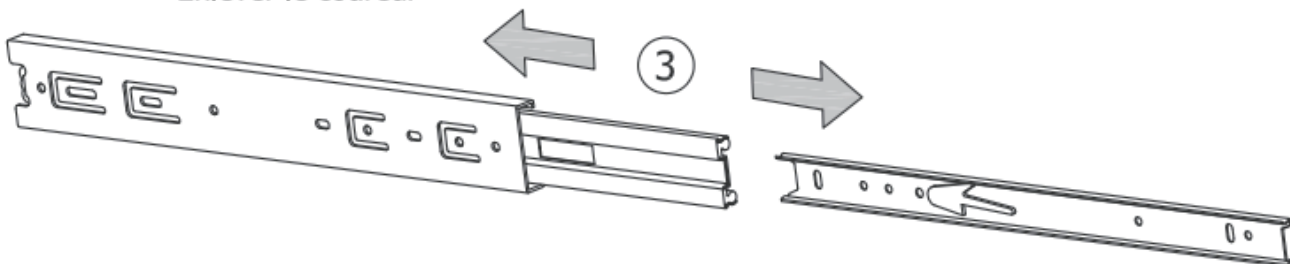




1

    A x 2
M5 x 42 mm


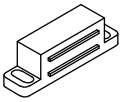
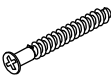
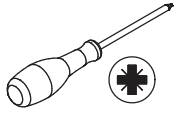
B x 2
Ø 15 x 10 mm





Screw eccentric rod(A) into board 19 at first.
Connect board 15 to board 19, add cam lock(B) into board 15 and turn clockwise to tighten as shown.

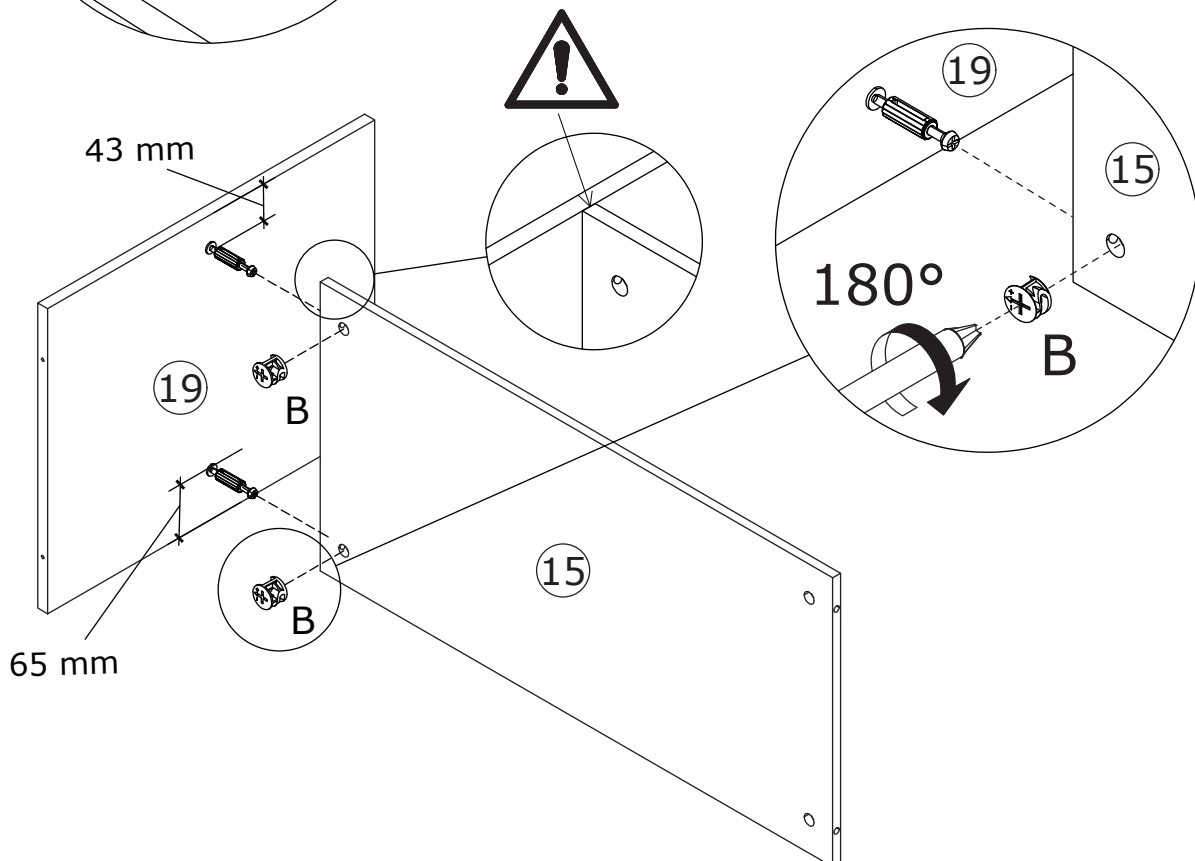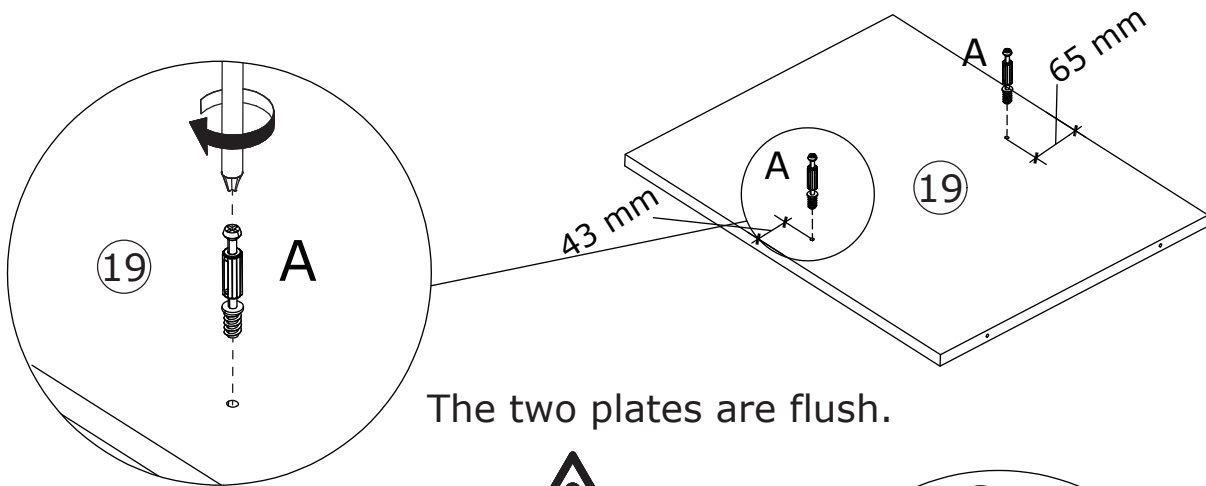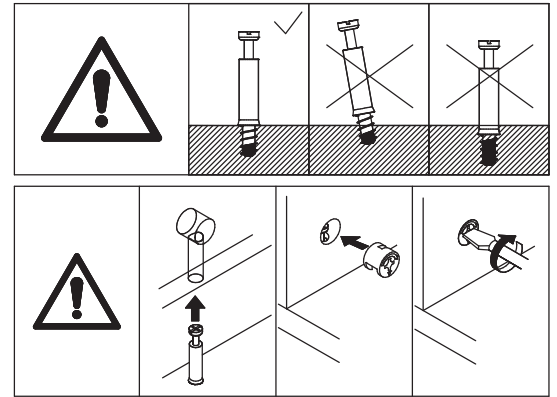


2

<p>G x 2</p>  <p>M3.5 x 14 mm</p>	<p>I x 1</p> 	<p>V x 2</p>  <p>M5 x 40 mm</p>	
--	--	--	---

   
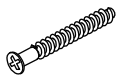

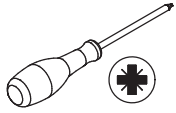
Fix part(I) to board 14 with screw(G) at first.
Fix board 14 to board 19 with screw(V) as shown.

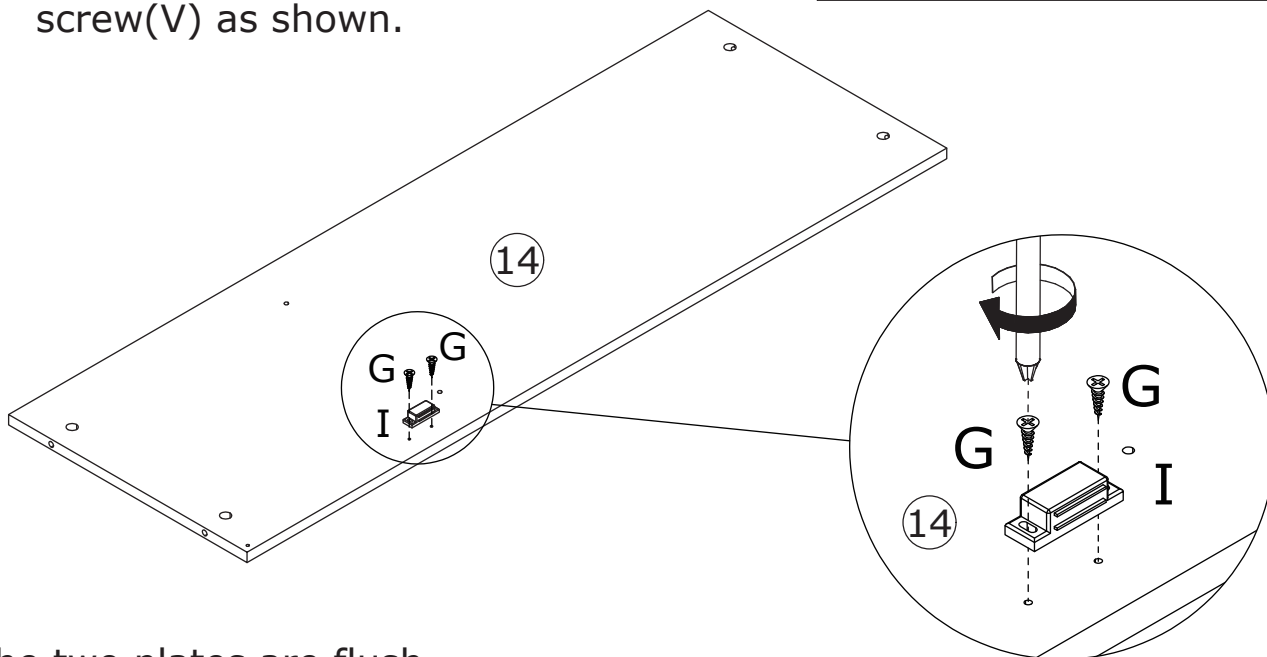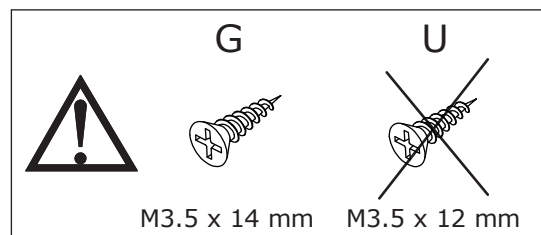


The two plates are flush.

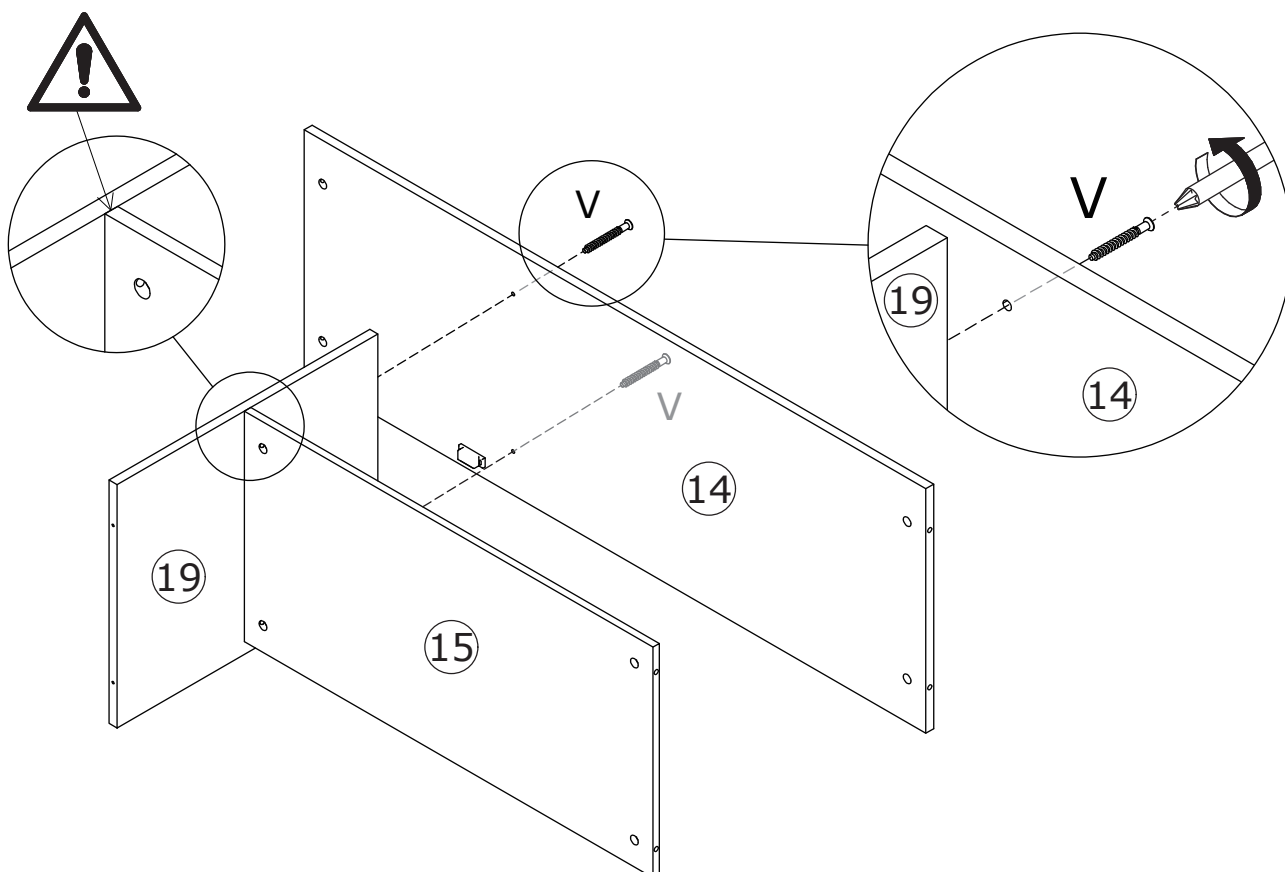

3


<p>E x 4</p>  <p>M6 x 25 mm</p>	<p>V x 2</p>  <p>M5 x 40 mm</p>	<p>x 1</p>  <p>#4</p>	
--	--	--	---

 Fix tube 6 to board 16 with screw(E) at first.
Fix board 16 to board 19 with screw(V) as shown.

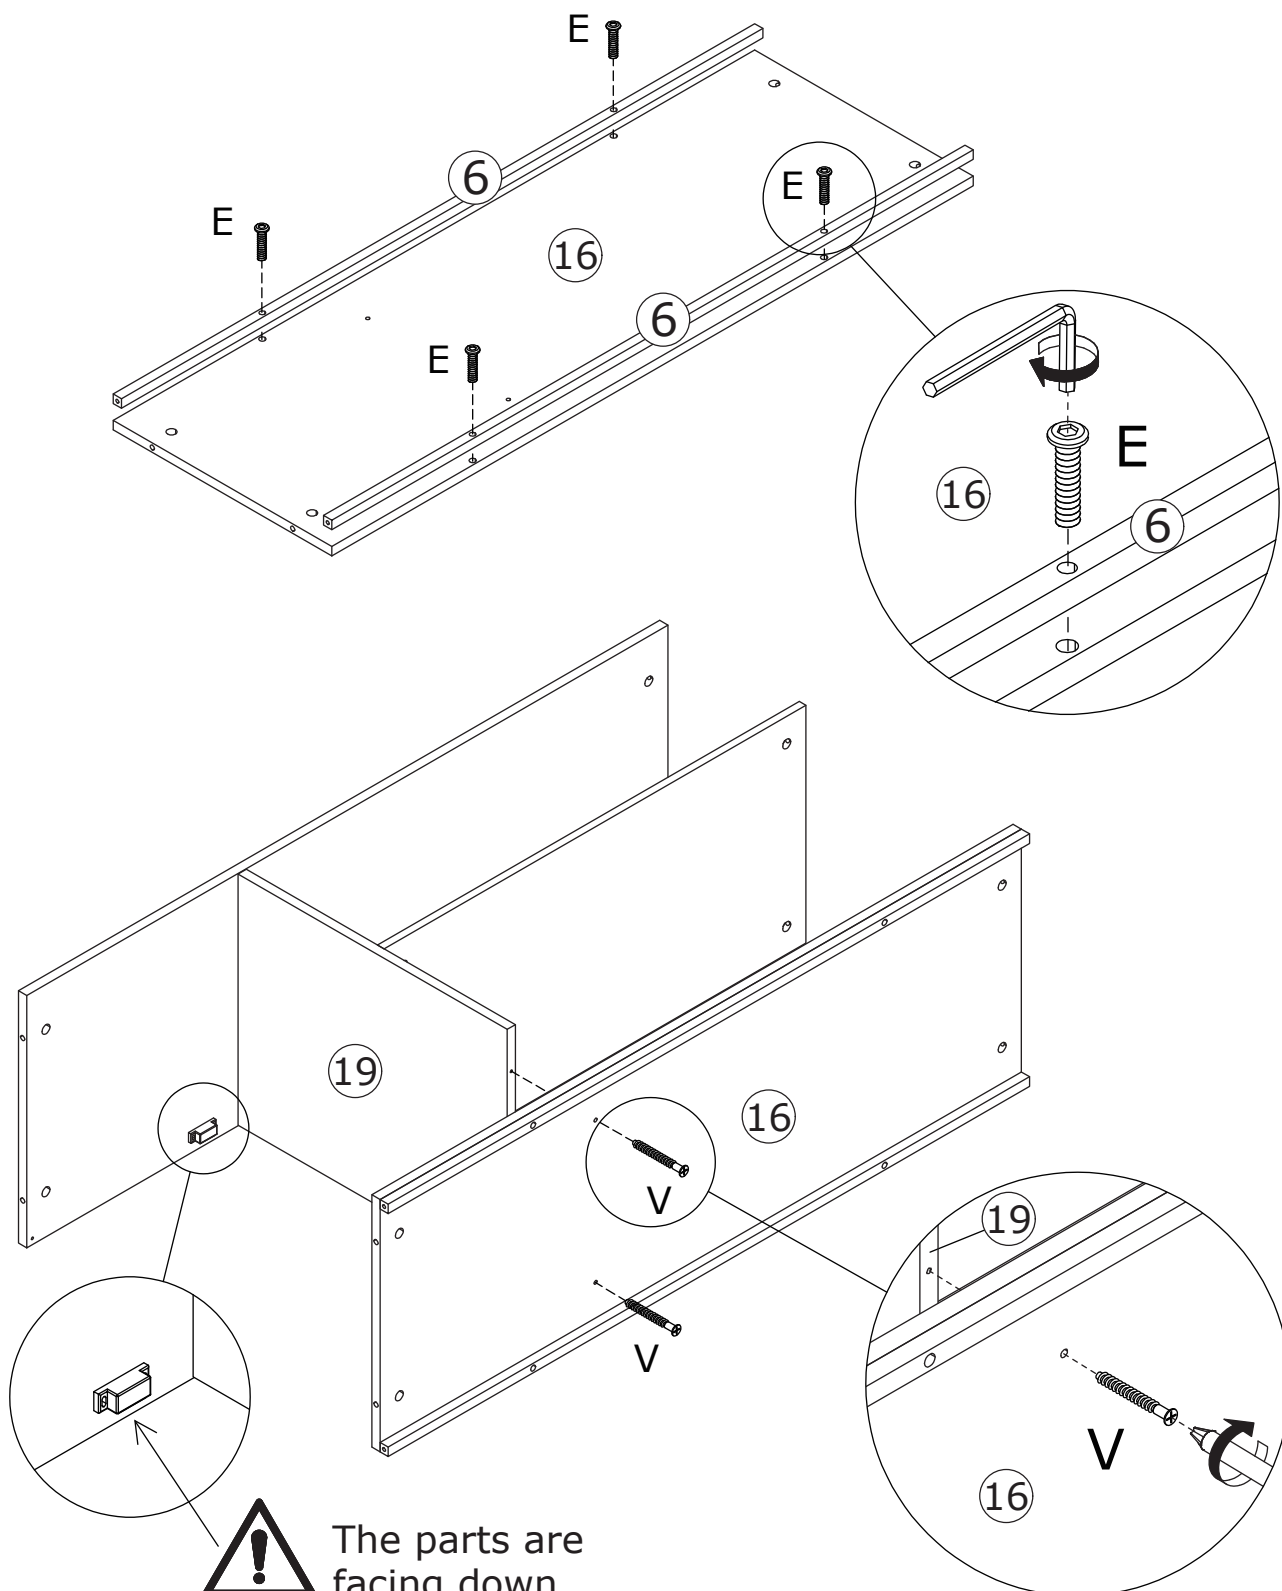

4

 A x 6



M5 x 42 mm

B x 6



Ø 15 x 10 mm

F x 2

 


M6 x 35 mm

G x 4

 
 
 
 
 
 
 
 


M3.5 x 14 mm





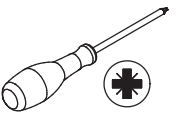


Fix board 10 to iron plate 1 with screw(G), and screw eccentric rod(A) into board 10 at first.

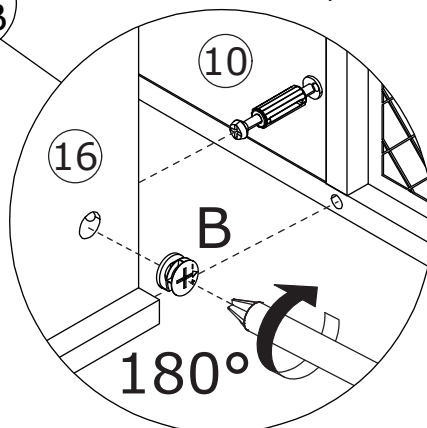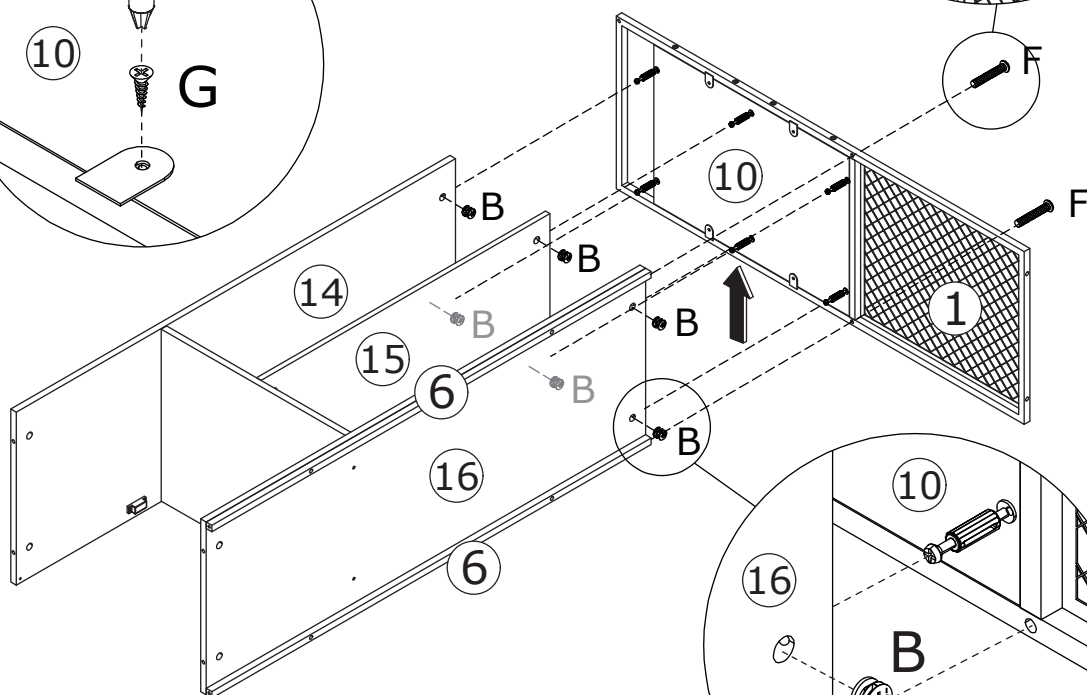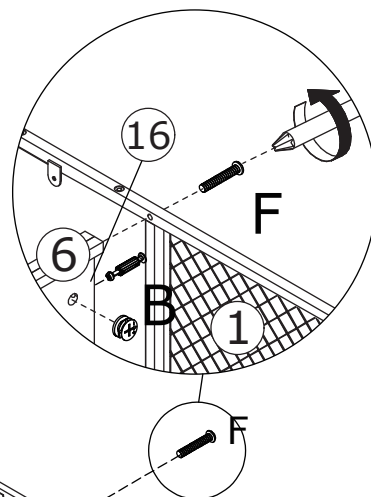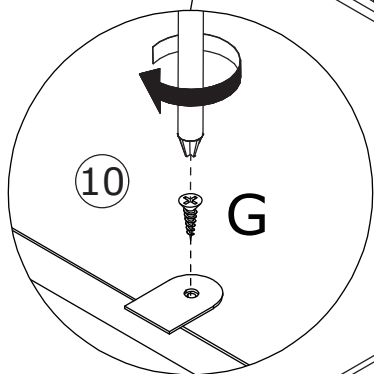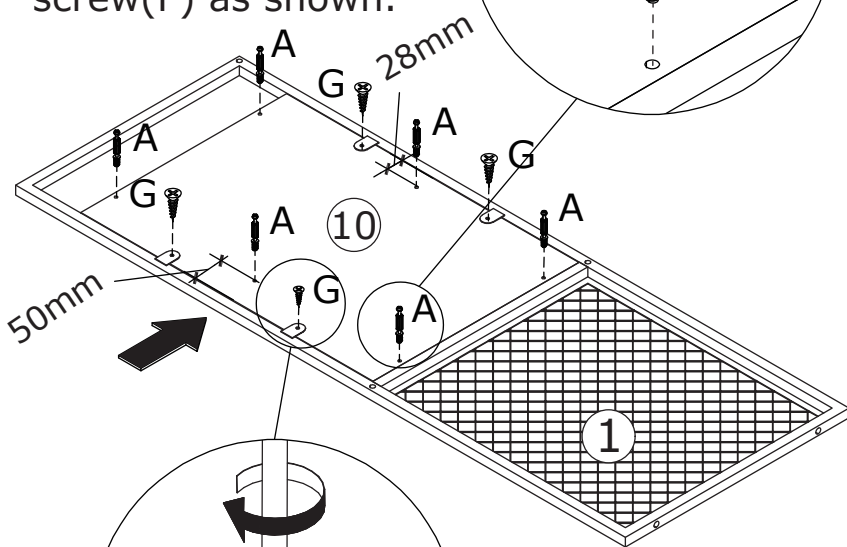 
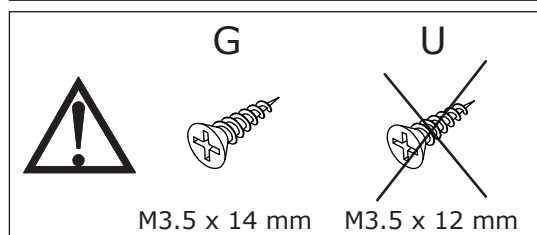 
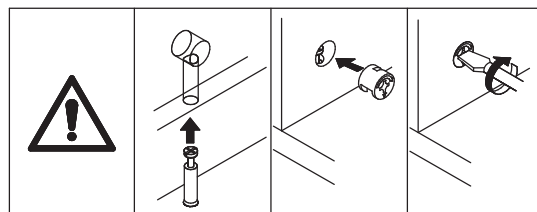 
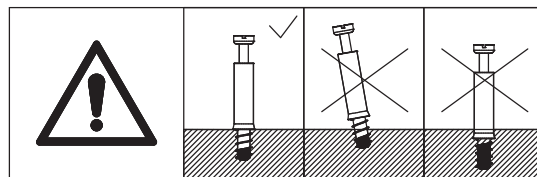 
Attach board 10 to board 14, 15 and 16, add cam lock(B) into board 14, 15, 16 and turn clockwise to tighten, then fix iron plate 1 to tube 6 with screw(F) as shown.



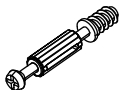




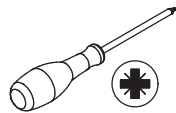
5

<p>A x 4</p>  <p>M5 x 42 mm</p>	<p>B x 4</p>  <p>Ø 15 x 10 mm</p>	<p>F x 4</p>  <p>M6 x 35 mm</p>	<p>G x 4</p>  <p>M3.5 x 14 mm</p>	
--	--	--	---	---

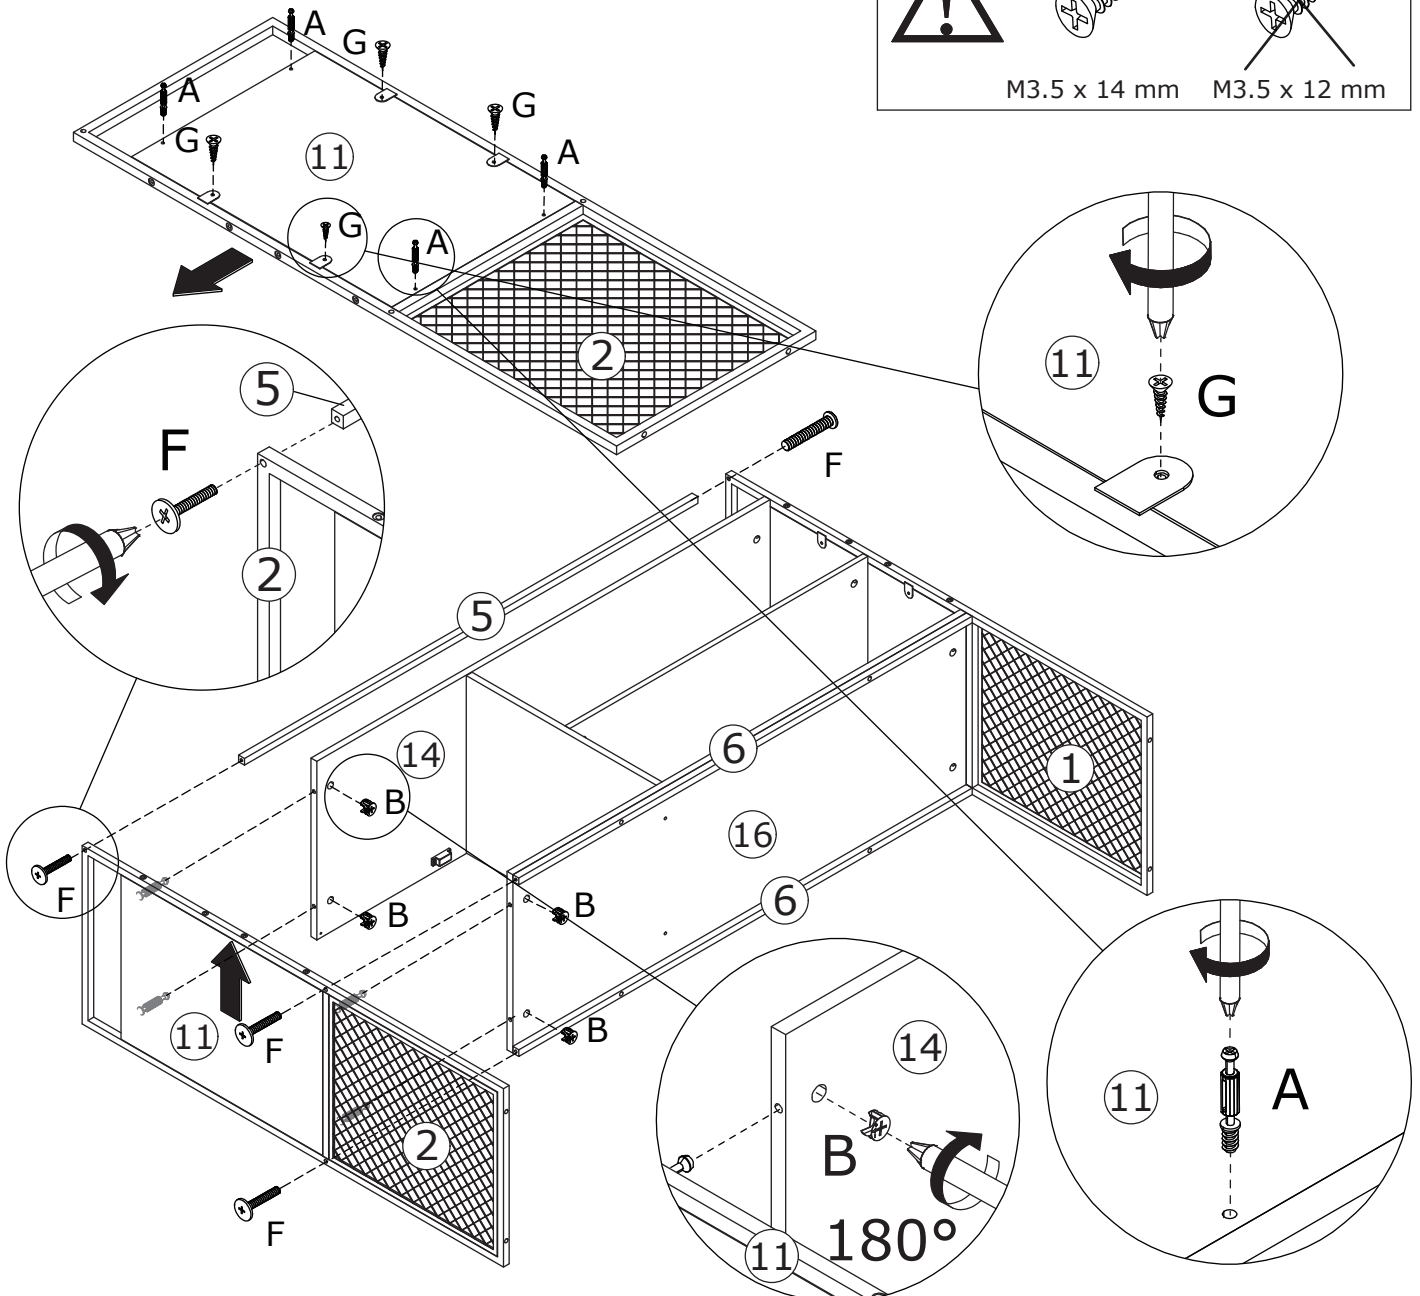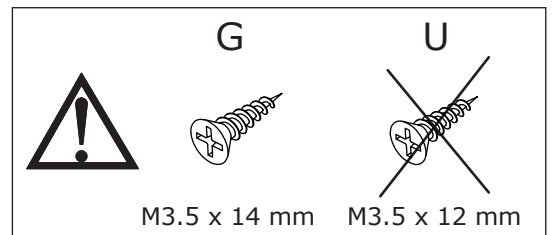
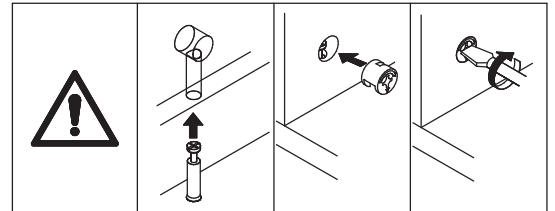
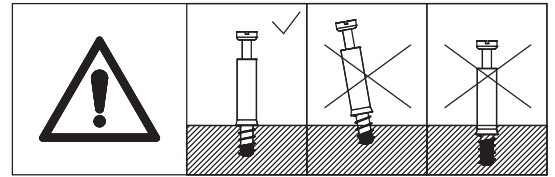
Fix board 11 to iron plate 2 with screw(G), and screw eccentric rod(A) into board 11 at first. Attach board 11 to board 14 and 16, add cam lock(B) into board 14, 16 and turn clockwise to tighten, then fix iron plate 2 to tube 6 with screw(F) as shown. Fix tube 5 to iron plate 1 and 2 with screw(F) as shown.

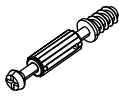

6
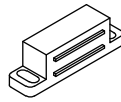
<p>A x 2</p>  <p>M5 x 42 mm</p>	<p>E x 4</p>  <p>M6 x 25 mm</p>	<p>G x 4</p>  <p>M3.5 x 14 mm</p>	<p>I x 2</p> 	<p>x 1</p>  <p>#4</p>	
--	--	--	--	--	---


 
 
 
Fix part(I) to board 17 with screw(G) and screw eccentric rod(A) into at first. Fix board 17 to iron plate 1 and 2 with screw(E) as shown.

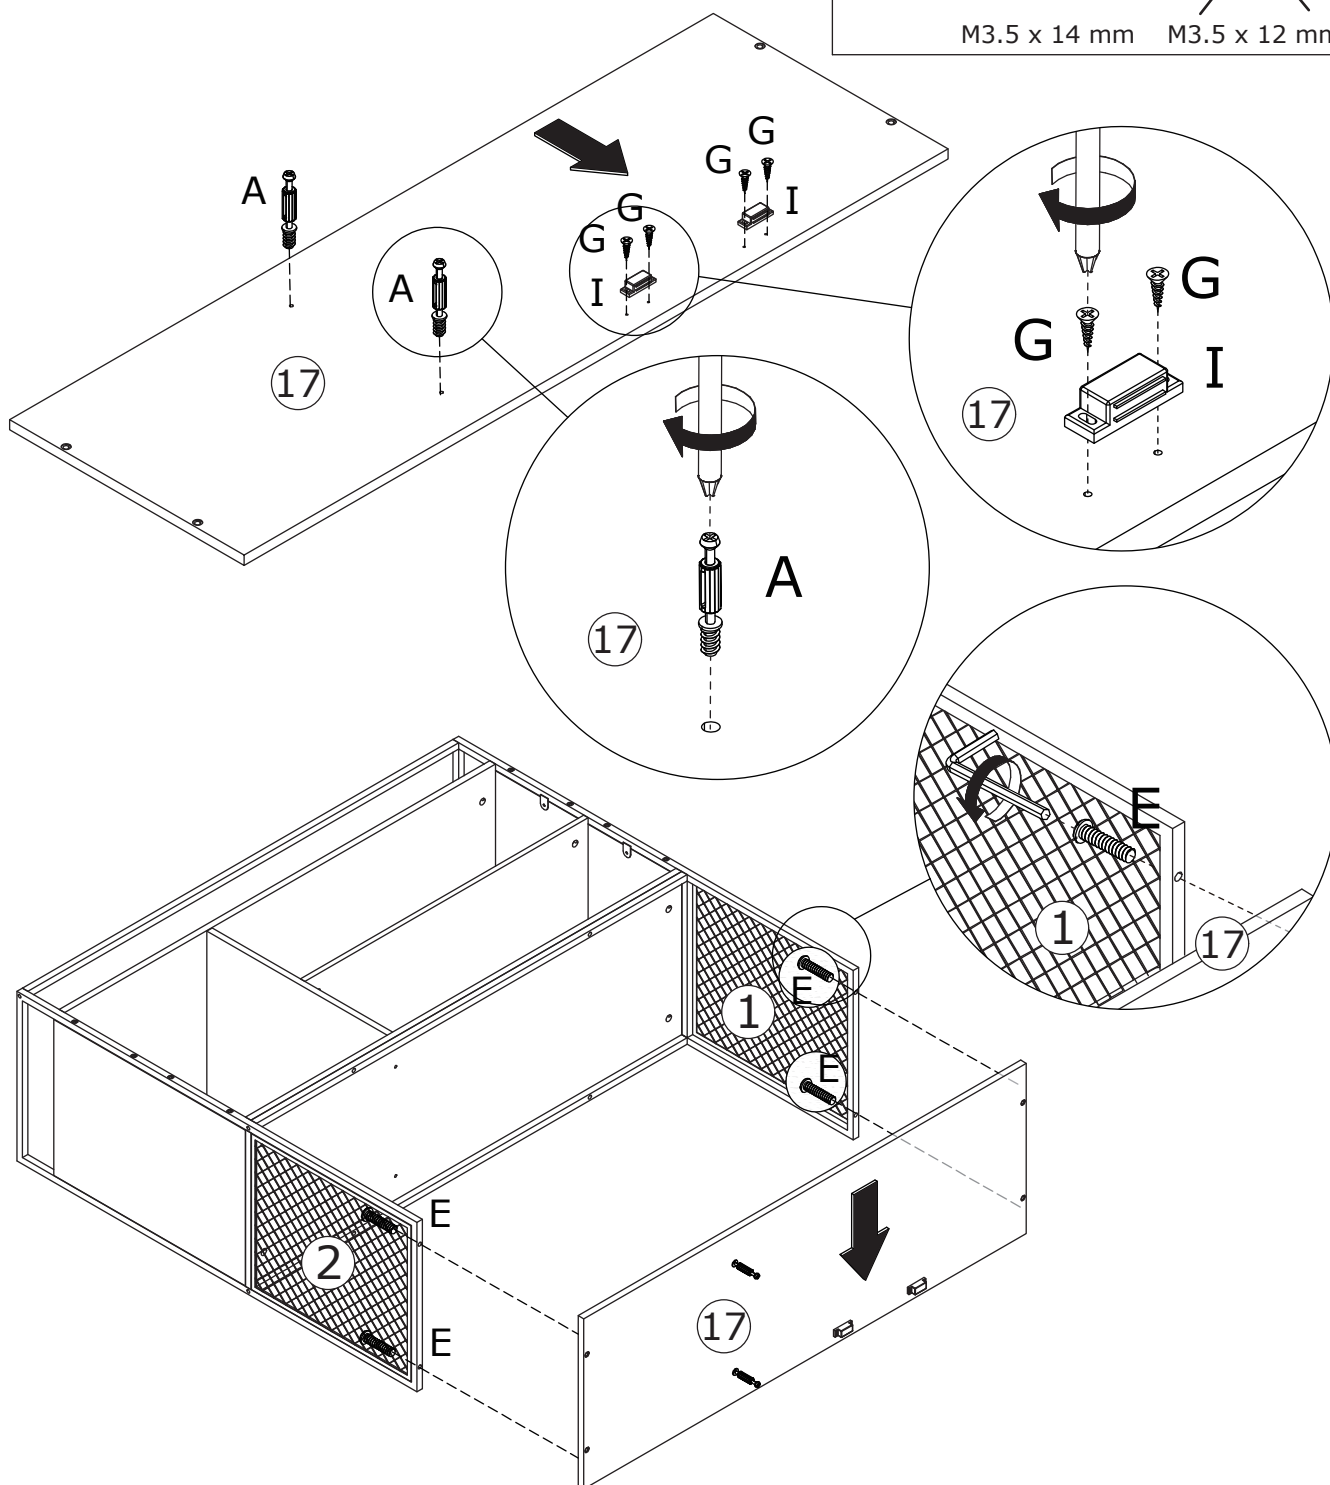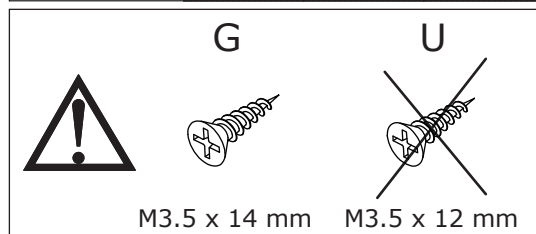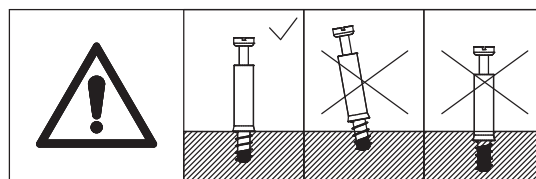

7



    Fix rail part 28 to board 20 with screw(G) as shown.
Flip to back, screw eccentric rod(A) into board 20 as shown.

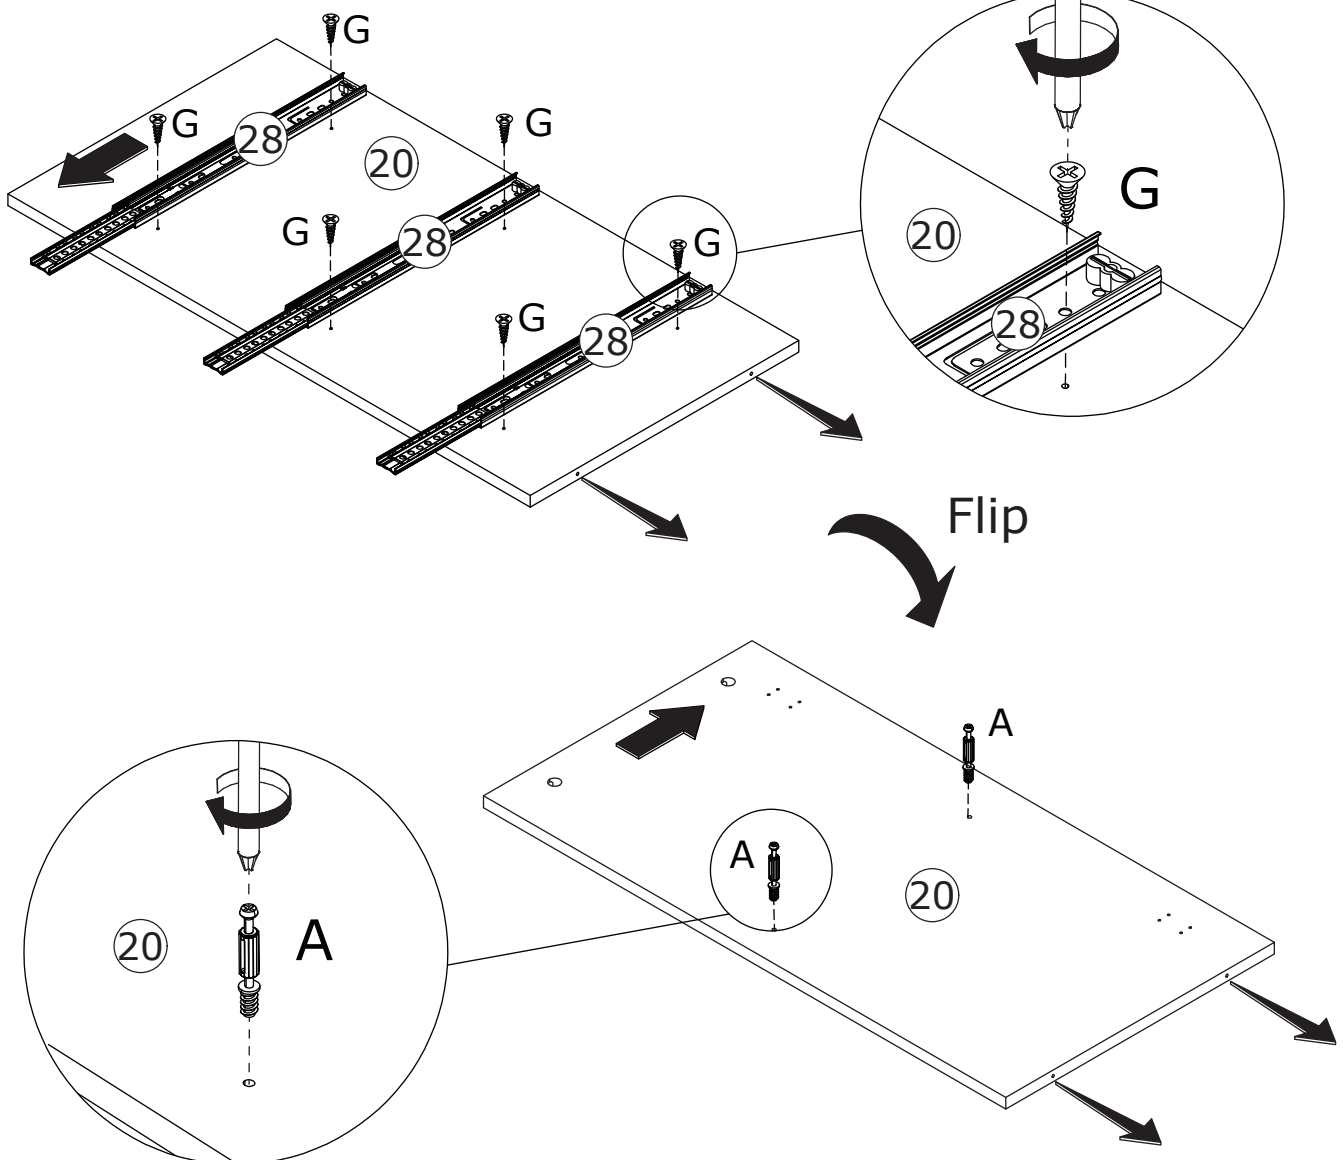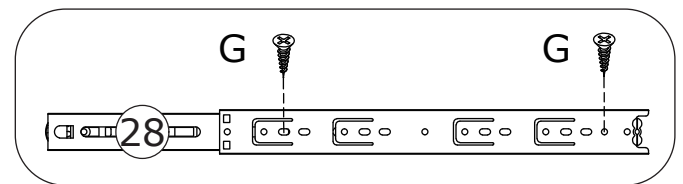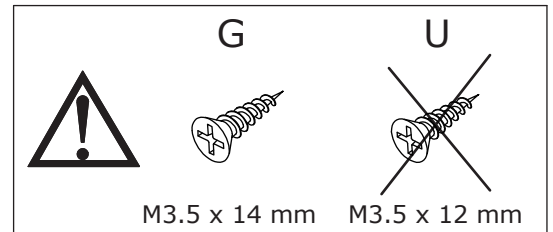
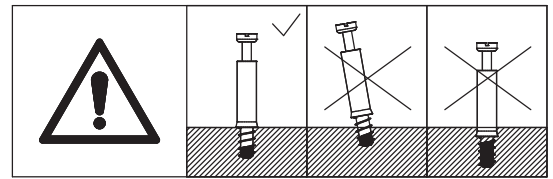


8


B x 2



 Ø15 x 10 mm

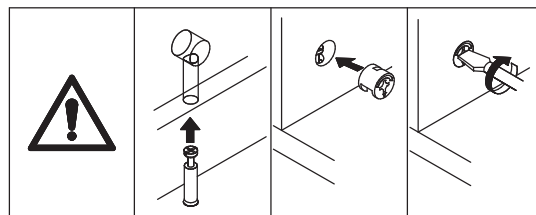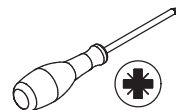

 Attach board 20 to board 17, add cam lock(B) into board 20 and turn clockwise to tighten as shown.


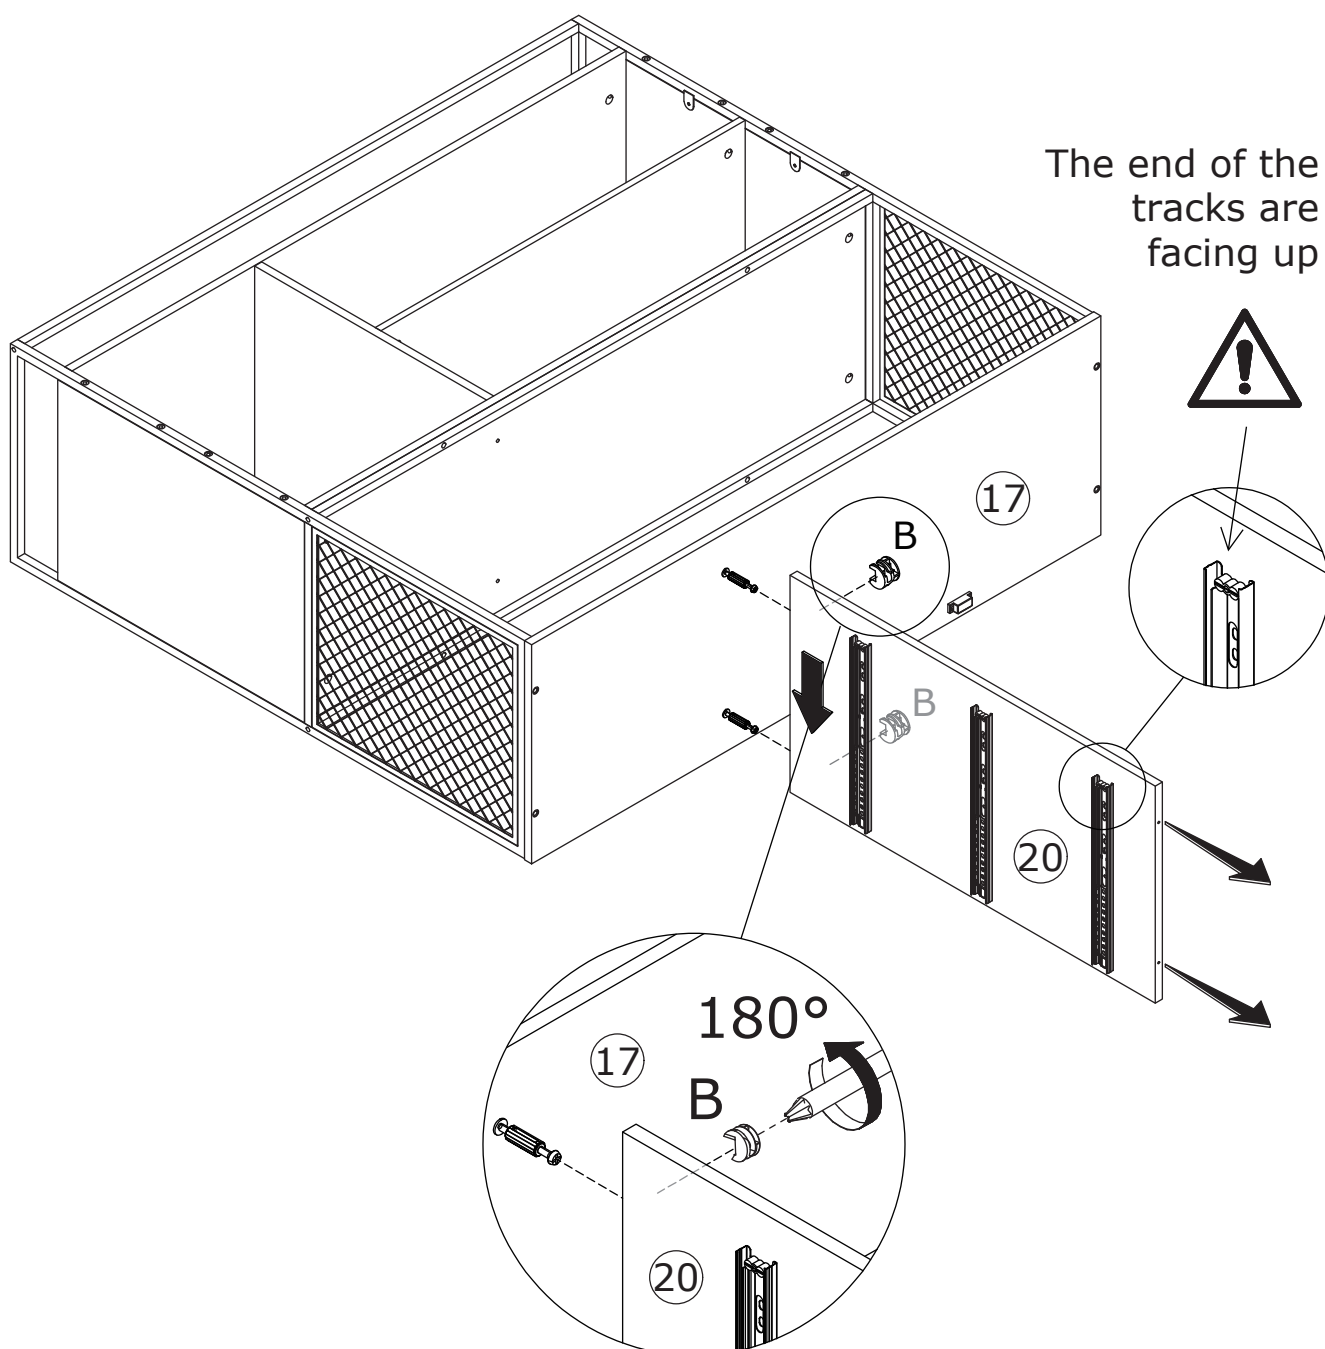


9


B x 2



 Ø 15 x 10 mm

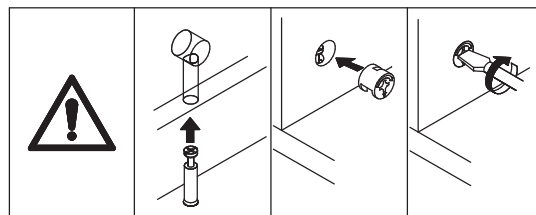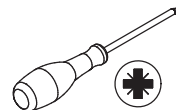

 Attach board 15 to board 20, add cam lock(B)
into board 15 and turn clockwise to tighten as shown.

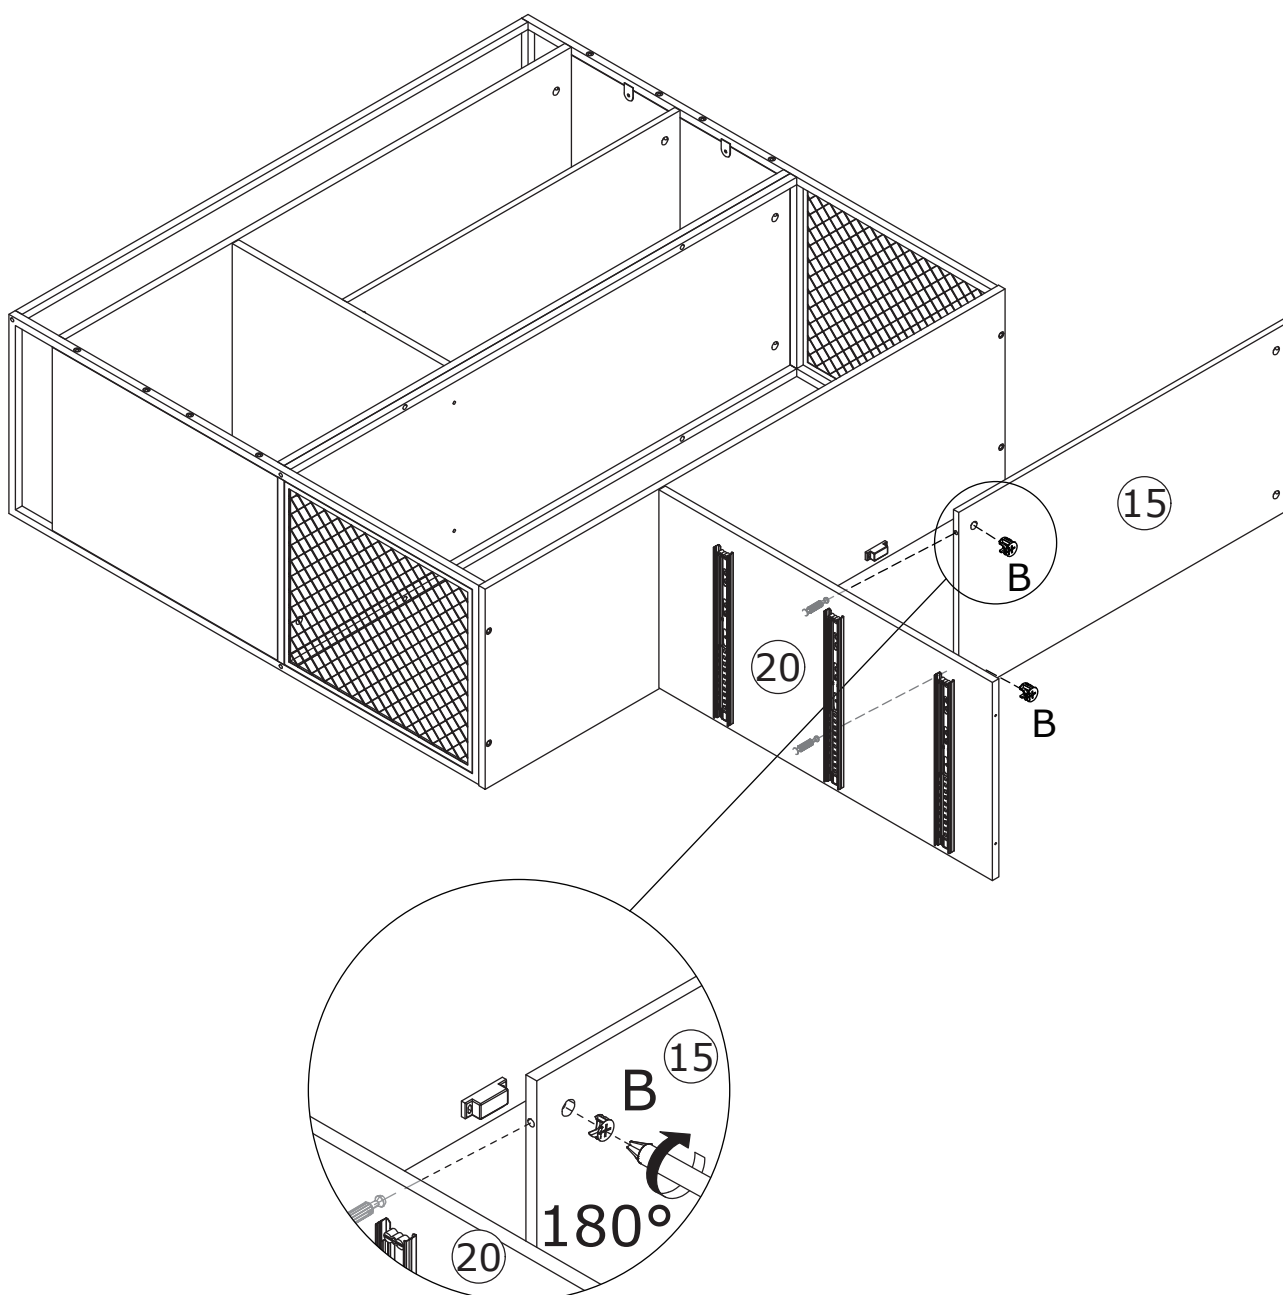

10

C x 4




M6 x 12 mm

x 1



#4

 Fix iron plate 3 and 4 to board 17
with screw(C) as shown.

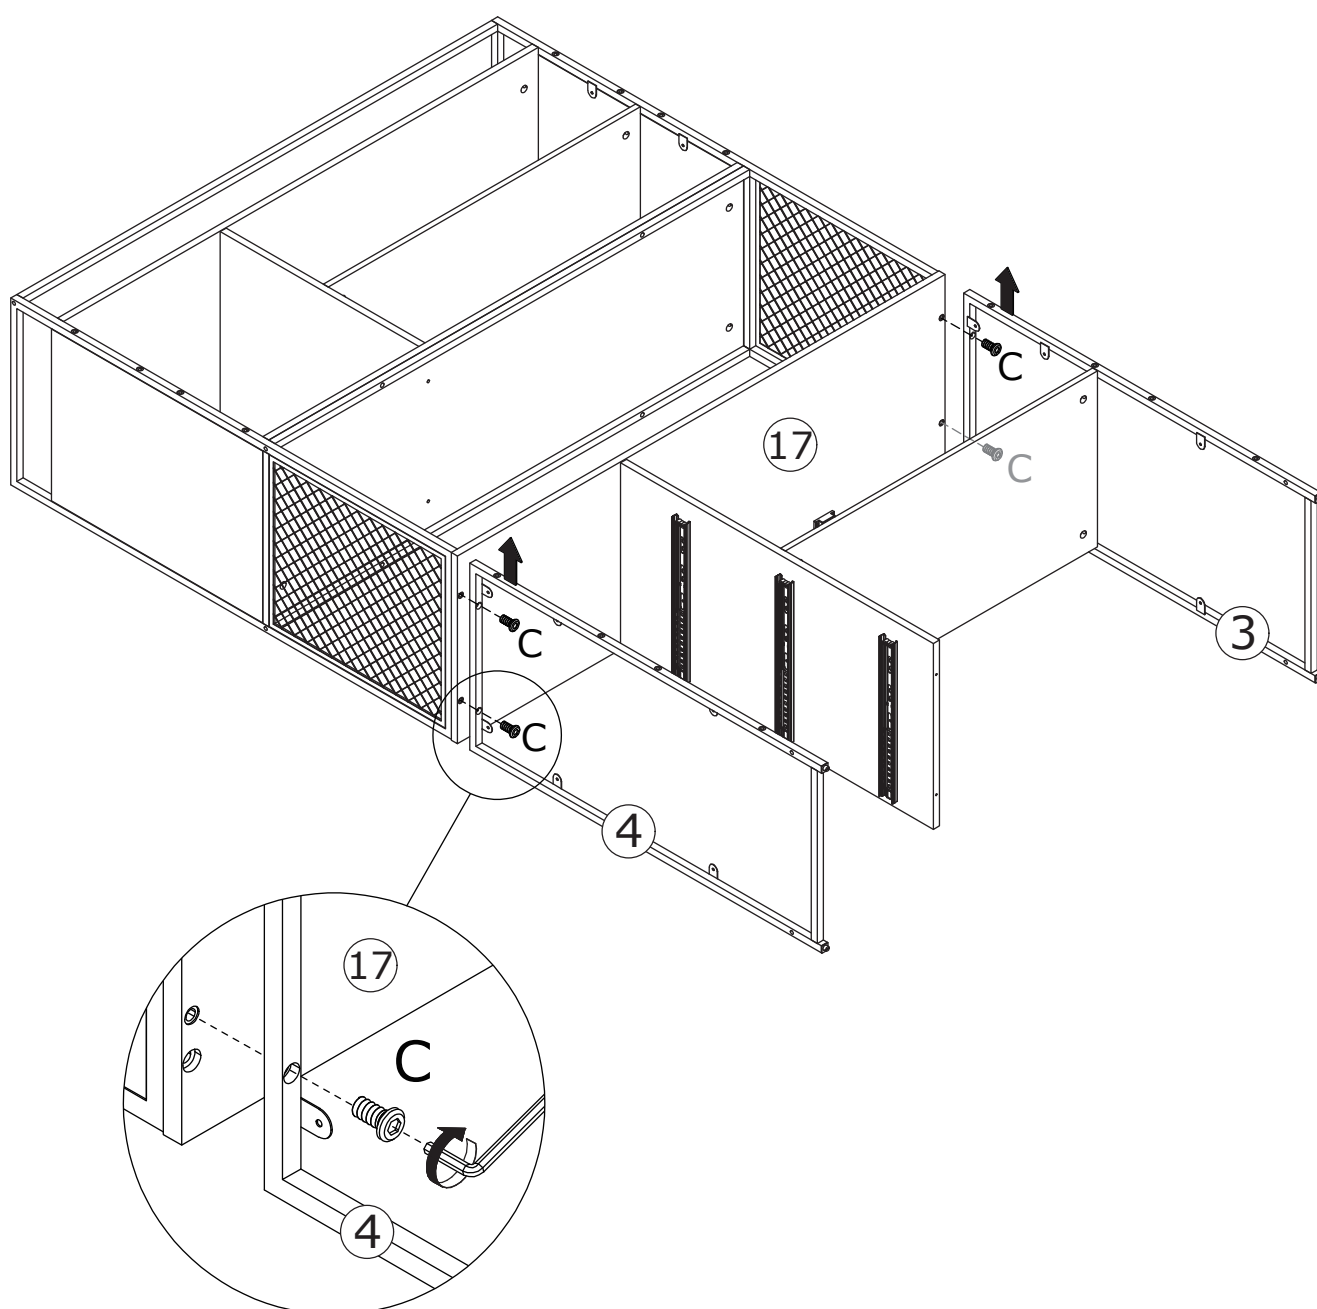

11

E x 4



M6 x 25 mm

G x 4




M3.5 x 14 mm

x 1



#4

 Fix tube 6 to board 18 with screw(E) at first.
Fix cabinet support 29 to board 18 with screw(G) as shown.

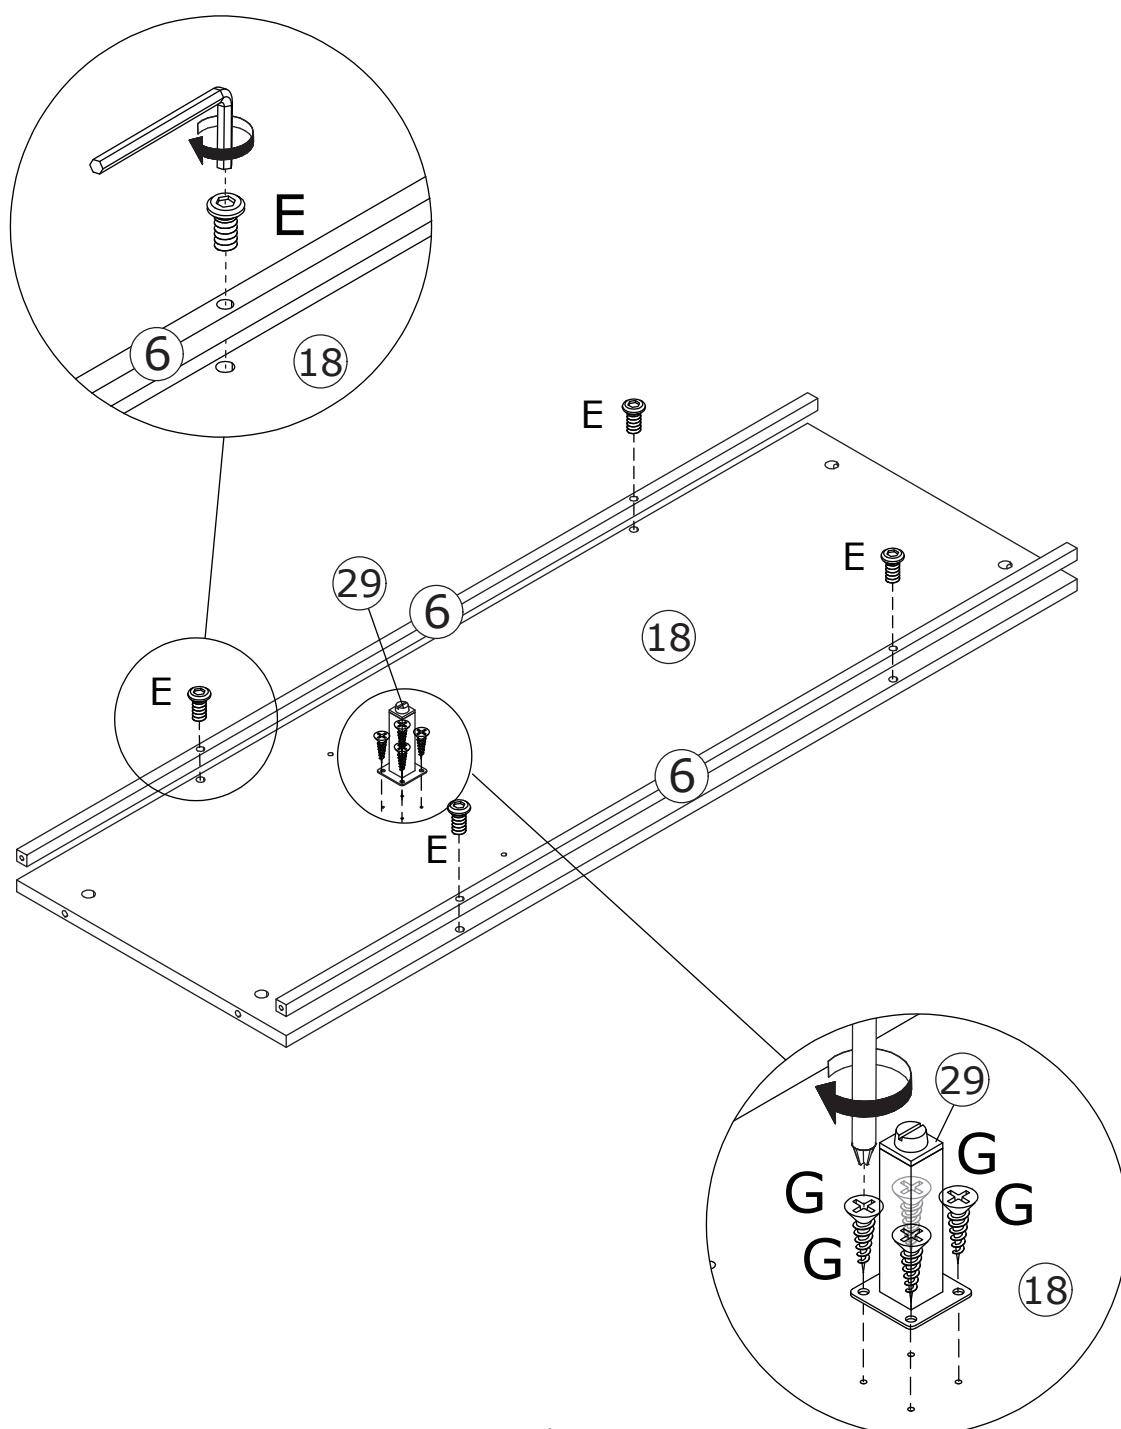


12



V x 2



 M5 x 40 mm



  Fix board 18 to board 20
with screw(V) as shown.

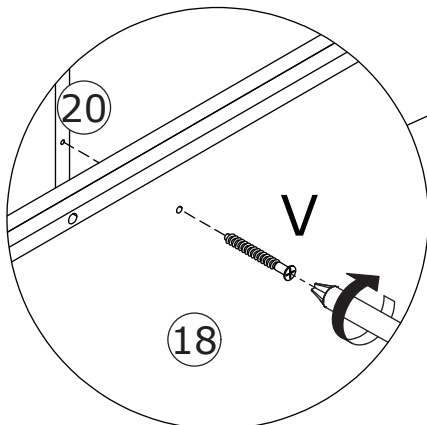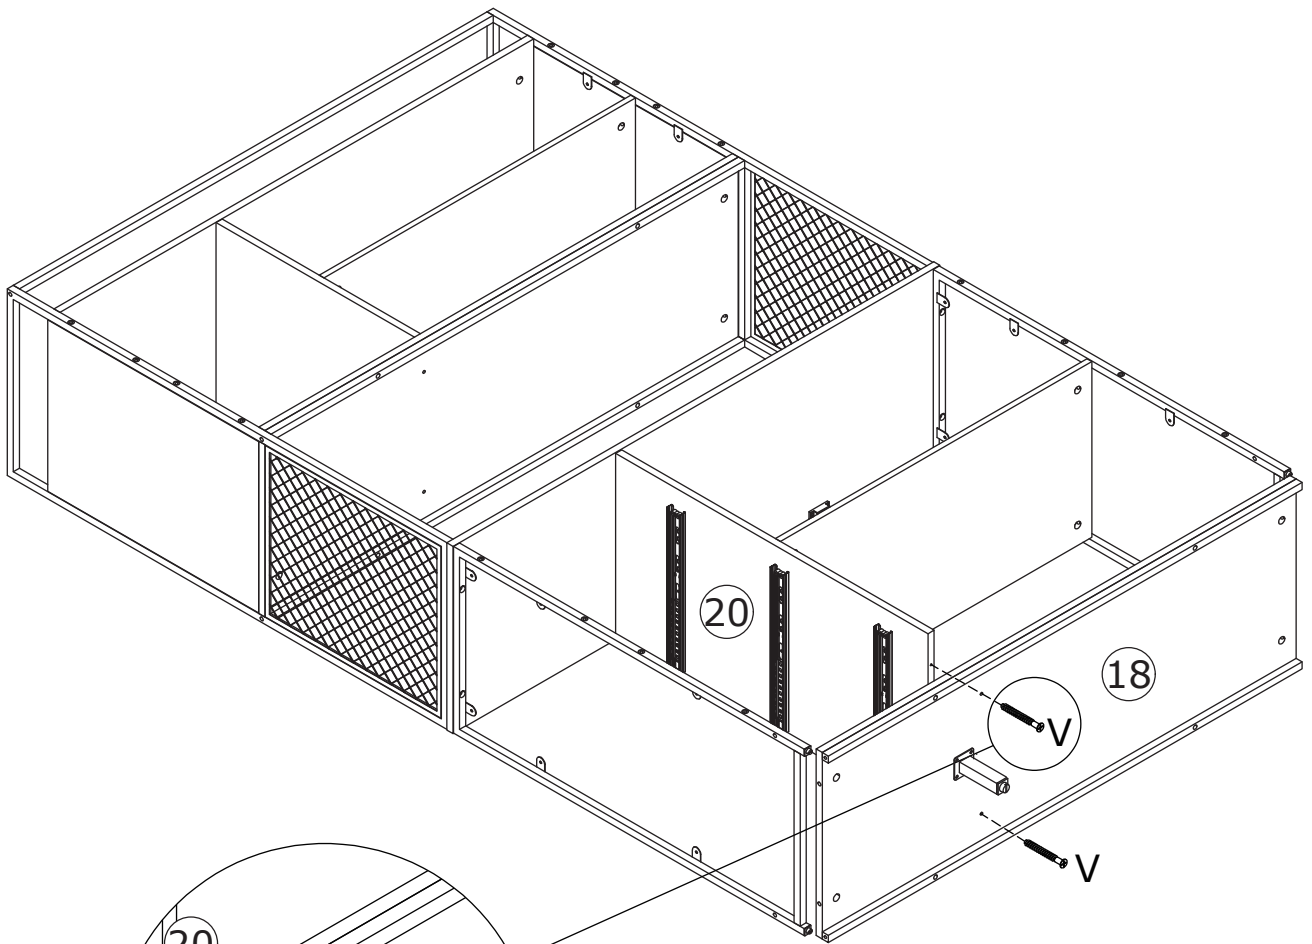


13


F x 4



 M6 x 35 mm





 
Fix tube 6 to iron plate 3
and 4 with screw(F) as shown.

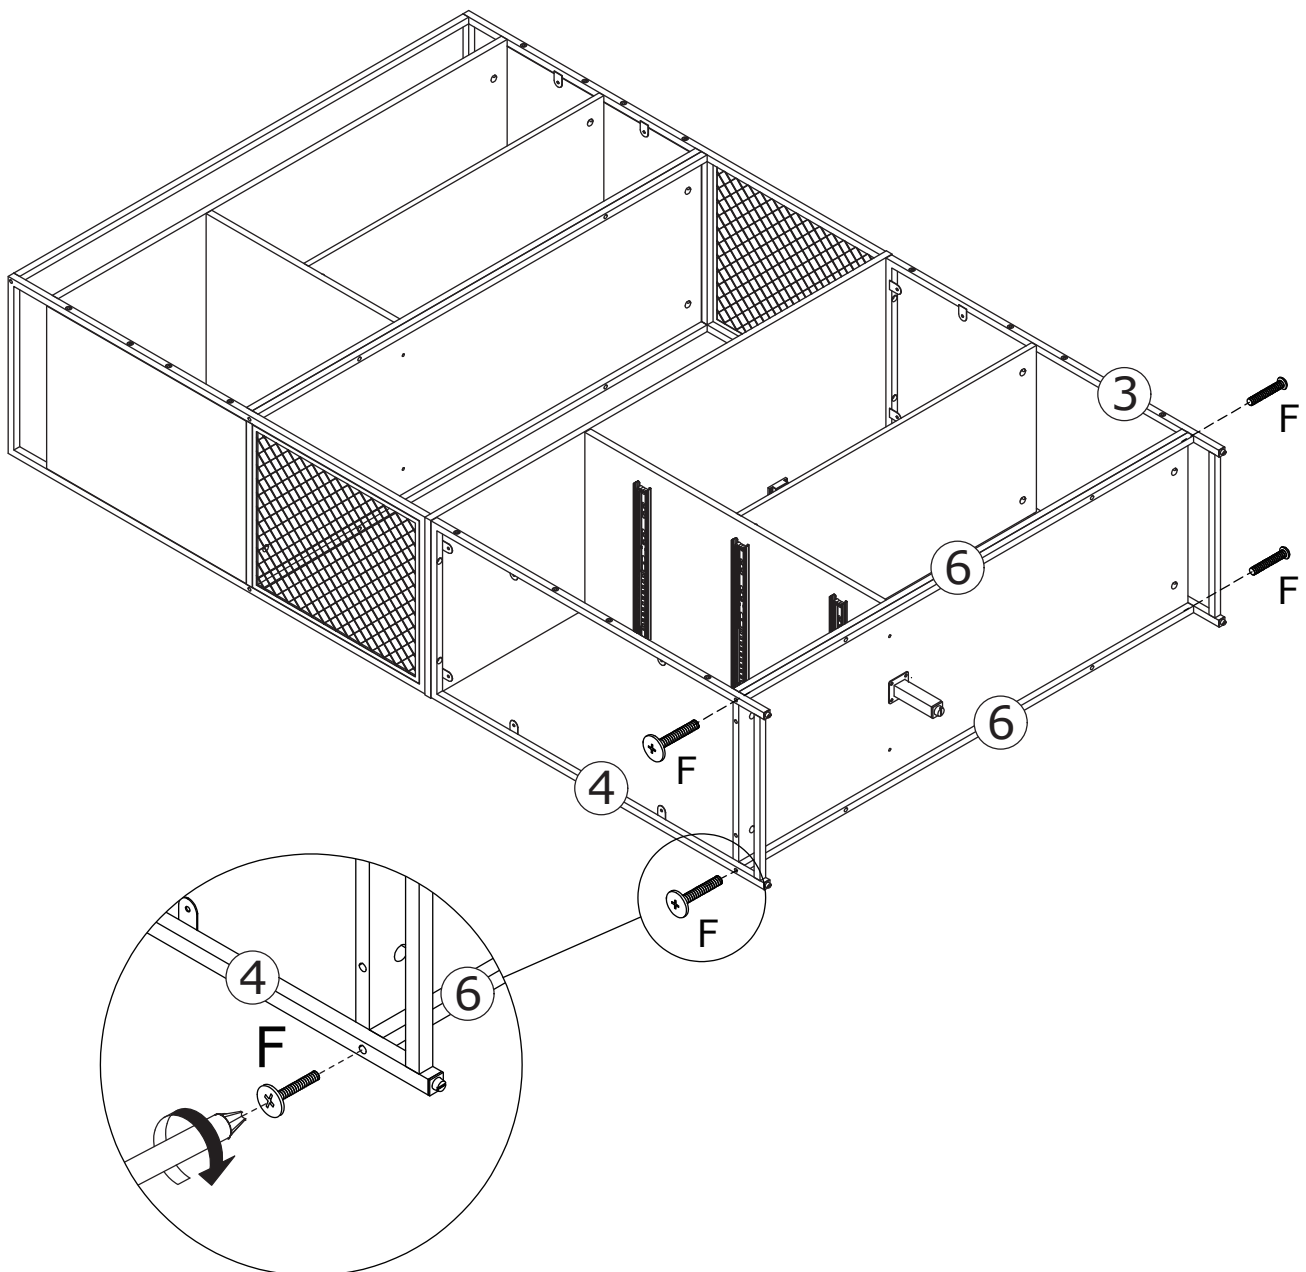



14

A x 2
M5 x 42 mm

   G x 6
M3.5 x 14 mm

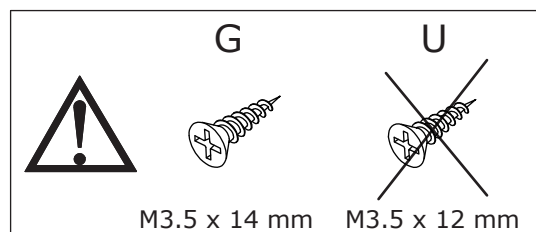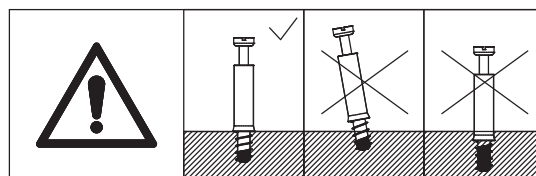

  Screw eccentric rod(A) into board 13 at first.
Fix rail part 28 to board 13 with screw(G) as shown.

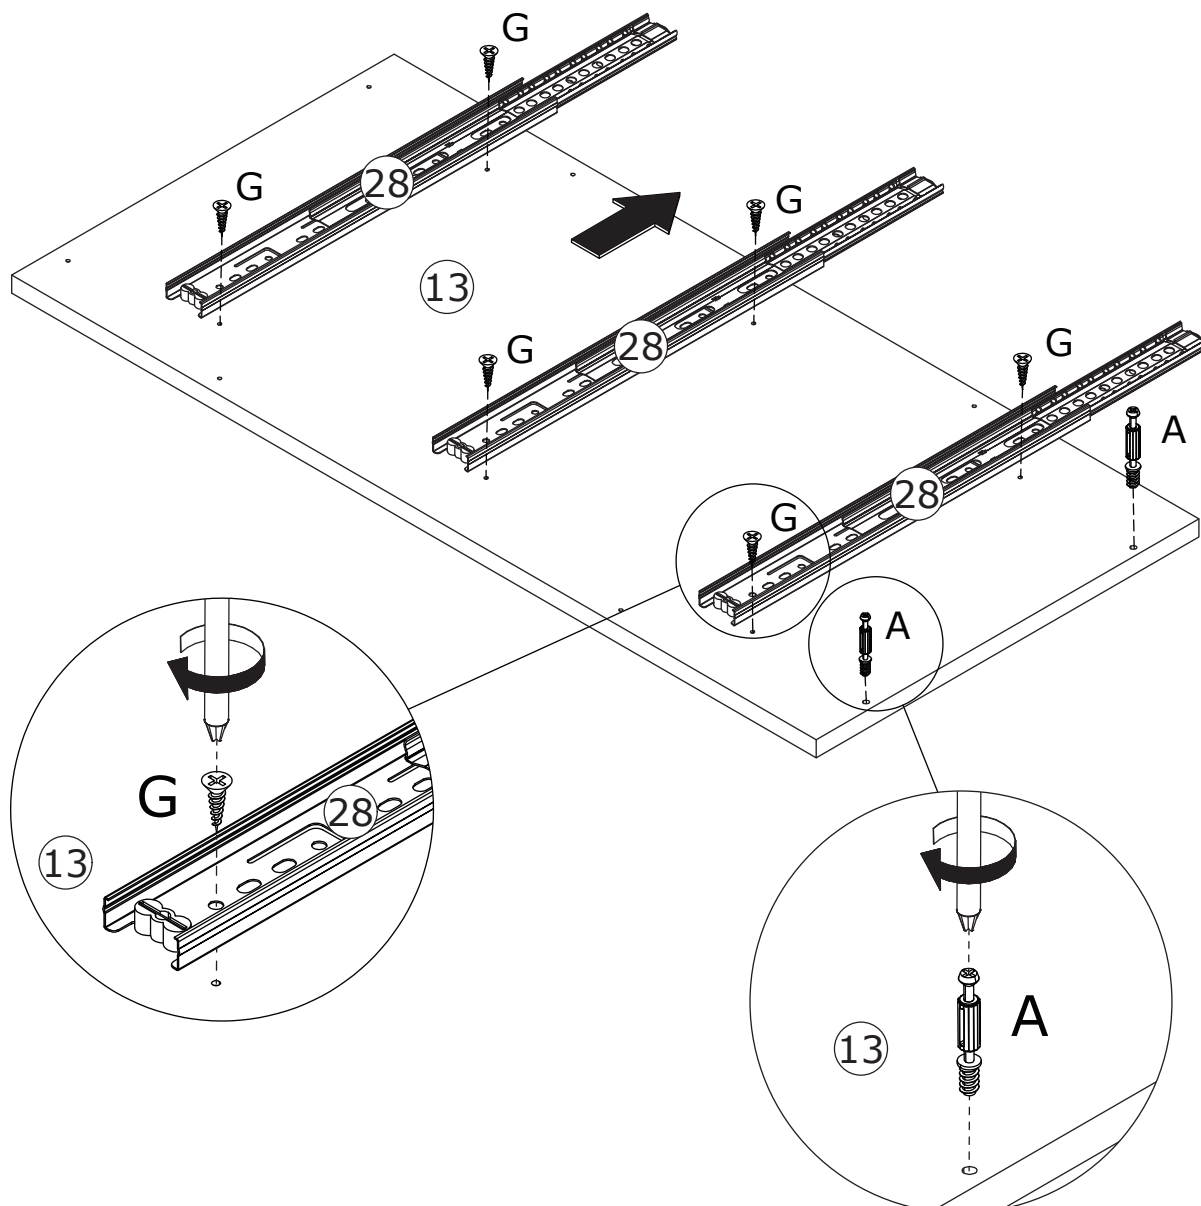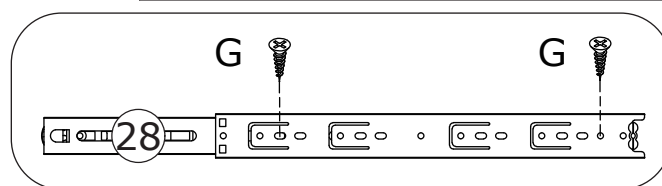

15

B x 2

 
 
 
 


Ø15 x 10 mm

G x 6



M3.5 x 14 mm

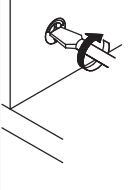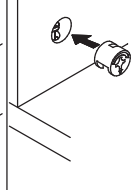

Attach board 13 to board 18,
add cam lock(B) into board 18 and
turn clockwise to tighten as shown.
Fix board 13 to iron plate 4 with
screw(G) as shown.

 


G




M3.5 x 14 mm

U

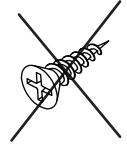


M3.5 x 12 mm

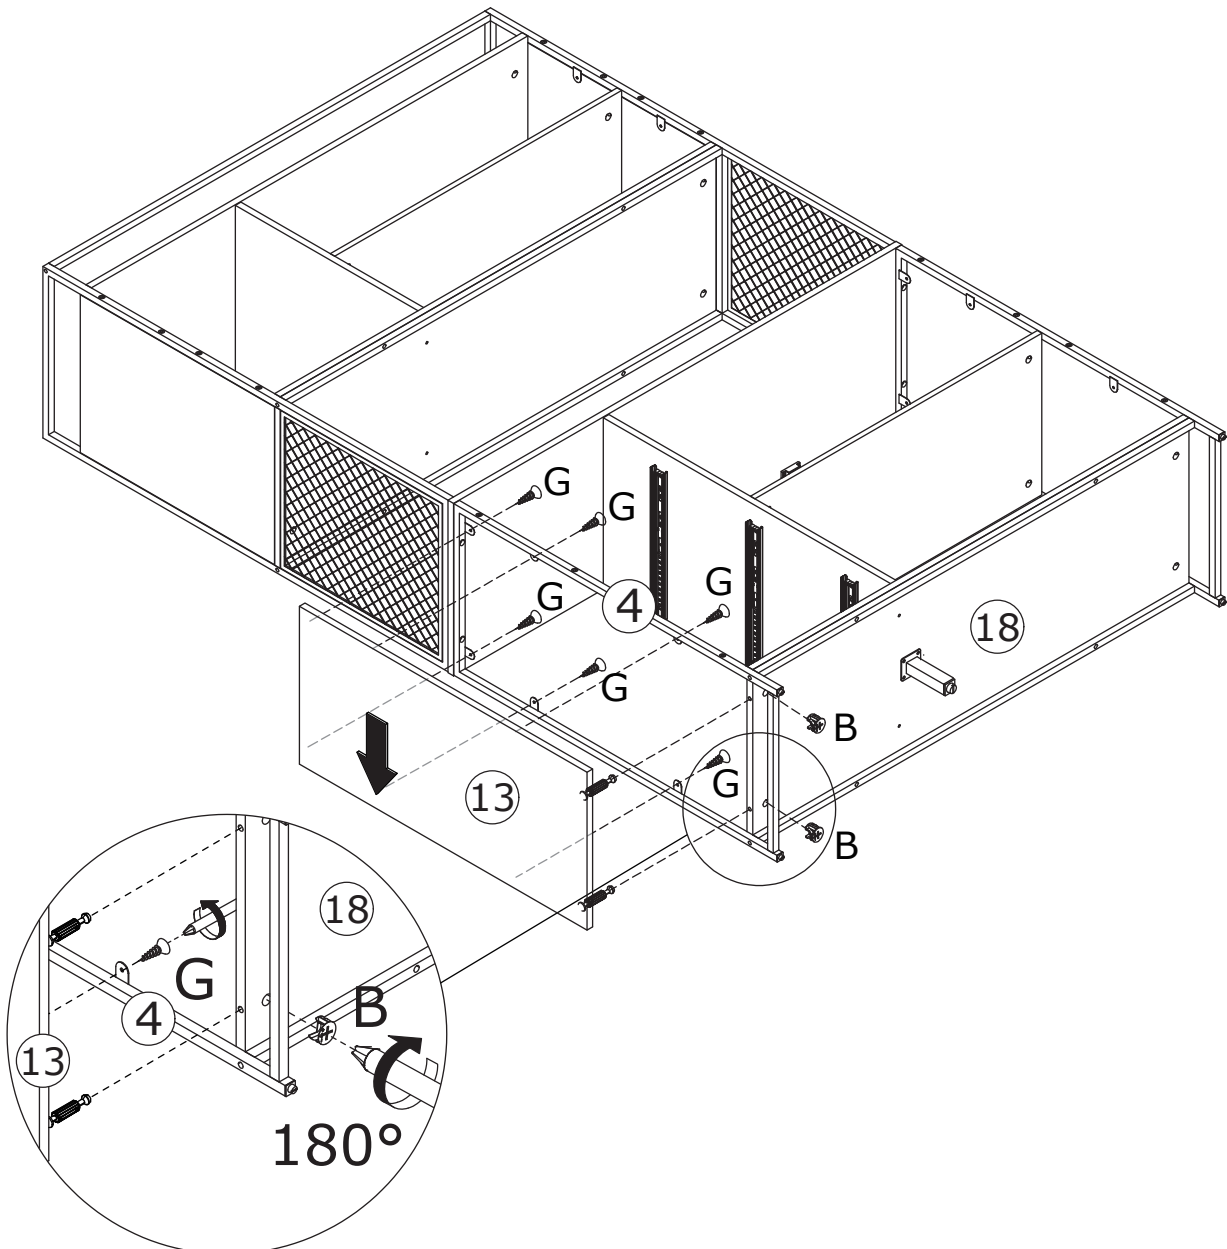 

16

 A x 4



M5 x 42 mm

B x 4

 


Ø 15 x 10 mm

G x 6







M3.5 x 14 mm



Screw eccentric rod(A)
into board 12 at first.

Attach board 12 to board 15 and 18,
add cam lock(B) into board 15,18 and
turn clockwise to tighten as shown.

    Fix board 12 to iron plate 3
with screw(G) as shown.

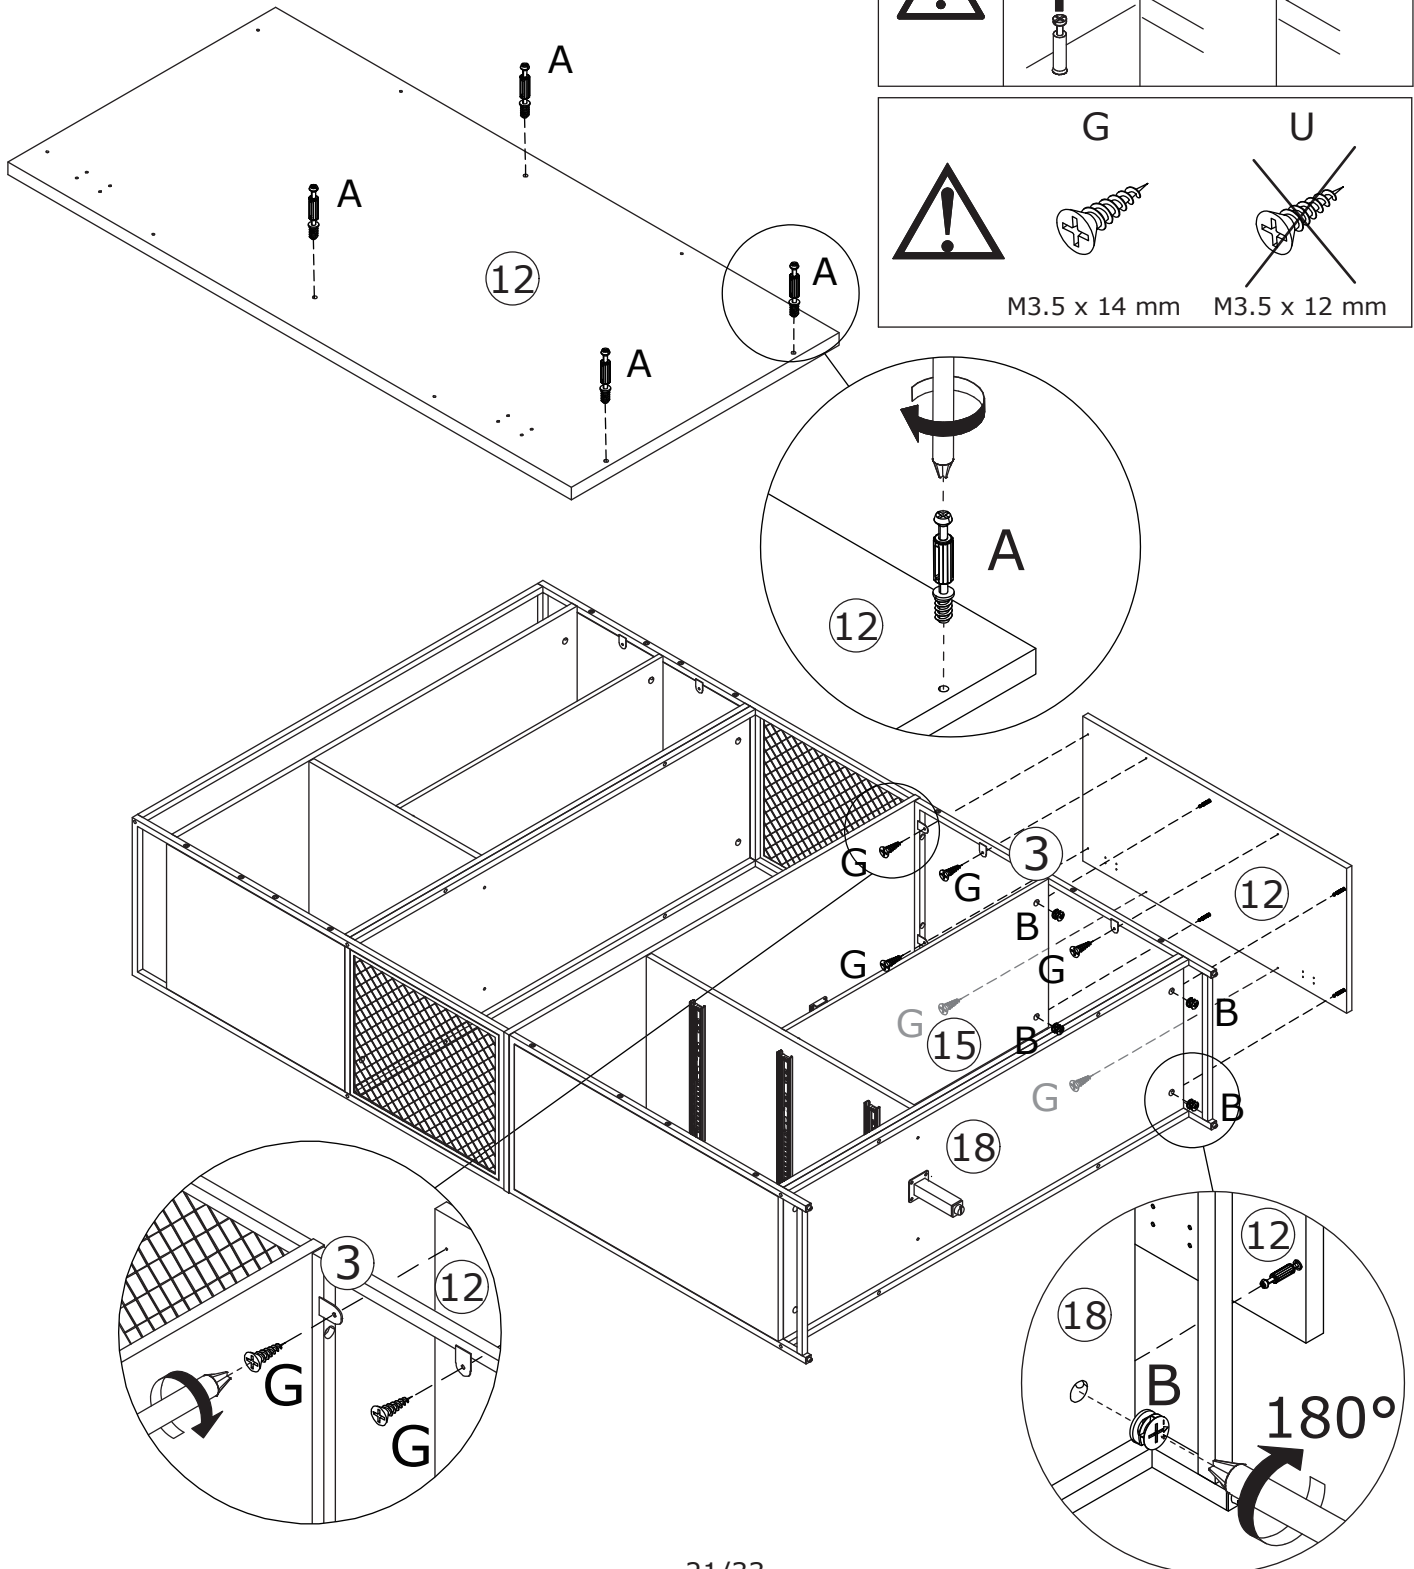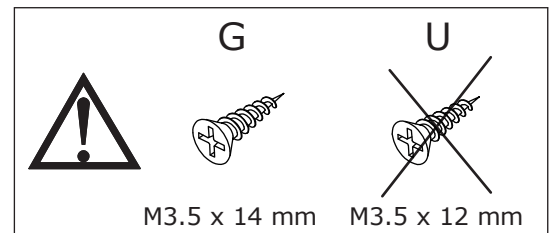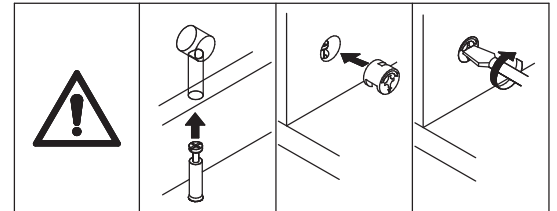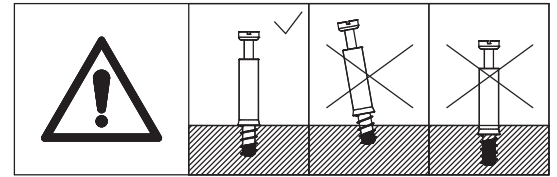


17

C x 16




M6 x 12 mm

 x 1



#4

 Fix back board 26 and 27 to the item with screw(C) as shown.

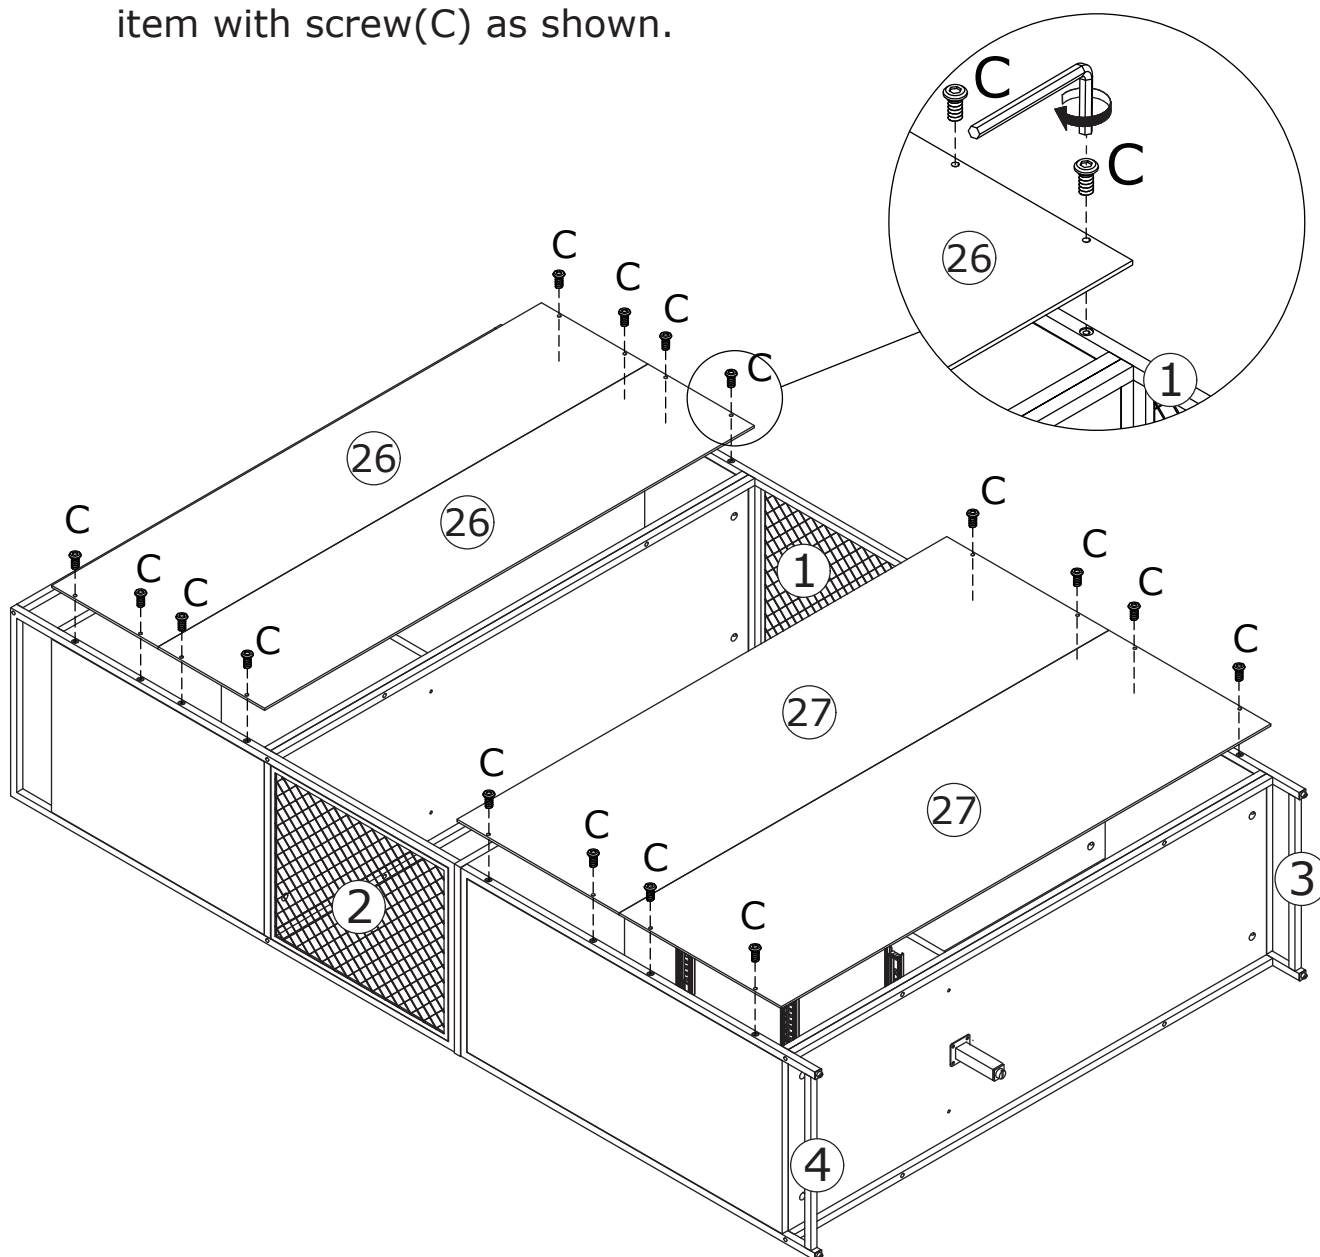

18

M x 38

 


Ø1.5 x 15 mm

 
N x 8






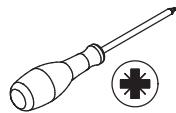


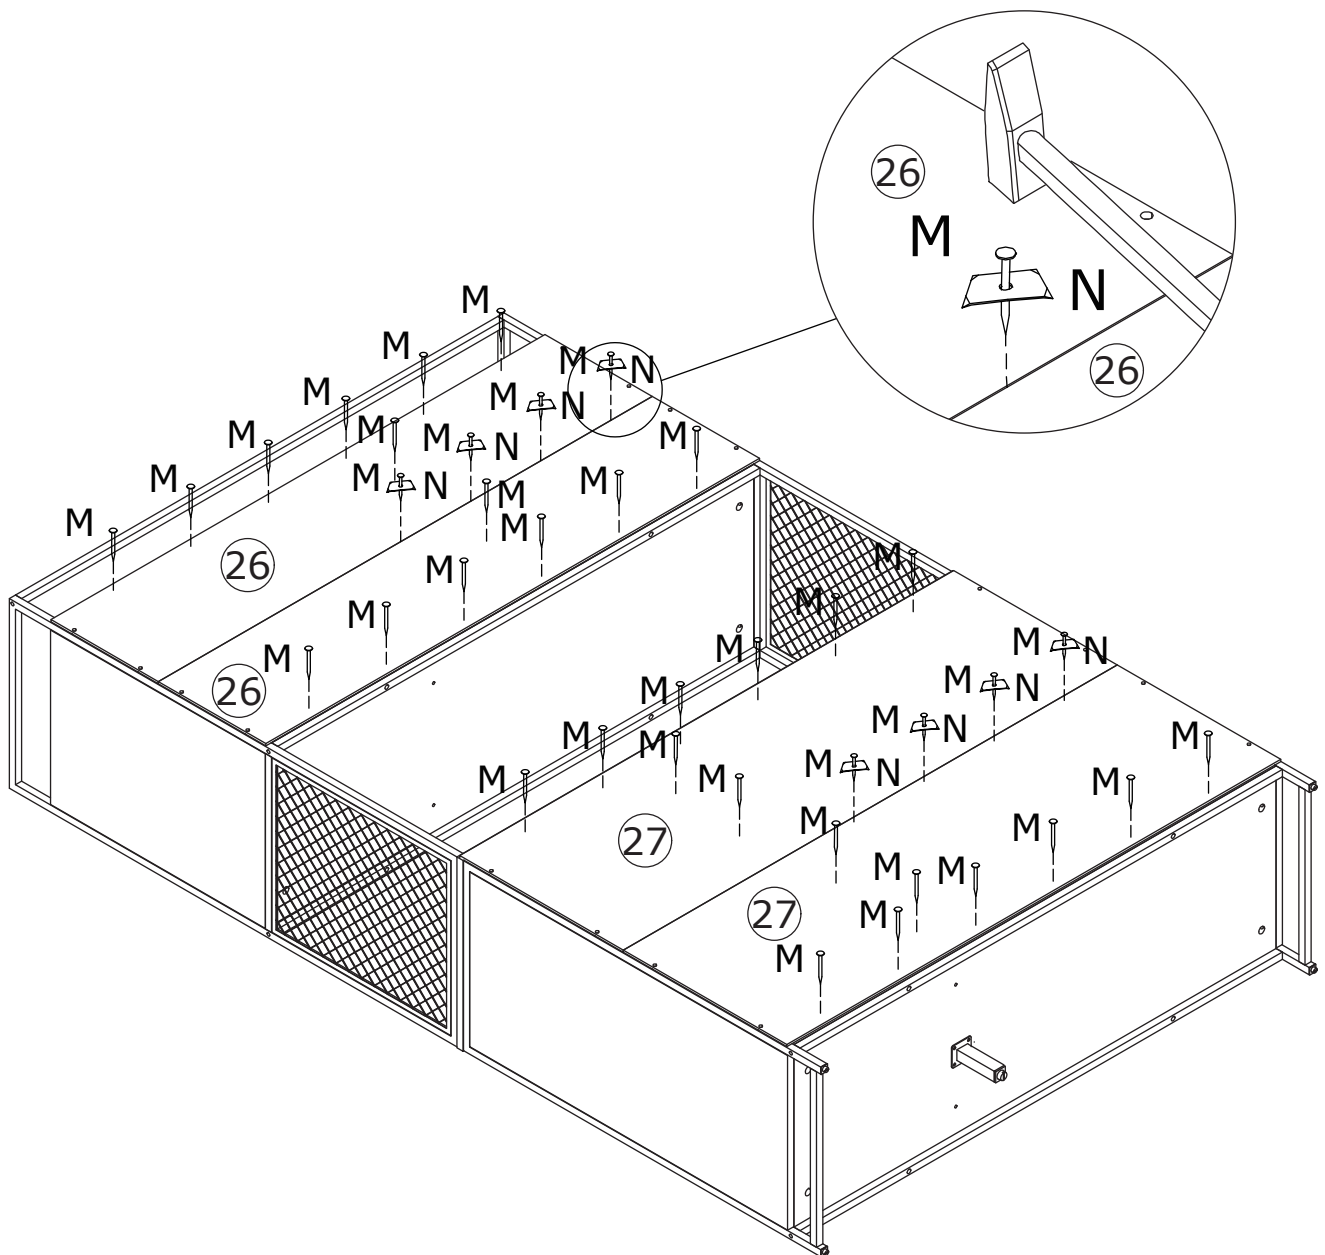


15 x 10 mm



Fix back board 26 and 27 to the item with nail(M) as shown.
Use iron sheet(N) to connect each back boards with nail(M).




19
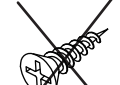
<p>G x 12</p>  <p>M3.5 x 14 mm</p>	<p>H x 4</p>  <p>DW</p>	<p>J x 2</p>  <p>Ø4 x 63 mm</p>	
<p>K x 4</p>  <p>M4 x 18 mm</p>	<p>L x 2</p>  <p>200-96 mm</p>	<div>  <div> <p>G</p>  <p>M3.5 x 14 mm</p> </div> <div> <p>U</p>  <p>M3.5 x 12 mm</p> </div> </div>	

Fix hinge(H) to board 8 and 9 with screw(G) as shown.

 Fix handle(L) with screw(K), fix part(J) with screw(G).

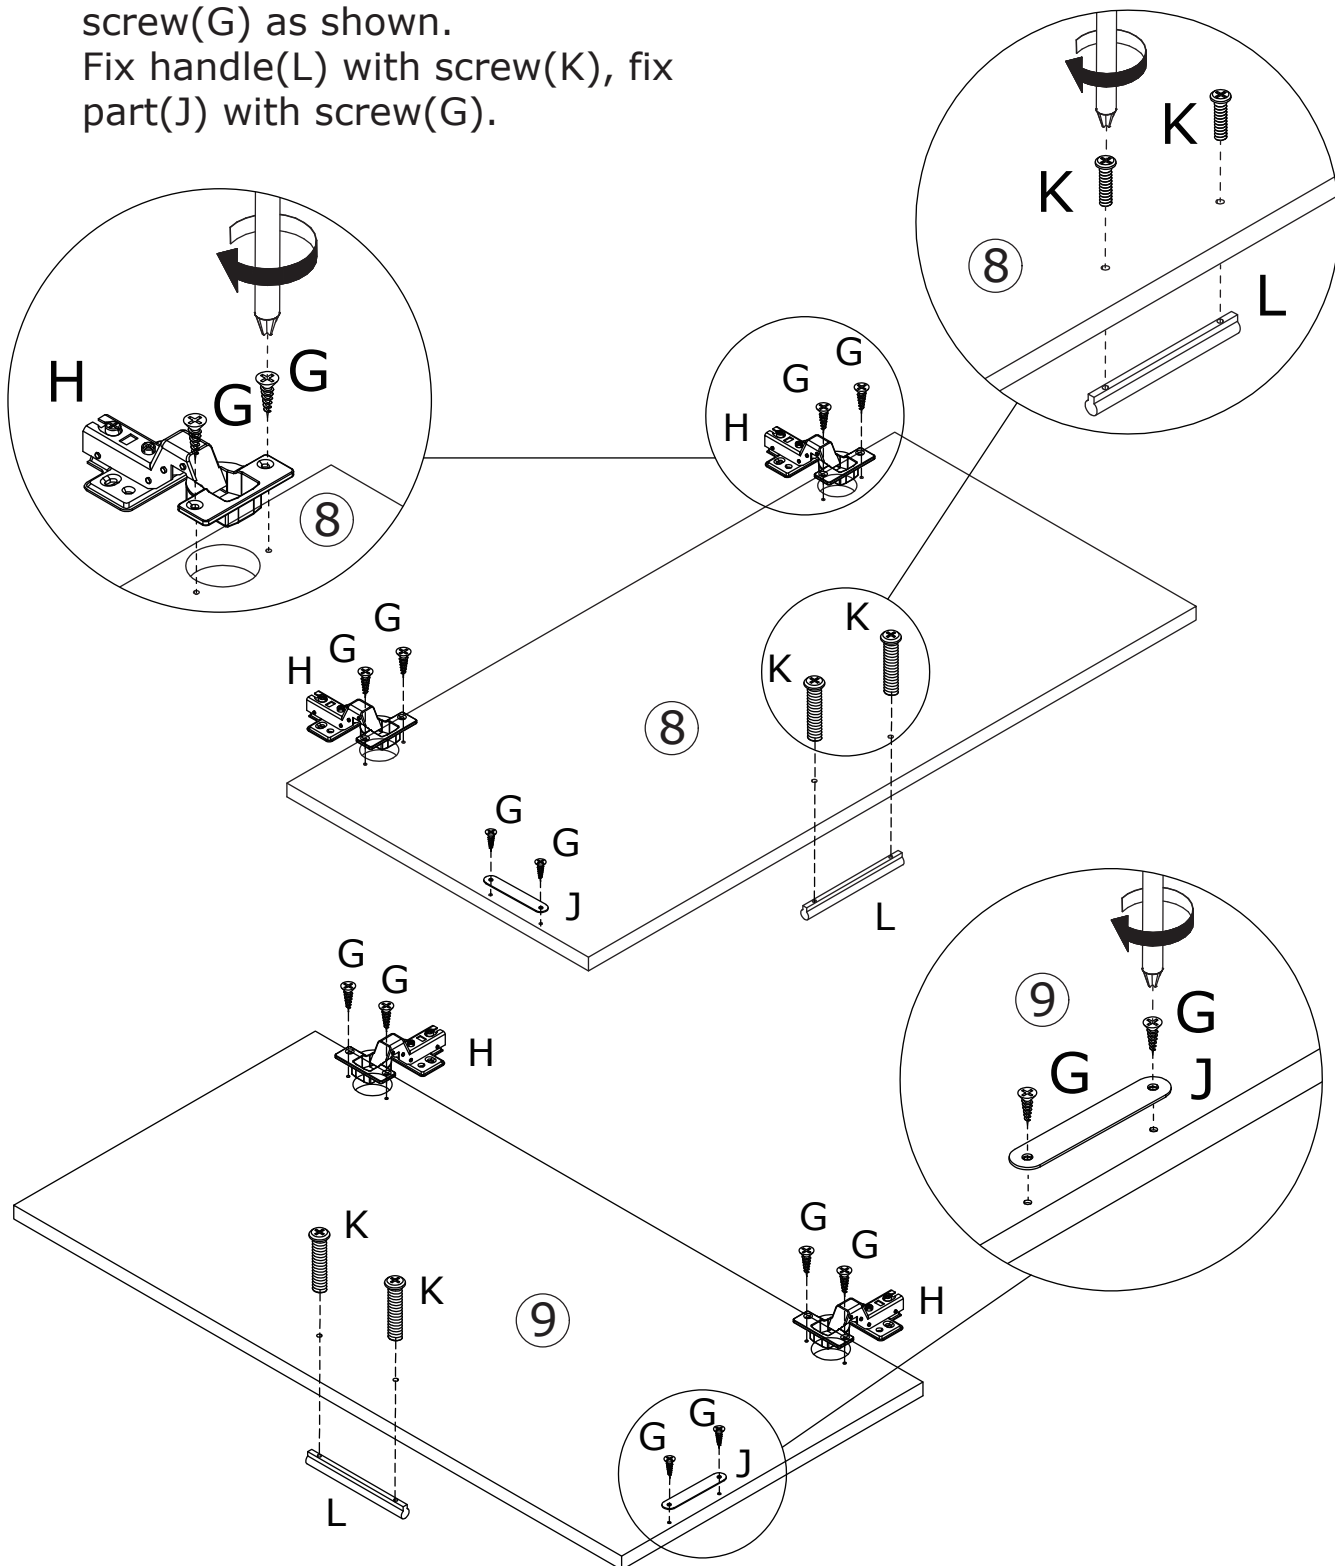


20

G x 16



 M3.5 x 14 mm

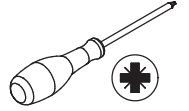

Assemble door 8 and 9 to the lower cabinet by fixing hinge with screw(G) as shown.

 


G





M3.5 x 14 mm




U

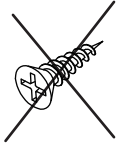


M3.5 x 12 mm

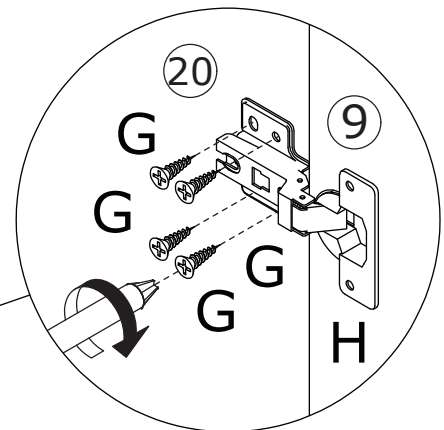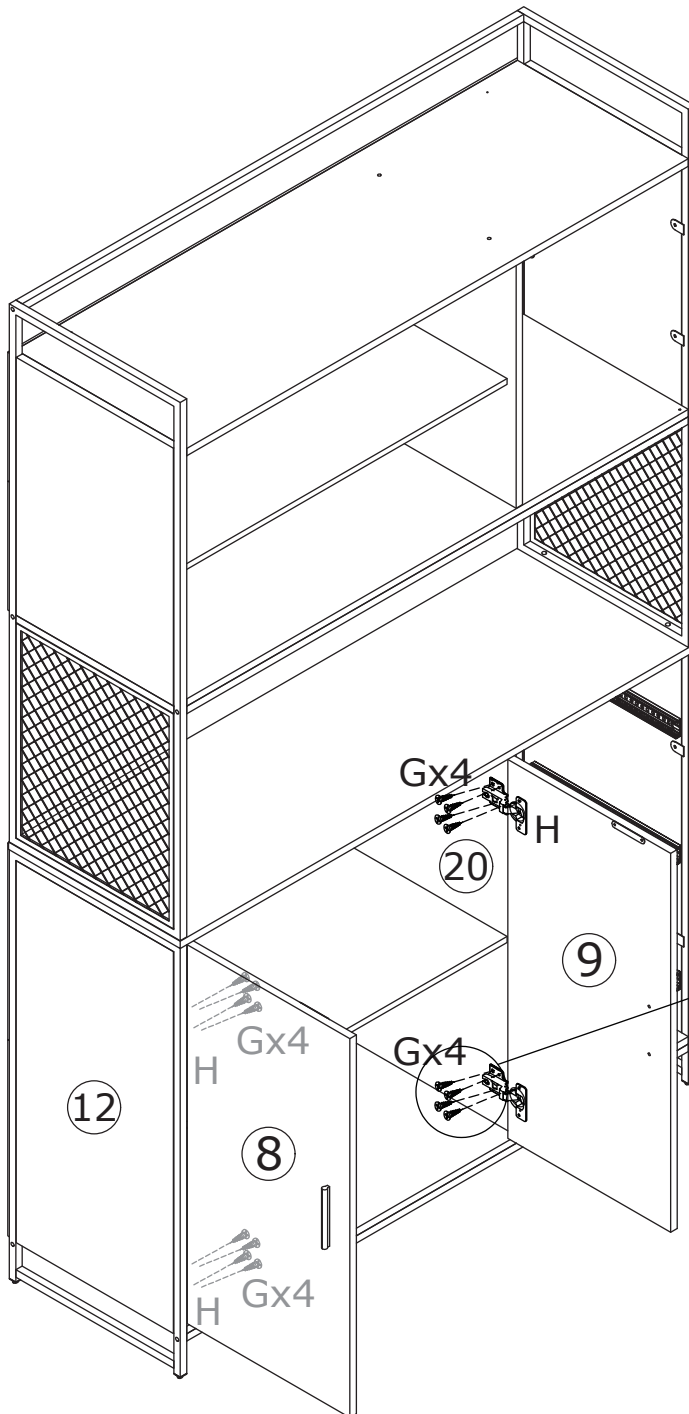  

21

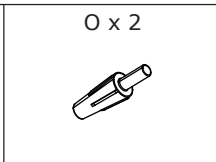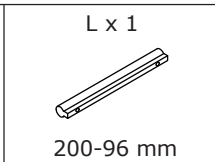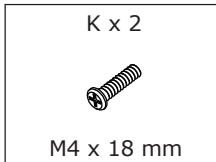   

 Insert part(O) into mesh door 7 and fix handle(L) with screw(K) at first.
Assemble door 7 to upper cabinet as shown.

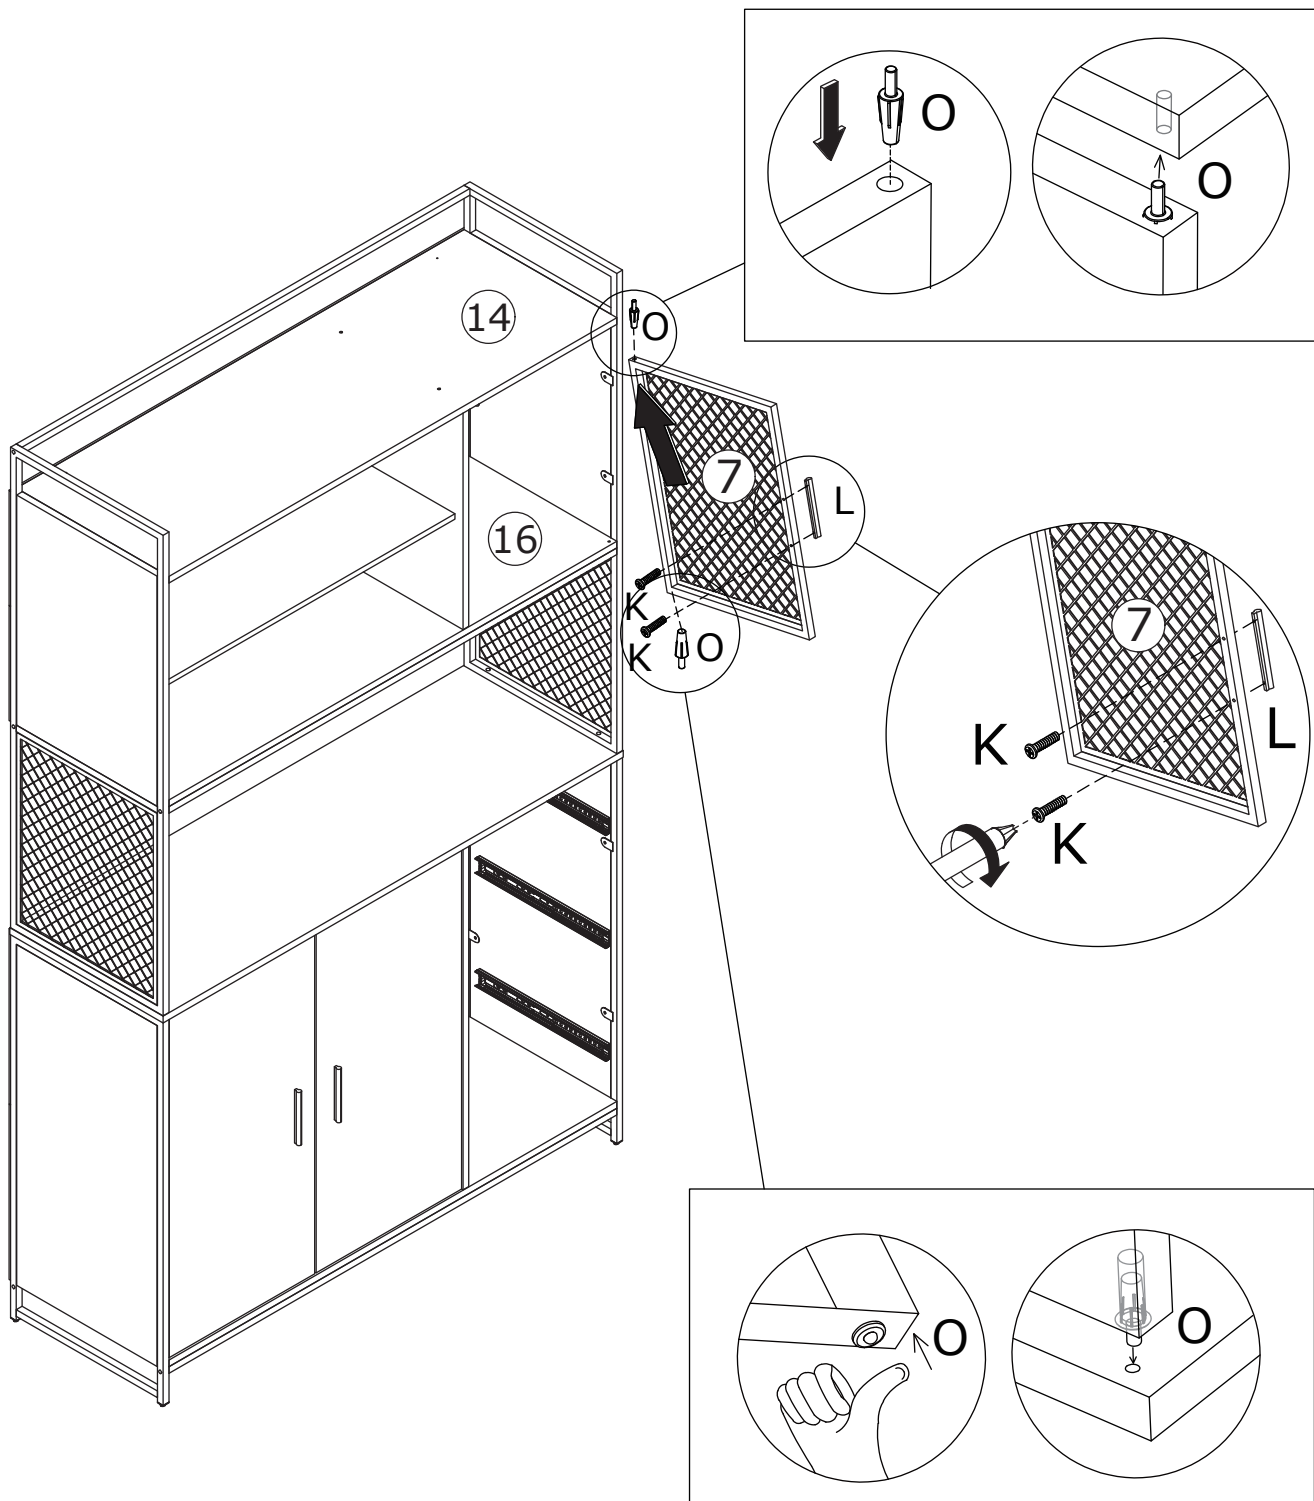


22



V x 12



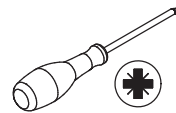




M5 x 40 mm

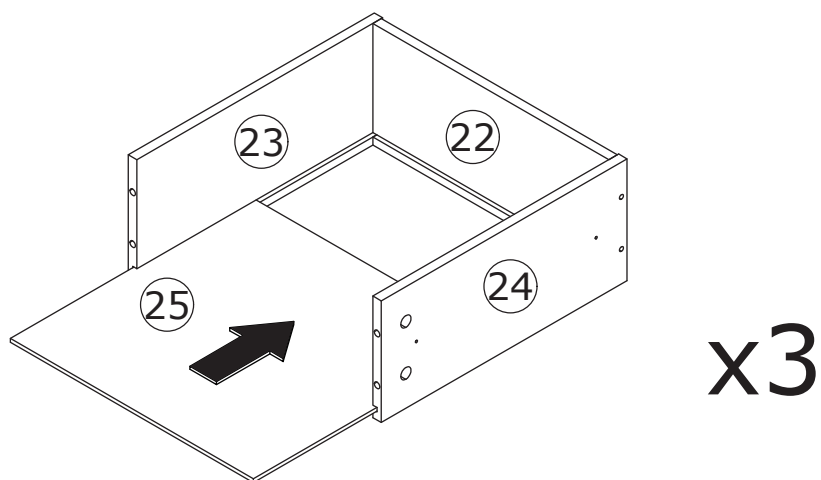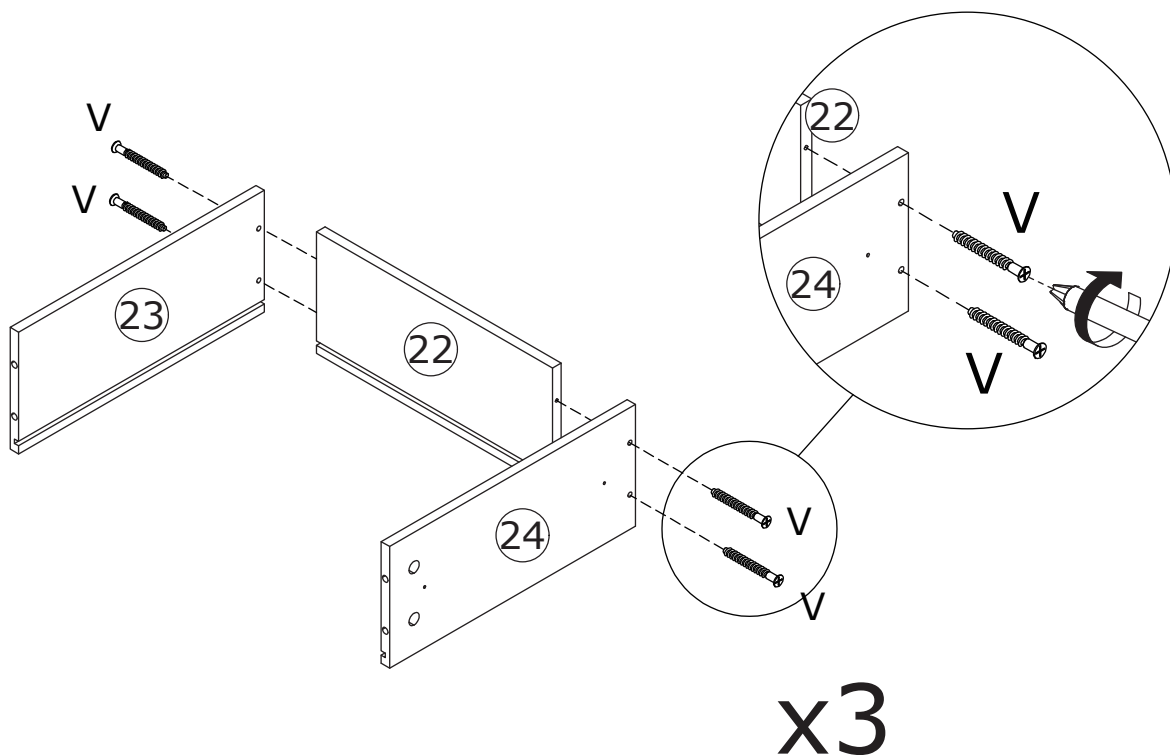  

Fix board 23 and 24 to board 22 with screw(V) at first.
Slide bottom board 25 along available grooves as shown.

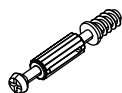



23
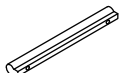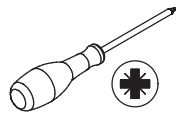
<p>A x 12</p>  <p>M5 x 42 mm</p>	<p>B x 12</p>  <p>Ø 15 x 10 mm</p>	<p>K x 6</p>  <p>M4 x 18 mm</p>	<p>L x 3</p>  <p>200-96 mm</p>	
---	---	--	--	---

Screw eccentric rod(A) into board 21 at first.

Attach board 21 to board 23 and 24, add cam lock(B) into and turn clockwise to tighten as shown.

  Fix handle(L) with screw(K).

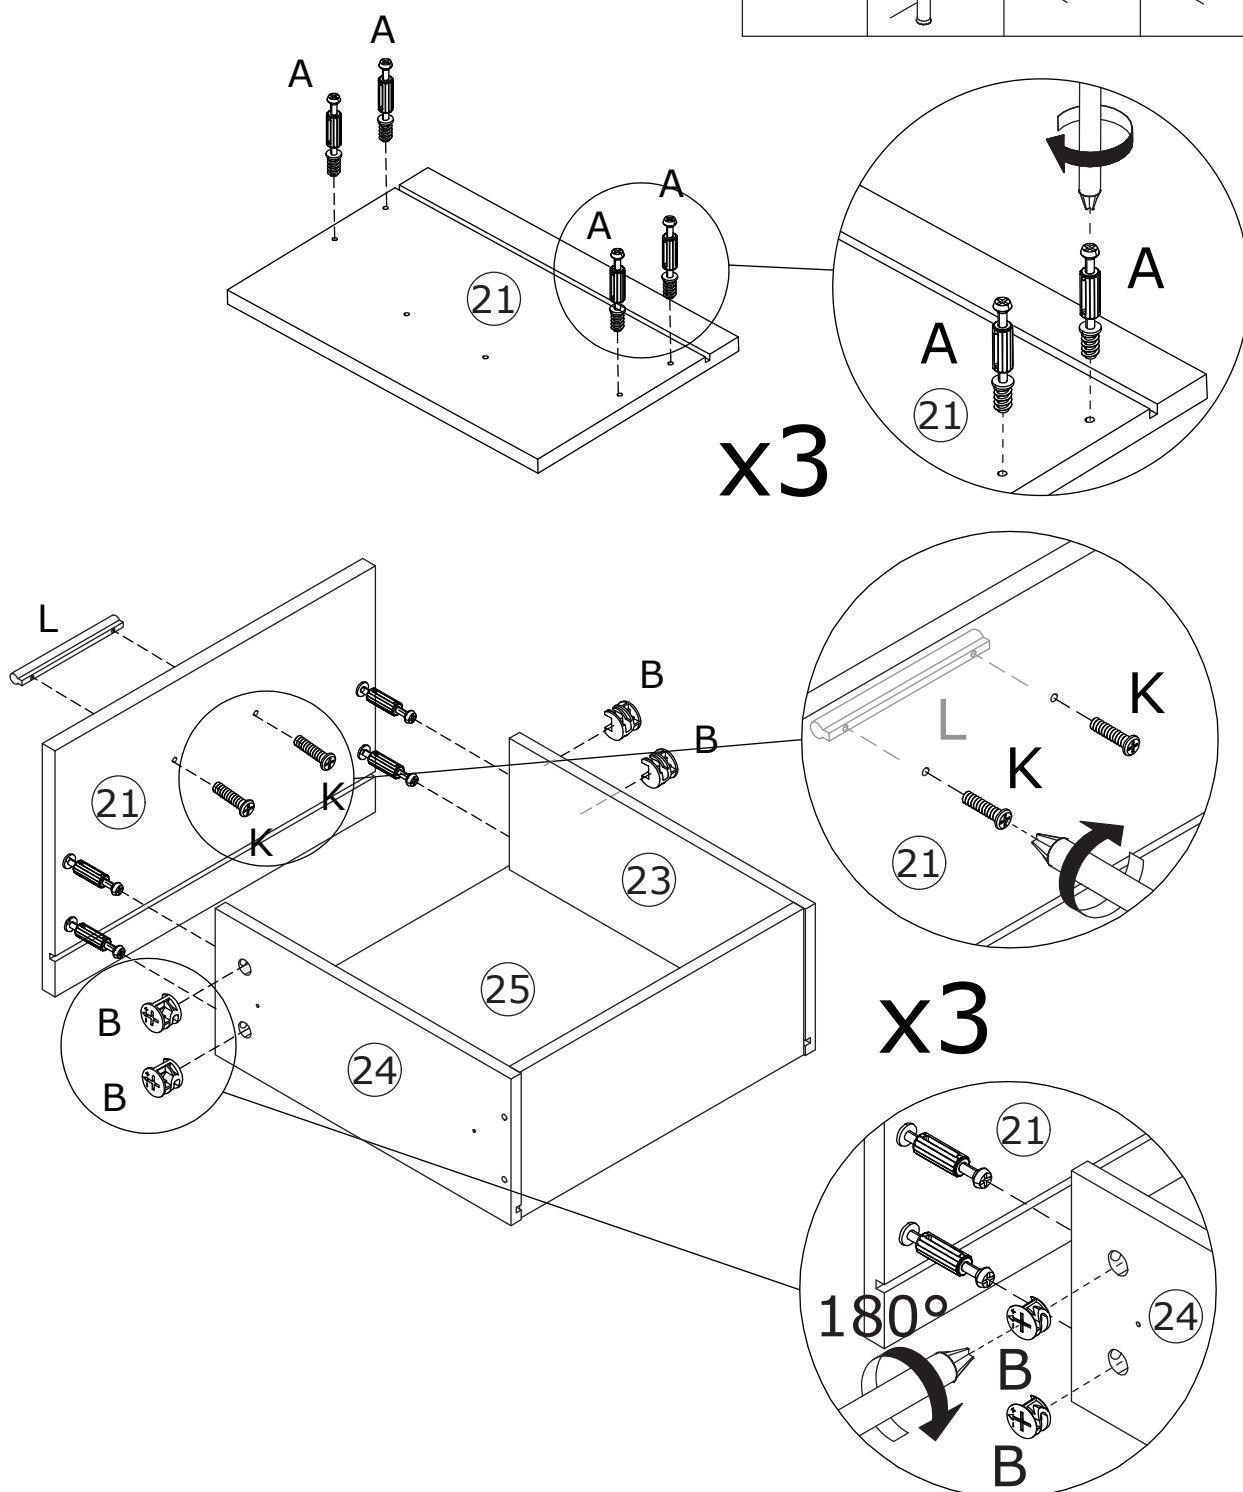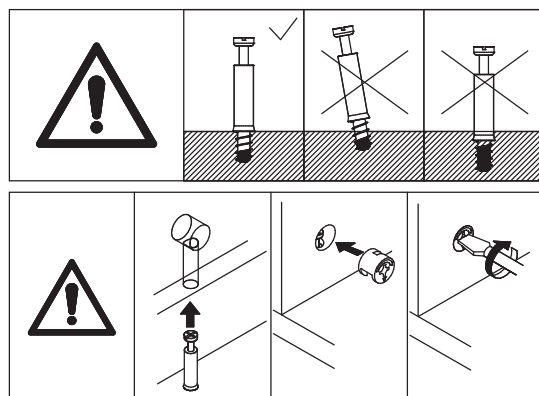


24


U x 12



M3.5 x 12 mm

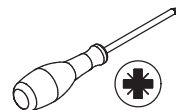

G

 


M3.5 x 14 mm


U



 M3.5 x 12 mm

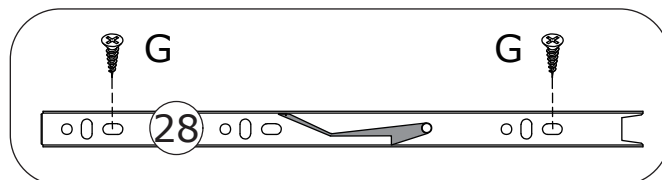

  
Fix runner part 28 to board 23 and 24 with screw(U) as shown.

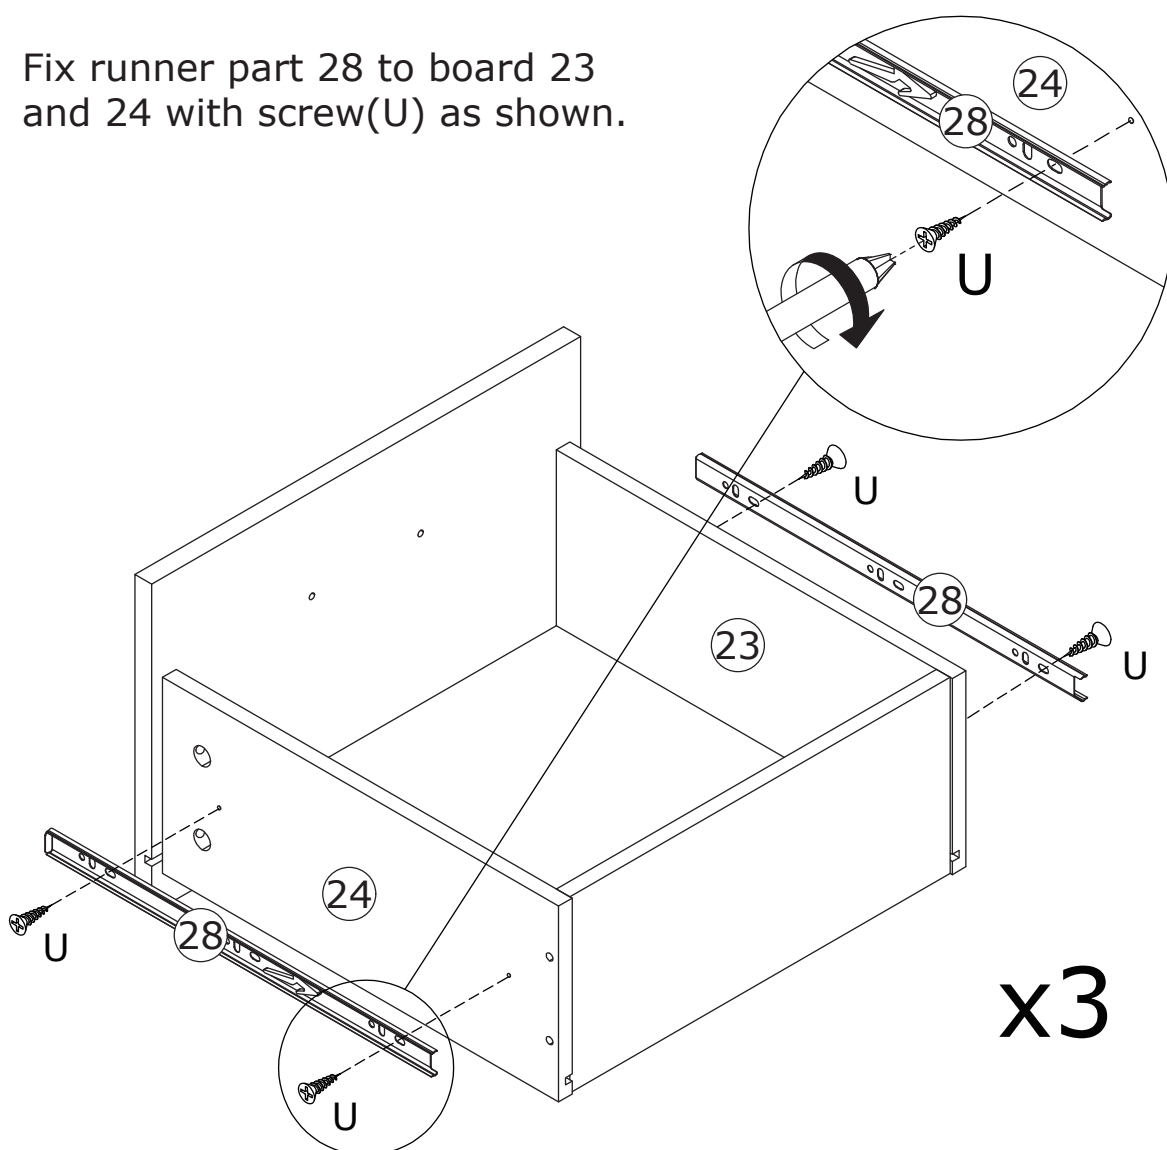


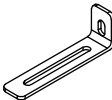


x3




25

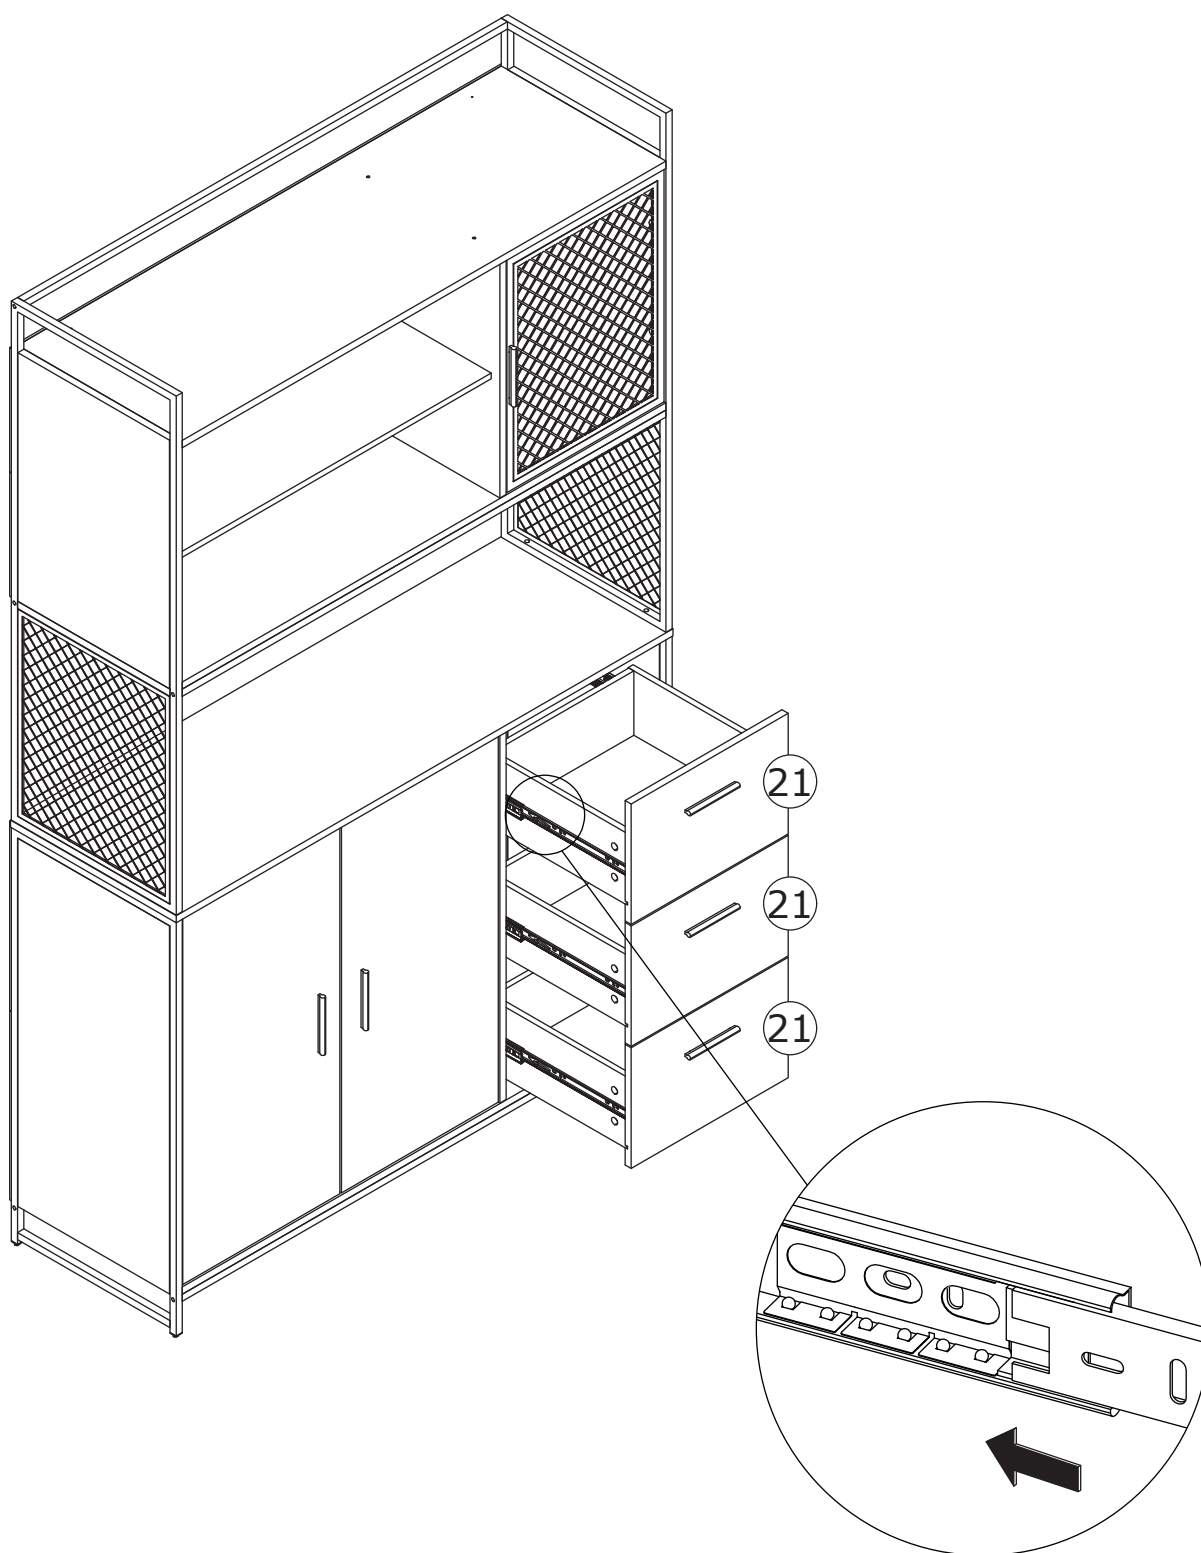Align rails, slide all drawers in.




26


<p>G x 2</p>  <p>M3.5 x 14 mm</p>	<p>P x 2</p> 
<p>Q x 2</p>  <p>Ø 8 x 60 mm</p>	<p>R x 2</p>  <p>Ø 5 x 55 mm</p>

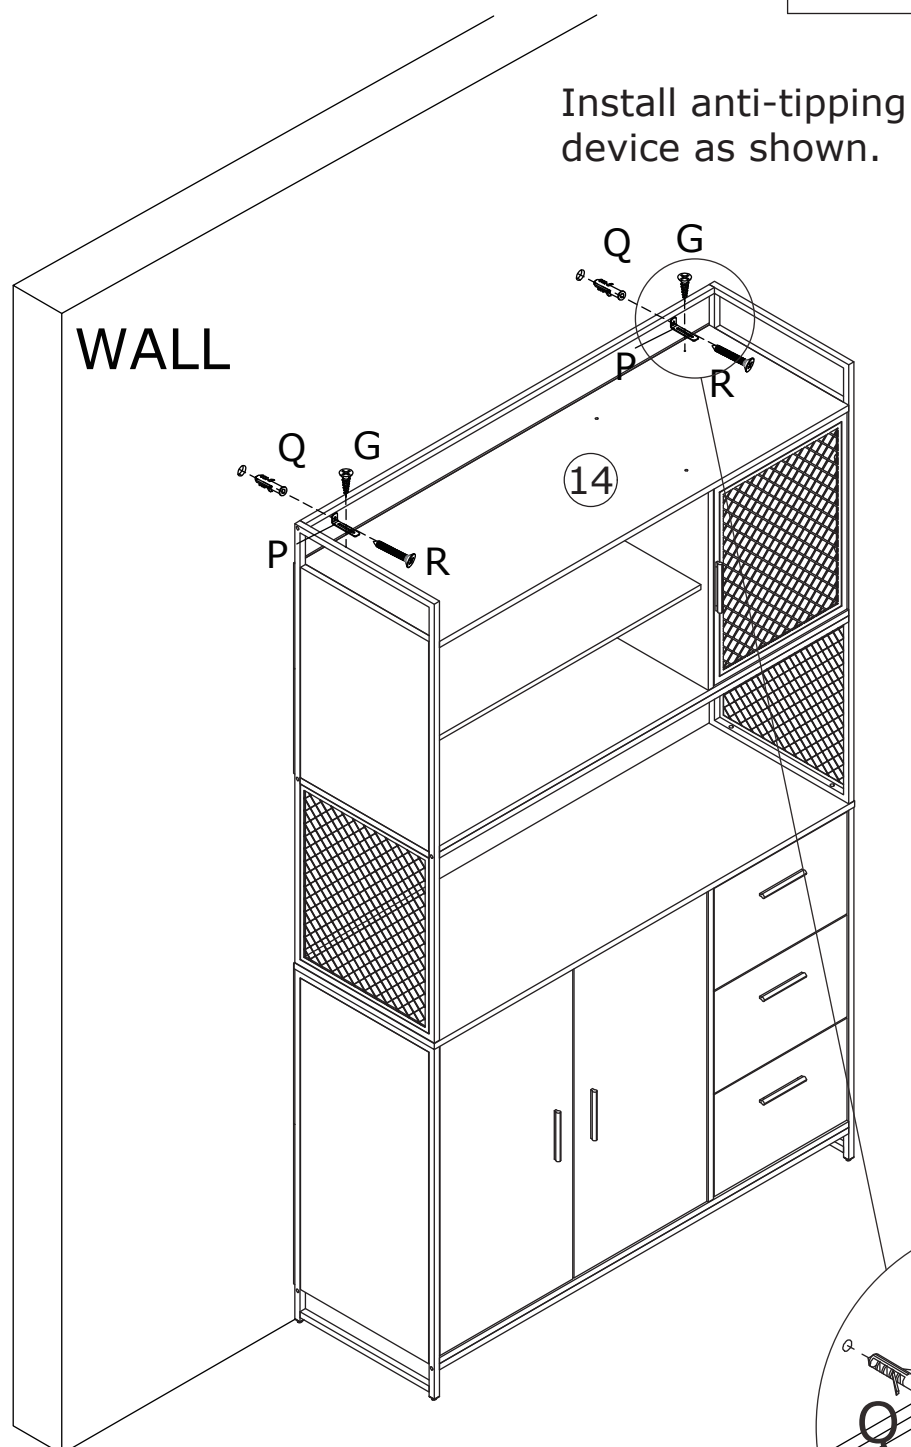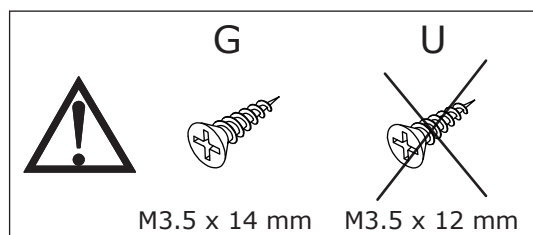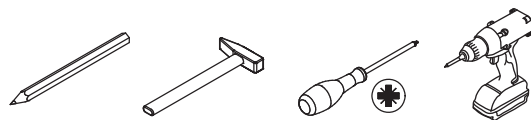   

 
1.

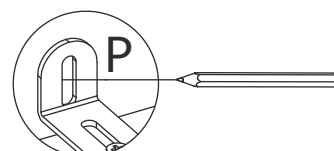


 
2.

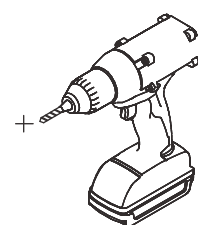


 3.

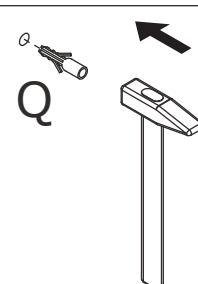

    
 
 
 
 
 
 
4.

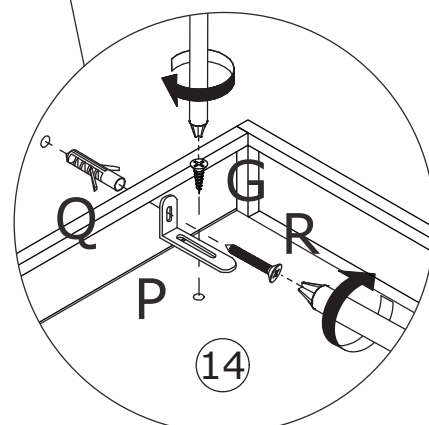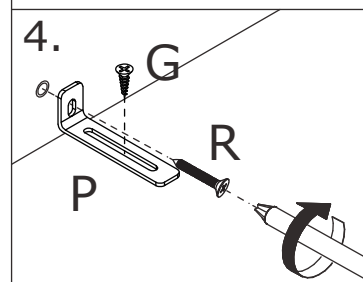


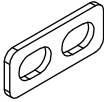



If doors are still not aligned if the hinges are properly correctly, please watch the video.


<https://youtu.be/n0Lb36SoODM>

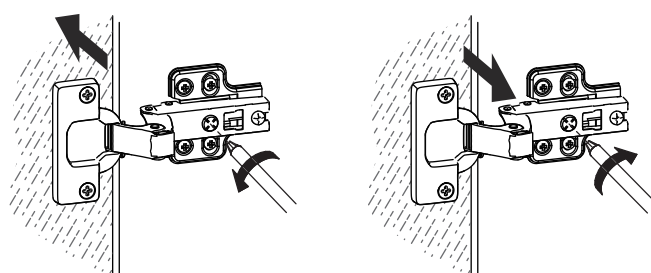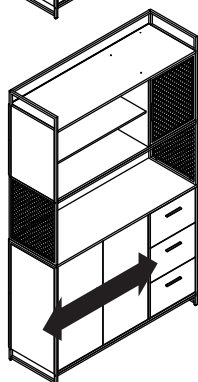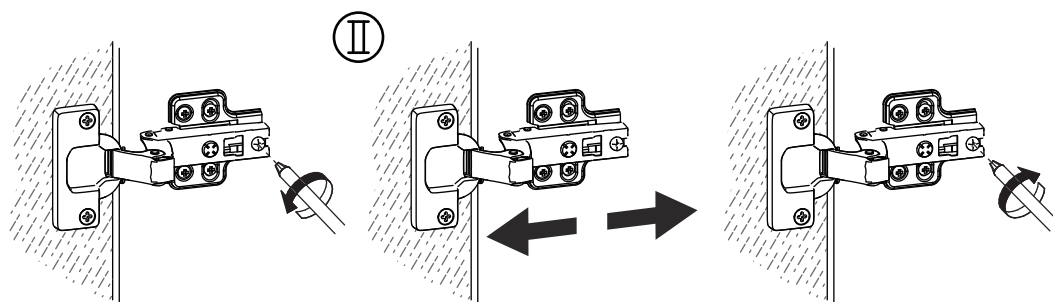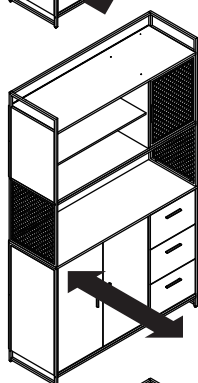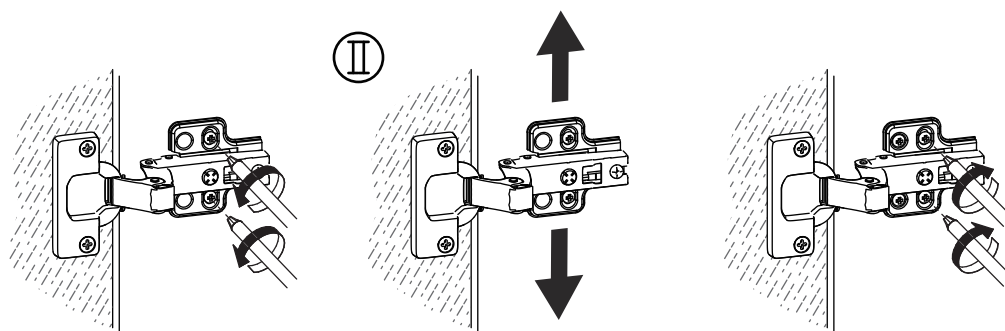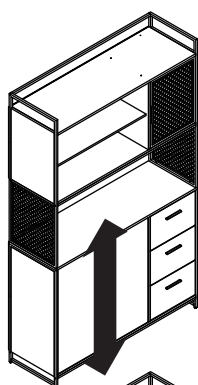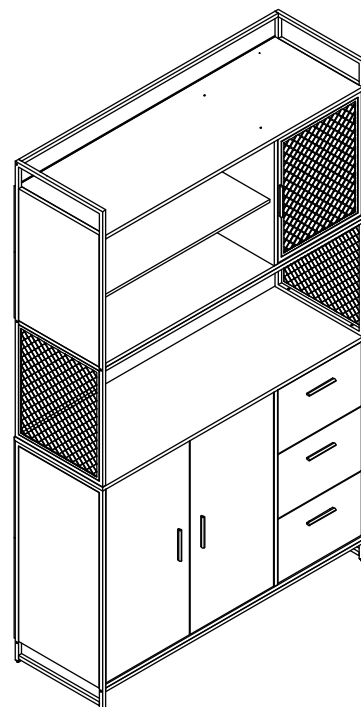

28

<p>D x 6</p>  <p>M6 x 20 mm</p>	<p>T x 3</p> 	<p>x 1</p>  <p>#4</p>	
--	--	--	--

 If you have multiple sets of similar products, you can connect them together through screw D and T.

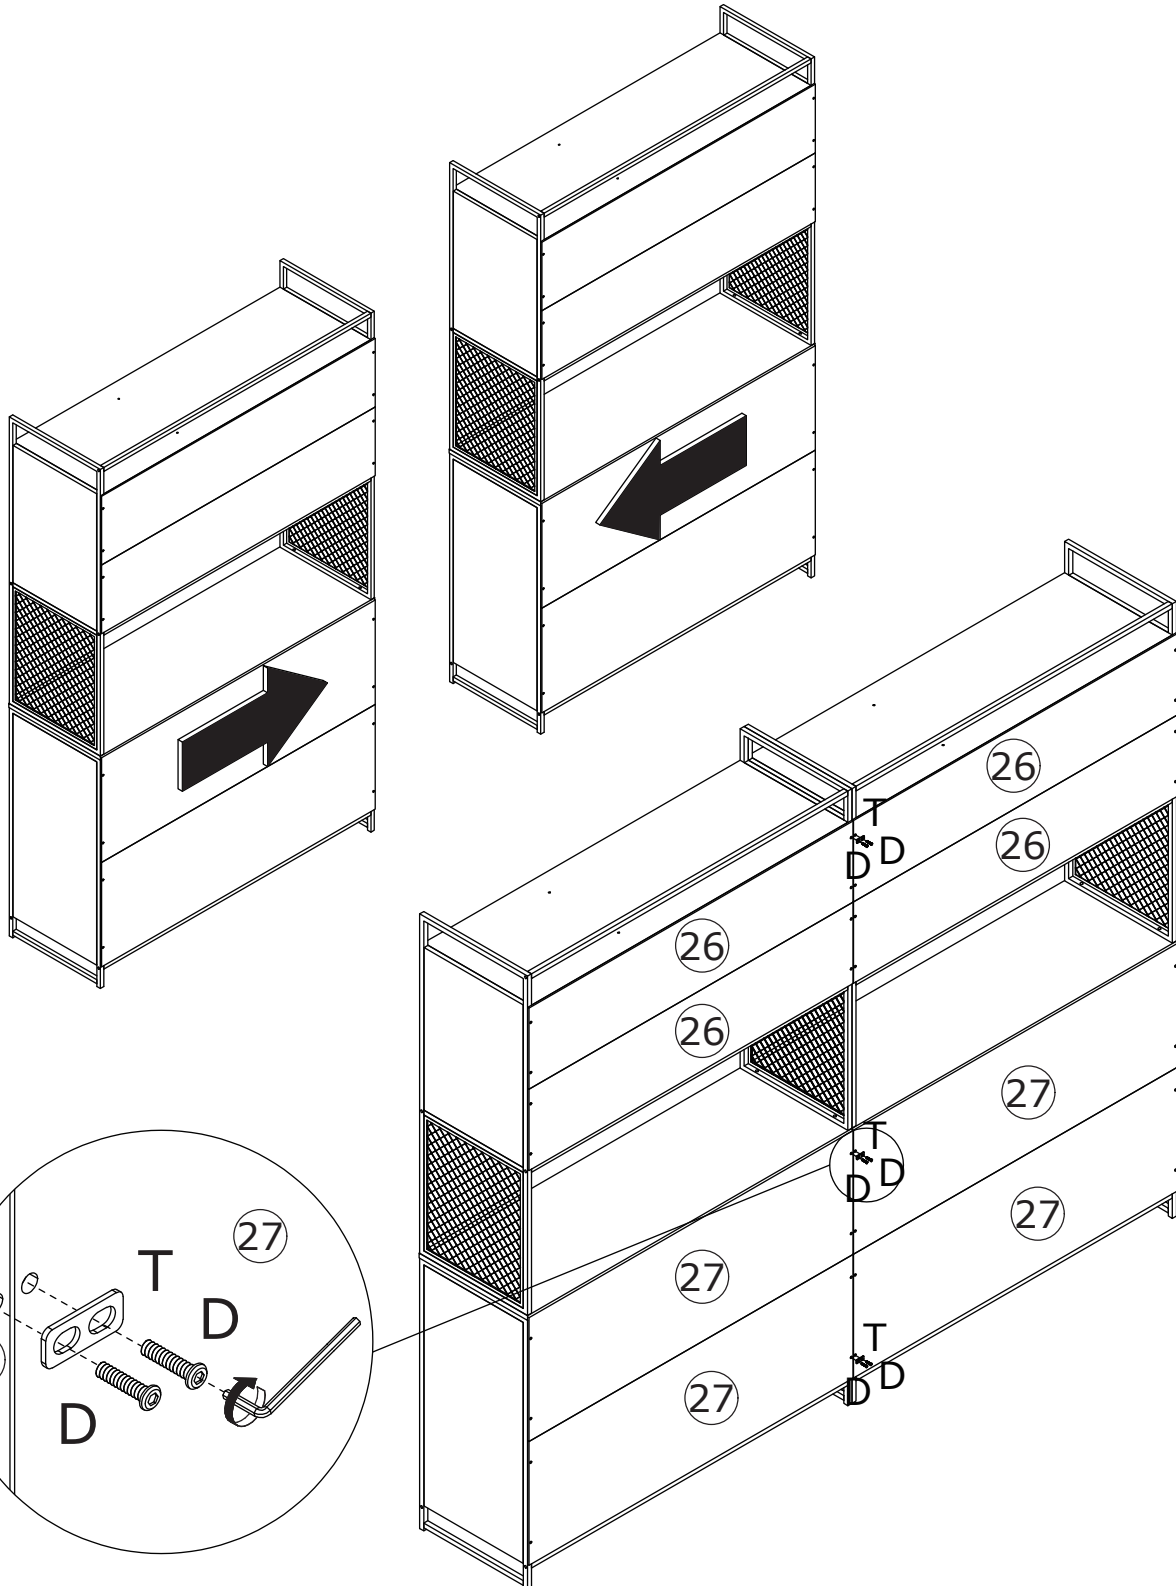

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



feedbackstation@163.com



(303)800-6387

INSTALLATION

Product Manual

Version: 210269-04+05-24A-PF



IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.



AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.



IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.



ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !





It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

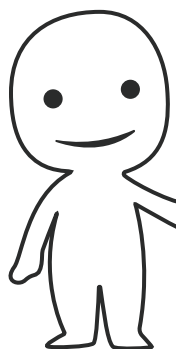


Please prepare the following tools

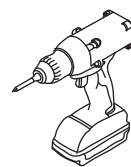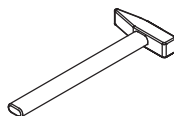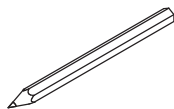  

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 50

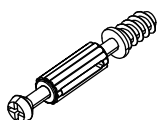

M5 x 42 mm

B x 50



Ø 15 x 10 mm

C x 20



M6 x 12 mm

D x 6



M6 x 20 mm

E x 16



 
M6 x 25 mm

F x 10



M6 x 35 mm

G x 98




M3.5 x 14 mm

H x 8



DW

 I x 4




K x 20




M4 x 18 mm

 L x 10




220-96 mm

 M x 48



Ø 1.5 x 15 mm

 N x 16




15 x 10 mm


O x 8



 P x 2



Q x 2

 


Ø 8 x 60 mm

R x 2



Ø 5 x 55 mm

 T x 3




U x 8




M3.5 x 12 mm

 V x 18






M5 x 40 mm

 x 1



#4

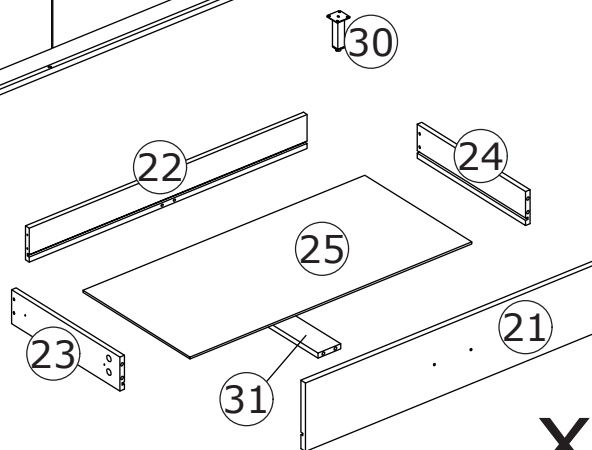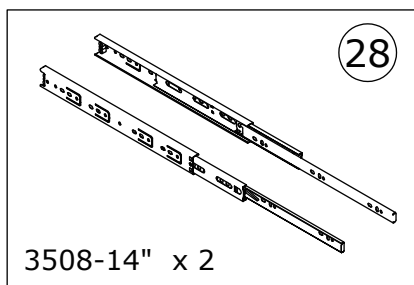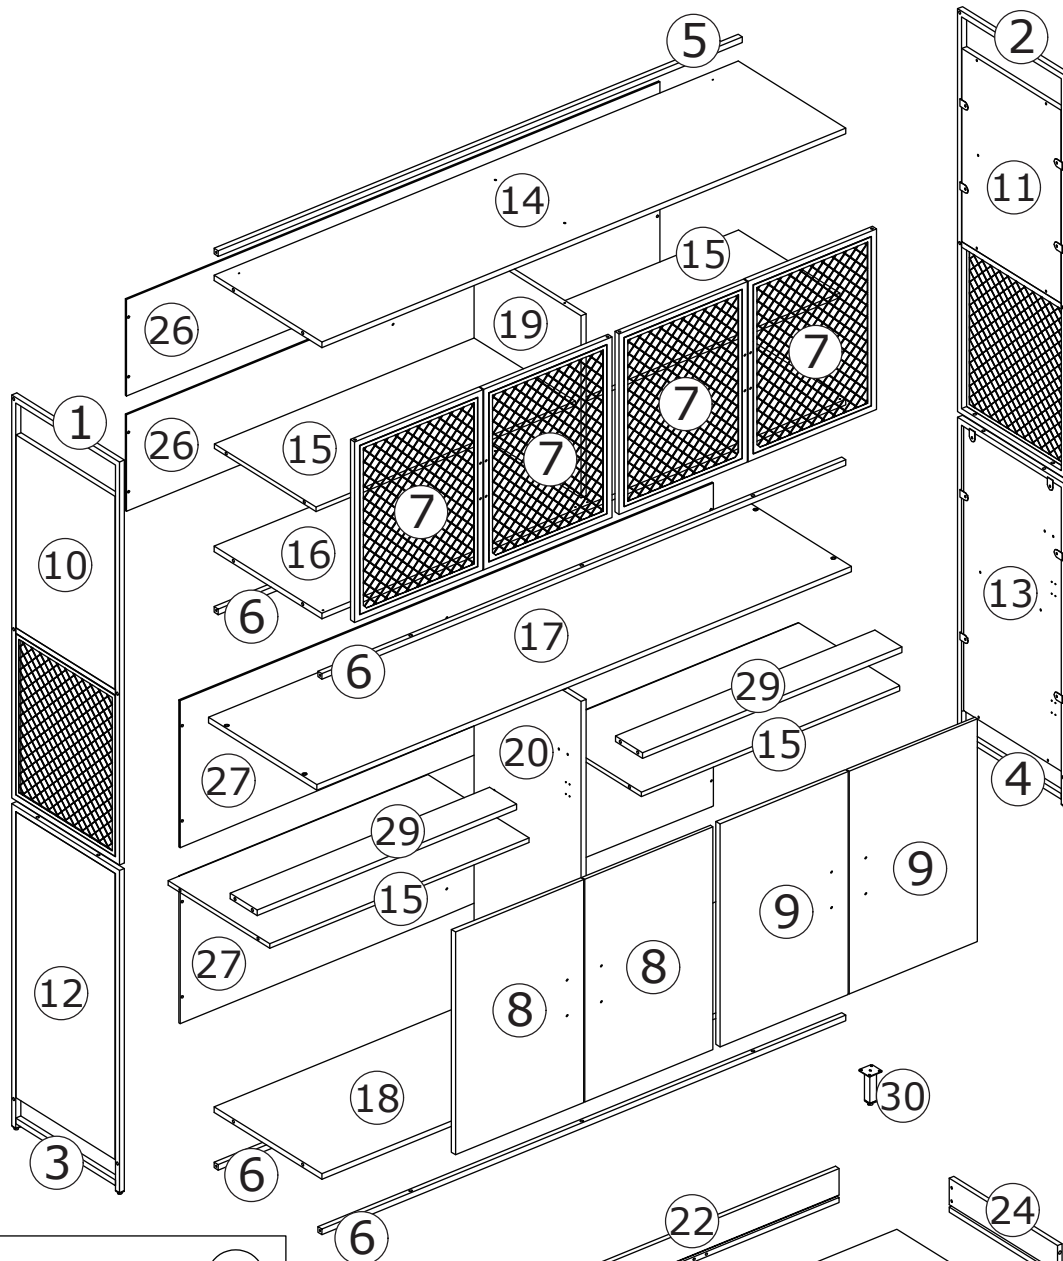   

x2

 
⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label.
Do not remove!*

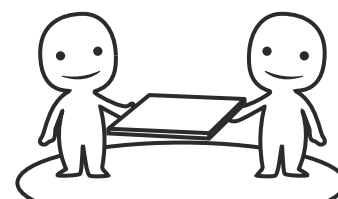


ASSEMBLED BY 2 ADULTS


Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.

 
Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

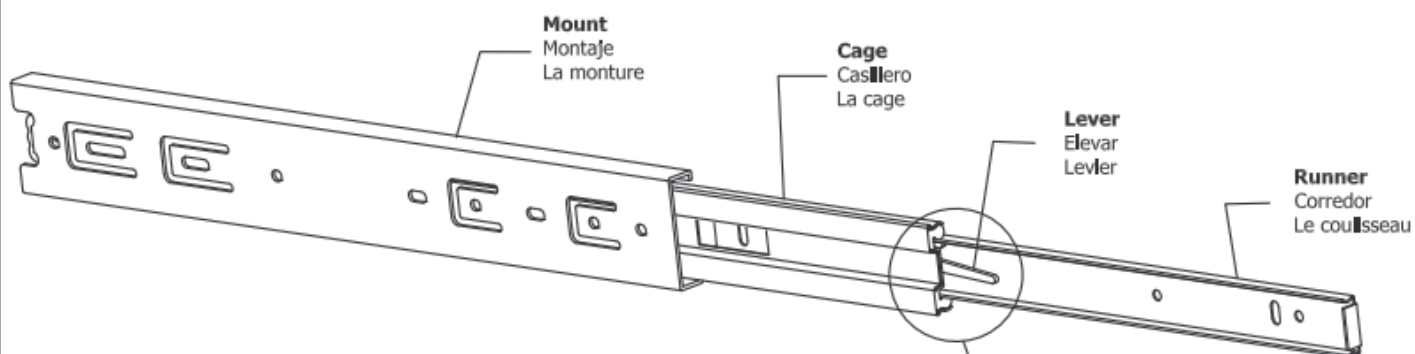

 
STEP 1: Extend Slide
Extender la diapositiva
Extendre la diapositive

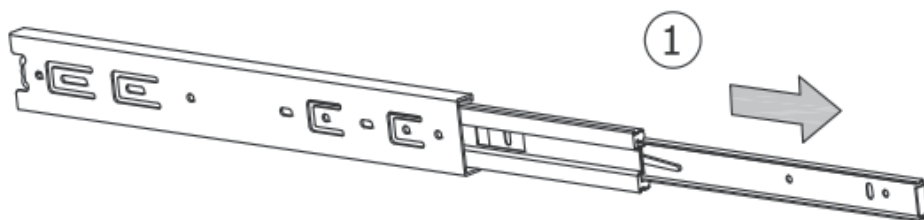

 STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier


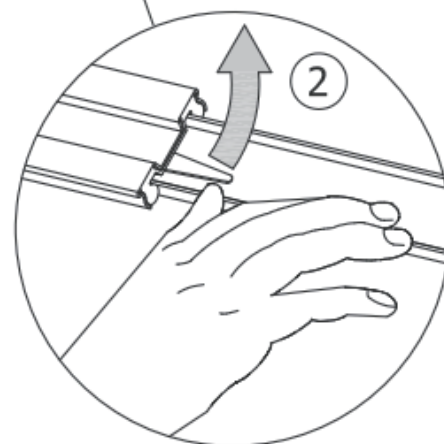


 STEP 3: Remove Runner
Quitar el corredor
Enlever le coureur

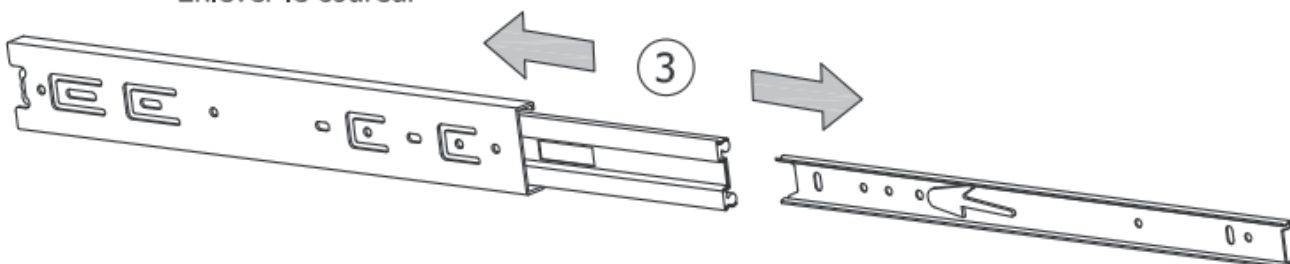


1

  
A x 4
M5 x 42 mm

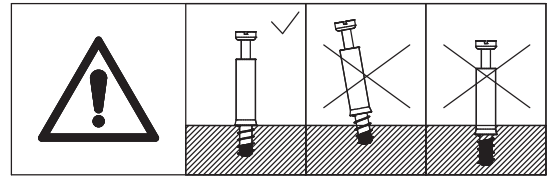



 Screw eccentric rod(A) into board 19 at first.
Flip to back, screw eccentric rod(A) into as well.

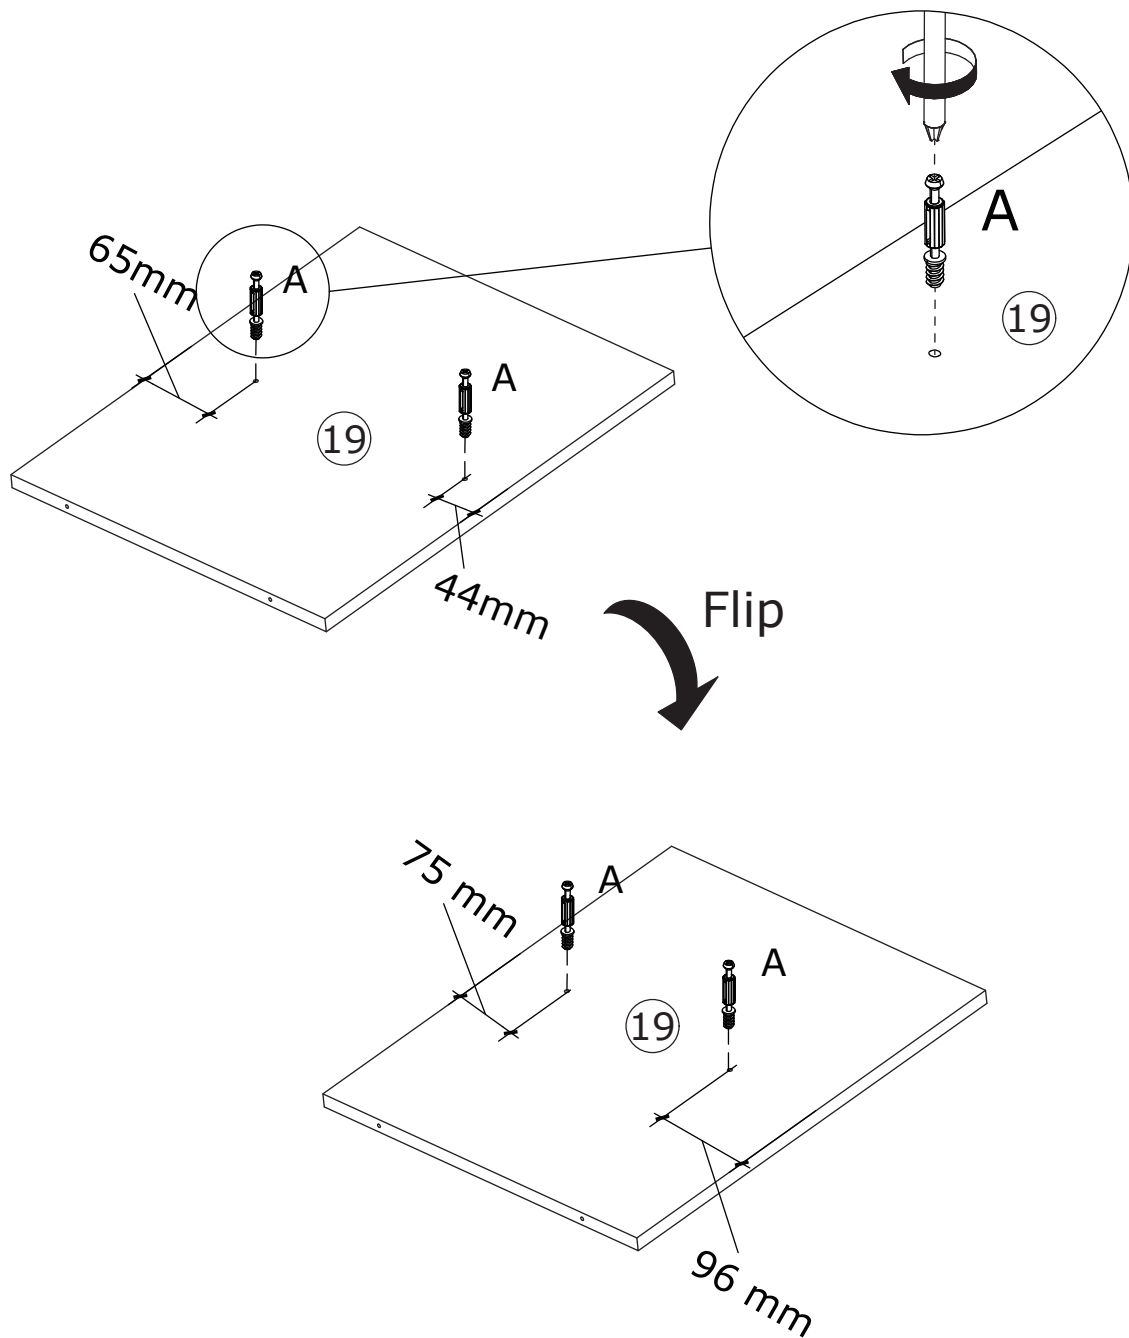


2

  
B x 4

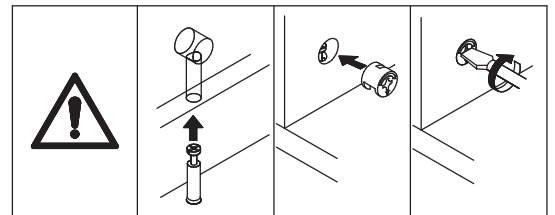 Ø15 x 10 mm

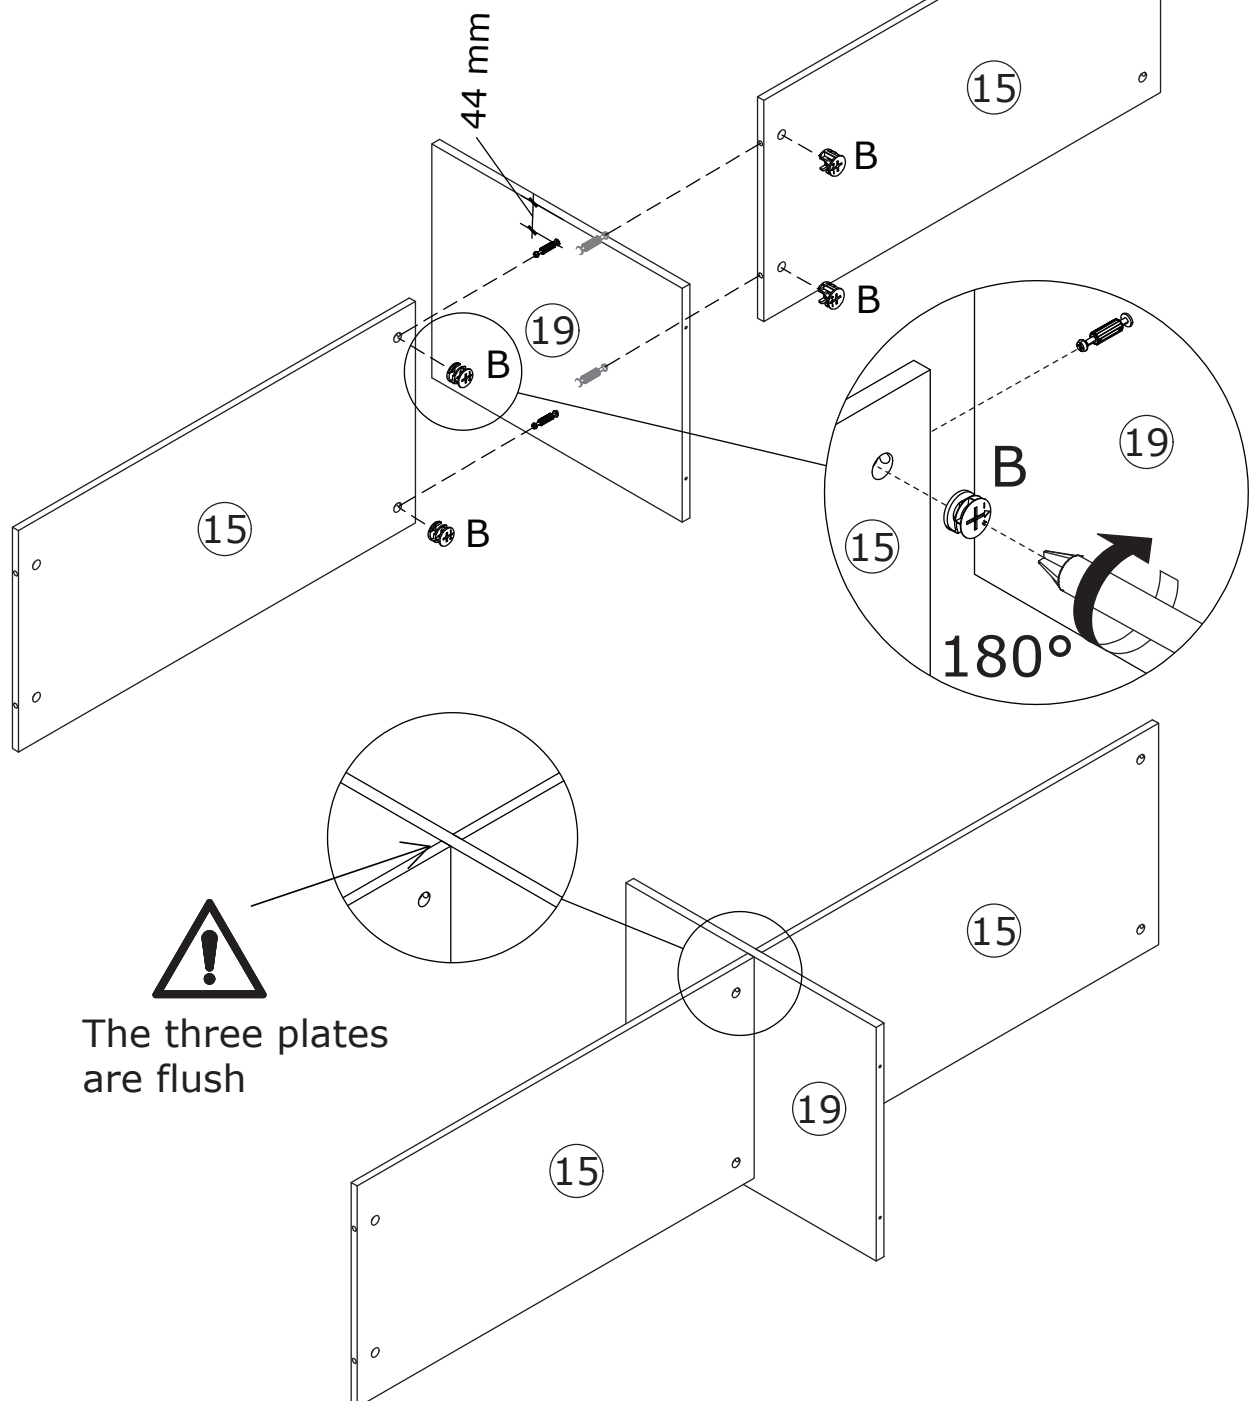 

 
Connect board 15 to board 19, add cam lock(B)
 into board 15 and turn clockwise to tighten as shown.

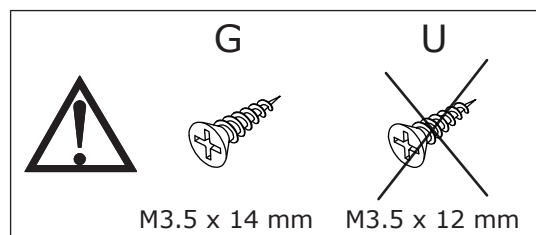

3



 Fix part(I) to board 14 with screw(G) at first.

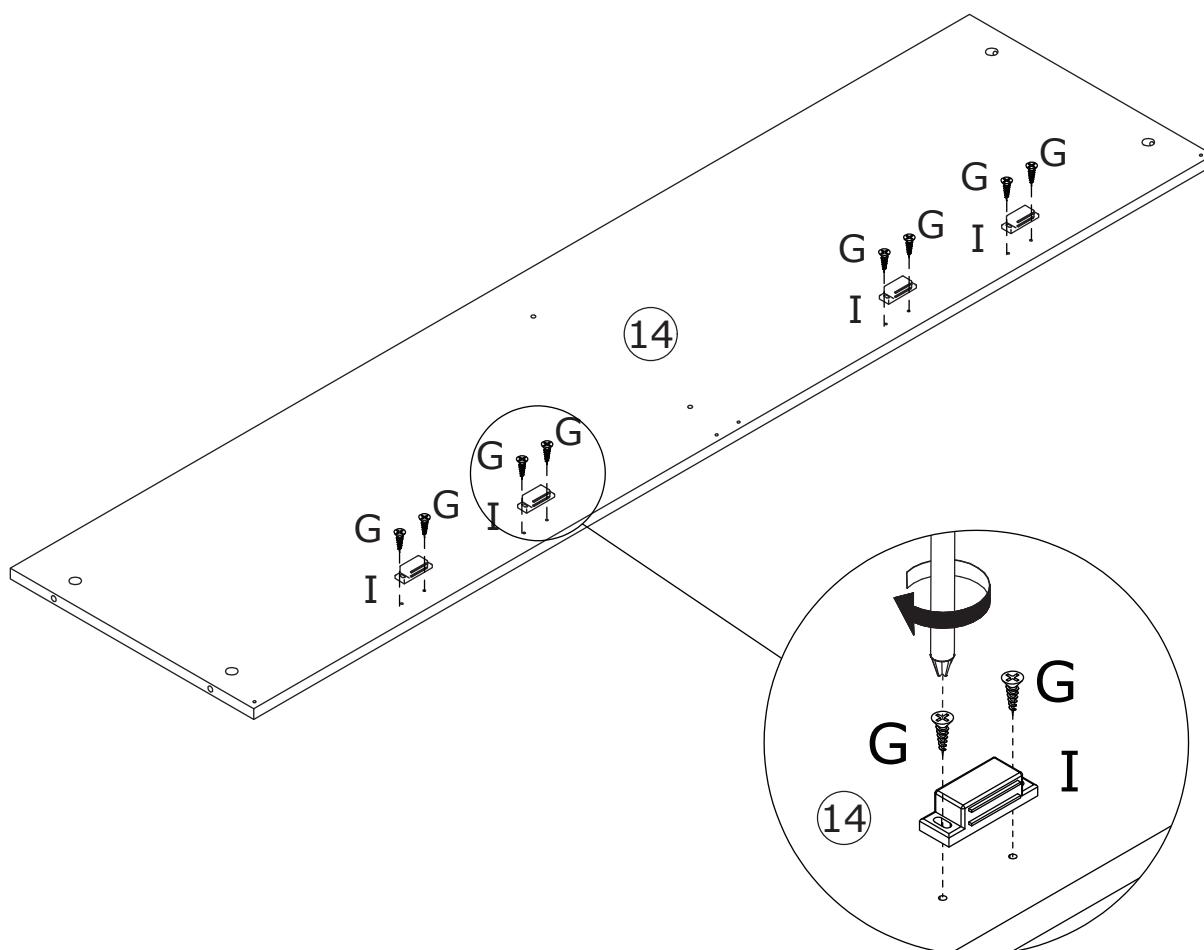

4

 
V x 2



M5 x 40 mm




Fix board 14 to board 19 with screw(V) as shown.

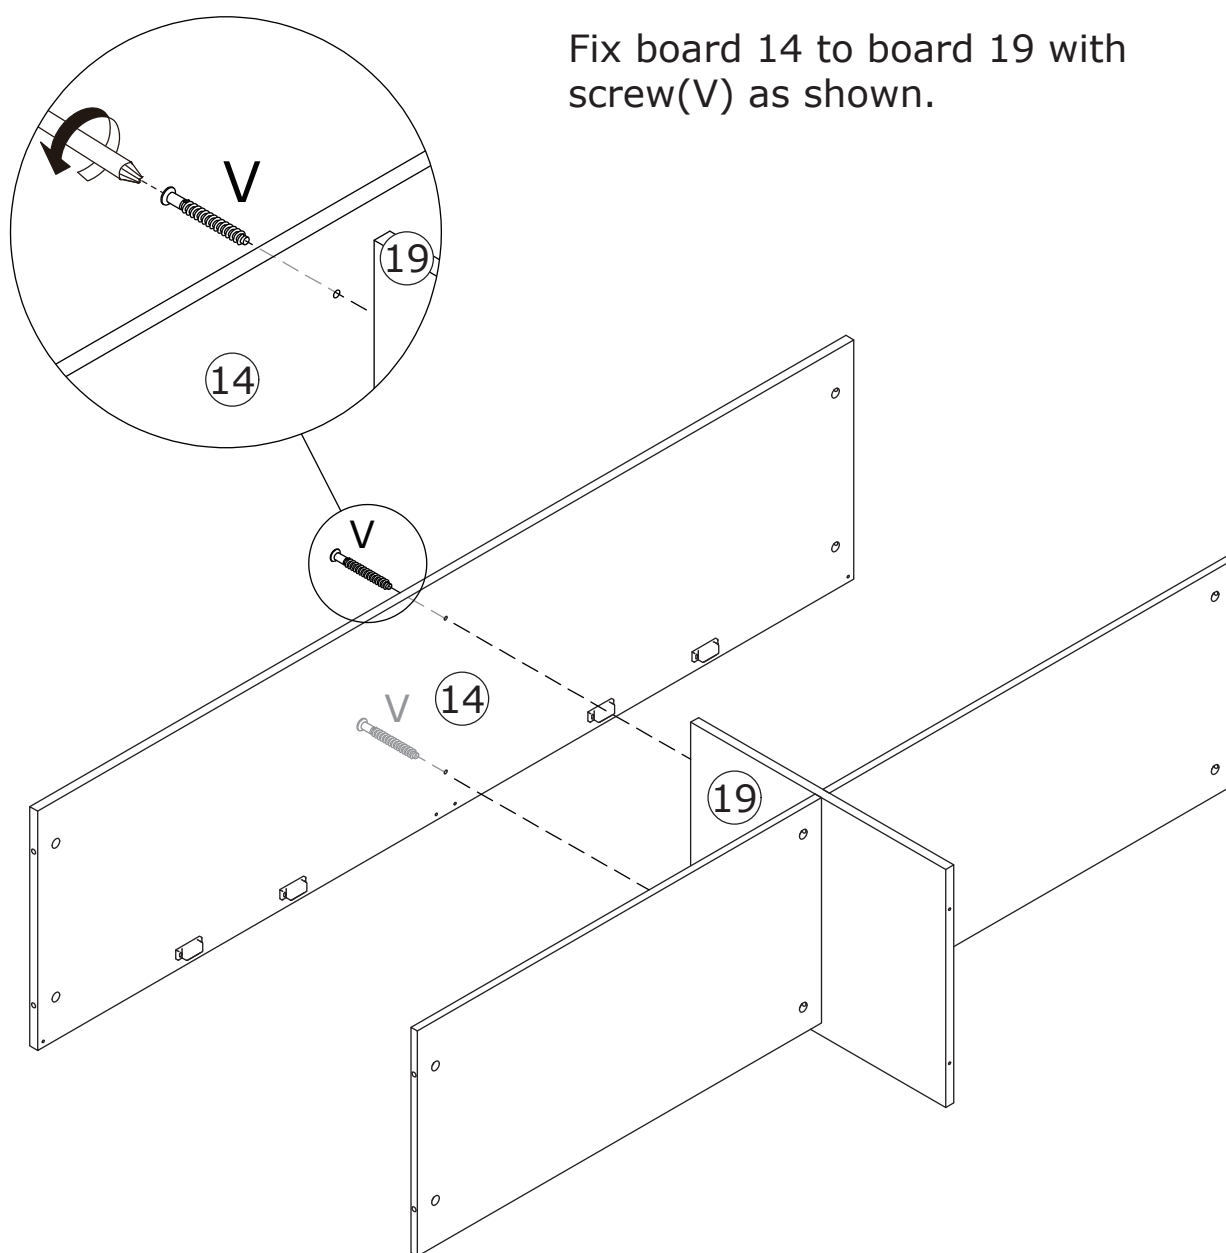

5


<p>E x 6</p>  <p>M6 x 25 mm</p>	<p>x 1</p>  <p>#4</p>	
--	--	--

 Fix tube 6 to board 16 with screw(E) at first.

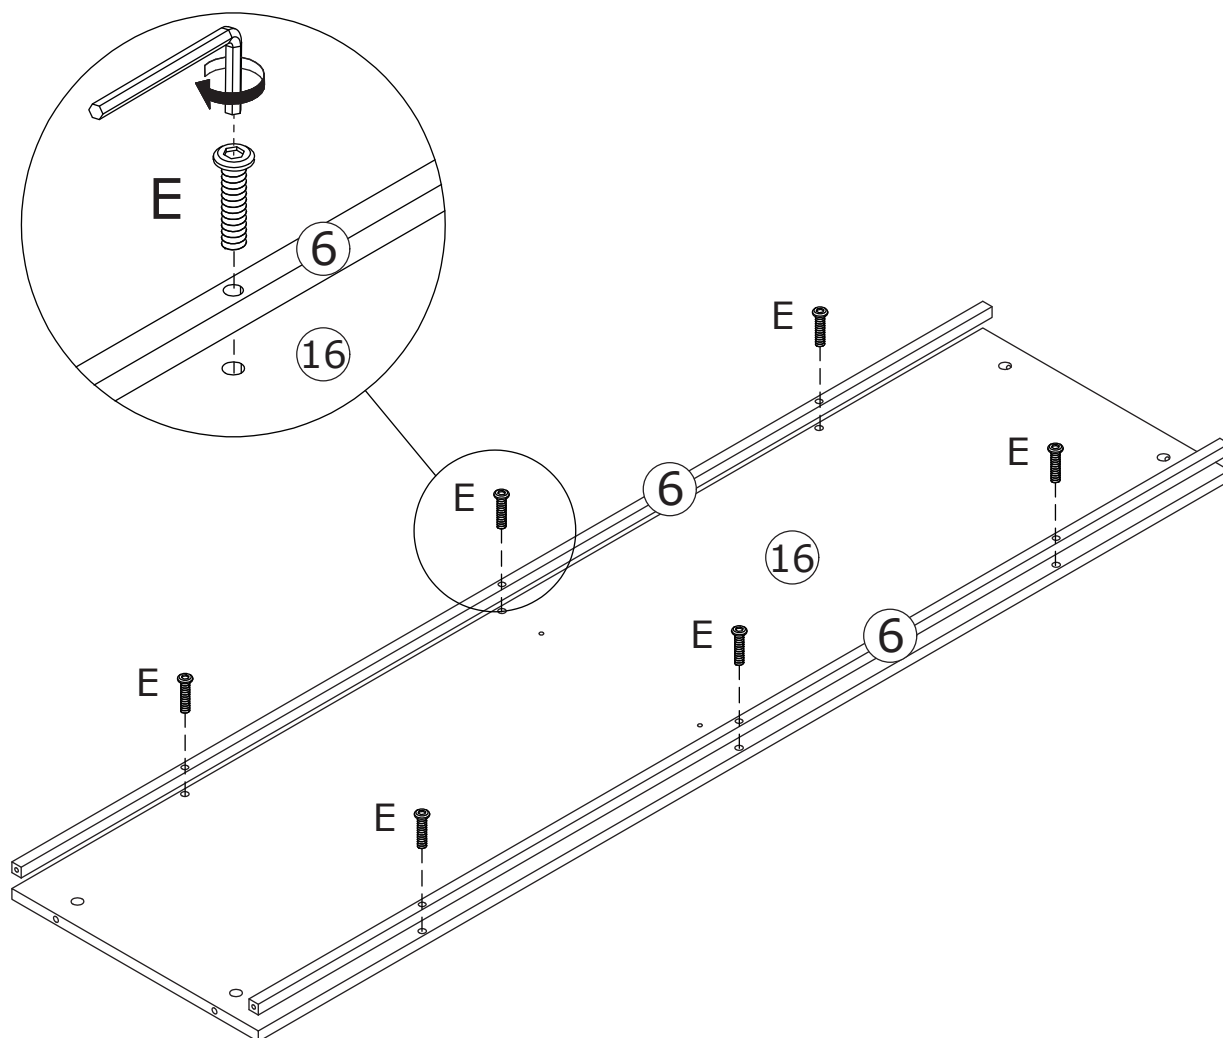


6






V x 2
M5 x 40 mm

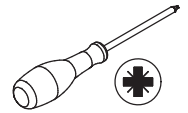

       
Fix board 16 to board 19 with screw(V) as shown.

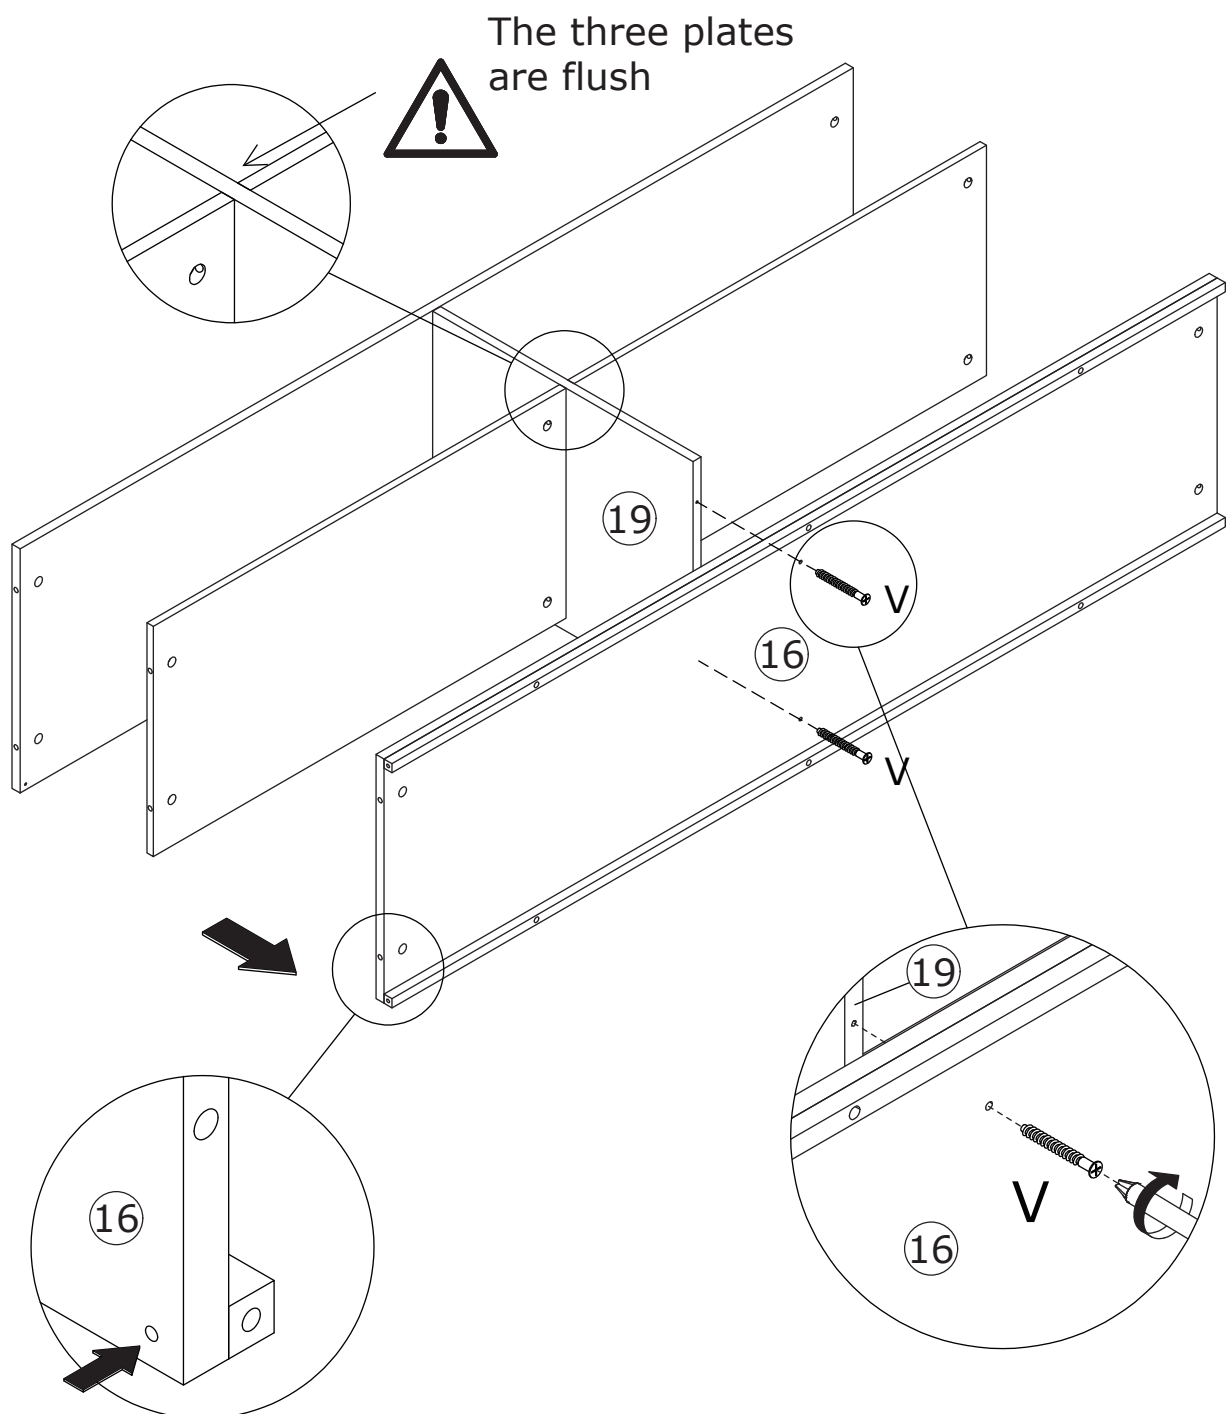


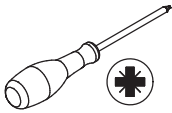
7

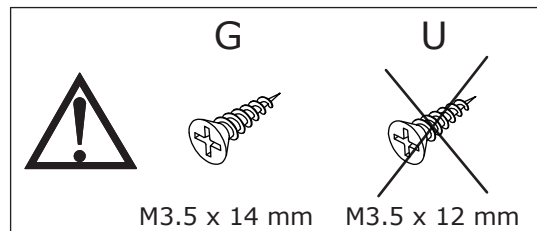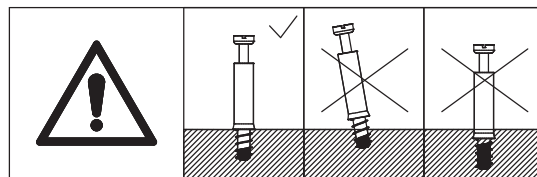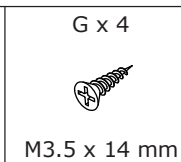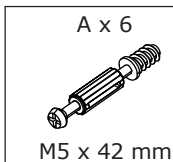


Fix board 10 to iron plate 1 with screw(G), and screw eccentric rod(A) into board 10 at first.

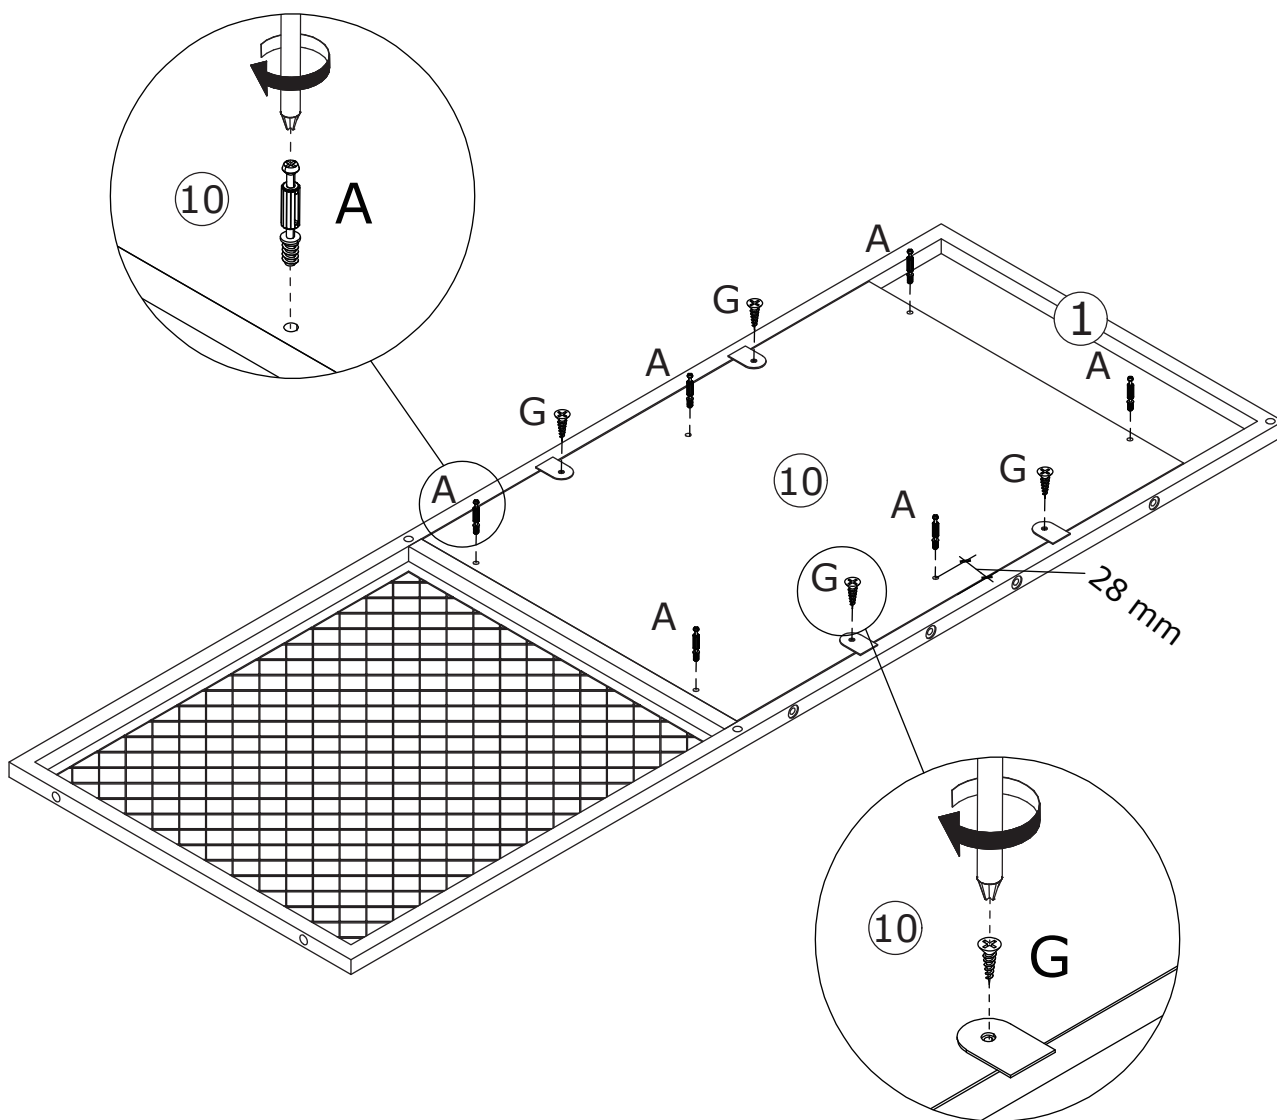


8

<p>B x 6</p>  <p>Ø15 x 10 mm</p>	<p>F x 2</p>  <p>M6 x 35 mm</p>	
---	--	---

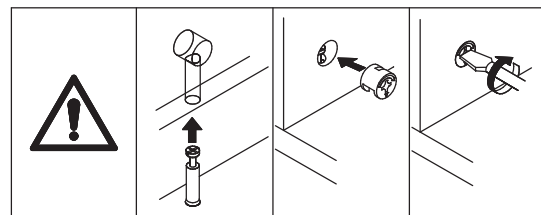 



 
Attach board 10 to board 14, 15 and 16, add cam lock(B) into board 14,15,16 and turn clockwise to tighten, then fix iron plate 1 to tube 6 with screw(F) as shown.

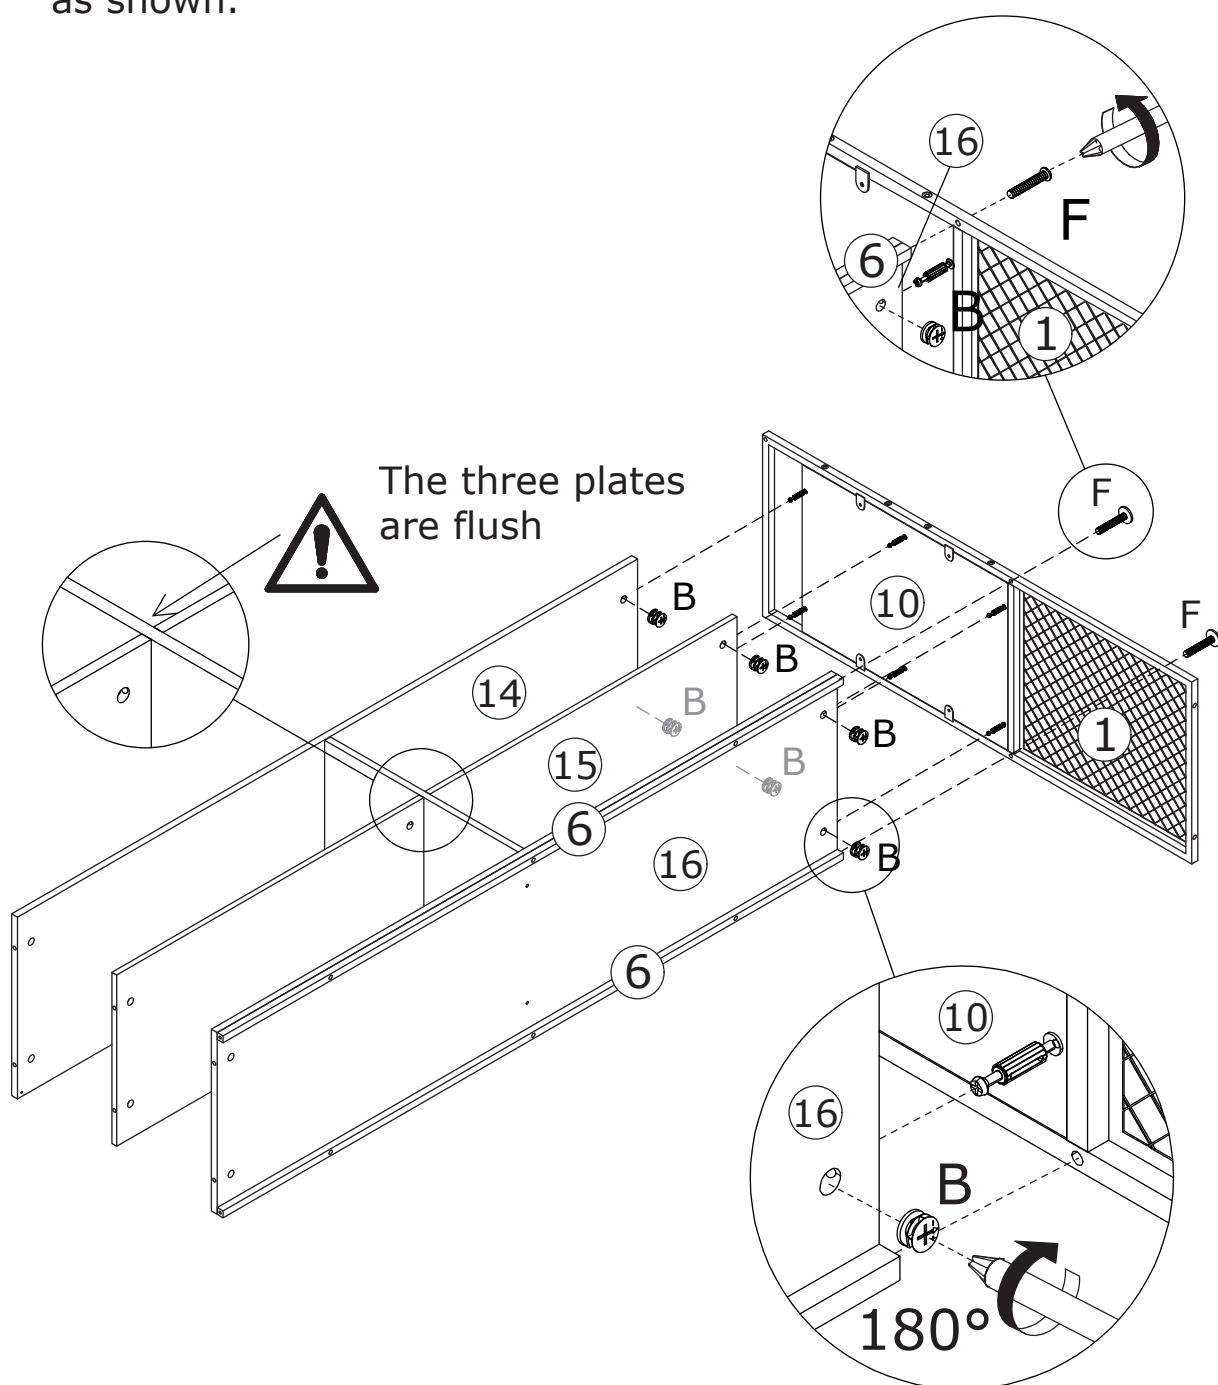


9

A x 6
M5 x 42 mm

   G x 4
M3.5 x 14 mm

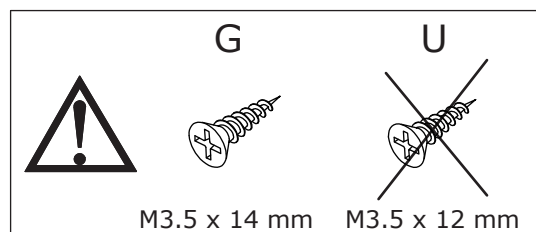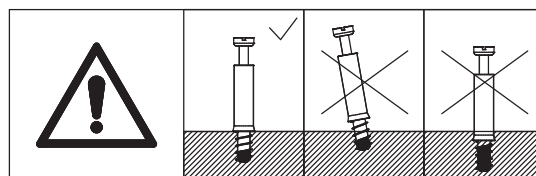

 Fix board 11 to iron plate 2 with screw(G), and screw eccentric rod(A) into board 11 at first.

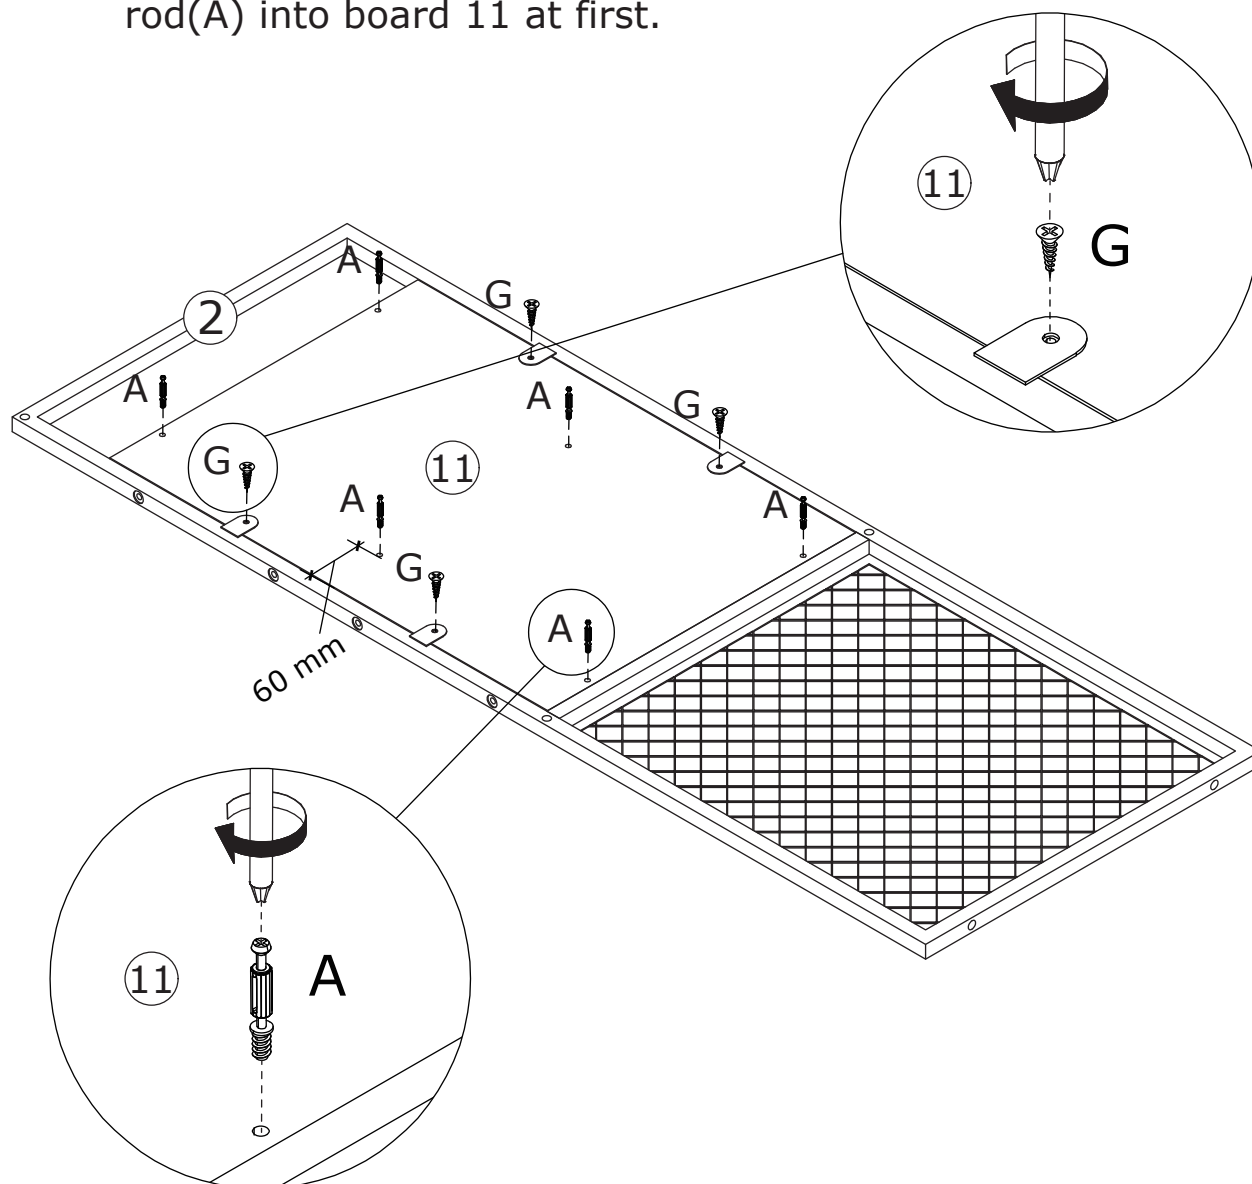

10

B x 6

 
 
 



Ø 15 x 10 mm

F x 4




M6 x 35 mm

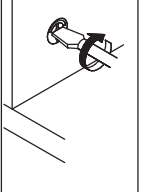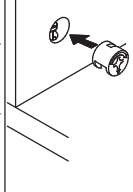

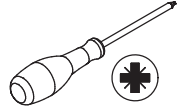


Attach board 11 to board 14, 15 and 16, add cam lock(B) into board 14,15,16 and turn clockwise to tighten, then fix iron plate 2 to tube 6 with screw(F) as shown.

 
Fix tube 5 to iron plate 1 and 2 with screw(F) as shown.

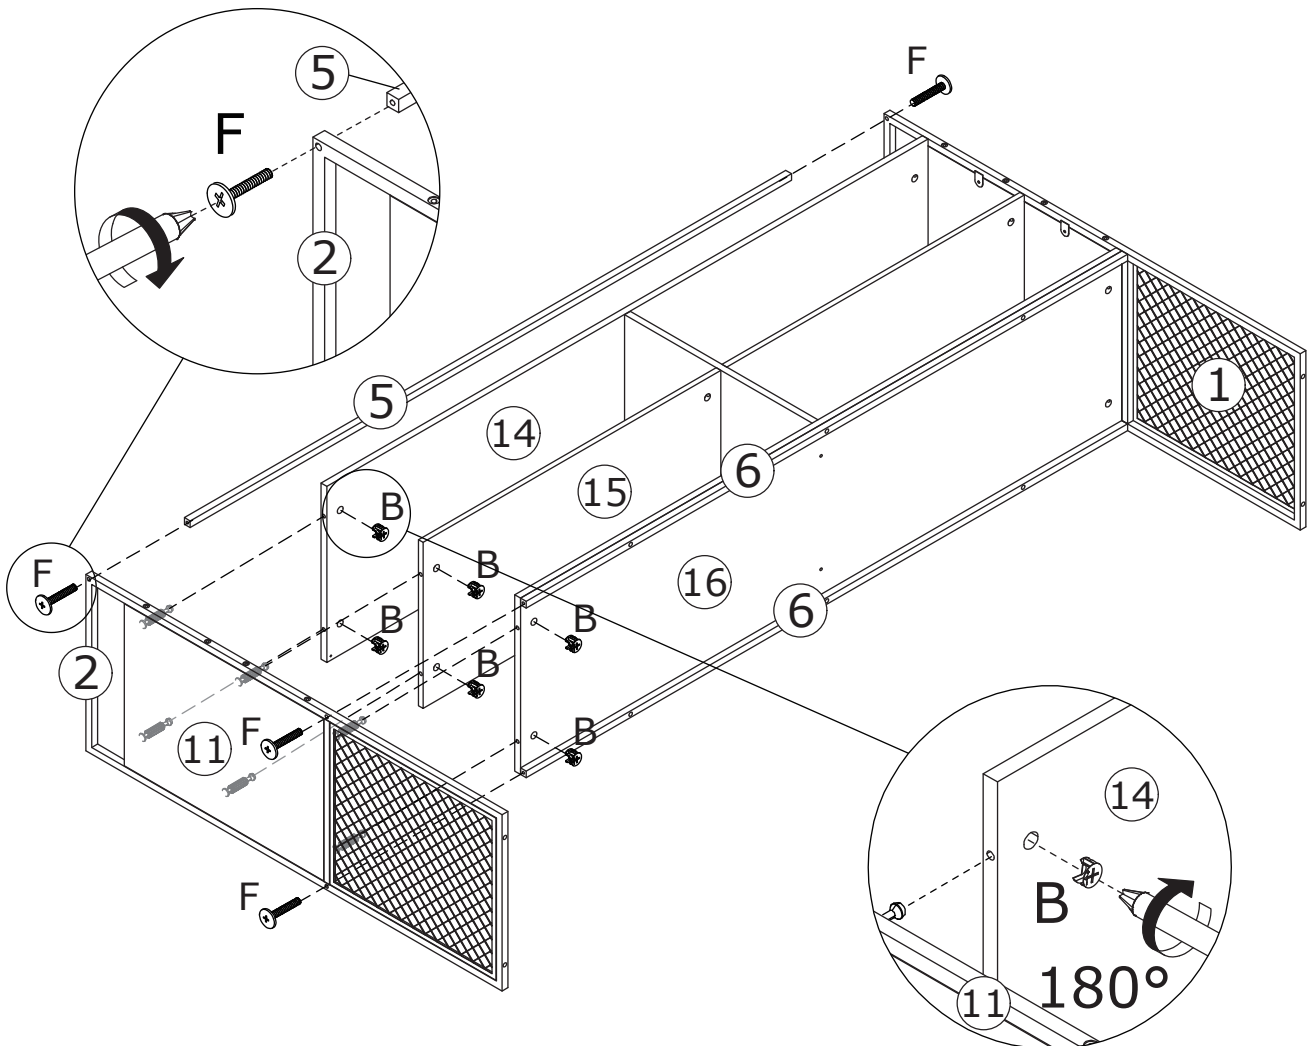

11

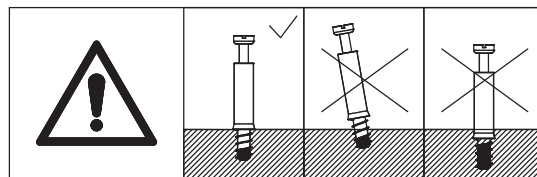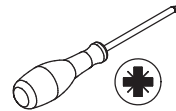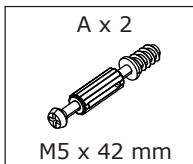 

 
Screw eccentric rod(A) into board 17 at first.

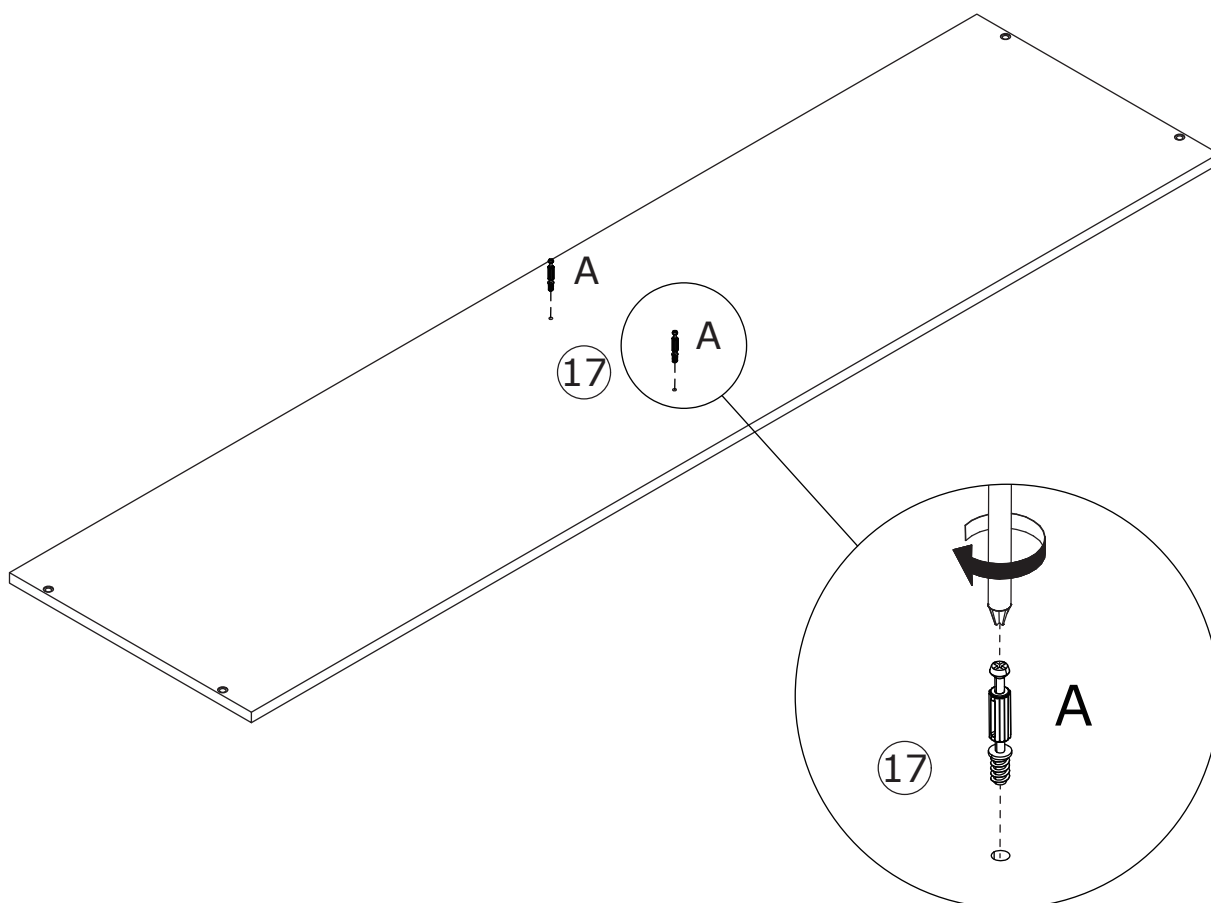

12

<p>E x 4</p>  <p>M6 x 25 mm</p>	<p>x 1</p>  <p>#4</p>	
--	--	--

 
Fix board 17 to iron plate 1 and 2 with screw(E) as shown.

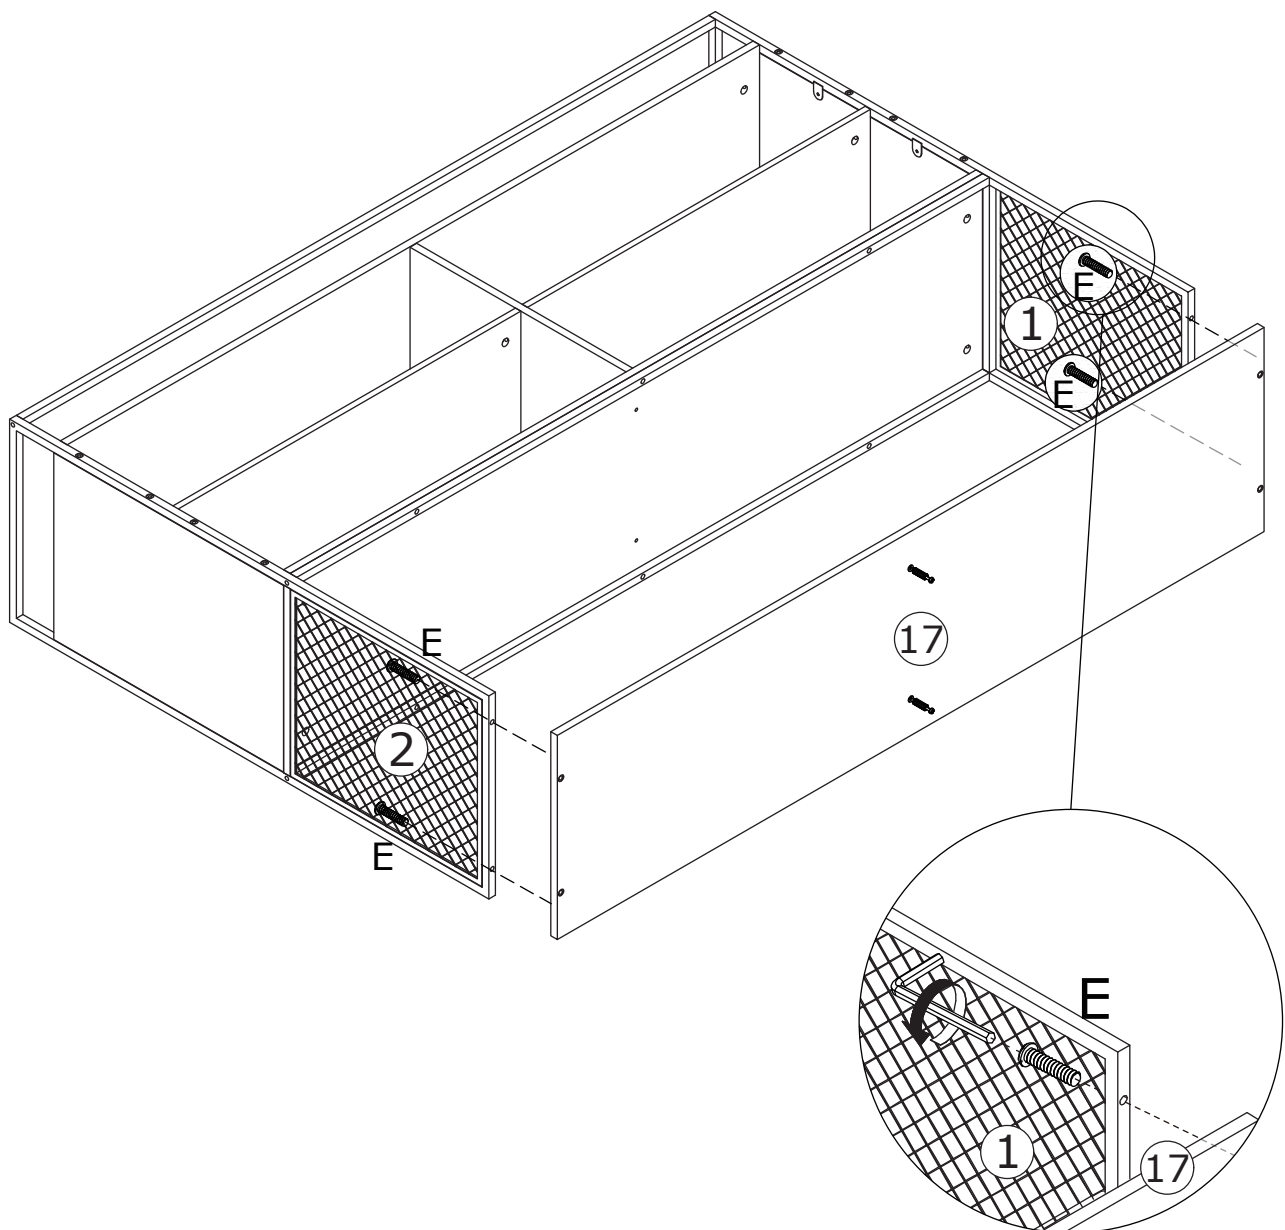

13

A x 8
M5 x 42 mm





 
G x 4
M3.5 x 14 mm






Screw eccentric rod(A) into board 20 and fix rail part 28 with screw(G) at first.

Flip to back, screw eccentric rod(A) into and fix rail part 28 with screw(G) as well.

     Please note that the mounting holes of the two slides are not the same

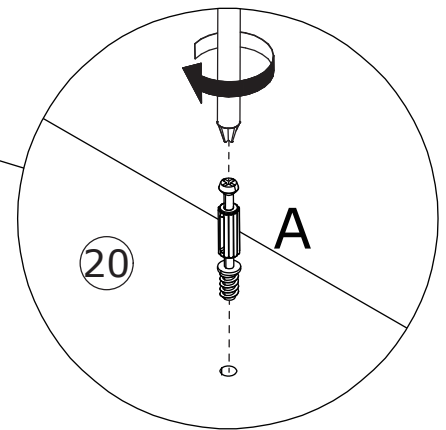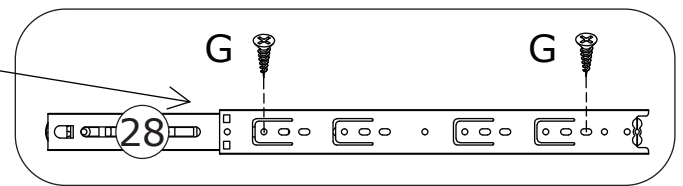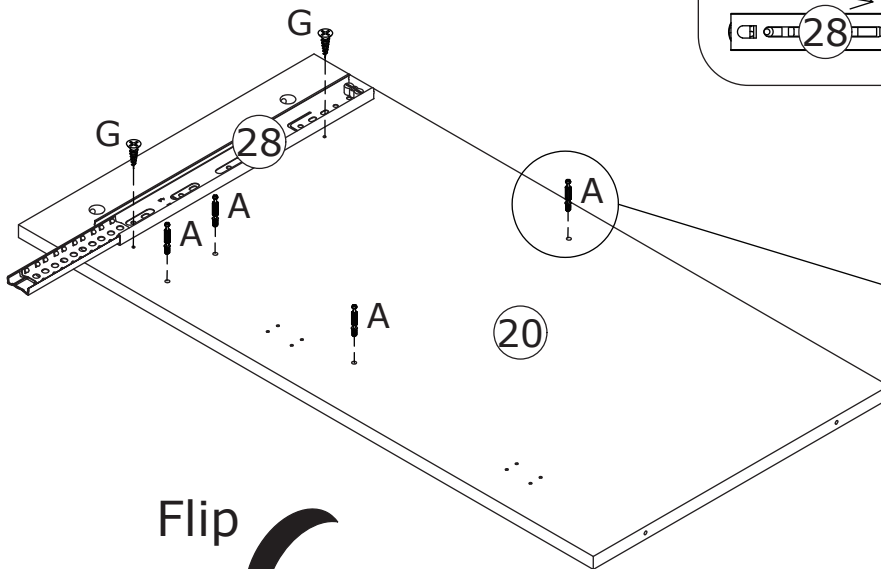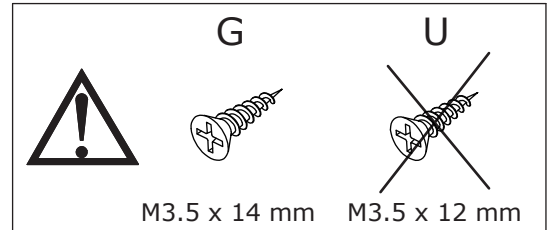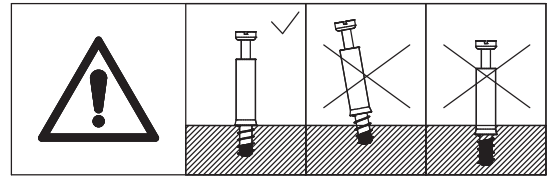

Flip


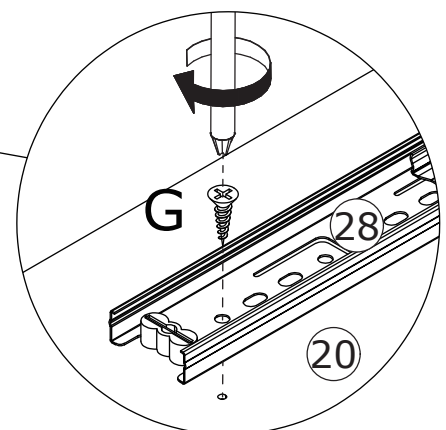 
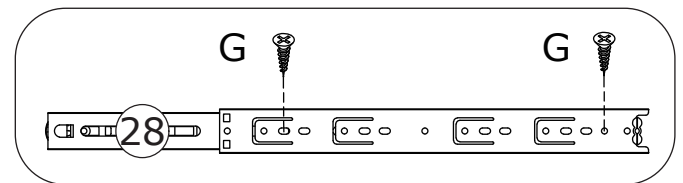 
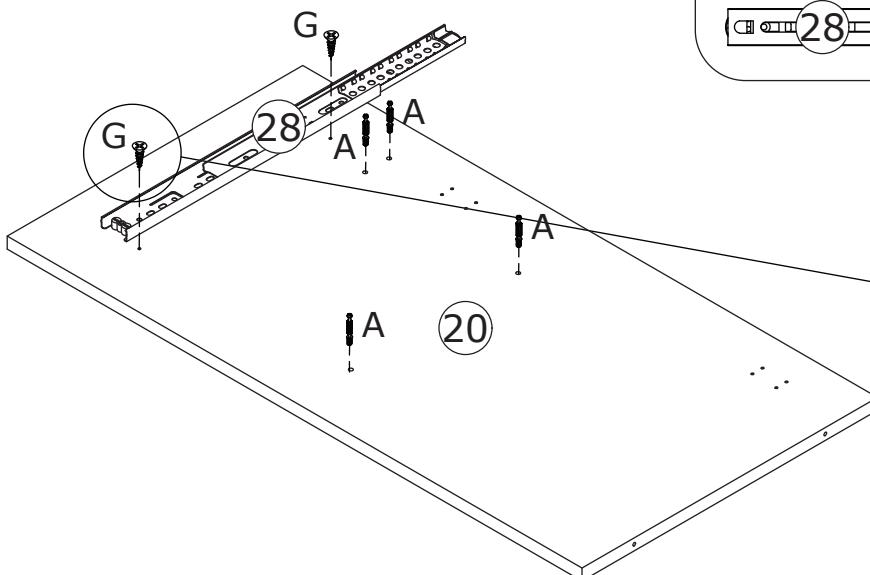 


14


B x 2



   Ø15 x 10 mm

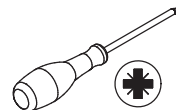

 Attach board 20 to board 17, add cam lock(B) into board 20 and turn clockwise to tighten as shown.


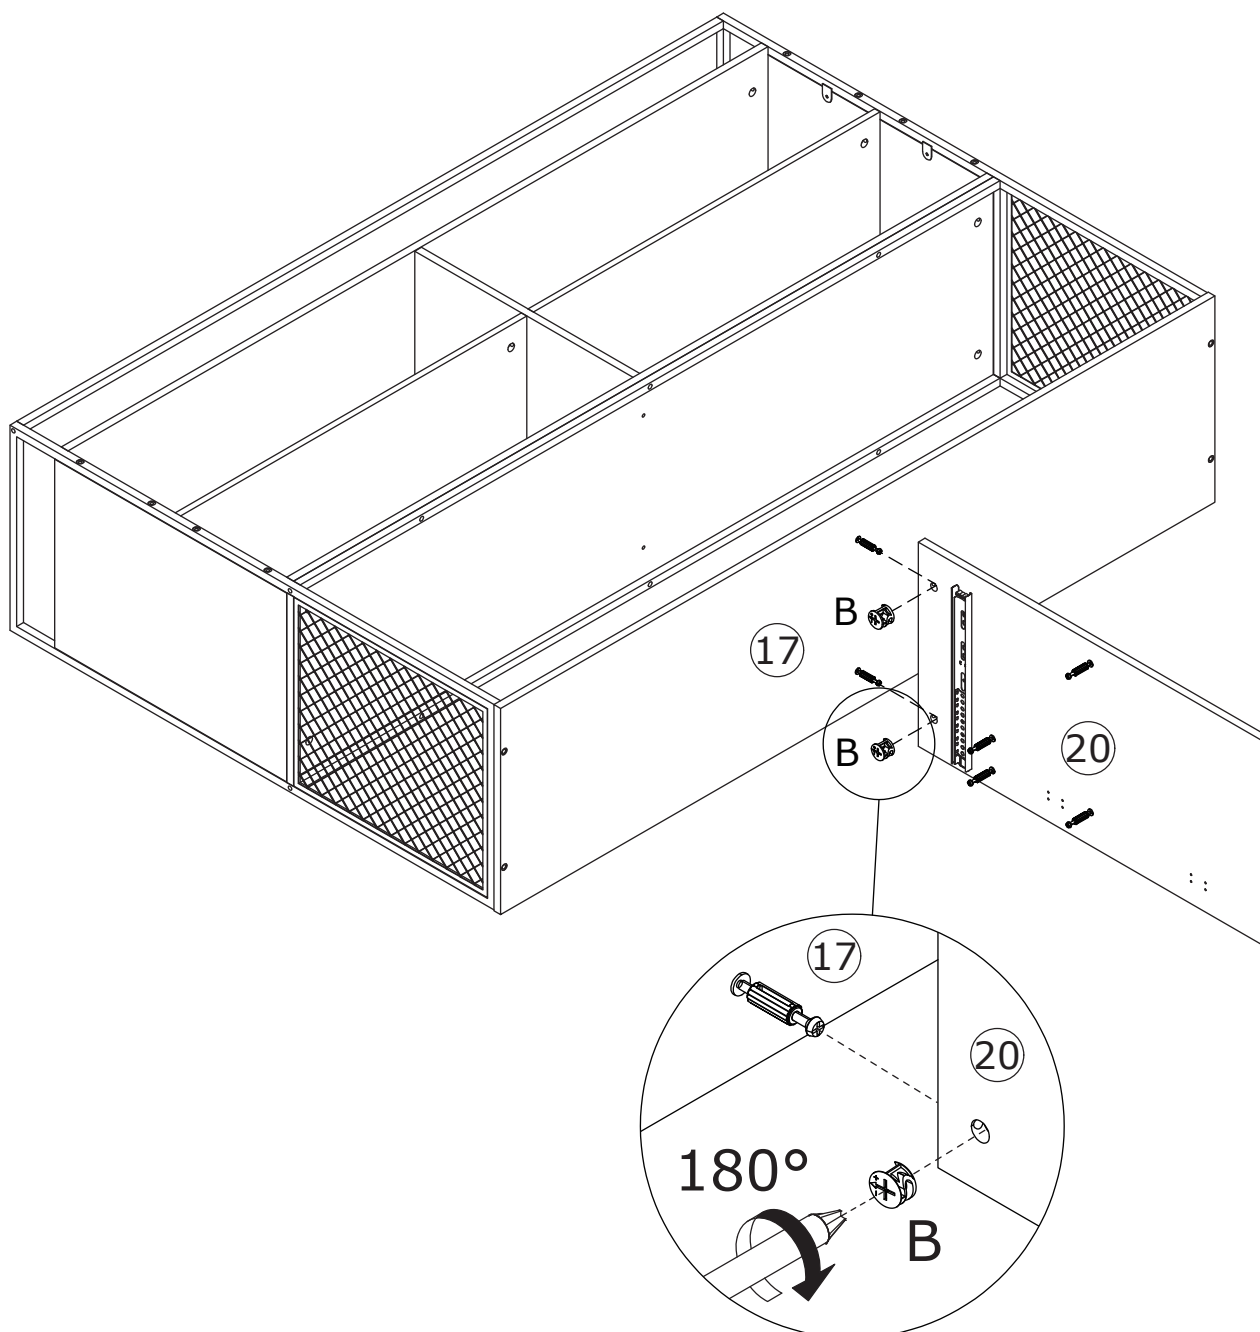


15


B x 4



 Ø15 x 10 mm

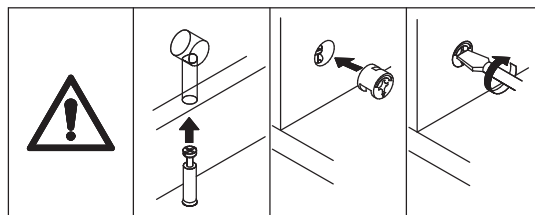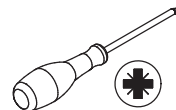

 Attach board 29 to board 20, add cam lock(B) into board 29 and turn clockwise to tighten as shown.




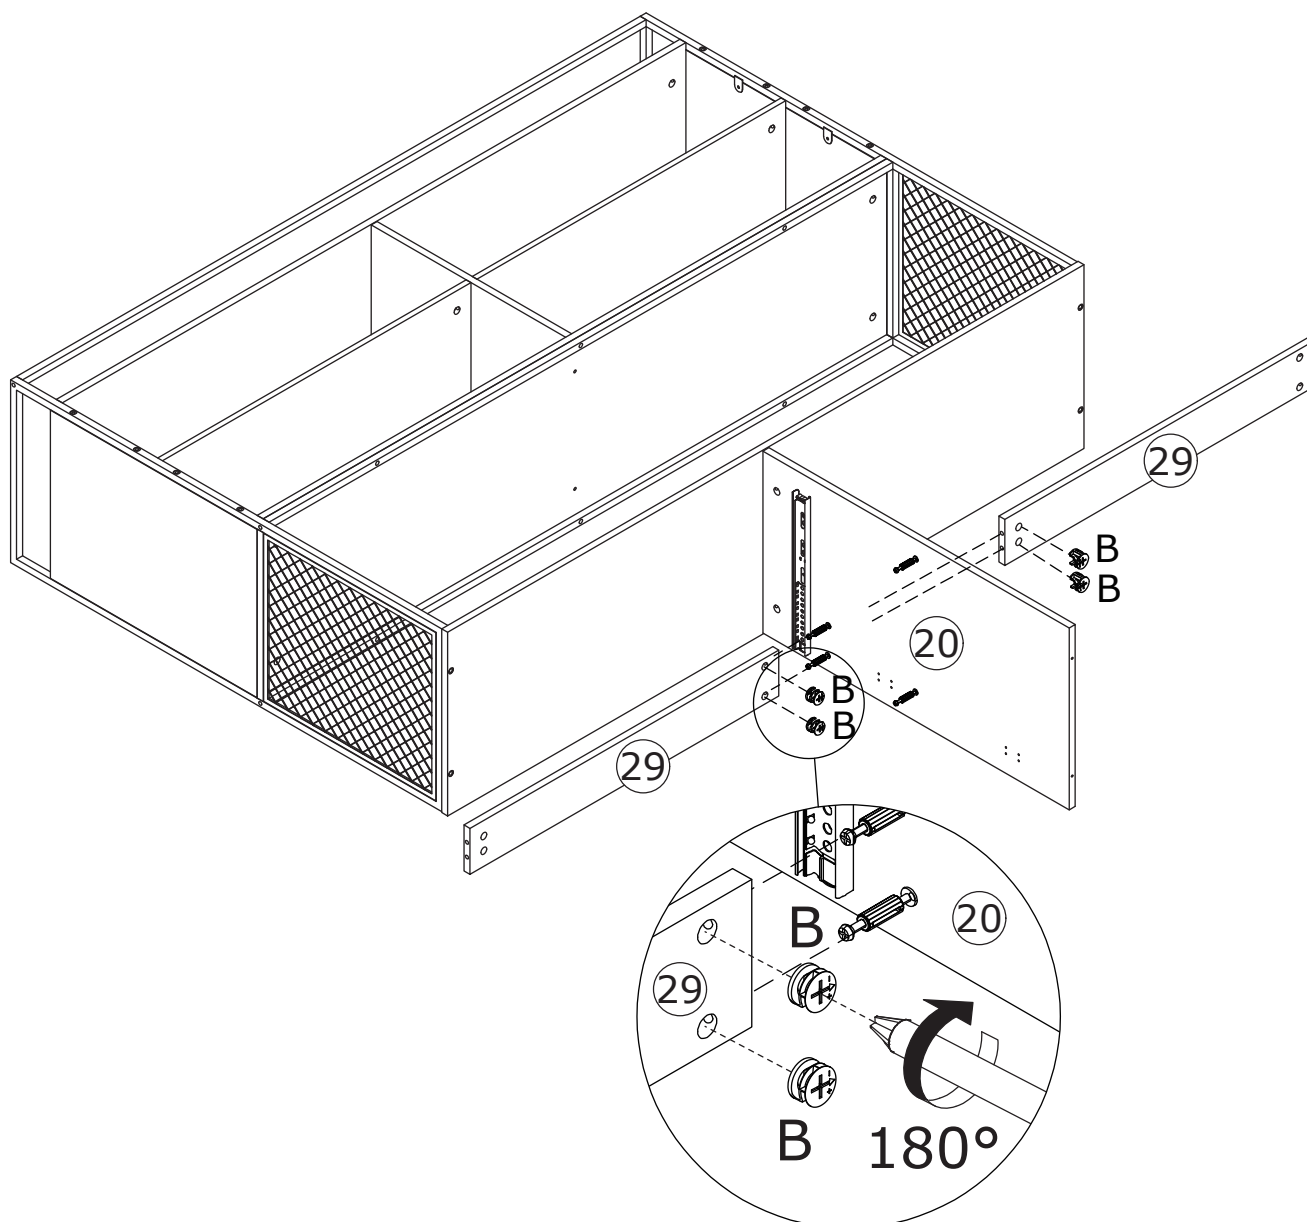


16


B x 4



    Ø 15 x 10 mm

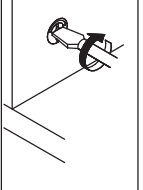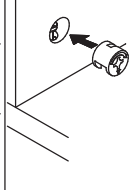

 Attach board 15 to board 20, add cam lock(B)
into board 15 and turn clockwise to tighten as shown.

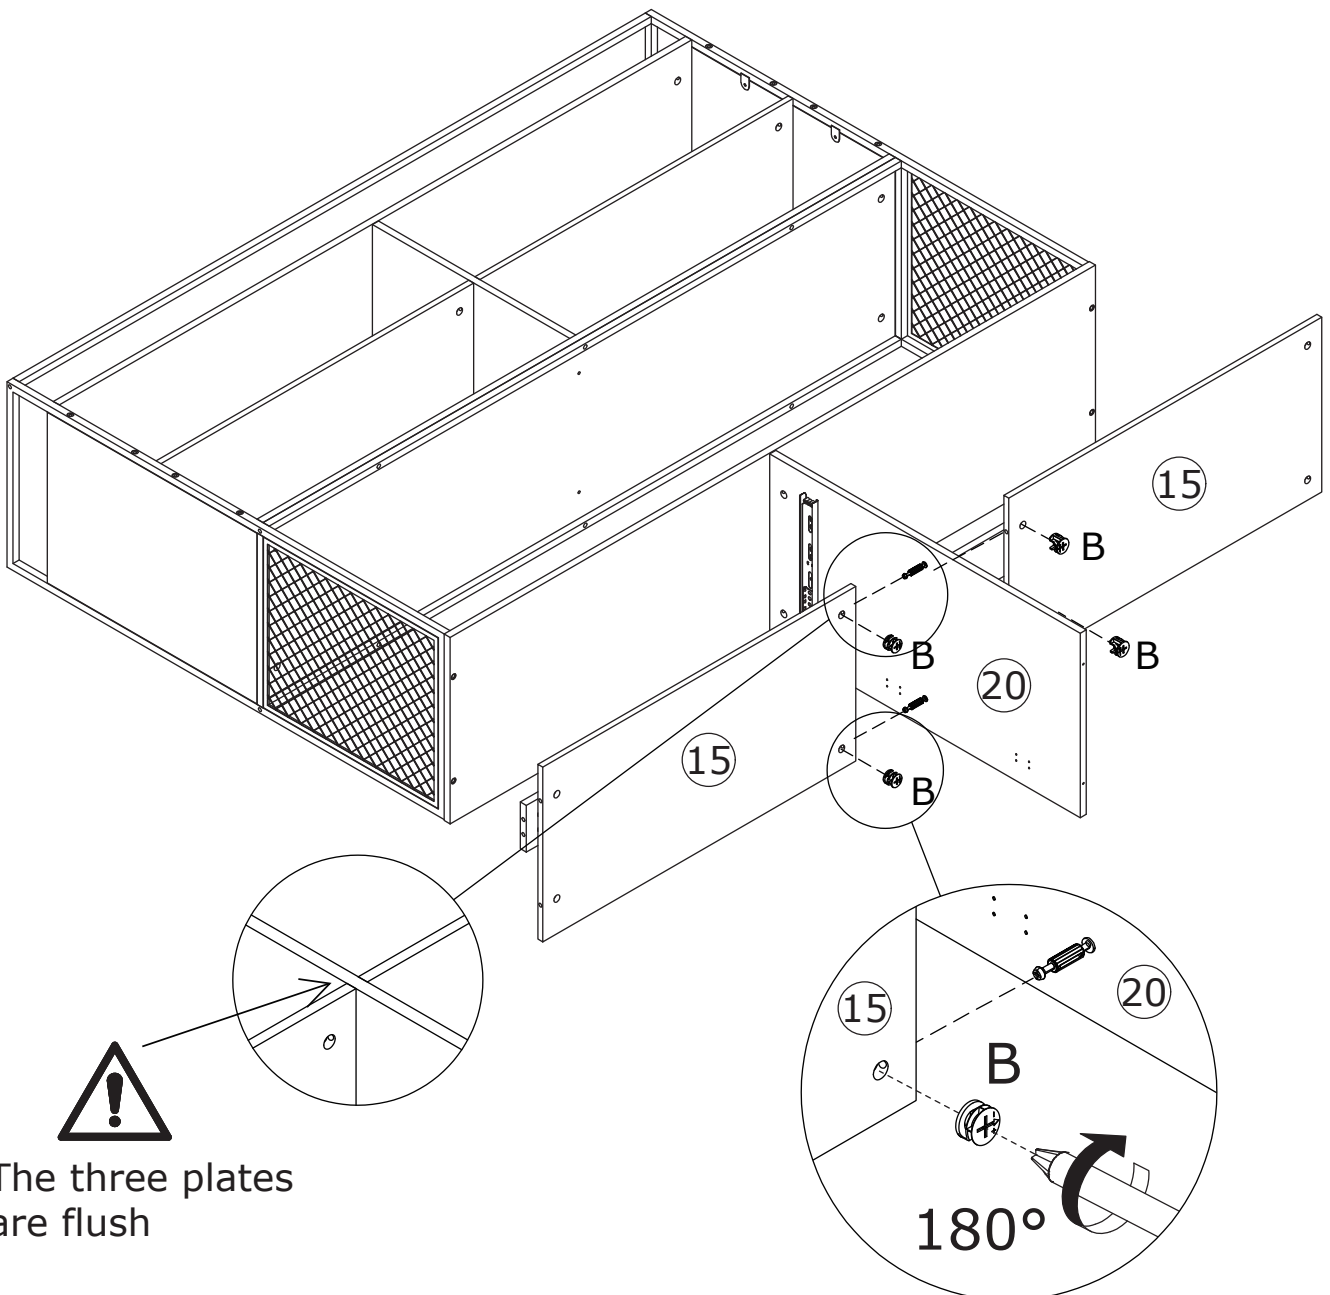


17

<p>C x 4</p>  <p>M6 x 12 mm</p>	<p>x 1</p>  <p>#4</p>	
--	--	--

Fix iron plate 3 and 4 to board 17 with screw(C) as shown.



 The holes are facing up

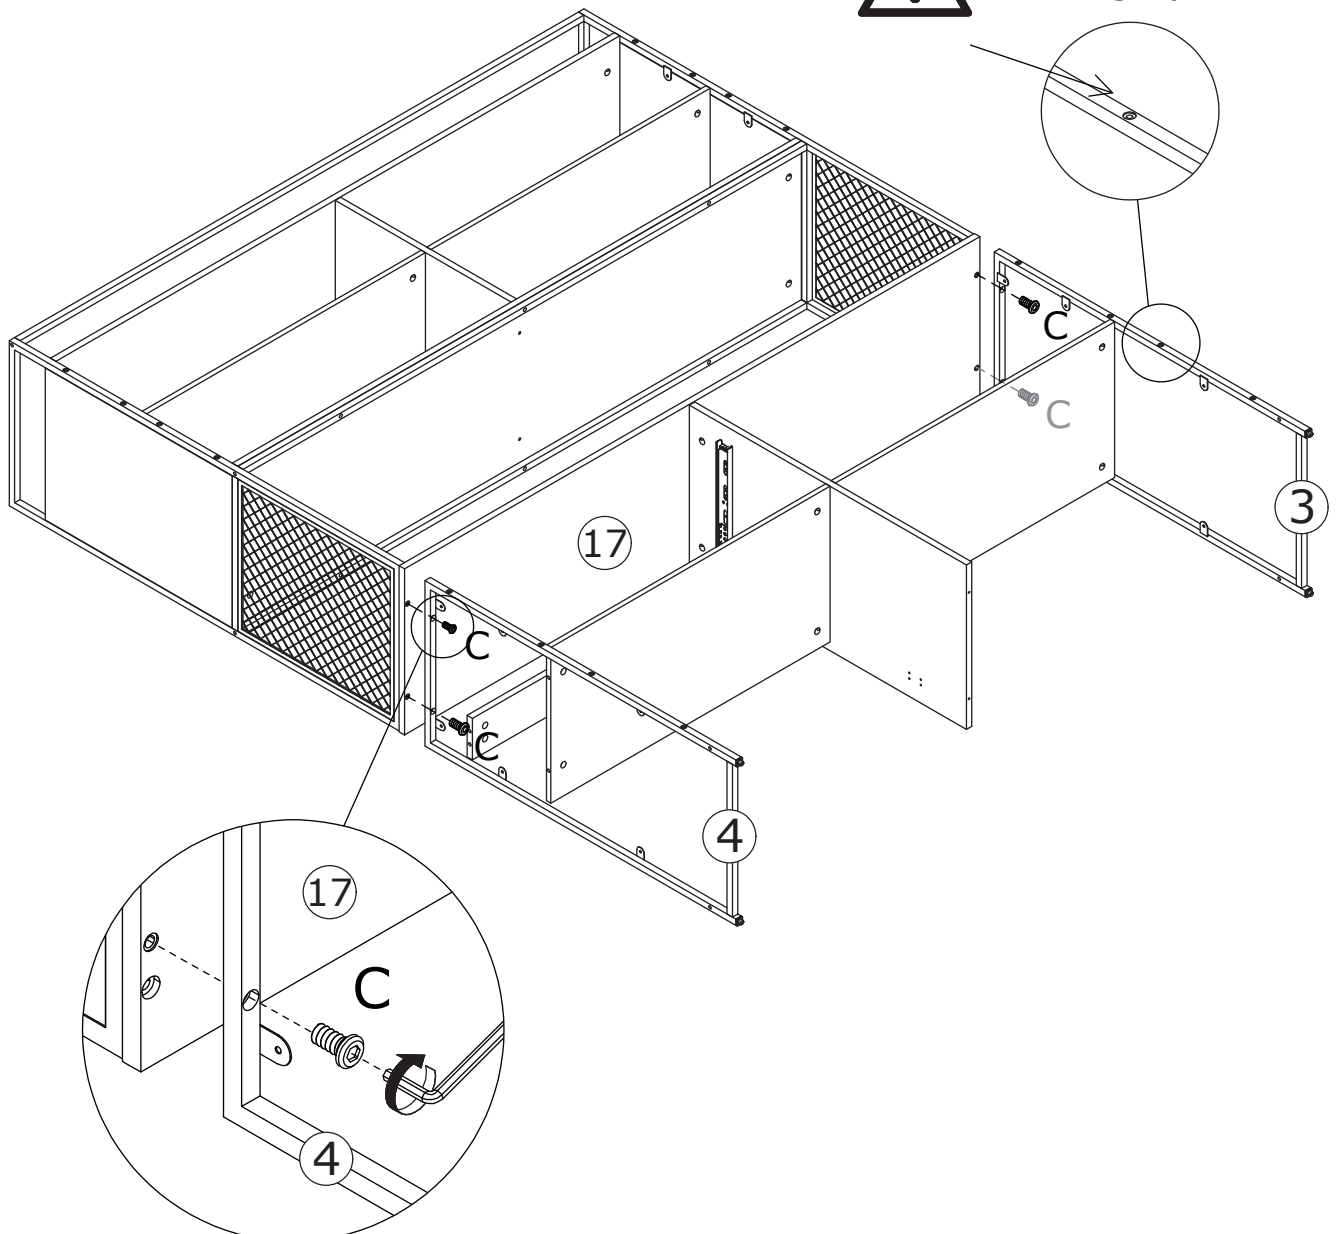

18

E x 6



M6 x 25 mm

G x 4




M3.5 x 14 mm

x 1



#4

 


G




M3.5 x 14 mm

 U



M3.5 x 12 mm

 Fix tube 6 to board 18 with screw(E) at first.
Fix leg support 30 to board 18 with screw(G) as shown.

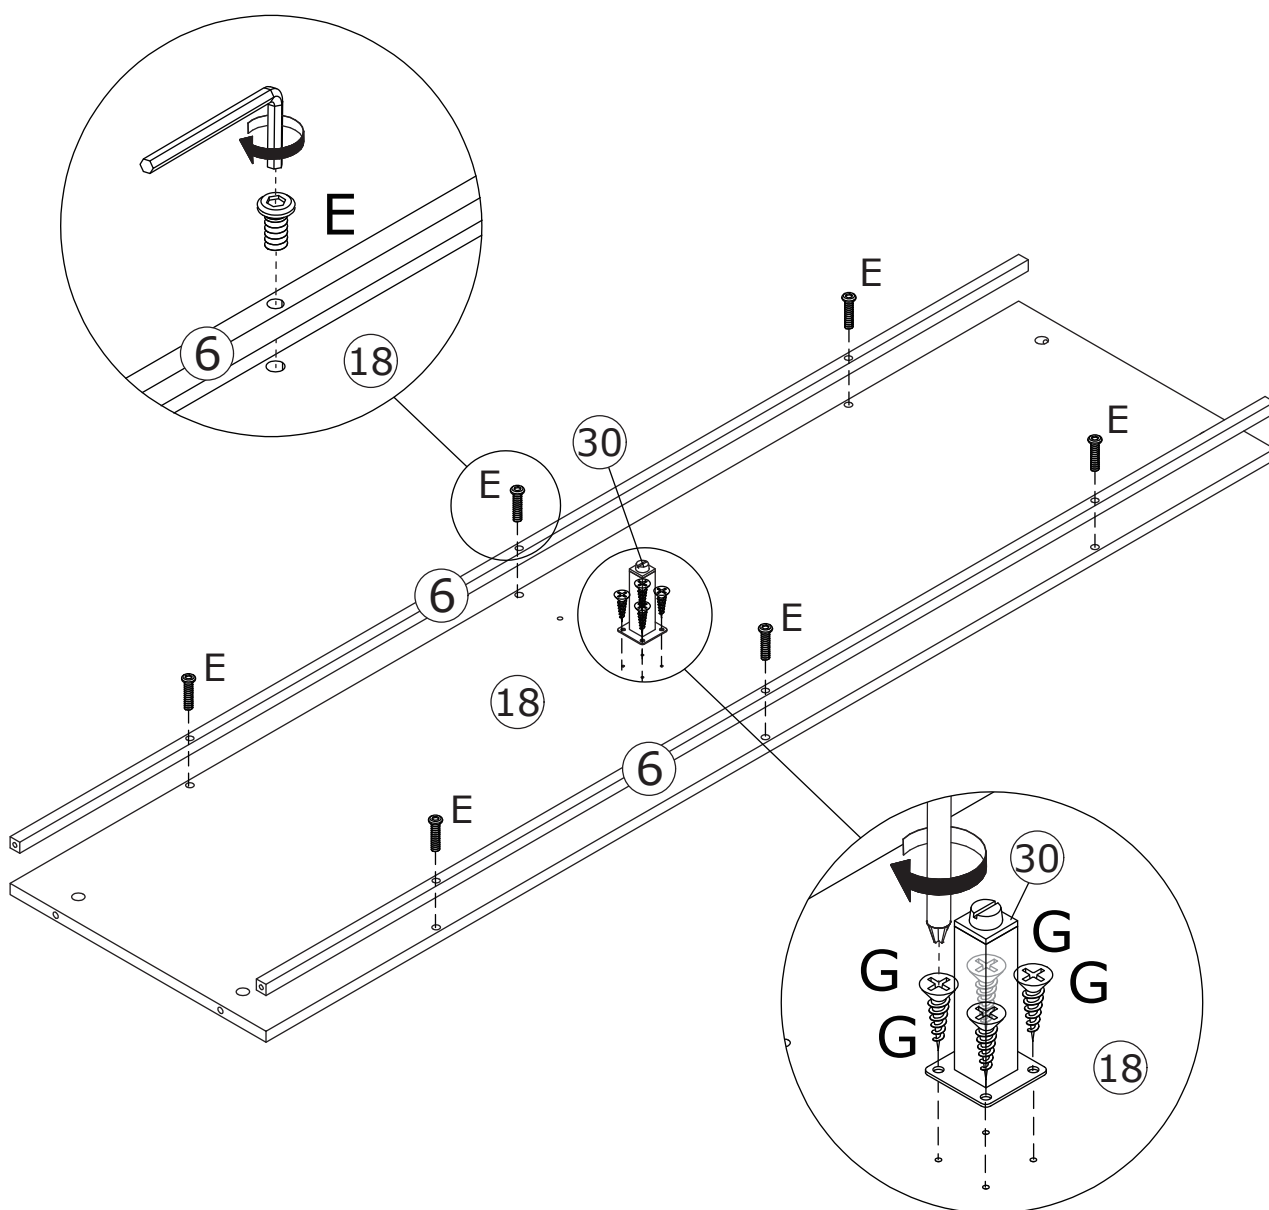


19


V x 2



 M5 x 40 mm



 Fix board 18 to board 20 with screw(V) as shown.

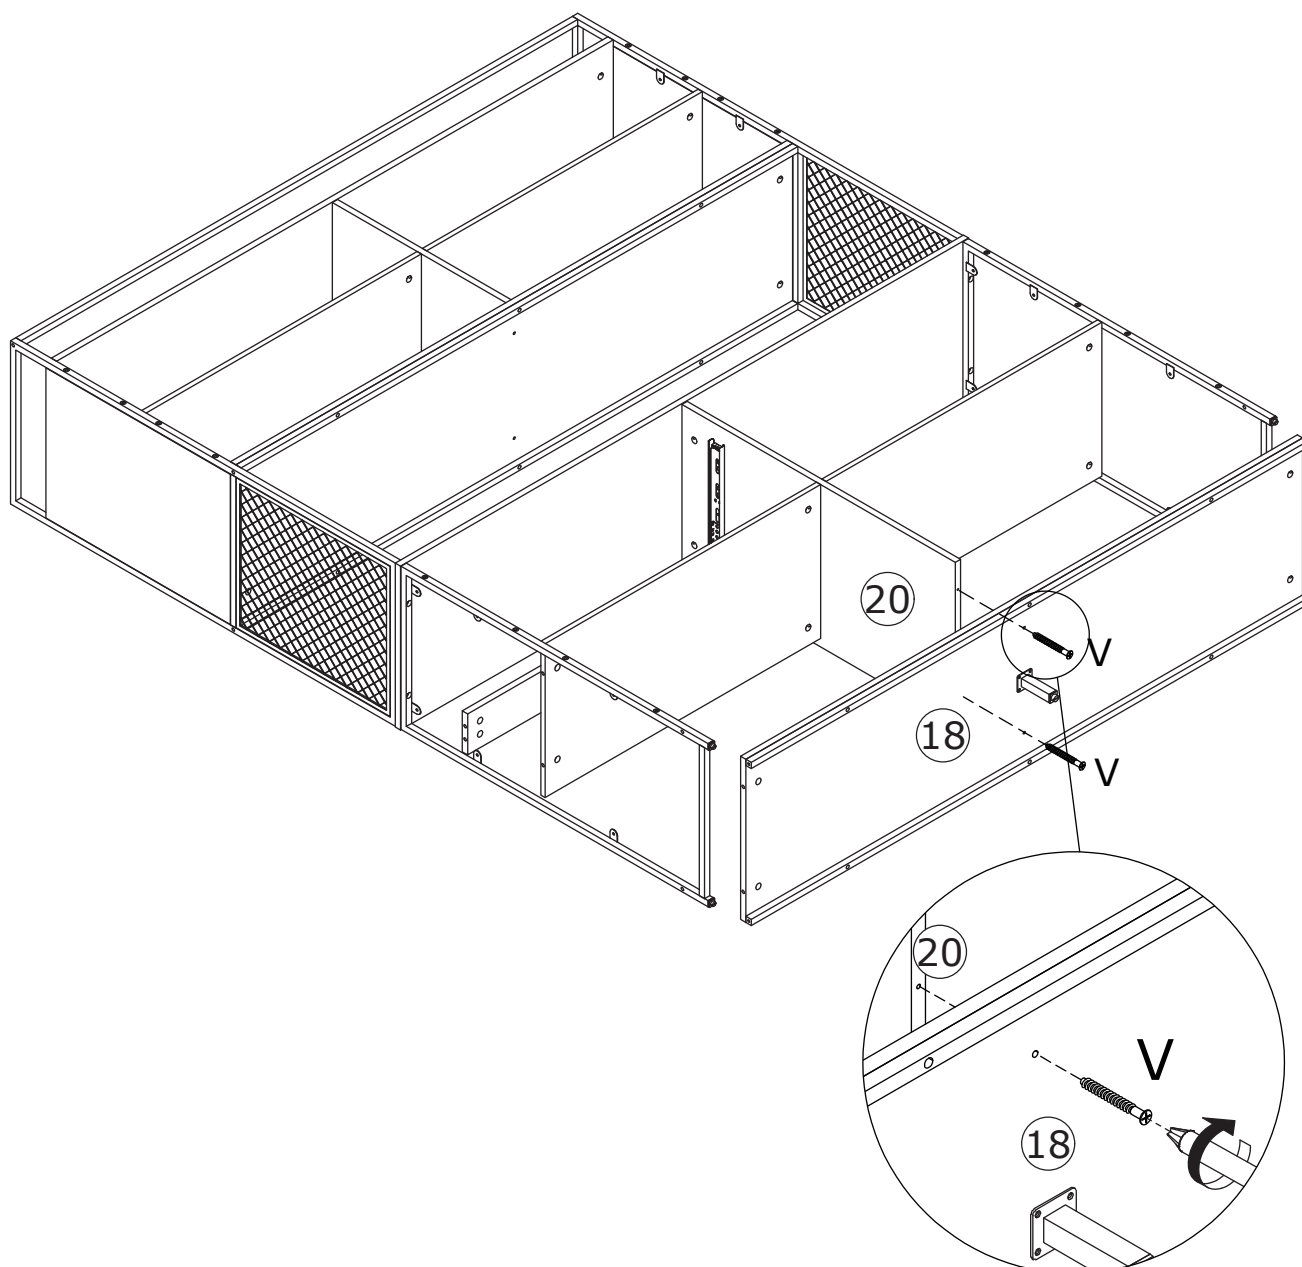


20


F x 4



 M6 x 35 mm

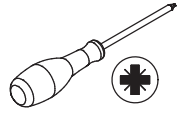



 
Fix tube 6 to iron plate 3 and 4 with screw(F) as shown.

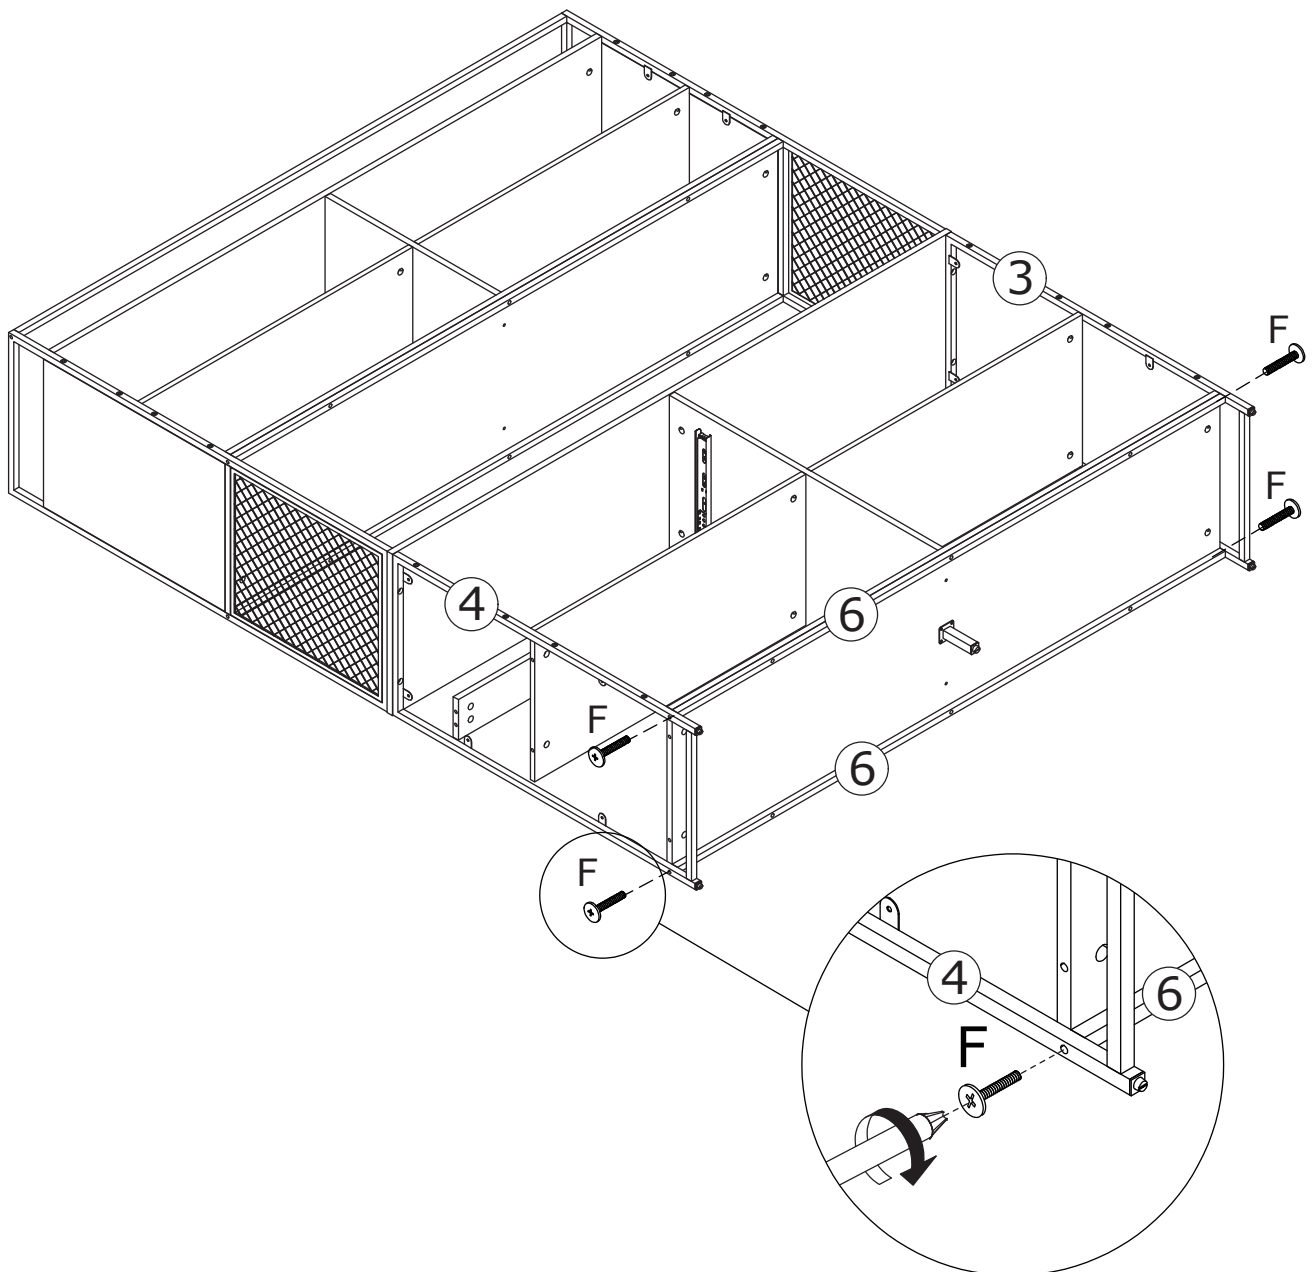



21

A x 6
M5 x 42 mm

   G x 2
M3.5 x 14 mm

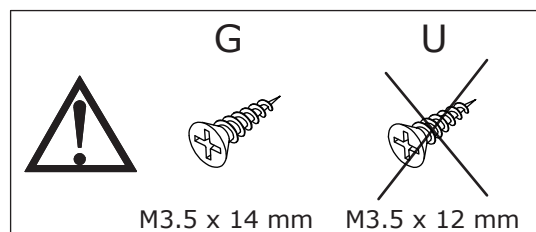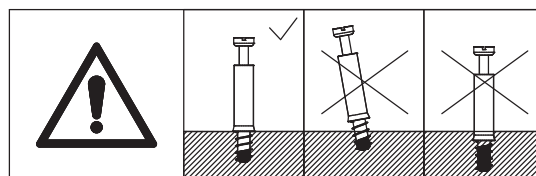

  Screw eccentric rod(A) into board 12 at first.
Fix rail part 28 to board 12 with screw(G) as shown.

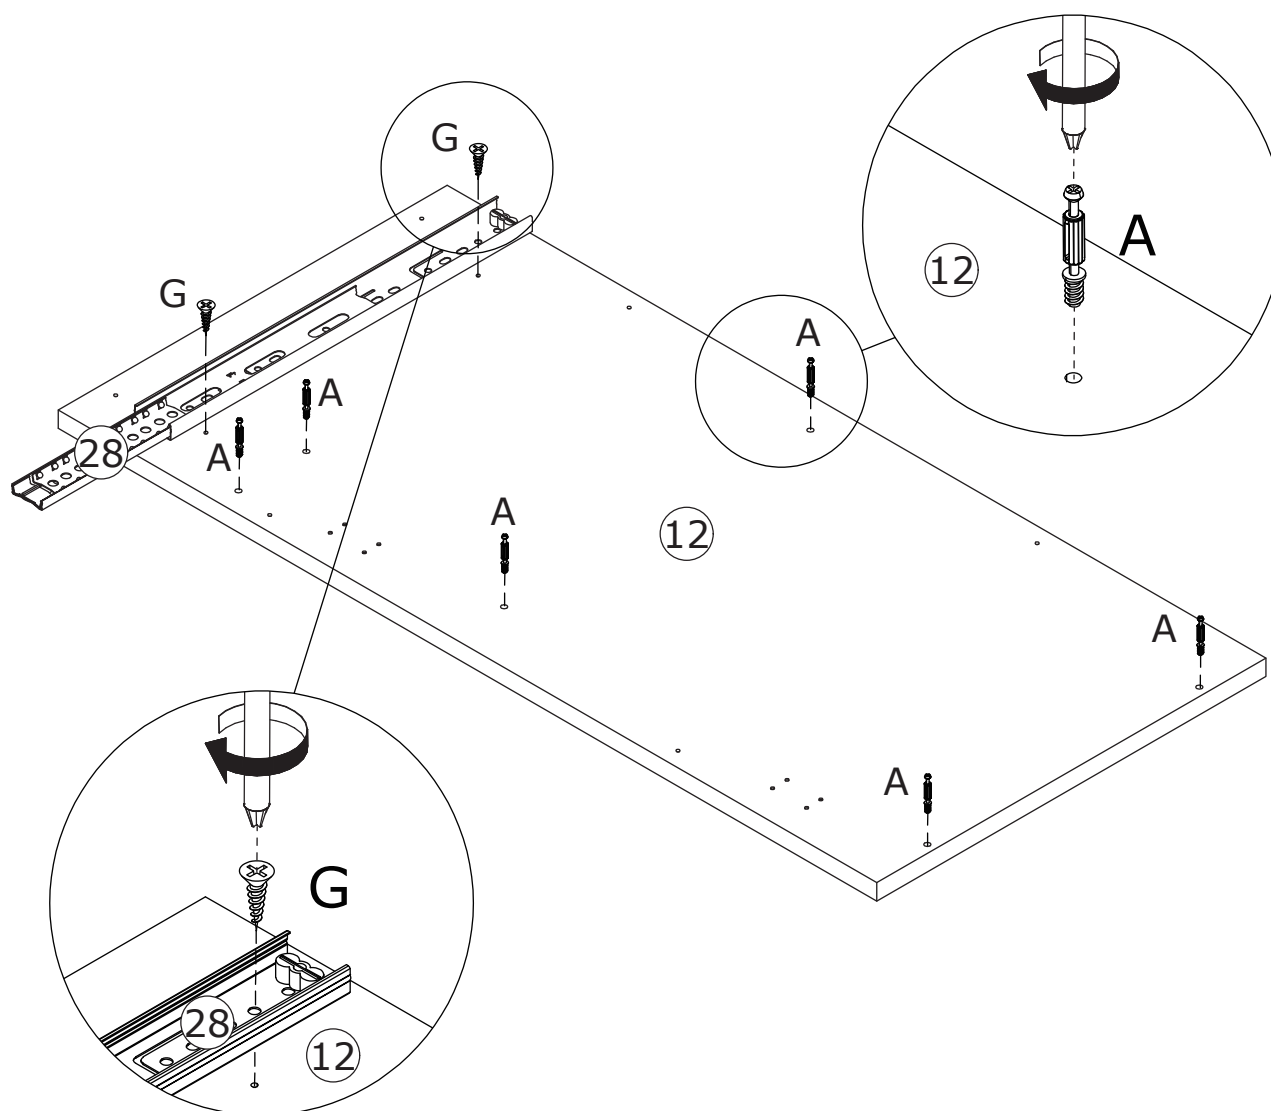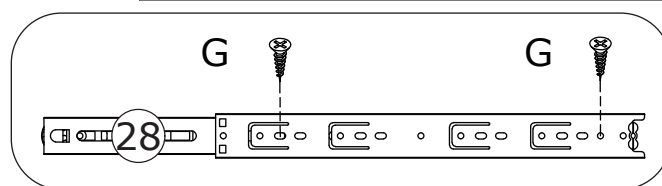

22

B x 6

 


Ø15 x 10 mm

G x 6








M3.5 x 14 mm



Attach board 12 to board 15, 29 and 18, add cam lock(B) into board 15,29,18 and turn clockwise to tighten as shown.

   
 
 
Fix board 12 to iron plate 3 with screw(G) as shown.

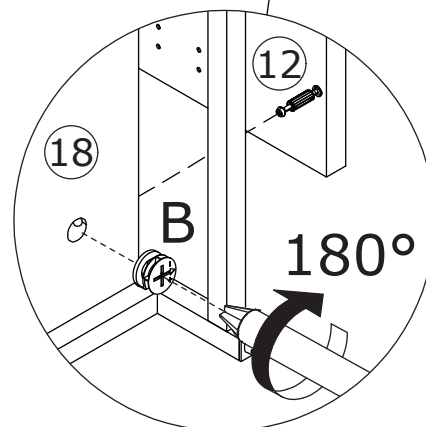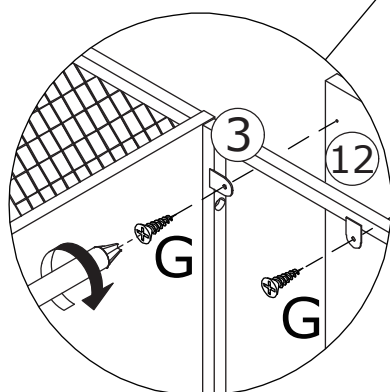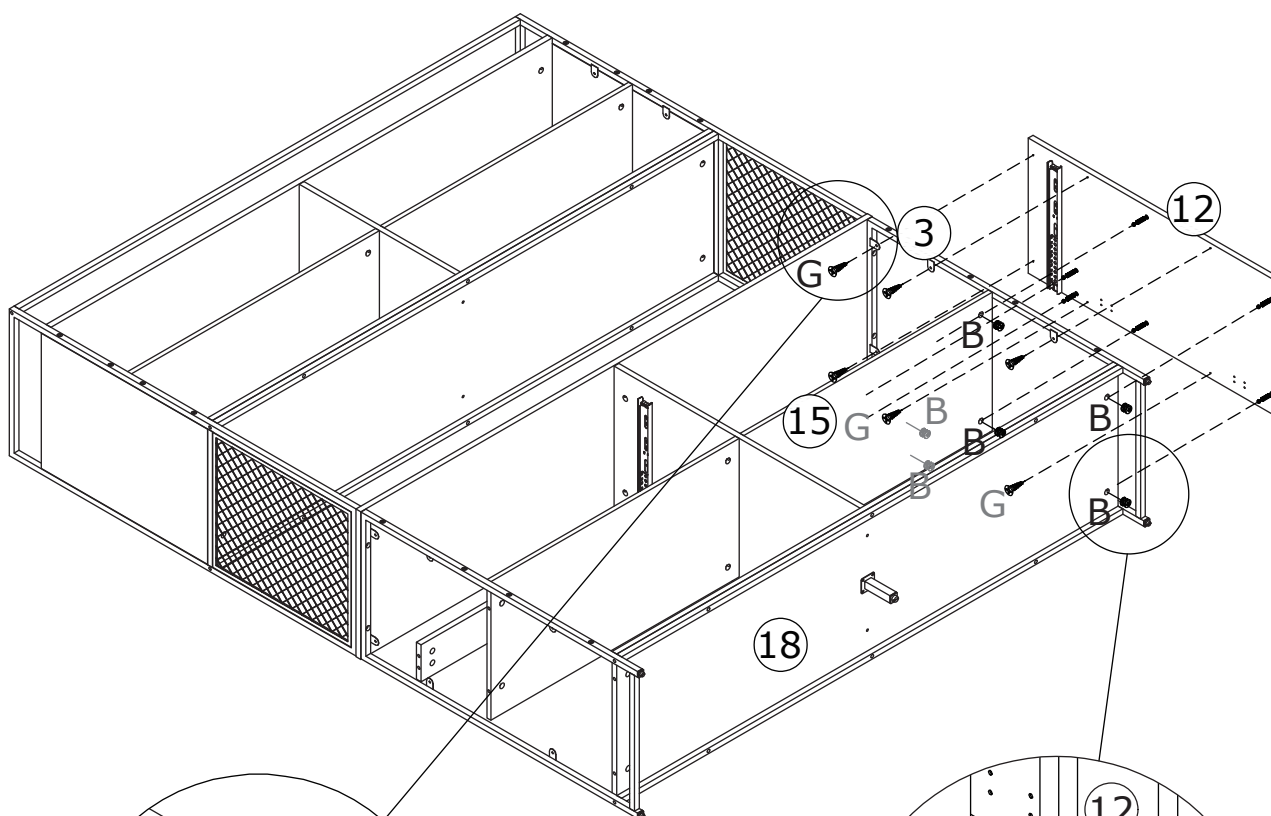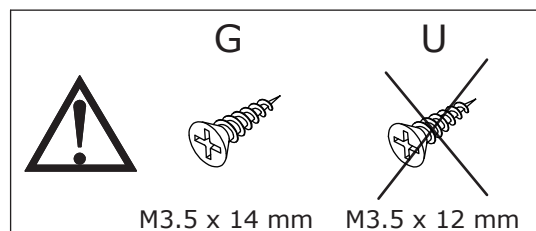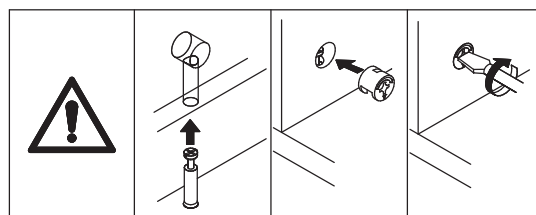



23

A x 6
M5 x 42 mm

   G x 2
M3.5 x 14 mm

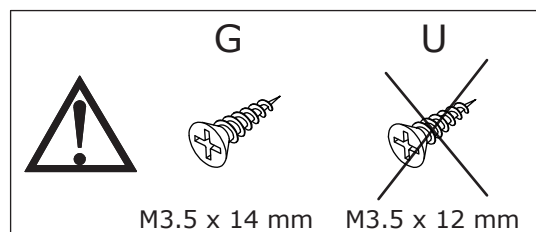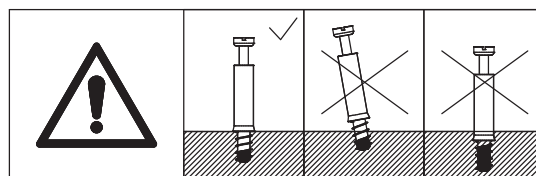

  Screw eccentric rod(A)
into board 13 at first.
Fix rail part 28 to board 13
with screw(G) as shown.

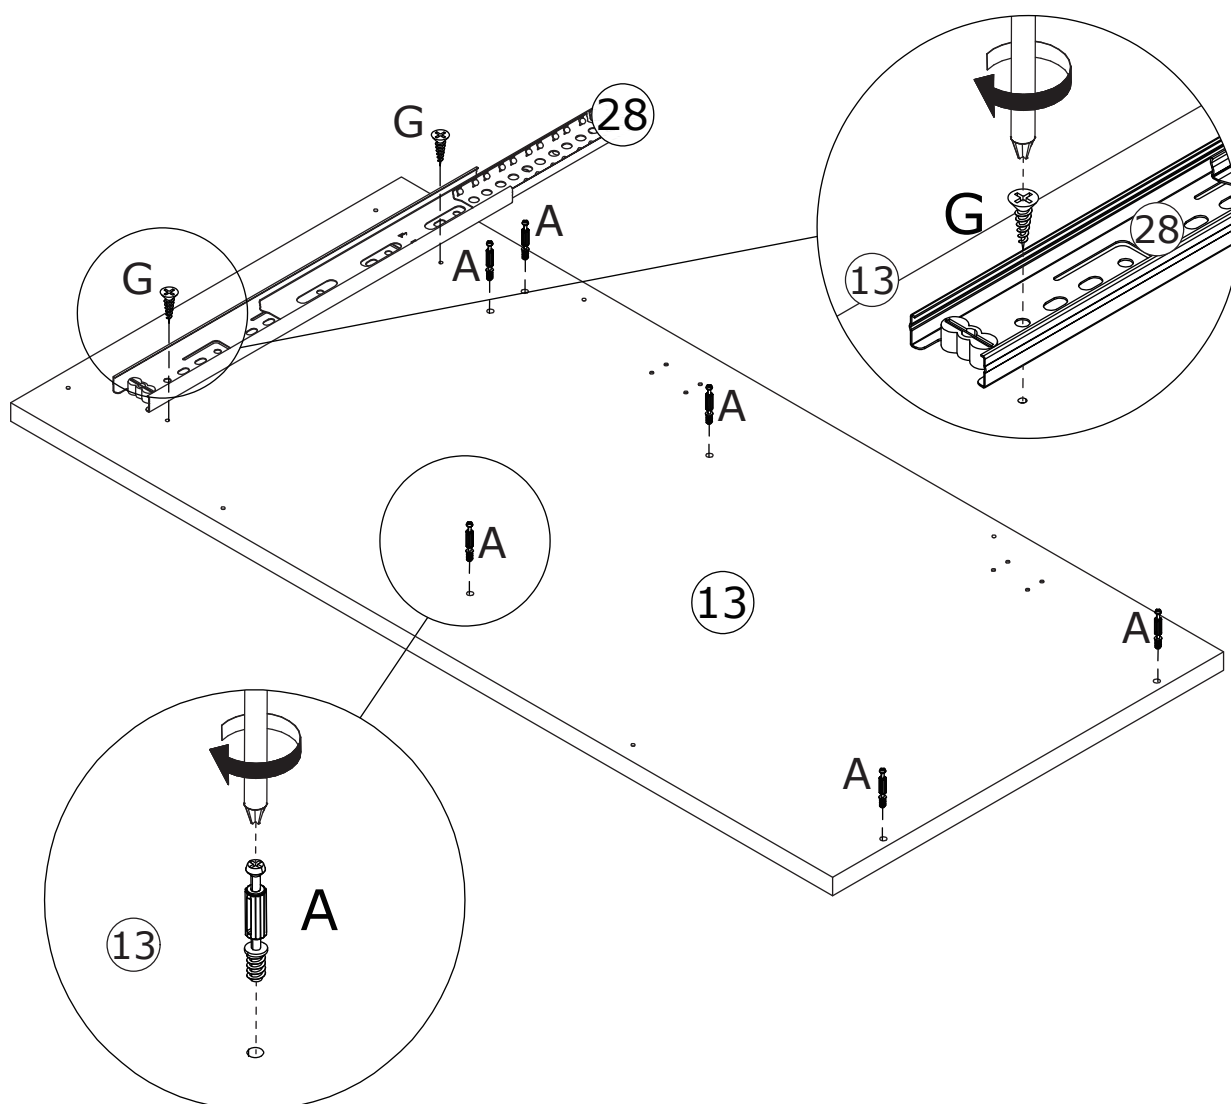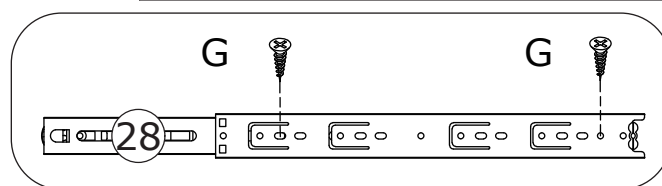

24

B x 6

 
 
 
 


Ø15 x 10 mm

G x 6



M3.5 x 14 mm



Attach board 13 to board 15, 29 and 18, add cam lock(B) into board 15,29,18 and turn clockwise to tighten as shown.

Fix board 13 to iron plate 4 with screw(G) as shown.

 


G

 


M3.5 x 14 mm




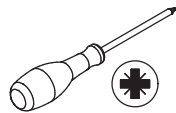
U

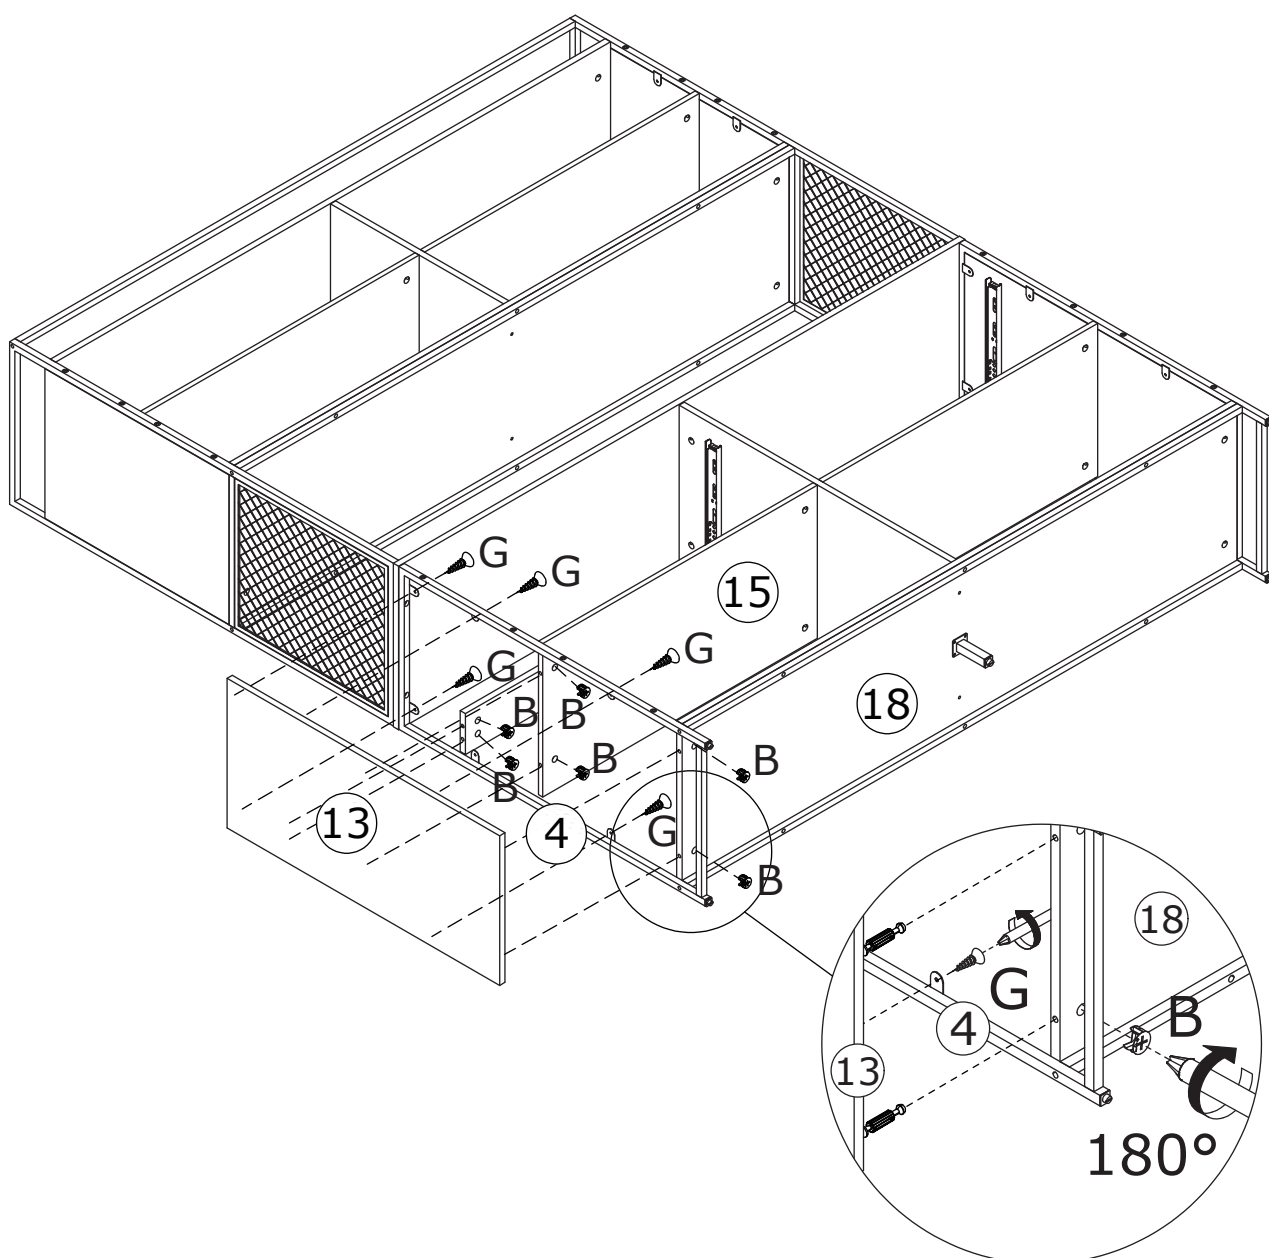


M3.5 x 12 mm




25

<p>C x 16</p>  <p>M6 x 12 mm</p>	<p>G x 8</p>  <p>M3.5 x 14 mm</p>	<p>x 1</p>  <p>#4</p>	
---	--	--	---

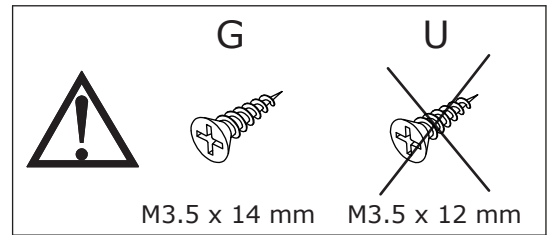 

 
Fix back board 26 and 27 to the item with screw(C) and (G) as shown.

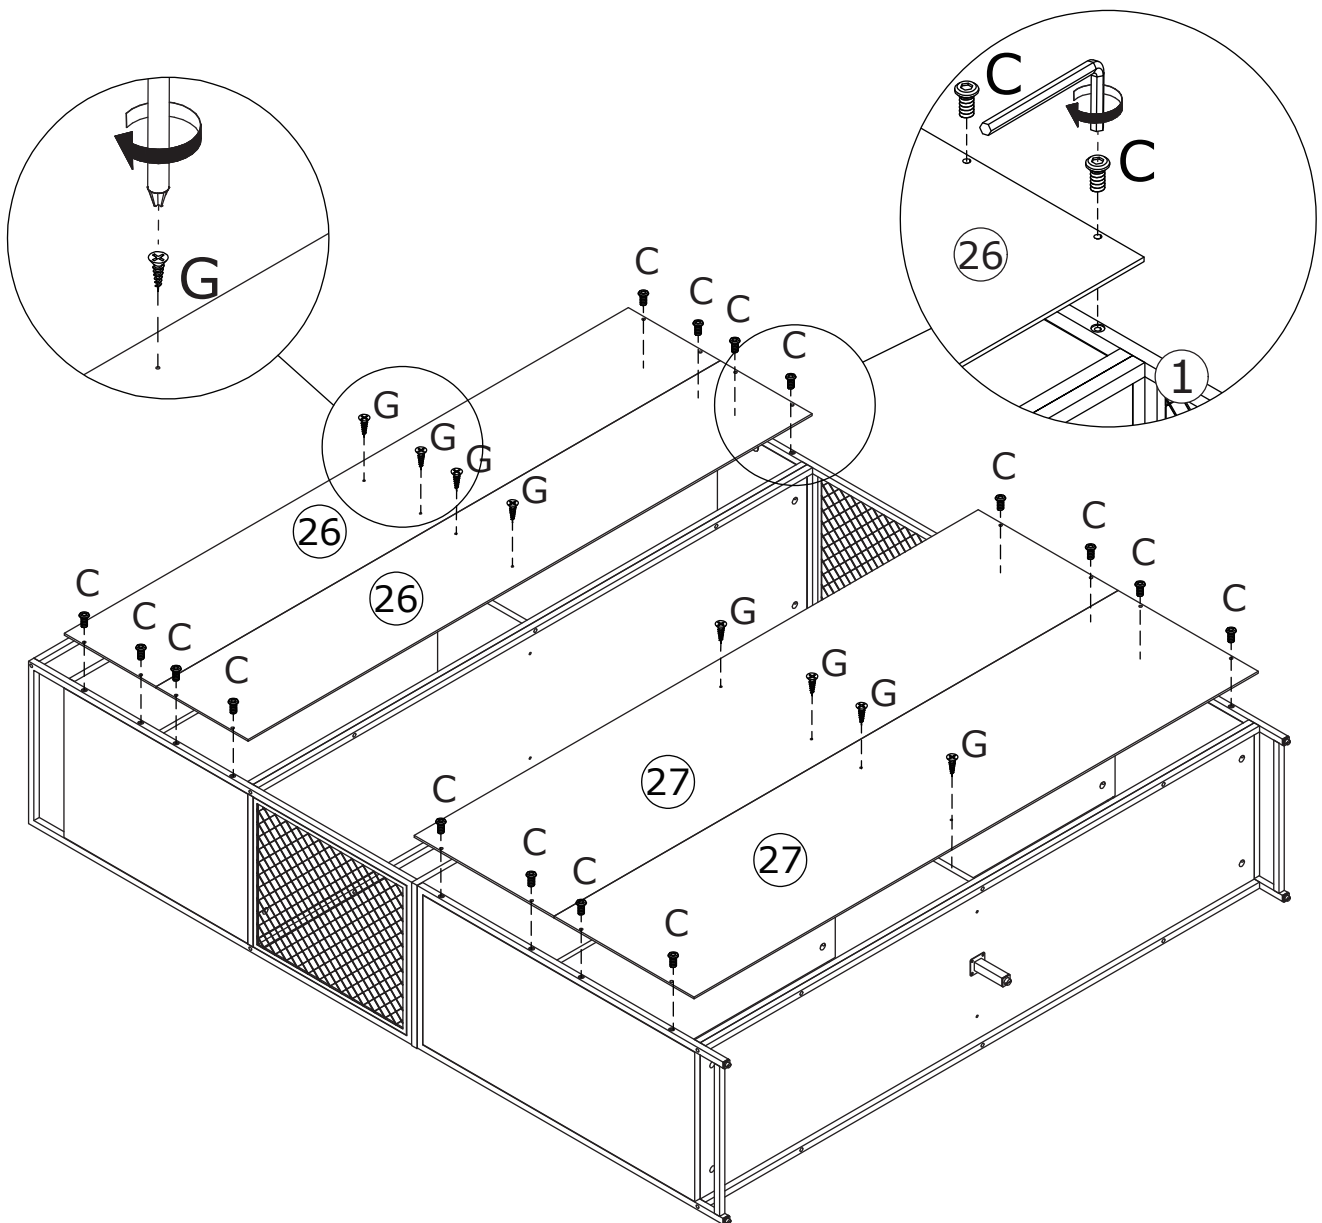

26

<p>M x 48</p>  <p>Ø 1.5 x 15 mm</p>	<p>N x 16</p>  <p>15 x 10 mm</p>	
--	---	---

 Fix back board 26 and 27 to the item with nail(M) as shown.
Use iron sheet(N) to connect each back boards with nail(M).

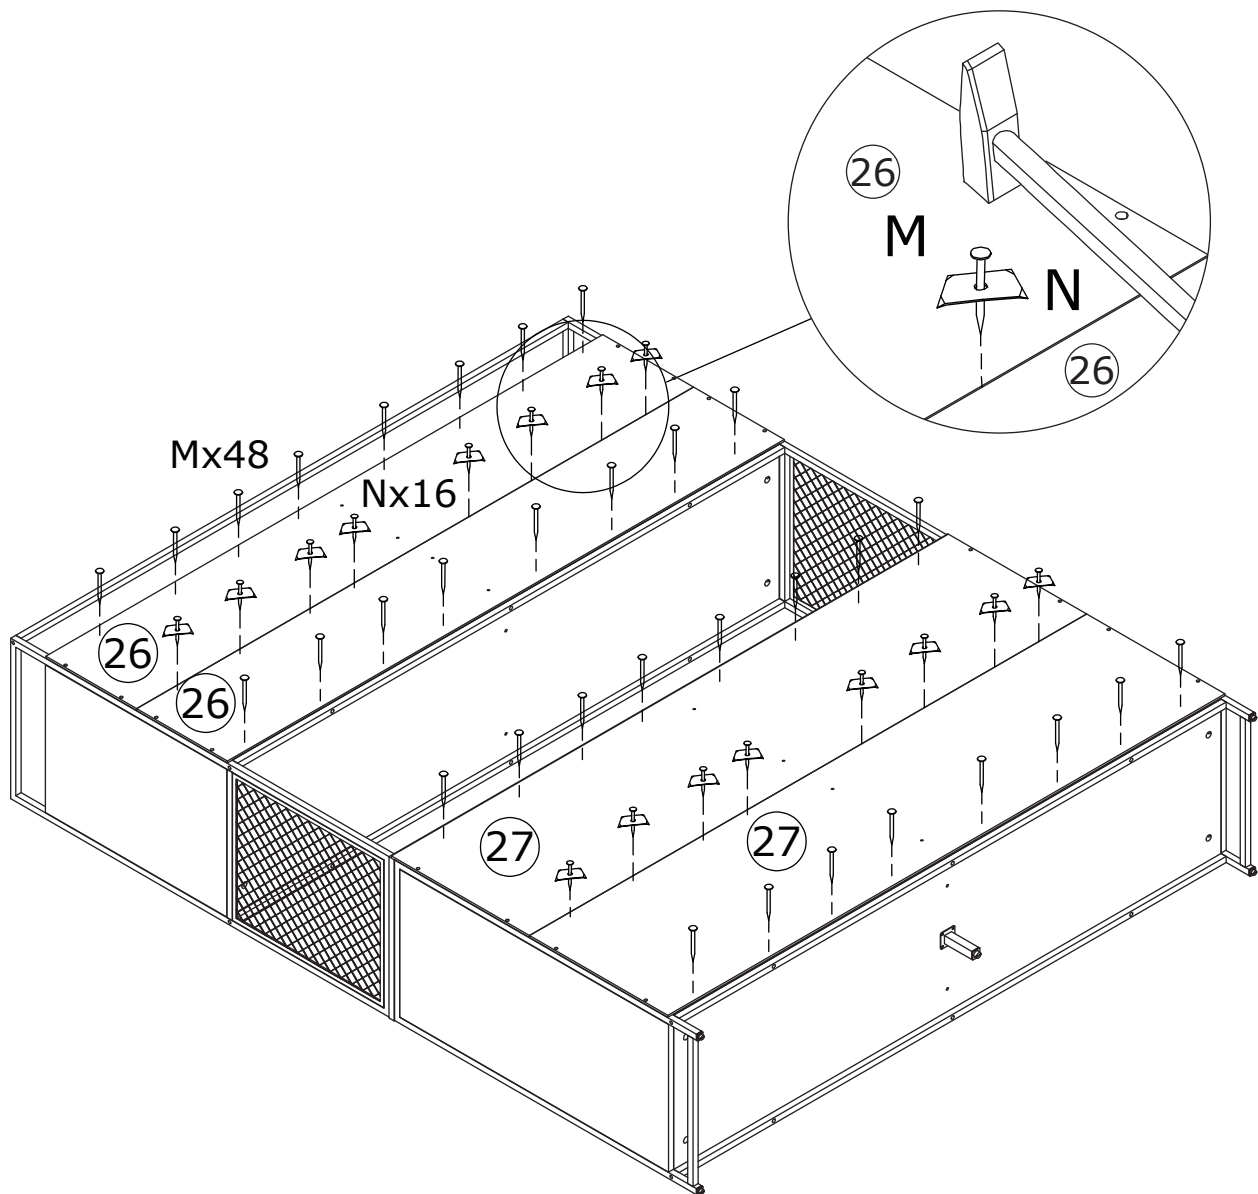

27

G x 24



M3.5 x 14 mm

H x 4



DW

K x 4

 


M4 x 18 mm





L x 2



200-96 mm



    Fix hinge(H) to board 9 with screw(G) and fix handle(L) with screw(K).
Assemble door 9 to board 20 and 13 by fixing hinge with screw(G) as shown.

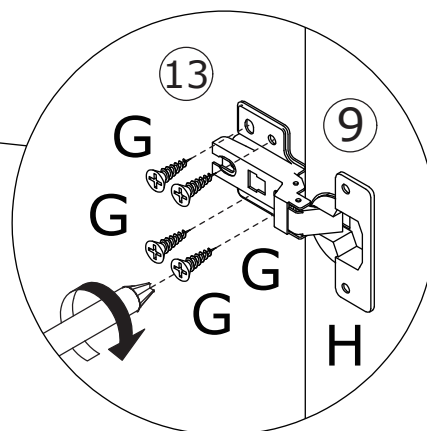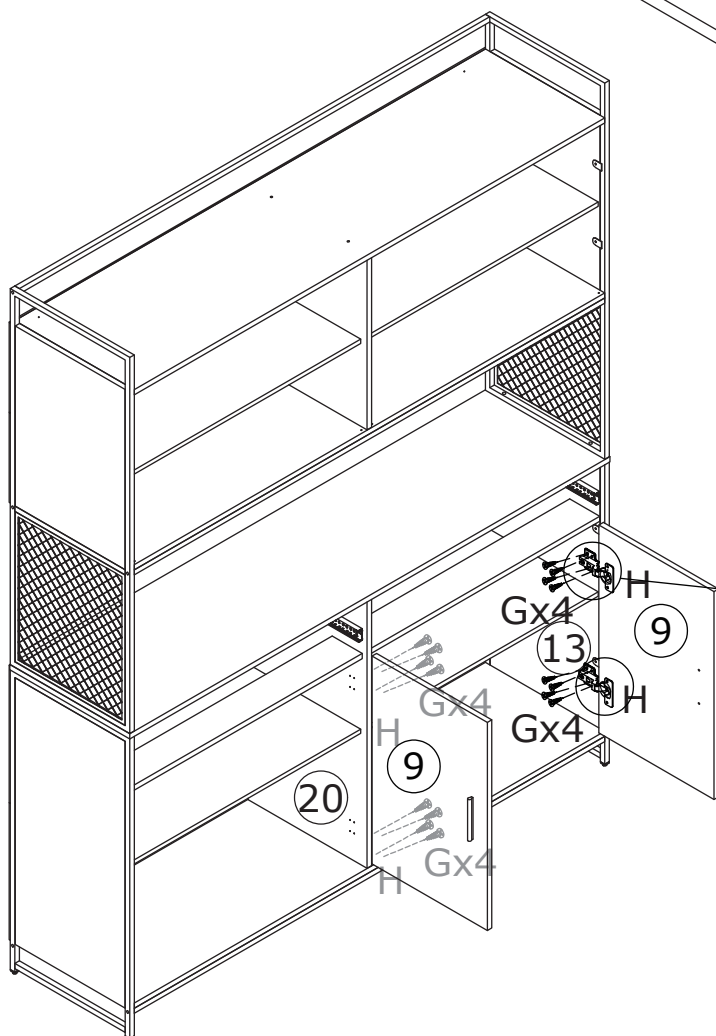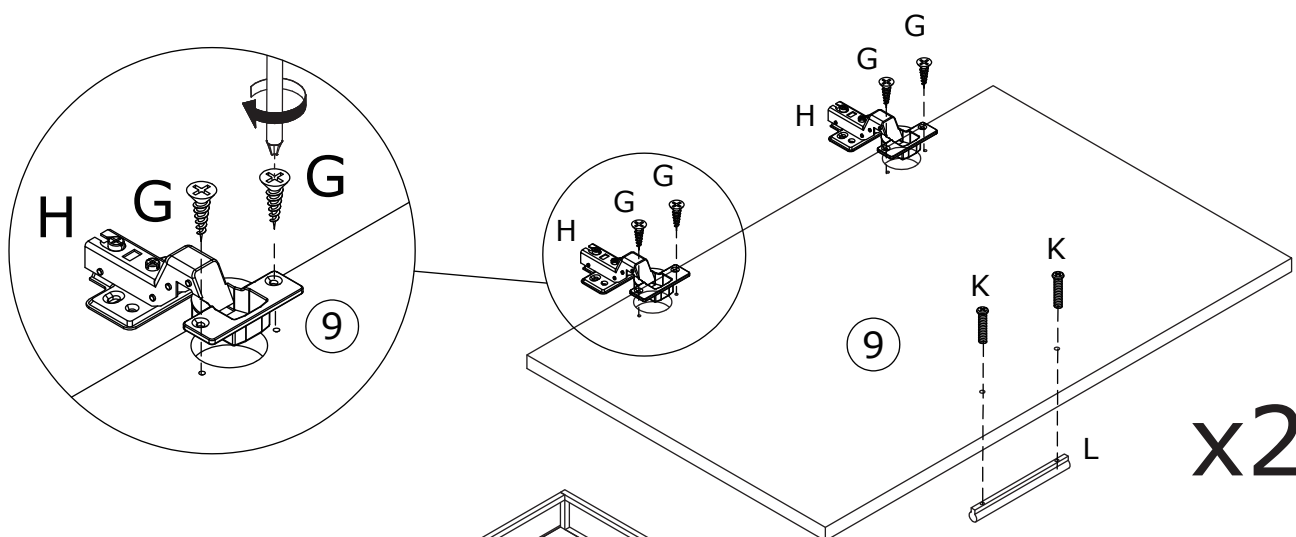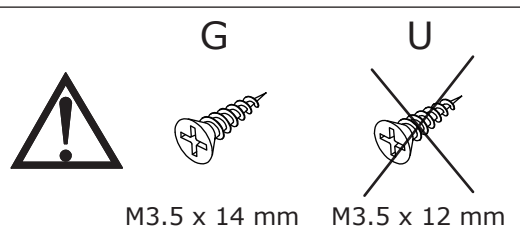

28

G x 24



M3.5 x 14 mm

H x 4



 
DW

K x 4

 


M4 x 18 mm

 
 
 
 
L x 2







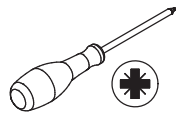
200-96 mm

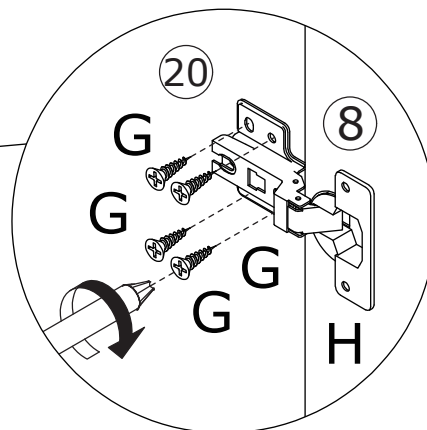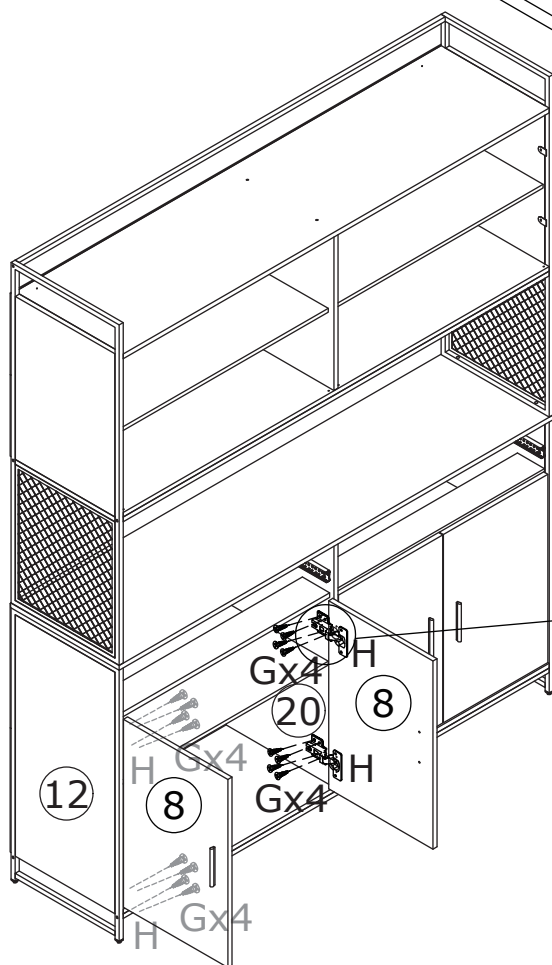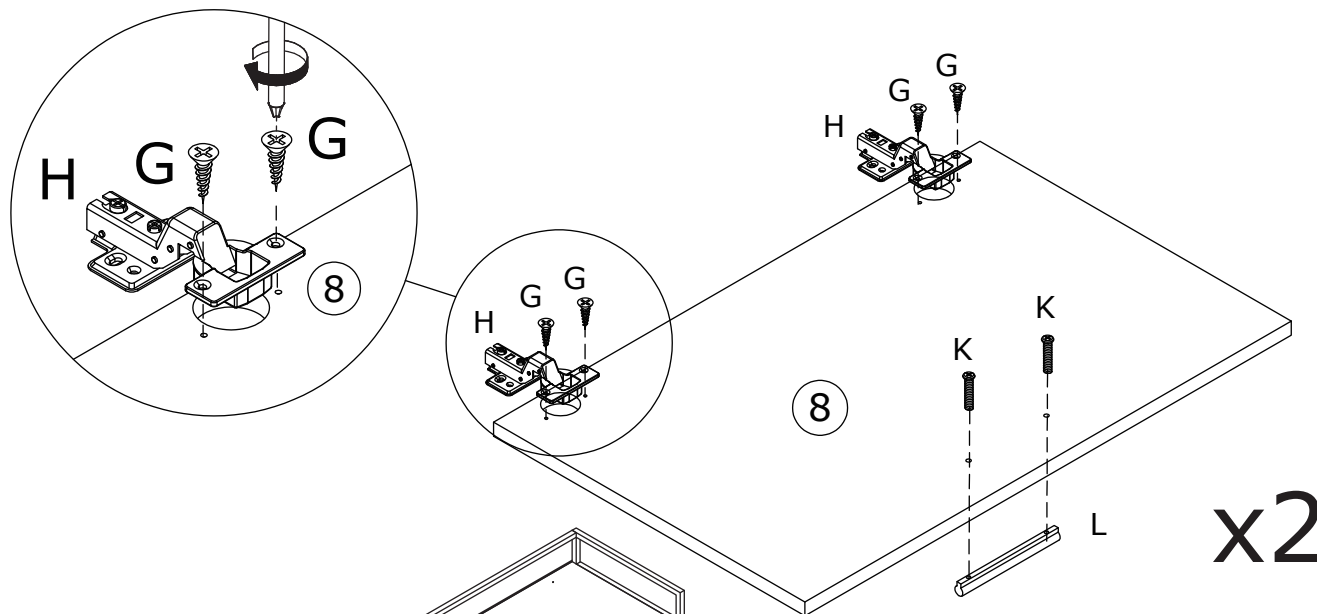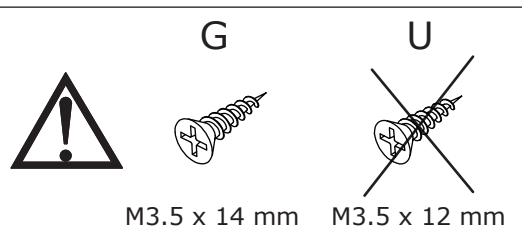



Fix hinge(H) to board 8 with screw(G) and fix handle(L) with screw(K).
Assemble door 8 to board 20 and 12 by fixing hinge with screw(G) as shown.

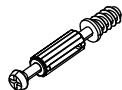

29

<p>A x 12</p>  <p>M5 x 42 mm</p>	<p>B x 12</p>  <p>Ø15 x 10 mm</p>	<p>K x 4</p>  <p>M4 x 18 mm</p>	<p>L x 2</p>  <p>200-96 mm</p>	
---	--	--	--	---

  Screw eccentric rod(A) into board 21 and fix handle(L) with screw(K) at first. Attach board 21 to board 23, 31 and 24, add cam lock(B) into and turn clockwise to tighten as shown.

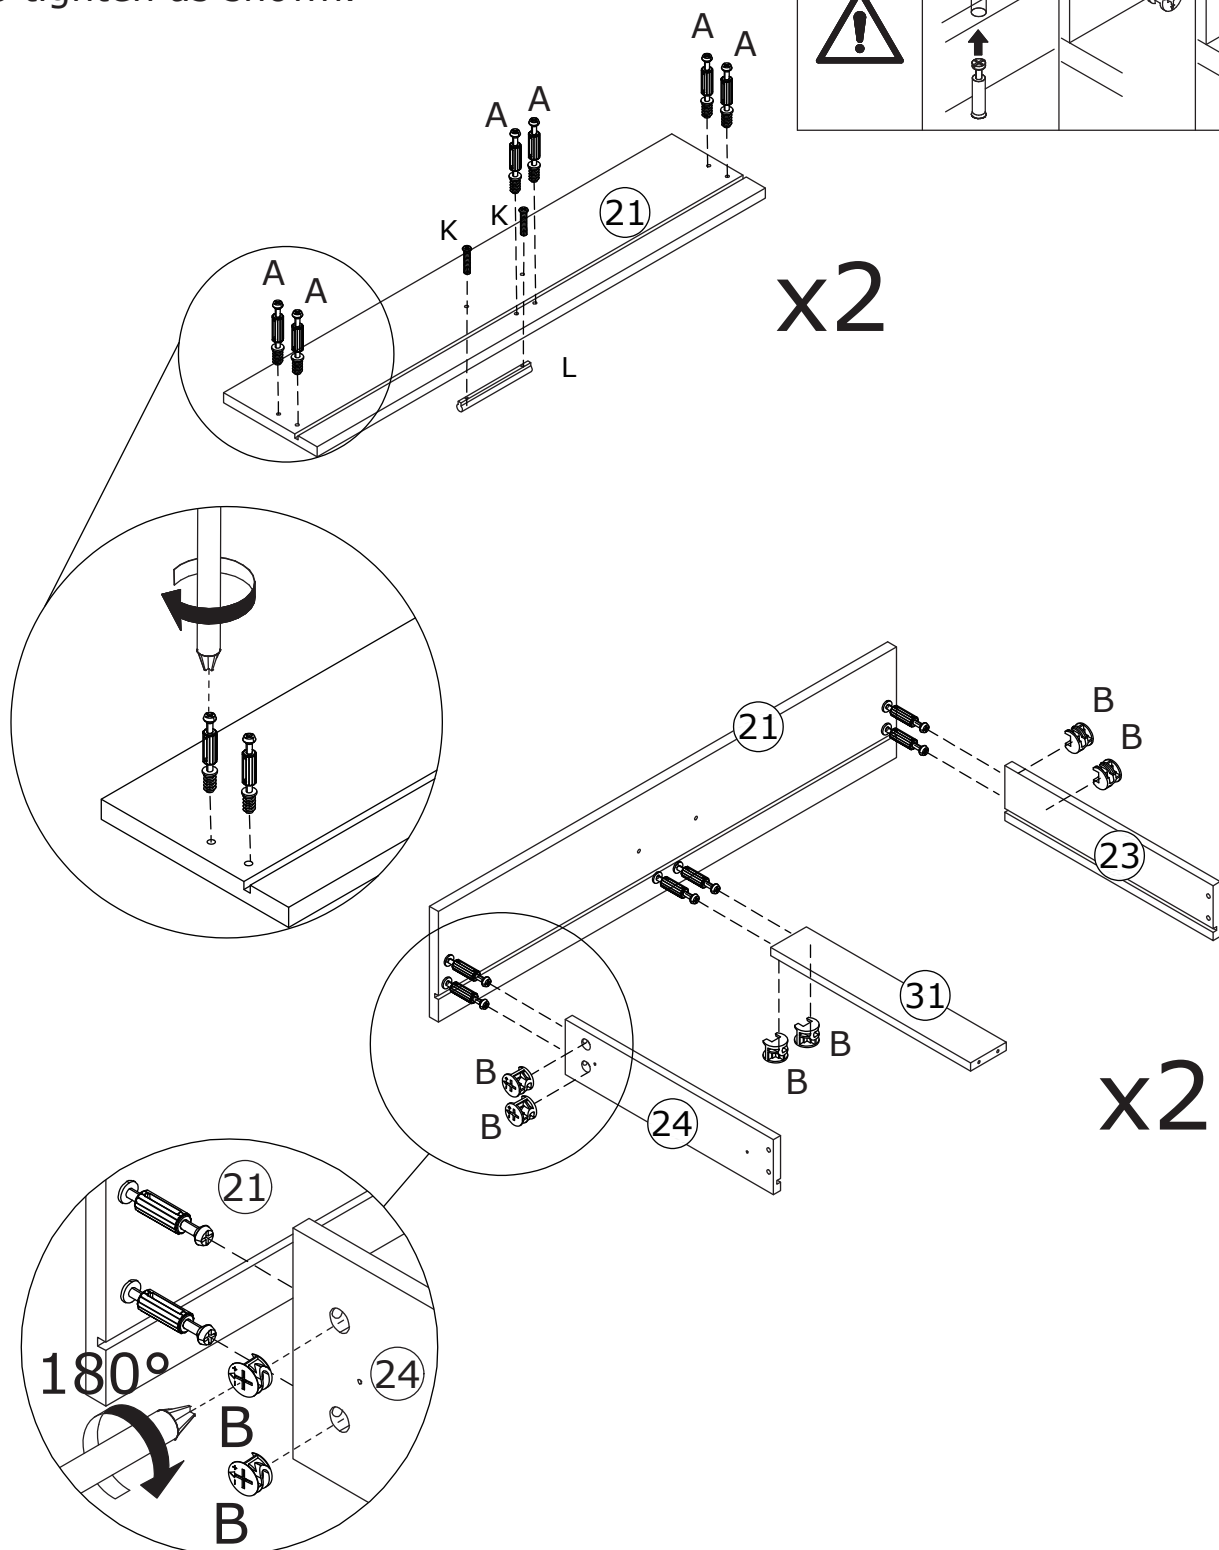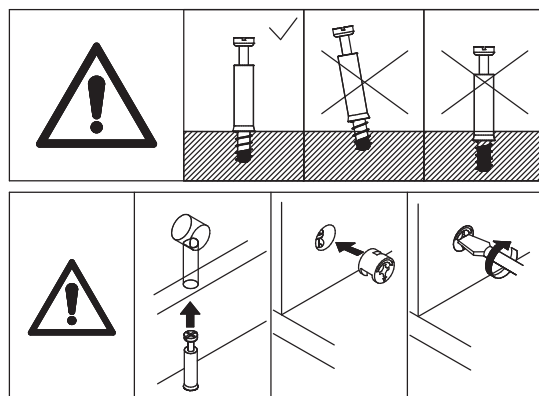


30




V x 12



 M5 x 40 mm






   Slide bottom board 25 along available grooves as shown. Fix board 22 to board 23, 31 and 24 with screw(V) as shown.

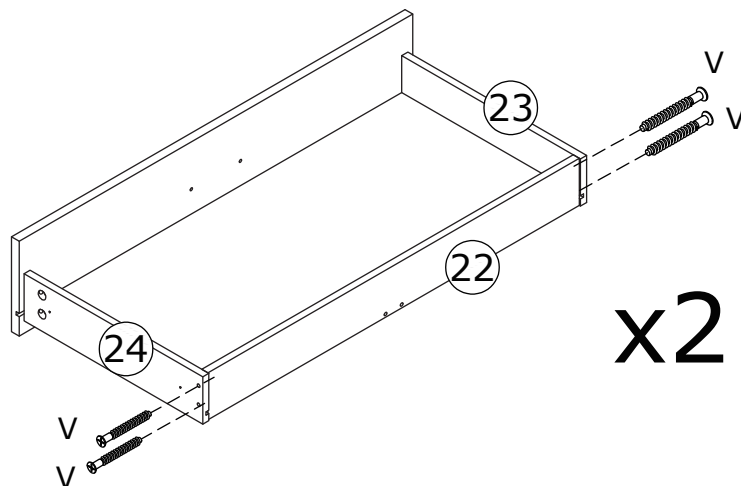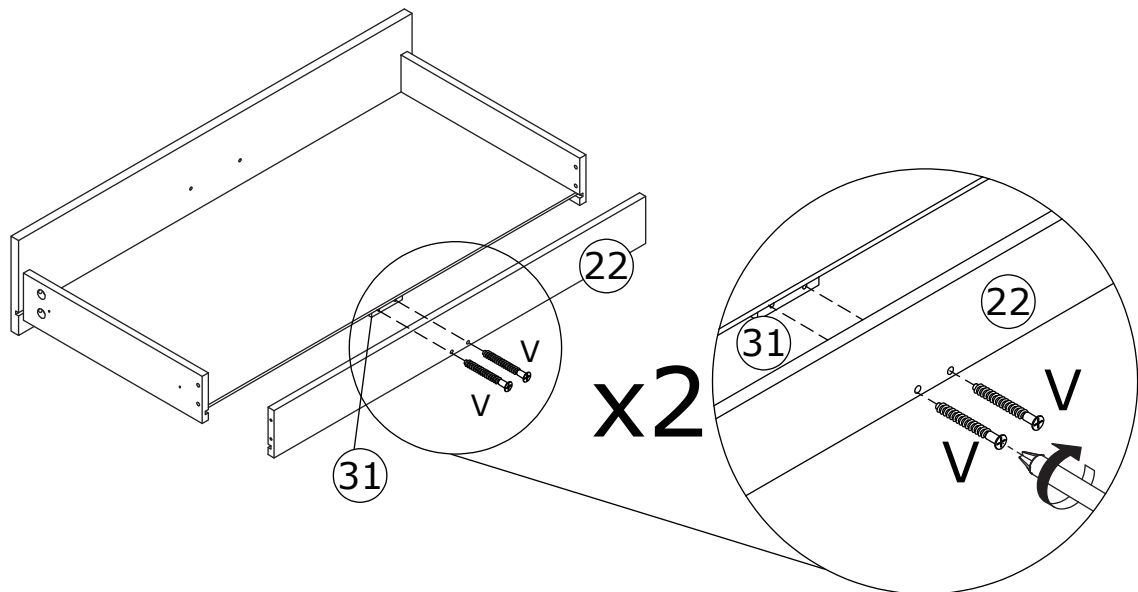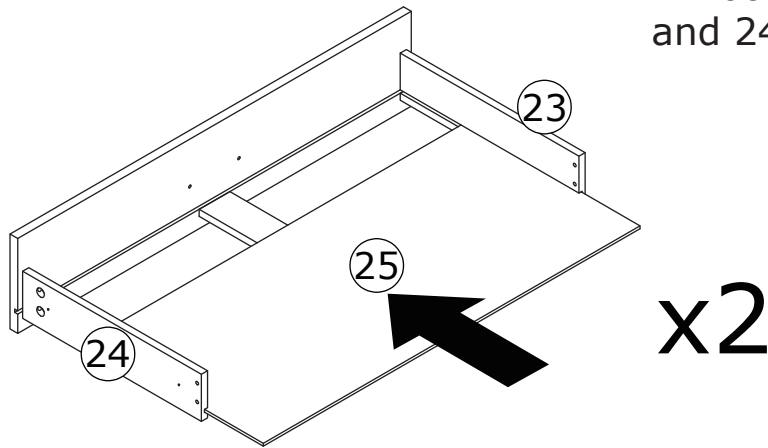


31

   U x 8
M3.5 x 12 mm

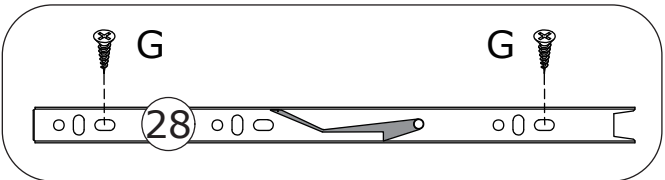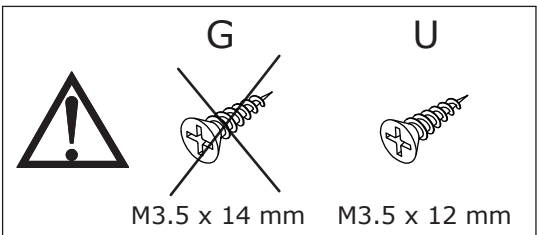


  Fix runner part 28 to board 23 and 24 with screw(U) as shown.

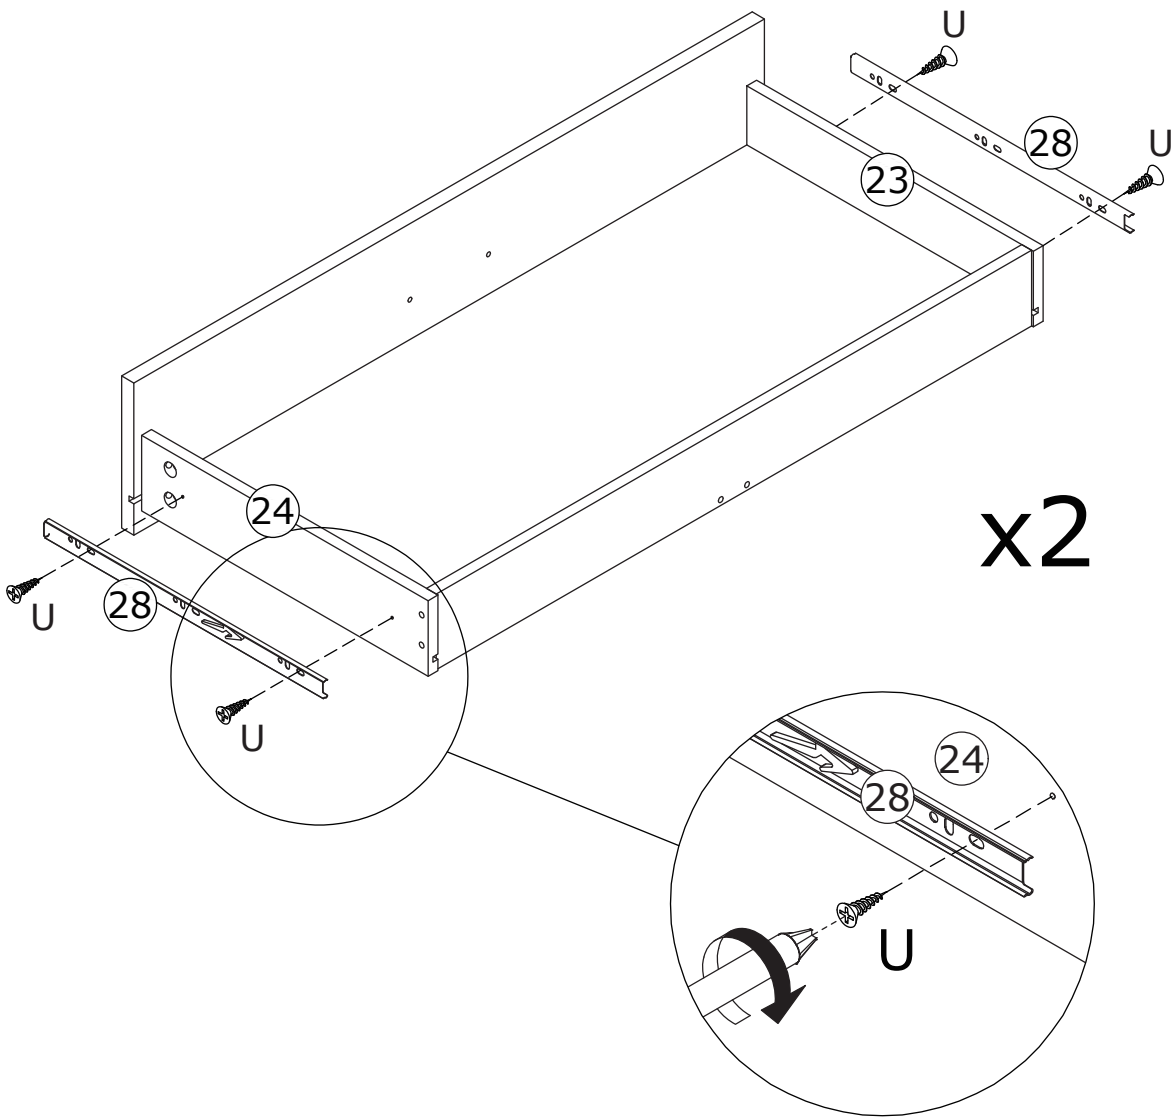
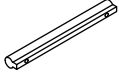

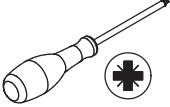


32


Align rails, slide all drawers in.

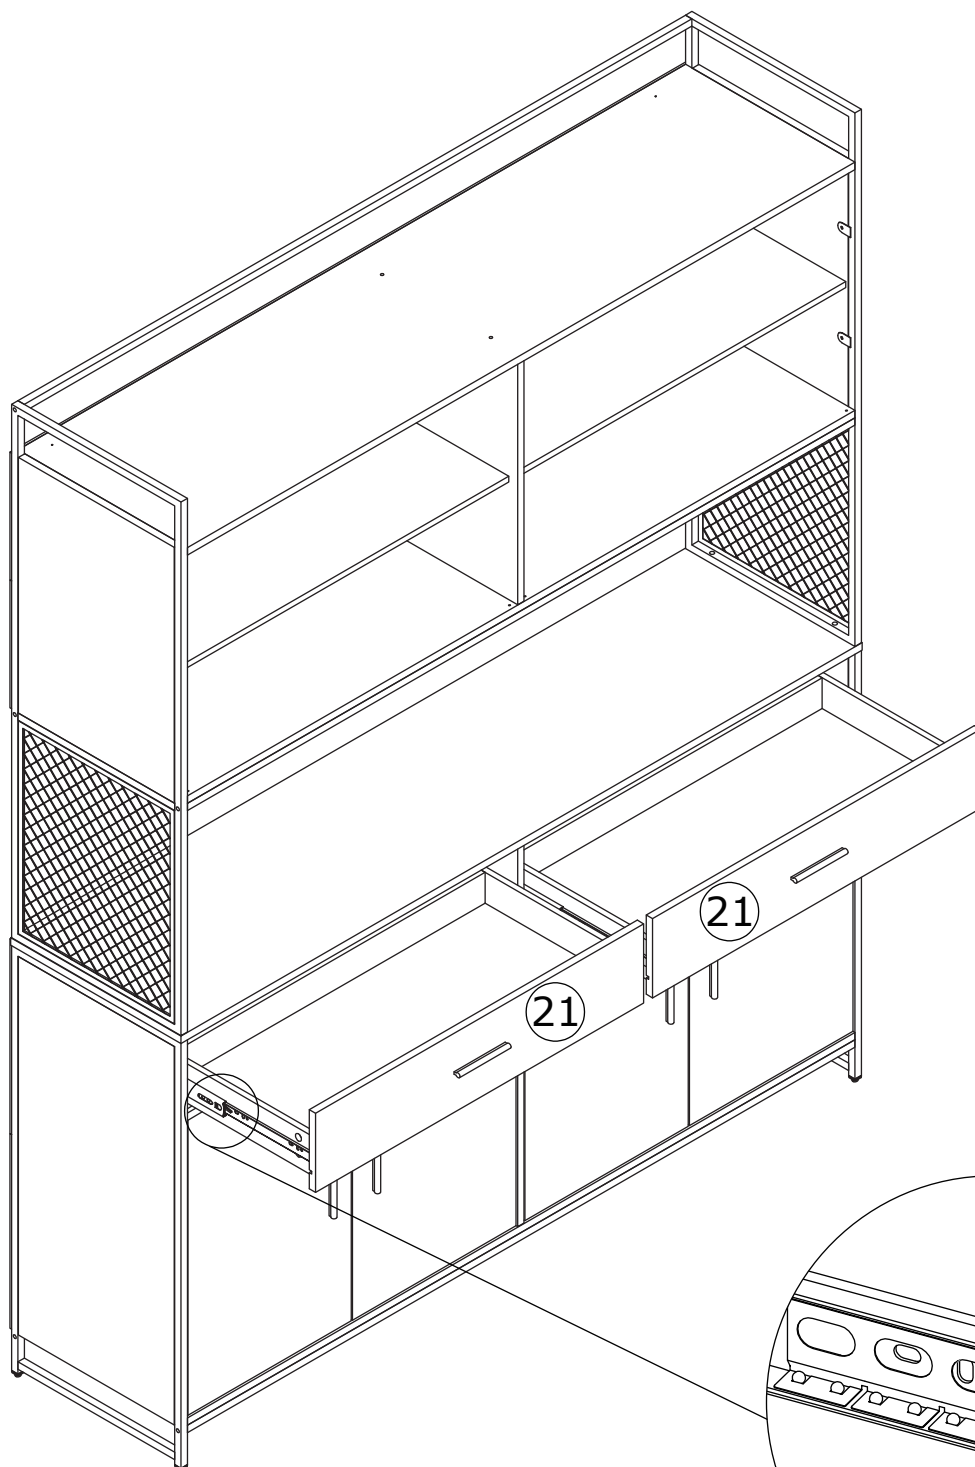

33




<p>K x 8</p>  <p>M4 x 18 mm</p>	<p>L x 4</p>  <p>200-96 mm</p>	<p>O x 8</p> 	
--	---	--	---

    Insert part(O) into mesh door 7 and fix handle(L) with screw(K) at first.

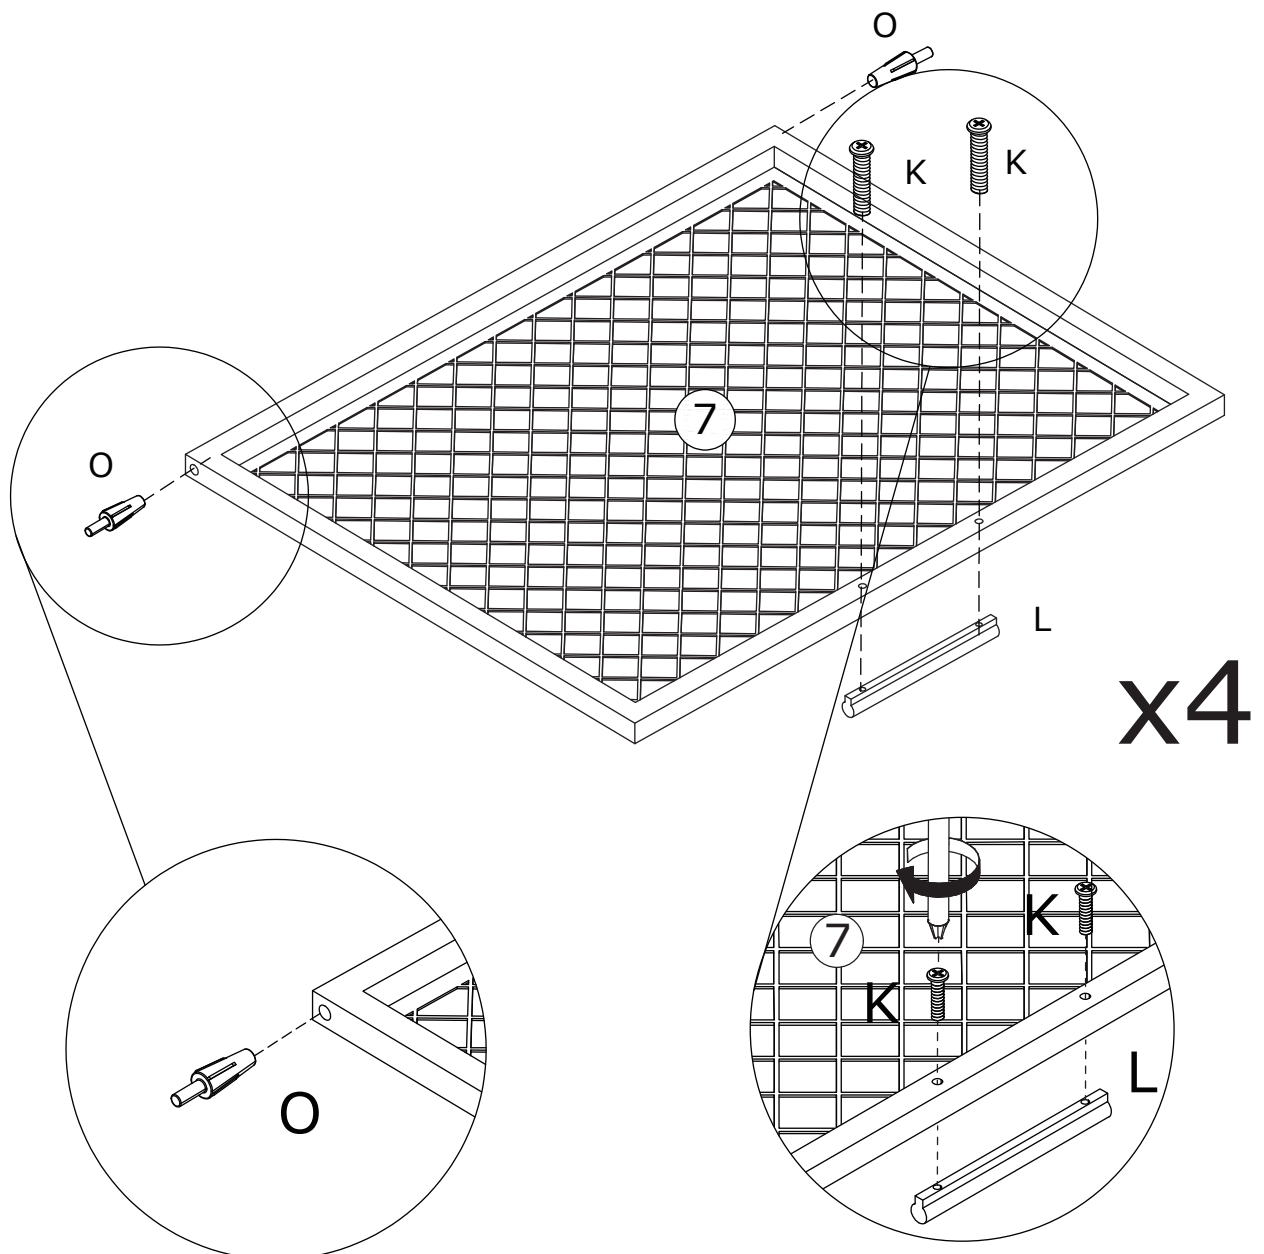
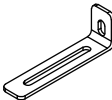






34

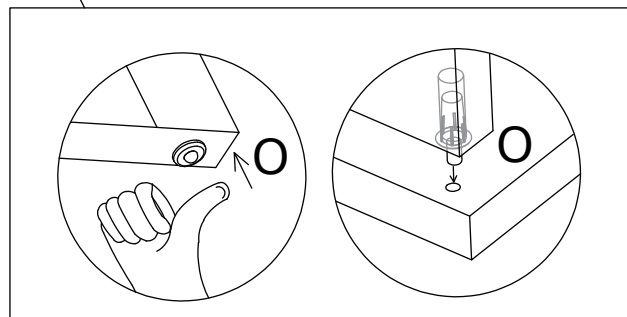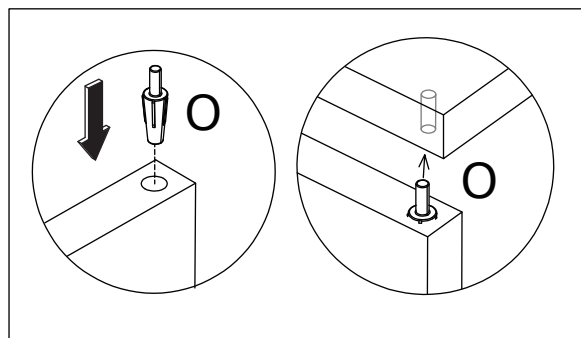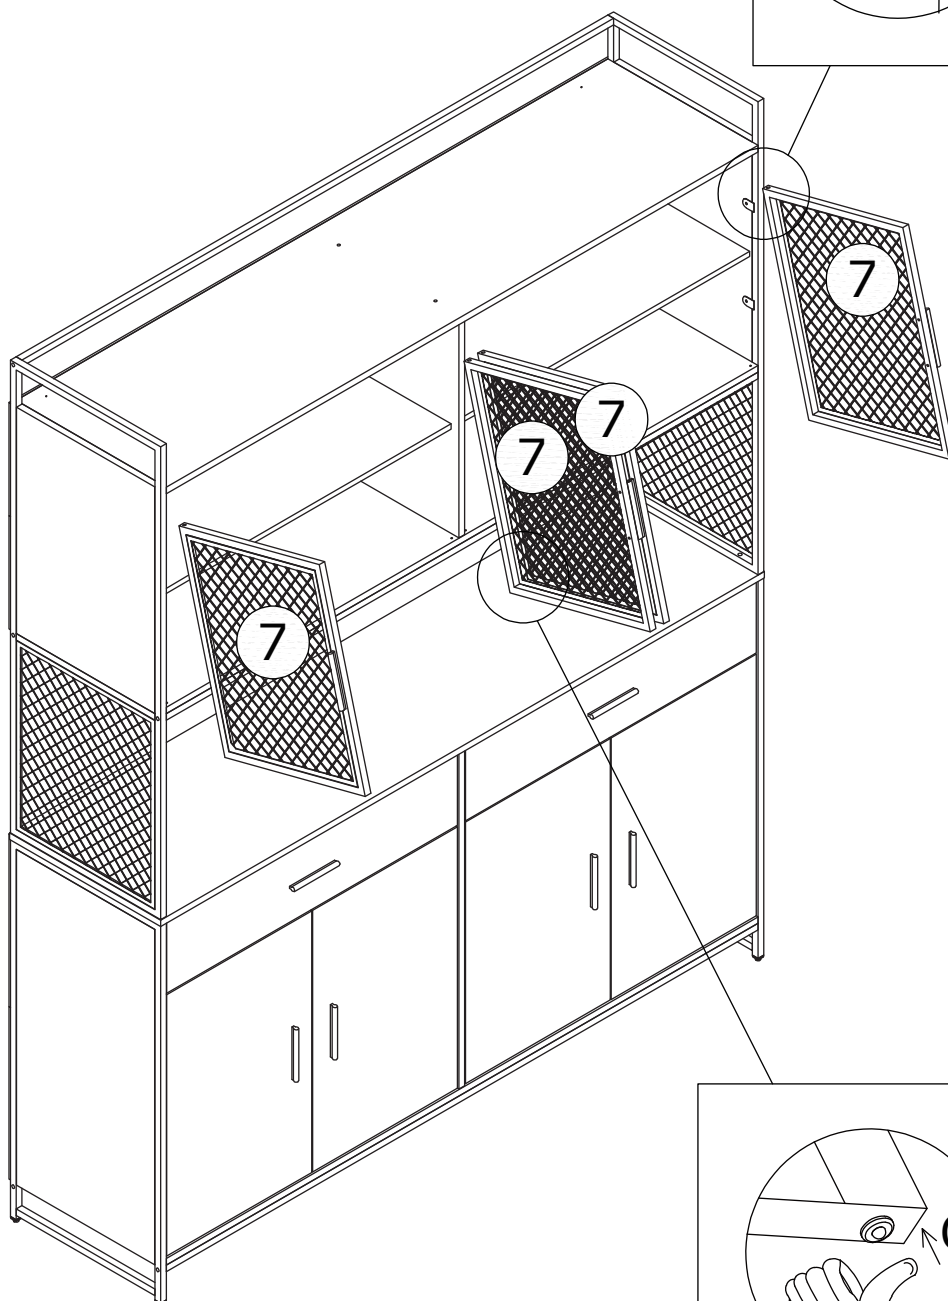Assemble door 7 to upper cabinet as shown.




35


<p>G x 2</p>  <p>M3.5 x 14 mm</p>	<p>P x 2</p> 
<p>Q x 2</p>  <p>Ø 8 x 60 mm</p>	<p>R x 2</p>  <p>Ø 5 x 55 mm</p>

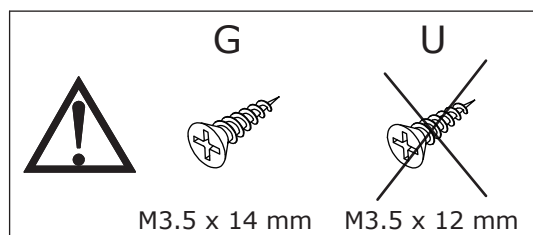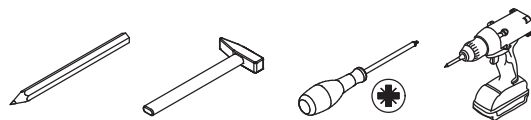  


Install anti-tipping device as shown.

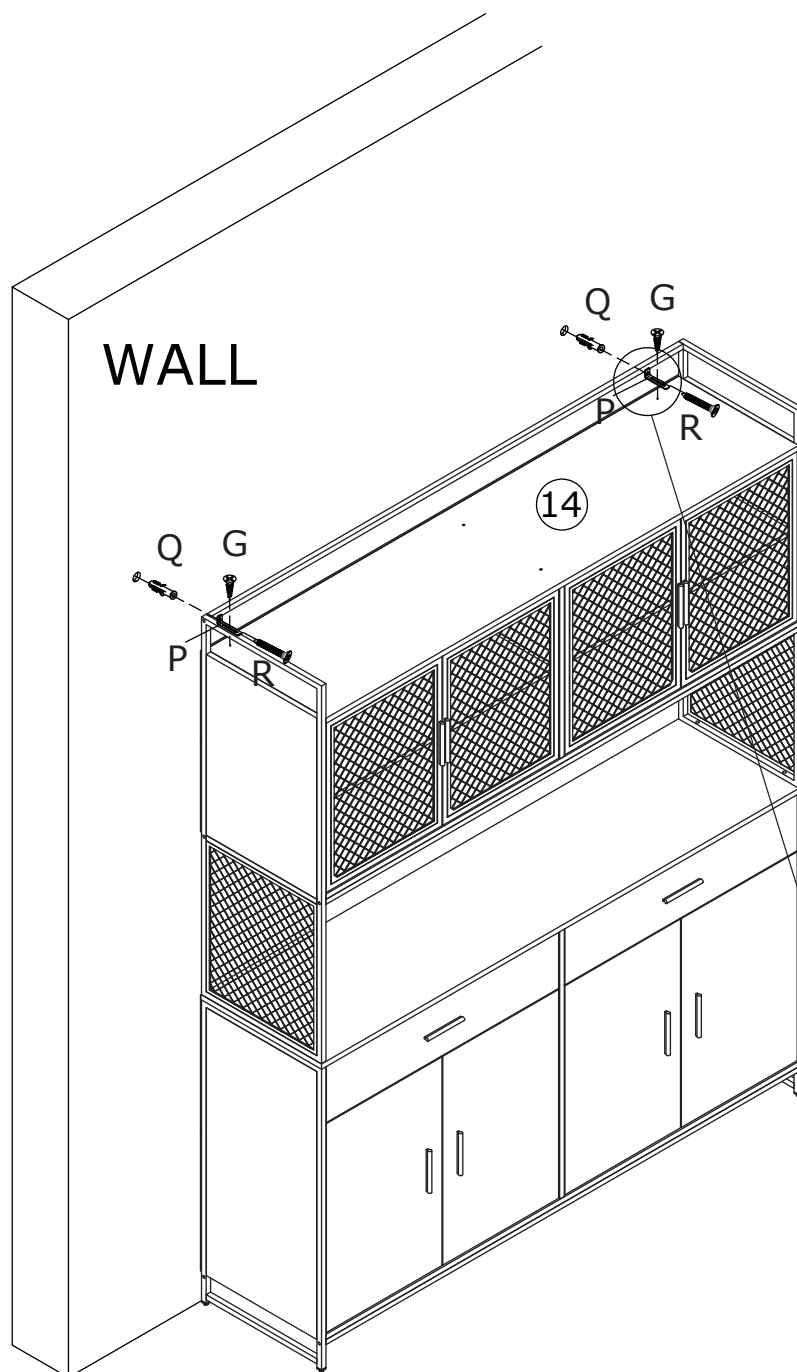 

 
1.

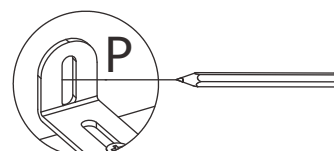


 
2.

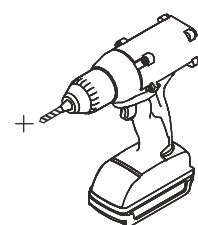


 3.

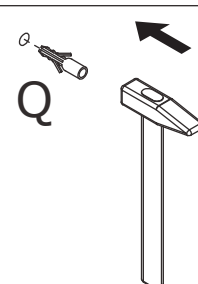

    
 
 
 
 
 
 
4.

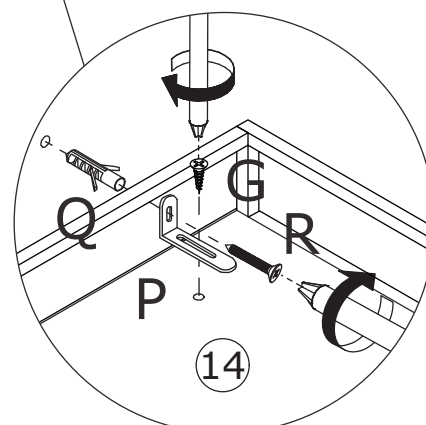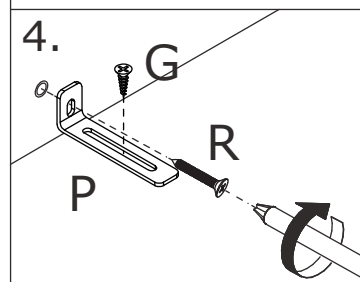

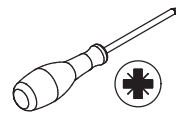
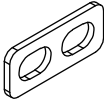



If doors are still not aligned if the hinges are properly correctly, please watch the video.


<https://youtu.be/n0Lb36SoODM>

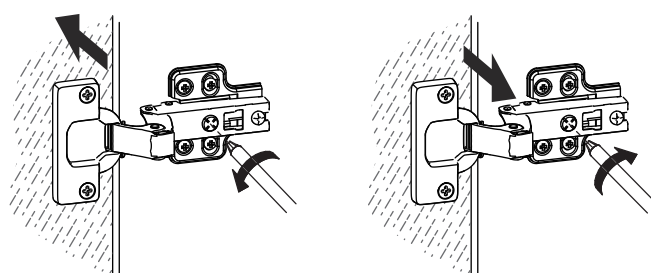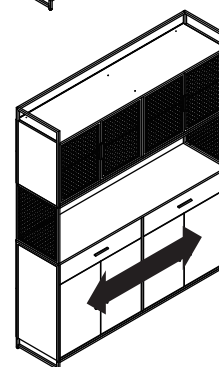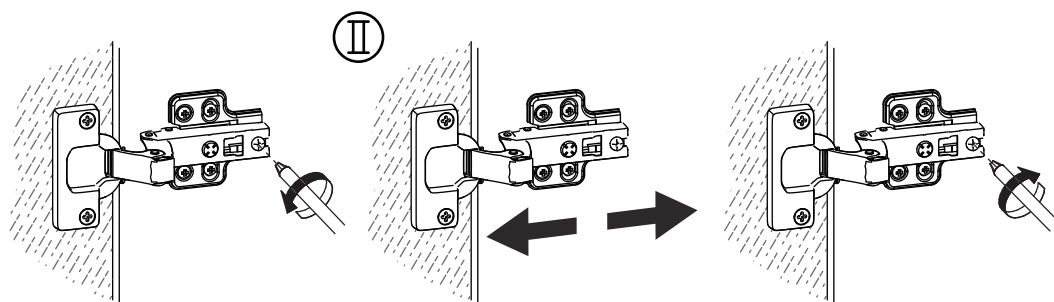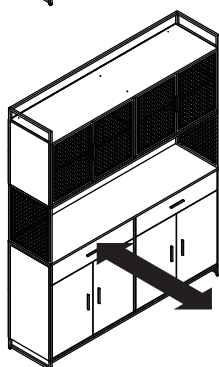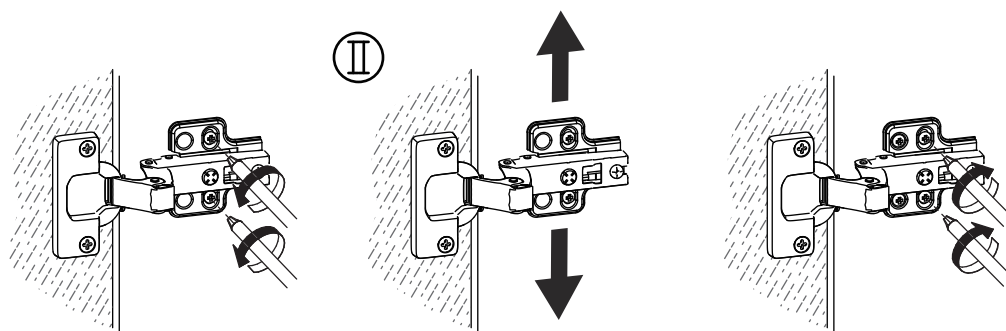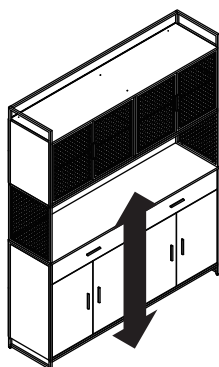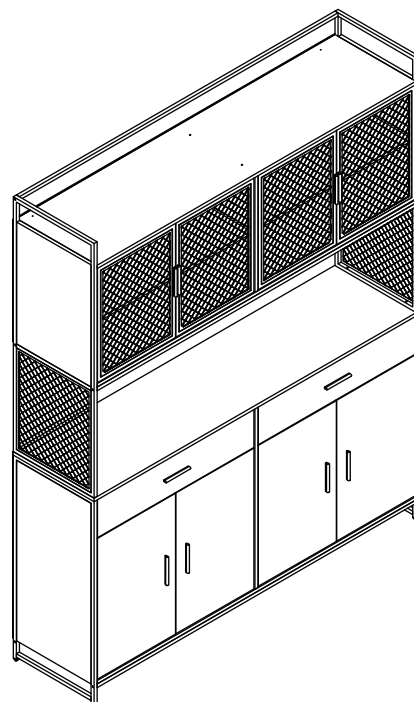

37

<p>D x 6</p>  <p>M6 x 20 mm</p>	<p>T x 3</p> 	<p>x 1</p>  <p>#4</p>	
--	--	--	--

 If you have multiple sets of similar products, you can connect them together through screw D and T.

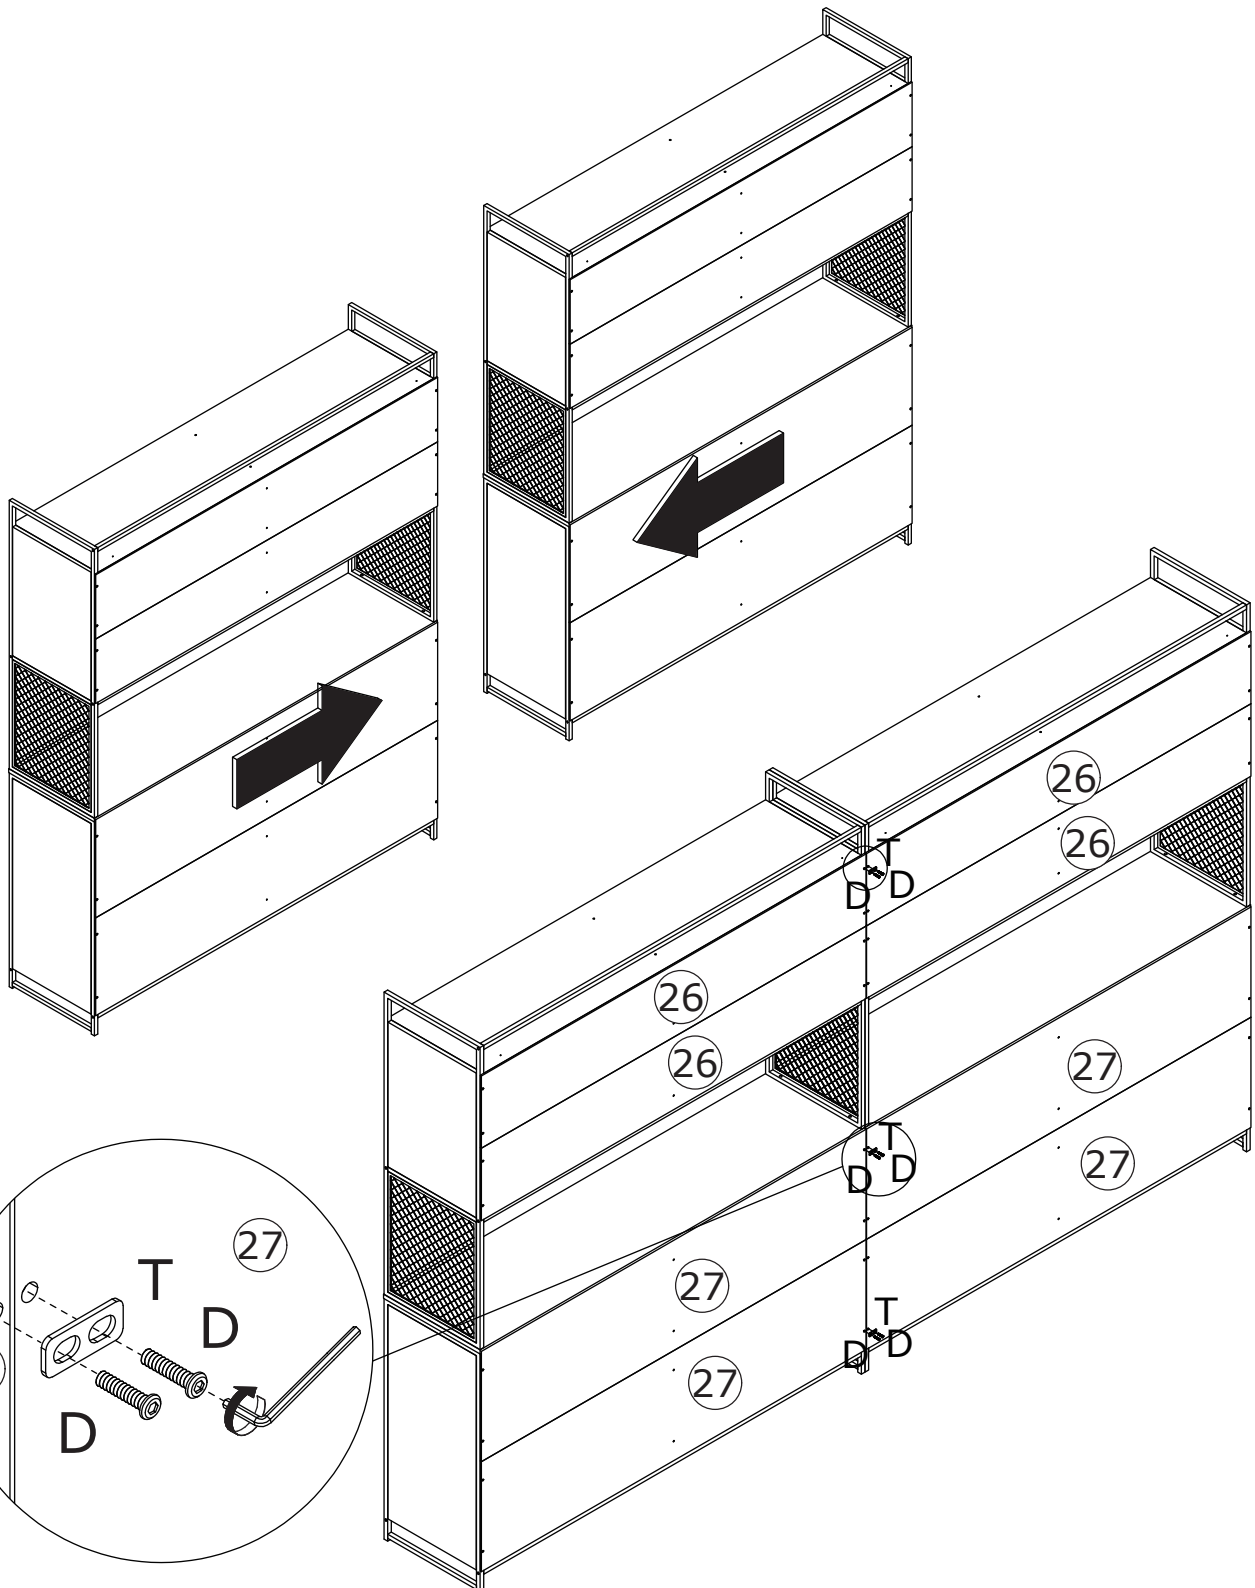

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



feedbackstation@163.com



(303)800-6387