



INSTRUCTIONS

SAFETY WARNING: Remove all plastic fasteners and tags. These are part of the packaging and should be discarded.

SAVE THESE INSTRUCTIONS — This manual contains important safety and operating instructions for power units.

WARNING

ELECTRIC PRODUCT. Keep away from children. As with all electrical products, precautions should be observed during handling and use to reduce the risk of electric shock. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

WARNING

Strobe lights have been known to trigger seizures in people with photosensitive epilepsy.

WARNING

The light is very bright. Do not shine directly into eyes.

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING (THIS FURNISHING)

WARNING: TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK OR INJURY TO PERSONS :

READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

1. Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
2. Do not let lamps rest on the supply cord or on any wire.
3. Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
4. Do not cover the product with cloth, paper or any material not part of the product when in use.
5. Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
6. This seasonal use product is not intended for permanent installation or use.
7. Do not mount or place near gas or electric heaters, fireplace, candles or other similar sources of heat.
8. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
9. This is an electric product-not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
10. Do not use this product for other than its intended use.
11. Do not hang ornaments or other objects from cord, wire, or light string.
12. This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded.
13. This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless plug can be fully inserted. Do not alter or replace.
14. Read and follow all instructions that are on the product or provided with the product.

CAUTION:

To reduce the risk of fire and electric shock:

1. Do not install on trees having needles, leaves or branch coverings of metal or materials which look like metal.
2. Do not mount or support wires in a manner that can cut or damage wire insulation.

SAVE THESE INSTRUCTIONS.

ASSEMBLY INSTRUCTIONS

1. Gently remove contents from packaging and lay out in a clear area.
2. Push the ball end of "A" through the Projection™ ring and base. Tighten ring and adjust Projection™ to display in desired location. (See Illustration 1)

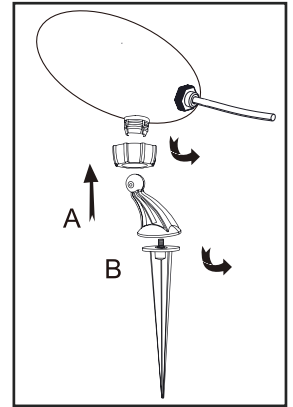 


Illustration 1

3. Plug power cord into standard wall socket. (See Illustration 2)
4. Unplug when not in use.

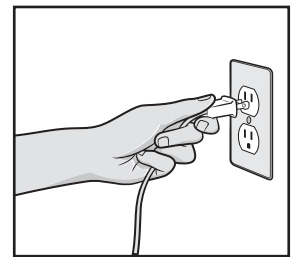 


Illustration 2

 
USER SERVICING INSTRUCTIONS

Fuse Replacement (Fuse: 2pcs)

WARNING: Risk of Fire: Replace only with same size and type of fuse.

WARNING: Risk of Fire: Do not replace the attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if attachment plug is damaged.

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on the cord.
2. Open fuse cover. Slide open the fuse access cover on top of the attachment plug towards blades. (See illustration)
3. Remove fuses carefully.
4. Replace fuse only with 5 Amp Max, 125 Volt fuse (provided with product)
5. Close the fuse cover. Slide closed the fuse access cover on top of the attachment plug.

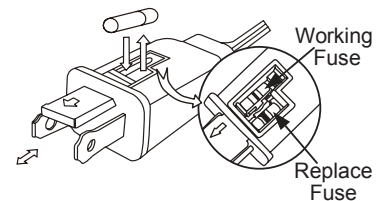

OPERATING INFORMATION

This product was designed for indoor and outdoor use.

Do not shake the device. Avoid brute force when operating the device.

Keep away from direct and excessive heat sources.

Do not permit operation by unqualified persons. Damages are usually the result of unprofessional operation.

Never use solvents or aggressive detergents in order to clean the device. Rather use a soft and damp cloth.

Please use the original packaging if the device is to be transported.

Unauthorized modifications on the device are unacceptable due to safety reasons.

If this device is operated in any way different from the ways described in this manual, the product may suffer damages and the guarantee becomes void.

OPERATION

- Insert the plug into socket.
- Adjust staked projector to display in desired location.
- Unplug when not in use. Use caution with power cord.

WARNING

- The device is for indoor and outdoor use.
- Please keep away from heaters and other heating sources.

IMPORTANT

Damage caused by the disregard of this user manual are not under warranty. The dealer will not accept liability for any resulting defects or problems. Keep away from heaters and other heating sources. If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. Leave the device switched off until it has reached room temperature. Please note that damage caused by manual modifications on the device or unauthorized operation by unqualified persons are not under warranty. Keep young children away from the device.

USE AND CARE INSTRUCTIONS

1. When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.
2. If the product is placed on a tree, the tree should be well secured and stable.
3. Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
4. When storing the product, carefully remove the product from wherever it is placed, to avoid any undue strain or stress on the product conductors, connections, and wires.
5. When not in use, store neatly in a cool, dry location protected from sunlight.

CAUTION

1. For temporary (90 days max.) installation and use only.
2. To reduce the likelihood of excessive heat and possible damage, use only decorative lamp accessories packaged with this product or marked for use with this product.
3. To reduce the risk of fire or electric shock, do not attempt to replace lamps or modify wiring or product.
4. This is an electric product-not a toy. To avoid risk of fire, burns, personal injury and electric shock it should not be played or placed where small children can reach it.
5. Do not connect to another lighting string, decorative outfit or seasonal product.
6. Always unplug this product before installing or replacing fuses.

WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

THESE INSTRUCTIONS ARE FOR THESE ITEMS

| | | | | | | |
|--------|--------|--------|--------|--------|--------|--------|
| 11160 | 11164 | 12781 | 12794 | 12863 | 12869 | 12923 |
| 13101 | 13454 | 14382 | 14523 | 32972 | 33697 | 33840 |
| 33842 | 34270 | 35357 | 36026 | 36539 | 36629 | 37297 |
| 37405 | 37407 | 37551 | 37797 | 38656 | 40070 | 40078 |
| 40080 | 40091 | 40697 | 41530 | 41533 | 41688 | 49233 |
| 49274 | 49342 | 49369 | 49376 | 49377 | 49380 | 49620 |
| 59459 | 59460 | 59678 | 59679 | 71168 | 71170 | 71992 |
| 72550 | 72734 | 73080 | 73086 | 73087 | 73102 | 73111 |
| 73243 | 73283 | 73554 | 73556 | 73603 | 74163 | 74164 |
| 74212 | 74216 | 74220 | 74294 | 74309 | 74311 | 74381 |
| 74383 | 74391 | 74392 | 74393 | 74504 | 74651 | 74659 |
| 74752 | 74754 | 74755 | 74756 | 74872 | 74945 | 74946 |
| 75013 | 75025 | 75046 | 75116 | 75223 | 80730 | 80735 |
| 81846 | 85713 | 85714 | 85765 | 85767 | 85768 | 85980 |
| 86085 | 86267 | 86399 | 110071 | 110135 | 110137 | 110139 |
| 110143 | 110145 | 110277 | 110327 | 110329 | 110529 | 110530 |
| 110532 | 110536 | 110646 | 110751 | 110752 | 110862 | 110864 |
| 110866 | 110868 | 110870 | 110912 | 110927 | 110992 | 111058 |
| 111072 | 111083 | 111173 | 111270 | 111716 | 111988 | 111989 |
| 111990 | 111991 | 111992 | 111993 | 111994 | 111995 | 111996 |
| 111999 | 112000 | 112001 | 112504 | 112611 | 112612 | 112700 |
| 112725 | 112745 | 112746 | 112747 | 113005 | 113101 | 113389 |
| 113391 | 113393 | 113441 | 113461 | 113974 | 114691 | 114692 |
| 114894 | 114895 | 115021 | 115022 | 115023 | 115330 | 115358 |
| 115359 | 115360 | 115361 | 115362 | 115363 | 115364 | 115415 |
| 115416 | 115418 | 115419 | 115420 | 115421 | 115423 | 115429 |
| 115441 | 115476 | 115493 | 115502 | 115628 | 115629 | 115631 |
| 115726 | 115777 | 115821 | 115825 | 115838 | 115839 | 115893 |
| 115895 | 115948 | 115950 | 115984 | 116129 | 116130 | 116131 |
| 116132 | 116133 | 116134 | 116135 | 116136 | 116137 | 116138 |
| 116139 | 116140 | 116141 | 116142 | 116143 | 116144 | 116145 |
| 116146 | 116147 | 116148 | 116149 | 116150 | 116151 | 116152 |
| 116153 | 116154 | 116155 | 116156 | 116166 | 116167 | 116168 |
| 116181 | 116182 | 116183 | 116184 | 116192 | 116193 | 116204 |
| 116205 | 116206 | 116207 | 116208 | 116209 | 116211 | 116212 |
| 116213 | 116214 | 116257 | 116258 | 116259 | 116260 | 116261 |
| 116262 | 116263 | 116264 | 116265 | 116266 | 116267 | 116268 |
| 116269 | 116270 | 116271 | 116272 | 116329 | 116330 | 116331 |
| 116332 | 116333 | 116334 | 116335 | 116336 | 116337 | 116338 |
| 116339 | 116340 | 116341 | 116342 | 116343 | 116344 | 116345 |
| 116361 | 116362 | 116363 | 116364 | 116365 | 116366 | 116367 |
| 116368 | 116369 | 116370 | 116371 | 116372 | 116373 | 116374 |
| 116375 | 116376 | 116377 | 116378 | 116379 | 116380 | 116381 |
| 116390 | 116392 | 116394 | 116395 | 116396 | 116397 | 116398 |
| 116399 | 116400 | 116401 | 116472 | 116474 | 116475 | 116476 |
| 116477 | 116491 | 116492 | 116495 | 116496 | 116499 | 116500 |
| 116519 | 116520 | 116528 | 116529 | 116530 | 116614 | 116615 |
| 116663 | 116664 | 116665 | 116674 | 116675 | 116676 | 116677 |
| 116678 | 116679 | 116716 | 116751 | 116801 | 116802 | 116812 |
| 116938 | 116942 | 117002 | 117005 | 117051 | 220046 | 220188 |
| 220189 | 220367 | 220374 | 220378 | 220379 | 220380 | 220447 |

| | | | | | | |
|--------|--------|--------|--------|--------|--------|--------|
| 220813 | 220814 | 220815 | 220816 | 220847 | 220851 | 220866 |
| 220868 | 220883 | 220884 | 220886 | 220901 | 220916 | 220934 |
| 220935 | 220941 | 220988 | 220989 | 220992 | 221100 | 221101 |
| 221102 | 221167 | 221197 | 221232 | 221233 | 221235 | 221236 |
| 221296 | 221309 | 221386 | 221400 | 221402 | 221410 | 221432 |
| 221522 | 221524 | 221542 | 221544 | 221545 | 221546 | 221554 |
| 221555 | 221823 | 221883 | 221885 | 222173 | 222173 | 222270 |
| 222271 | 222344 | 222437 | 222451 | 222467 | 222564 | 222565 |
| 222686 | 222689 | 222690 | 222691 | 222955 | 222958 | 222959 |
| 222960 | 222961 | 223119 | 223125 | 223126 | 223190 | 223207 |
| 223250 | 223262 | 223310 | 223311 | 223312 | 223313 | 223314 |
| 223319 | 223362 | 223618 | 223620 | 223621 | 223622 | 223623 |
| 223624 | 223625 | 223626 | 223627 | 223628 | 223645 | 223653 |
| 223654 | 223682 | 223683 | 223684 | 223685 | 223686 | 223687 |
| 223688 | 223689 | 223690 | 223691 | 223692 | 223694 | 223695 |
| 223790 | 223791 | 223814 | 223815 | 223816 | 223822 | 223823 |
| 223824 | 223825 | 223828 | 223829 | 223830 | 223831 | 223840 |
| 223855 | 223856 | 223863 | 223864 | 223869 | 223893 | 223894 |
| 223895 | 223896 | 223897 | 223898 | 223899 | 223900 | 223901 |
| 223902 | 223903 | 223904 | 223905 | 223906 | 223907 | 223908 |
| 223909 | 223910 | 223911 | 223912 | 223913 | 223914 | 223915 |
| 223916 | 223917 | 223919 | 223922 | 223923 | 223924 | 223925 |
| 223934 | 223935 | 223936 | 223937 | 223938 | 223939 | 223940 |
| 223941 | 223942 | 223943 | 223944 | 223945 | 223946 | 223947 |
| 223948 | 223960 | 223961 | 223962 | 223963 | 223964 | 223965 |
| 223966 | 223967 | 223968 | 223969 | 223970 | 223971 | 223972 |
| 223973 | 223974 | 223975 | 223976 | 223977 | 223978 | 223981 |
| 223982 | 223999 | 224000 | 224014 | 224017 | 224028 | 224029 |
| 224030 | 224063 | 224067 | 224068 | 224069 | 224070 | 224071 |
| 224072 | 224073 | 224074 | 224075 | 224076 | 224094 | 224100 |
| 224175 | 224176 | 224177 | 224178 | 224179 | 224225 | 224373 |
| 224790 | 330036 | 330049 | 330055 | 440138 | 440171 | 445041 |
| 445043 | 445050 | 445064 | 445070 | 445071 | 445131 | |



Visit WWW.GEMMY.COM for more
information.
©2019 GEMMY INDUSTRIES CORP.
117 WRANGLER DRIVE, SUITE 100
COPPELL, TX 75019 U.S.A.
1 (800) 274-6717
MADE IN CHINA
PRINTED IN CHINA