

TROUBLESHOOTING & MAINTENANCE



For more information contact...

WOODFORD MANUFACTURING COMPANY

2121 Waynoka Road, Colorado Springs, Colorado 80915 • Phone: (800) 621-6032 • Fax: (800) 765-4115

To view our complete product line visit: www.woodfordmfg.com or email: sales@woodfordmfg.com

A Division of WCM Industries, Inc.

W34 Yard Hydrant Linkage Adjustment

To increase or decrease handle tension.

Rev 06/15 Form No. TMYH-1.104



If the Handle does not "snap" closed approximately 3" from the head casting upon turning off the hydrant, follow the instructions to adjust the linkage and handle tension.

Linkage adjustment can be made with the water supply on by tightening the Packing Nut enough to hold the hydrant closed.

To increase the Handle tension:

- With the Handle in a closed position, loosen the Set Screw in the side of the Pivot. Fig 1
- Lift the Handle to the desired position and reset the Set Screw. Fig 2
- *The Handle, at the end of the closing stroke, should "snap" closed against the Head Casting. Fig 2*

To decrease the Handle tension:

- Lift the Handle part way open and loosen the Set Screw in the side of the Pivot. Fig 3
- Lower the handle to the desired location and reset the set screw. Fig 4
- *The handle, at the end of the closing stroke, should "snap" closed against the Head Casting. Fig 4*

