

Care Instructions

Congratulations on your purchase of this fire pit. This product is made of durable steel with a wicker embossed fire bowl in antique bronze color, a black painted iron fire screen, decorative copper color rails and 4 elegant legs.

The black paint on the fire screen will break down over time, as the fire pit is burned. We recommend the use of a high heat black spray paint to help inhibit the process.

You don't need to season your fire pit before burning. You may burn wood, synthetic logs or charcoal in your firepit. Pinon wood is ideal because it emits a pleasing aroma that also repels insects. We recommend a mixture of pinon chunks with other woods to achieve a pleasant burning experience.

Some woods tend to crackle and spark more than others. Wind can also blow burning embers around the firepit. In order to safeguard against blowing sparks/embers, make sure you have the screen securely in place while using your firepit.

ENJOY YOUR NEW FIREPIT, BUT ALWAYS USE IT SAFELY

Distributed By:
Well Traveled Living
716 S 8th Street
Amelia Island, FL 32034



Web: www.wtliving.com
Email: cservice@welltraveled.net

1 YEAR LIMITED WARRANTY – Customers in the Continental US

All components are warranted for a period of 1 year after date of purchase by the original owner against defects in materials and workmanship under normal use. This warranty does NOT cover normal wear and weathering, assembly and/or maintenance OR use in a commercial application. At Well Traveled Living's sole discretion, products under warranty will be repaired and/or replaced at no charge to the customer. Any returns sent back to Well Traveled Living must be sent via prepaid freight and in the original retail packaging.

For warranty service contact Well Traveled Living at the address, phone numbers or internet site and email listed in this owner's manual. Be sure to have your sales receipt, date of purchase and catalogue/model numbers available when calling. All warranty service will be coordinated by the Well Traveled Living's, Amelia Island, Florida service center.

This warranty is extended only to the original purchaser. Proof of purchase will be required before warranty service is rendered. The sales receipt is the only valid proof of purchase. This warranty only covers failures due to defects in materials or workmanship which occur during normal use. Failures and/or damage which result from accident, negligence, misuse, abuse, neglect, mishandling, alteration or modification, failure to maintain, improper assembly or maintenance, service by unauthorized agency or use of unauthorized components or damage that is attributable to acts of God are NOT covered.

*****THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED ABOVE*****

*****PURCHASER ASSUMES ALL RISKS IN THE ASSEMBLY AND OPERATION OF THIS UNIT*****

*****FAILURE TO FOLLOW WARNINGS AND OPERATIONAL INSTRUCTIONS CONTAINED IN THIS MANUAL CAN RESULT IN SEVERE PROPERTY DAMAGE AND/OR PERSONAL INJURY*****

IN NO EVENT WILL WELL TRAVELED LIVING, OR ITS DIRECTORS, OFFICERS OR AGENTS BE LIABLE TO THE PURCHASER OR ANY THIRD PARTY, WHETHER IN CONTRACT, IN TORT, OR ON ANY OTHER BASIS, FOR ANY INDIRECT, SPECIAL, PUNITIVE, EXEMPLARY, CONSEQUENTIAL, OR INCIDENTAL LOSS, COST, OR DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE SALE, MAINTENANCE, USE, OR INABILITY TO USE THE PRODUCT, EVEN IF WELL TRAVELED LIVING OR ITS DIRECTORS, OFFICERS OR AGENTS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH LOSSES, COSTS OR DAMAGES, OR IF SUCH LOSSES, COSTS, OR DAMAGES ARE FORESEEABLE. IN NO EVENT WILL WELL TRAVELED LIVING, OR ITS OFFICERS, DIRECTORS, OR AGENTS BE LIABLE FOR ANY DIRECT LOSSES, COSTS OR DAMAGES THAT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO THE PURCHASER.

This limited warranty gives you specific legal rights and you may also have other rights which vary from jurisdiction to jurisdiction. The provisions of the United Nations Convention on Contracts for the Sales of Goods shall not apply to this limited warranty or the sale of products covered by this limited warranty.

IMPORTANT NOTICE

-Do NOT return to place of purchase-For customer service and warranty issues
contact our Customer Service Center at:

(866)-985-7877 OR

Email: cservice@welltraveled.net

Customer Service Hours: Mon. – Fri. 9:00 a.m. – 6:00 p.m.

Fire Sense® and Well Traveled Living® are registered trademarks of Well Traveled Imports, Inc®. All assembly instruction presentations are the property of Well Traveled Imports, Inc®. and are protected by U.S. copyrights and trademarks. All rights reserved.



OWNER'S MANUAL Copper Rail Firepit Item # 60859



IMPORTANT NOTICE

Do NOT return to place of purchase!!
Please contact our Toll Free Hotline:
(866-985-7877)
for customer service & warranty issues

Warning: For OUTDOOR USE only
****** Uncovered Areas******
48" clearance from combustible
Materials required

Web: www.wtliving.com
Email: cservice@welltraveled.net
Page 2

Well Traveled Living
716 S 8th Street
Amelia Island, FL 32034

Important Notice

Do not return to place of purchase!!
Please contact our Toll Free Hotline:
(866) 985-7877
for customer service& warranty issues

Assembly
Instructions



Warning: For OUTDOOR USE only

Assembly Time:
Approx. 15 minutes

PARTS LIST:

PART NAME	REFERENCE	QTY
Screen Handle	A	1 piece
Mesh Fire Screen	B	1 piece
Fire Bowl	C	1 piece
Décor Ring	D	4 pieces
Supporter	E	4 pieces
Leg	F	4 pieces
Poker	G	1 piece



HARDWARE

M6 Nut	AA	5 pieces
M6*12 Bolt	BB	12 pieces
M6*40 Bolt	CC	8 pieces

ASSEMBLY STEPS:


STEP 1:
Insert Screen Handle (A) into hole at top of Mesh Screen (B) and tighten with 1 piece M6 Nut (AA) on underside of screen.

STEP 2:
Attach Supporter (E) to the Fire Bowl (C) with 4 pieces M6 Nuts (AA) and 4 pieces M6*12 Bolts (BB).

STEP 3:
Attach Leg (F) to the Fire Bowl (C) with 8 pieces M6*12 Bolts (BB). DO NOT TIGHTEN BOLTS FULLY.

STEP 4:
Insert the Décor Ring (D) into the opening at top of the Leg (F), and align the hole in the Décor Ring with the hole in Leg. Insert M6*40 Bolt (CC) through both holes and loosely tighten. Repeat with the remaining 3 pieces of the Décor Ring and Leg. Tighten all bolts once you have assembled all 4 pieces.

STEP 5:
Tighten all hardware. Place assembled Mesh Screen on assembled firepit.

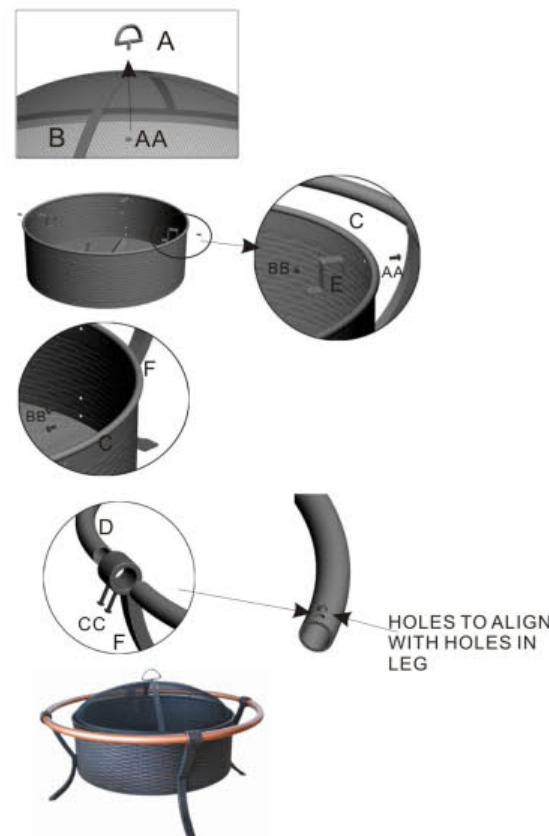

Important Notice

Do not return to place of purchase!!
Please contact our Toll Free Hotline:
(866) 985-7877
for customer service& warranty issues

Safety First! !

Warning: For OUTDOOR USE only

This is an outdoor patio firepit and should be placed in a safe,uncovered location away From combustible materials on all sides of the product.



**Do NOT leave open flames or embers unattended!*
**Do NOT allow children to be near open flames & firepit*
**Do NOT burn EXCESSIVELY HOT fires!*
**Do NOT use during windy periods!*
**ALL METAL SURFACES WILL BE VERY HOT WHEN IN USE-DO NOT TOUCH!*

1. This firepit is for OUTDOOR use ONLY. Please check your local fire regulations before use.
2. Always keep children and pets away from the firepit.Keep all combustible items such as outdoor furniture, clothing, plants, and other items at least 24" away from the firepit.
3. Do not touch the surface of the firepit while in use or until completely cooled. If you must touch the firepit, use the poker provided and/or wear protective gloves. Failure to follow this instruction will result in physical injury.
4. This firepit is intended for outdoor use only. Do not use the firepit indoors in an enclosed area such as a tent, gazebo, patio or porch. Proper ventilation is required to prevent carbon monoxide poisoning which can lead to death.
5. Do not use this firepit on wooden decks or other combustible surfaces. Make sure the firepit is located on a hard, level, non-combustible surface.
6. This firepit is intended to burn wood logs only. Do not overload the firebowl with wood. Do not burn coal, leaves or any other combustible materials in the firepit.
7. Never leave a burning firepit unattended. Extinguish the fire completely before leaving unattended. It is also recommended that you keep a fire extinguisher handy while the firepit is in use.
8. When the firepit is in use, the handle on the mesh screen can reach extreme temperature that will cause injury to an unprotected hand. Please use the poker provided and/or an appropriate heat resistant glove or pad when handling. Use this product with caution and NEVER touch a hot firepit with bare hands.
9. Do NOT use this firepit as a cooking appliance. It is not designed to be used for grilling food.
10. To avoid surface metal corrosion or damage, do not use water to extinguish the fire. Allow logs to completely burn out and then cover with sand to extinguish the fire. To extend the life of the firepit, handle the surfaces once completely cooled with a soft cloth instead of bare hands.

Please use caution and common sense when burning in your firepit. Failure to adhere to the safety guidelines could result in fire damage to your deck,home or yard. Failure to exercise caution could also cause bodily injury or even death-so please be careful !



Use heat resistant gloves & lift tool when removing fire screen dome



Fire screen-spark arrester dome MUST be in place at ALL times during use.



CAUTION: It is not recommended to use this fire pit (fire place) on a wooden or other combustible surface or any surface that is not entirely resistant to high heat. However, if you intend to use this item on a wooden deck other combustible surface or any surface that is not entirely resistant to high heat, you must use a non-flammable and heat resistant material such as concrete pavers, brick or stone between the fire pit (fire place) and the surface.

Lighting& Operation

***BEFORE you ignite your first fire-**

- *Place wood(no more than 3 large log pieces at a time),or firelog(no more than 1 at a time) in the center of the fire bowl allowing for air flow between pieces and firepit walls.
- *Use matches, butane lighters or electric starters. **Do NOT use gasoline, kerosene, starter fluids or other flammable liquids** that might cause a flash, high heat ignition fire.
- *Check and remove ash build up in the fire bowl regularly.

Web: www.wtliving.com
Email: cservice@welltraveled.net