


USER'S MANUAL HEIDI SERIES OUTDOOR LOUNGE CHAIR

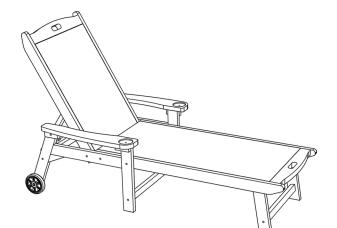

Guide of Manual

- ★ Thanks for your choice. We will do our best to provide customer service for everyone.
- ★ Please check to make sure all parts are included as stated when you unpack. If there are parts missing or wrong, please contact us, we will expeditiously provide reissue accessories, compensation or other services.
- ★ Instruction should be read carefully. But the manual may not cover every detail of all possible situations and steps. Please contact us if further information and help are needed. We will respond in a timely manner.
- ★ Please be patient that the other items are on the way if you buy more than one product.

Warning

- It's kindly advised to assemble this product on a carpeted floor to protect it from being scratched.
- Small parts are included. Please keep the product away from children while assembling. Do not let children play or jump on the product.Do not stand on the item or use as a step ladder.
- Please pay attention to the sharp corners during assembly. We recommend the use of gloves to prevent the undesired injury.
- Prior to use, please check to see if there's any loosening screw or part. Make sure that each screw and part is correctly installed and securely fastened.
- Usually it's unnecessary to use electric drill. Please at a low gear if you need.

Care and Maintenance

- HDPS frames require a solution of mild detergent and water to remove dirt, dust, and debris. For the HDPE Wicker, please remove dust and debris with a brush or vacuum cleaner.
- After cleaning or exposure to rain, allow the chairs to dry completely.
- This item could be cleaned with soap and water. Be sure to avoid harsh solvents and abrasives.
- Periodically(every 90 days)make sure the screws are fully tightened.

Further Advice About The Furniture Care

- If HDPS frames run into scratch problems, we suggest you erase the scratches with a knife.
- HDPE Wicker is UV-resistant, consider using covers or storing the chairs in a shaded area when not in use.

Material

100% HDPS and HDPE Wicker


Max weight capacity

 Seat: 300 lbs [Do not stand on the item] Back: 200 lbs [Do not stand on the item]

Parts List & Assembly Instruction

- 1. Make sure all parts are in the package.
- 2. "+" in below list indicates that additional pieces are replacement parts.
- 3. Do not fully tighten anything until all screws, nuts, washers and bolts are in place.

Parts List

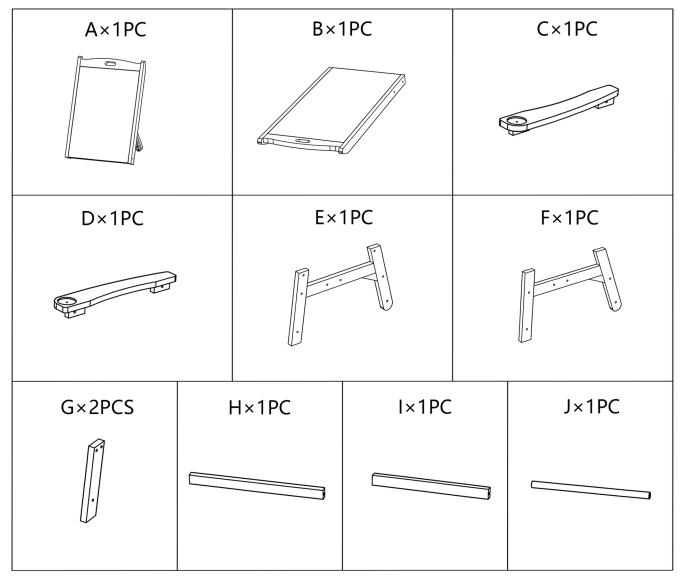

Hardware List

