


EZRA / HAWTHORNE / KENTVILLE

DINING CHAIR

MODEL # AXCDCHR-003-G



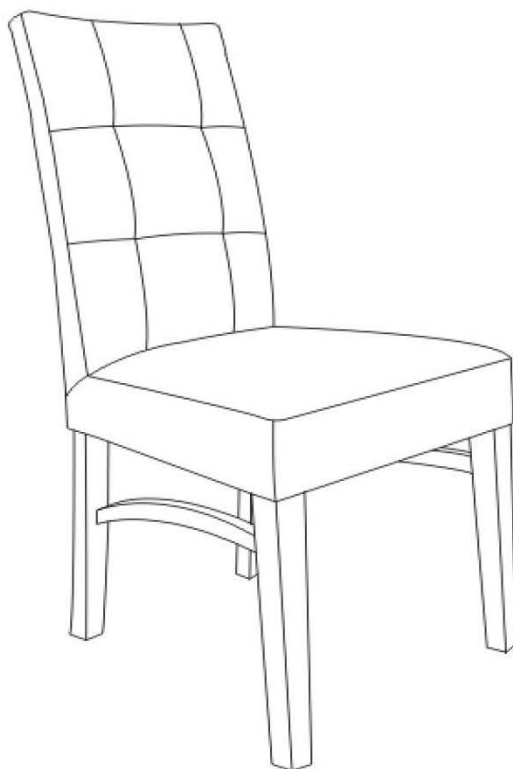

Questions, problems, assembly help, missing parts?

No need to return the product, we will gladly help and ship your replacement parts free of charge

Please call Customer Service at 1-866-518-0120 ext. 262

Monday to Friday between 9 am – 4 pm EST

or go to

www.simpli-home.com/parts request

In order to assist you in a timely manner, please have the following information ready:

Model # _____ Part Number or Letter _____

Purchased at _____ Date of Purchase _____

If you wish to return the product, please contact the retailer where the product was purchased.

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

SAFETY INFORMATION

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets.

We recommend that you assemble this unit on a carpeted floor to avoid scratches. We do not recommend the use of power tools for assembly as this could damage the unit. Only use manual tools.

Requires 2 people for ease of assembly.

CARE and MAINTENANCE

Wipe regularly with clean water and a damp, clean, soft white cloth.

General cleaning can be done as needed with a mild detergent and water solution. Always rinse with clean water and dry.

For heavy soiling, dampen a soft white cloth or soft bristle brush. Use care as scrubbing can damage the surface.

More difficult stains can be treated, but this should be occasional, not daily, cleaning. ANY cleaning solution used must be removed with clean water and a clean white cloth. Cleaning residue left on the material can cause it to dry out and crack, or affect the color.

DO NOT use any cleaners with corrosive ingredients (lye, acids or ammonia).

PRE-ASSEMBLY INFORMATION

PARTS DESCRIPTION

A



CHAIR BACK
QTY 1

B



SEAT
QTY 1

C



LEFT STRETCHER
QTY 1

D



RIGHT STRETCHER
QTY 1

E



LEFT FRONT LEG
QTY 1

F

 
 
 
 
 

 


RIGHT FRONT LEG
QTY 1

NEED HELP? For help with assembly or if you are missing a part,
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)

PRE-ASSEMBLY INFORMATION


HARDWARE DESCRIPTION

1  ALLEN KEY SCREW M8 X 45MM QTY 1	2  ALLEN KEY SCREW M8 X 60MM QTY 4	3  ALLEN KEY SCREW M8 X 90MM QTY 4
4  FLAT WASHER Ø22mm QTY 9	5  SELF-TAPPING SCREW Ø3.5 X 40MM QTY 4	6  ALLEN KEY 5MM QTY 1
7  LOCK WASHER Ø13mm QTY 9		

NEED HELP? For help with assembly or if you are missing a part,
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)

ASSEMBLY


STEP 1

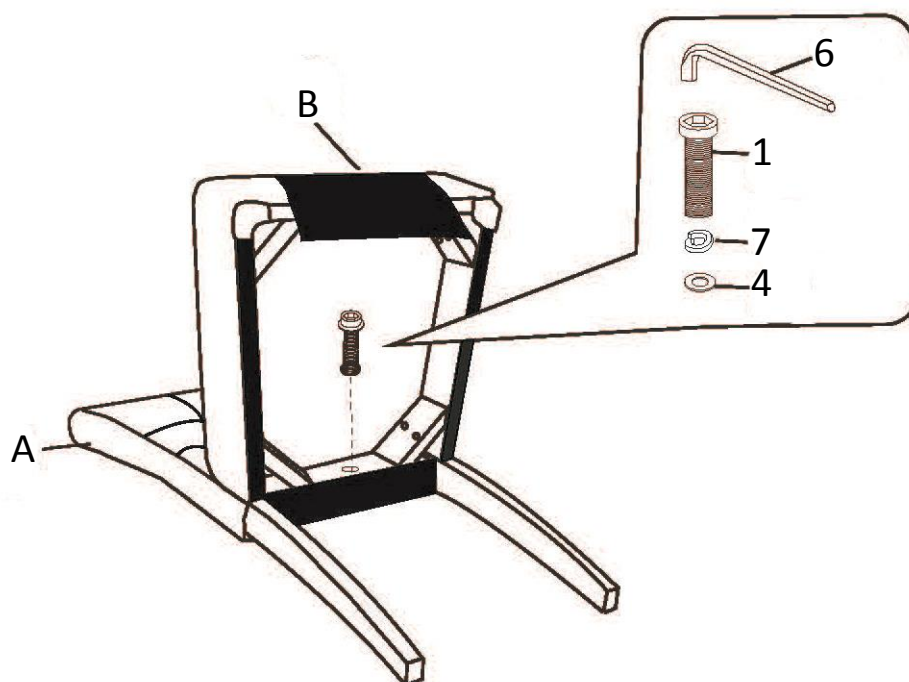

Align Seat Cushion (B) into pre-drilled holes on Chair Back (A).
Attach Seat Cushion (B) to Chair Back (A) using Allen Key Screw (1)
and one Washers each of (4) and (7).
Use Allen Key (6) tighten. Do not over-tighten.

ASSEMBLY


STEP 2

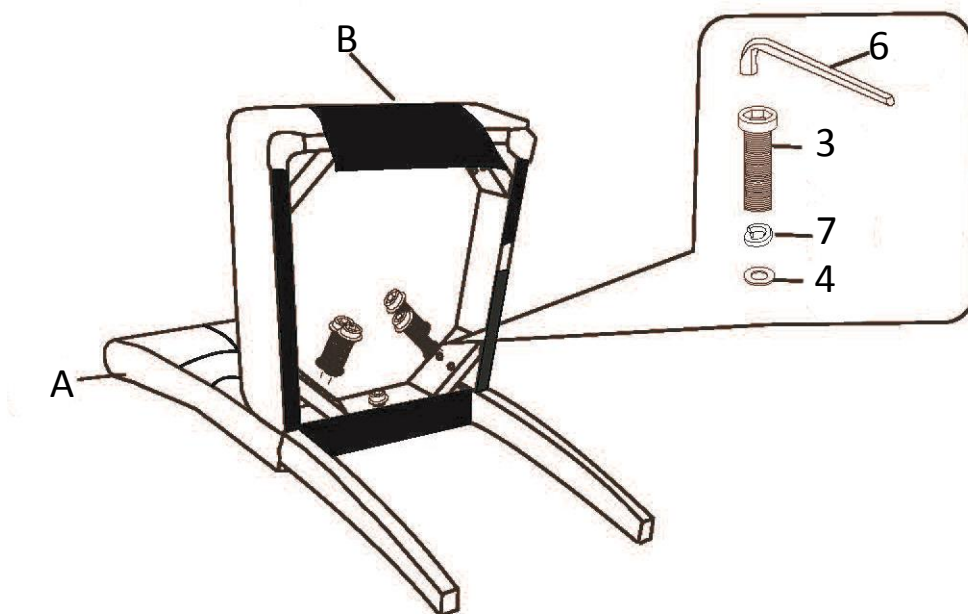

Attach Seat Cushion (B) to Chair Back (A) using Allen Key Screw (3) and four Washers each of (4) and (7).
Use Allen Key (6) tighten. Do not over-tighten.

ASSEMBLY

STEP 3

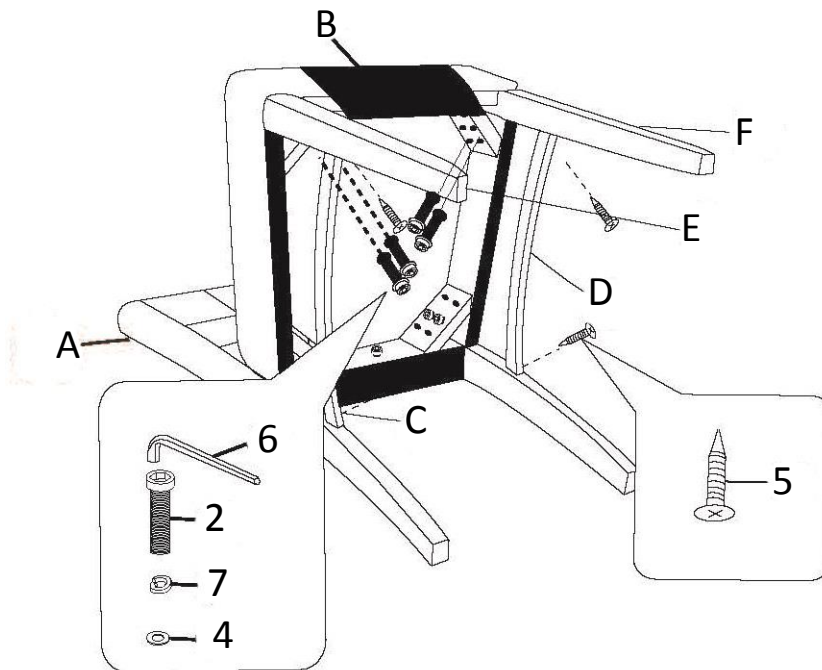

Attach Front Legs (E & F) using Allen Key Screws (2) and four Washers Each of (4) and (7).


Use Allen Key (6) tighten. Do not over-tighten.

Align the Stretcher (C & D) into Chair Back (A) and Front Legs (E & F). with Self-Tapping Screws (5).

Fully tighten Self-Tapping Screws (5).

ASSEMBLY


STEP 4

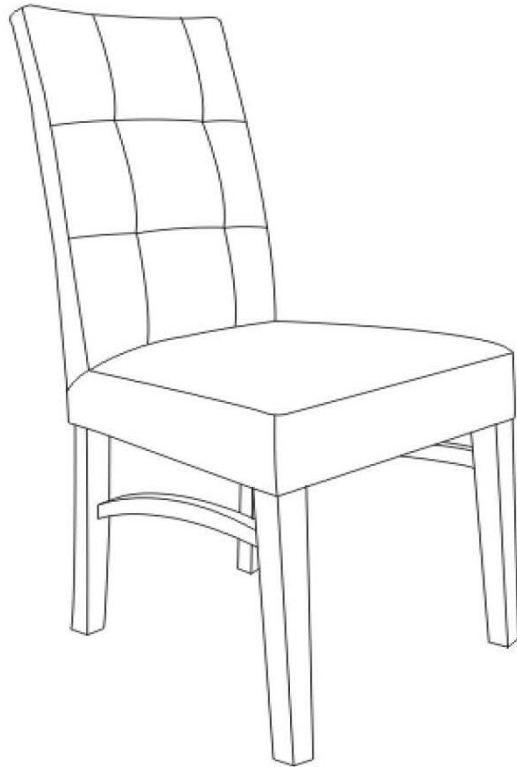

Place Chair on a flat level surface to ensure it is level. If it is uneven, Adjust either the Seat (B) or Front Legs (E) and (F) to ensure the Chair Is level and then fully tighten the bolts.

ASSEMBLY


STEP 5

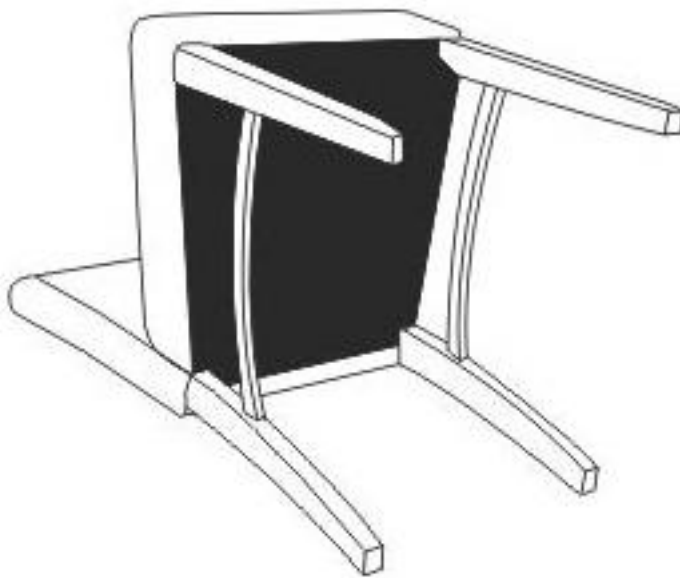

Use the zipper to close the fabric on the bottom of the Chair.

ASSEMBLY

STEP 6

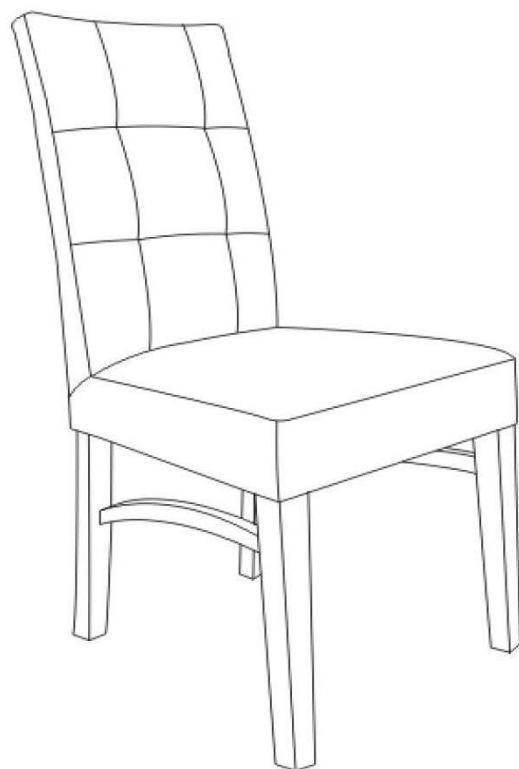

Turn Chair right side up.



WARRANTY

Thank you for purchasing a **Simpli Home – Wyndenhall – Brooklyn + Max** product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

In case of any malfunction of your product (failure, missing parts, etc.) please contact us at our toll free service line at 1-866-518-0120 ext. 262 from 9 am to 4 pm, Monday to Friday, Eastern Standard Time or by email at customerservice@simpli-home.com.

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.