
CEILING FAN INSTRUCTION MANUAL

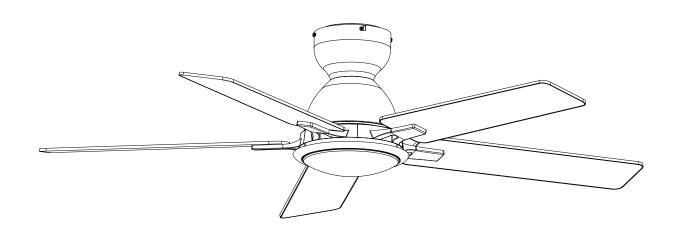


ITEM# 30002

Owner's Manual Please Read And Save The Instructions

Customer Service: support@breezary.com

Parts list

Unpack your fan and check the contents. You should have the following items:

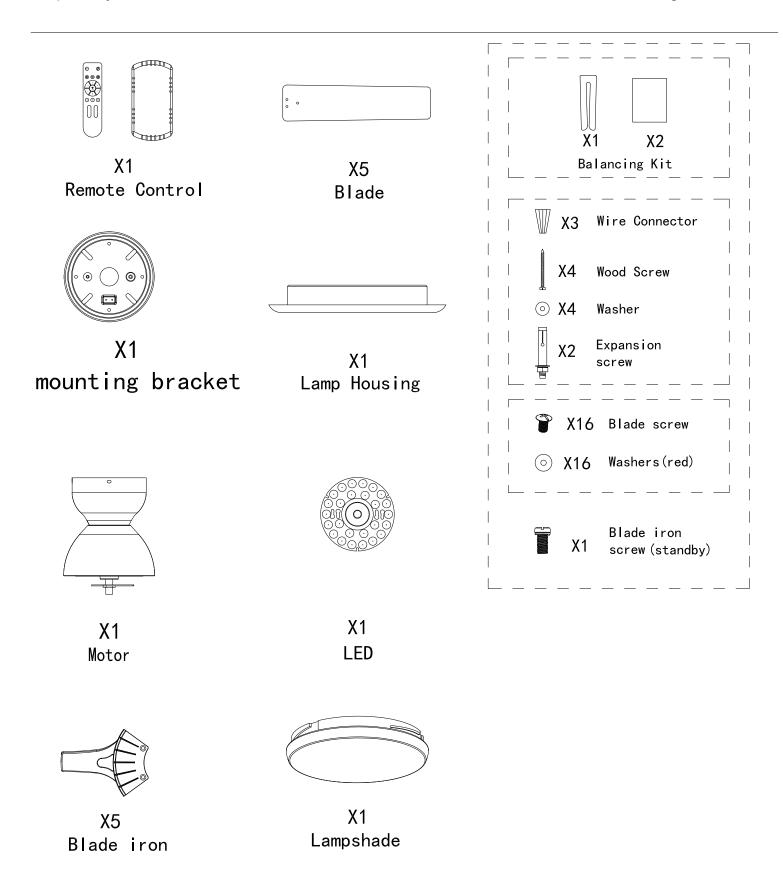


SAFETY TIPS

READ AND SAVE THESE INSTRUCTION

WARNING - TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:

- a) Use this unit only in the manner intended by the manufacturer. If you have question, contact the manufacturer.
- b) Before servicing or cleaning unit, switch power off at service panel and lock the service disconnecting means to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked securely fasten a prominent warning device such as a tan to the service panel.
- To Reduce The Risk Of Personal Injury. Do Not Bend The Blade Brackets When Installing The Brackets. Balancing The Blades, Or Cleaning The Fan. Do Not Insert Foreign Objects In Between Rotating Fan Blades.
- To Reduce The Risk Of Fire, Electric Shock, Or Personal Injury, Mount To Outlet Box Marked 'Acceptable for Fan Support of 15.9 kg (35 lbs) or less' And Use Mounting Screws Provided With The Outlet Box.
- To Reduce The Risk Of Electric Shock, Disconnect The Electrical Supply Circuit To The Fan Before Installing Light Kit.


Tools Required

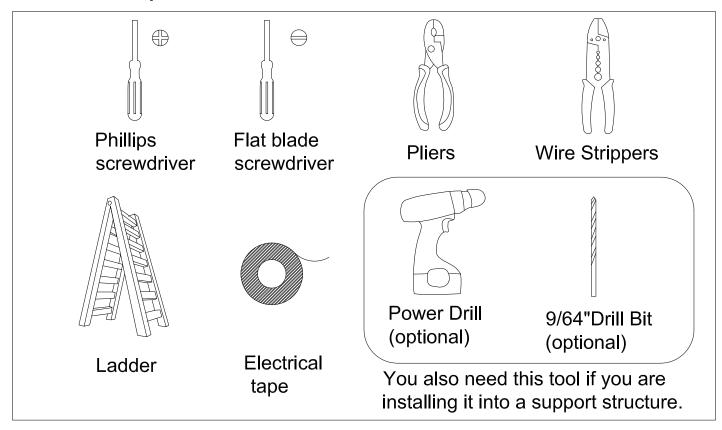

1. Remove the Ceiling Bracket

- 1.1 Remove two screws. (Fig.11)
- 1.2 Loosen the two screws (Fig.1 2)
- 1.3 Turn the ceiling bracket counterclockwise, turn the screw on the edge of the hanger tray to the L-shaped opening of the fan cover, and lift the ceiling bracket.

 (Fig.1 3 4)

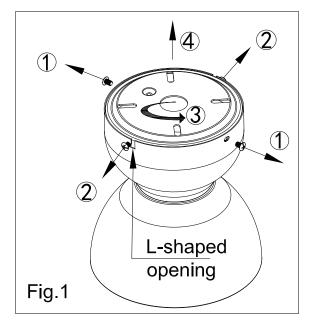

2.Installing the Ceiling Bracket



WARNING


To avoid the possibility of electric shock, before installing the fan, unplug the power supply and turn off the circuit breaker of the socket box associated with the wall switch position.

Option 1:

Machine Screws

(The machine screws are the ones that came with your outlet box.)

Use machine screws (provided with outlet box) and washers when securing to existing ceiling fan-rated outlet box. Make sure it is securely installed and is acceptable for fan support of 15.9 kg (35 lbs) or less.

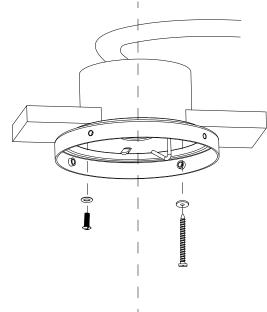


Option 2: Machine Screws

Use wood screws and washers (included) when securing to support structure with approved electrical outlet box. Drill 9/64" pilot holes in support structure to aid in securing hanger with hardware found in the hardware bag.

Option 3:


Expansion screws

For the Concrete Ceiling:Mark the location for the ceiling fan first, then drill two holes in the ceiling to aid in securing ceiling bracket with two expansion screws provided, and secure the ceiling bracket to the building structure with two expansion screws provided,tighten the screws. (Fig.2)

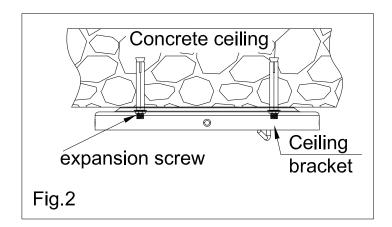

3. Hanging Motor housing

3.1 Lift the Motor housing and hang it on the hook of the ceiling bracket.

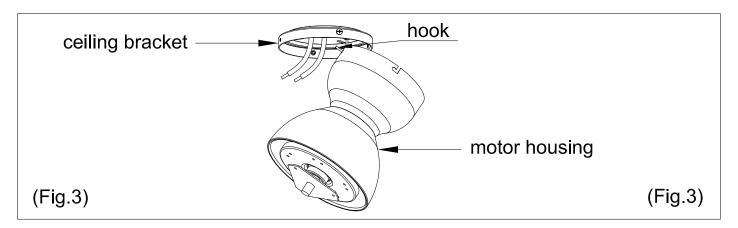


4. Wiring the Fan



WARNING ----

- All wiring must be in accordance with national and local electrical codes.
 If you are unfamiliar with wiring or in doubt, consult a qualified electrician.
- To reduce the risk of fire or injury do not use this product in conjunction with any variable(rheostat) wall control.

4.1, Wiring according to the wiring diagram. (Fig.4)

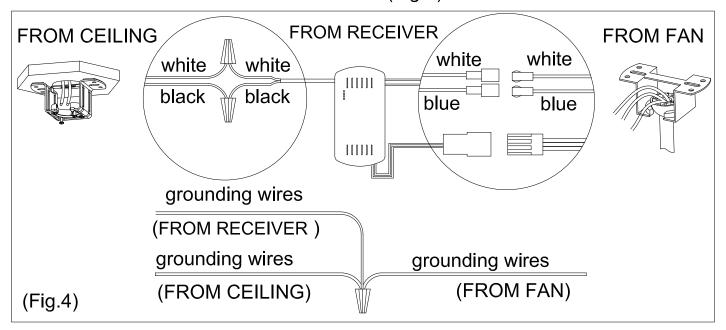

4.2 After wiring, put the Receiver into the motor housing. (Fig.5 and 6)




Professional tips:

After making the wire connections, the wires should be spread apart with the grounded conductor and the equipment-grounding conductor on one side of the outlet box and the ungrounded conductor on the other side of the outlet box. The splices after being made should be turned upward and pushed carefully up into the outlet box.


5.Installing Motor housing

- 5.1 Remove the motor housing from the hook and align it with the ceiling bracket hole on the suspension plate, push up and turn Clockwise. (Fig.7)
- 5.2 tighten the four screws. (Fig.8)

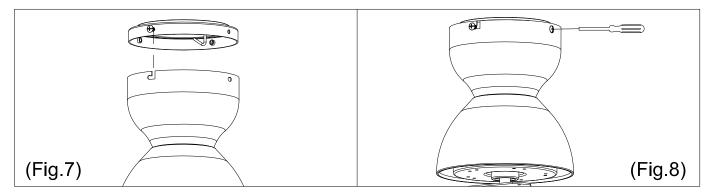


6. Attaching the Fan Blades

- 6.1, Fix the blade to the blade bracket with screws and washers. (Fig.9)
- 6.2, Repeat steps for the remaining blades.

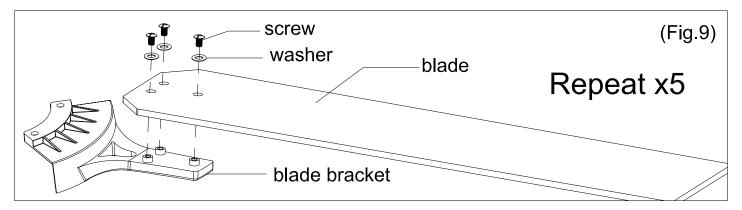


7. Attaching the Fan Blade Bracket

7.1, Attach the blade bracket to the motor with blade iron screws. (Fig. 10)

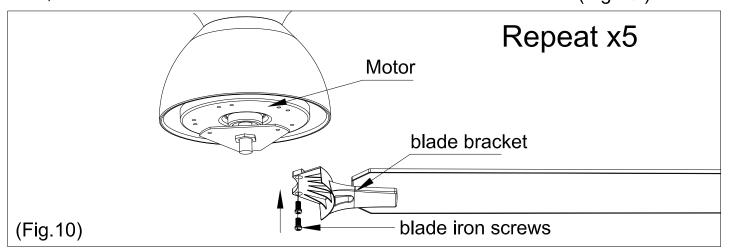


8. Assembling the Light Kit


- 8.1, Feed the wire through the center hole of the lamp base. (Fig.11)
- 8.2, Fix the lamp base with screws. (Fig.11)
- 8.3, a) Connect the motor end LIGHT (L) to the LED end LIGHT (L) using a wiring cap. (Fig.12)
 - b) Connect the motor end LIGHT (N) to the LED end LIGHT (N) using a wiring cap. (Fig.12)
 - c) Attach the LED to the lamp base (with a magnet on the back of the LED)

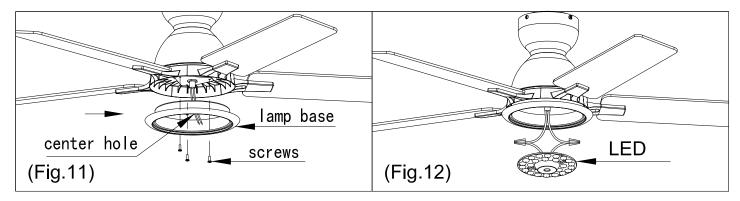

9. The lampshade installation


9.1, Install the lampshade to the lamp base by turning clockwise to lock it into place. (Fig.13 1) → 2)

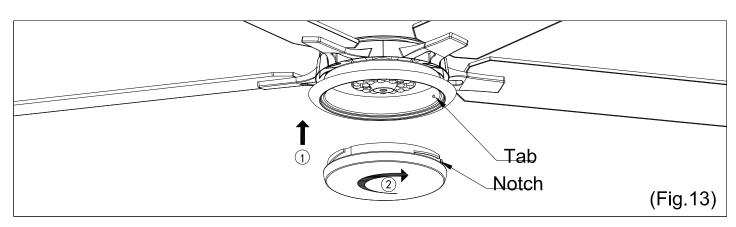

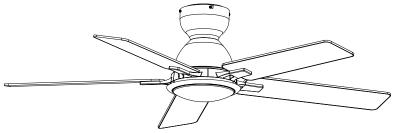

CONGRATULATIONS!
YOU HAVE COMPLETED THE INSTALLATION

Remote control Operation Guide

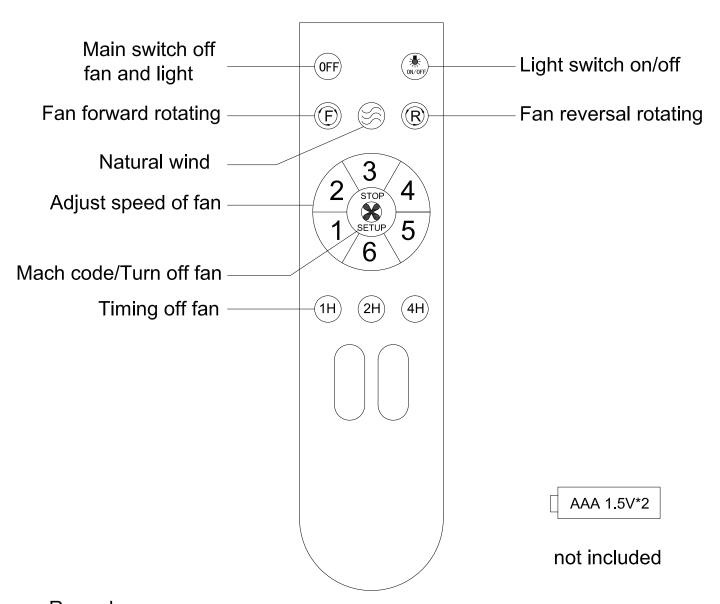

Remarks:

When the remote control cannot be used.

Turn on the power switch, press the "SETUP" key within 3 seconds, the receiver issued a "tick" two sounds, the pair code is successful. If not successful, turn off the power for a minute an repeat the above.

Warm tips:

Check the battery when the remote control is not effectively controlled.

Troubleshooting and Maintenance

Troubleshooting

Fan doesn't work

- Make sure power switch is on.
- Check the circuit breaker to ensure the power is turned on.
- · Make sure the blades spin freely.
- Turn off power from the circuit breaker, then loosen the canopy and check all the connections according to the wiring diagram.

Excessive swaying of the fan

- · Make sure the blades are properly installed on the blade iron posts.
- Turn the power off, support the fan carefully, and check that the hanger ball is properly seated.
- Use the provided balancing kit and instructions to balance the fan.

Noisy Operation

- Make sure the blades are properly installed.
- Check to see if any of the blades are cracked. If so, replace all of the blades.

Remote Control of Fan is Erratic

- Make sure the battery is installed correctly.
- Install a fresh battery.

WARNING

 If unusual oscillating movement is observed, immediately stop using the ceiling fan and contact the manufacturer, its service agent or suitably qualified persons.

The maintenance cycle and method of maintenance

- It is recommended to inspect the connecting components of the fan at least once a year, such as hangers, blade racks, and fan blades, to ensure that their connections are still safe and reliable.
- Regularly clean the ceiling fan to maintain a clean and bright surface. When
 removing surface dust, please use a soft brush or cloth to avoid damaging
 the surface. When removing oil or sediment, a slightly damp cloth can be
 used to wipe it off, and do not rinse it with water.