
1 Safety Informations

1.1 Electrical Shock Hazard

- Disconnect the appliance from the mains electricity supply before carrying out any work or maintenance on it.
- Connection to a good earth wiring system is essential and mandatory.
- Alterations to the domestic wiring system must only be made by a qualified electrician.
- Failure to follow this advice may result in electrical shock or death.




CAUTION

Risk of injury! Panel edges are sharp.
Failure to use caution could result in injury or cuts.

1.2 General Instructions

- Read these instructions carefully before installing or using this appliance.
 - No combustible material or products should be placed on this appliance at any time.
 - Please make this information available to the person responsible for installing the appliance as it could reduce your installation costs.
 - In order to avoid a hazard, this appliance must be installed according to these instructions for installation.
 - This appliance is to be properly installed and earthed only by a suitably qualified person.
 - This appliance should be connected to a circuit which incorporates an isolating switch providing full disconnection from the power supply.
 - Use only cooktop guards designed by the manufacturer of the cooking appliance or indicated by the manufacturer of the
- appliance in the instructions for use as suitable or cooktop guards incorporated in the appliance. The use of inappropriate guards can cause accidents.
 - Failure to install the appliance correctly could invalidate any warranty or liability claims.
 - This device may be only used by children 8 years old or older and persons with limited physical, sensory and mental capabilities and / or lack of experience and knowledge, provided that they have been instructed in use of the device by a responsible person who understands the associated risks.
 - The appliance is not a toy. Do not allow children to play with the appliance or sit, stand, or climb on it.
 - In the interest of children, do not store anything in cabinets above the appliance. Children climbing on the Cooktop in secret may be seriously injured by falling objects.
 - Do not leave children unattended while using the appliance. Cleaning and maintenance of the appliance must only be carried out under supervision by children over 8 years of age.
 - If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 - If the surface is cracked, switch off the appliance to avoid the possibility of electric shock, for cooktop surfaces of glass-ceramic or similar material which protect live parts.
 - Metallic objects such as knives, forks, spoons and lids should not be placed on the cooktop surface since they can get hot.
 - Do not use a steam cleaner to clean your Cooktop.
 - The appliance is not intended to be operated by means of an external timer or separate remote-control system.

- The cooking process has to be supervised. A short term cooking process has to be supervised continuously.
- Unattended cooking on a cooktop with fat or oil can be dangerous and may result in fire. NEVER try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire blanket.

 **WARNING**
Risk of fire! Do not store other items on the cooking surfaces, except pans and pots.


1.3 Instructions on Use and Maintenance

Electrical Shock Hazard


- Do not cook on a broken or cracked Cooktop. If the Cooktop surface is break or crack, switch the appliance off immediately at the mains power supply (wall switch) and contact a qualified technician.
- Switch the Cooktop off at the wall before cleaning or maintenance.
- Failure to follow this advice may result in electrical shock or death.

Health Hazard

- This appliance complies with electromagnetic safety standards.
- However, persons with cardiac pacemakers or other electrical implants (such as insulin pumps) must consult with their doctor or implant manufacturer before using this appliance to make sure that their implants will not be affected by the electromagnetic field.
- Failure to follow this advice may result in death.

 **CAUTION**
Risk of burns! During use, accessible parts of this appliance will become hot enough to cause burns. Do not let your body, clothing or any item other than suitable cookware contact the glass until the surface is cool.

- Never touch the cooking zones with your bare hand during use. Make sure that children do not touch the hot cooktop.
- Handles of saucepans may be hot to touch. Check saucepan handles do not overhang other cooking zones that are on. Keep handles out of reach of children.
- Failure to follow this advice could result in burns and scalds.

 **WARNING**
Risk of injury! The razor-sharp blade of a Cooktop scraper is exposed when the safety cover is retracted. Use with extreme care and always store safely and out of reach of children. Failure to use caution could result in injury or cuts.

General Instructions

- Never leave the appliance unattended when in use. Boilover causes smoking and greasy spillovers that may ignite.
- Never use your appliance as a work or storage surface.
- Never leave any objects or utensils on the appliance.
- Do not place or drop heavy objects on your Cooktop.
- Do not stand on your Cooktop.
- Do not place or leave any magnetisable objects (e.g. credit cards, memory cards) or electronic devices (e.g. computers, MP3 players) near the appliance, as they may be affected by its electromagnetic field.
- Never use your appliance for warming or heating the room.

-
- After use, always turn off the cooking zones and the Cooktop as described in this manual (i.e. by using the touch controls). Do not rely on the pan detection feature to turn off the cooking zones when you remove the pans.
 - Do not repair or replace any part of the appliance unless specifically recommended in the manual. All other servicing should be done by a qualified technician.
 - Do not use pans with jagged edges or drag pans across the induction glass surface as this can scratch the glass.
 - Do not use scourers or any other harsh abrasive cleaning agents to clean your Cooktop, as these can scratch the Induction glass.
 - This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
 - Children less than 8 years of age shall be kept away unless continuously supervised.
 - The power cord is no longer accessible after installation.