

nickelodeon™

pinkfong **BABY SHARK™**



BSDVD902
USER MANUAL



Table of Contents

Safety Precautions.....	2
Main Features.....	4
In the Box.....	4
Swiveling LCD Screen	5
Main Unit Controls.....	6
System Connection.....	7
Basic Operation.....	9
Playing DVDs and CDs.....	9
Virtual Remote Operation	9
Viewing Photos (JPEG Files).....	11
Playing MP3 Files	11
System Setup.....	12
General Setup.....	12
Video Setup.....	13
Preference Setup.....	14
Battery.....	15
Troubleshooting.....	16
Specifications.....	17
Need Help?.....	18
Warranty Information.....	19

Safety Precautions

Please read this manual carefully prior to use and keep it for future reference.



WARNING: To reduce risk of fire or electric shock, do not expose this device to rain or moisture.

1. Please read instruction manual carefully and follow all requirements for safe operation.
2. Do not use device near water.
3. Do not install near any heat sources such as radiators, stoves or other devices (including amplifiers) that produce heat.
4. Unplug device during lighting storms or when it is not in use for long periods of time.
5. To clean, unplug the system and use a damp cloth. Do not use liquid detergent or aerosol.
6. Only use accessories specified by the manufacturer.
7. Take device to a qualified service technician to handle damages, such as damaged power supply cords or plugs, water damage, exposure to moisture, or normal operation failure.
8. Do not use irregularly shaped discs, such as heart or star-shaped discs, as they may cause the unit to malfunction.
9. Do not mix old and new batteries.
10. Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subjected to the following two conditions: (1) this device may cause harmful interference, (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference. This equipment generates, uses, and radiates radio frequency energy. If this device is not installed and used in accordance with the instructions, it may cause harmful interference to radio communications.

However, there is no guarantee that interference will occur in a particular installation. This equipment might cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct interference by trying one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment and the receiver into different outlets.
- Consult the dealer or an experienced radio/TV technician for help.

Main Features




- Colorful 9" adjustable LCD screen
- Compatible with various disc formats: DVD, VCD, MP3, CD, JPEG, AVI, MP4
- Built-in stereo speaker
- Built-in rechargeable Lithium Polymer battery
- Supports PAL or NTSC systems
- Supports multi-language OSD, fast forward/rewind and repeat

In the Box

- DVD player
- Micro USB cable and adapter
- Headphones
- Carrying bag
- User manual
- Warranty card


Swiveling LCD Screen

Swivel the LCD screen up to 180° for optimal viewing angles.

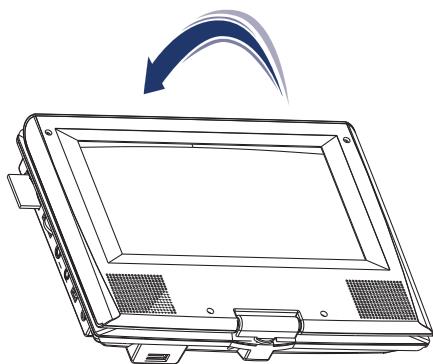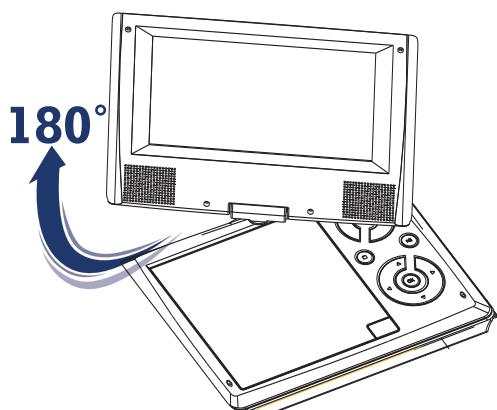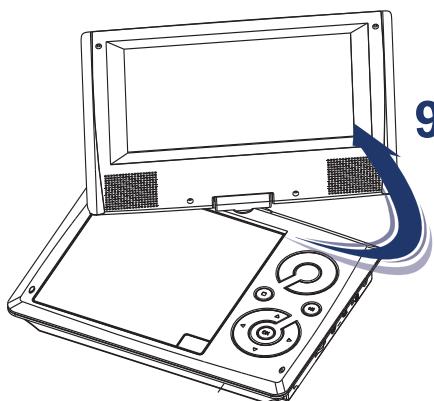

Main Unit Controls



1. VOL- button
2. DVD/USB/SD/Setup
(Press for DVD/USB/SD;
press and hold for setup)
3. VOL+ button
4. FUNCTION
5. STOP
6. PLAY/PAUSE
7. ◀ (◀◀) ▼ (▶▶) ▶ (▶▶) ▲ (◀◀)
Scroll LEFT/REWIND,
DOWN/SKIP TO END,
RIGHT/FAST FORWARD,
UP/SKIP TO START
8. OK
9. Open
10. DC IN 5V
11. Power ON/OFF switch
12. AV OUT
13. Headphone jack
14. SD card slot
15. USB port

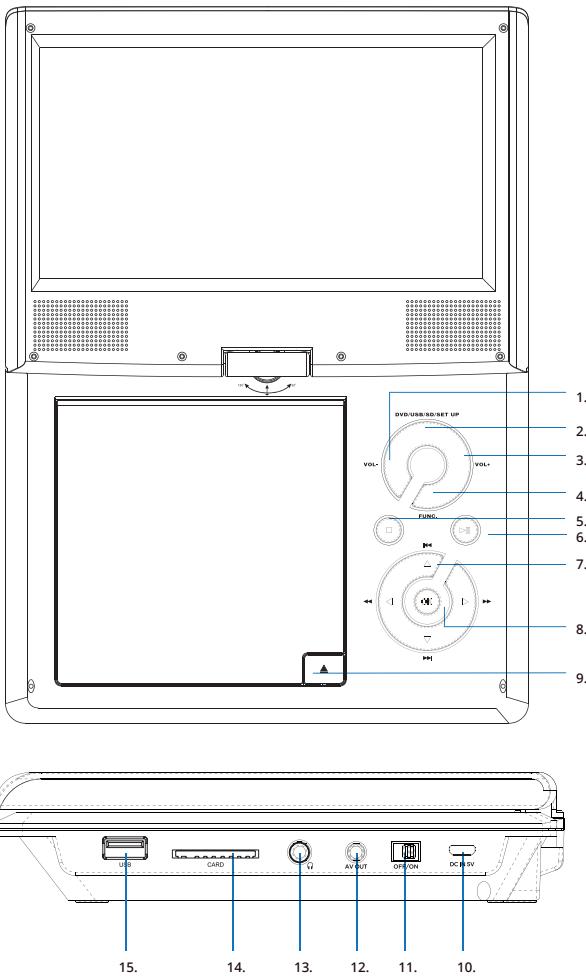

System Connection

Charging



Plug one end of the micro USB cable into the DC IN 5V port on the side of the unit, and then plug the other USB end into the power adapter. The device can now be plugged into a power outlet.

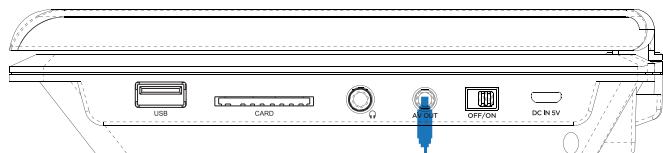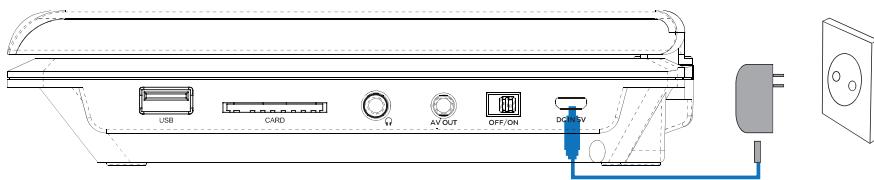

Connecting to a TV


You can connect the device to a TV to enjoy high quality videos and stereo sound. Refer to the diagram at right for details.

Make sure to use the correct AV cable for TV connection.

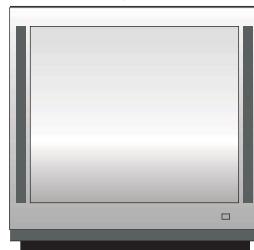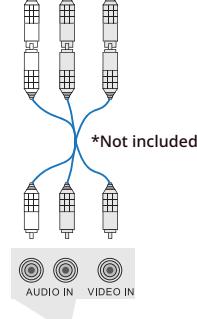

Connecting to an External Speaker

The device can be connected to an external speaker.
Please refer to the diagram below:

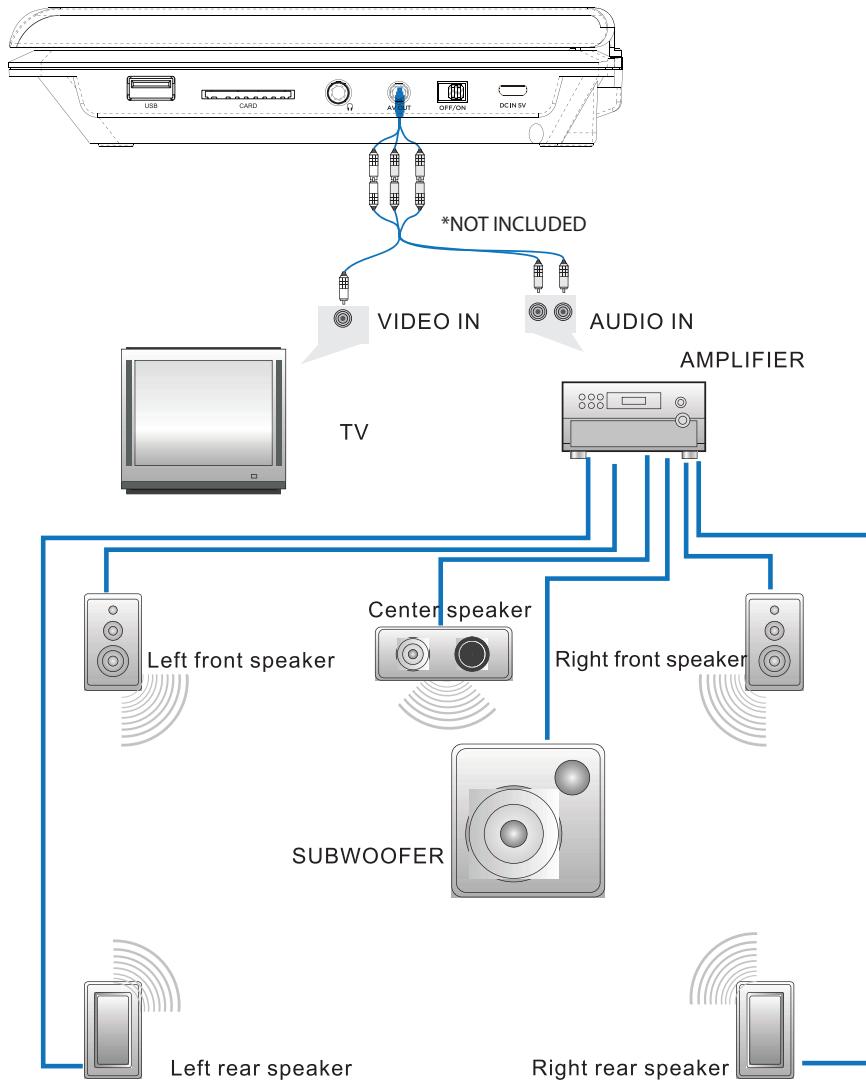

NOTE: 5.1 surround sound will only be available after connecting to an amplifier.

Basic Operation

Playing DVDs and CDs

1. Plug the DVD player into a power source.
2. Open the device and adjust the screen to the preferred position.
3. Turn the device on by sliding the ON/OFF switch to ON.
4. Open the disc door and insert a disc with the label side facing up.
5. Close the disc door. The device will load the disc and begin playback.
6. During playback, press **▶||** to pause. Press it again to resume playback.
7. When playing a DVD or CD, press **▶▶** to fast forward. Press **◀◀** to rewind the disc. Pressing either button repeatedly will increase playback speed by 2x, 4x, 8x, 16x, and 32x.
8. Press **■** to stop playback. Press **▶||** to resume playback. Press **■** twice to stop playback completely.
9. Turn device off by sliding the ON/OFF switch to OFF.

Virtual Remote Operation

1. Press **FUNCTION** when the disc is playing to view the virtual remote as shown below. The playback will pause.
2. Menu options are displayed on the left, and current playback status appears on the right.
3. Use **◀◀/▶▶/◀◀/▶▶** to choose an option. When an option is chosen, the description will be displayed at the bottom.
4. The selected option is displayed for 10 seconds at the top left side of the screen. Should you not press **OK** within 10 seconds, the option will disappear. (The Search, Back or Mute icons are not available).
5. You may also press the **FUNCTION** button to close the virtual remote menu. The player will resume after you exit the menu.



NOTE: When the disc is in the submenu, pressing the function key will go back to the main menu.

- 6.  : View the number bar. When playing DVDs, you can change the chapter and the title. When playing CDs, you can select the track. Use up/down/left/right keys to move the cursor. Press OK to confirm.
NOTE: To select the title, enter two numbers.
- 7. M (Menu): Enter/exit main menu.
- 8. ZOOM: While playing DVDs, press ZOOM repeatedly to zoom in x2, x3 and x4, respectively. While viewing a JPEG file, press ZOOM repeatedly to zoom in or out by 100%, 125%, 150%, 200%, 75%, and 50% respectively.
- 9. TT (Title): Display title information.
- 10. LANG (Language): Select audio language.
- 11. SUB (Subtitle): Select subtitle language when playing a DVD.
Displays elapsed time and remaining time.
- 12. OSD: Display the DVD/CD/MP3 information.
- 13.  (Repeat): When playing a DVD/CD/MP3 disc, you can change the repeat style by pressing repeat button. For different types of discs, the repeat function changes according to the different sequences available.

DVD:  Chapter →  Title →  All → Repeat off

MP3:  one →  folder

CD:  Track →  All

- 14. Slow: To change the playback speed while playing DVD, press OK. Press OK repeatedly to change the playback speed according to the following sequence: 1/2, 1/4, 1/8, & 1/16.
- 15.  (Return): Return to the main menu or the previous option.
- 16.  (Mute): Mute or unmute sound.
- 17. Angle: When playing a DVD disc that supports multiple angles, press "Angles" button to toggle between display angles, and press OK.

Viewing Photos (JPEG Files)

1. To view JPEG photos on a disc, insert the disc into the player. The device will read it and begin playback immediately.
2. Press **◀◀ ▶▶** and OK to select a JPEG file from the menu.
3. Press **◀◀ ▶▶** to rotate the picture.
4. Press **▶▶** to flip the picture horizontally and press **◀◀** to flip the picture vertically.

Press FUNCTION to view the following icons:   

 : Return to the main menu.

 : Repeat once, or repeat all.

 : Zoom in/out on an image during playback.

Press **◀◀ / ▶▶** and OK to select a function.



Playing MP3 Files

1. Place an MP3 disc into the disc door.
2. Press **◀◀ ▶▶** to select the file; press OK to play the selected file.

Press FUNCTION to view the toolbar shown below:



Press **◀◀ / ▶▶** to move the cursor

Select a number, and press to make a selection.


 : Mute or unmute sound.

 : Press once to repeat track, press twice to repeat folder, press again to turn repeat off.

Press FUNCTION to exit the toolbar

NOTE:

1. The quality and speed of reading JPEG files depends on the resolution and compression of the photos. Some JPEG files may not be played due to disc quality and formatting.
2. Some DVD+R/RW,DVD-R/RW,CD-R/RW discs may not be played due to the quality of burning.

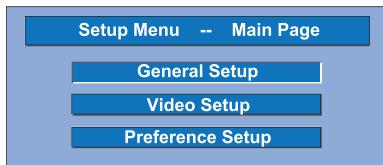

System Setup


Press SETUP to display the main menu.

Press **◀◀ ▶▶** to highlight an item.

Press OK to access.

Press **◀◀ ▶▶** to select the settings. Press OK to confirm selection.

Press SETUP to exit.

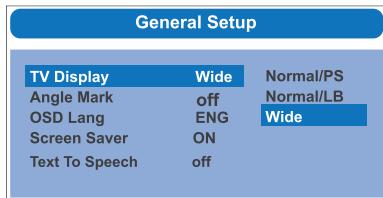


General Setup

TV Display

Select this option to set the screen format. The default is Wide.

Optional Settings: Normal/PS, Normal/LB, and Wide

NOTE: This function depends on the display ratio with which the DVD is recorded. Please choose Wide (16:9) when connecting a widescreen TV.

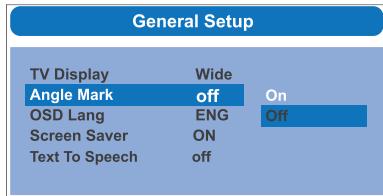

Angle Mark

Select this option to set angle during playback. The default is ON.

Optional settings: ON/OFF

General Setup

TV Display	Wide	
Angle Mark	off	
OSD Lang	ENG	English
Screen Saver	ON	French
Text To Speech	off	German
		Italian
		Spanish
		Portuguese

OSD Language

Select this option to set the language. The default is English.

Optional settings:

English, French, German, Italian, Spanish, and Portuguese

General Setup

TV Display	Wide	
Angle Mark	off	
OSD Lang	ENG	
Screen Saver	ON	On
Text To Speech	off	Off

Screen Saver

Select this option to activate or deactivate the screen saver function. The default is ON.

General Setup

TV Display	Wide	
Angle Mark	off	
OSD Lang	ENG	
Screen Saver	On	
Text To Speech	OFF	On
		off

Text to Speech

Select this option to set text to speech function.

Optional setting: ON/OFF

Video Setup

TV Type:

Select this option to set TV type to PAL or NTSC. The default is NTSC.

Video Setup

TV Type	NTSC	PAL
Panel Quality	AUTO	NTSC

Set the video panel quality.

Video Setup

TV Type	NTSC
Panel Quality	

Preference Setup

Audio	ENG	English
Subtitle	ENG	French
Disc Menu	ENG	German
Parental		Italian
Default		Spanish
		Portuguese

Preference Setup

Audio

Select this option to set the preferred audio language for DVDs. The default is English.

NOTE: The audio language depends on the material on each disc.

During playback, the audio language can be changed by pressing the Audio button.

Preference Setup

Audio	ENG	English
Subtitle	ENG	French
Disc Menu	ENG	German
Parental		Italian
Default		Spanish
		Portuguese
		off

Subtitle

Select this option to set the preferred language for onscreen subtitles. The default is OFF.

NOTE: The subtitle language depends on the information available on each disc.

During playback, the subtitle language can be changed by pressing the Subtitle button.

Preference Setup

Audio	ENG	English
Subtitle	ENG	French
Disc Menu	ENG	German
Parental		Italian
Default		Spanish
		Portuguese

Disc Menu

Select this option to choose the menu language on the disc. The default is English.

NOTE: The disc menu language depends on the information available on the disc.

Preference Setup


Audio	ENG	1 KID SAFE
Subtitle	ENG	2 G
Disc Menu	ENG	3 PG
Parental		4 PG 13
Default		5 PGR
		6 R
		7 NC 17
		8 ADULT

Parental

Select this option for parental control and to block scenes unsuitable for children.

Optional settings: Kid Safe, G, PG, PG 13, PGR, R, NC 17, and Adult. The default of this option is ADULT.

Pressing FUNCTION 4 times is the default password.

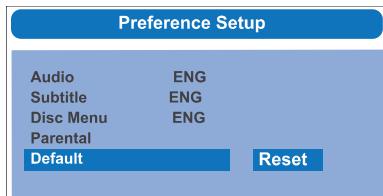

Default

Select this option and press OK to reset all settings to original factory settings.

Battery

Rechargeable Battery Use

This device uses a lithium polymer battery for portable power supply. The battery has no memory effect and thus can be recharged safely regardless of whether the battery is fully charged. On a full charge, battery life is approximately 2 hours with headphones.

Precautions for Battery Recharging

To charge the battery, the power switch must be in the OFF position. The continuous red light indicates that the battery is charging. Once the DVD player is fully charged, the light will turn off.

Using and Maintaining Rechargeable Batteries

1. The normal working temperature is 32° - 108°F.
2. Always unplug the AC/DC power supply for the device when it is not in use.
3. Heat created during playback is normal. Avoid playing while unattended.
4. Do not drop the device. Avoid extreme temperatures and damp areas.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Troubleshooting

No sound or distorted sound

Make sure the DVD player is connected properly. Make sure all cables are securely inserted into the appropriate ports.

Can't advance through a movie

The disc is programmed to prohibit any action attempting to skip through the opening credits and warning information that appear at the beginning of movies.

The icon appears on the screen

The feature or action cannot be completed at this time because:

1. The disc's software restricts it.
2. The disc's software does not support the feature (e.g. angles).
3. The feature is not available at the moment.
4. The requested title or chapter number is out of range.

The picture is distorted

The disc may be damaged. Try another disc.

It is normal for some distortion to appear during the forward or reverse scan.

No forward or reverse scan

Some discs have sections that prohibit rapid scanning or chapter skips. Opening credits or warning information at the start of a movie cannot be skipped due to programming that prohibits the disc from doing so.

Specifications

Compatible discs:	DVD+R/RW, DVD-R/RW, CD-DA, CD-R/RW, MP3, JPEG, and VCD.
Signal system:	NTSC/PAL
Panel size:	9 inch
Picture resolution:	800 x 480 (RGB)
Frequency response:	20 Hz to 20 kHz
Video output:	1 Vp-p/75 Ohm, unbalanced
Audio output:	1.4 Vrms / 10 kOhm
Audio S/N:	80 dB
Dynamic range:	85 dB
Laser:	Semiconductor Laser with 650 nm/795 nm wavelength
Power source:	DC 5V
Power consumption:	10W
Operating temperature:	32° - 108° F
Weight:	1.64 lbs
Dimensions:	9.52 x 1.5 x 6.77 in
Battery Type:	Li Polymer

Need Help?

For customer support regarding your device, please submit a request by emailing **support@dpaudiovideo.zendesk.com**. You will be provided a ticket number regarding your inquiry, which you can refer to when contacting us further.

You may also reach a DP AV customer service representative by calling **1-833-909-2673**. We are available Monday - Friday, 9am - 5pm PST, except major holidays. DP AV strongly urges customers to email their inquiry prior to calling, as this will enable us to better assist you.

Please make sure to note the model number and a description of your inquiry.

Thank you for purchasing a Pinkfong Baby Shark product.

Warranty Information

Limited Warranty

DP AV (the "Company") warrants the product purchased and contained in this package (the "Product") against defects in material or workmanship for 90 Days (Parts & Labor) and 1 Year (Limited). In order for the Company to honor this limited warranty, you must present a valid proof of purchase (i.e. a receipt) of this Product.

This warranty is void if the Company deems, in its discretion, that the Product may have been damaged through modification, improper use, end user negligence, water damage or tampering of the barcode of the Product. This warranty is a limited warranty for repair/replacement of the Product, subject to the conditions set forth herein.

The Company is not liable for consequential, indirect, incidental, special or punitive damages and the Company's total liability hereunder shall not exceed an amount greater than the retail purchase price of the product.

90 Days Parts & Labor

The Company warrants to you as the original retail purchaser of the Product, that should the Product have any defect, under normal conditions, such defect(s) will be repaired or replaced with a new or refurbished part (at the Company's sole discretion) without charge, if the Product is submitted to the Company within a period of ninety (90) days from the date of purchase of the Product. The customer is responsible for transportation cost and insurance charges (if applicable) to the Company. It is the customer's responsibility to retain original packaging or provide like packaging in order to facilitate the warranty process. The Company will incur no liability whatsoever to provide packaging for warranty items. Should the product be damaged due to insufficient packaging, the warranty may be voided. You must receive a return authorization number (RMA#) before sending the unit in for service. This warranty only applies to manufacturer defects, and the Product must be returned to the Company in its original condition.

1 Year Limited Parts

The one (1) year limited parts warranty gives you the option to return the Product to the Company for repair or replacement. The customer will be responsible for labor charges. This warranty does not cover any incidental or indirect costs incurred as a result of a defect in the Product, including any consequential, incidental or indirect damages.

