 




## Item Number: F00019 - DINNING SET

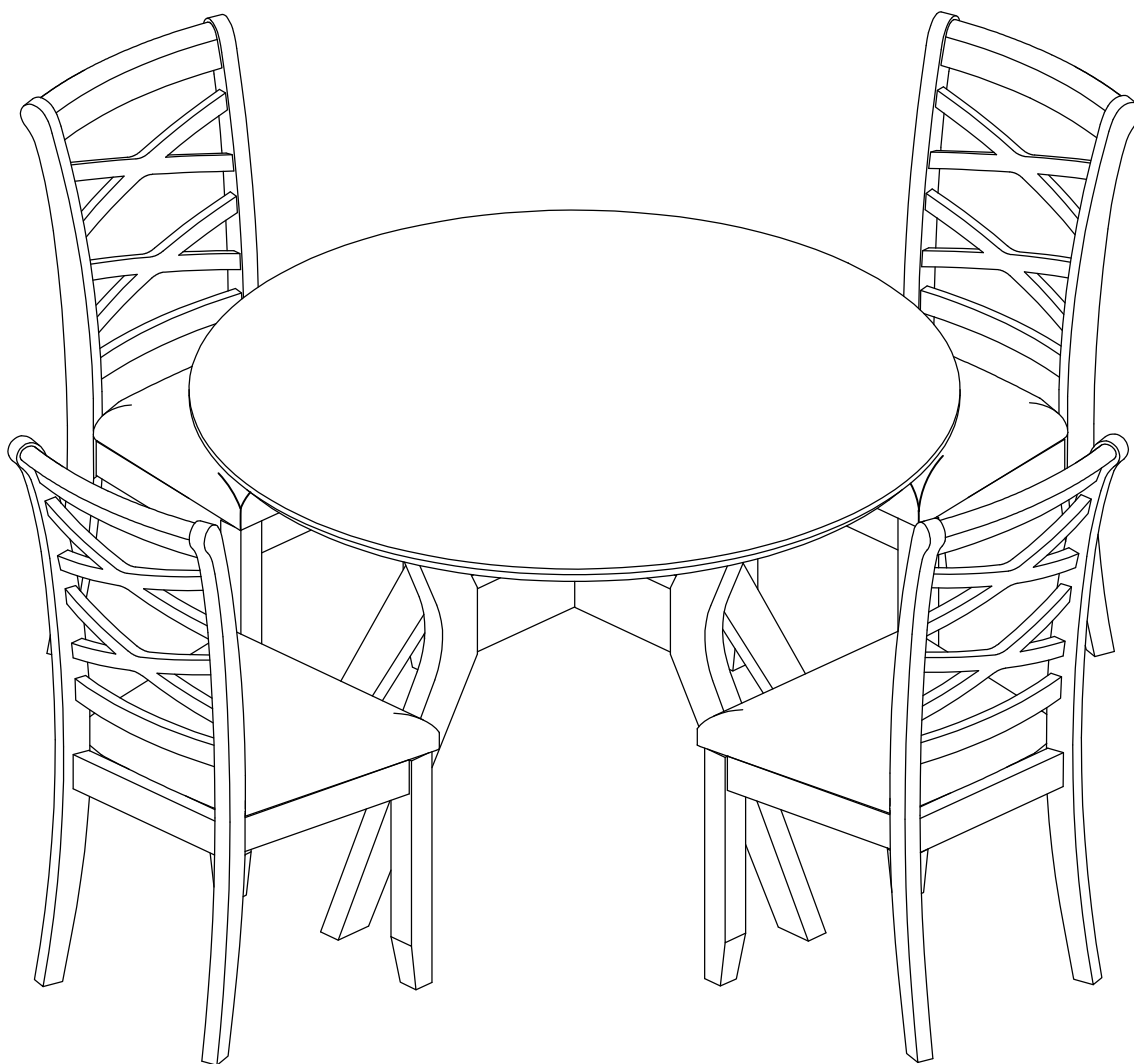



## Item Number: F00019 - DINNING TABLE

Thank you for purchasing this product. Please take time to read and follow the instructions below. Check that you have all parts and hardware before assembly. Parts apparently missing are often found in the packing materials. If you do not have all the parts listed, have your dealer contact us and they will be sent to you immediately.

 
 
 
 


It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.





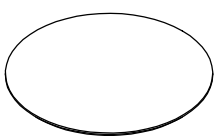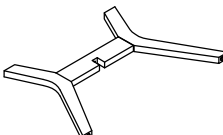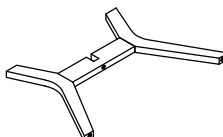


Do not tighten bolts until completely assembled.

### PART LIST

A		TABLE TOP	1PC
B		MOUNTING PLATE	4PCS
C		UPPER LEG	1PC
D		LOWER LEG	1PC

### HARDWARE LIST

 
1		BOLT 5/16"-18x3"	1PC
2		BOLT 5/16"-18x1-1/2"	16PCS
3		SPRING WASHER 5/16"x11/32"x11/16"x1/16"	17PCS
4		FLAT WASHER 5/16"x21/61"x3/4"x5/64"	17PCS
5		ALLEN KEY 1"x2-1/3"	1PC






## Item Number: F00019 - DINNING TABLE


### Step 1/

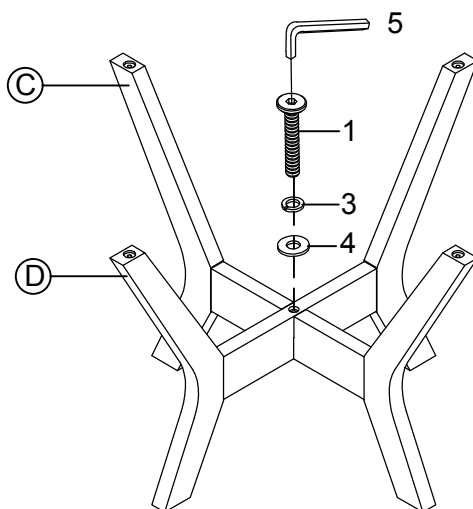

### Step 2/

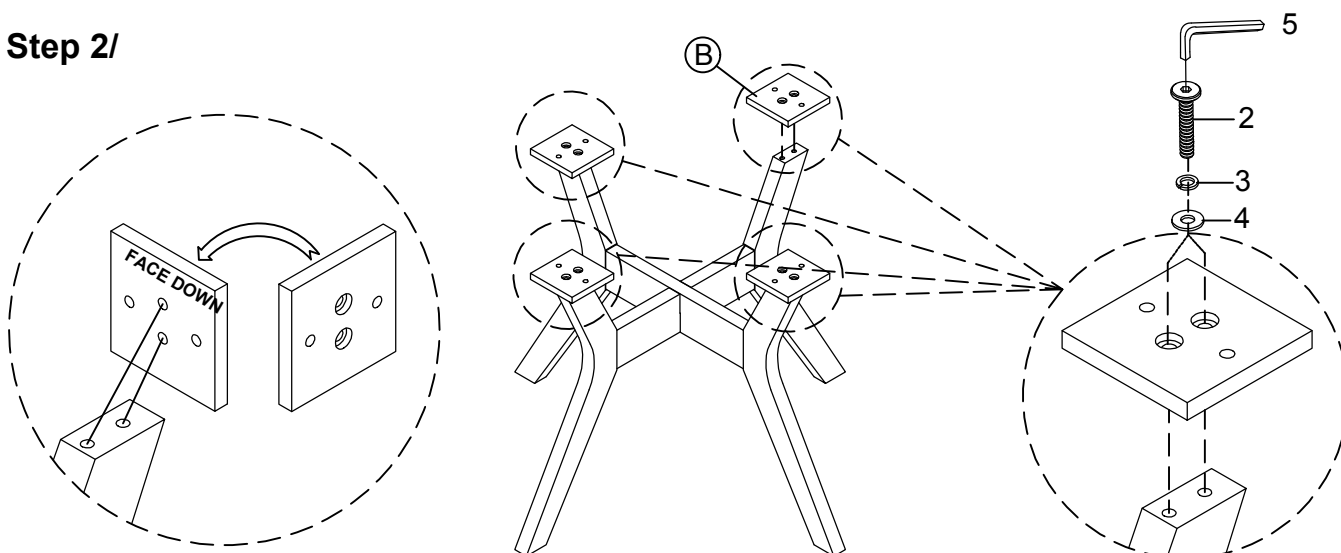 

### Step 3/

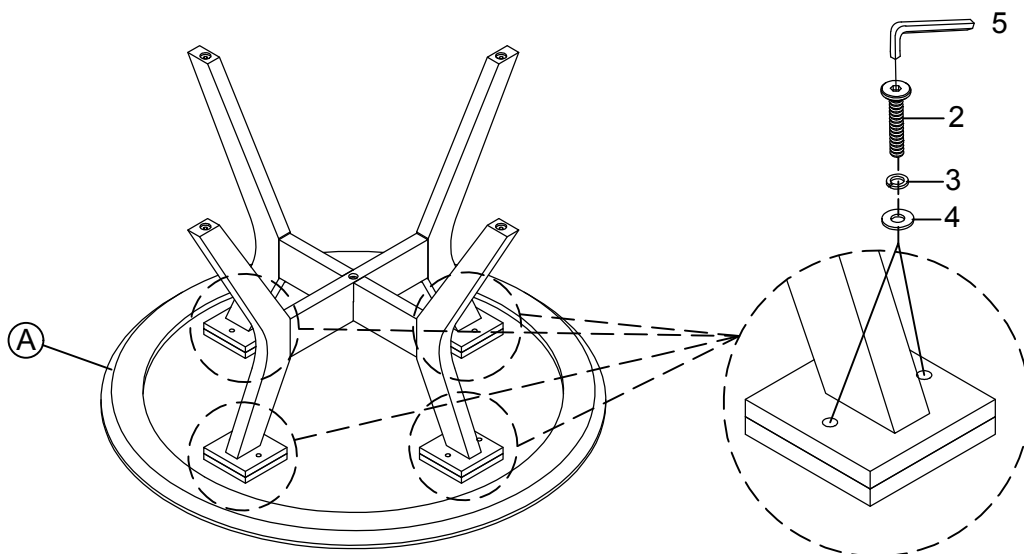 




 

 

 
## Item Number: F00019 - CHAIR

Read instructions carefully prior to assembly.




Thank you for purchasing this quality product. Check carefully for small parts which may come loose during shipment. Remove all components from pack and place top down on soft surface such as carpet or cloth to prevent scratching the finish. Identify and count all parts as specified below.

Note: need to be set on a level surface prior to tightening all the bolts. Once all the bolts and nuts are finger tightened, set chair on level surface to tighten bolts.


### HARDWARE LIST

   No.	Description	Sketch	Size	Q'ty
A	Allen Bolt		5/16"*35mm	6PCS
B	Allen Bolt		5/16"*75mm	8PCS
C	Lock Washer		5/16"	22PCS
D	Flat Washer		5/16"*19mm	22PCS
E	Hex Nut		5/16"*12mm	8PCS
F	Allen Key		4mm	1PCS
G	Straight Allen Key		4mm x 4"L	1PCS
H	Open Wrench		12mm	1PCS

### PART LIST

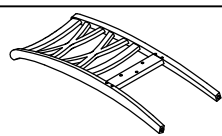No.	Description	Sketch	Q'ty
1	CHAIR BACK		2PCS
2	SEAT CUSHION		2PCS
3	FRONT LEG		4PCS


### Step 1/

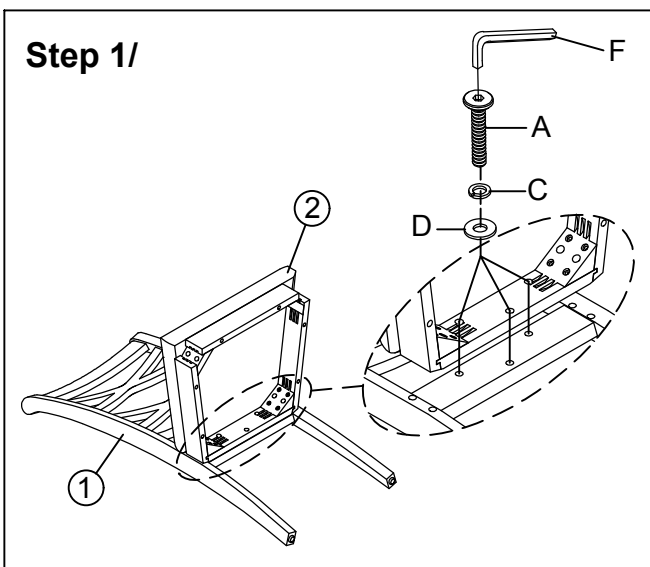 

Step 1: Attach seat frame to chair back by securing the Flat Washer (D), Lock Washer (C) and Allen Bolt (A) onto back rail.

Hand Tight only at this moment

### Step 2/

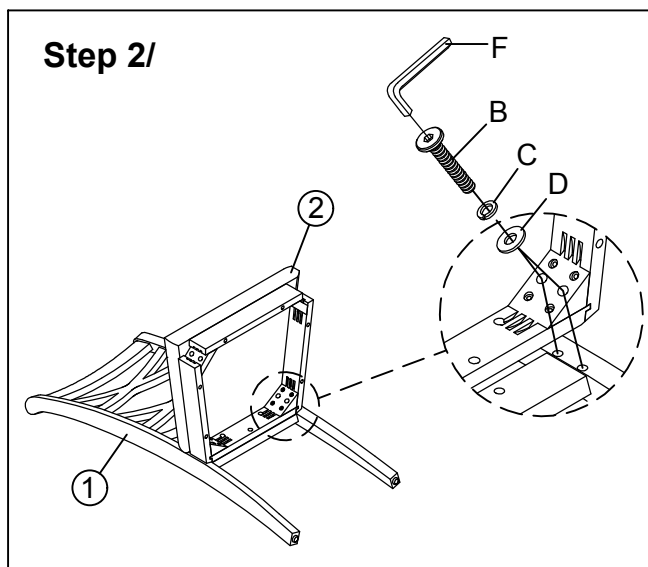 


Step 2: Attach seat frame to chair back by securing the Flat Washer (D), Lock Washer (C) and Allen Bolt (B) onto back rail.

Hand Tight only at this moment




## Item Number: F00019 - CHAIR
 
### Step 3/

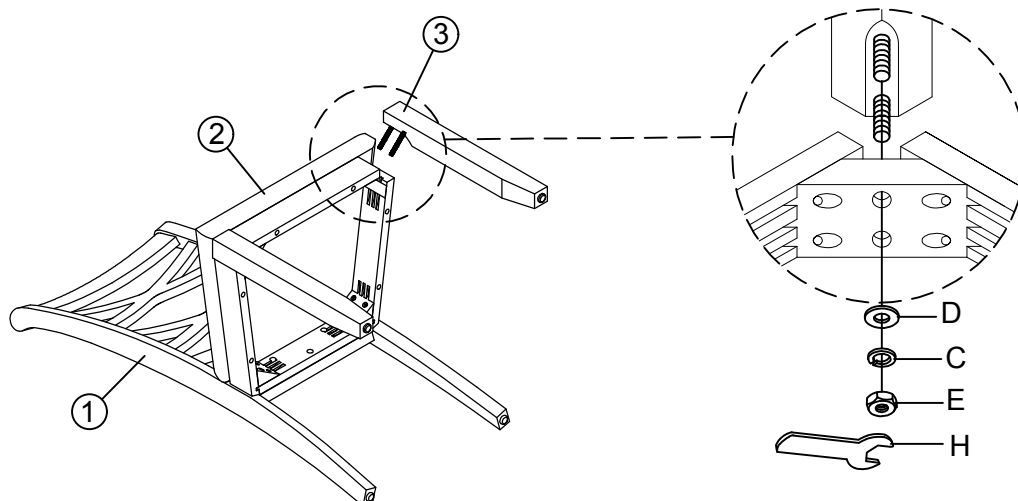

Step 3: Attach the front leg to the corner of the seat frame, tighten the front leg with Flat Washer (D), Lock Washer (C) and Hex Nut (E)

### Step 4/

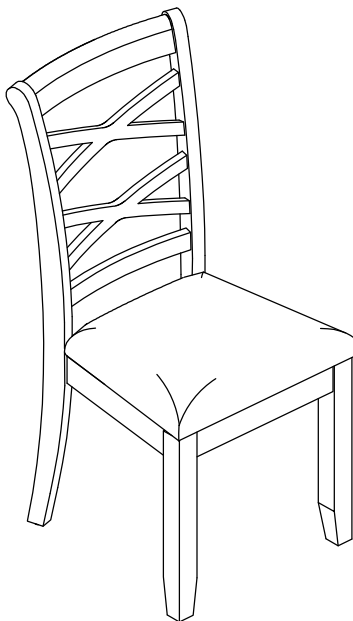 

Step 4: Place Chair on flat surface and adjust legs so that chair is level and does not wobble, Tighten all the bolts with Allen Key (F) provided, Do not to over tighten.