


Smart Desk

Product Refs-KBLT0011/KBLT0012/KBLT0013/KBLT0014

Assembly Instructions

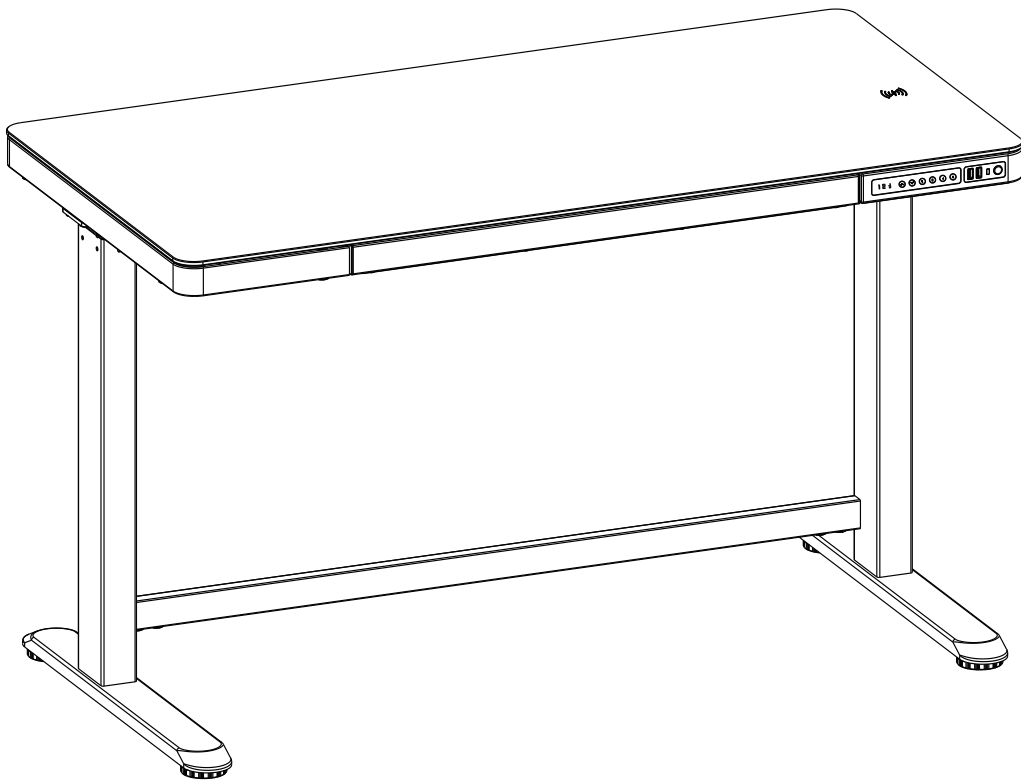

Imported By: Forward Industries, 33401. U.S.A

Safety and Care Advice

1. The maximum weight that can be placed on this product is 110lbs.
2. This product must not be used as a seat.
3. Always use the original AC power adapter and power cable supplied. Otherwise it may cause slow wireless charging. In extreme cases, an incompatible AC power adapter may over heat.

Specifications


Power Supply: AC adapter, 100-240V 50/60Hz

Service Environment: 0-104°F


Wireless Charging: 10W

Main Components


Please check you have all the parts listed below

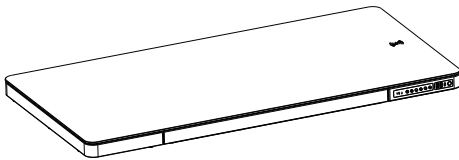


- 1** Desk top Qty 1
(KBLT0011/KBLT0012: 47.2*23.6*0.48")
(KBLT0013/KBLT0014: 47.2*23.6*0.24")

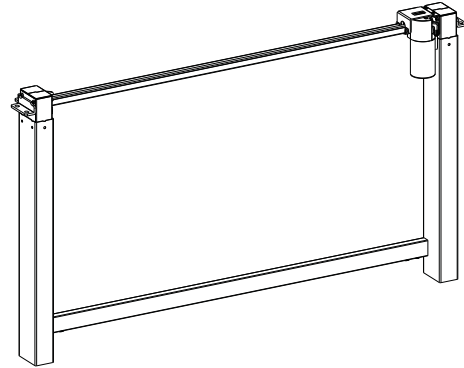

- 2** Underframe Qty 1
(45.2*26.7*3.2")

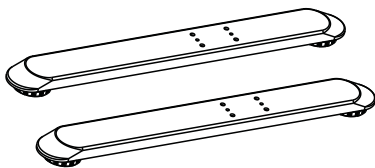

- 3** Feet Qty 2
(23.2*2.7")

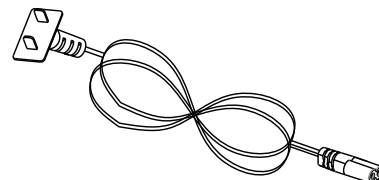


- 4** Power Adaptor Qty 1
(122")

Fixings, Fittings And Tools

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A

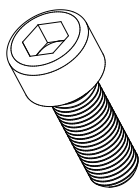


M6 Screw Qty 8 (M6*0.63")

B

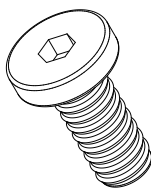


M8 Screw Qty 8 (M8*0.79")

C

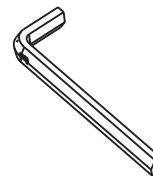

Allen Key 5*5 Qty 1
(0.2*0.2*3.15")

 D



3M Cable Clip Qty 2
(0.69*2.56")

If you have questions regarding the operation of your purchase, or in the unlikely event you need to return the unit because it is faulty or is no longer wanted, please contact our product returns department at customerservice@forwardindustries.com, or 561-465-0030, Option 0.



Address: Forward Industries, 105 South Narcissus Avenue Suite 412, West Palm Beach, FL 33401

Assembly Steps

STEP 1

Assemble underframe



2 to top **1** using fixings **B**.

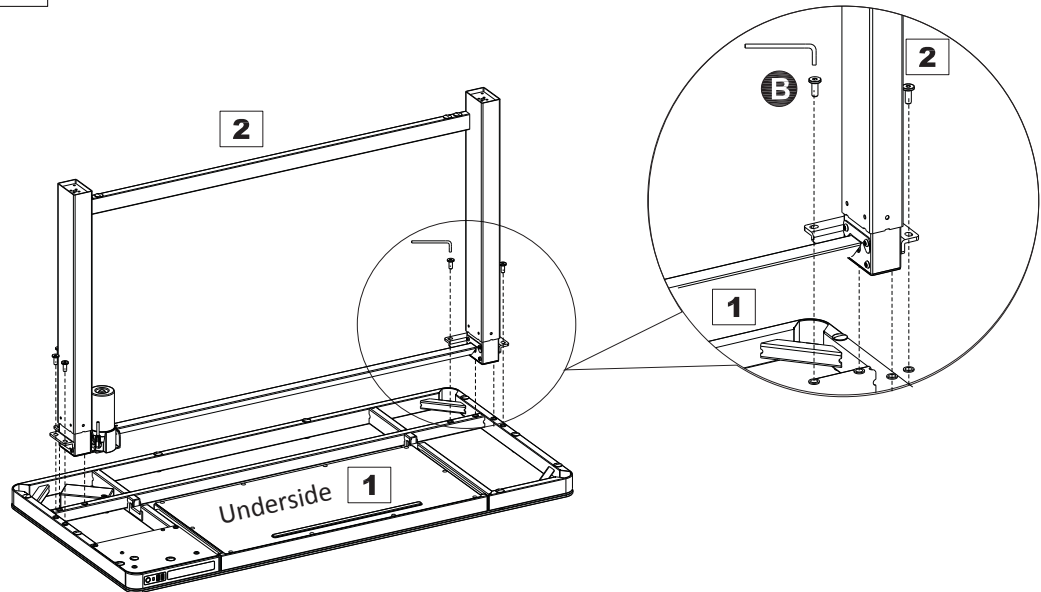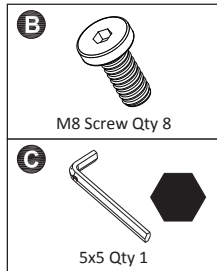

Shown upside down


STEP 2

Assemble feet **3** to legs **2** using fixings **A**.
Note: Ensure the longer sections of the feet are located at the front as shown.

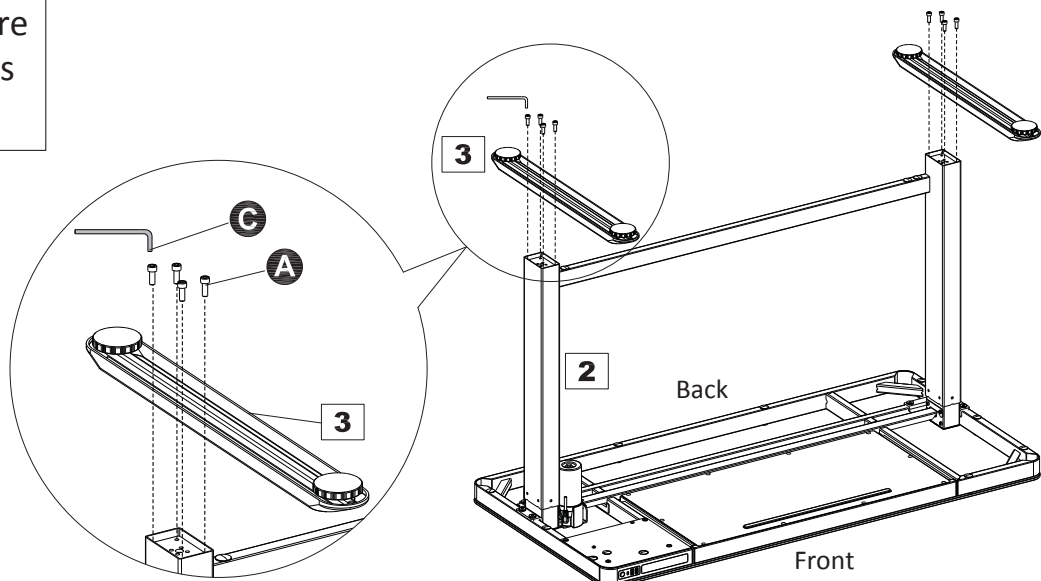
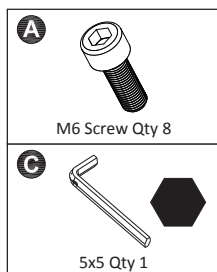


STEP 3

Connect the Cables

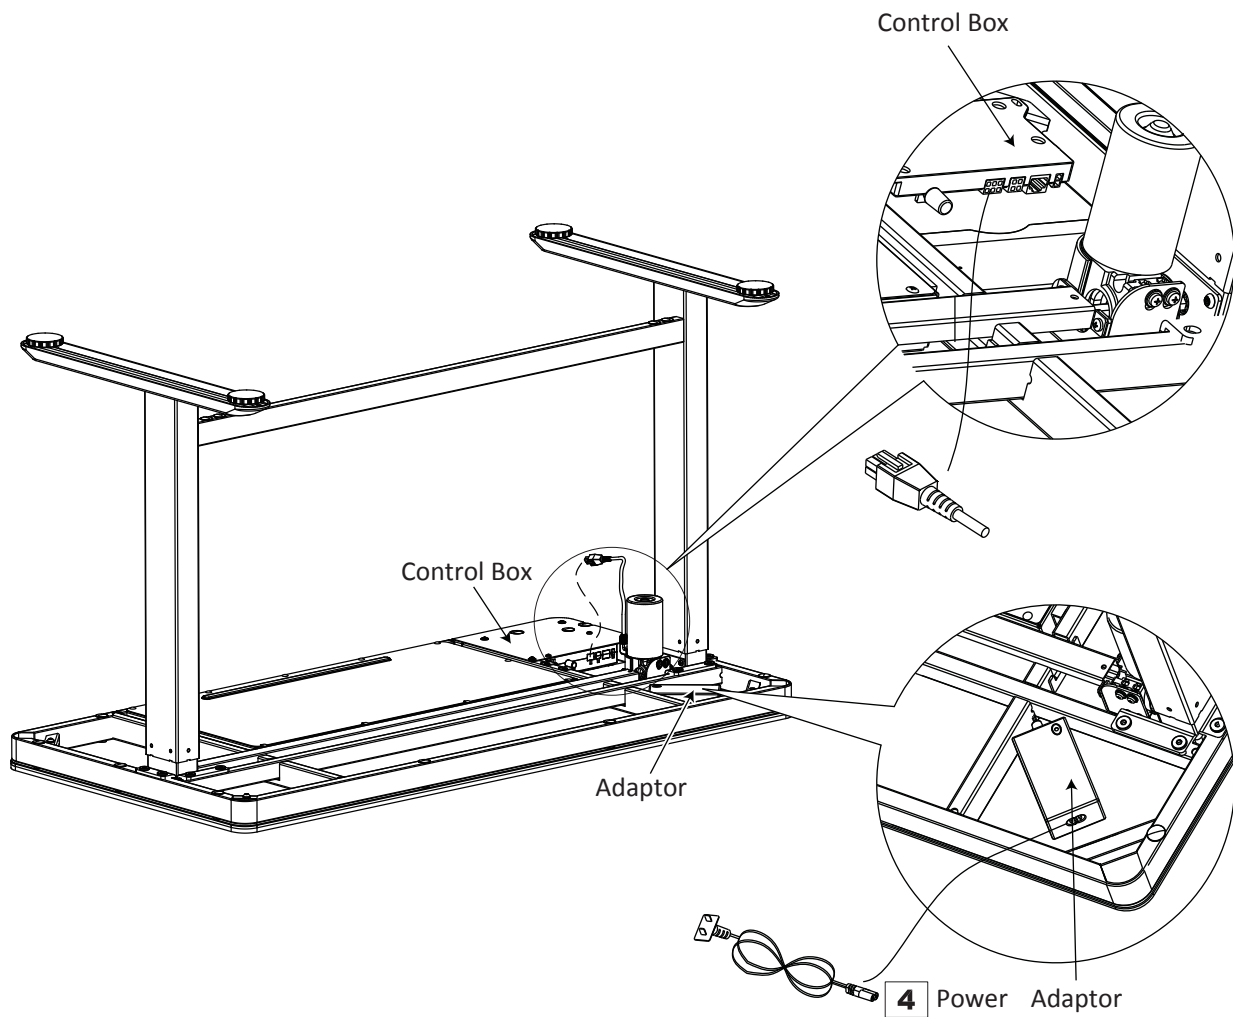


Route cables through cable tidy clip **D**.

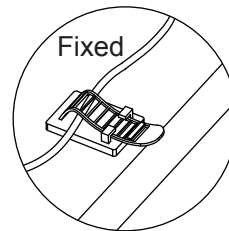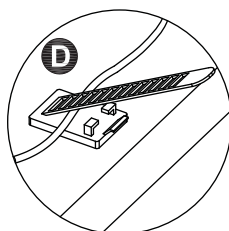


STEP 4

With help, carefully turn the desk over into its final location and connect to a power source.

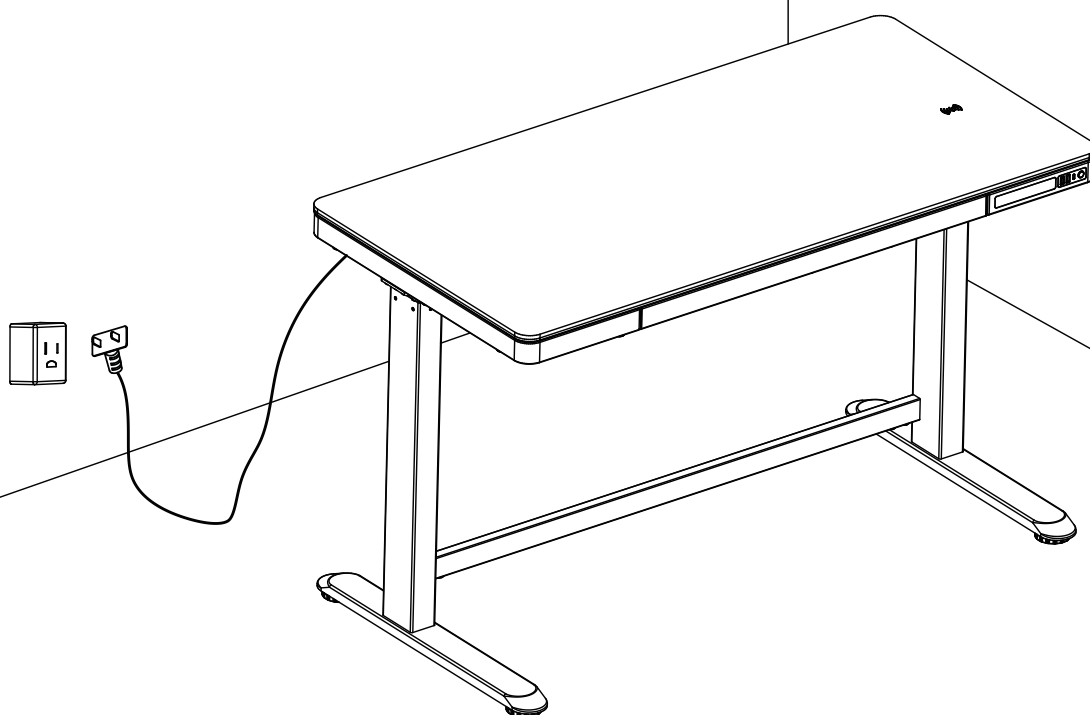

Height Adjustment/Controls

Key button

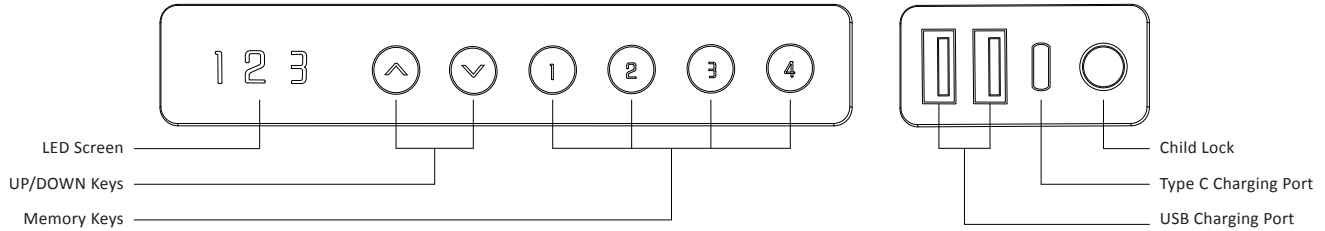

Up and DOWN Function

To raise the desk height, press and hold the key for 1.2 seconds and release, it will rise automatically. Press it again until the desired height is reached. The screen will show "top" when the desktop reaches its highest point.

To lower the desk height, press and hold the key for 1.2 seconds and release, it will go down automatically. Press it again until the desired height is reached. The screen will show "bot" when the desktop reaches its lowest point.

Short press the key or key, to make small adjustments to the height.

Programme Preset Height (Standing/Seated)

Standing:

Use the or keys to set the desired standing position height.

Press memory keys and hold for 3 seconds.

The standing position height will now be pre-set.

To select the preset standing position height in the future, press memory keys and release. The desk top will adjust to the pre-set height.

Seated:

Use the or keys to set the desired seating position height.

Press memory keys and hold for 3 seconds.

The seating position height will now be pre-set.

To select the preset seated position height in the future, press memory keys and release. The desk top will adjust to the pre-set height.

USB & Type C Charging

The desk has two USB and one type-C ports. They can supply power to other electronic devices. Each port provides output power 18W. While the desktop is moving, there will be no output power.

 
Child Lock

Press "Lock" keys to achieve the child lock function, so as to avoid accidentally touch and guarantee the safety of children; The child lock button is switchable, screen will show "Loc" when the desk is locked.

Anti-Collision

Press the "up" and "down" keys simultaneously to change sensitivity level. When the screen show "A-0", it means the anti-collision is off; "A-1" means anti-collision sensitivity is in level 1; "A-2" means anti-collision sensitivity is in level 2; "A-3" means anti-collision sensitivity is in level 3, Level 3 is the most sensitive.

Wireless Charging Function



If you have a wireless charging compatible device, please put the phone on the wireless charging indicator and check if the phone is successfully connected to the charging function. If not, move the mobile phone near the logo until the connection is successful.

Some phone cases may inhibit the wireless charging function or its efficiency. It may be necessary to remove the phone case if difficulties are experienced.

Wireless charging will only work with wireless charging compatible mobile devices.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Troubleshooting

a.Reset: Press the 3 and 4 keys simultaneously, the RST reset indication will appear. Continue to press the “▼” down keys until the lifting table lowers to the lowest position and rebounds to rise to a stop. The display shows the lowest height “bot”, release “▼” down keys, the reset is over and the table can be used normally.

b.when the table doesn't work and LED shows" E01" or "E02", pls retry 18mins later.

c.If the “▼” button doesn't work, pls check the cable connection and then cut off the power for at least 10seconds. Reconnect the power and press “▼” keys to start and reset process when it shows the “RST”

d.If the above doesn't resolve the problem, please contact our after sales team.

The following tips will help you detected and eliminate the common faults and errors. If the fault you met is not listed below, please contact our after sales team. Only the manufacturer can investigate or resolve faults or errors not listed below.

Fault phenomenon	Method	Fault phenomenon	Method
No response while long pressing down arrow after connected with a power supply	1.Check if all the cables be connected well	Downward sliding	1.Check if overloaded, max loading: 110lbs;
	2.Contact your supplier or dealer		2.Contact your supplier or dealer
No response while pressing up arrow/ down arrow after connected with a power supply	1.Check if all the cables be connected well	Frequently Reposition	1.Check if overloaded, max loading: 110lbs;
	2.Contact your supplier or dealer		2.Contact your supplier or dealer
Rising in a low speed	1.Check if overloaded, max loading: 110lbs;	Overwork (Duty cycle:Max 2min on/18min OFF)	1.Restart after suspend for 18mins while connecting with power;
	2.Contact your supplier or dealer		2.Contact your supplier or dealer;
The motor not move as instructed	1. Contact your supplier or dealer	Not enough up&down height	1. Press "M"and "3" together for 3 seconds ormore, after hearing continuous beeping for twice,it will restore factory settings
Go down but not go up	1.Reposition		2.Contact your supplier or dealer
	2.Contact your supplier or dealer		

Important Information

1. Power supply: AC100V-240V, 50/60Hz

2. Service Environment: 0-104°F

3. Unplug the power plug before cleaning, wipe the dust on surface with damp cloth when cleaning. Be careful not to let water drops into the internal parts, or loose the connector.

4. Check carefully to ensure correct and complete assembly before using.

5. Be familiar with all functions and program settings of the product before first use.

6. Don't allow children to play near the desk as their behavior is unpredictable. The manufacturer is not responsible for loss, injury, or damage due to those improper action.

7. The slight noise caused by the internal mechanism or brake system of the structure, will not have any effect on the use of the equipment.

8. Do not use corrosive or abrasive materials are near the equipment. Please ensure that the cleaner used will not pollute the environment.

9. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, only after they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance.
10. Cleaning and user maintenance should not be attempted by children without supervision.
11. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
12. Please make sure there is no hazard sources in your operating environment. e.g., do not litter the tools around. Always be careful to treat the packaging materials in order to avoid any possible danger, e.g. plastic bag may lead to choking hazard to children.
13. We recommend you keep the original package of the equipment if necessary in case of the future use in transportation.

After Sales Support / Product Returns

If you have questions regarding the operation of your purchase, or in the unlikely event you need to return the unit because it is faulty or is no longer wanted, please contact our product returns department at customerservice@forwardindustries.com, or 561-465-0030, Option 0.

Address: Forward Industries, 105 South Narcissus Avenue Suite 412, West Palm Beach, FL 33401

Disposal



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Certification



RoHS

BIFMA