
John Deere Z515E ZTrak[™] Parts and Maintenance Information

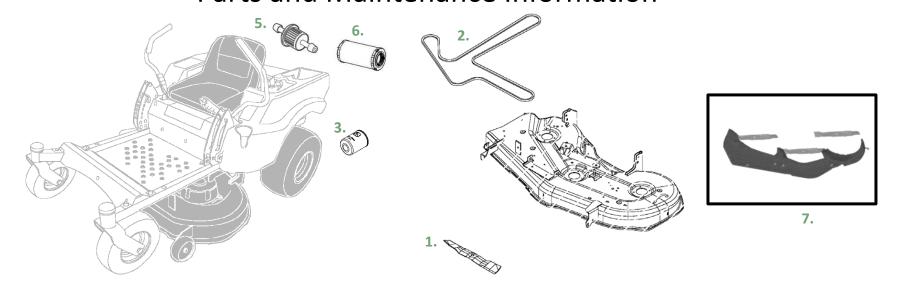

Кеу	Description	Part Number	Lowes Item #
1.	54 inch Mower Blade	GY20685	698348
2.	54 inch Mower Deck Belt	GX25998	712122
3.	Oil Filter	GY20577	228877
4.	Oil	TY22029	48763
5.	Fuel Filter	GY20709	228878
6.	Air Filter	GY21057	291810
7.	Mulch Kit	BUC10706	2636757

John Deere Z515 ZTrak[™] Parts and Maintenance Information

• Service Intervals

After 8 Hours	Every 100 Hours or Annually (Whichever Comes First)	
Check mower deck level	Replace air filter element(s)	
Every 50 hours or Annually (Whichever Comes First)	Replace fuel filter	
Change engine oil	Check mower belt	
Change engine oil filter	Sharpen / replace mower blades	
Lubricate mower deck spindles	Clean underside of deck	
Lubricate mower idler arm	Check tire pressure	
Check mower deck level	Clean engine cooling fins	
Clean air intake screens	Every 200 Hours	
	Check / adjust engine valve clearance. See your John Deere dealer for this service.	

For complete parts information for ZTrak[™] Mowers: Visit your local John Deere Dealer or <u>www.Deere.com</u> *Refer to Operators Manual for a complete listing of service intervals.