

Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance



- Not for commercial use. For residential use only.



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Stains may be removed with mild soap solution and damp cloth.



- Children should not climb or jump on the furniture.

 


- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in carton for hardware packs and legs.

Sets often ship in multiple boxes and may arrive a day or two apart.


Console Table N760P251947

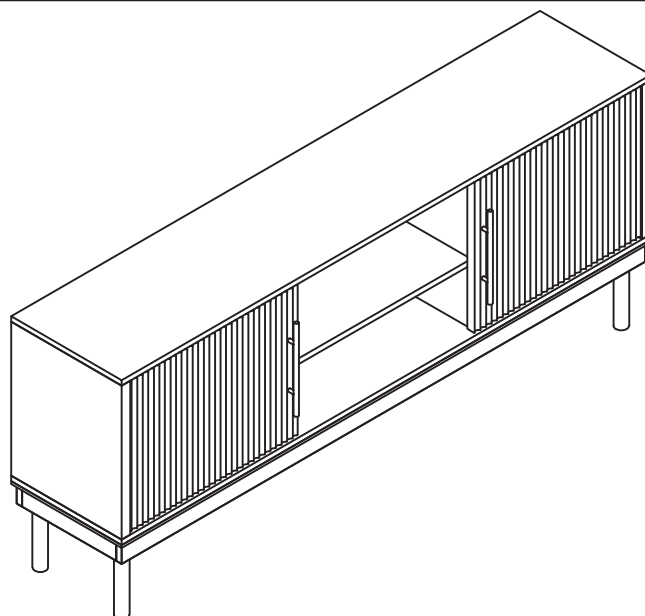

Parts List


Label	Picture	Description	QTY
A		Top board	1
B		Side panel	2
C		Middle Board	2
D		Standing board between the two sides	2
E		Bottom frame	1
F		Adjustable Panel 1	2
G		Adjustable Panel 2	2
H		Adjustable Panel 3	1
I		Back board	1
K		Righr Door Panel	1
L		Left Door Panel	1
M		Legs	4
N		Support Leg	1


 
Restraint Device Hardware

Label	Picture	Description	QTY
1		Bolts (M6x50MM)	10
2		Bolts (M6x30MM)	16
3		Spring Washer (Ø1/4"x10MM)	26
4		Flat Washer(Ø1/4"x13MM)	26
5		Wood dowel (Ø8*30MM)	20
6		Allen key (60*22*4MM)	1
7		Handle	2
8		Bolts (5/32"x25MM)	4
9		Wood screws(Ø3*15MM)	20
10		ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)	1

Assembly Preparation

   Before Beginning Assembly:

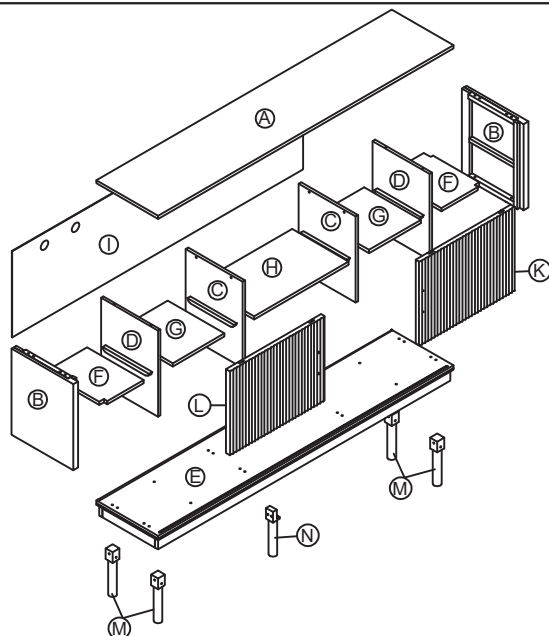

	① x 10
	② x 16
	③ x 26
	④ x 26
	⑤ x 20
	⑥ x 1
	⑦ x 2
	⑧ x 4
	⑨ x 20



- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-



 
- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


Assembly Steps


Overview

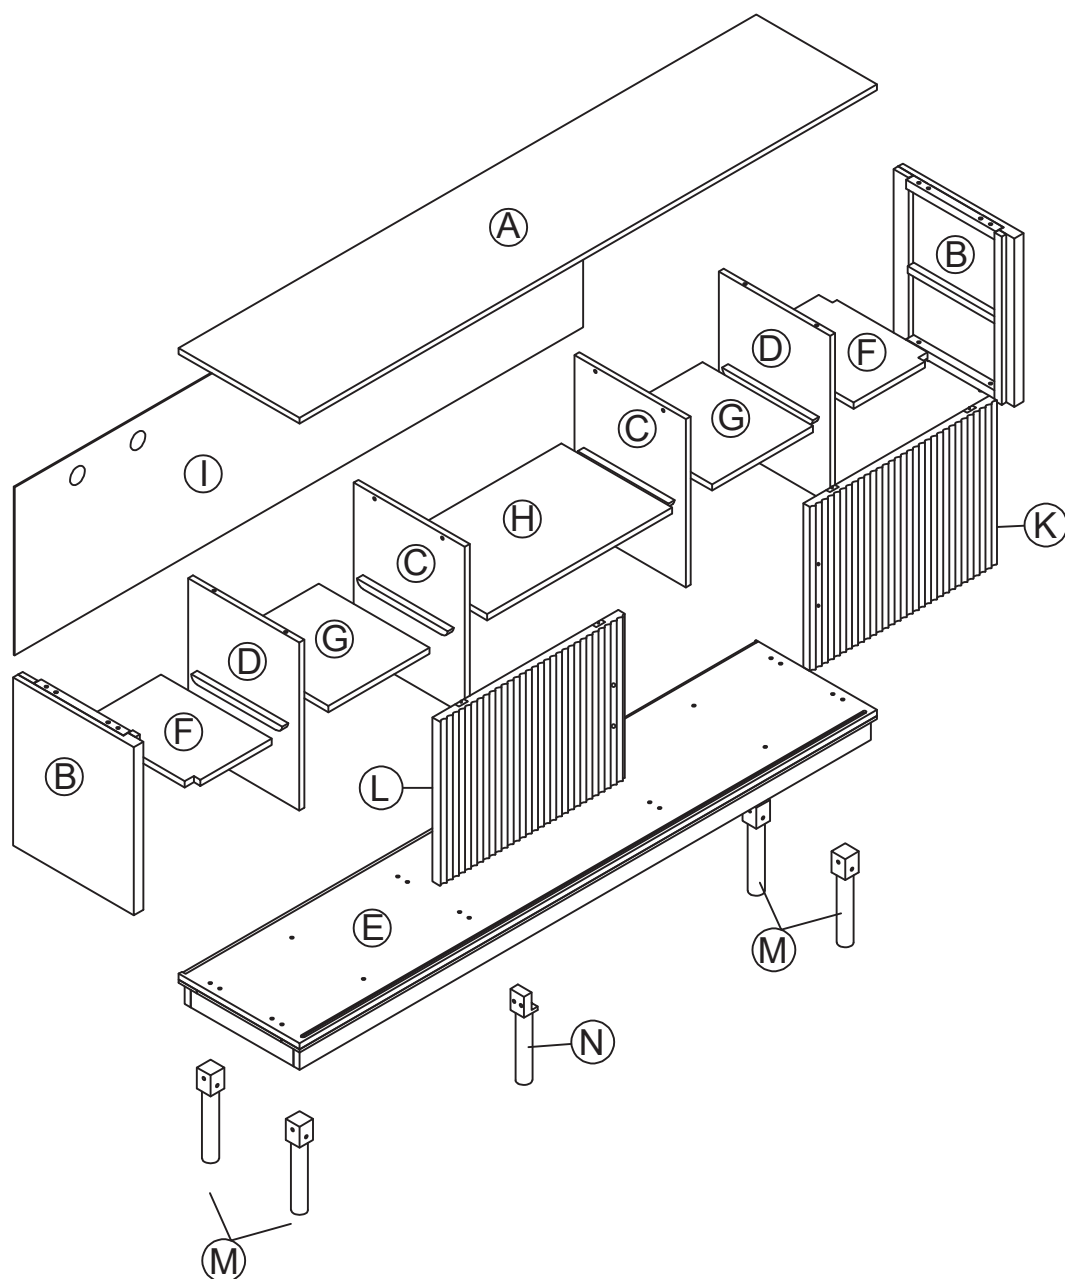

This TV STAND has multiple parts and may require up to 60 minutes to assemble. To give you an overview of the Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

 
STEP: 1


	② x 4
	③ x 4
	④ x 4
	⑤ x 4
	⑥ x 1

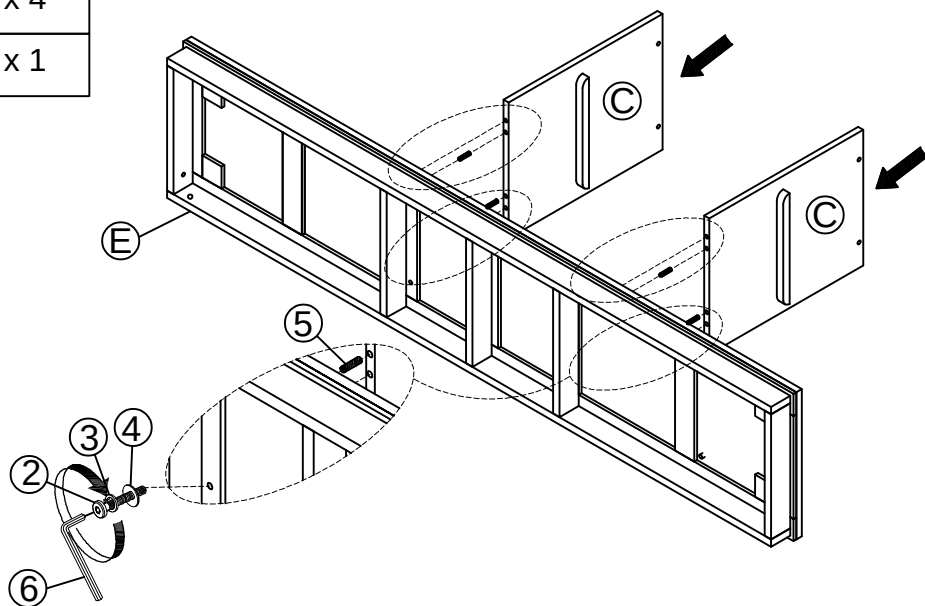 

Attach the Middle Board (C) to the Bottom frame (E) ,using the Wood dowel (5) bolts (2), spring washers (3), flat washers (4),Allen key (6). **Do not fully tighten Bolts at this time.**

 
STEP: 2

	② x 4
	③ x 4
	④ x 4
	⑤ x 4
	⑥ x 1

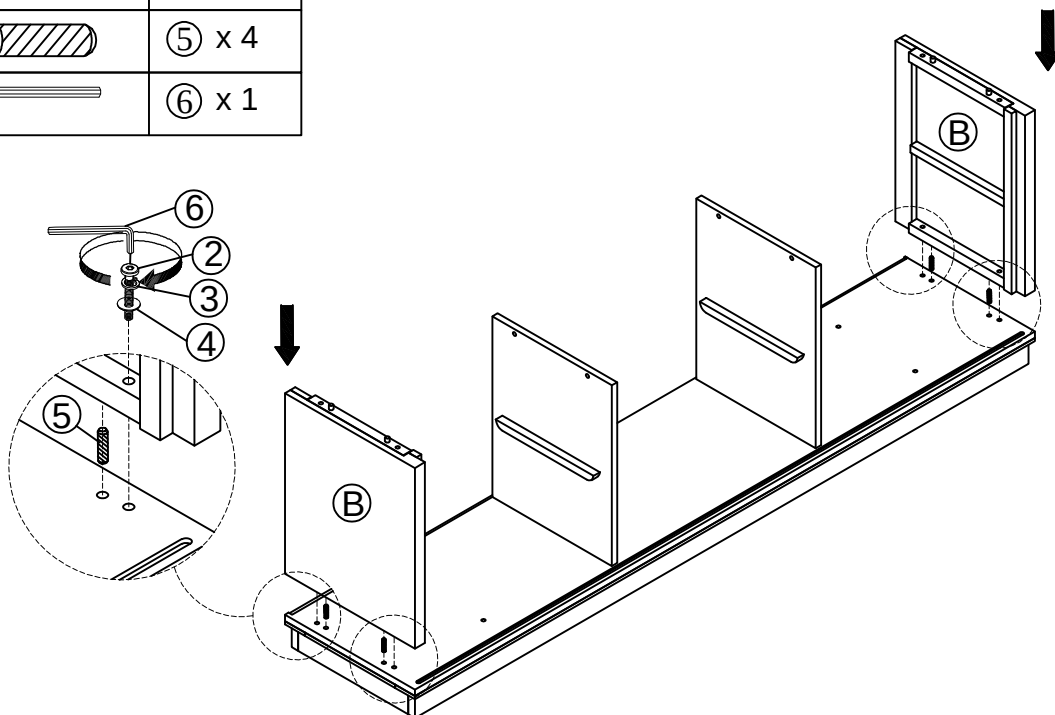 


Assemble the Side panel (B), into the part in step (1)using the Wood dowel (5) bolts (2), spring washers (3), flat washers (4),Allen key (6). **Do not fully tighten Bolts at this time.**

 STEP: 3



⑤ x 4

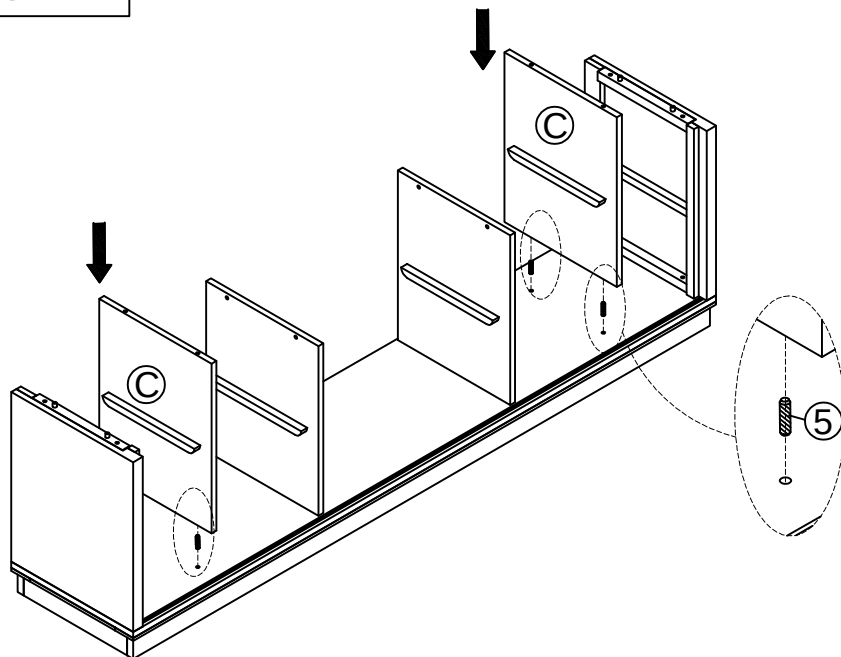 

Assemble the Side panel (B), into the part in step (2) using the Wood dowel (5)

STEP: 4



 
② x 8



③ x 8




④ x 8



⑤ x 8




 
⑥ x 1

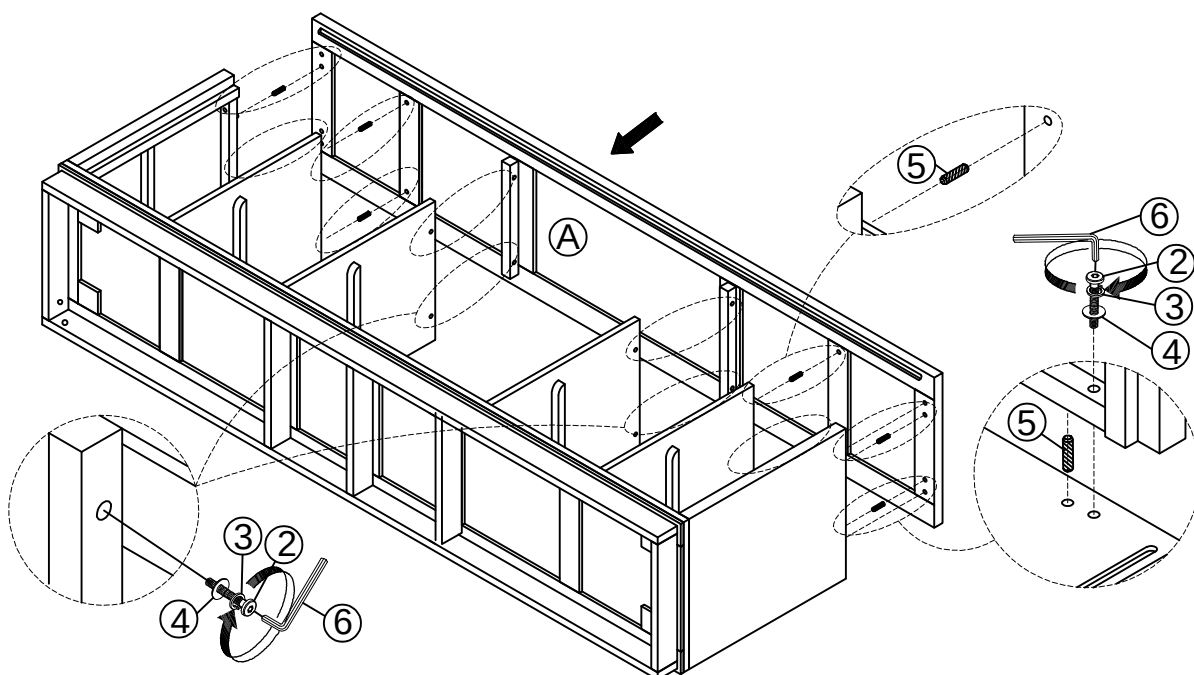

Attach the top frame (A) and the part in step (3) ,using the Wood dowel (5) bolts (2), spring washers (3), flat washers (5),Allen key (6). **Do not fully tighten Bolts at this time.**

 STEP: 5


	① x 10
	③ x 8
	④ x 8
	⑥ x 1

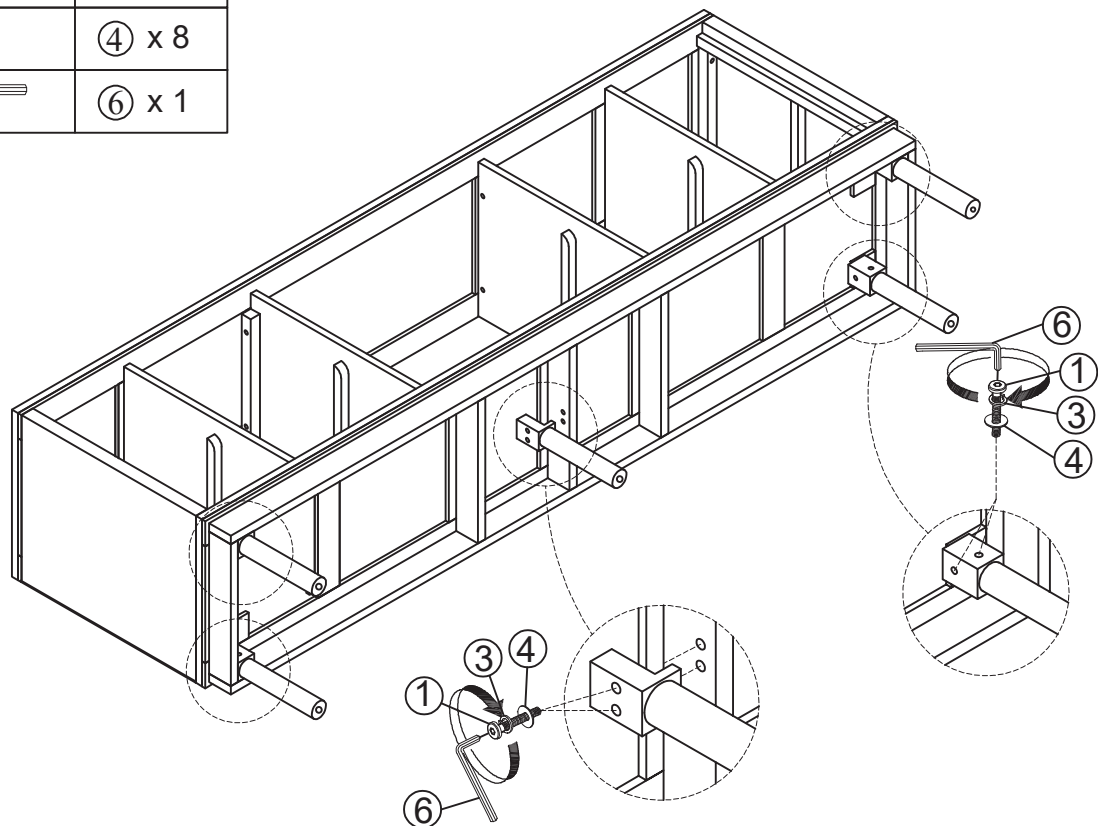 

Attach the Legs (M) and Support leg (N), using the bolt (1), spring washer (3), flat washer (5), Allen Key (6), rotate Legs (M) so that the drill hole coincides with the Screw in dowels on the frame. **Do not fully tighten Bolts at this time.**


STEP: 6

	⑨ x 20
---	--------

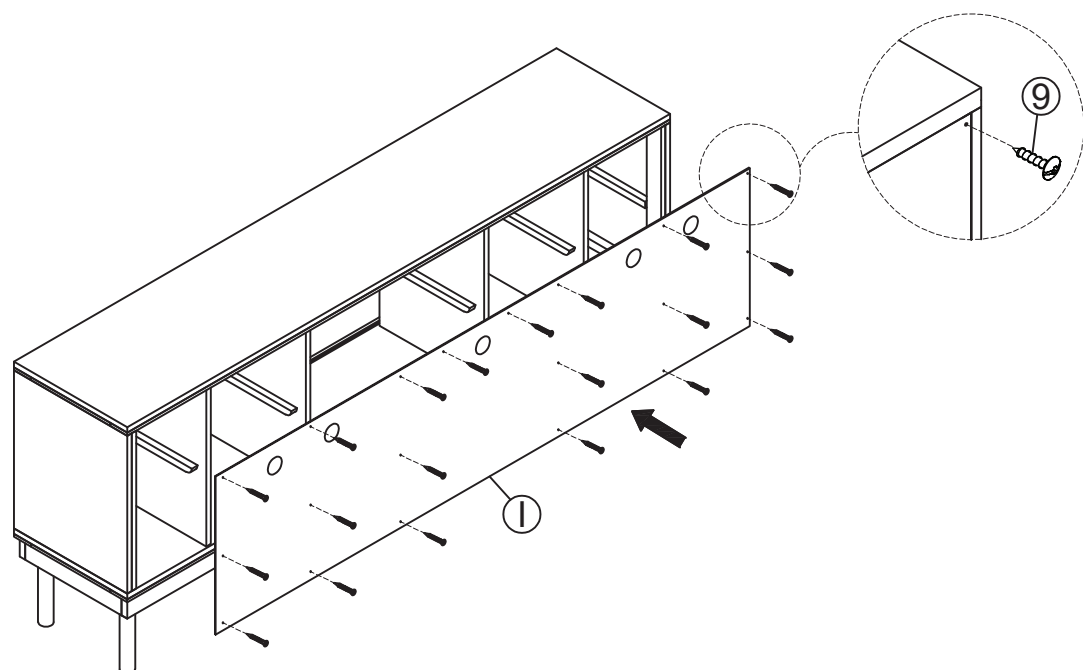 

Assemble the Back board (I), into the part in step (5) using the Wood screws (9). **Do not fully tighten Bolts at this time.**


 
STEP: 7

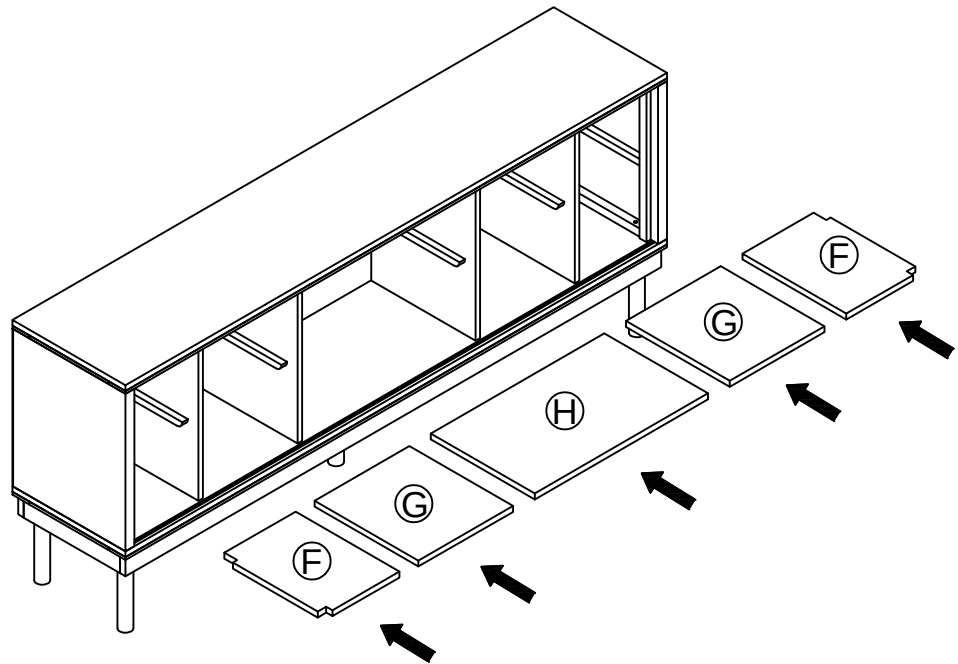

Attach the Adjustable Panel 1 (F), Adjustable Panel 2 (G), Adjustable Panel 3 (H), into the part in step (6)

STEP: 8


	⑦ x 2
	⑧ x 4

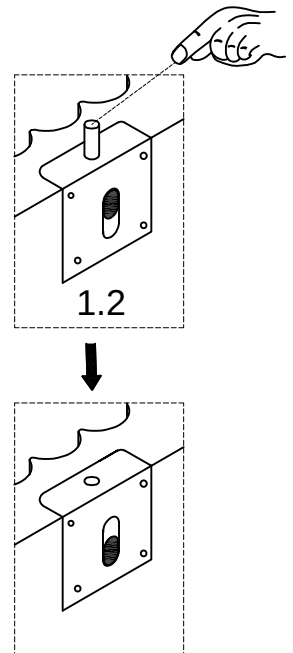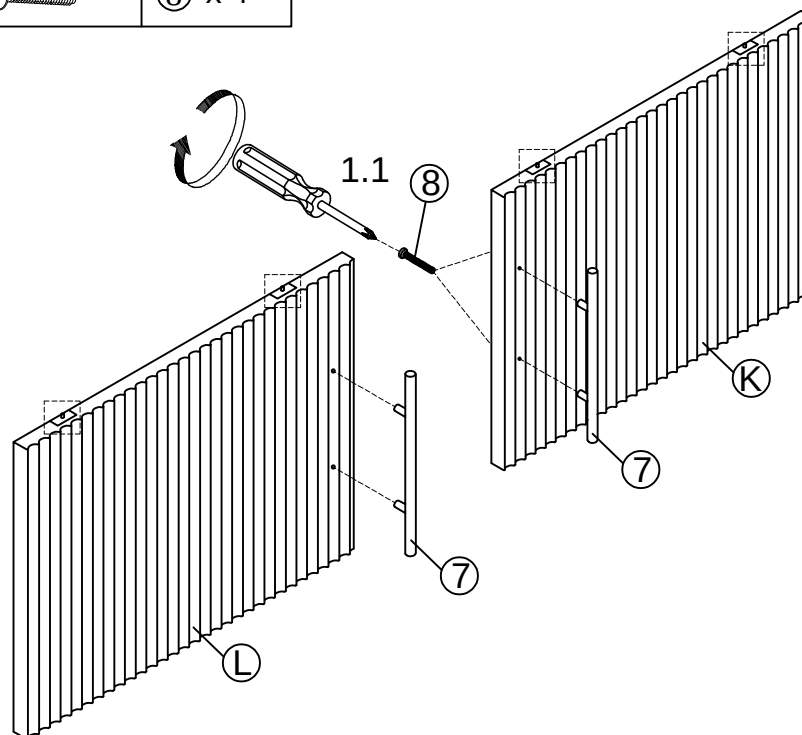  

1.1 Attach the Handle (7) into the Right Door Panel (K), using the bolts (8). Repeat the same procedure for the Left Door Panel (L)

1.2 Press the switch on the door so that the plastic button drops inward

 STEP: 9

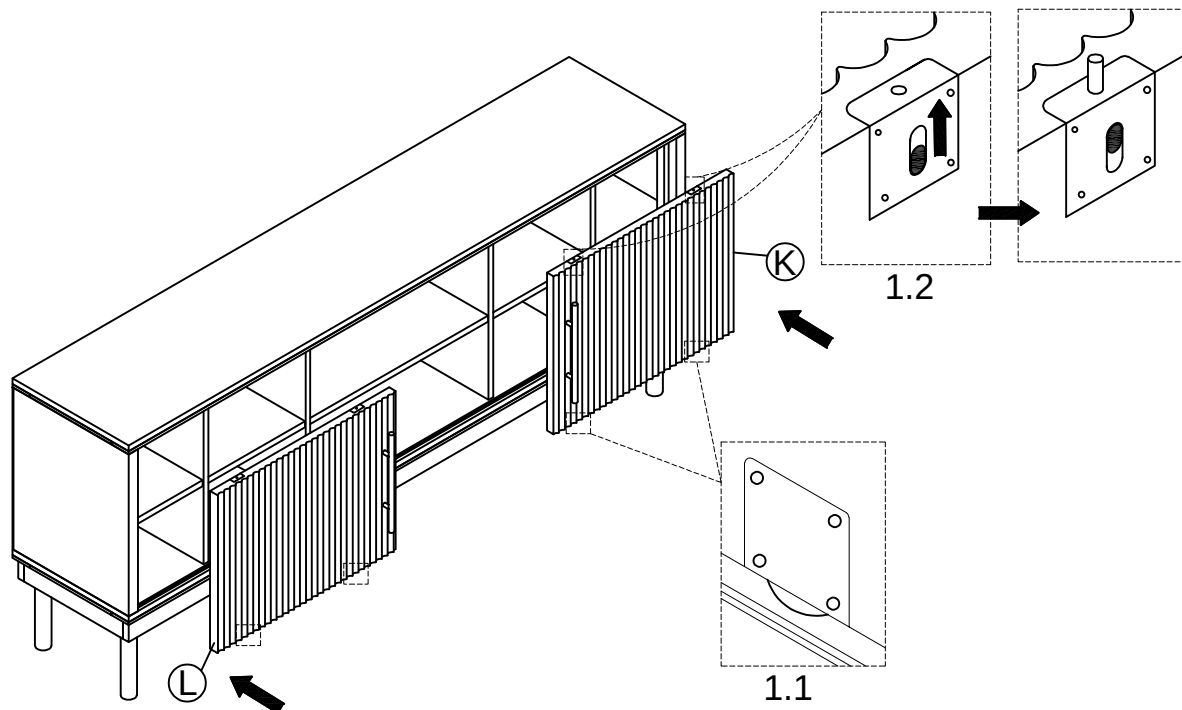


1.1 Place the castor under the door (K) into the groove on the Lower Frame (E)

1.2 Toggle the switch so that the plastic button pops into the groove of the Top board (A)

Repeat the same procedure for the Left Door Panel (L)

 STEP: 10

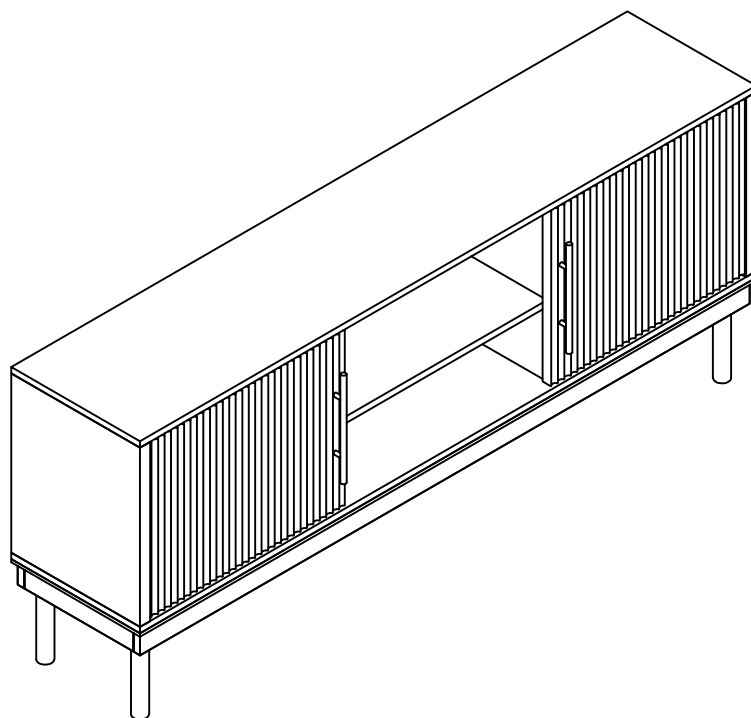

Your Console Table is ready for use