

<b>Product Name:</b>	Set of 5 Holiday Lights Stakes with Remote
<b>SKU #:</b>	WHHD1418, WHH1419, WHHD1420

Thank you for purchasing this LuxenHöme product. This product has been manufactured with the highest standards of safety and quality.

**PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.**

Unpack all parts from inside the carton to ensure there are no missing or damaged parts. If any parts are missing or damaged, do not attempt to assemble or use the product.

Your outdoor set of 5 decorative lights with stakes include a remote so it is easy to control the lighting functions. The light string also has a switch for manually changing the lights.

 


### 21 Key Remote Control

The physical buttons on the USB controller can control the basic 21 functions of your 5-piece LED lights.

Three main areas:

Area one: ON / OFF / Auto



Area two: Four functions in Blue area



Area three: Six functions & Eight single-color modes in Pink area



#### Blue Area:

- Jump Function – Press it and colors will recycle one by one in Jump Mode.
- Fade Function – Press it and colors will recycle one by one in Fade Mode.
- Flash White Function – Press it and colors will recycle one by one with Flash White Mode.
- Chase Function – Press it and colors will recycle one by one in Chase Mode.

#### Pink Area:

- Steady Function – Press it, then press Single color or Multi-Color button, and the selected color mode will be in Steady Function.
- Fade Function – Press it, then press Single color or Multi-Color button, and the selected color mode will be in Fade Function.



## Instruction Manual

Please save these instructions.

<b>Product Name:</b>	Set of 5 Holiday Lights Stakes with Remote
<b>SKU #:</b>	WHHD1418, WHH1419, WHHD1420

- Flash White Function – Press it, then press Single color or Multi-Color button, and the selected color mode will be in Flash White Function.
- Flash Out Function – Press it, then press Single color or Multi-Color button, and the selected color mode will be in Flash Out Function.
- Chase Function – Press it, then press Single color or Multi-Color button, and the selected color mode will be in Chase Function.
- Wave Function – Press it, then press Single color or Multi-Color button, and the selected color mode will be in Wave Function.

### Gray Area:

- Auto Function – Press it and seven single color code modes will recycle the seven functions randomly (Jump, Chase, Steady, Fade, Flash White, Flash Out, Wave).

### Notes before use:

- When setting up the LED lights, make sure there are not broken pieces, or frayed or broken power cord.

### Remote Battery:

- CR2032 Lithium Battery 3V



## **WARNING:**

Do not dispose of batteries in the regular trash, municipal waste stream or by fire as batteries may leak or explode.

Do not open, short circuit, or mutilate batteries as injury may occur. Preserve our environment by recycling batteries.