
Item Number: 6513853

WARNING (To reduce the risk of fire, electric shock, or personal injury):

- 1. We suggest installation by a licensed electrician.
- 2. Please read the instruction carefully and save it as you may need it at a later time.
- 3. Before you start, **NEVER** attempt any work without shutting off the electricity until the work is done.
 - **»** Go to the main fuse, or circuit breaker, box in your home. Place the main power switch in the "**OFF**" position.
 - » Place the wall switch in the "OFF" position.
- 4. Mounting surface should be clean, dry, flat, strong enough and 1/4" larger than the canopy on all sides. Any gaps between the mounting surface and canopy exceeding 3/16" should be corrected as required.
- 5. Make sure that the ceiling or wall can stand the weight of the lamp before installation.
- 6. Make sure the voltage you are using is 120V. The maximum wattage is Type A, Max 40W per bulb.
- 7. Keep the lamp away from acidic and alkaline substances in case of damaging the surface of the lamp.
- 8. When replacing bulbs, you should turn off or unplug the lamp and you must wait until it is cool as bulbs get hot quickly.
- 9. The safety instructions appearing in this manual are not meant to cover all possible conditions that may occur. It must be understood that common sense, caution and care must be used with any electrical products.

IMAGE FOR FINISHED PRODUCT:

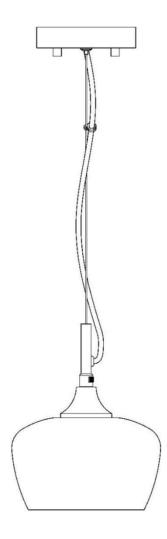

ORDERING PARTS

Keep this sheet for future reference in case you need to order replacement parts. All parts for this fixture can be ordered from the place of purchase. Be sure to use exact wording from illustration when ordering parts.

CLEANING

 
To clean, wipe the fixture with a soft cloth. Clean glass with a mild cleaner (such as mild and non-abrasive soap). Do not use abrasive materials such as scouring pads or powders, steel wool or abrasive paper.

 
TOOLS REQUIRED (NOT INCLUDED):

Before starting assembly and installation please prepare the needed tools as below picture











Ladder

Philips Head or Flat Blade Screwdriver

Electrical Tape

Pliers


Wire Cutter/Stripper

PARTS TYPE & QTY INCLUDING:

- (A) Mounting plate (1)
- (B) Green ground screw (1)
- (E) Canopy (1)
- (F) Lock nut (1)
- (G) Knob nut (2)
- (H) Steel wire (1)
- (I) Cable (1)
- (J) Socket (1)
- (K) Iron shade (1)
- (L) Socket ring (1)

ACCESSORIES & QTY ENCLOSED:

- (C) Wire connector (3)
- (D) Mounting screw (2)

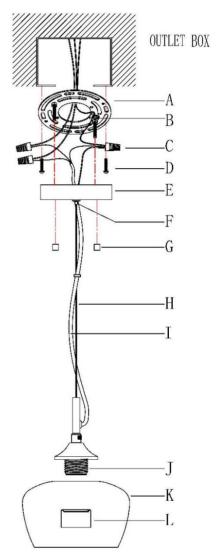

ASSEMBLY & INSTALLATION INSTRUCTIONS:


- 1. Carefully remove the fixture from the carton and check that all parts and accessories are included as shown in the above illustration.
- 2. Turn off power

Before you start the installation, NEVER attempt any work without shutting off the electricity until the work is done.

- **»** Go to the main fuse, or circuit breaker, box in your home. Place the main power switch in the "**OFF**" position.
- » Place the wall switch in the "OFF" position.


3. Make installation

- Step A1 » Unscrew knob nuts (G) from canopy (E) then remove mounting plate (A).
- Step A2 » Attach mounting plate (A) to the outlet box with mounting screws (D).

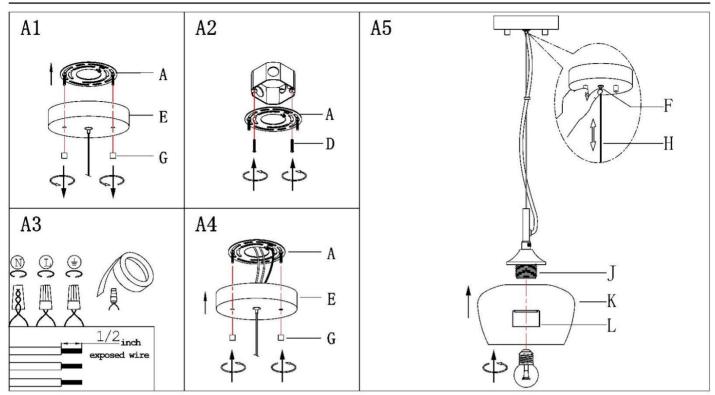

Step A3 » Make wire connections

Connect wires as below wires connection shown. PLEASE NOTE THAT GROUND WIRE IS BARE COPPER WIRE, NEVER CONNECT OTHER WIRES TO GROUND WIRES.

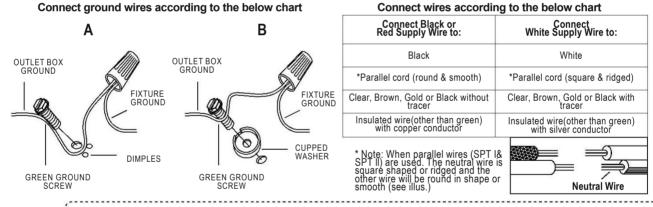

- Twist wires together with plastic wire connectors until tightly joined.
- · Wrap each connector with approved electrical tape.
- Be sure that no wire strands are exposed and then carefully tuck all wires into the outlet box.

Step A4 » Raise canopy (E) to the ceiling and secure canopy (E) in place by tightening knob nuts (G) onto the pre-assembled screws in mounting plate (A).

NOTE: canopy (E) should be snug against the ceiling with knob nuts (G). If not, decrease or increase the threaded length of pre-assembled screws, then tighten the pre-assembled hex nuts and back to Step A4.

- Step A5 » Remove socket ring (L) from socket (J), carefully place iron shade (K) on socket (J) and secure it with socket ring (L).
 - Install the bulb (not included) (Please do not exceed the maximum wattage recommended on the socket.)

To adjust the hanging height of the fixture:

- Press down and hold lock nut (F) by hand.
- Pull or push steel (H) in and out of canopy (E) to increase or decrease the hanging height.
- 4. Check everything is already installed properly, then you could turn on the light. Enjoy!