
4 Operation

4.1 Operation Instructions



WARNING

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

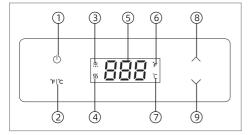

- (1) Switch button
- (2) Fahrenheit/Celsius Priority
- (3) Water flow signal
- (4) Water is heating up
- (5) Outlet water temp
- 6 Fahrenheit
- (7) Celsius
- (8) Heat up button
- (9) Heat down button

- 8. This product has an automatic memory function to avoid repeated operations. When you turn on the appliance, the temperature is set by default, which is the same as the previous setting.
- If the unit has been paused, you may initially get a short burst of very hot water when you turn it on again. Please run the water through for a few seconds to let the temperature settle down.
 Please check the hot water with your hand before taking a shower.
- If the unit is not used in winter drain out the water completely so that the heater does not freeze.
- Please clean the inlet filter and the shower periodically in order to keep a proper water flow.



WARNING

Minors are not allowed to operate the water heater themselves unless accompanied by a quardian.

- 1. Turn on the circuit breaker to supply electrical power to the unit.
- Open the water faucet for a few minutes until the water flow is continuous and all the air has been purged from the water pipes.
- 3. After the device is powered on, there will be a "beep" sound, and the appliance keeps standby.
- 4. Press to turn the appliance on/off. When the unit is turned on, the LED displays the actual outlet water temperature. When the electrical appliance stops working, after 30 seconds, the screen switches to the screen saver state, and the indicator light on the display screen goes out. If the screen is touched, it will light up again.
- 5. Press " / " and " ✓ " to adjust the outlet water temperature, Temperature setting range is 86 140 °F (30 60 °C).
- 6. Press " (|) " to start.
- 7. press " °FI°c" switch between Fahrenheit and Celsius temperature display.