 


ASSEMBLY INSTRUCTION

 
DE - MONTAGEANWEISUNG
FR - INSTRUCTIONS DE MONTAGE
DK - MONTAGEVEJLEDNING
CZ - NÁVOD K MONTÁŽI
ES - INSTRUCCIONES DE MONTAJE
FI - ASENNUSOHJE

HR - UPUTE ZA MONTAŽU
SE - MONTERINGSANVISNING
SI - NAVODILA ZA MONTAŽO
TR - MONTAJ TALIMATI
NO - MONTASJEANVISNING
IT - ISTRUZIONI DI MONTAGGIO





GR - ΟΔΗΓΙΑ ΣΥΝΑΡΜΟΛΟΓΗΣΗΣ
NL - MONTAGE INSTRUCTIE
PT - INSTRUÇÕES DE MONTAGEM
PL - INSTRUKCJA MONTAŻU
HU - SZERELÉSI UTASÍTÁS

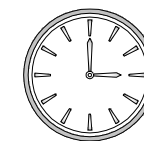


20 min

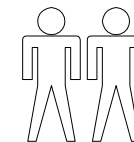


0 cm
1
2
3
4
5
6
7
8
9
10
11
12
13
14

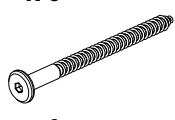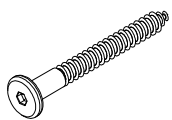    
- | | | |
|---|---|---------------------------|
| ① |  | HW-ST-01-078
(7 x 120) |
| | x 8 | |
| ② |  | HW-ST-01-046
(7 x 90) |
| | x 2 | |
| ③ |  | HW-ST-01-043
(7 x 65) |
| | x 3 | |
| ④ |  | HW-ST-01-040
(7 x 50) |
| | x 4 | |
| ⑤ |  | HW-WD-17-011
(10x40) |
| | x 4 | |
| ⑥ |  | HW-ST-18-001
(4 x 98) |
| | x 1 | |

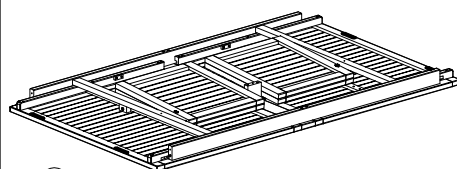 


Ⓐ x1
SU-TB-AS-0250

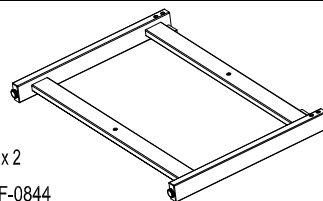 


Ⓑ x2
SU-TB-LF-0844

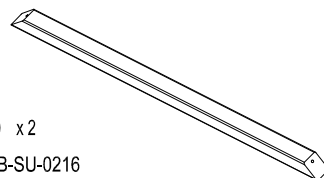 


Ⓒ x2
C-W-TB-SU-0216


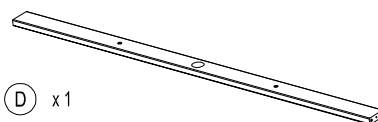 



Ⓓ x1
C-W-TB-FP-0059

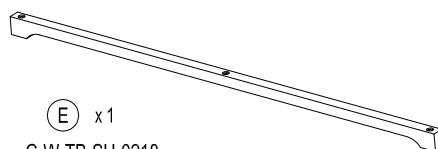 

Ⓔ x1
C-W-TB-SU-0218

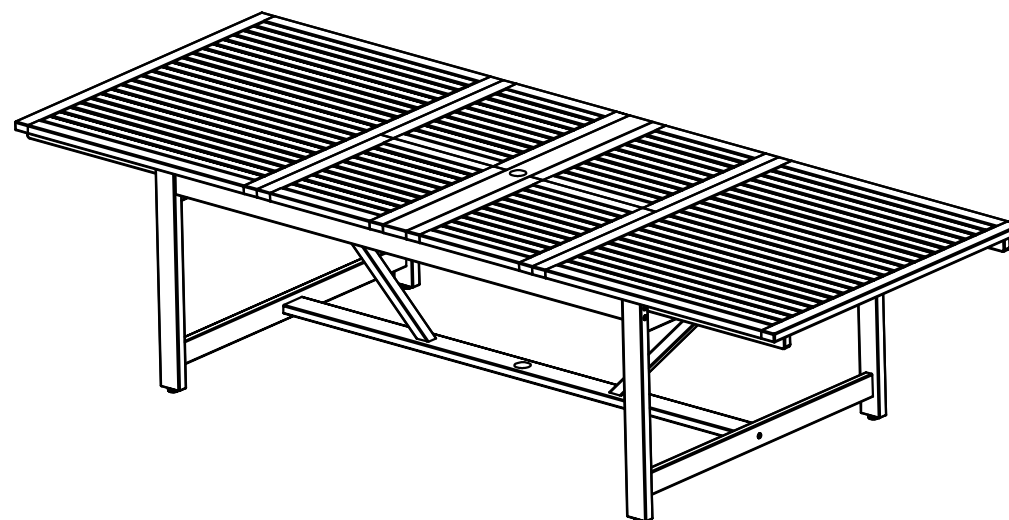 

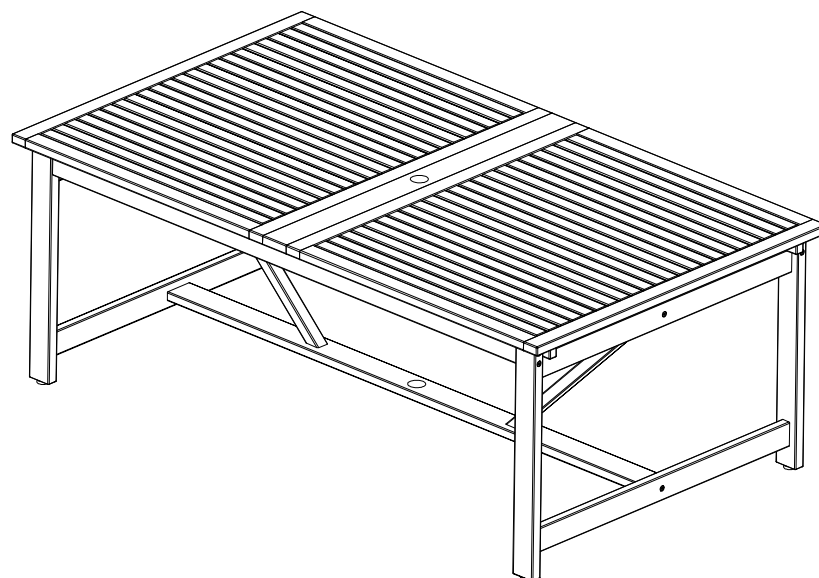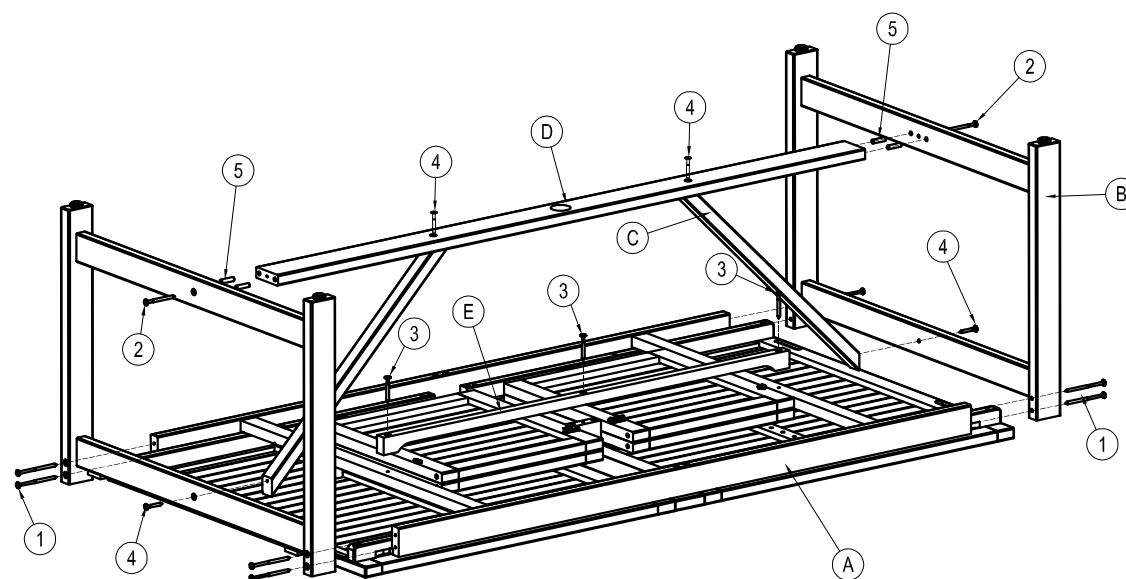  

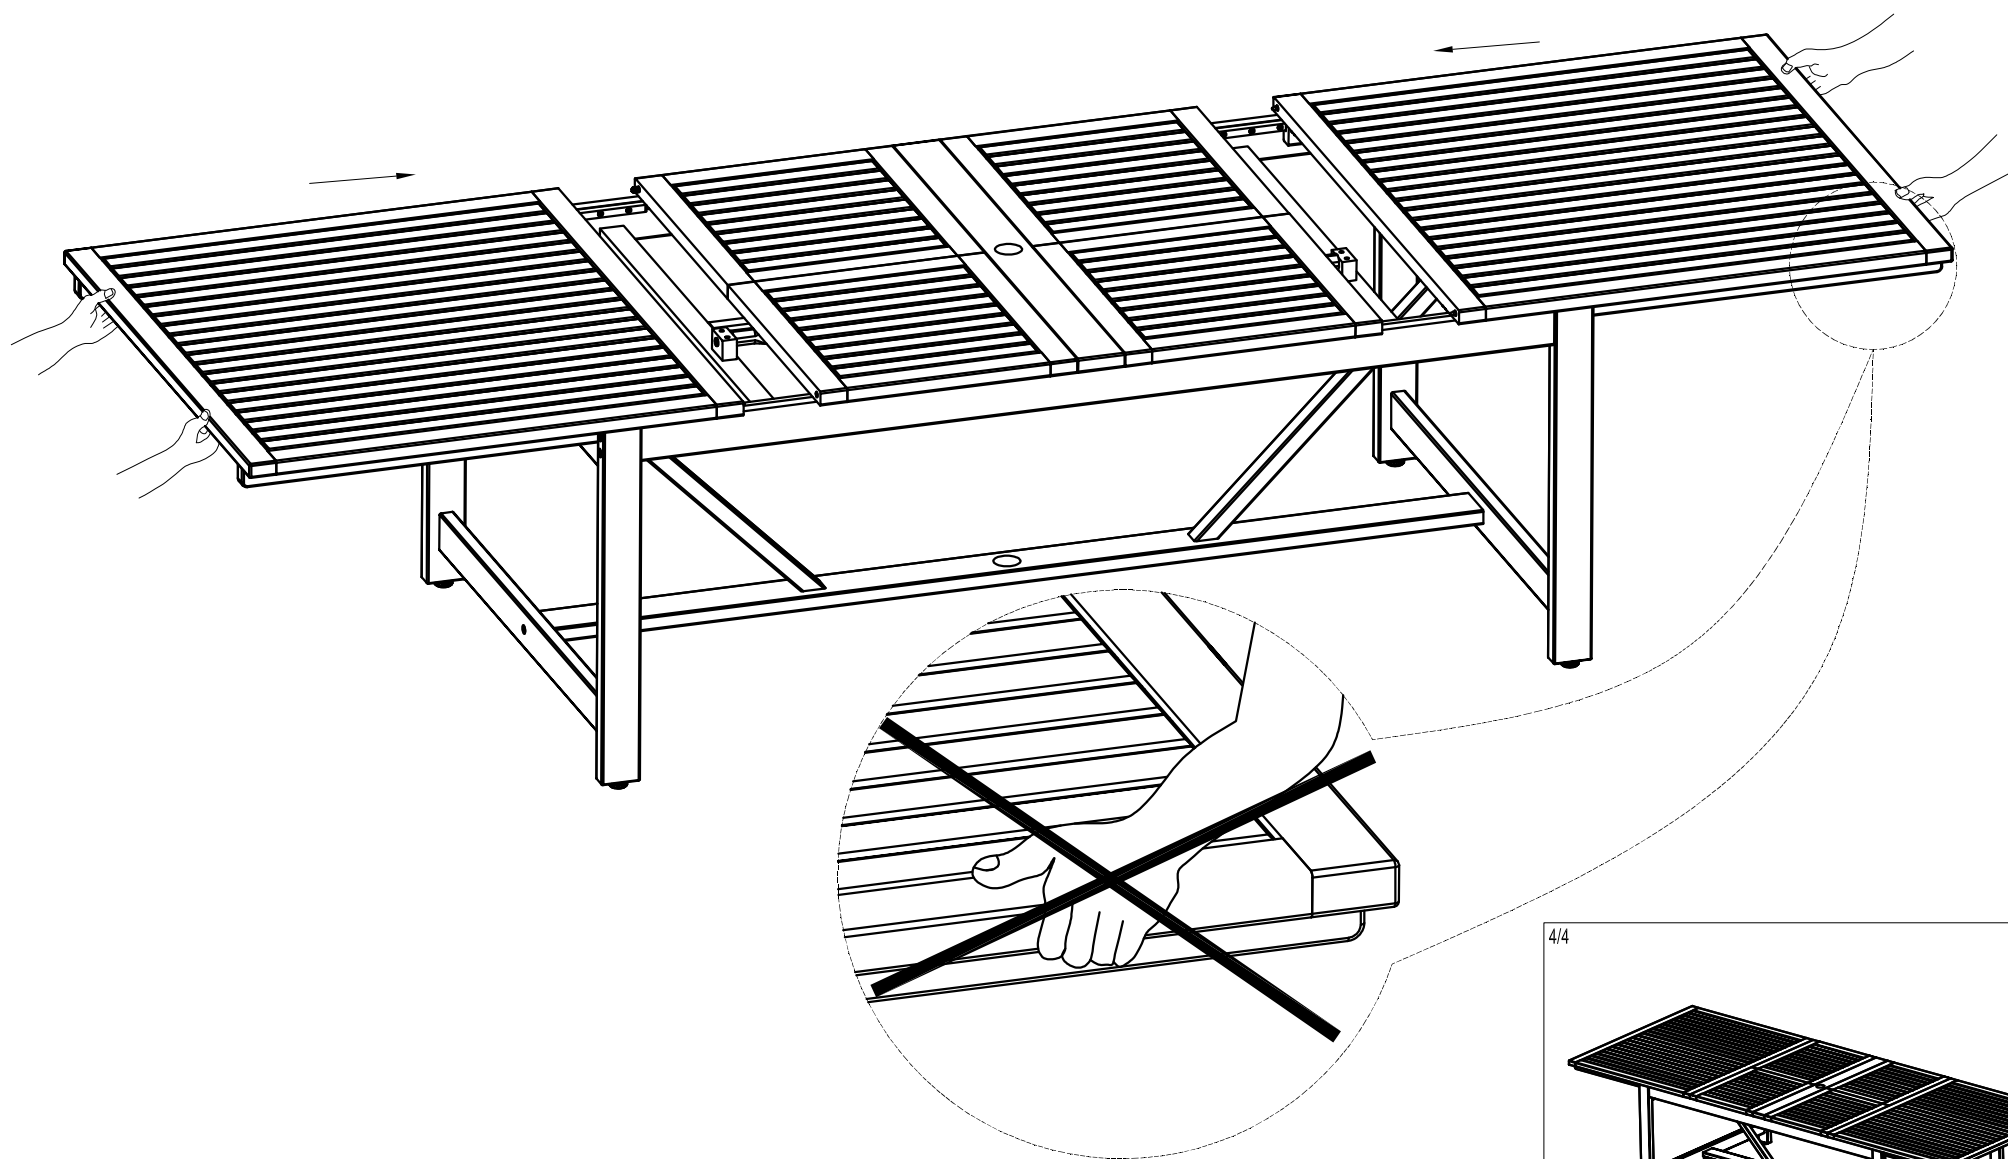 

4/4

