

Assembly and Instruction Sheet

Easy Access Spark Screen for Outdoor Fire Pits



WARNING!


Screen will become hot when in use! Failure to wear protective gloves when handling may lead to injury.

Parts Check List

Tools Required for Assembly:

- Phillips Head Screwdriver
- Adjustable Wrench

Part	Quantity	Part Description
A	2	Screens with Bolt Spacer
B	2	Screens with Bolt Hole
C	2	Hinge Bolts and Nuts
D	6 of 10	Screen Bolts and Nuts (# varies by model)

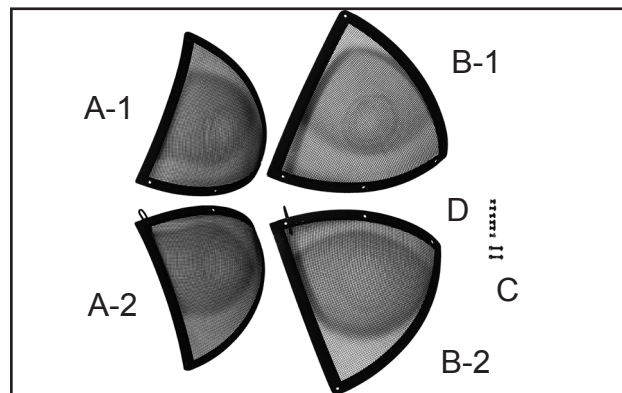

Assembly Instructions

Step 1:

Separate screen sections, placing Screen with Bolt Spacers (A1-A2) (Figure 1) side by side with bolt holes overlapping and the Bolt Spacers facing opposite each other (Figure 2).

Step 2:

Insert Screen Bolts (D) into each of the two outer holes of the aligned sections (Figure 3) and **LOOSELY** secure with nuts.

HAND TIGHTEN ONLY AT THIS POINT

(Over tightening will make aligning middle holes difficult).

Align middle holes of screens (quantity depends on model size), insert bolts and fasten with nuts.

NOTE: light force may be required to align middle holes of screens so the bolts can be properly inserted.

Step 3:

Repeat Steps 1 and 2 for two remaining sections of Screen with Bolt Hole (B1-B2).

Step 4:

Tighten all Screen Bolts and Nuts of both completed screen sections with screwdriver and wrench (Figure 4).

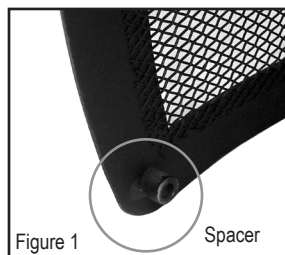


Figure 1

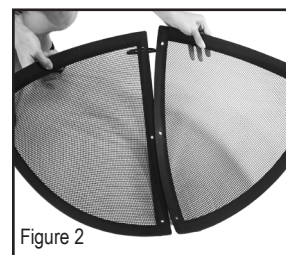


Figure 2



Figure 3

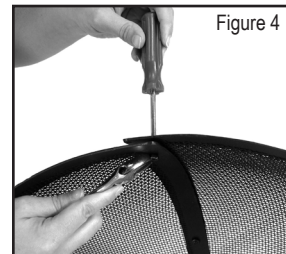


Figure 4

Assembly Instructions (cont.)

Step 5:

Align completed screen halves so the Bolt Spacers of Screen A are aligned with Bolt Holes of Screen B. (Figures 5 & 6).

Step 6:

Connect screen halves together by inserting a Hinge Bolt (C) through each screen side and fasten with nuts. (Figure 6).

Securely fasten hardware with wrench (Figure 7).

NOTE: there will be space between the two screen halves to provide adequate folding clearance.

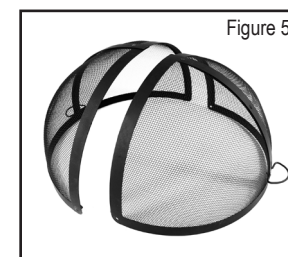


Figure 5

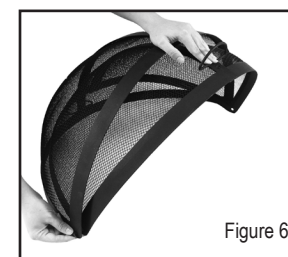


Figure 6


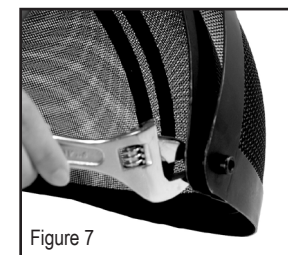


Figure 7

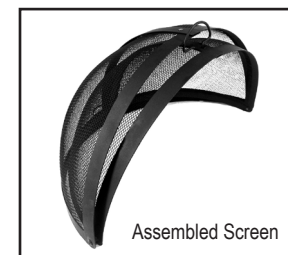

Assembled Screen

Maintenance Instructions

As with any outdoor steel product, periodic maintenance is required to return painted steel surfaces to original appearance. Remove any rust with sandpaper or steel brush and repaint with grill paint suitable for high-temperature surfaces. Follow manufacturer's instructions.

WARNING!

Screen will become hot when in use! Failure to wear protective gloves when handling may lead to injury.