





Keep the TOP(A) inverted on the clean surface and bottom facing the top then place the LEG(B) on designated points of TOP (A) as shown above and fix it by using Allen Bolt (1) and Allen Key (2) Repeat the same process with all LEG(B) and connect it with Allen Bolt (1) and Allen Key (2).



Place the Desk on a LEVEL SURFACE.

Inspect it and make sure all parts are adequately connected. Turn the Desk in a synchronised manner.

CAUTION 1: When tightening these Bolts, tighten sequentially.

DO NOT tighten any Bolts fully and then towards the next one.

This would cause the frame to warp.

If there is still wobbles, loosen the Bolts and execute this same process.

WARNING!! IF DESK IS NOT STABLE , IT COULD LEAD TO DAMAGING THE PRODUCT.

Ensure all bolts are fully locked into position.

The Desk is ready to be used.

CAUTION 2: This Desk can only be used on a flat, level surface.

