

## SPECIFICATION SHEET

### RZ327 SERIES SUNSET/ SUNRISE 7 DAY IN-WALL TIMER

#### APPLICATIONS

- Outdoor security lighting
- Interior lights for lived-in look
- Fans or other motors
- Appliances

#### FEATURES

**SCHEDULING :** 10 ON & OFF pairs of set points for individual programs on each day of the week. 11 day groups speed programming. Minimum setting is 1 minute.

**ASTRONOMIC :** Sunset and sunrise times are adjustable from 10°- 60° Northern or Southern latitudes. Can be individually offset +/- 1 -240 for earlier or later operation.

**RANDOM MODE :** Varies ON and OFF times to create lived in look when away.

**DAYLIGHT SAVING :** Automatic adjustment (can be omitted).

**LEAP YEAR :** Automatic Compensation

**MANUAL OVERRIDE :** Until the next regularly scheduled ON or OFF, automatic operation then resumes.

**MANUAL MODE :** Does not run programs until set to AUTO (automatic) mode. Use as vacation setting for no operation when away.

**EASY WIRING :** Requires a neutral. Can be used as a 3-way switch.

**CLOCK FORMAT :** AM/PM

**POWER OUTAGE BACKUP :** Permanent schedule retention with memory module. Supercapacitor provides 2 days of real time backup.

#### SPECIFICATIONS

**TIMING ACCURACY :** Line frequency

**INPUT VOLTAGE :** 120/277VAC, 50/60Hz

**WIRE SIZE :** #12AWG input/output - #16 AWG 3-way (remote)


**OPERATING TEMPERATURE :** 32° to 104°F (0° to 40°C)



#### WIRING DIAGRAMS

##### SINGLE POLE

Wiring Diagram: Installation RZ 327

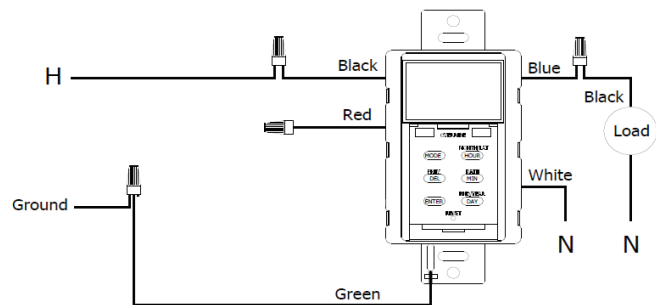

##### 3-WAY INSTALLATION

Wiring Diagram: Three-Way Installation RZ 327

Connect a wire inside the gang-box between Traveller A and Hot

