

INSTALLATION STEPS FOR TIRE SNOW CHAINS



Attention: During driving, the speed should not exceed 40 kilometers per hour, and sudden braking and turning are prohibited. Additionally, snow chains cannot be installed on iron wheels, and chains cannot be installed at the inflation holes



Step1

Strap gets through the tire press the buck



Step2

Strap gets through the buckle



Step3

Tighten the straps



Step4

Rotate the shaft until it is tight

This product is suitable for vehicles with aluminum alloy hub with tire widths ranging from 215-285mm

INSTALLATION STEPS FOR TIRE SNOW CHAINS



Attention: During driving, the speed should not exceed 40 kilometers per hour, and sudden braking and turning are prohibited. Additionally, snow chains cannot be installed on iron wheels, and chains cannot be installed at the inflation holes



Step1

Find the twist lock on the handle



Step2

Rotate the metal shaft with a wrench



Step3

Use the installation wrench to hold the brake card up and pull out the ribbon



Step4

Finally disassembly completed

This product is suitable for vehicles with aluminum alloy hub with tire widths ranging from 215-285mm