
OPERATION INSTRUCTIONS

CHAIR

WF321704 - WF321705 - WF321706

 
Please do not assemble until receiving the complete 4 packages. If you have not received the complete 4 packages, please be sure to contact us.

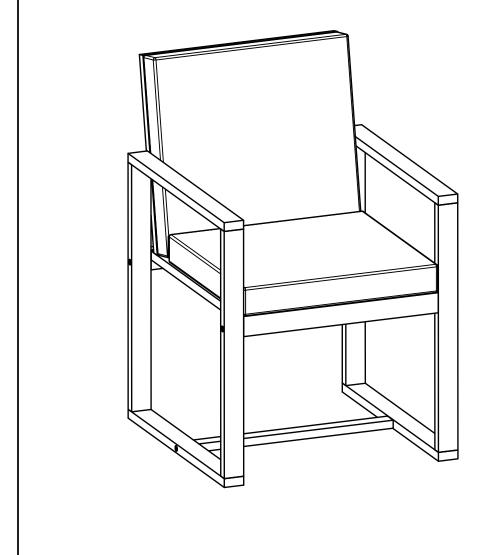

Caution: You must read this before you proceed

Care & Maintenance





Do not clean furniture with harsh cleansers or polish.

To obtain the longest lifespan of your outdoor products, minimizing exposure to direct sunlight is recommended.

O [* Children should not climb or jump on the furniture.


• Do not write on furniture without a padded barrier to protect the surface.

To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.

• Stains may be removed with mild soap solution and damp cloth.

• Dust and pick-up spills using a clean, non-colored, lint-free cloth.

ASSEMBLY INTRUCTIONS

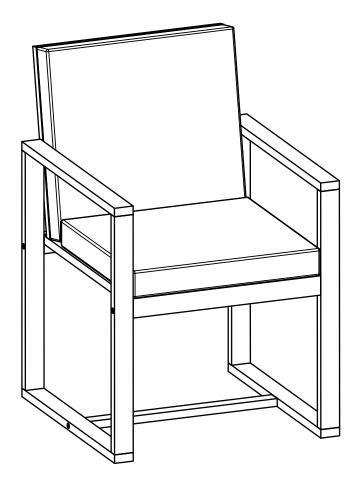

GENERAL ASSEMBLY INFORMATION GUIDE

Please read the following instructions prior to assembling this product:

- 1. To avoid damage, assemble this product on a non-abrasive surface such as carpet.
- 2. Make sure all bolts are tightly fastened before use.
- 3. For home use or light commercial use only.
- 4. Please make sure you have all parts before assembly.

