

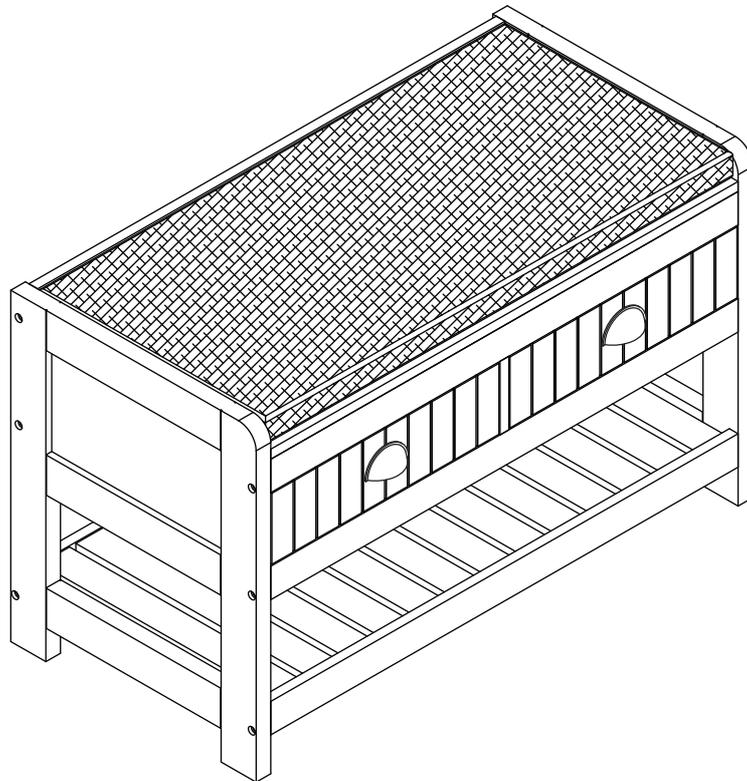



Hall Tree

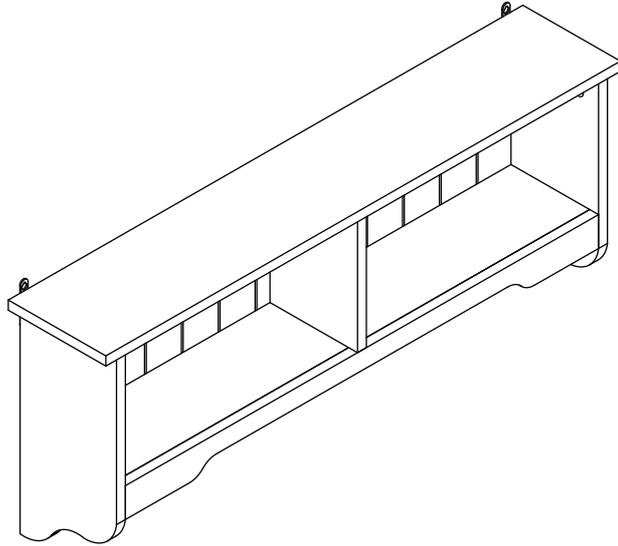

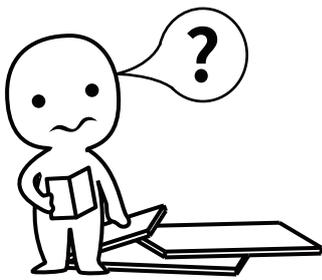


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

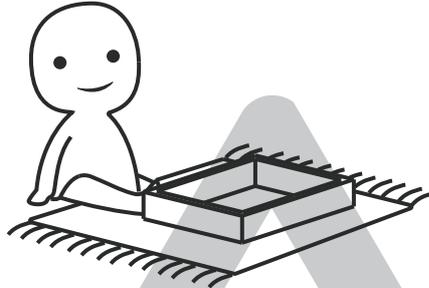



AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer- could be a rug.

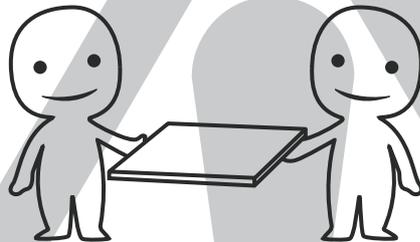

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

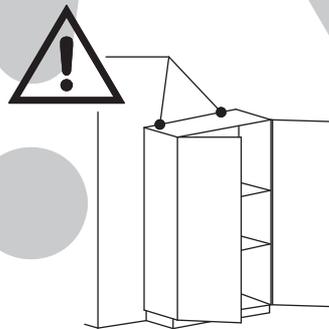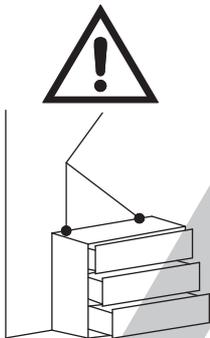

ANTI-TOPPLE WARNING !


Overturnd furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !





It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

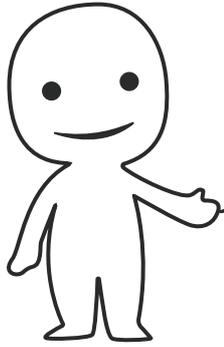

Please prepare the following tools

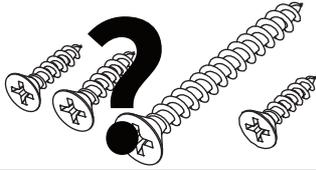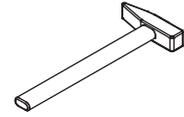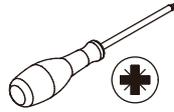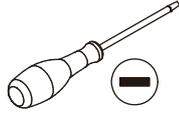

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 28(+2)



Ø6 x 35 mm

B x 28(+2)



Ø15 x 10 mm

C x 46(+4)



Ø6 x 30 mm

D x 13(+1)




Ø4 x 40 mm

E x 12(+1)



Ø6 x 60 mm

F x 1

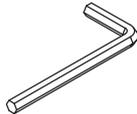

M4 mm

G x 12(+1)



Ø10 x 10 mm

H x 19(+1)




Ø20 mm

I x 24(+2)



Ø3.5 x 12 mm

J x 4

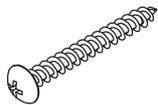

Ø4 x 35 mm

K x 4



Ø15 mm


L x 4



M x 14(+1)



N x 2

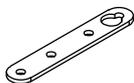

O x 2



P x 4



Q x 4




R x 4




Ø6 x 30 mm

CL x 2

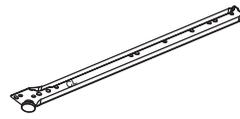


300 mm

CR x 2

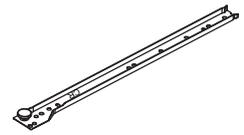


300 mm

DL x 2


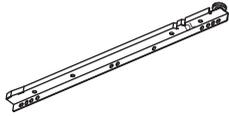


300 mm




DR x 2

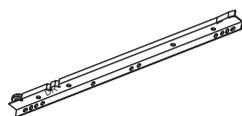


300 mm

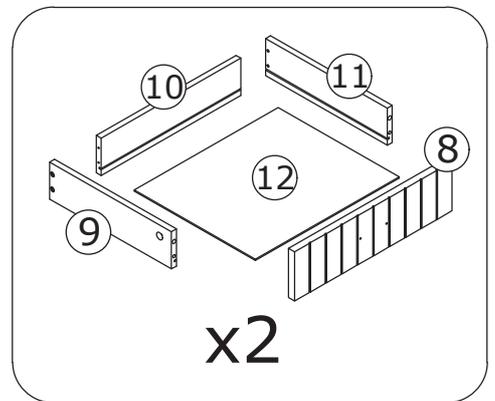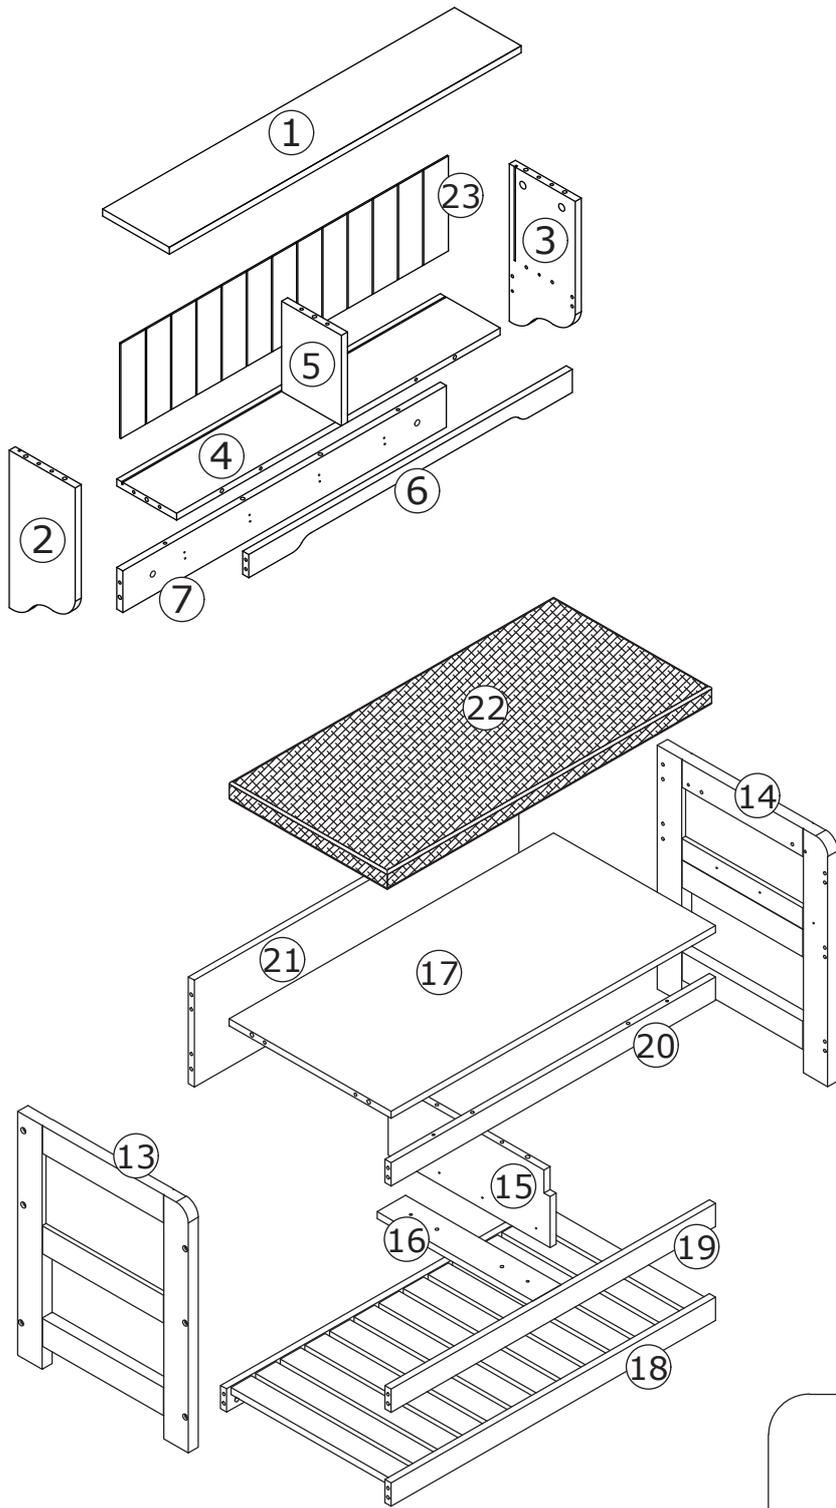

1

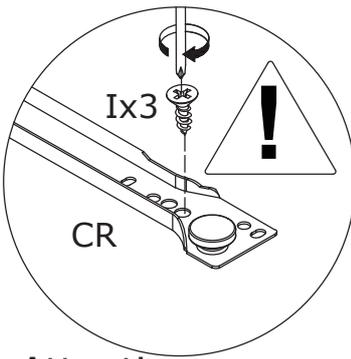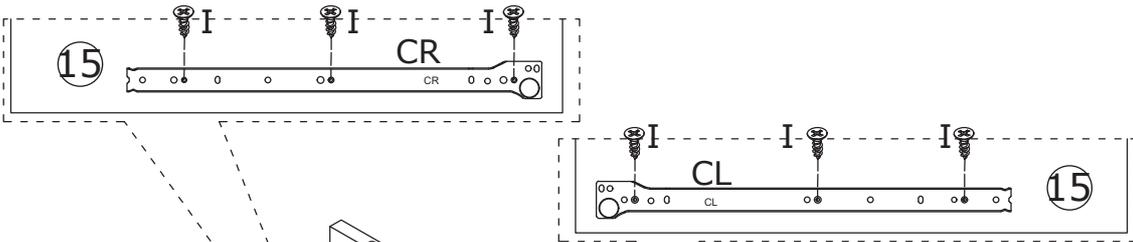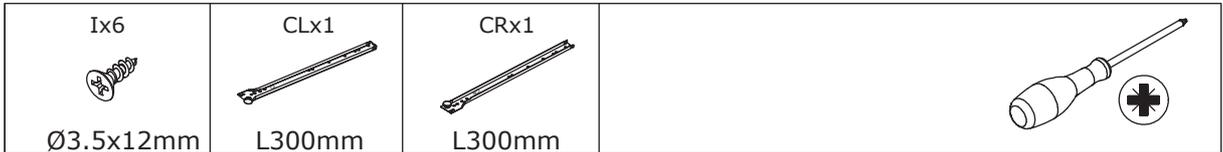

Attention, First hole

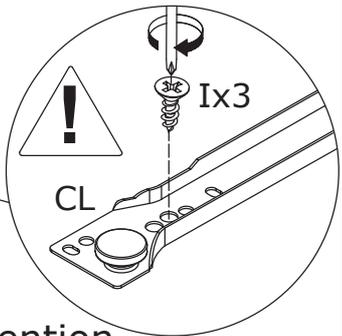



Attention, second hole

Fix slide rail(CL) and (CR) to right and left side of board 15 with screw(I) as shown.


2





Please pay attention to the holes where the accessories are inserted

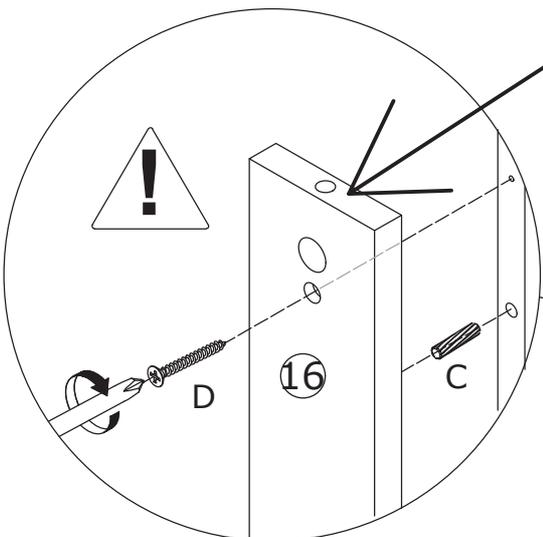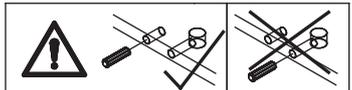


Attach board 16 to 15 with wooden dowel(C) and screw(D) as shown.

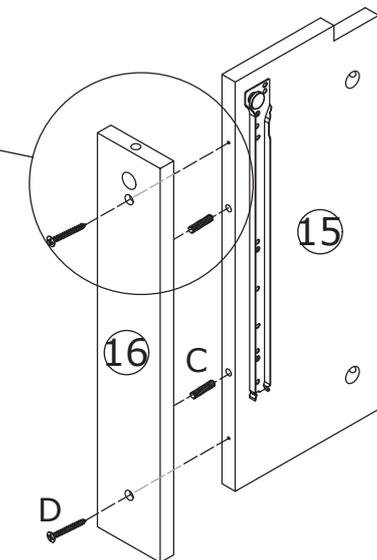


3

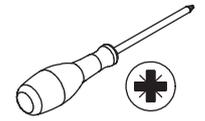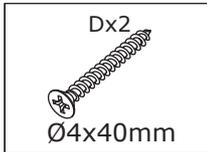



Fix board 21 to 16 with screw(D) as shown.

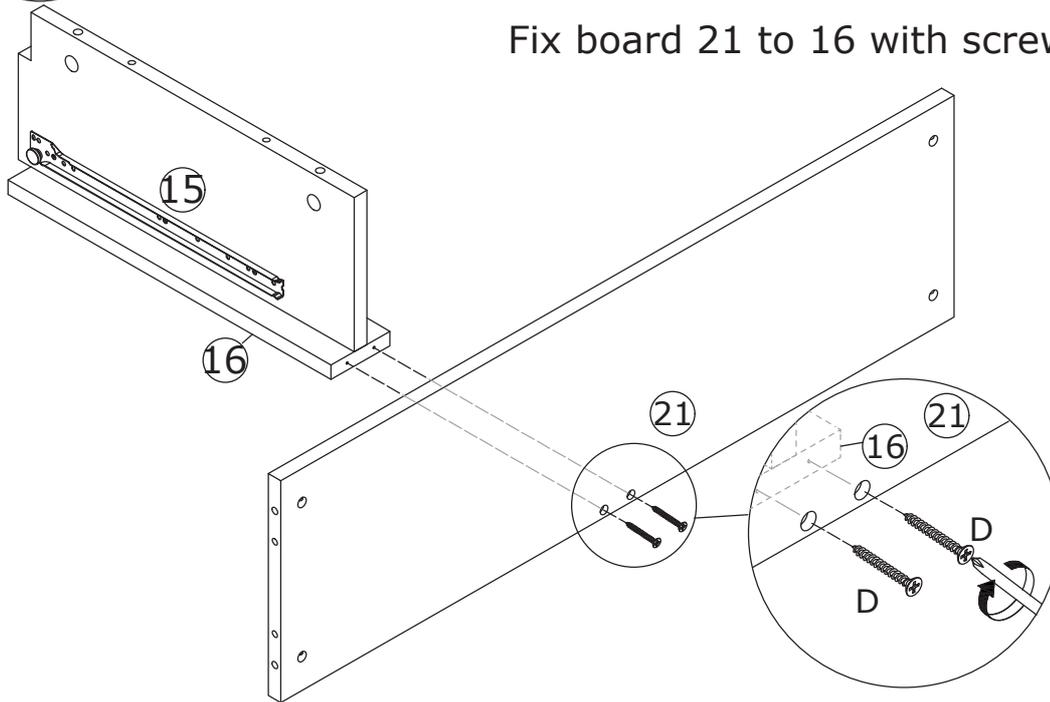

4

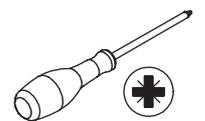


Insert quickfit screw(A) into board 17 with a screwdriver.

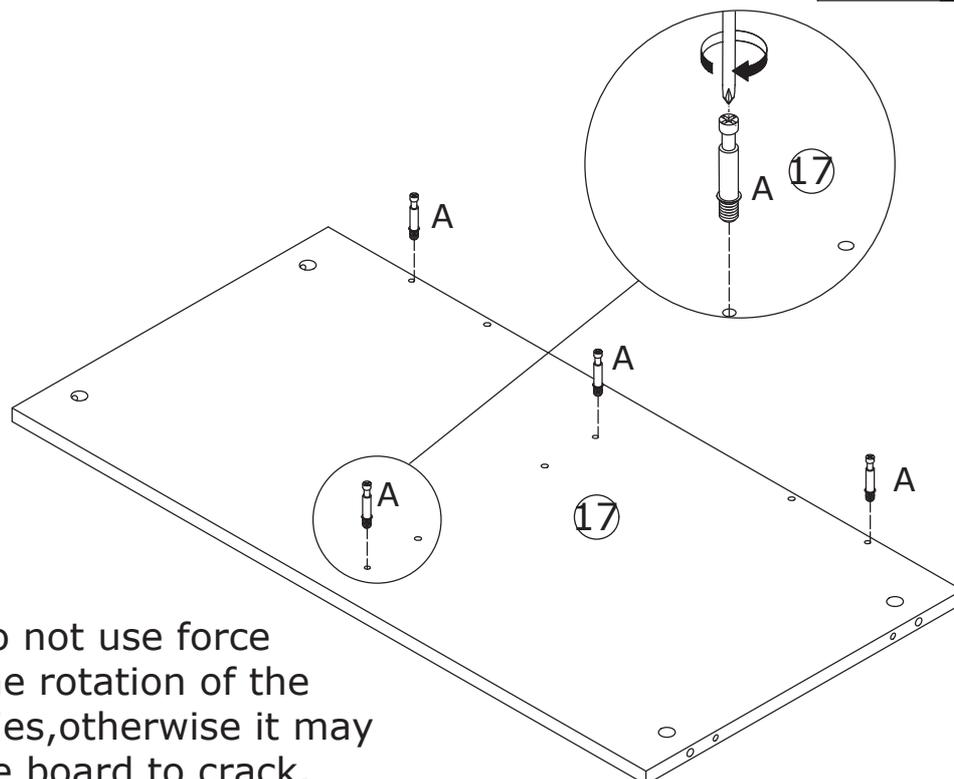
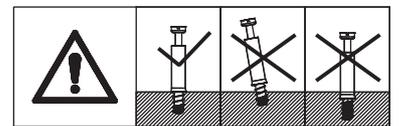


Please do not use force during the rotation of the accessories, otherwise it may cause the board to crack.


5

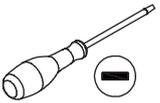Bx2  Ø15x10mm	Cx2  Ø6x30mm	
--	---	---



Connect board 17 with 20 using wooden tenon(C), and turn cam lock(B) clockwise to tighten as shown.

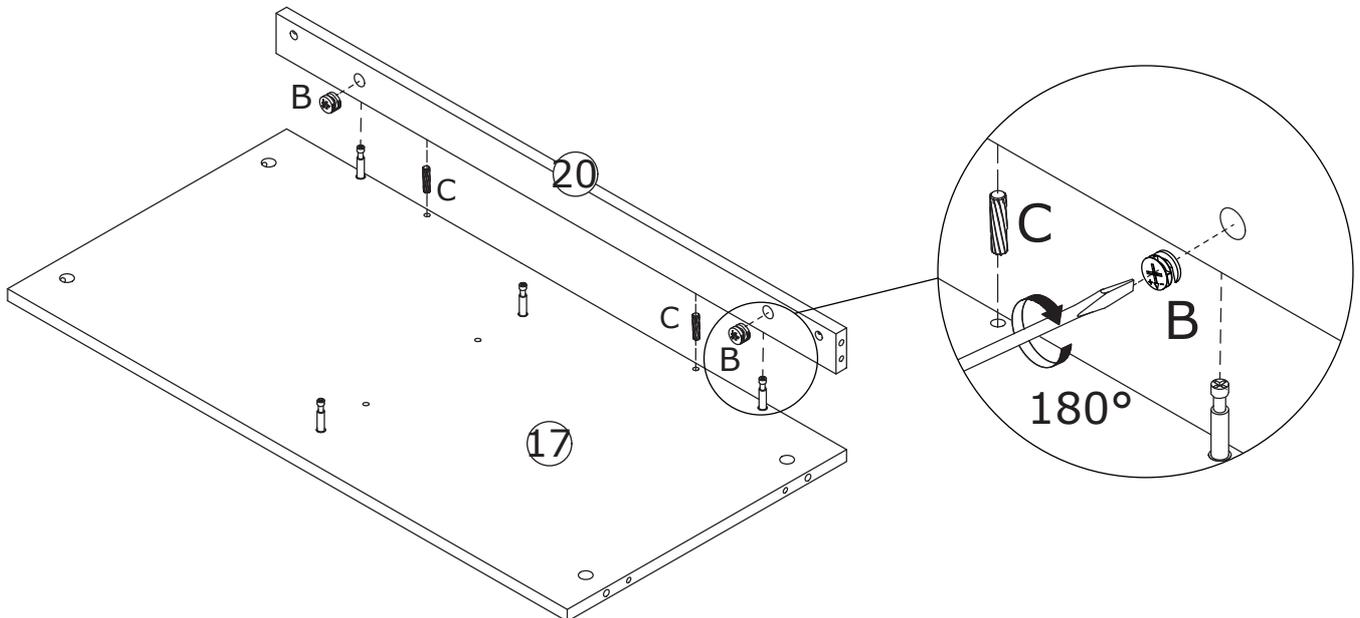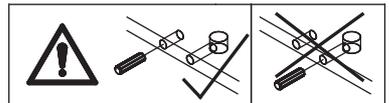



6

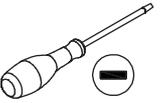Bx2  Ø15x10mm	Cx2  Ø6x30mm	
--	---	---



Attach board 17 to 15 with wooden dowel(C), insert cam lock(B) into board 15 and turn clockwise to tighten as shown.

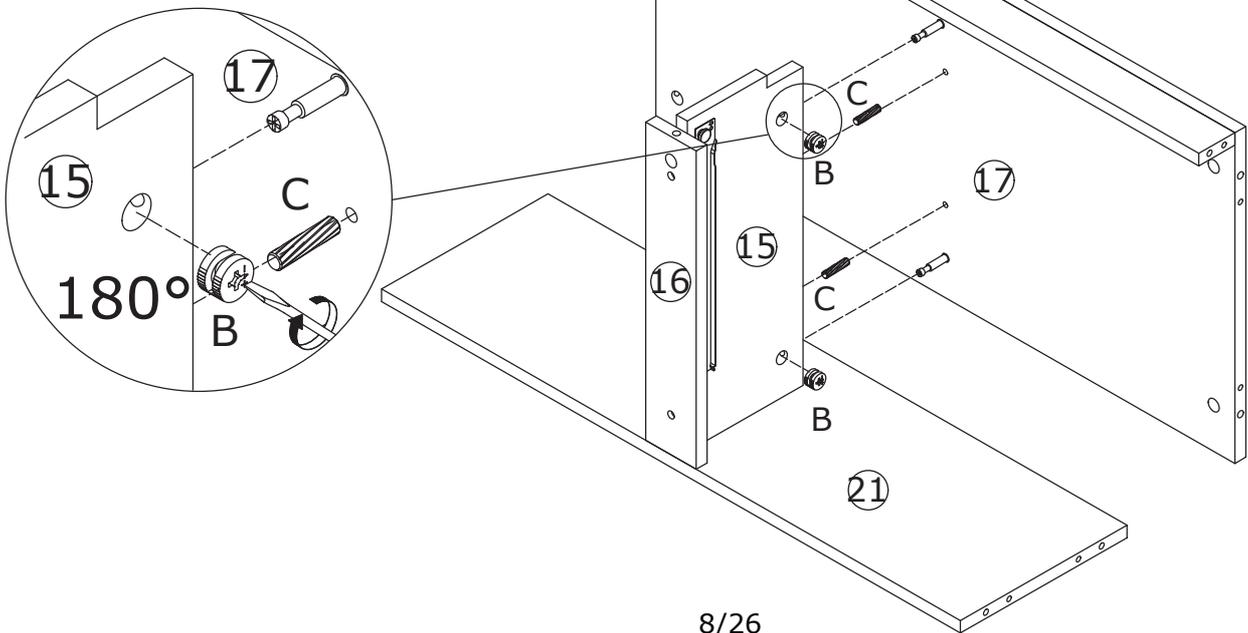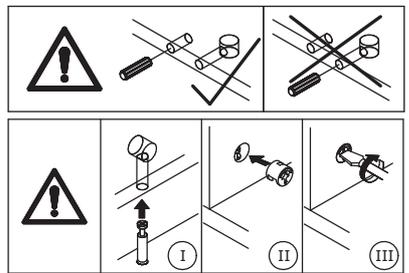



7

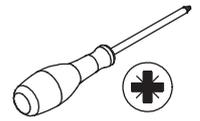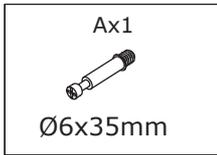




Insert quickfit screw(A) into board 19 as shown.

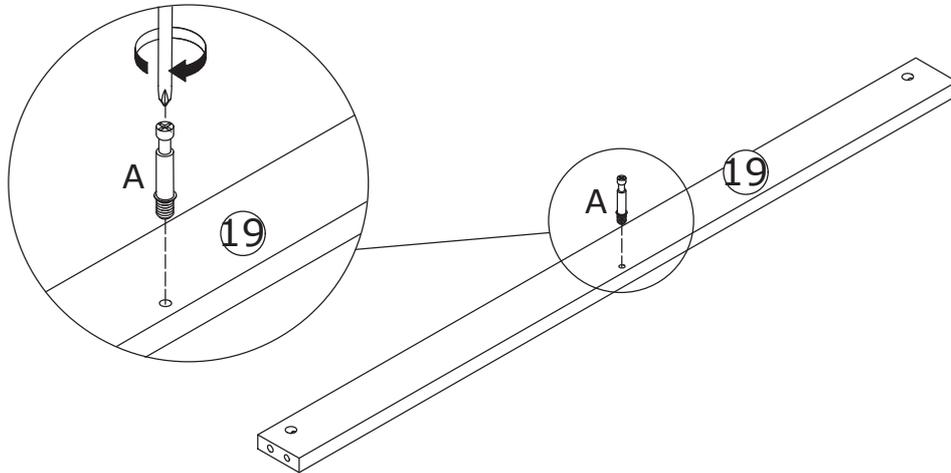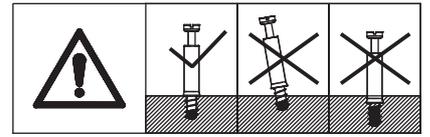



8

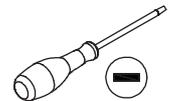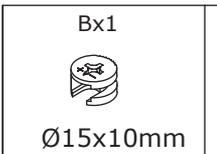



Attach board 19 to 16, insert cam lock(B) into board 16 as shown, turn cam locks clockwise to tighten.

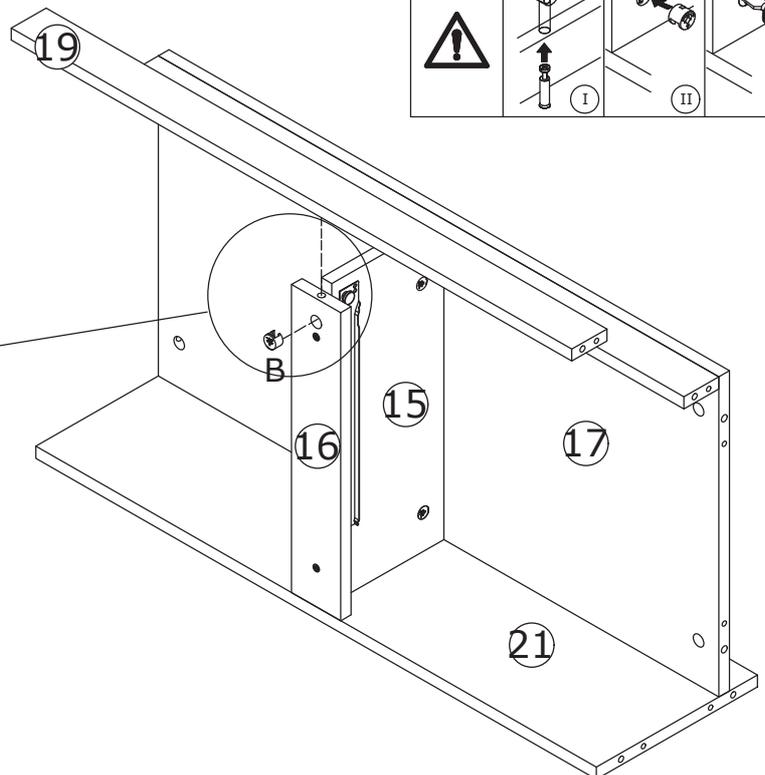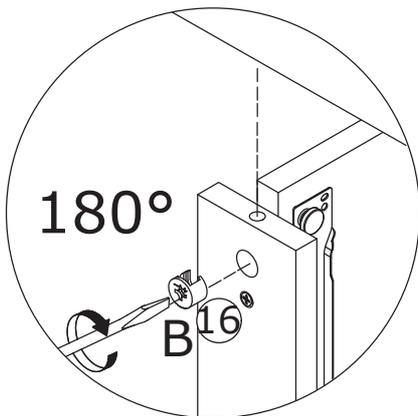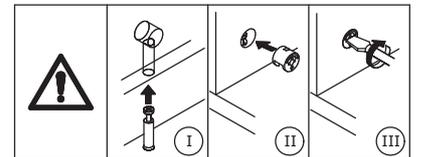



9

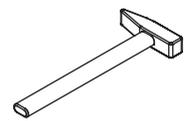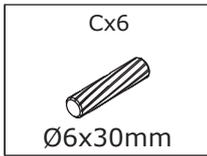



Knock wooden dowel(C) into corresponding holes in board 19,20,17 and 21 as shown.

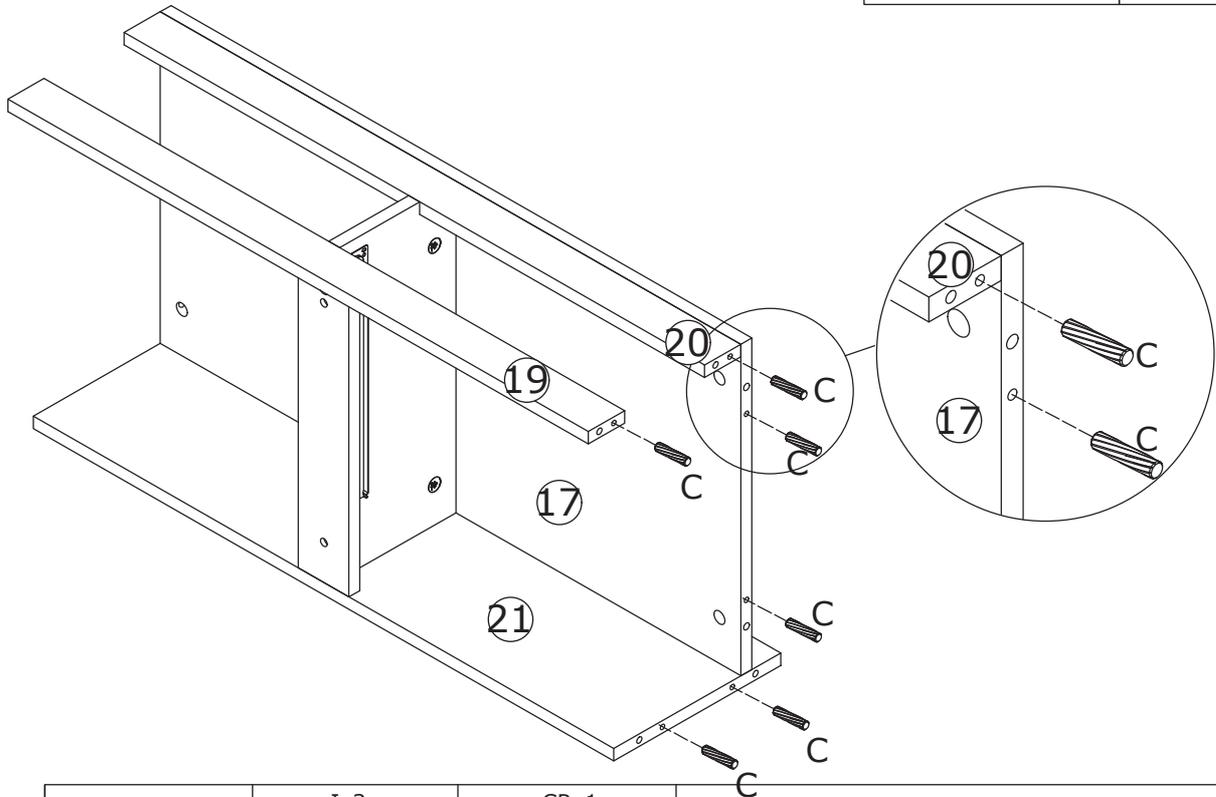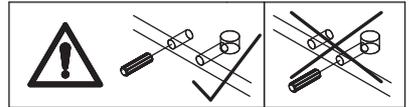


10

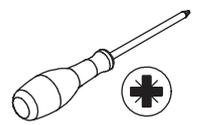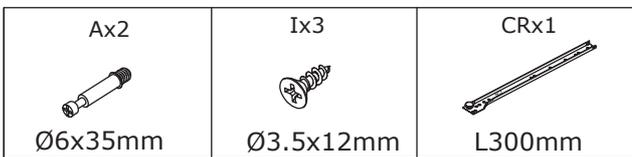



Fix slide rail(CR) to board 14 with screw(I) as shown.
Insert quickfit screw(A) into board 14 with a screwdriver.

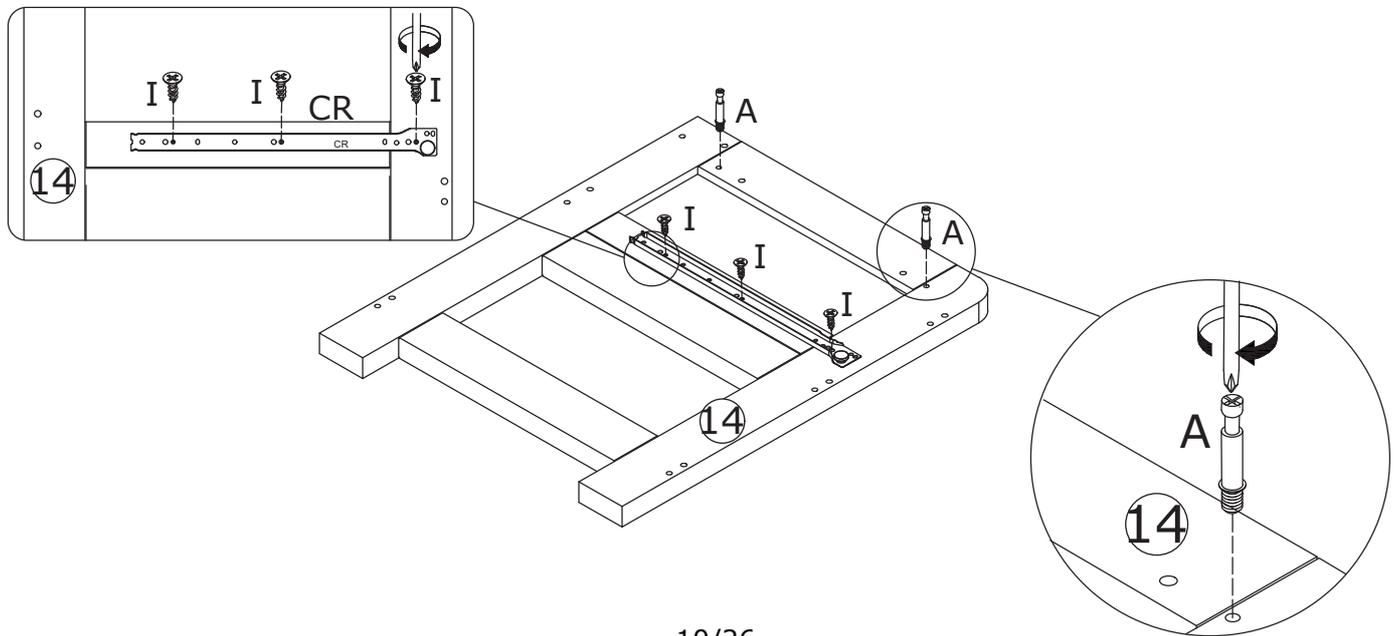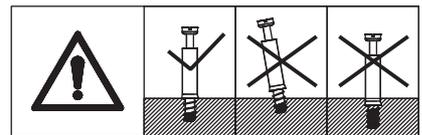


11

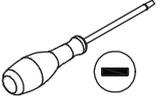Bx2  Ø15x10mm	Ex4  Ø6x60mm	Fx1  M4mm	Gx4  Ø10x10mm	
--	---	--	---	---




Attach board 14 to the component, turn cam locks(B) clockwise to tighten, insert part(G) to corresponding holes, then fix with screw(E).

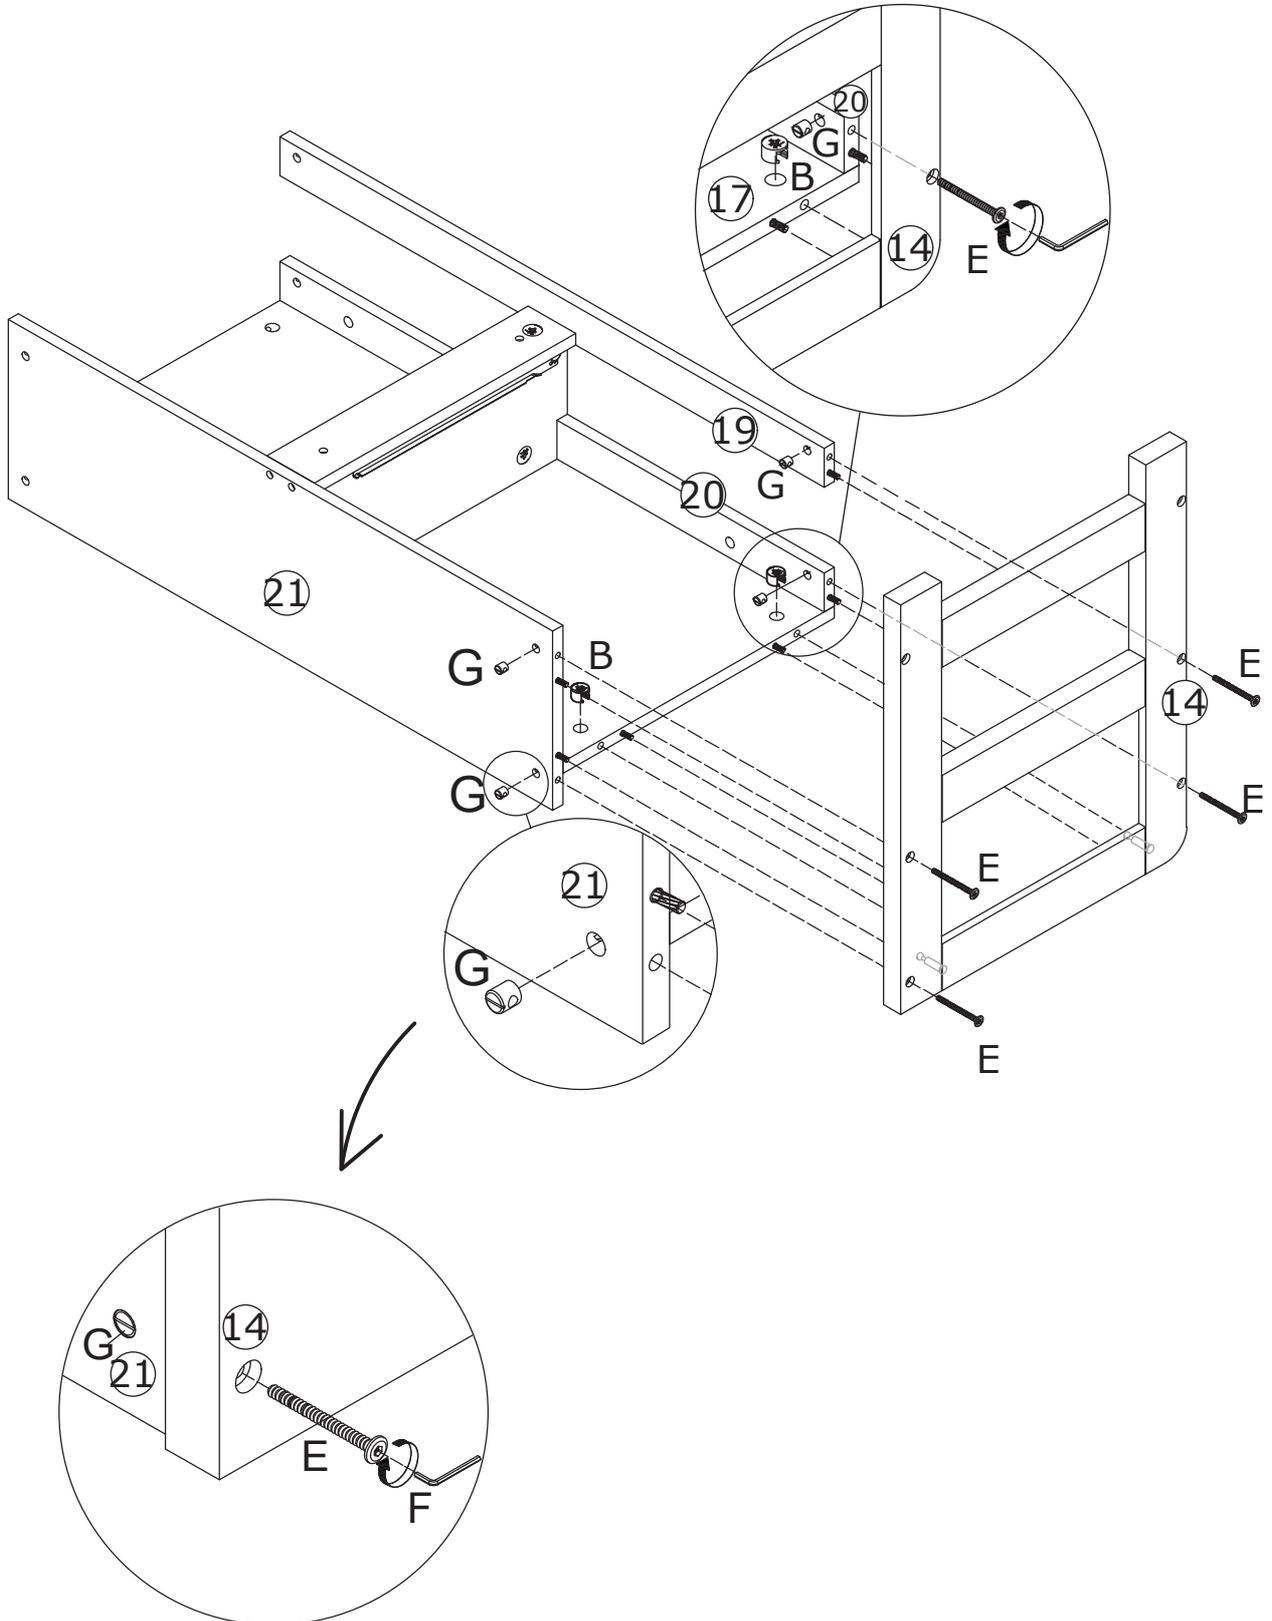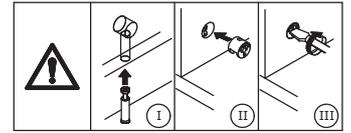

12

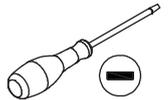
<p>Cx2  Ø6x30mm</p>	<p>Ex2  Ø6x60mm</p>	<p>Fx1  M4mm</p>	<p>Gx2  Ø10x10mm</p>	
--	--	---	--	---

Connect board 18 to 14 with wooden dowel(C), insert part(G) to corresponding holes, then fix with screw(E).

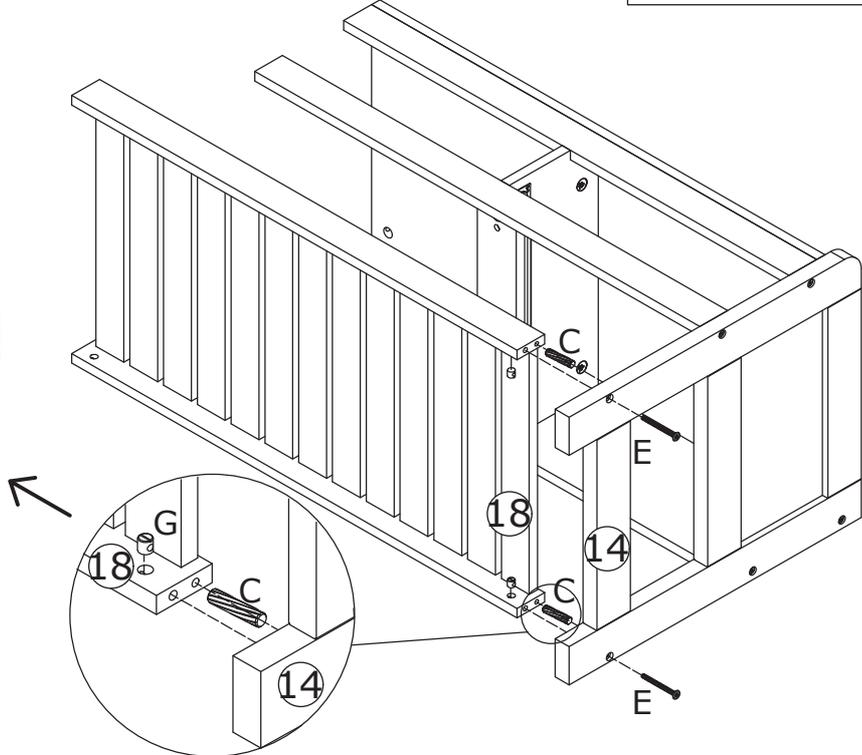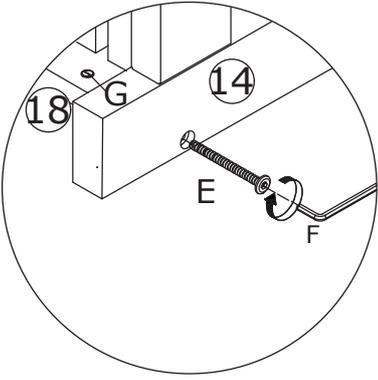
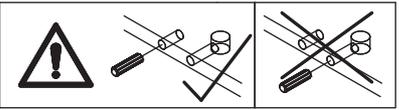


13



<p>Hx6  Ø20mm</p>	
--	--

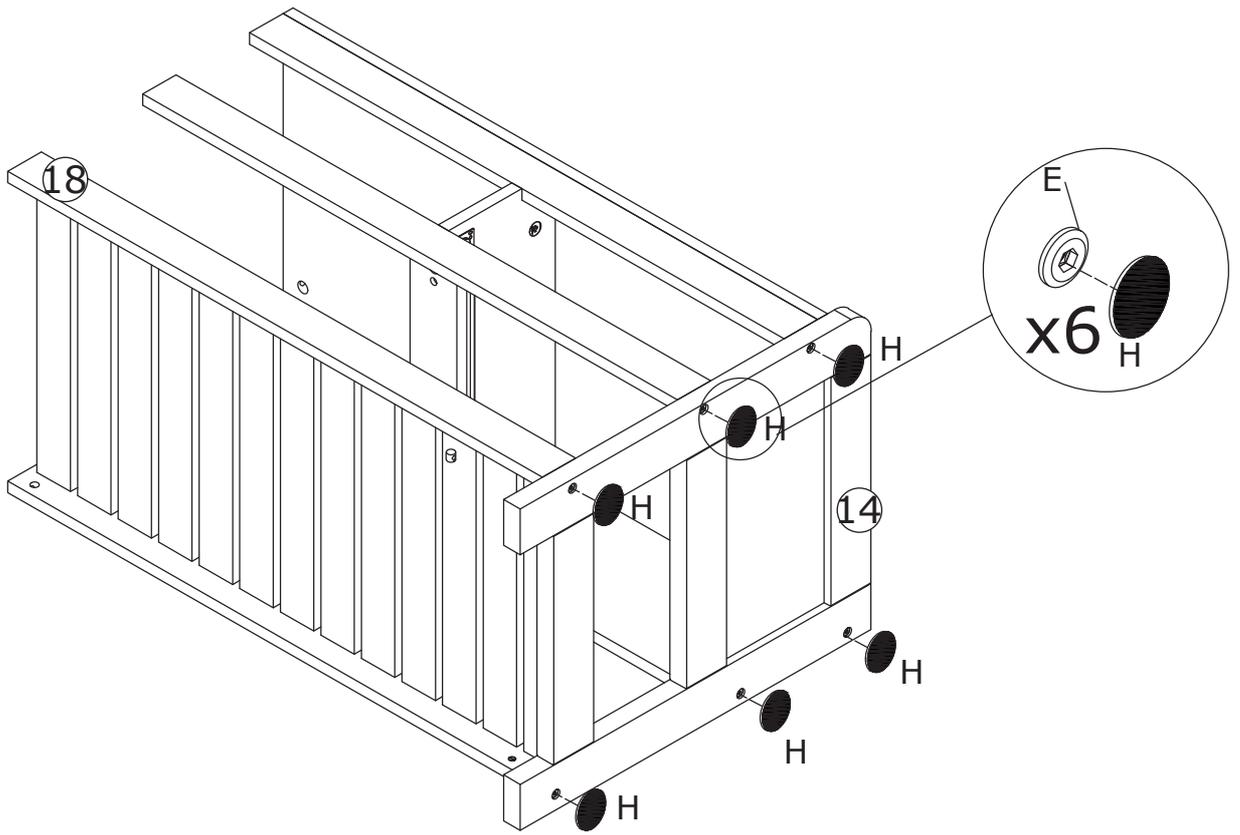



14

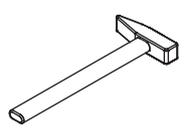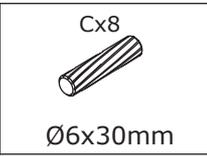





Please pay attention to the holes where the accessories are inserted. Knock wooden dowel(C) into corresponding holes in board C 19,20,17,21 and 18 as shown.

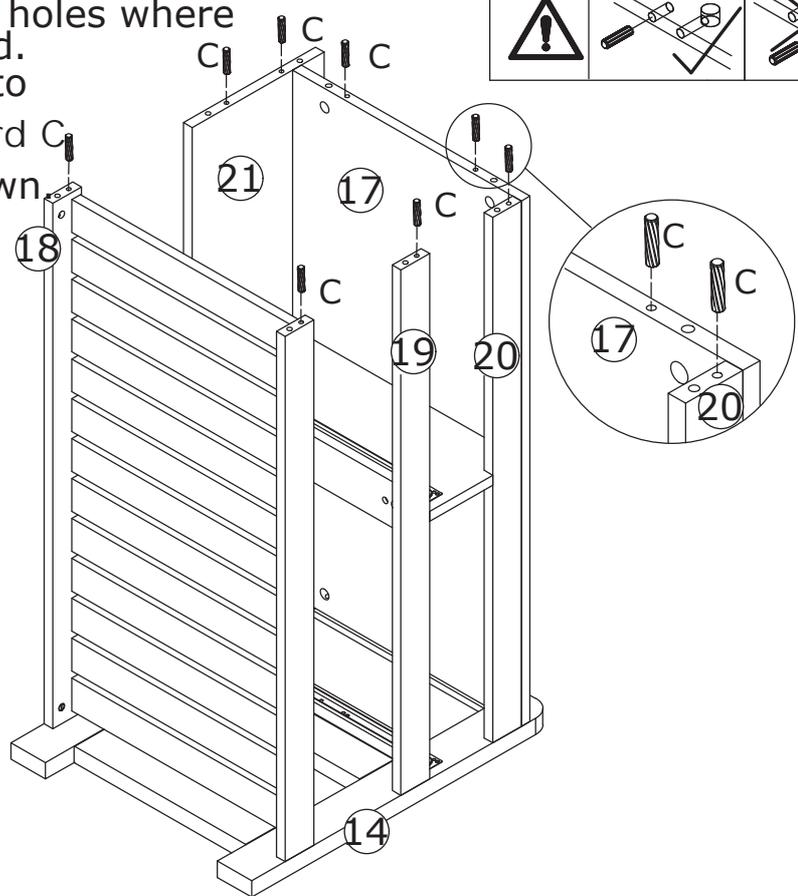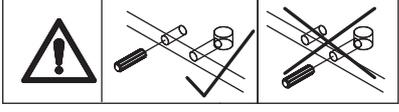


15

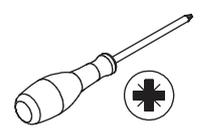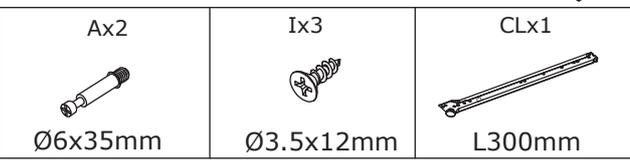






Fix slide rail(CL) to board 13 with screw(I) as shown. Insert quickfit screw(A) into board 13 with a screwdriver.

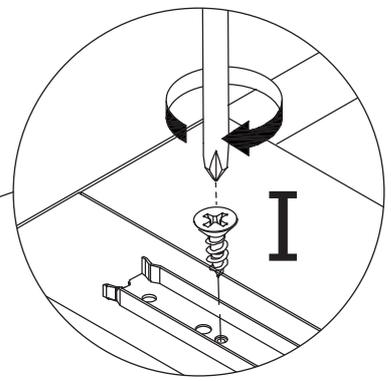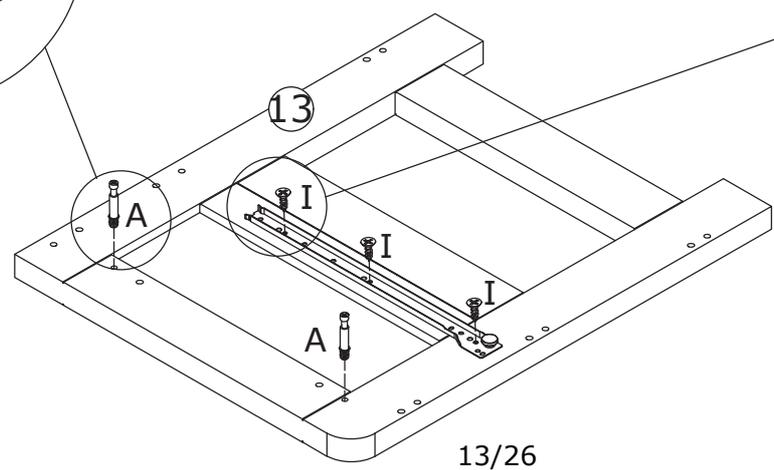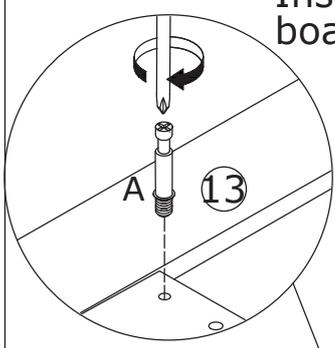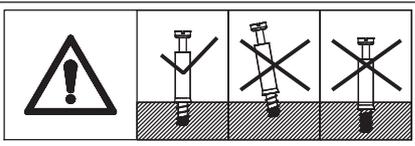

16

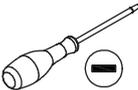Bx2  Ø15x10mm	Ex6  Ø6x60mm	Fx1  M4mm	Gx6  Ø10x10mm	
--	---	--	--	---


Attach board 13 to the component, turn cam locks(B) clockwise to tighten, insert part(G) to corresponding holes, then fix with screw(E).

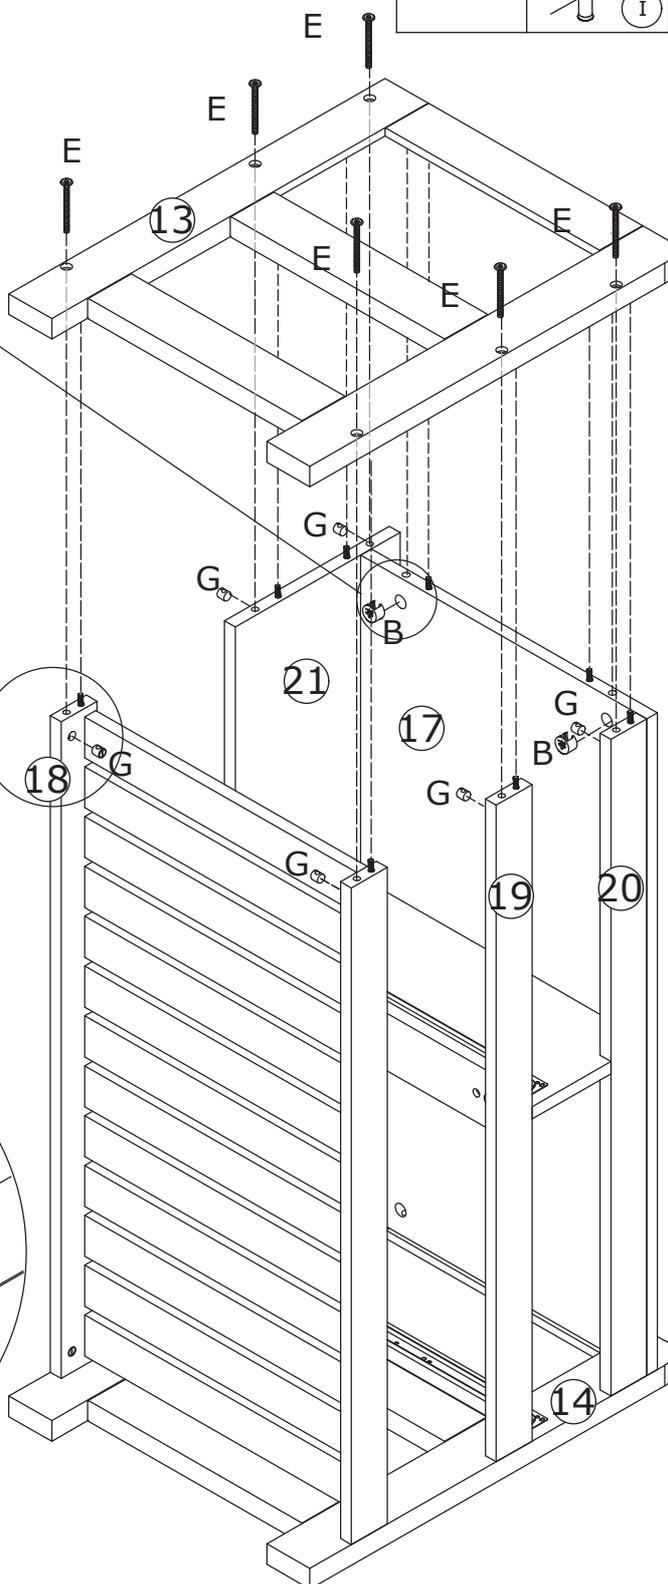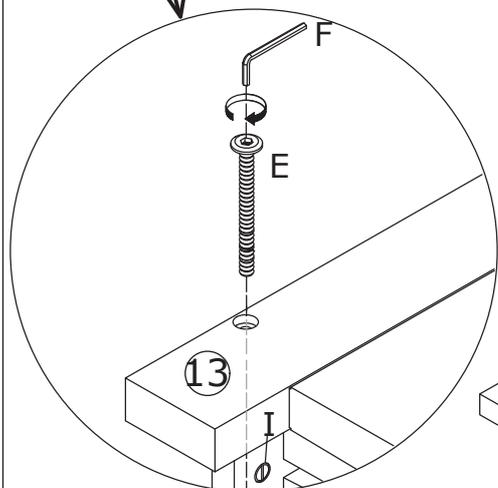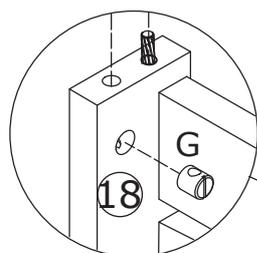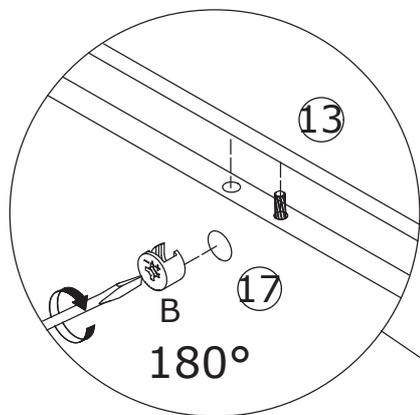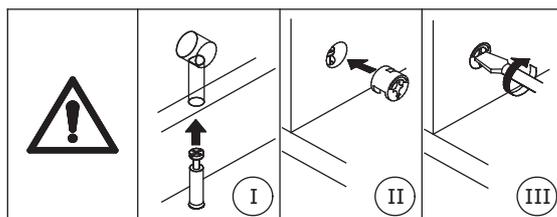

17





Knock foot peg(K) into the bottom.

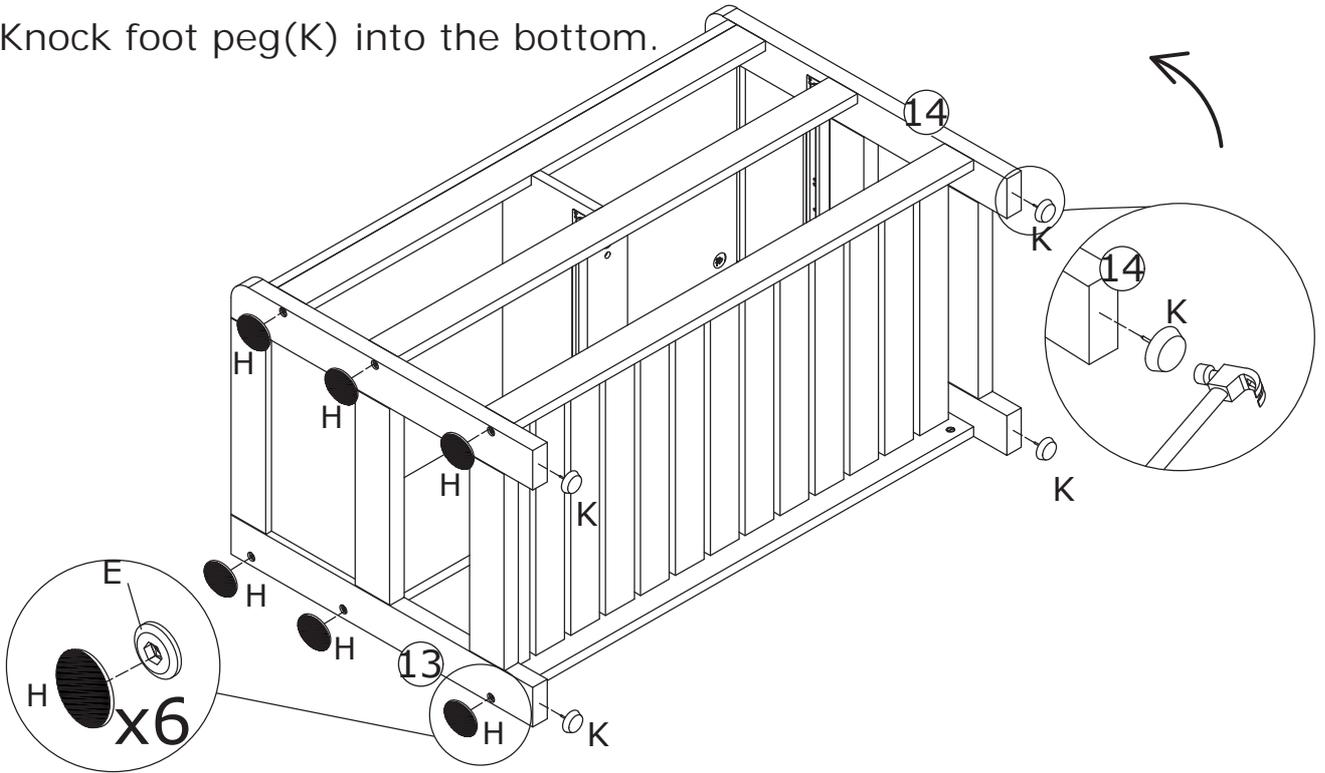

18





Insert quickfit screw(A) into board 8.
Attach board 9 and 11 to board 8 with
wooden dowel(C) as shown.

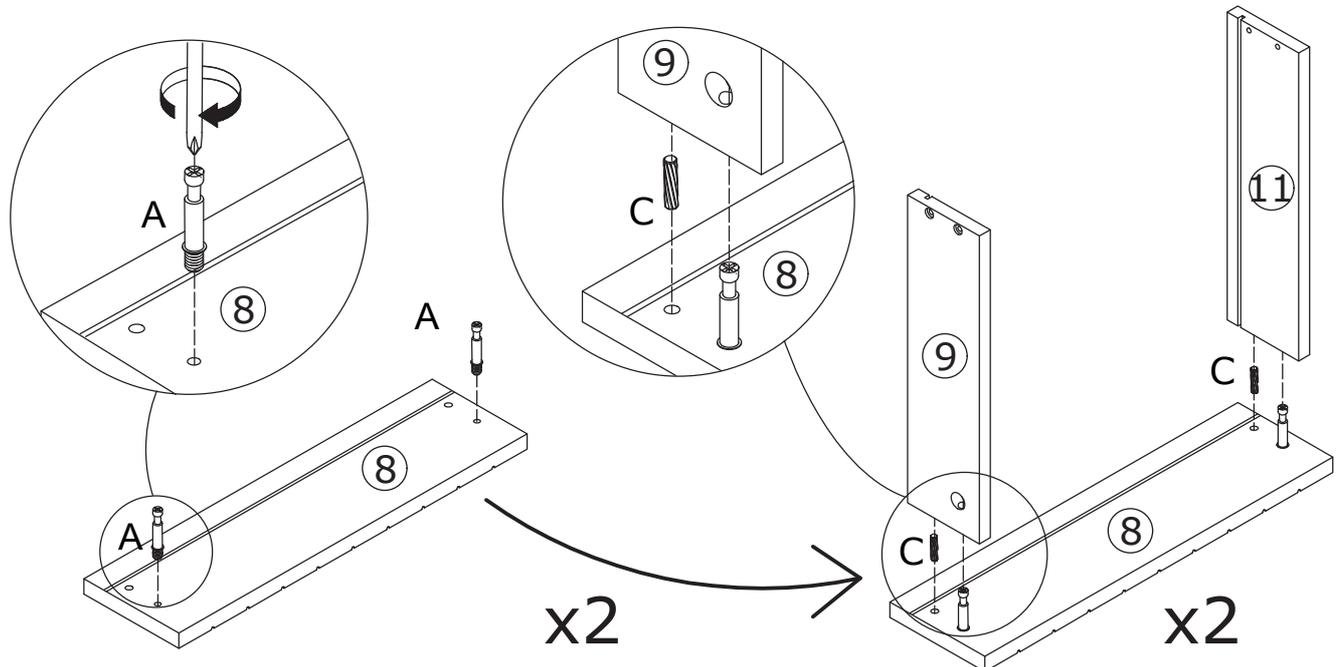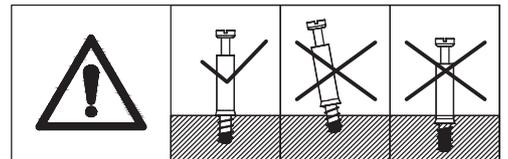

19




Insert cam locks(B) into board 9 and 11 as shown, turn cam locks clockwise to tighten. Slide board 12 into available slots. Attach board 10 to the component with screw(D) as shown.

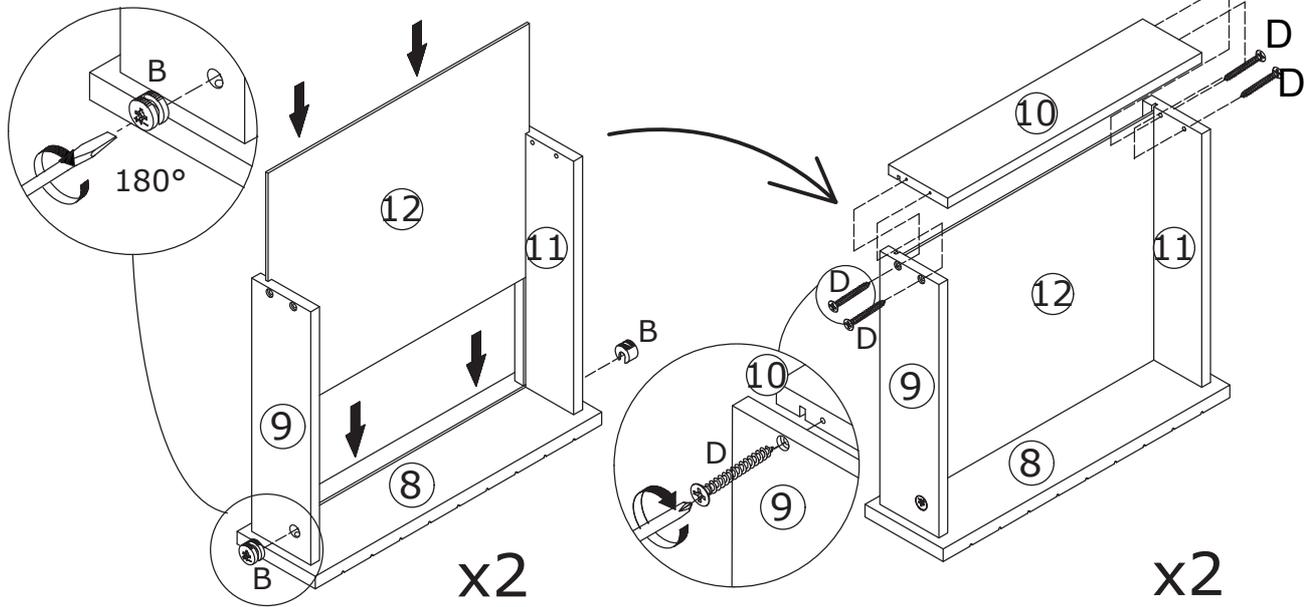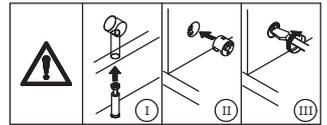


20




Fix handle(O) with screw(P) as shown.


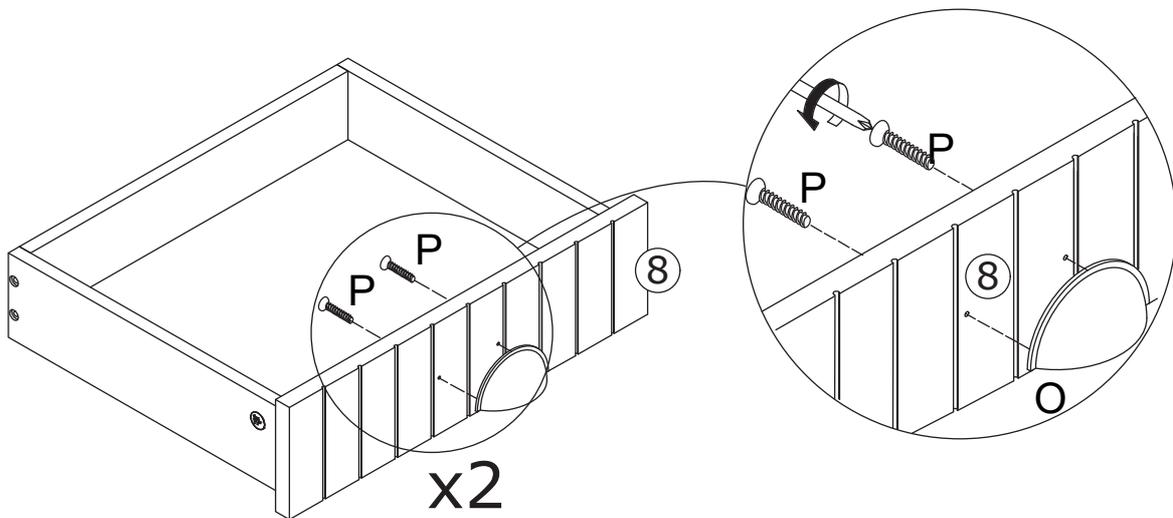


21

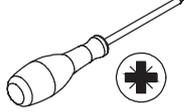
Ix12  Ø3.5x12mm	DLx2  L300mm	DRx2  L300mm	 
--	---	---	--

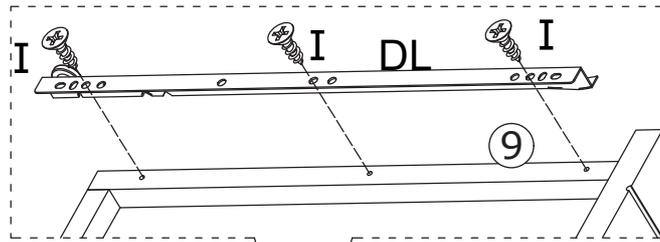



Fix runner(DL) and (DR) to board 9 and 11 respectively with screw(I) as shown.

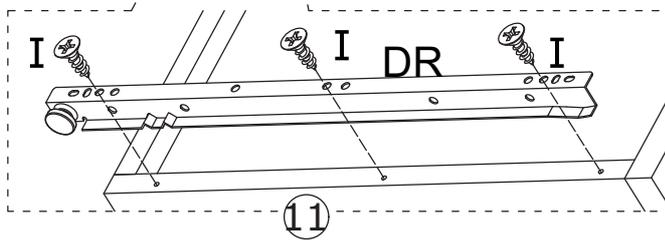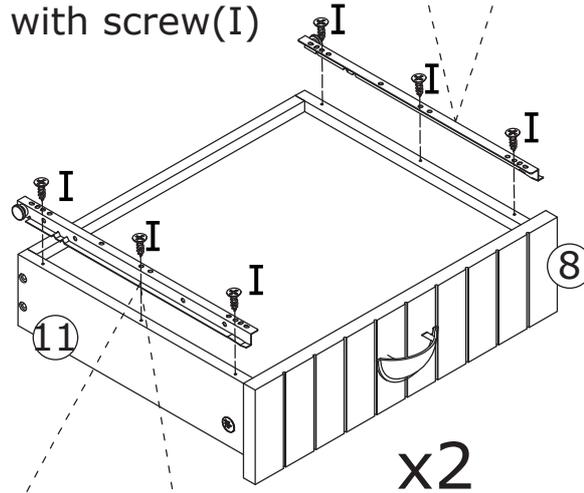

22

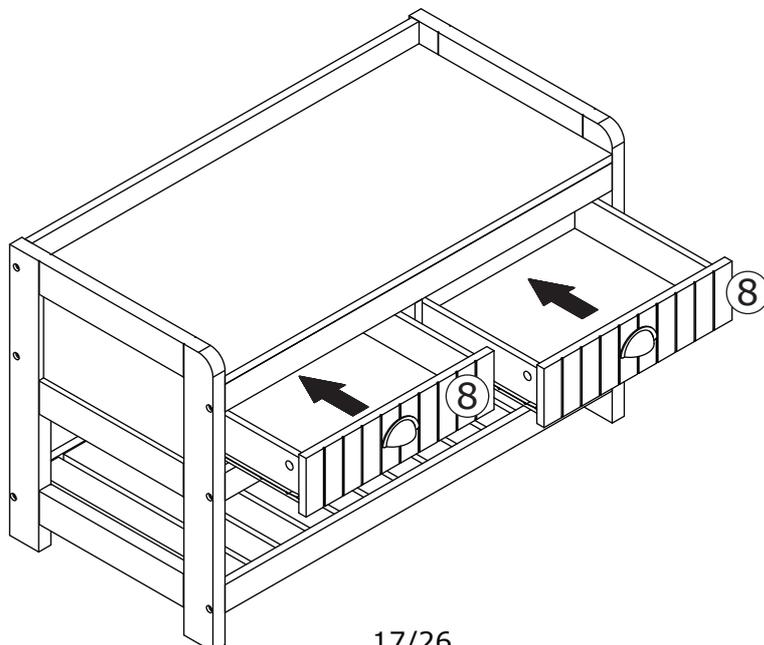



23

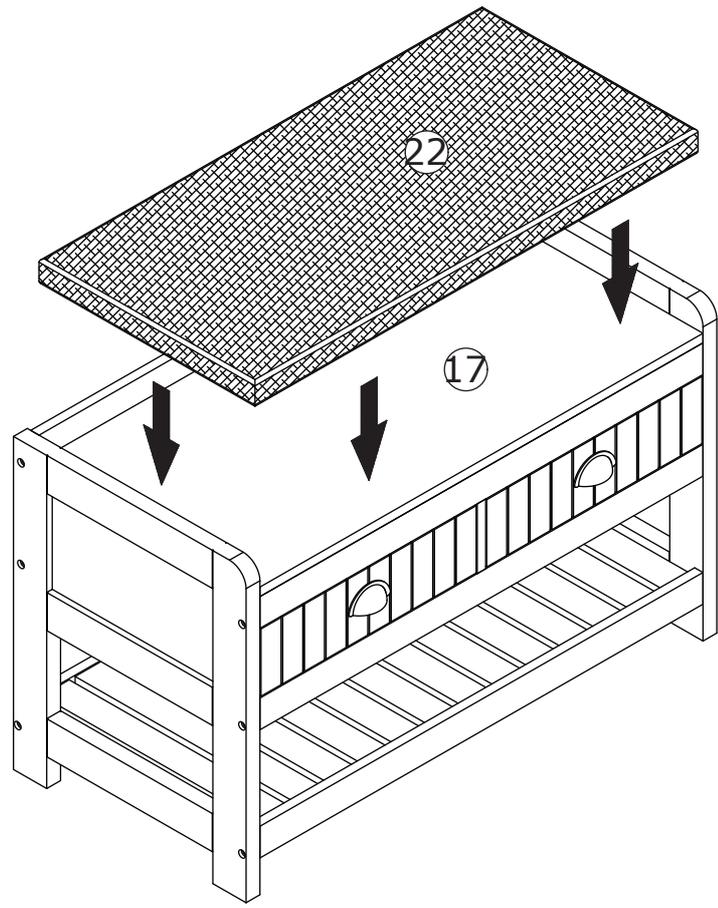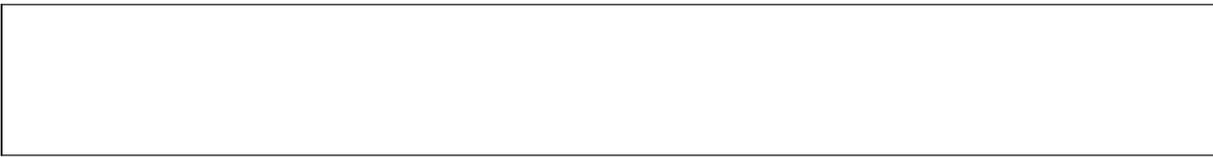

24





Insert quickfit screw(A) into corresponding holes in board 4 with a screwdriver as shown.

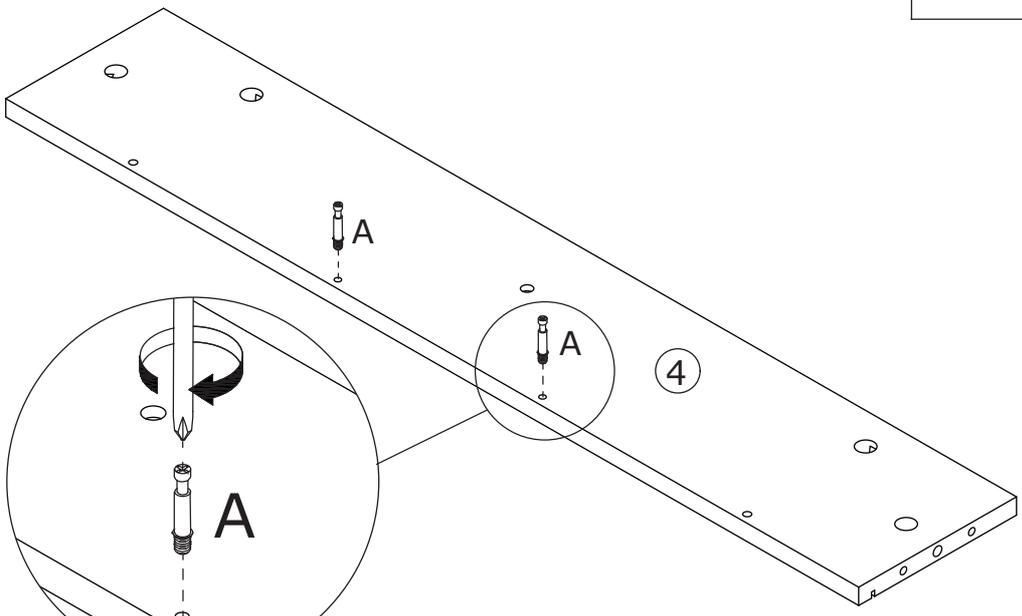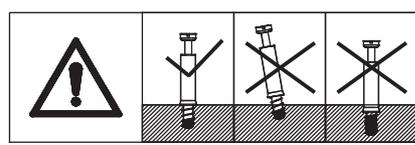

25





Attach board 5 to 4 with wooden dowel(C) and screw(D) as shown.

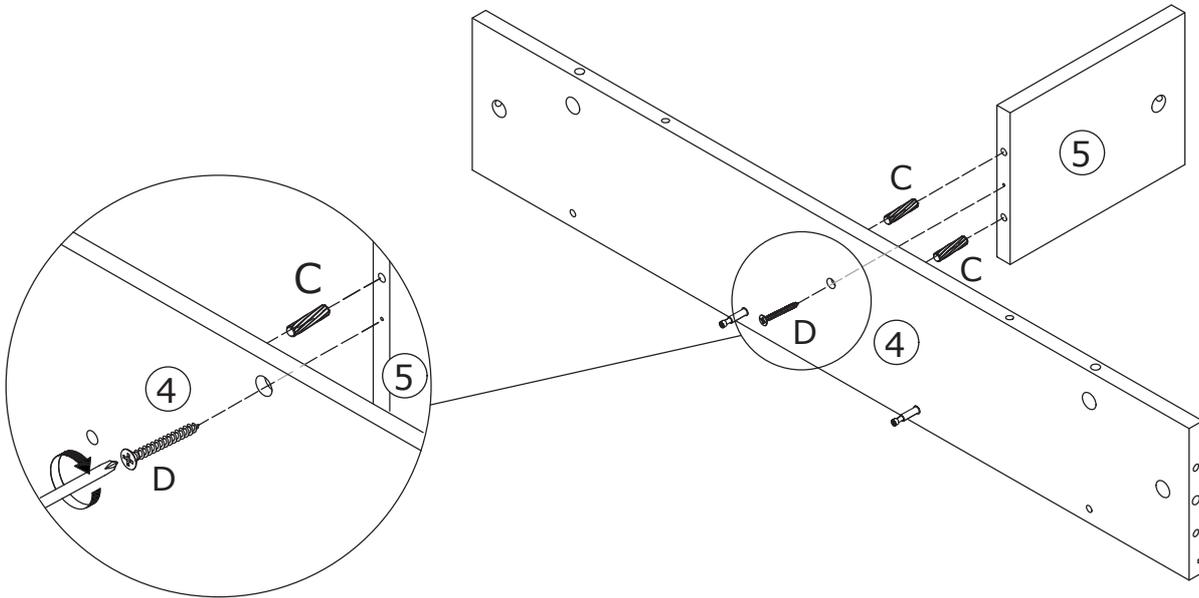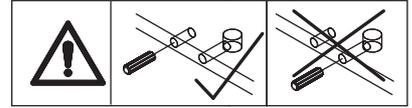


26





Insert quickfit screw(A) into corresponding holes in board 6 with a screwdriver as shown.

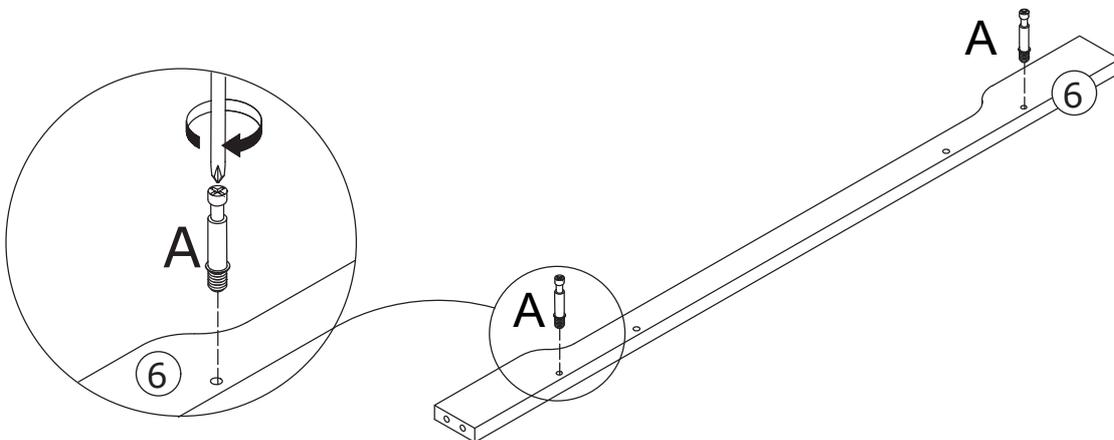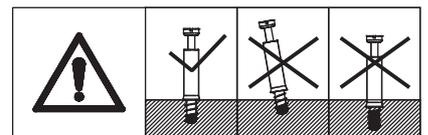

27

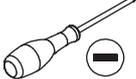Bx2  Ø15x10mm	Cx2  Ø6x30mm	Lx4 	Mx8 	 
--	---	--	---	--



Attach board 6 to 4 with wooden dowel(C), insert cam locks(B) into board 4 as shown, turn cam locks clockwise to tighten. Fix part(L) to board 7 with screw(M) as shown.

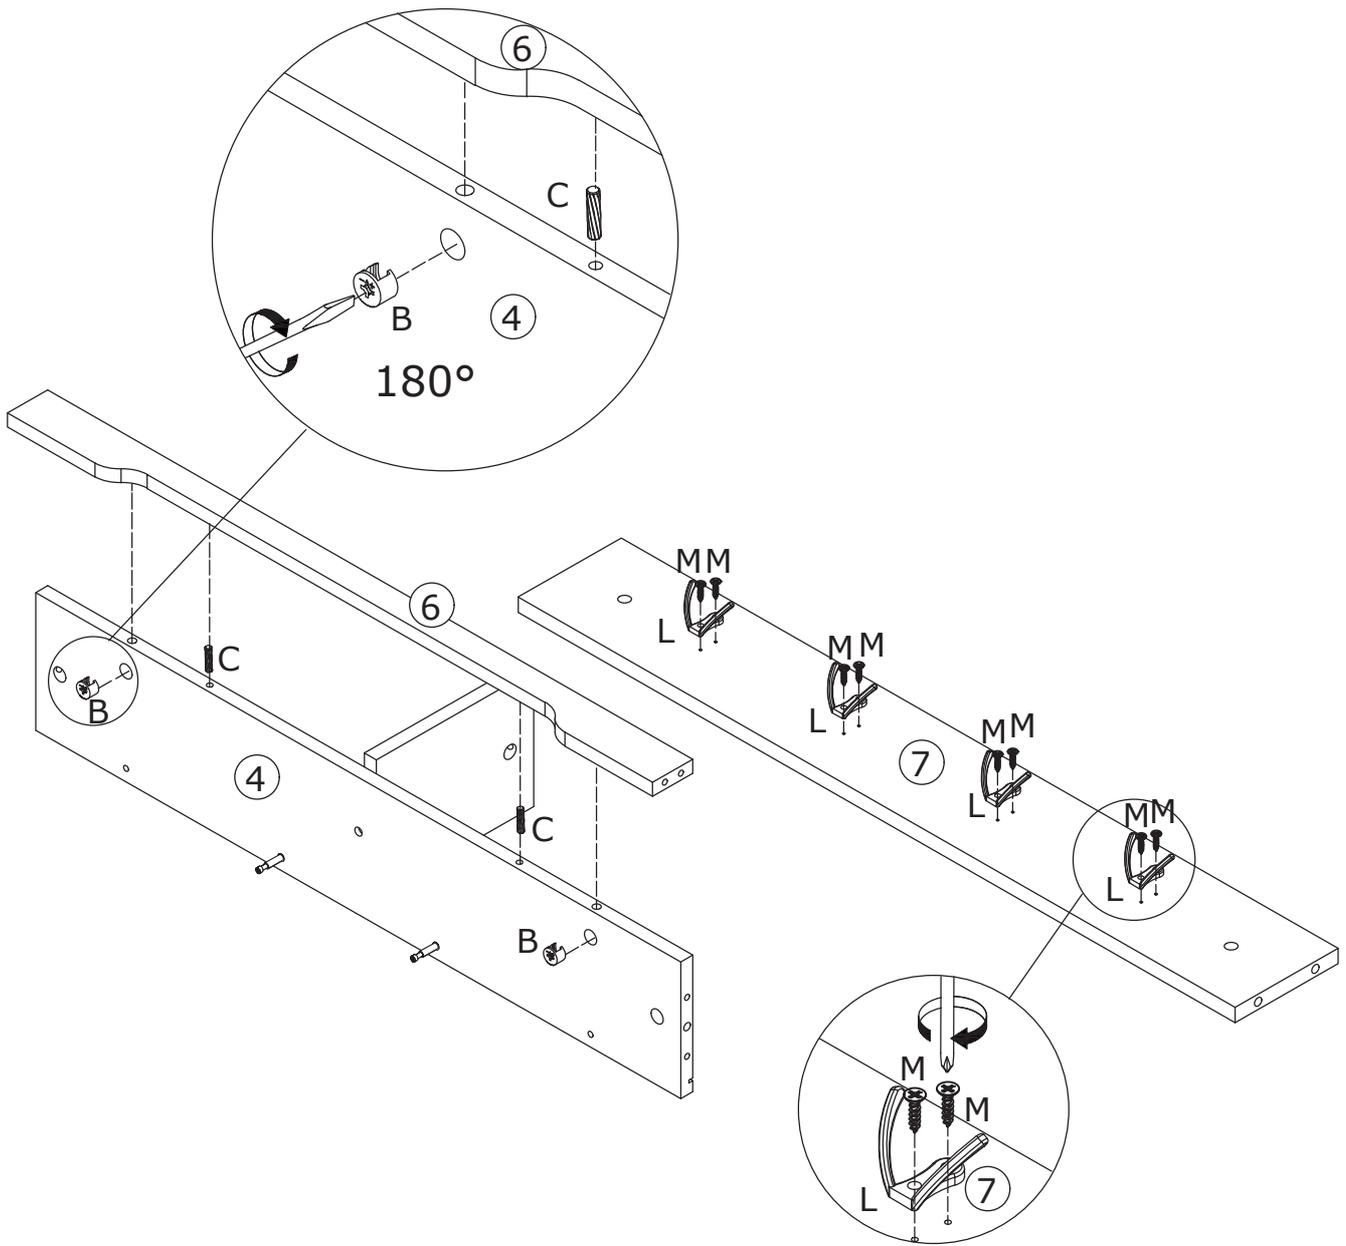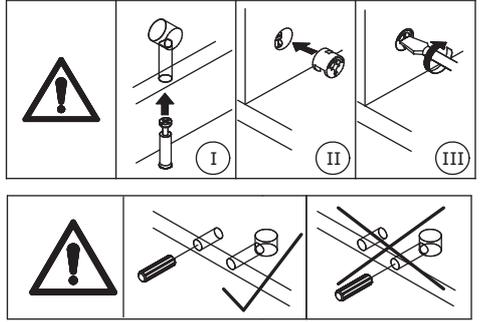

28




Connect board 7 to 4 with wooden dowel(C) and turn cam lock(B) clockwise to tighten as shown.

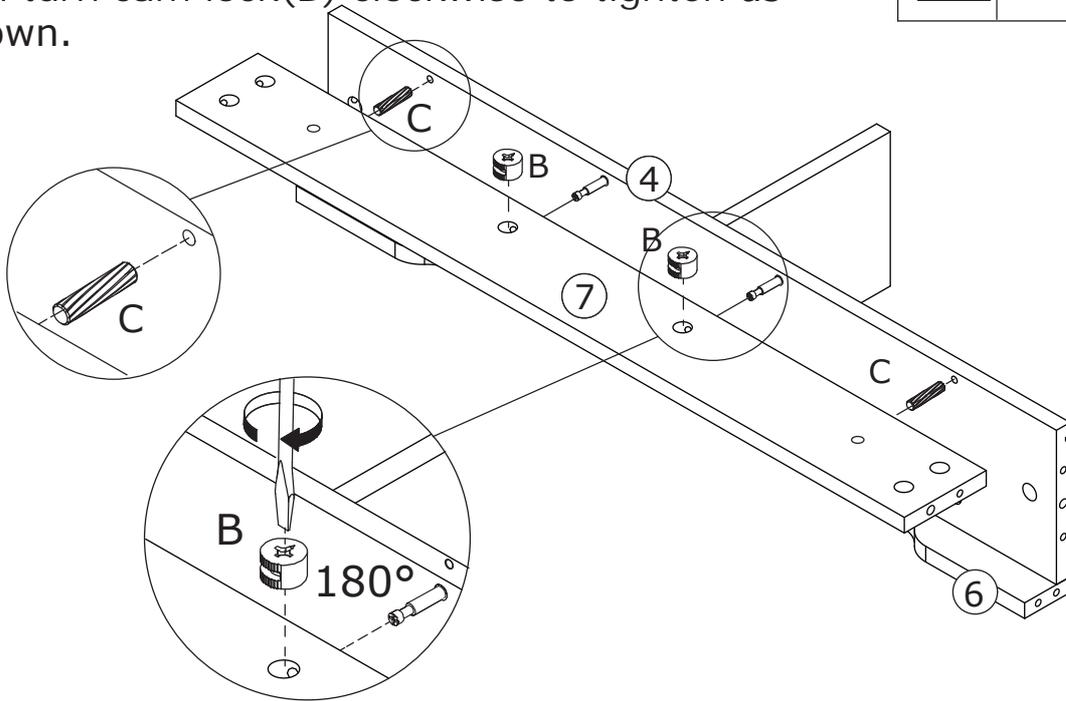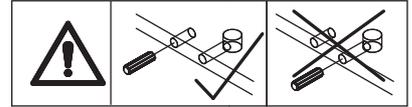


29



Please pay attention to the holes where the accessories are inserted.

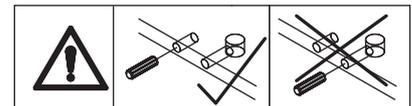


Knock wooden dowel(C) into corresponding holes in board 4 and 6 as shown.


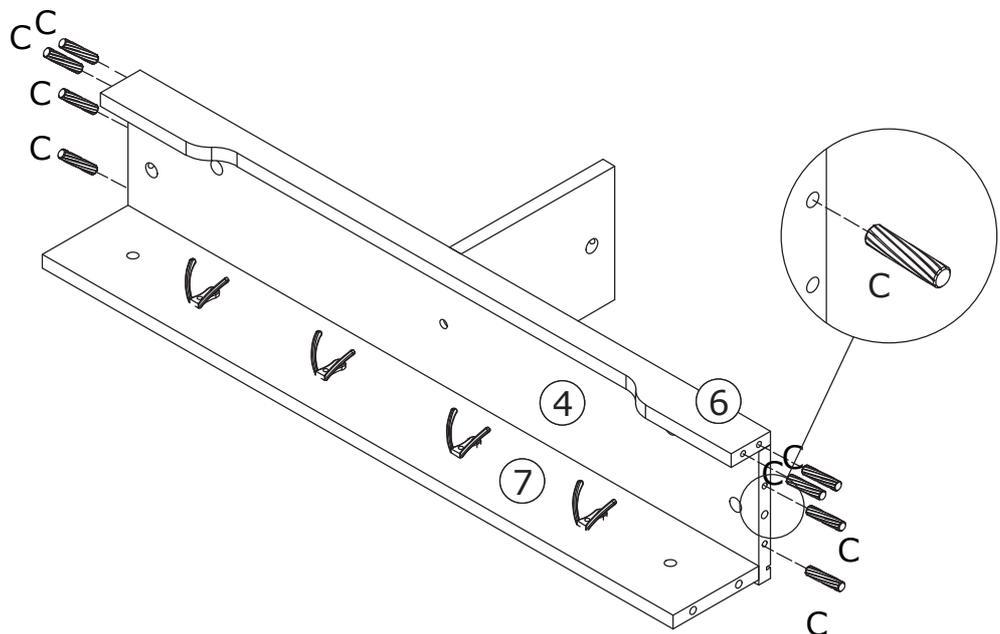


30

Ax6
Ø6x35mm

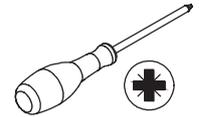


Insert quickfit screw(A) into corresponding holes in board 2 and 3 with a screwdriver as shown.

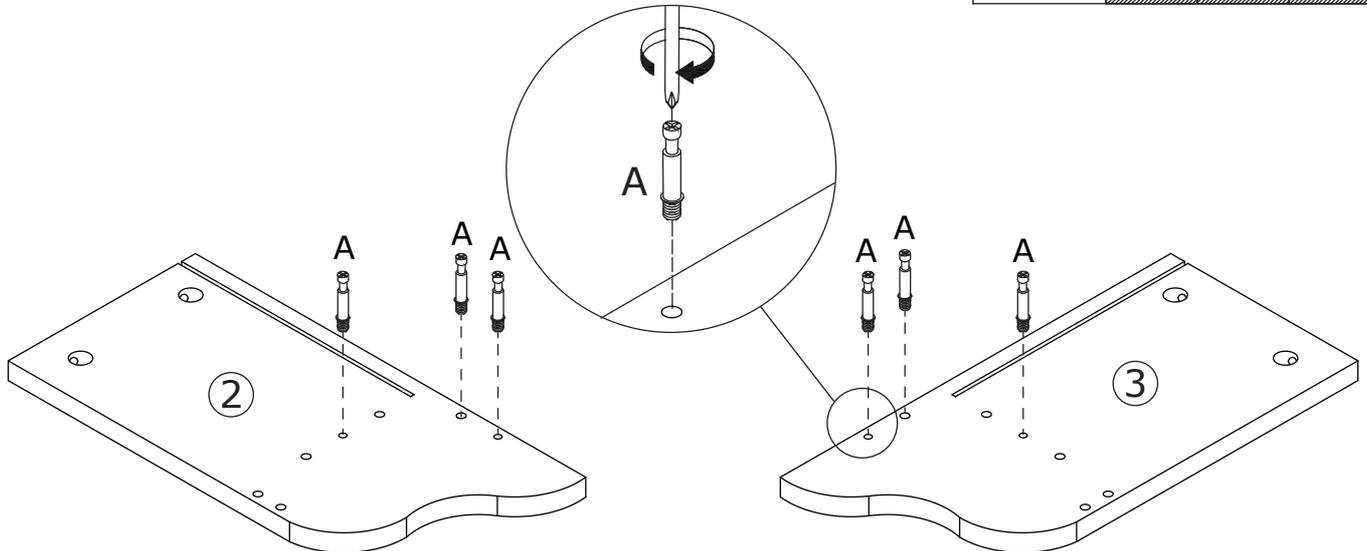
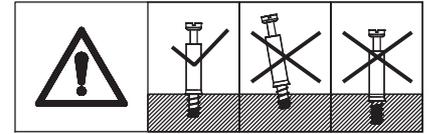


31


Bx2
Ø15x10mm

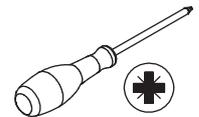



Attach board 2 and 3 to both side of the component and turn cam lock(B) clockwise to tighten as shown.

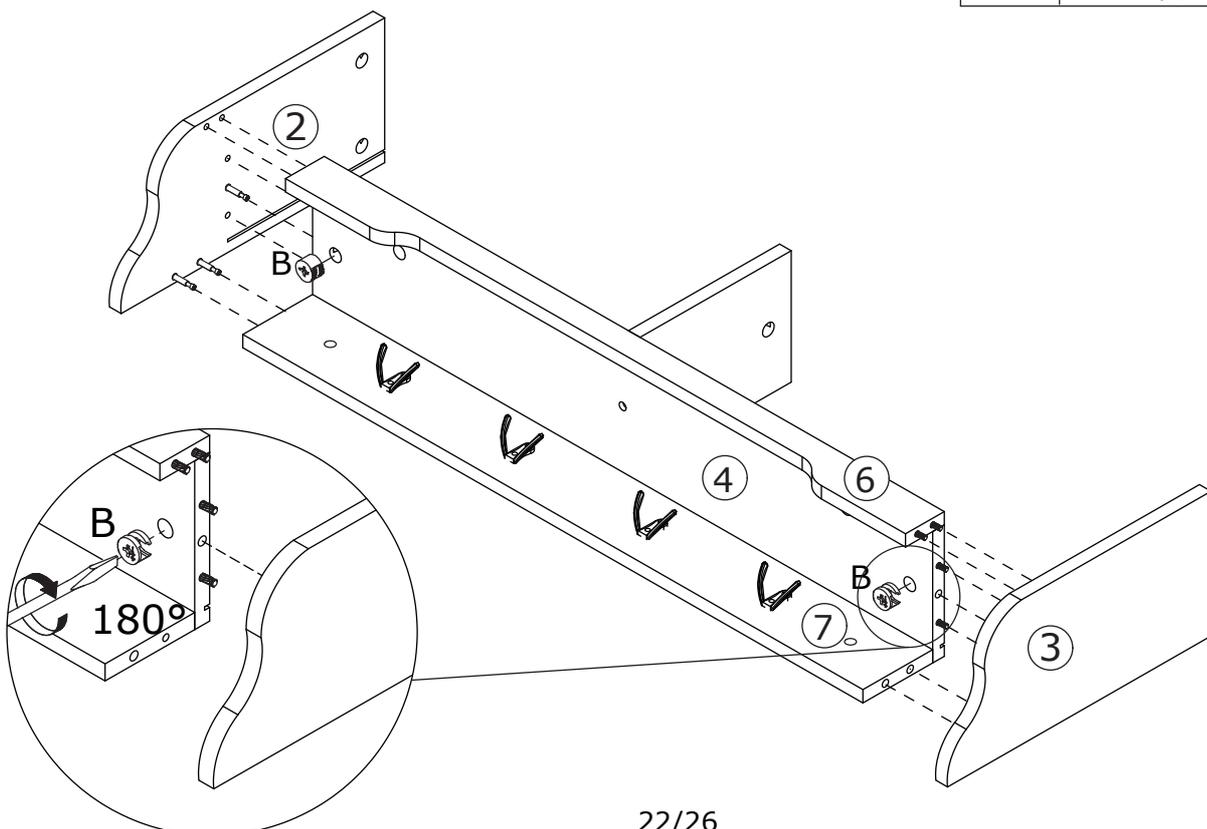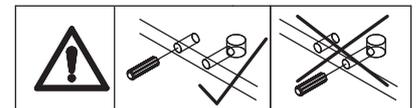

32

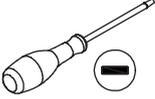Bx4  Ø15x10mm	
--	---


Insert cam locks(B) into board 7, and turn clockwise to tighten as shown.

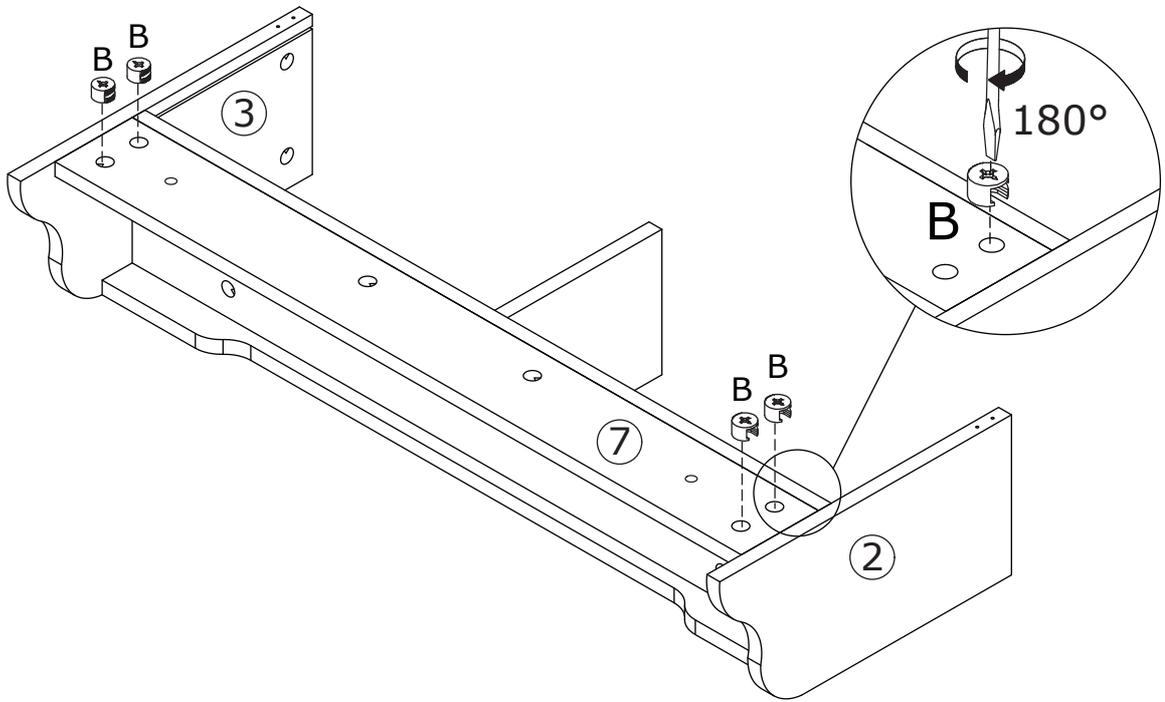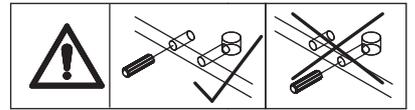


33





Slide board 23 into the slots of board 2 and 3 as shown.

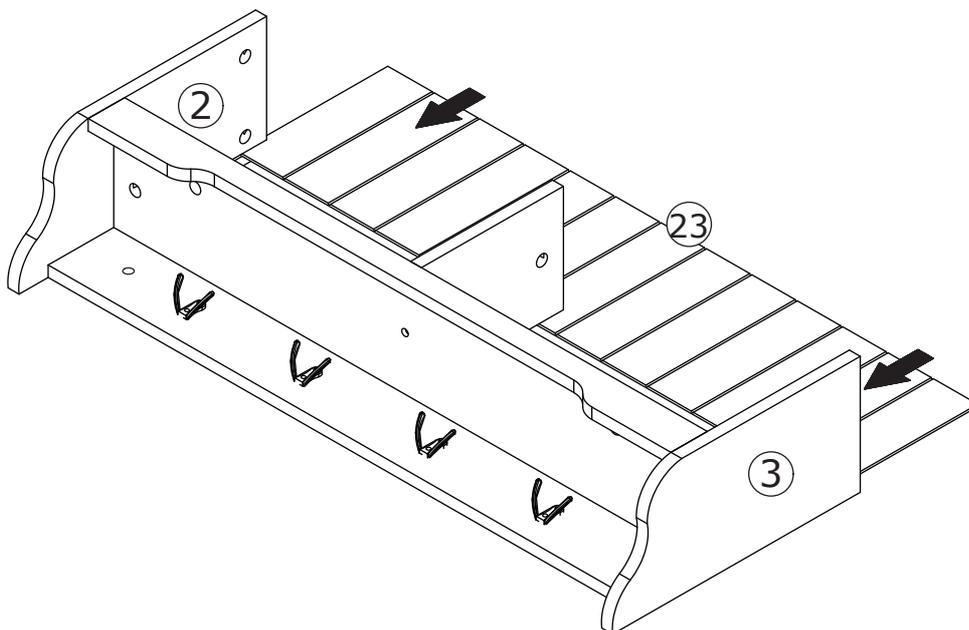


34

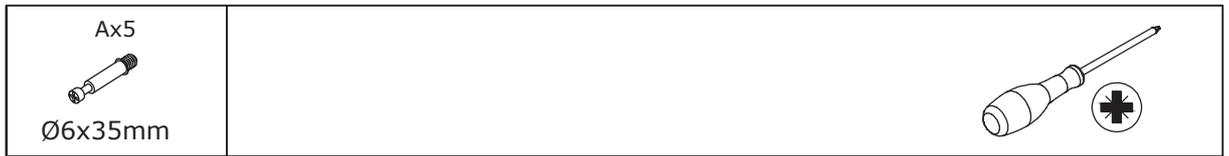



Insert quickfit screw(A) into corresponding holes in board 1 as shown.

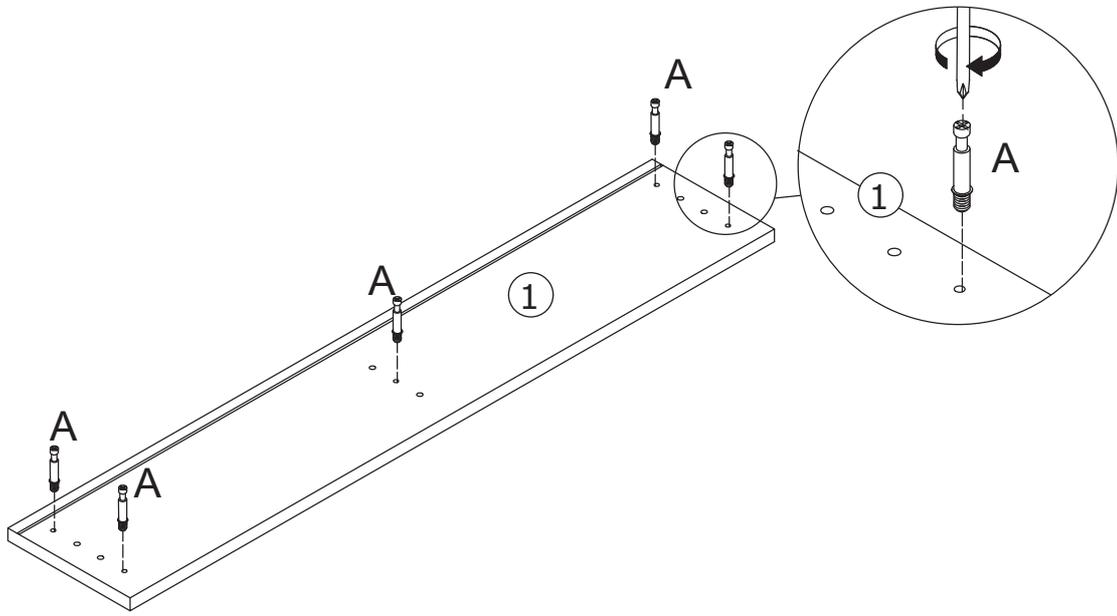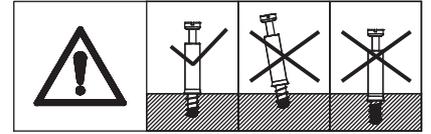


35

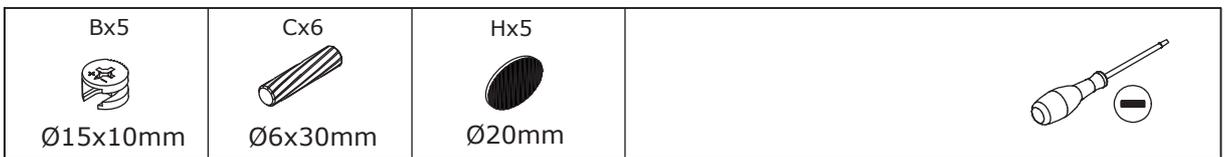


Cover board 1 to the top of unit, insert cam locks(B) into board 2,5 and 3 as shown, turn cam locks clockwise to tighten.

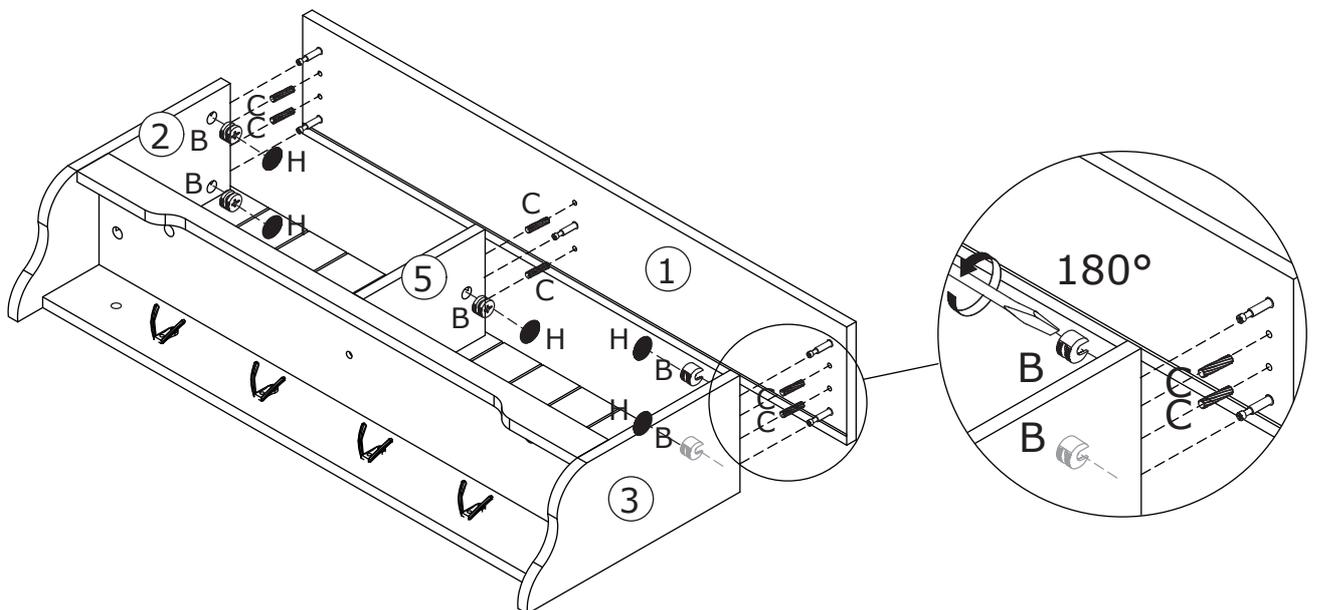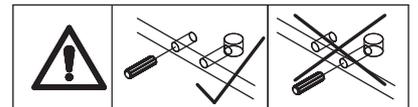




36

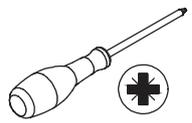Mx6 	Nx2 	
--	--	---


Fix part(N) to board 3,1 and 2 with screw(M) as shown.

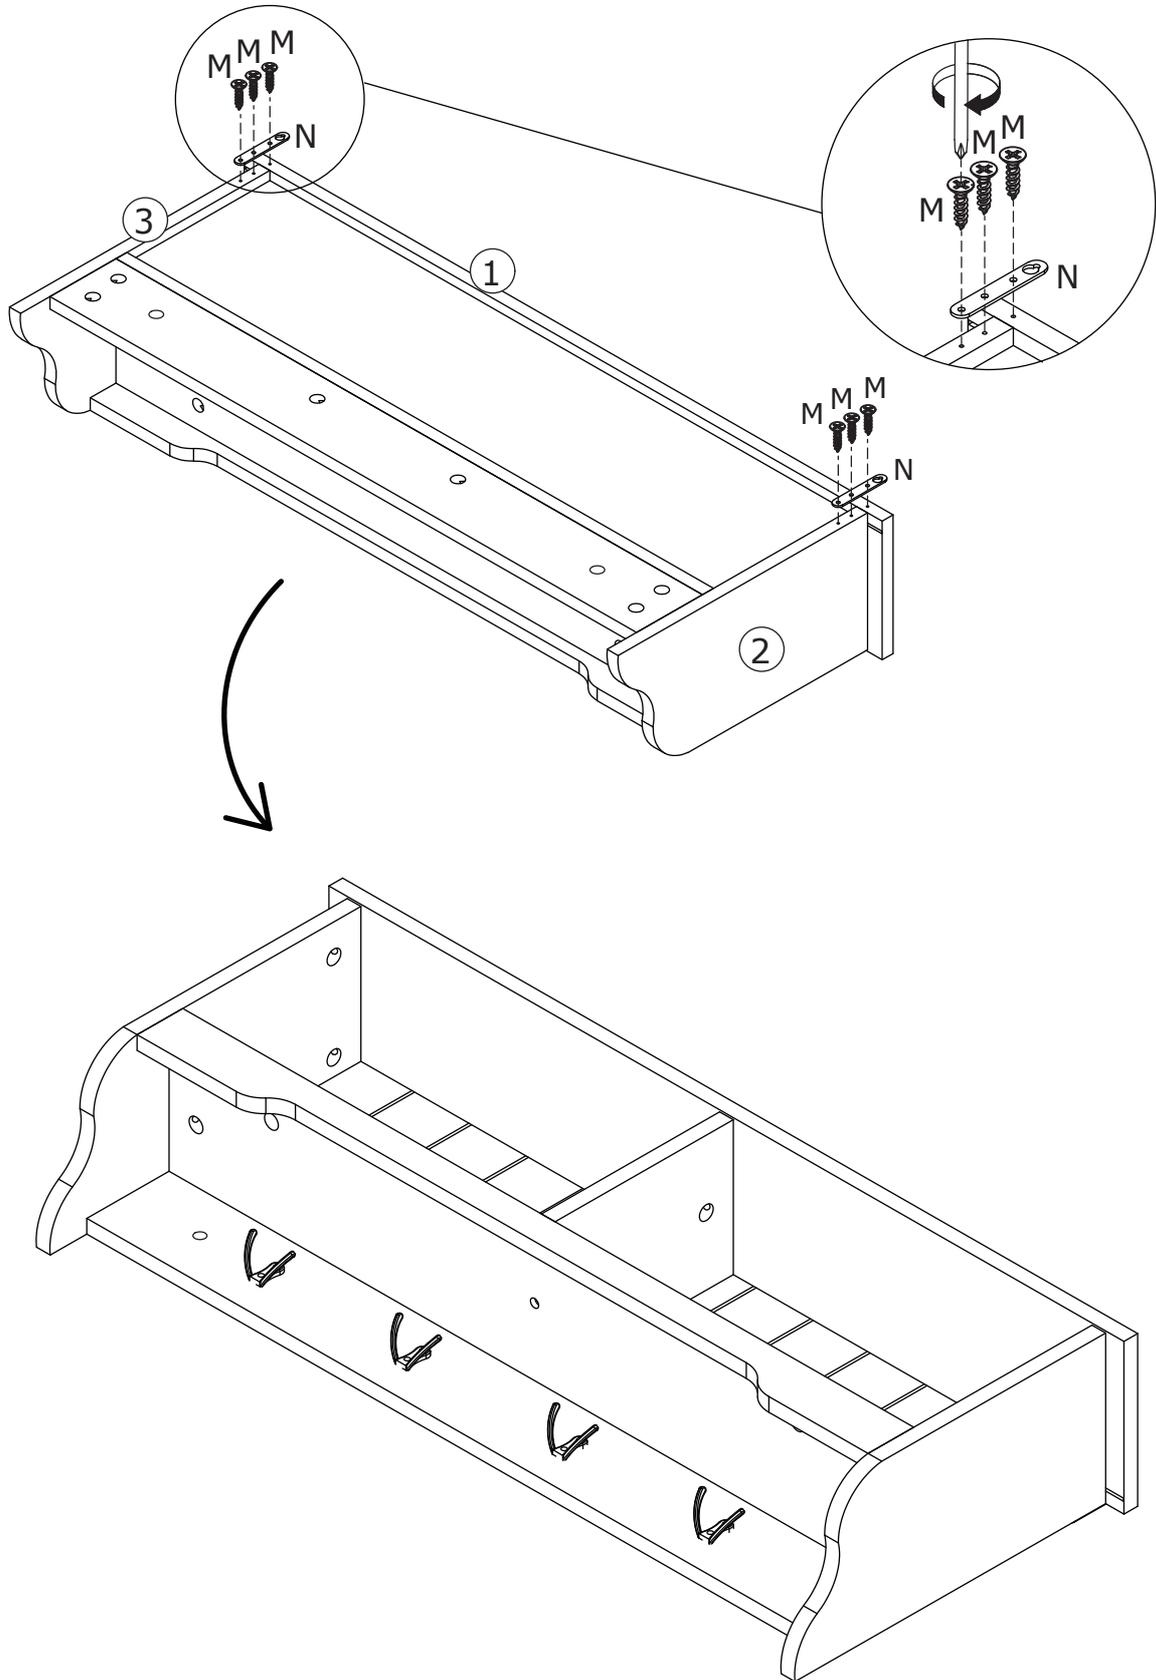

37

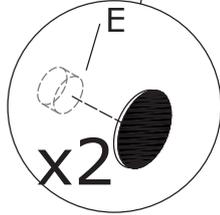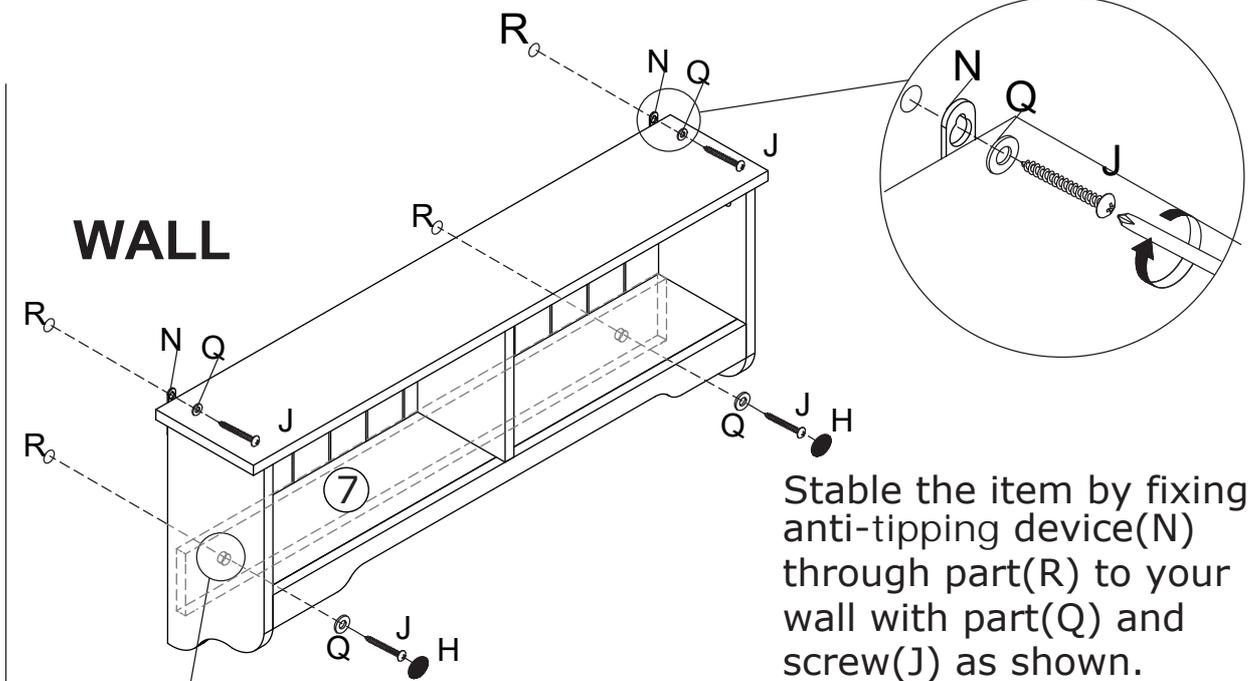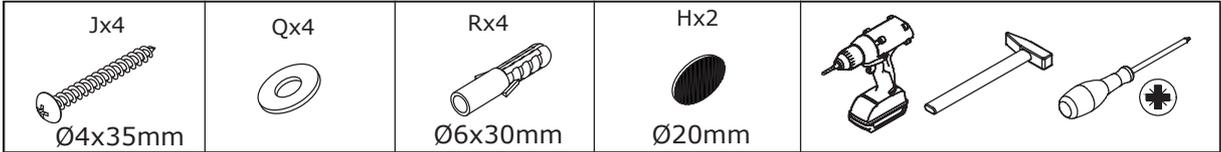

Attach part(H) to cover the hole positions.

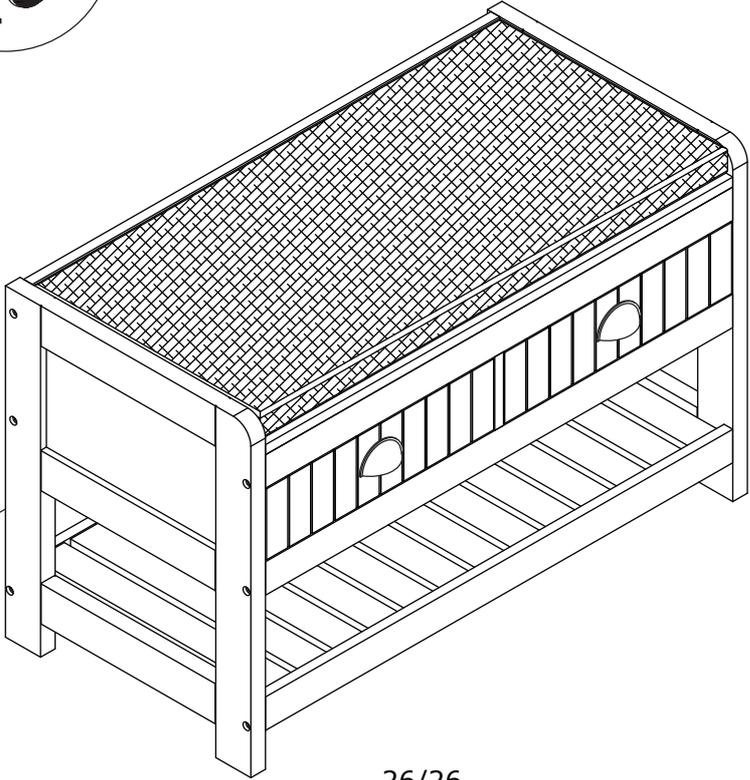

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer. In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.