TOOLS REQUIRED



Phillips Screwdriver

(Not Included)



Hammer (Not Included)



2 - Persons Recommended

ASSEMBLY RATING



The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

VERSION # 19-03-05



	Are you missing anything?	Check out our Quick Tips!
	Double-check all parts, hardware and accessories listed on Page 6 are accounted for.	We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!
1 1	Should we send any replacements?	Prep Time!

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





Suitable Location

Assembling near the area of the intended location is highly recommended.





Sufficient Space

Make sure you have enough space to move around during the assembly.





Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.





Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE



FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.



Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.



After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

CAM LOCK FASTENER ASSEMBLY INSTRUCTIONS

Note:


Every cam lock bolt must have a cam lock connector in order to fasten the parts together.




cam bolt cam I




cam lock screwdriver

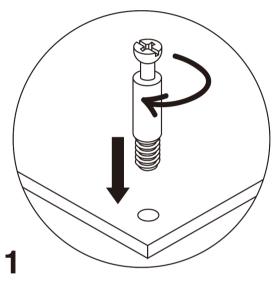


Screw the cam bolt into panel.

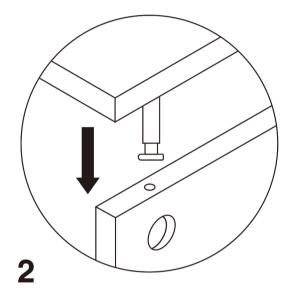

Insert the cam bolt into the bolt hole of joint panel.

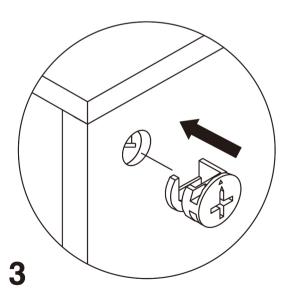

Align the cam lock with its side opening (or arrow) pointing to cam bolt.

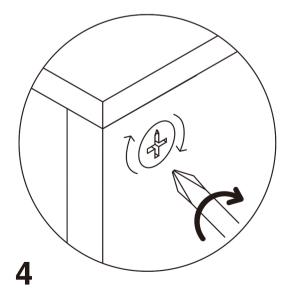

Turn the cam lock clockwise gently until it will not turn any more.

VANITY TABLE AND STOOL SET





6 2PCS

(7) 1PC

8 4PCS 0.59" (h)

- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

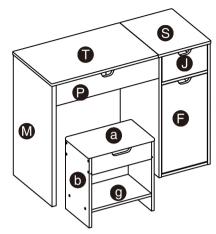

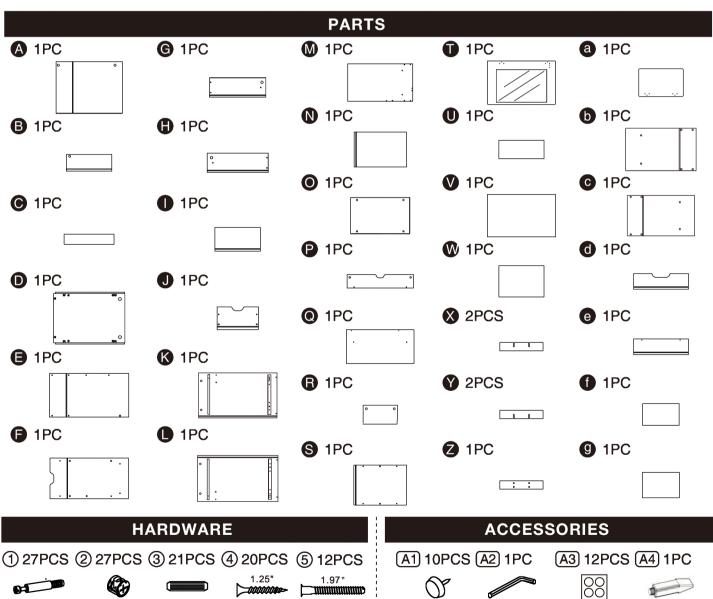


9 4PCS 0 24PCS


GET READY


Please group boards as below.

•	1PC	M 1PC	1PC	P 1PC	() 1P0	
	°			0	·	
(3)	1PC (N 1PC	3 1PC	1PC	① 1PC	
			° °			Body
0	1PC	⊗ 2PCS	Y 2PCS	2	1PC	
				1		Mirror /Shelf
A	1PC	B 1PC	⊚ 1PC	D	1PC	
	0 0	٥			• • • • •	
•	1PC	1PC	V 1PC			
						Drawer
G	1PC	1PC	D 1PC	1PC	W 1PC	Brawor
		•				Drawer
a	1PC	b 1PC	© 1PC	0	1PC	
	.,,.	•		•		
е	1PC	1PC	9 1PC			
						Chair

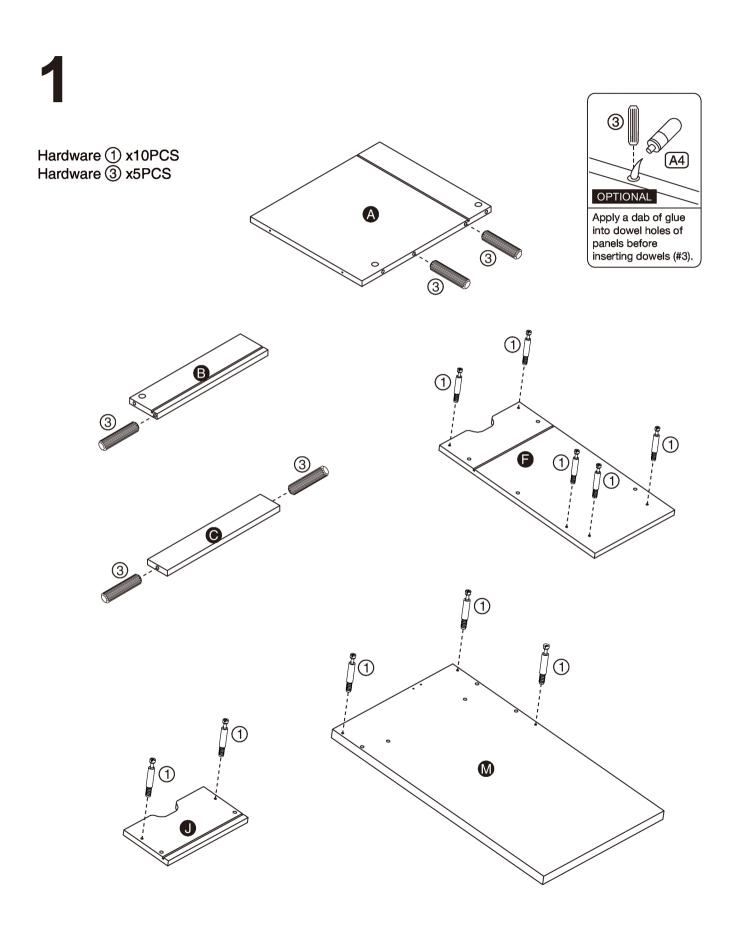

2

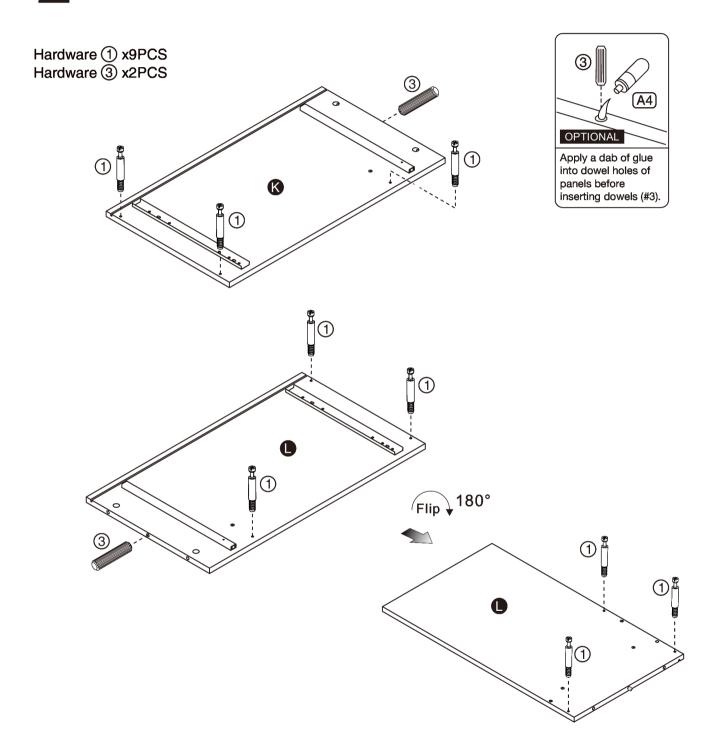

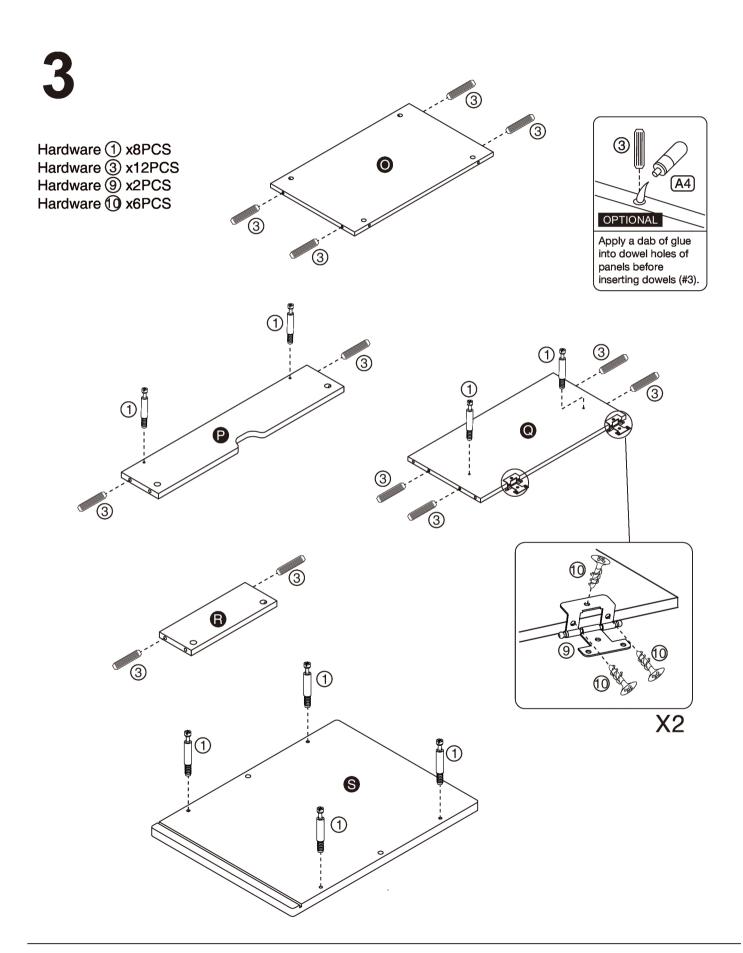

4

Part (x1PC)
Part (x1PC)


Part x1PC


Hardware ② x4PCS


5


Part x1PC Part x1PC

Hardware ② x6PCS

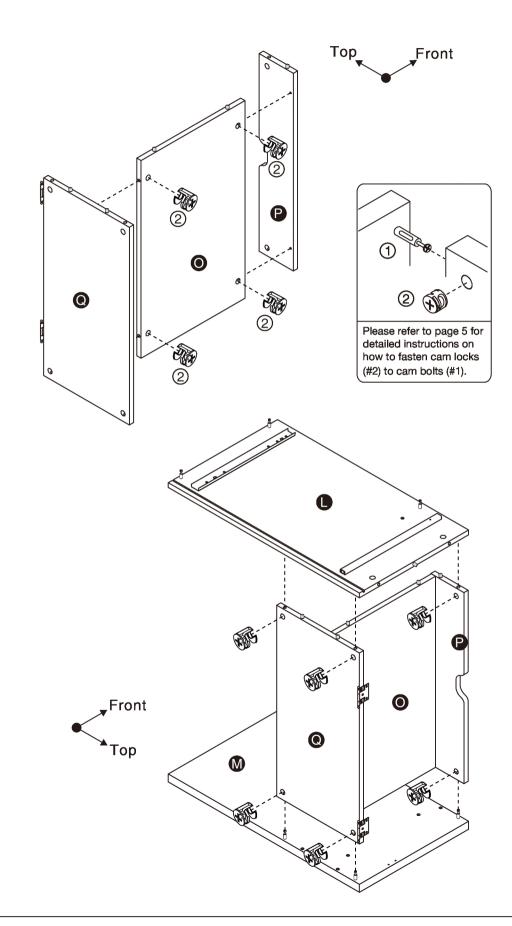

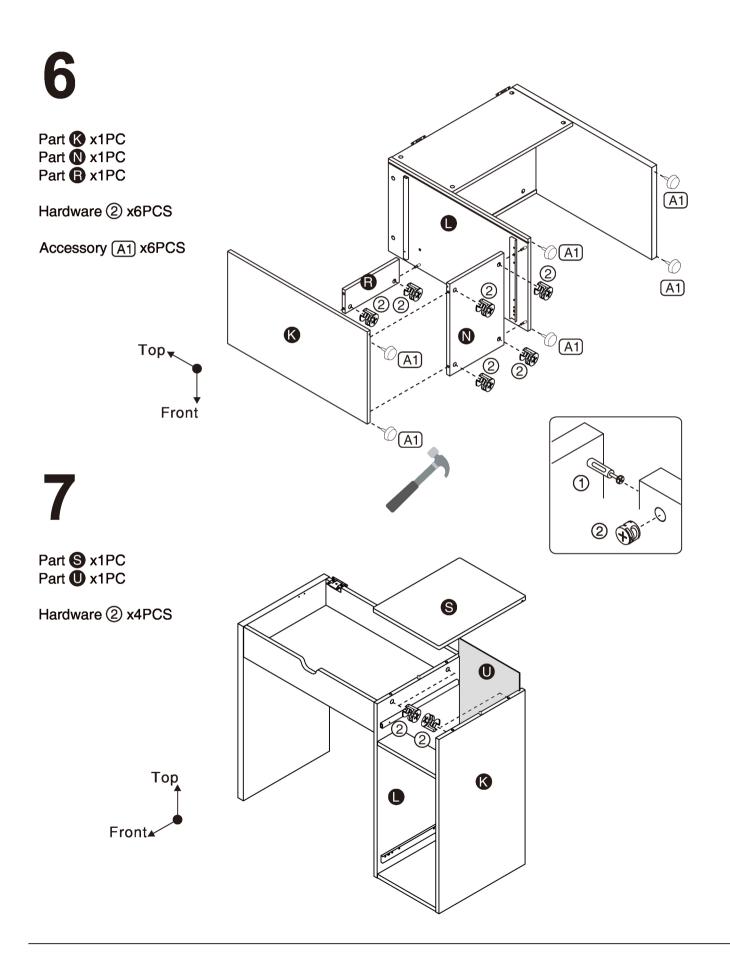

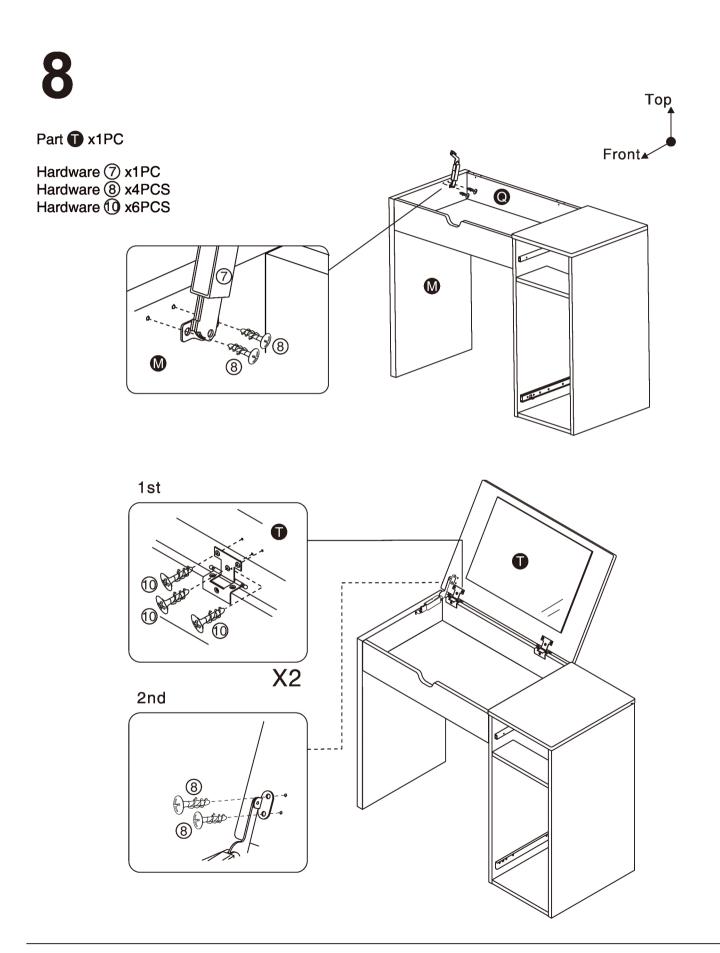


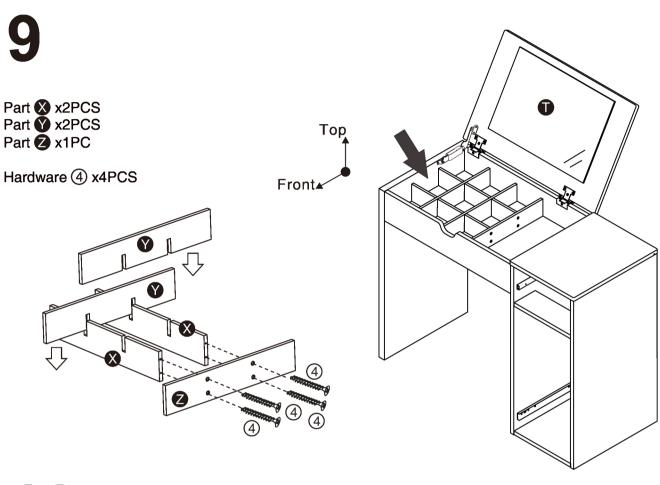

10

Part **B** x1PC Part **E** x1PC


Hardware 4 x2PCS

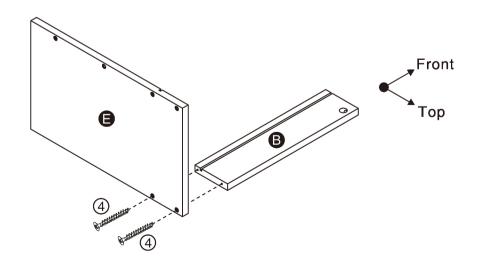

11


Part A x1PC Part C x1PC Part x1PC


Hardware 4 x4PCS

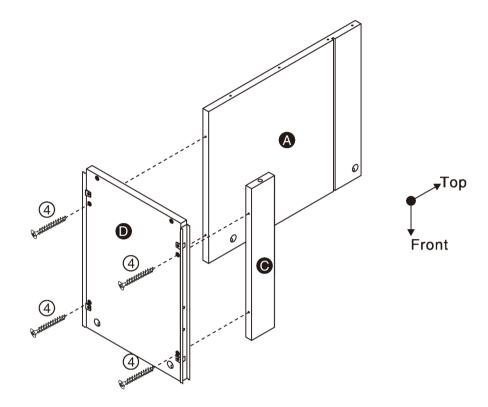


12

Hardware 4 x6PCS

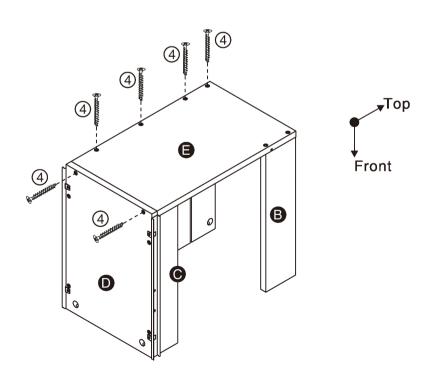

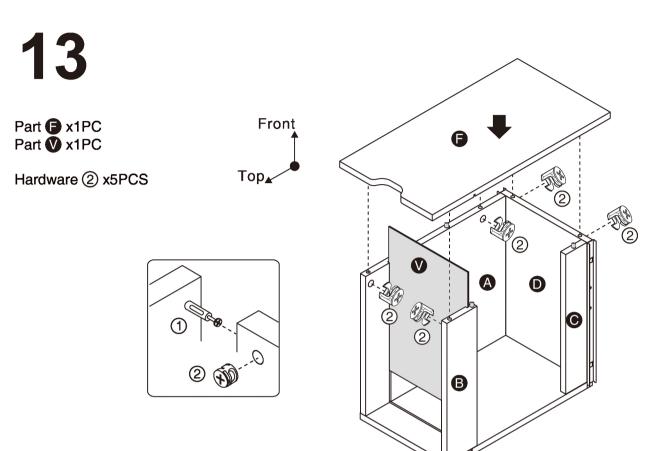


14

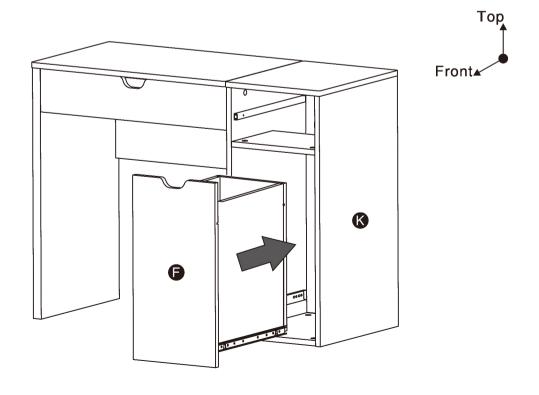

15

Part © x1PC Part ① x1PC Part ① x1PC Part ① x1PC Part ② x1PC


Hardware ② x2PCS Hardware ③ x2PCS Hardware ④ x4PCS

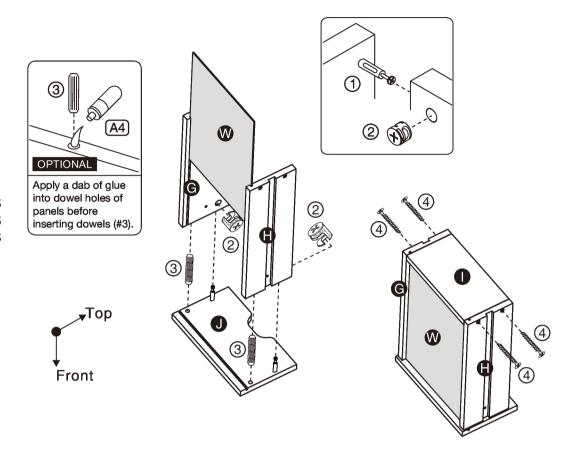


16

 Hardware 6 x2PCS






Fully extend drawer rails then align the rail's smallest hole to the drawer slide panel's holes. Secure with bolts (#6).

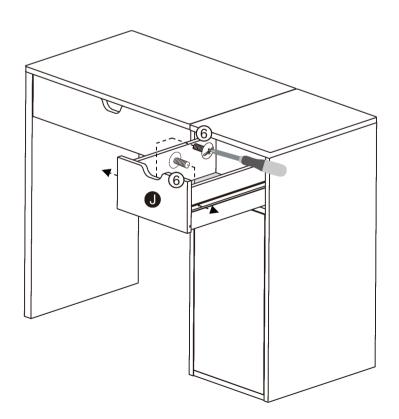

17

Hardware (9) x2PCS Hardware (10) x6PCS

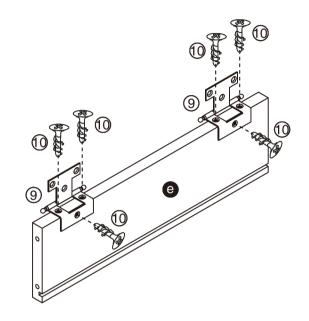

18

 
Part **b** x1PC Part **d** x1PC


Part @ x1PC

Part 9 x1PC

Hardware ⑤ x6PCS

Accessory A2 x1PC Accessory A3 x6PCS



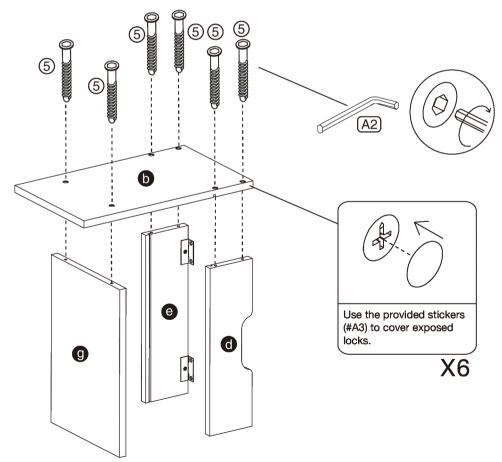


19 Part 1 x1PC е Front Top 6 (A2) (5) (5) (5) 20 (5) (5) (e) C Part x1PC A1 0 Hardware (5) x6PCS Accessory (A1) x4PCS A1 O Accessory A2 x1PC Use the provided stickers Accessory (A3) x6PCS (#A3) to cover exposed X6 е g A1 $A1 \bigcirc$

21

Part a x1PC

Hardware 10 x6PCS

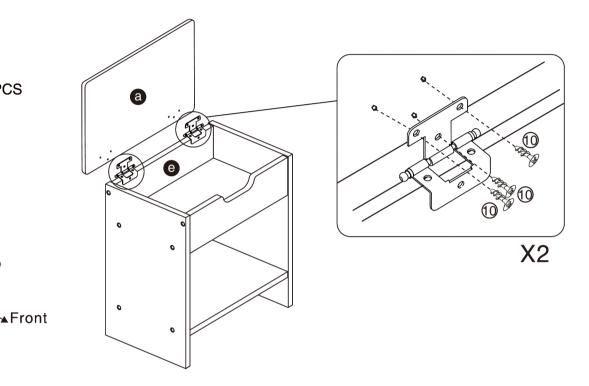

22

ASSEMBLY COMPLETED

Top



Please ensure the furniture rests on an even and flat surface. If the produst wobbles or feels loose, double-check all bolts and/or screws are properly tightened and

✓ Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

