

Safety Precautions

- **To prevent damage do not drop the LED Open Sign. Impact will damage acrylic and electronics.**
- **Do not directly run water over the LED Open Sign. It will result in electronic failure. Use dry cloth for removing dust.**
- **Do not exert heavy pressure or drop anything on the LED Open Sign.**
- **If power cord is damaged, do not use – either contact manufacturer for replacement or purchase a new cord.**

Troubleshooting

Sign doesn't light up:

- Check for loose connections. If loose, properly fit the pieces together.
- Make sure power cord is fully plugged into socket.

Remote not working:

- Gently open the battery compartment to check if the battery is seated properly. If battery needs to be replaced, use a 3V CR2032 battery.
- Make sure the remote control and USB receiver are within pairing distance and free from obstruction.