

ALPINE LED WRITING BOARD INSTRUCTIONS

www.alpineindustries.com | ©2018

Parts list:



Writing board



Power adapter
(with USB switch if applicable)



Towel



Markers

(2 or 8 - depending on the model)



Remote

(excluding in Alpine #496-01 and #496-02)




Hanging Chain with clip

STEP 1

It is recommended to carefully clean the board with a wet cloth followed by a dry run before initial use. In some cases, the board will come with a protective film. Make sure to remove before use.

STEP 2

Power up the board by following the illustration below.

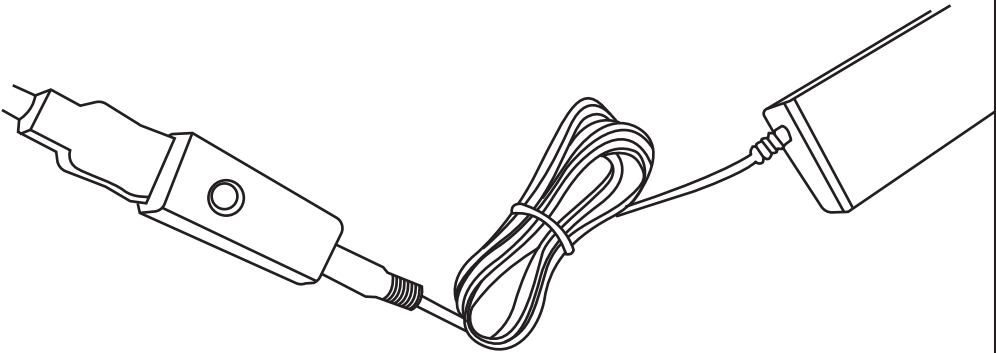

Step 3

Before using the marker, shake it well several times while capped, then press the nib downward for a few seconds, until the nib turns completely colored by ink. Cap the marker when finished using it.

Step 4


Write or draw on the board directly with the marker. To make the writings bolder, just press a little harder. However, the ink track shouldn't be too thick because it will affect the brightness.

Step 5

To switch between flashing modes press the shift button as shown below. (For the Alpine #496-01 and #496-02, the mode switch button is at the bottom corner of the board.)


Step 6

Wait 60 seconds for your written message to dry before cleaning with cloth.

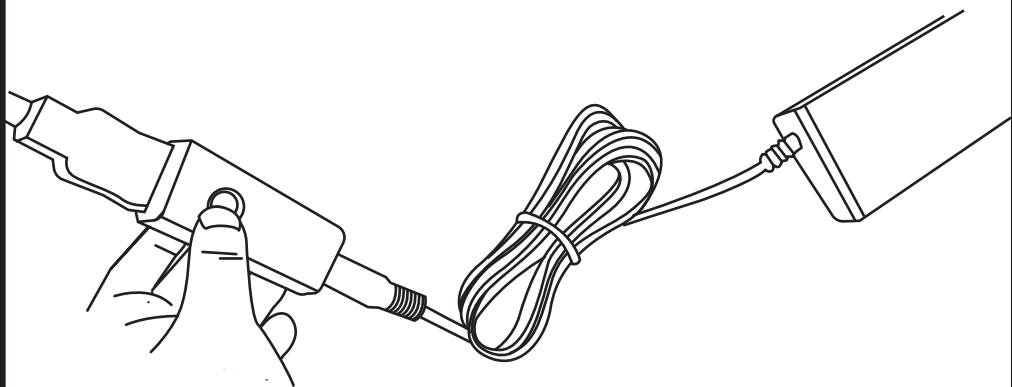

There are over 20 shining modes, so you can choose the one you prefer that is suitable for the particular venue.

If your item comes with a remote control, it can be used to turn the board ON/OFF, change flashing mode, choose colors and control flashing speed. When using the remote, make sure the upper end points towards the USB switch as bellow.

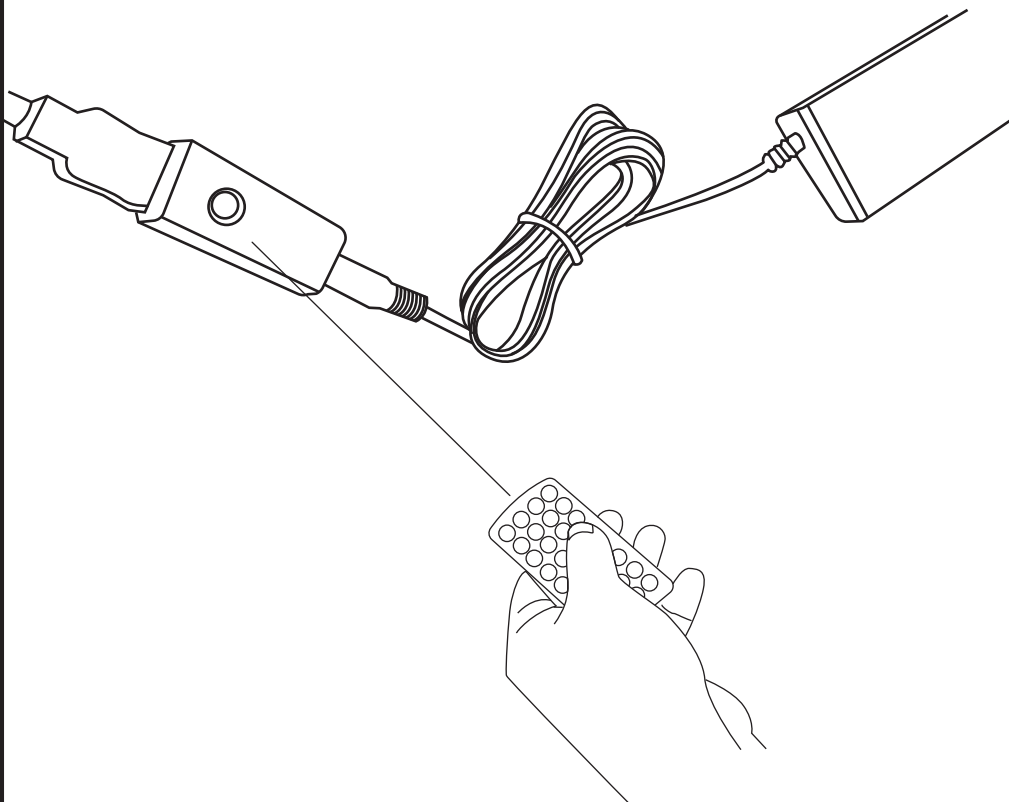


Step 6

To erase writings or drawings, clean the board with a wet cloth followed by a dry cloth. It is preferred to use the towel included in the package. The provided towel is washable.

Step 7

To use the hanging chain - if applicable, follow the picture below.

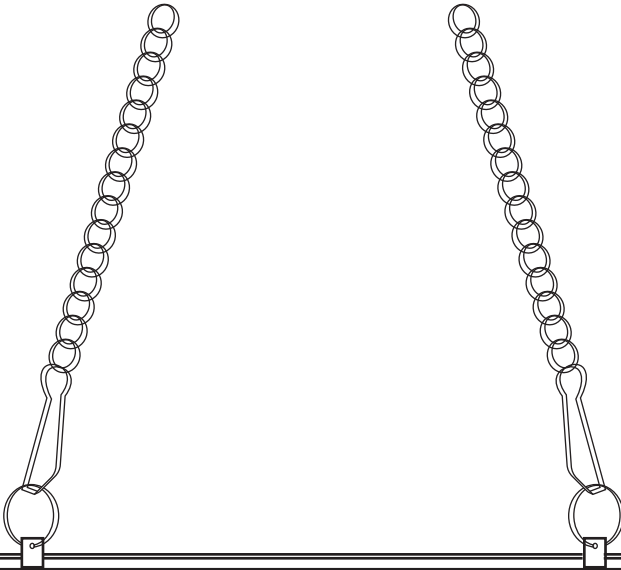



Follow us on

