


INSTALLATION



Product Manual

Version: 390071-01-24A-YJ

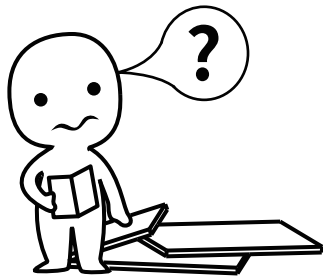


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

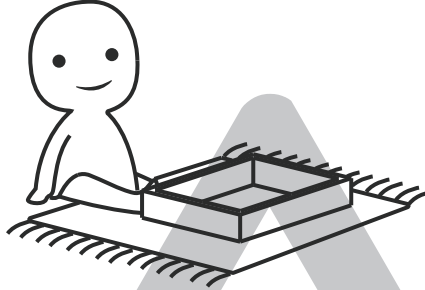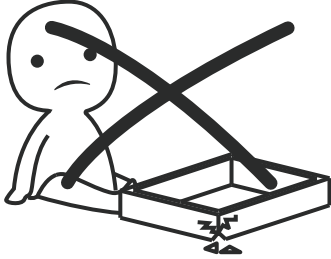



AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

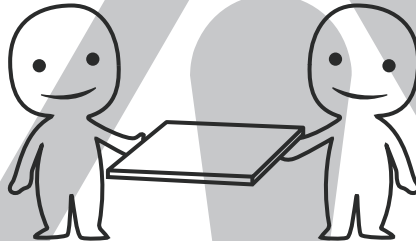

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

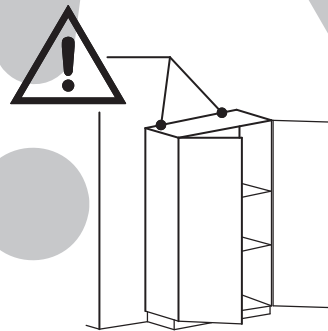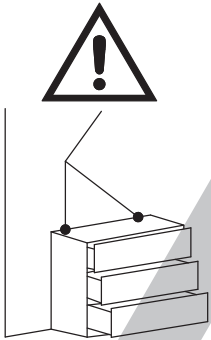

ANTI-TOPPLE WARNING !


Overtured furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

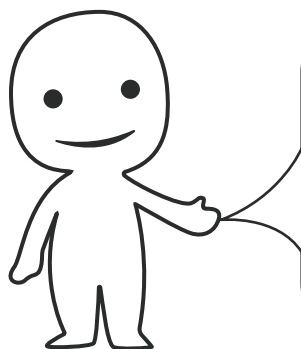


Please prepare the following tools

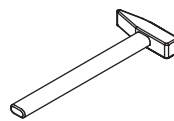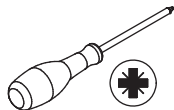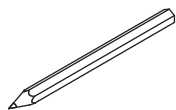

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 92

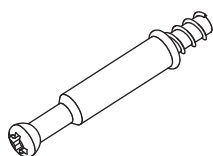

Ø 6 x 35 mm

B x 98




Ø 15 x 10 mm

C x 56




Ø 6 x 30 mm

D x 3

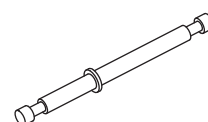


Ø 5 x 70 mm

E x 94

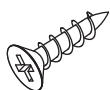


Ø 3 x 12 mm

F x 55

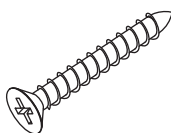


Ø 4 x 30 mm


G x 20

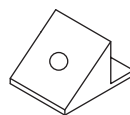


H x 2

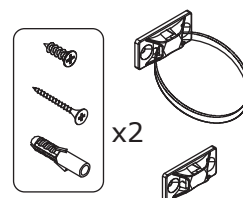


I x 8

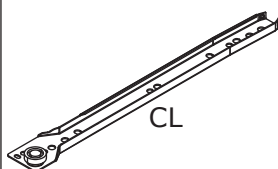


J x 8

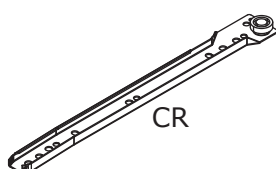


K x 8

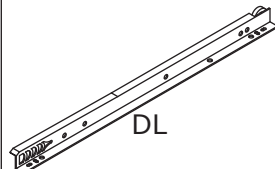

L x 8

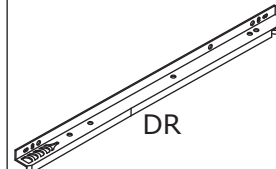

M x 3

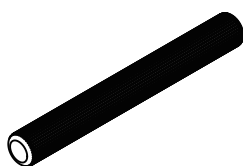





Ø 6 x 50 mm

O x 10



N x 1

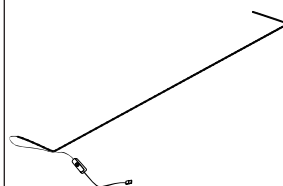

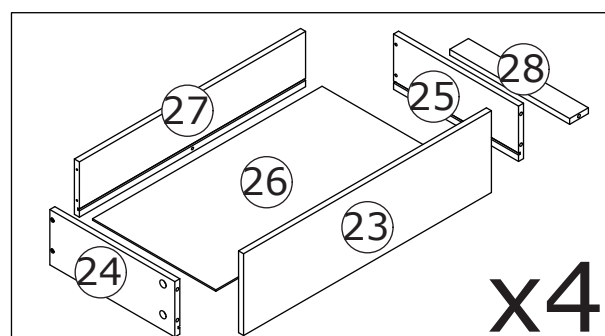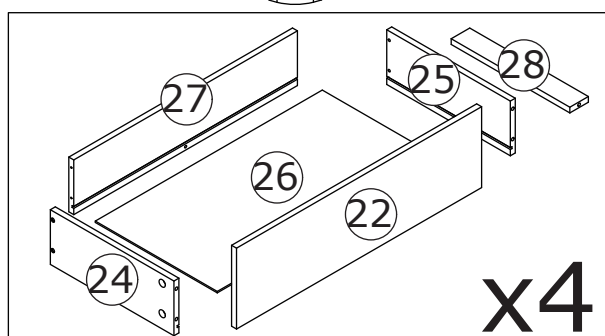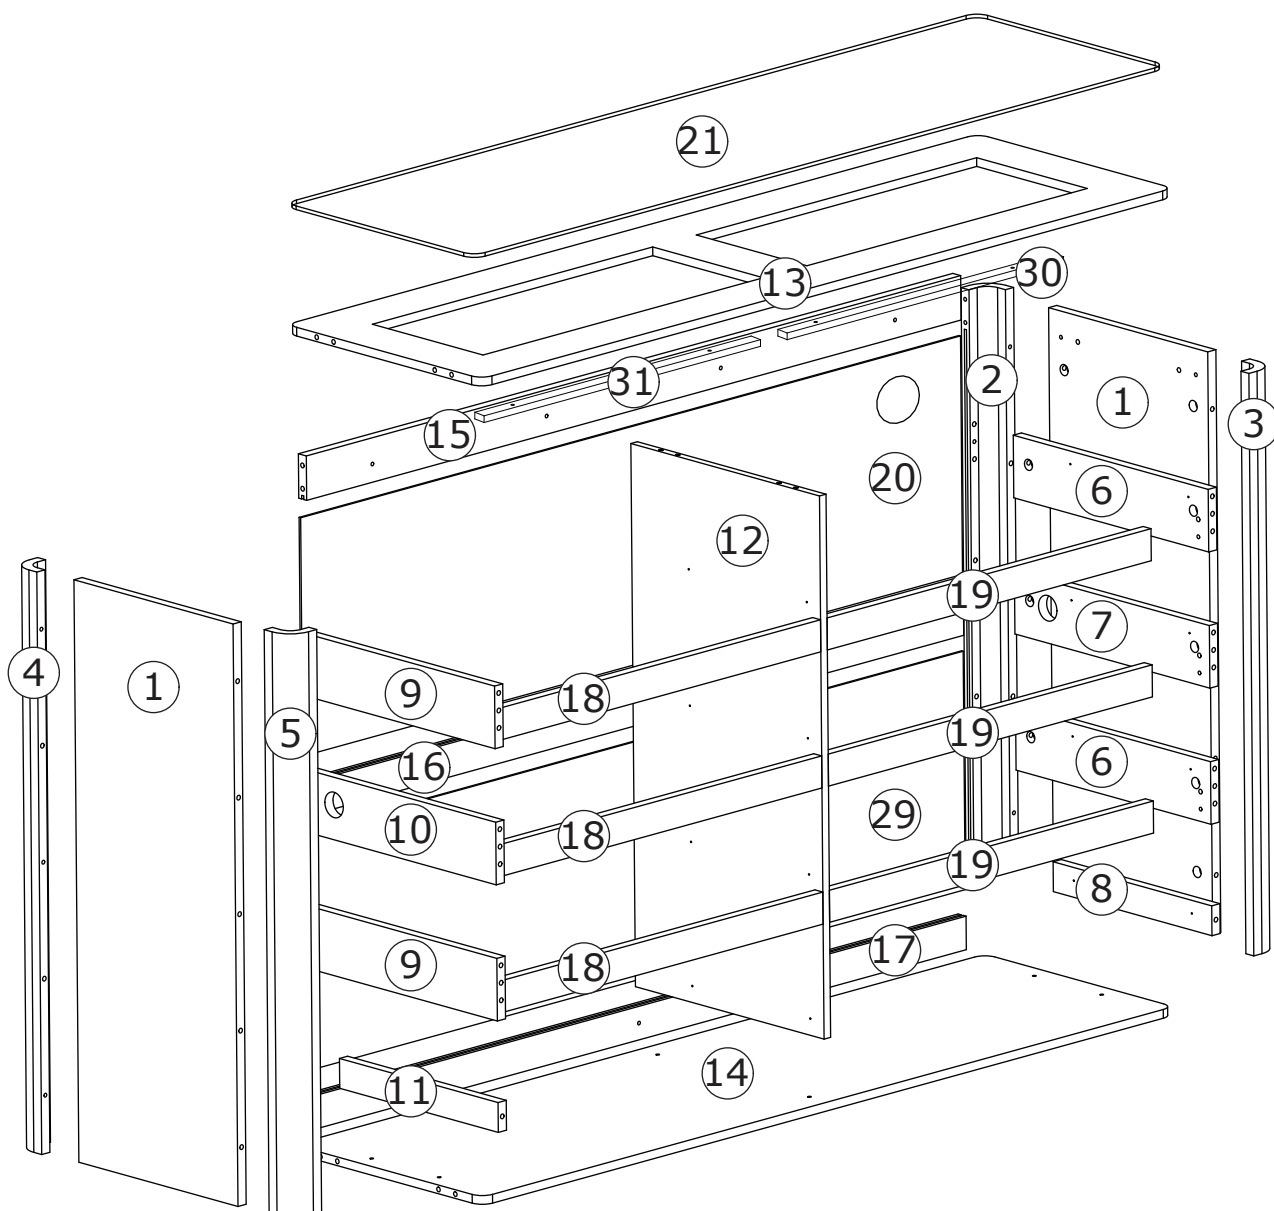


⚠ WARNING






Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.



*This is a permanent label.
Do not remove!*

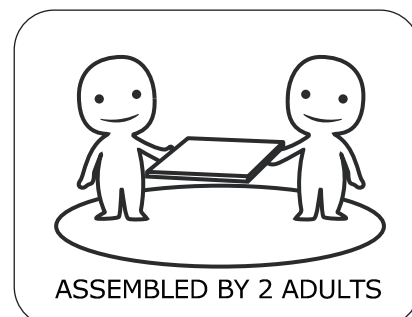




1

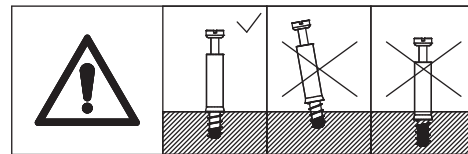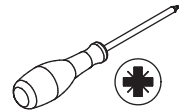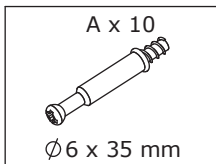


Screw eccentric rod(A) into panel 2 at first.

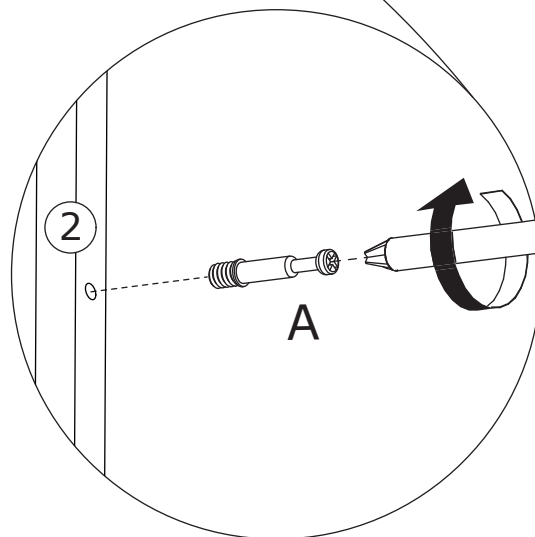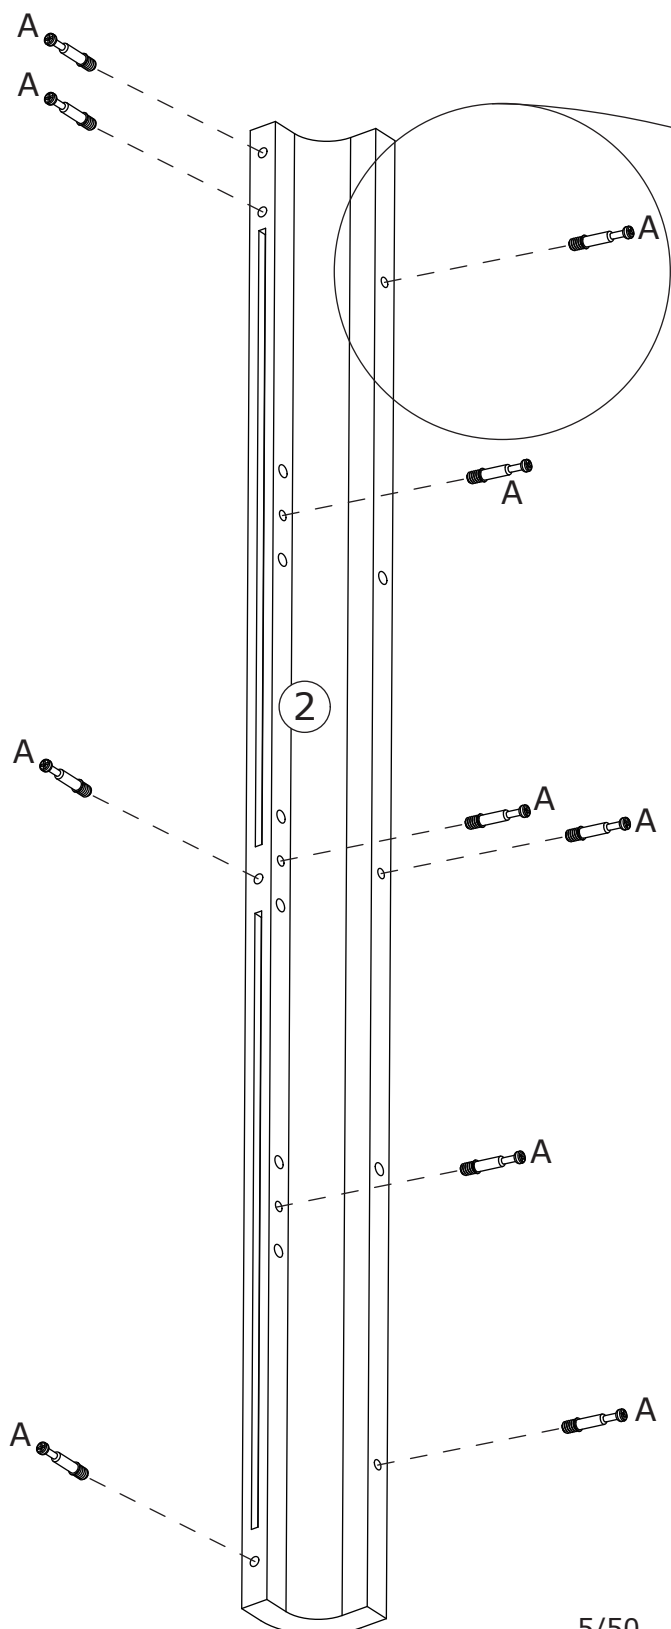

2

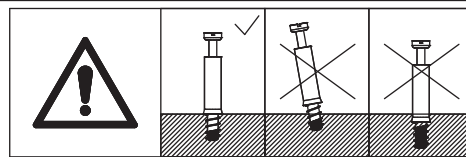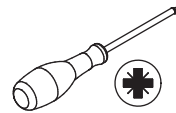
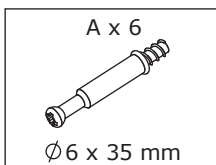


Screw eccentric rod(A) into panel 3 at first.

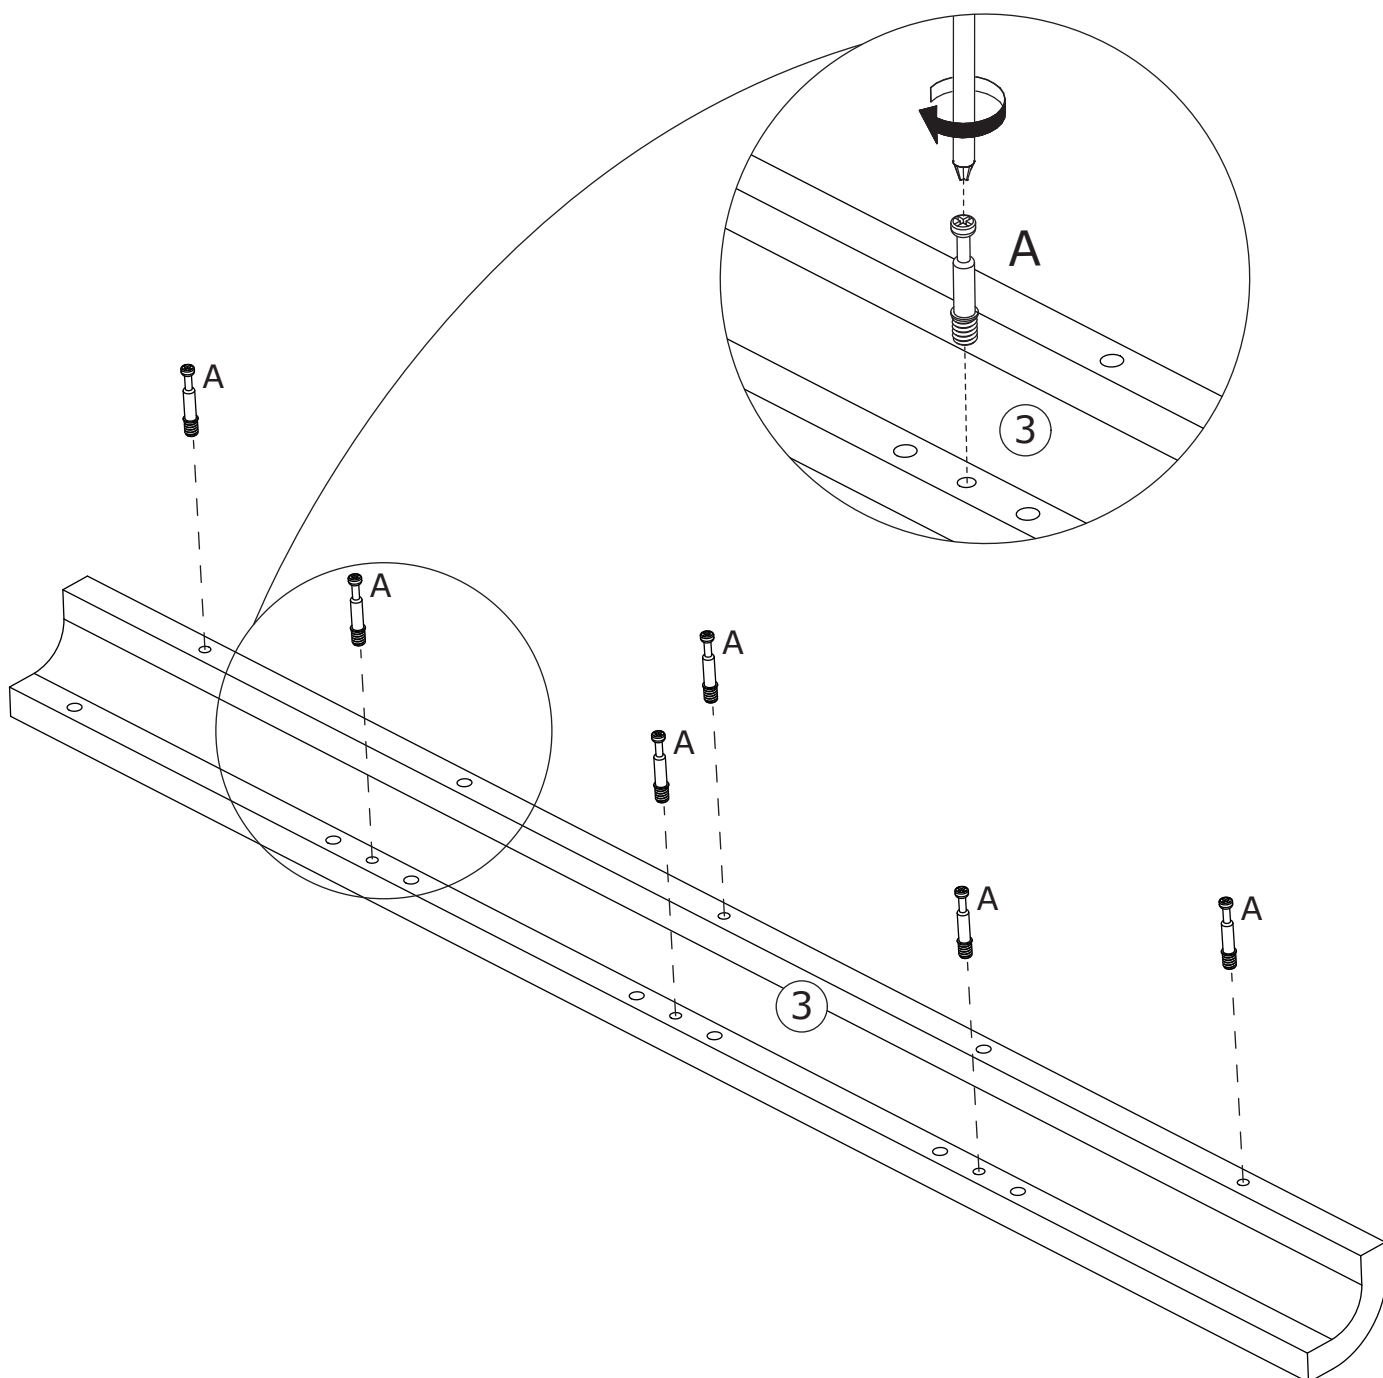


3


A x 10
Ø6 x 35 mm

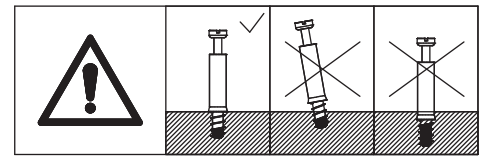
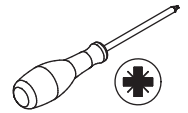


Screw eccentric rod(A) into panel 4 at first.

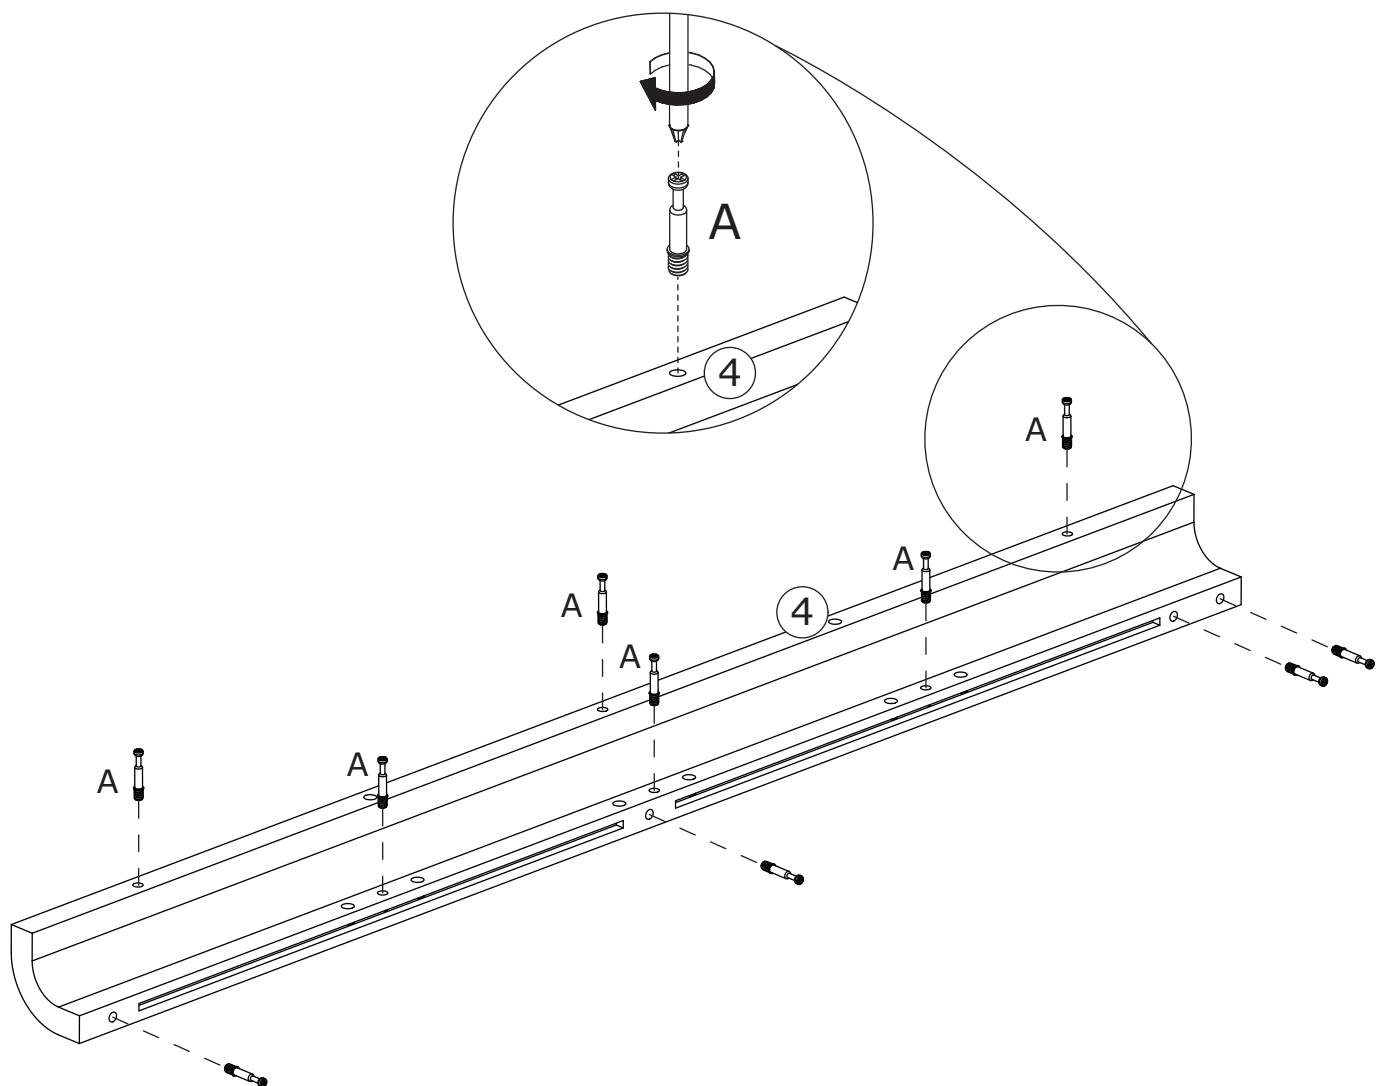


4


A x 6

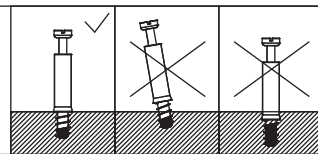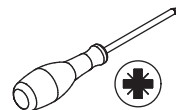 Ø6 x 35 mm


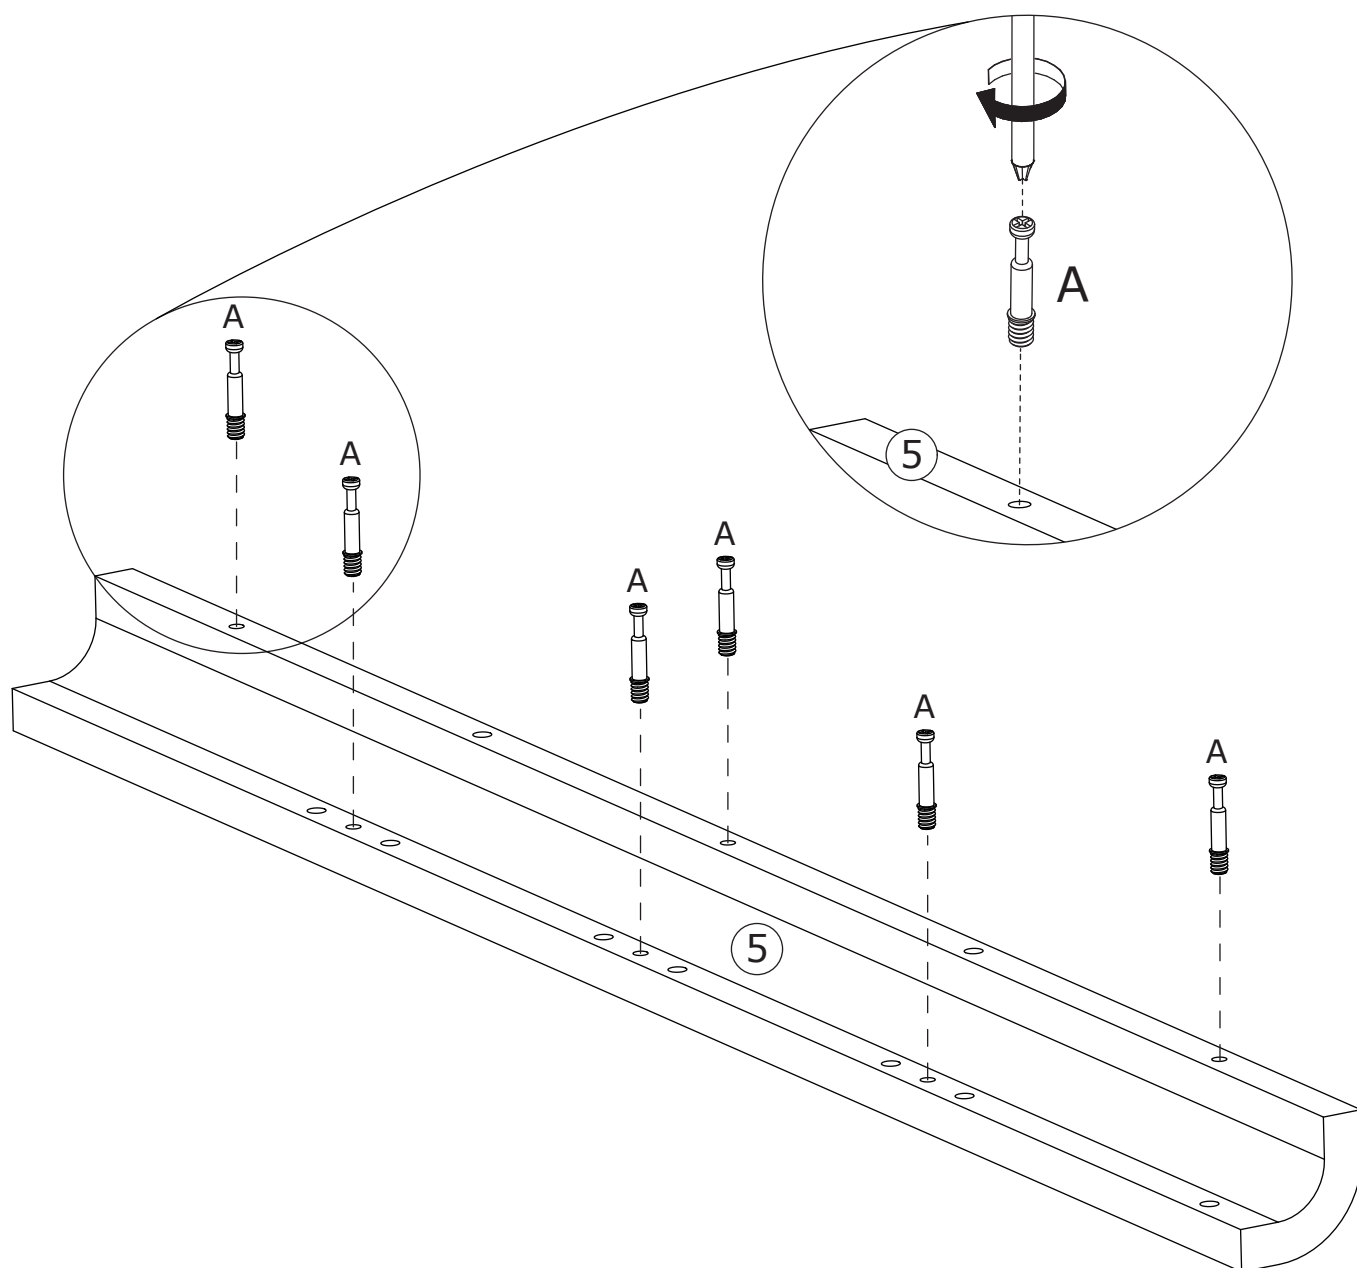


Screw eccentric rod(A) into
 panel 5 at first.




5

A x 2

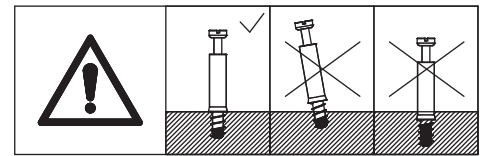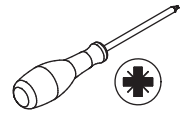 Ø6 x 35 mm

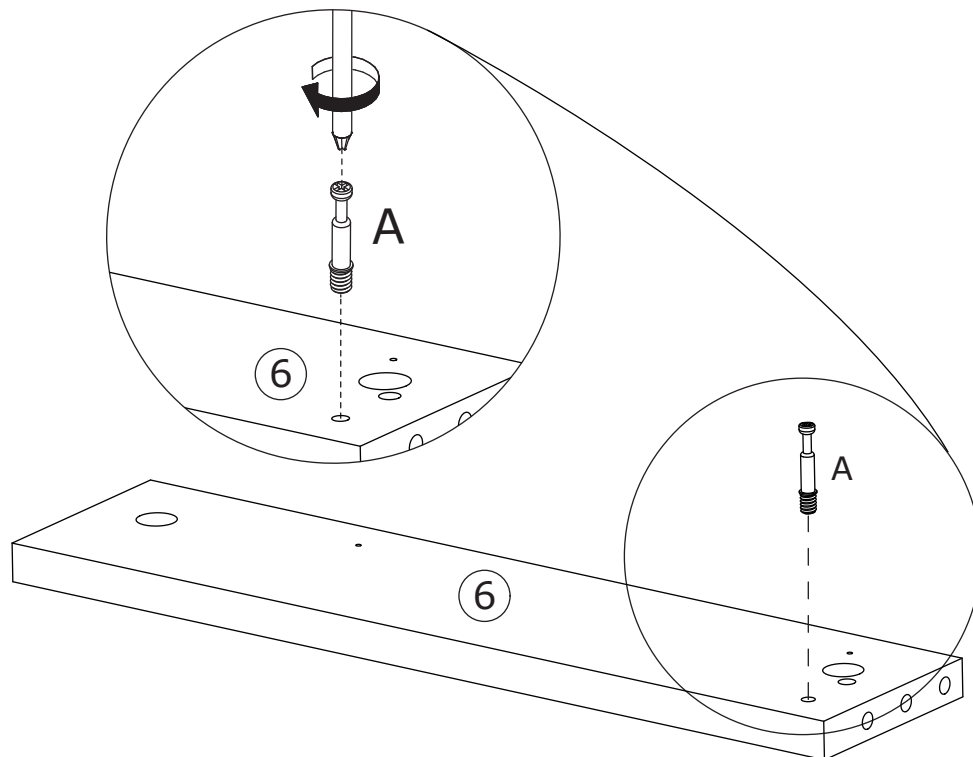


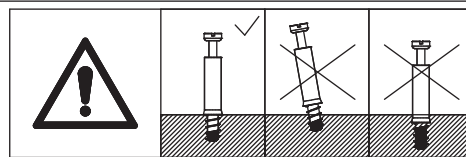
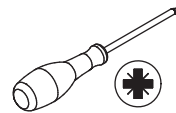
Screw eccentric rod(A) into panel 6 at first.




x2

6

A x 1

 Ø6 x 35 mm

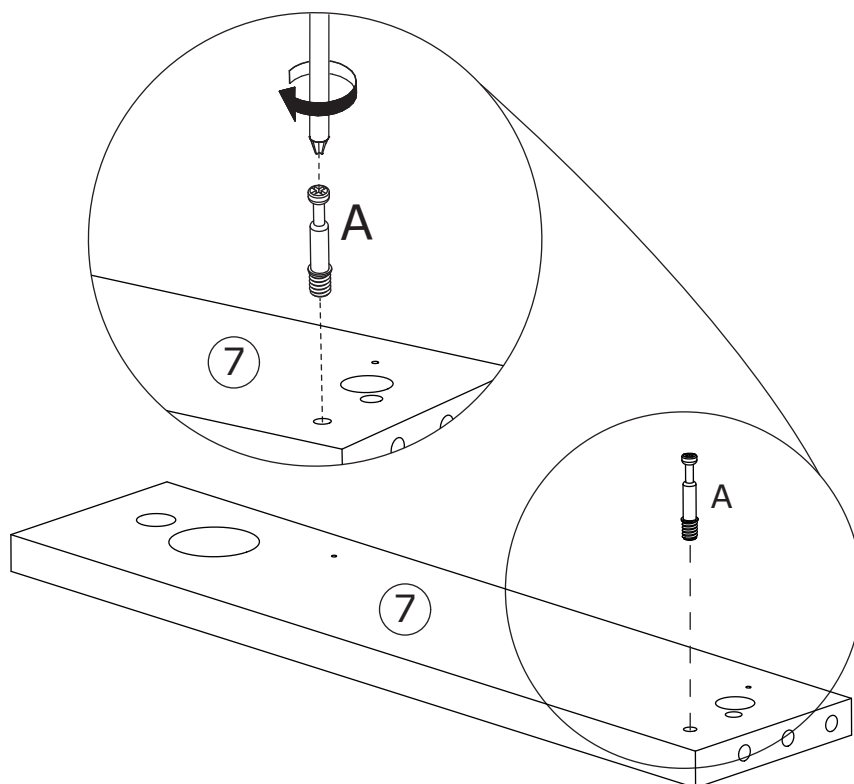



Screw eccentric rod(A) into
 panel 7 at first.




7

A x 2

 Ø6 x 35 mm


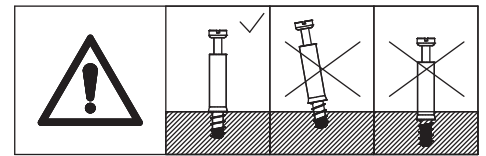
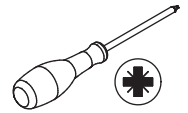


Screw eccentric rod(A) into
 panel 9 at first.

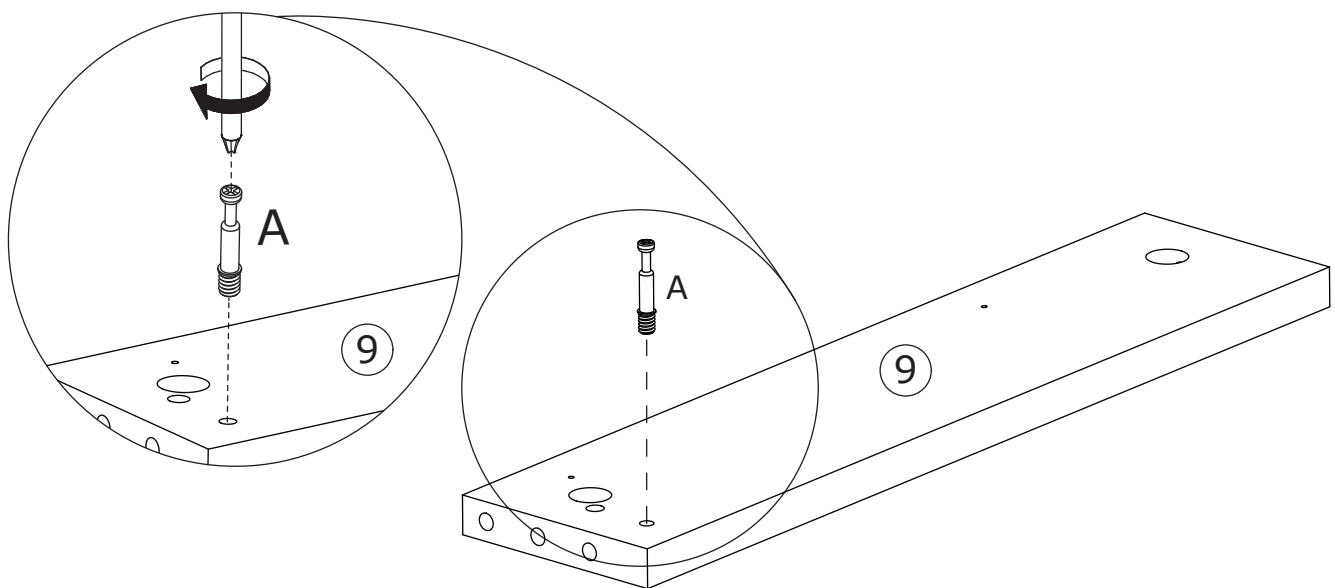


x2


8

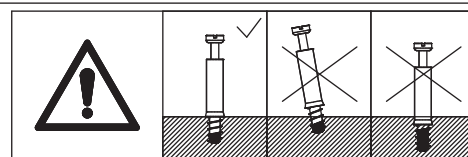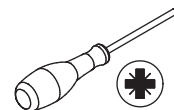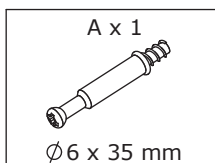

Screw eccentric rod(A) into panel 10 at first.

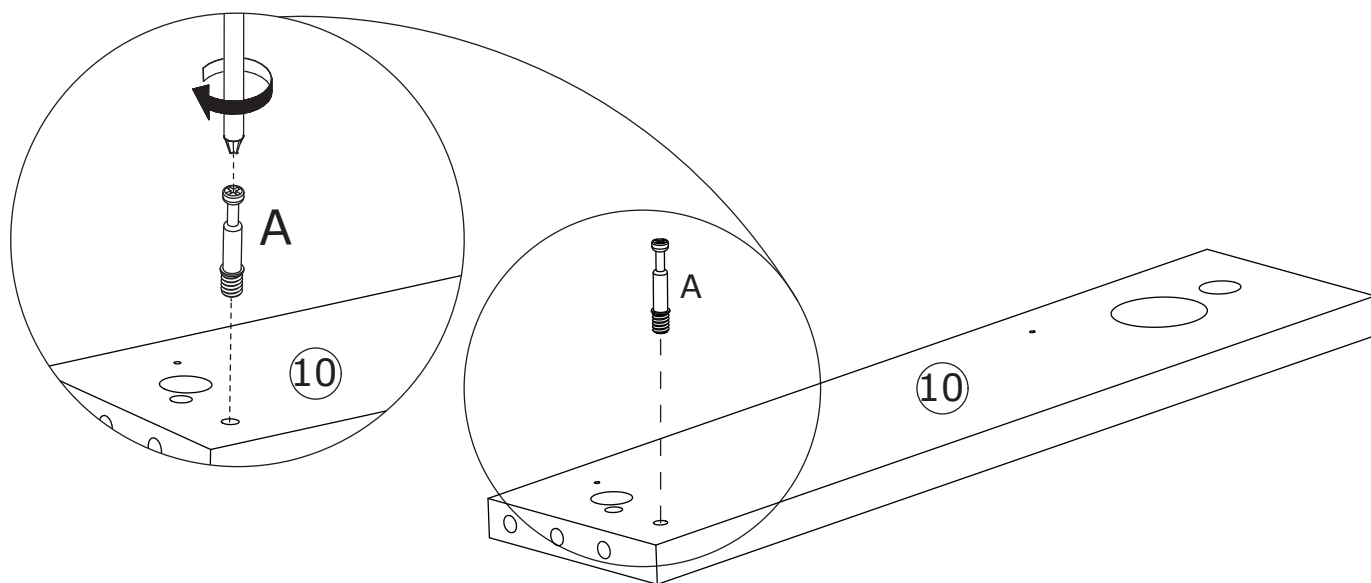


9




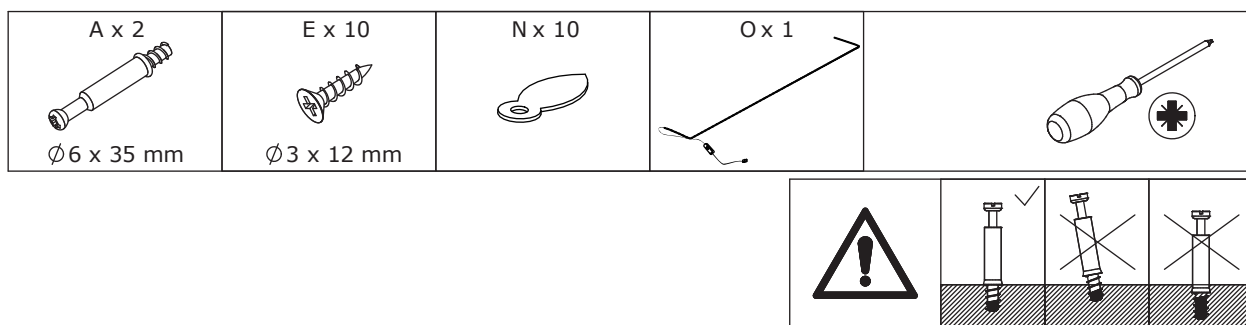


Screw eccentric rod(A) into panel 13 at first.


Fasten the LED strip to panel 13 with screw E and positioning accessory N.

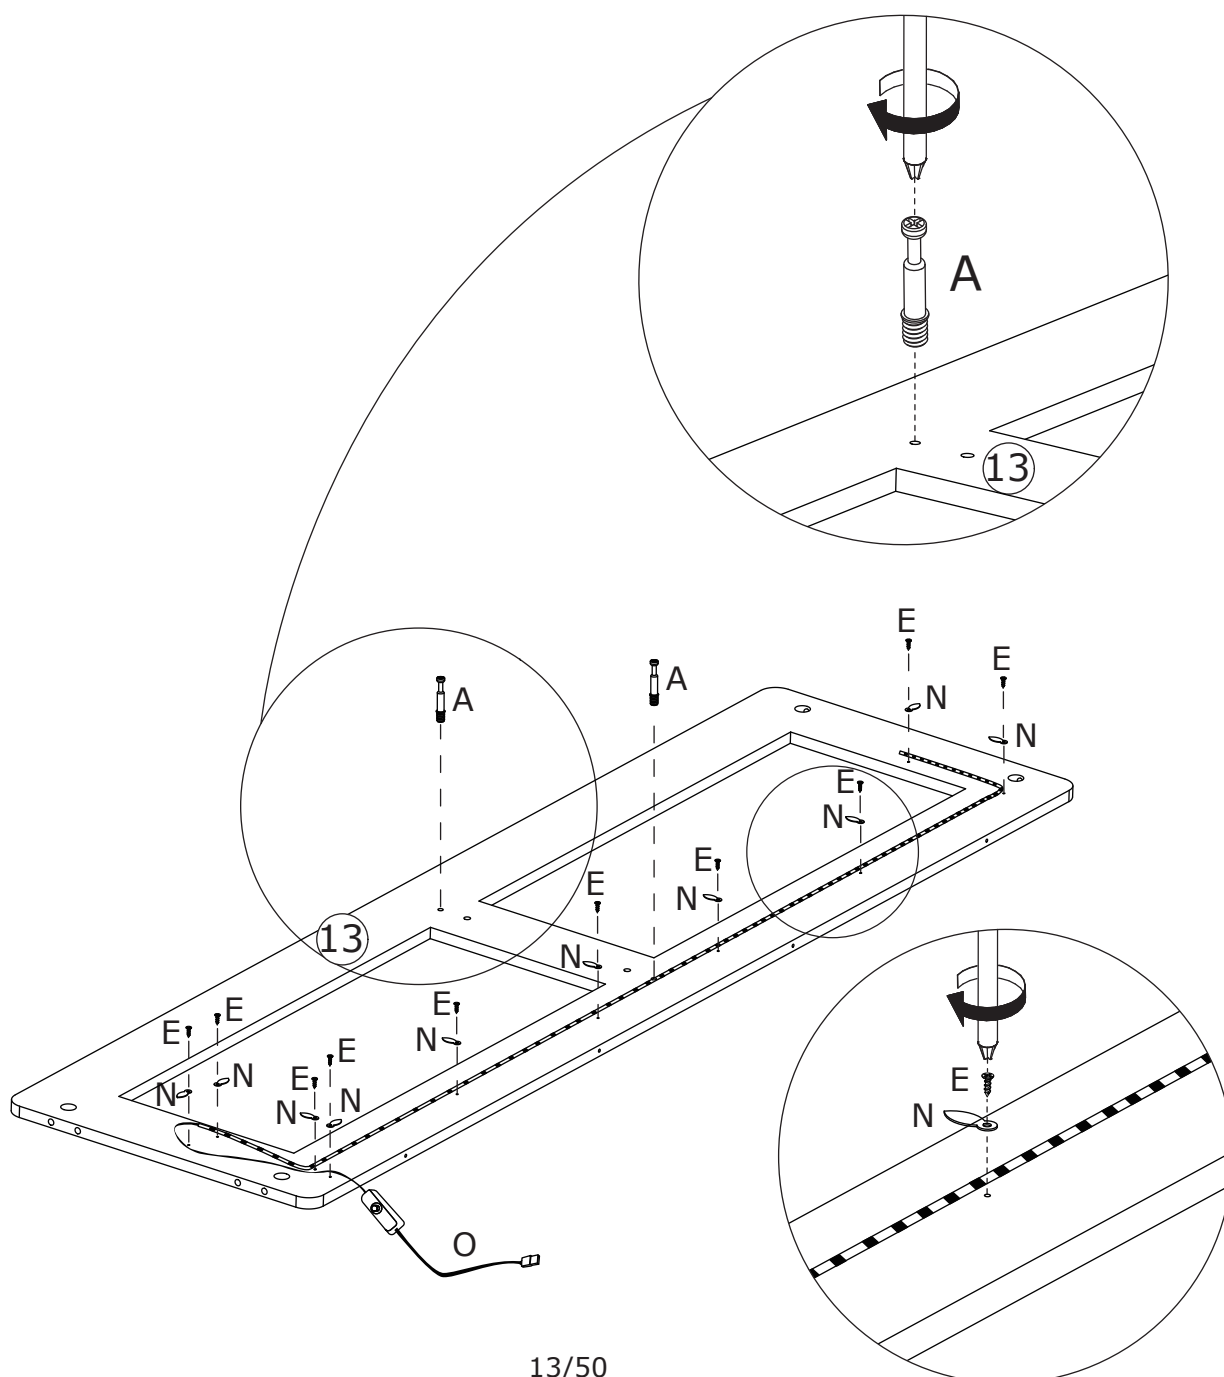




10

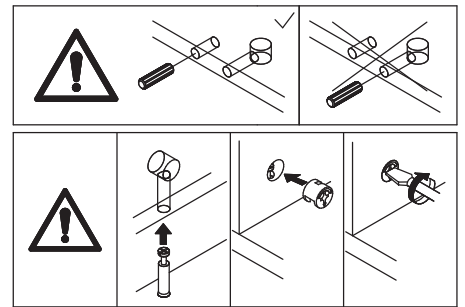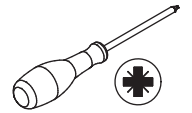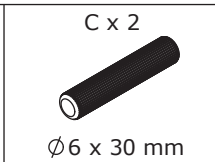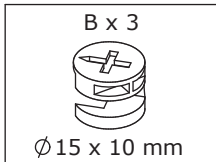


Connect panel 3 to panel 1 using wooden dowel(C), add cam lock(B) into panel 1 and turn clockwise to tighten as shown.

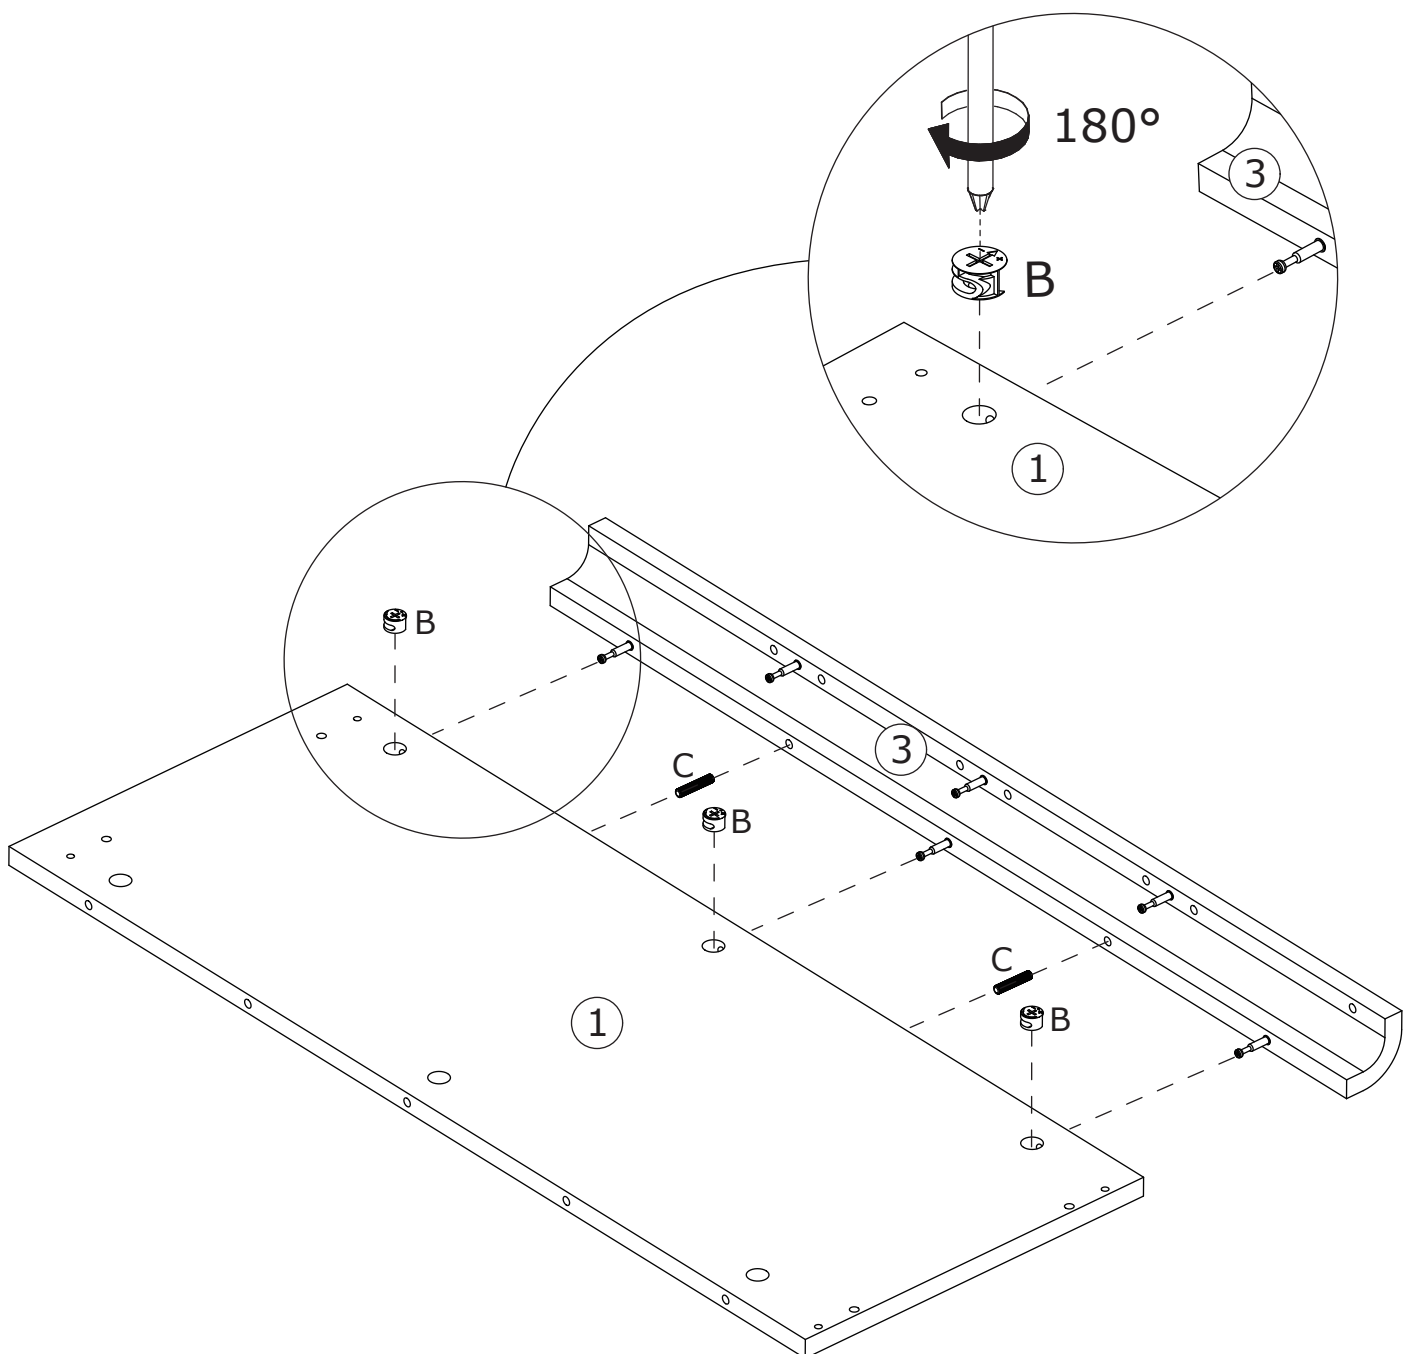




11

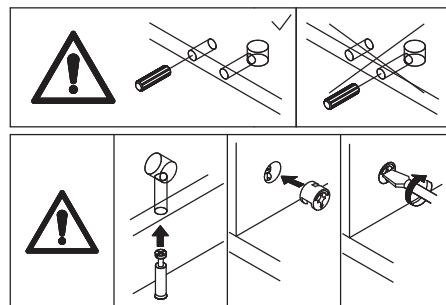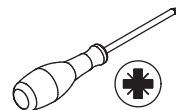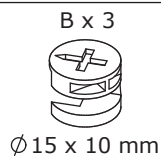




Attach panel 6 and 7 to panel 3 using wooden dowel(C), add cam lock(B) into panel 6,7 and turn clockwise to tighten as shown.

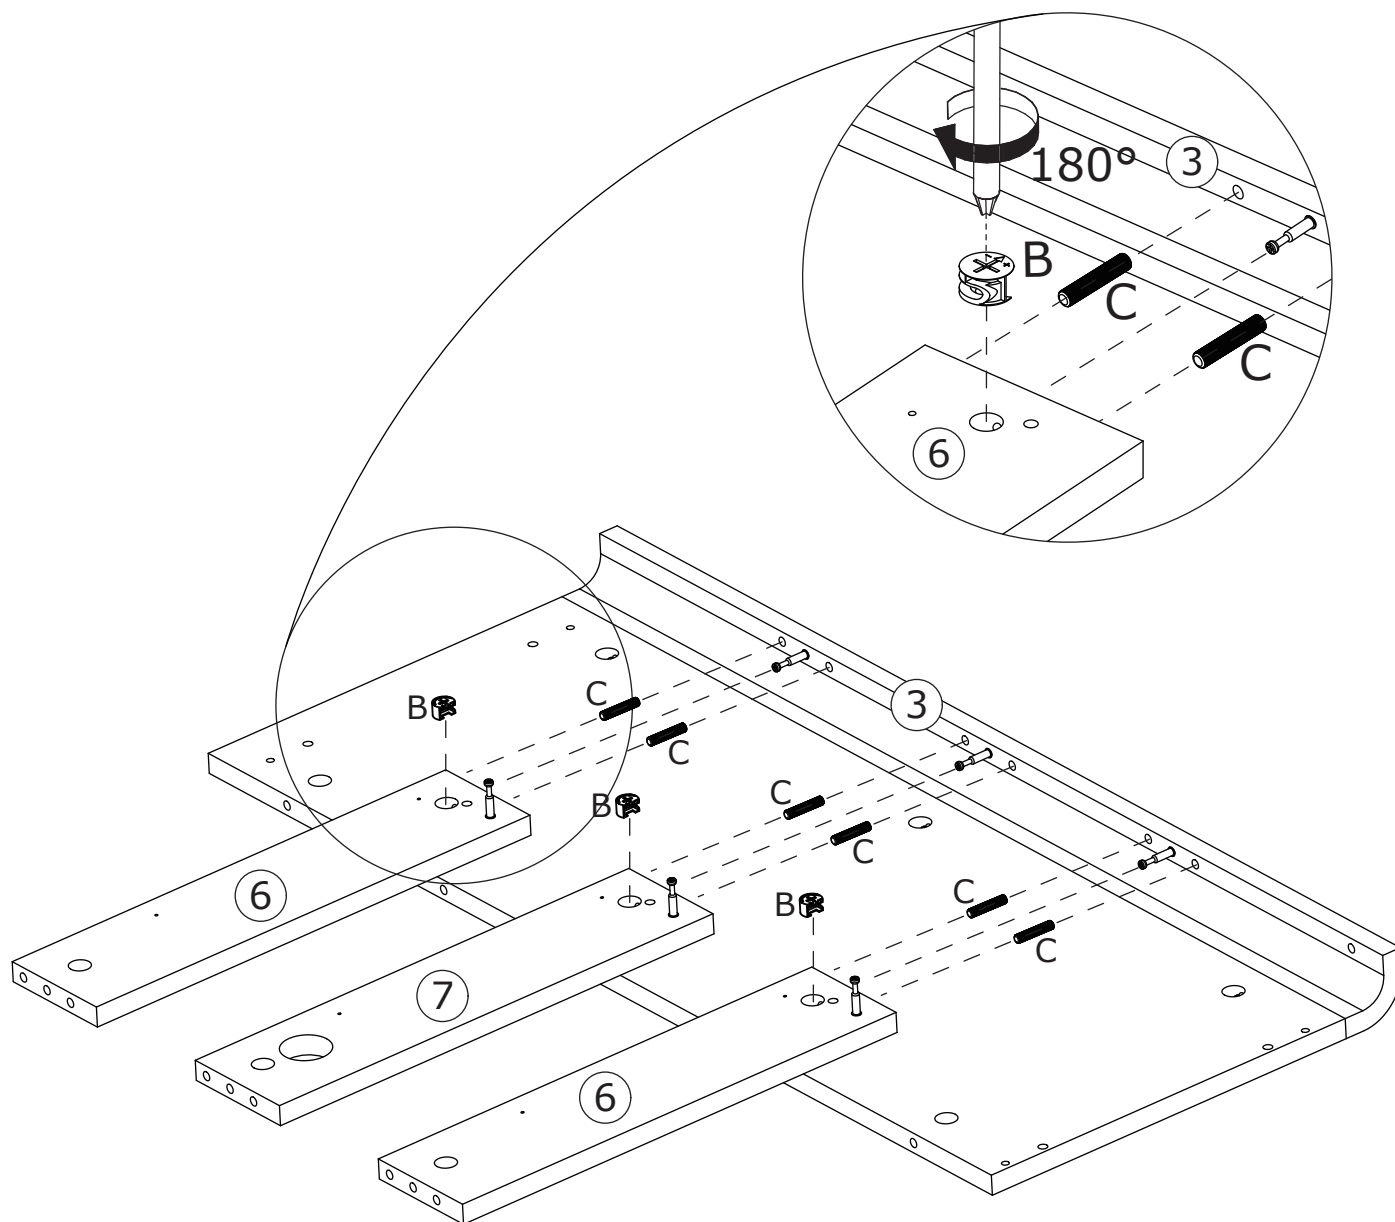




12

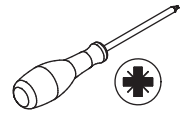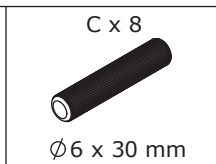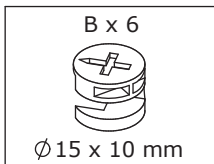


Attach panel 2 to panel 1, 6 and 7 using wooden dowel(C), add cam lock(B) into panel 1,6,7 and turn clockwise to tighten as shown.

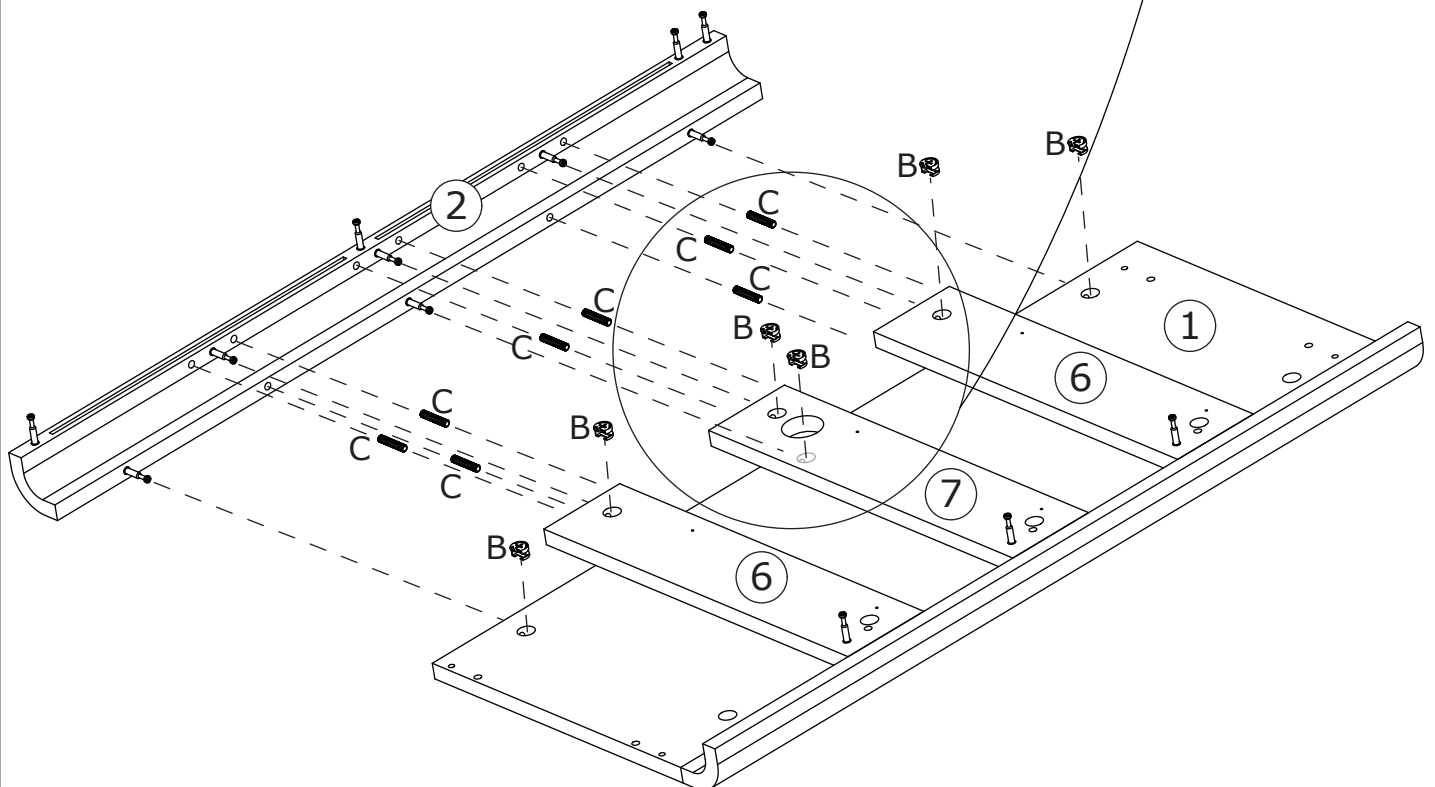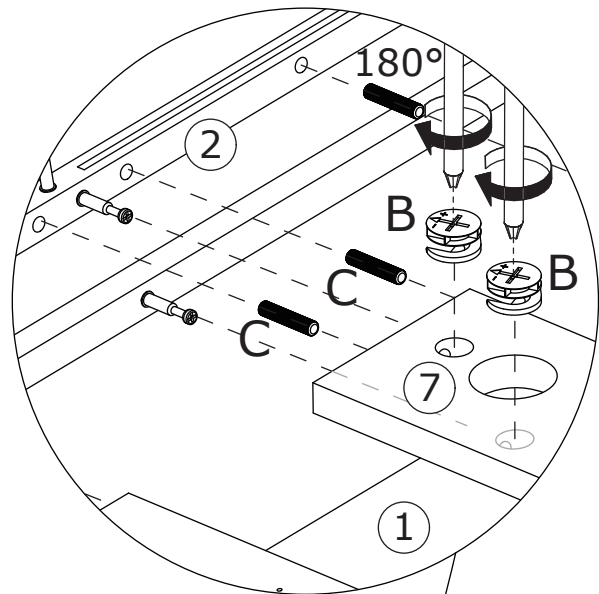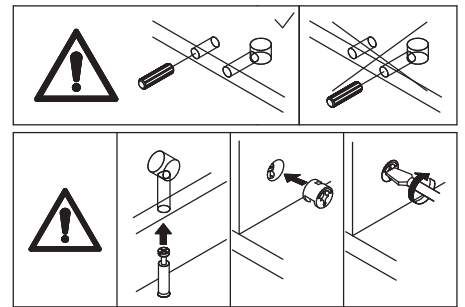




13

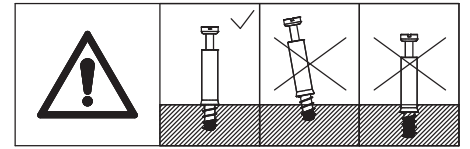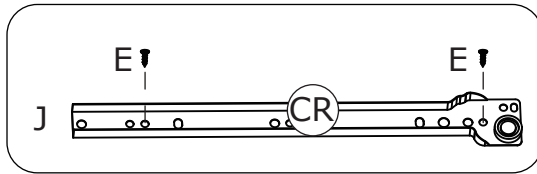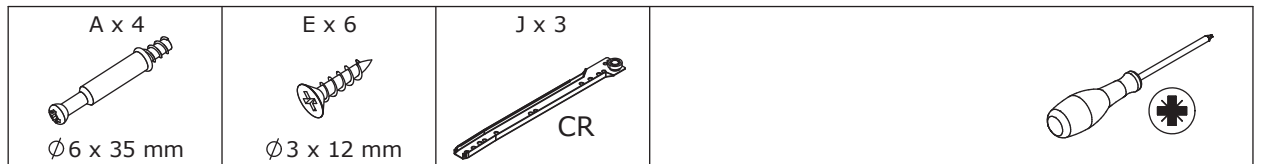


Screw eccentric rod(A) into panel 1 at first.
Fix rail(CR) to panel 6 and 7 with screw(E) as shown.

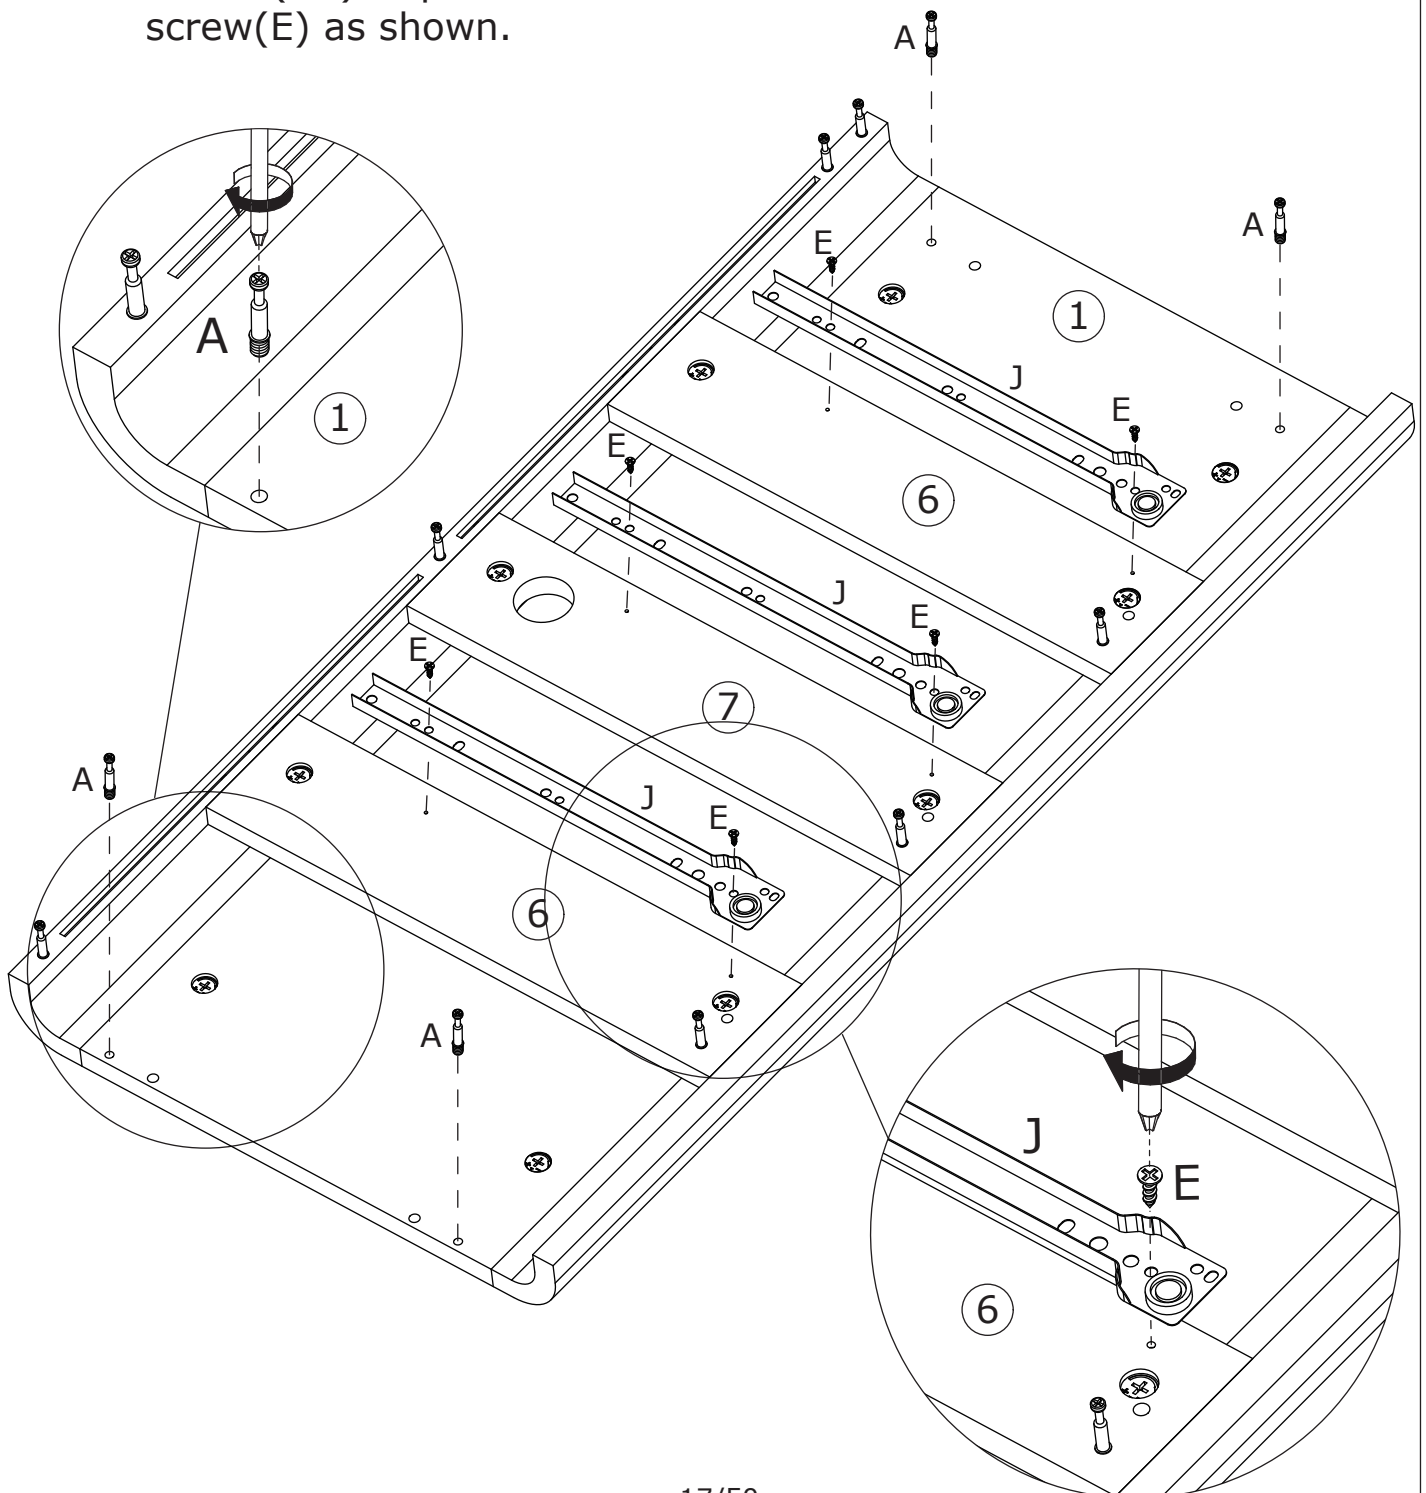




14

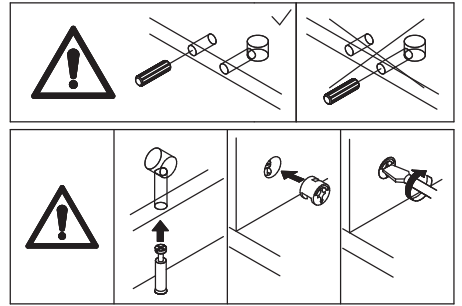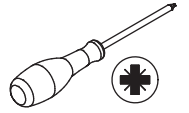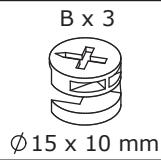


Attach panel 5 to panel 1 using wooden dowel(C), add cam lock(B) into panel 1 and turn clockwise to tighten as shown.

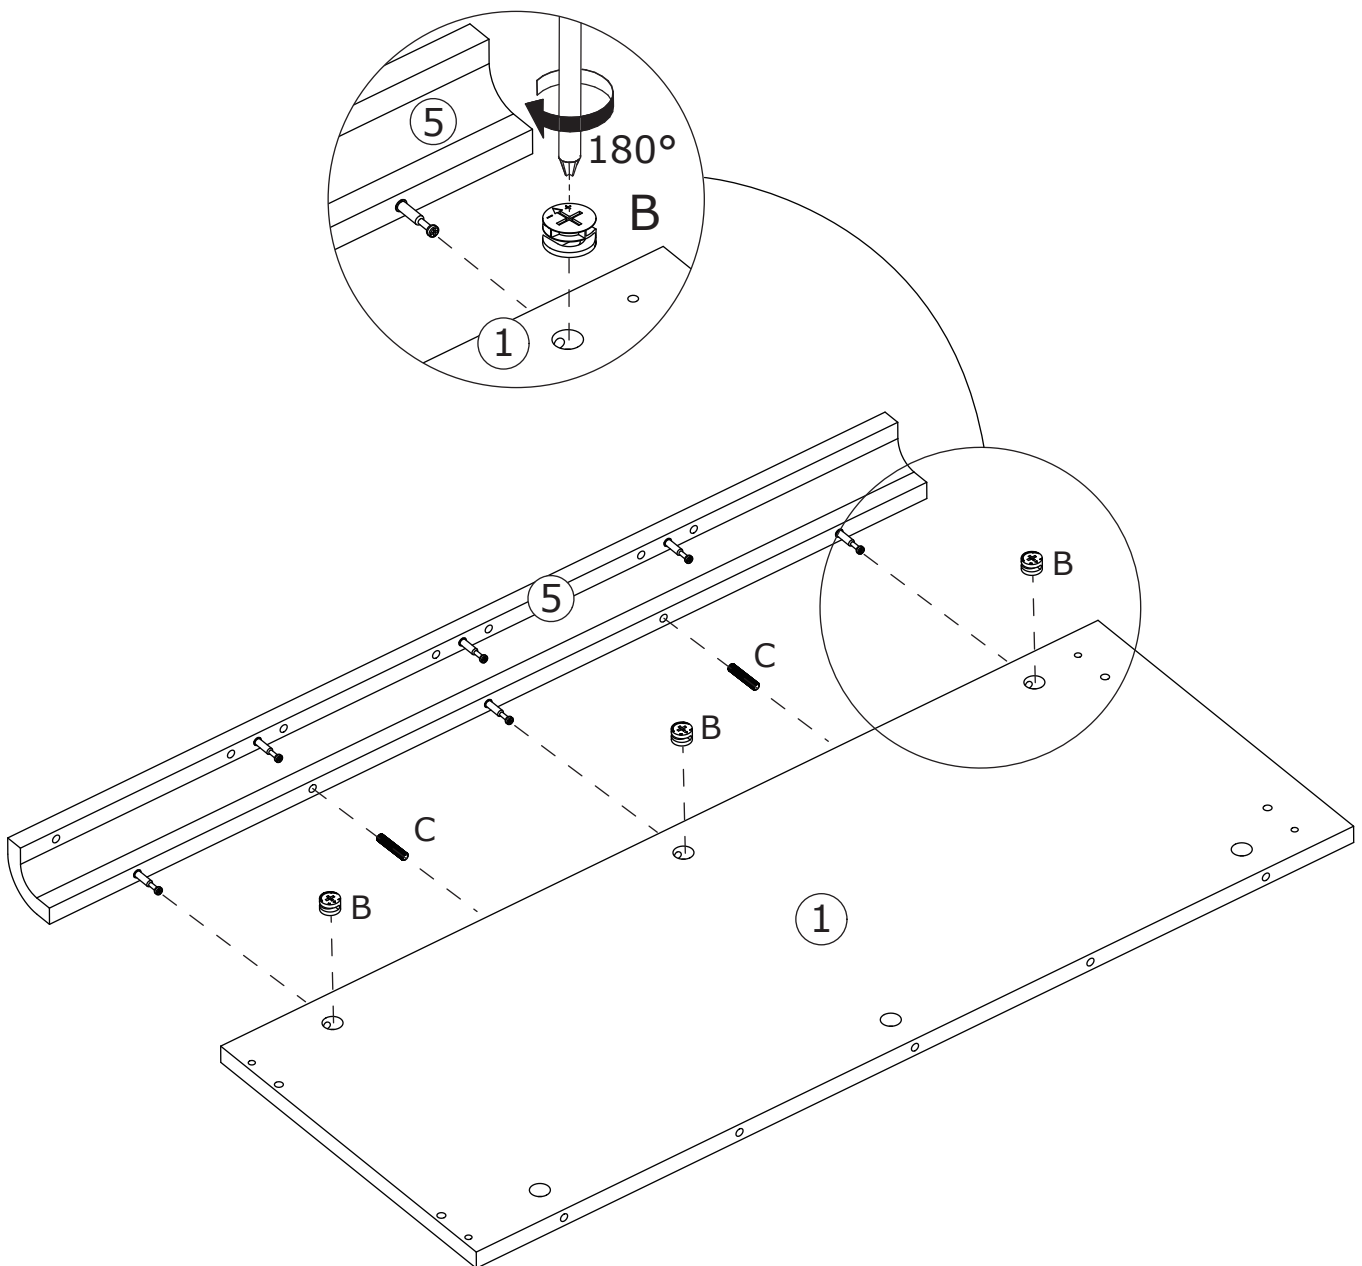



15

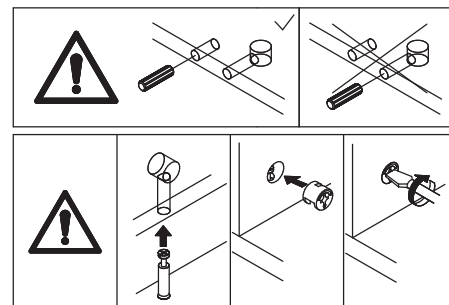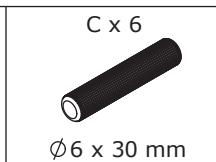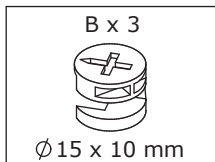



Attach panel 9 and 10 to panel 5 using wooden dowel(C), add cam lock(B) into panel 9,10 and turn clockwise to tighten as shown.

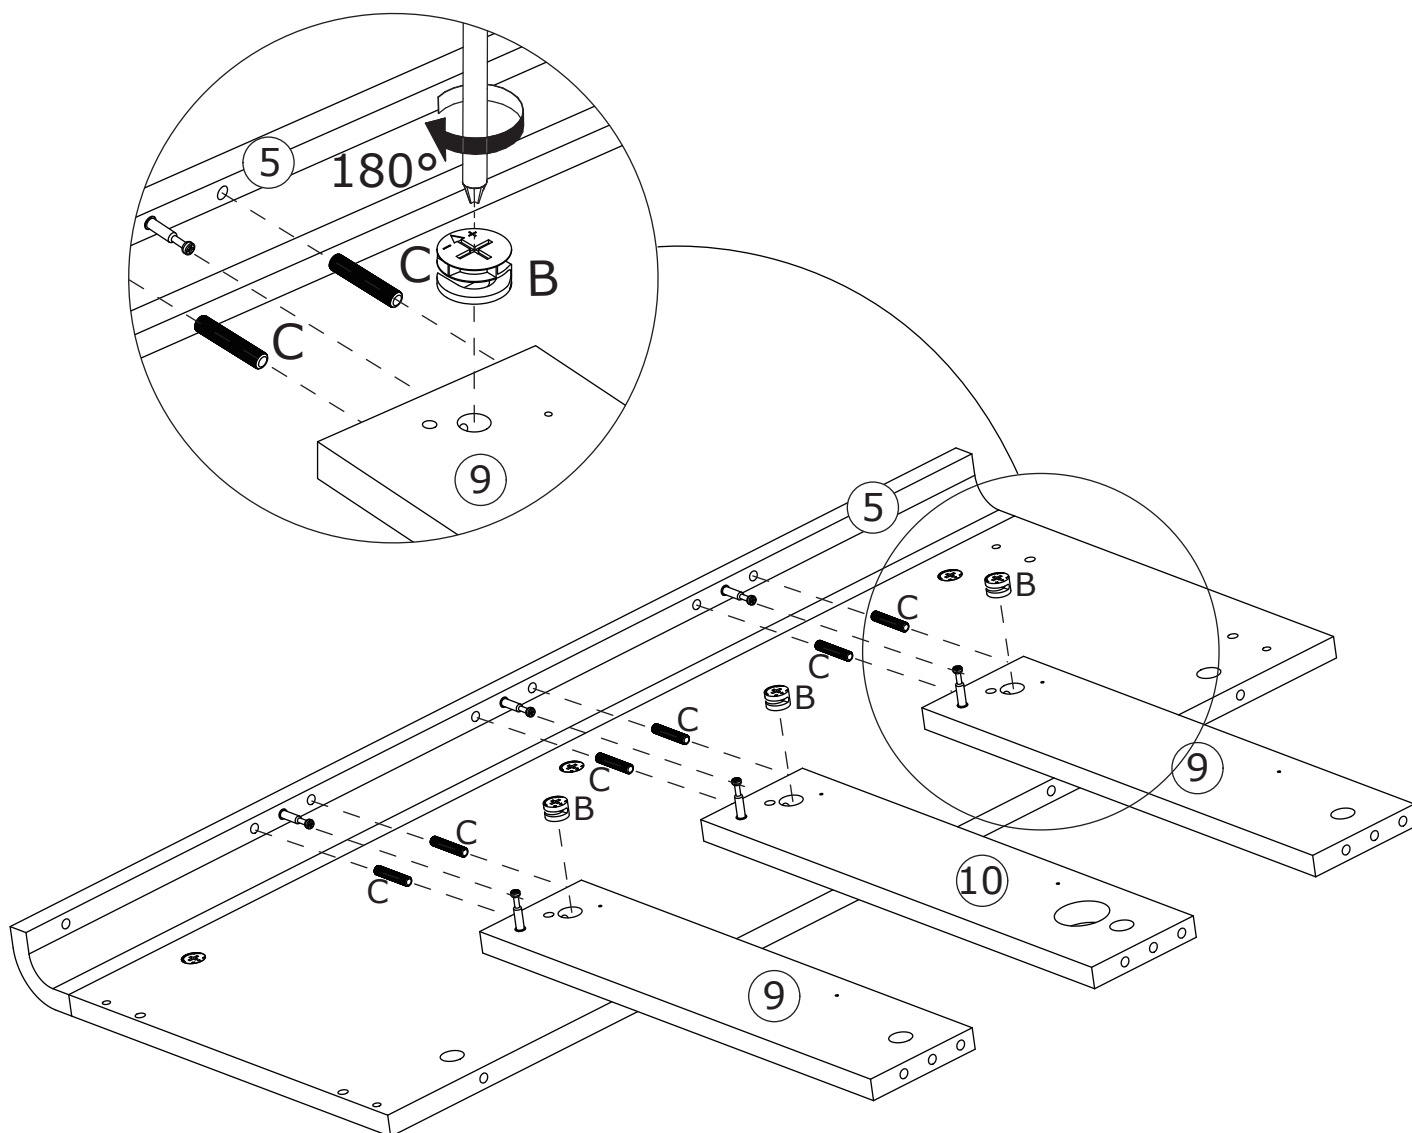


16

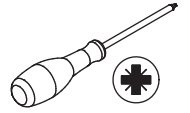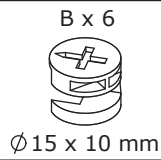



Attach panel 4 to panel 1, 9 and 10 using wooden dowel(C), add cam lock(B) into panel 1,9,10 and turn clockwise to tighten as shown.

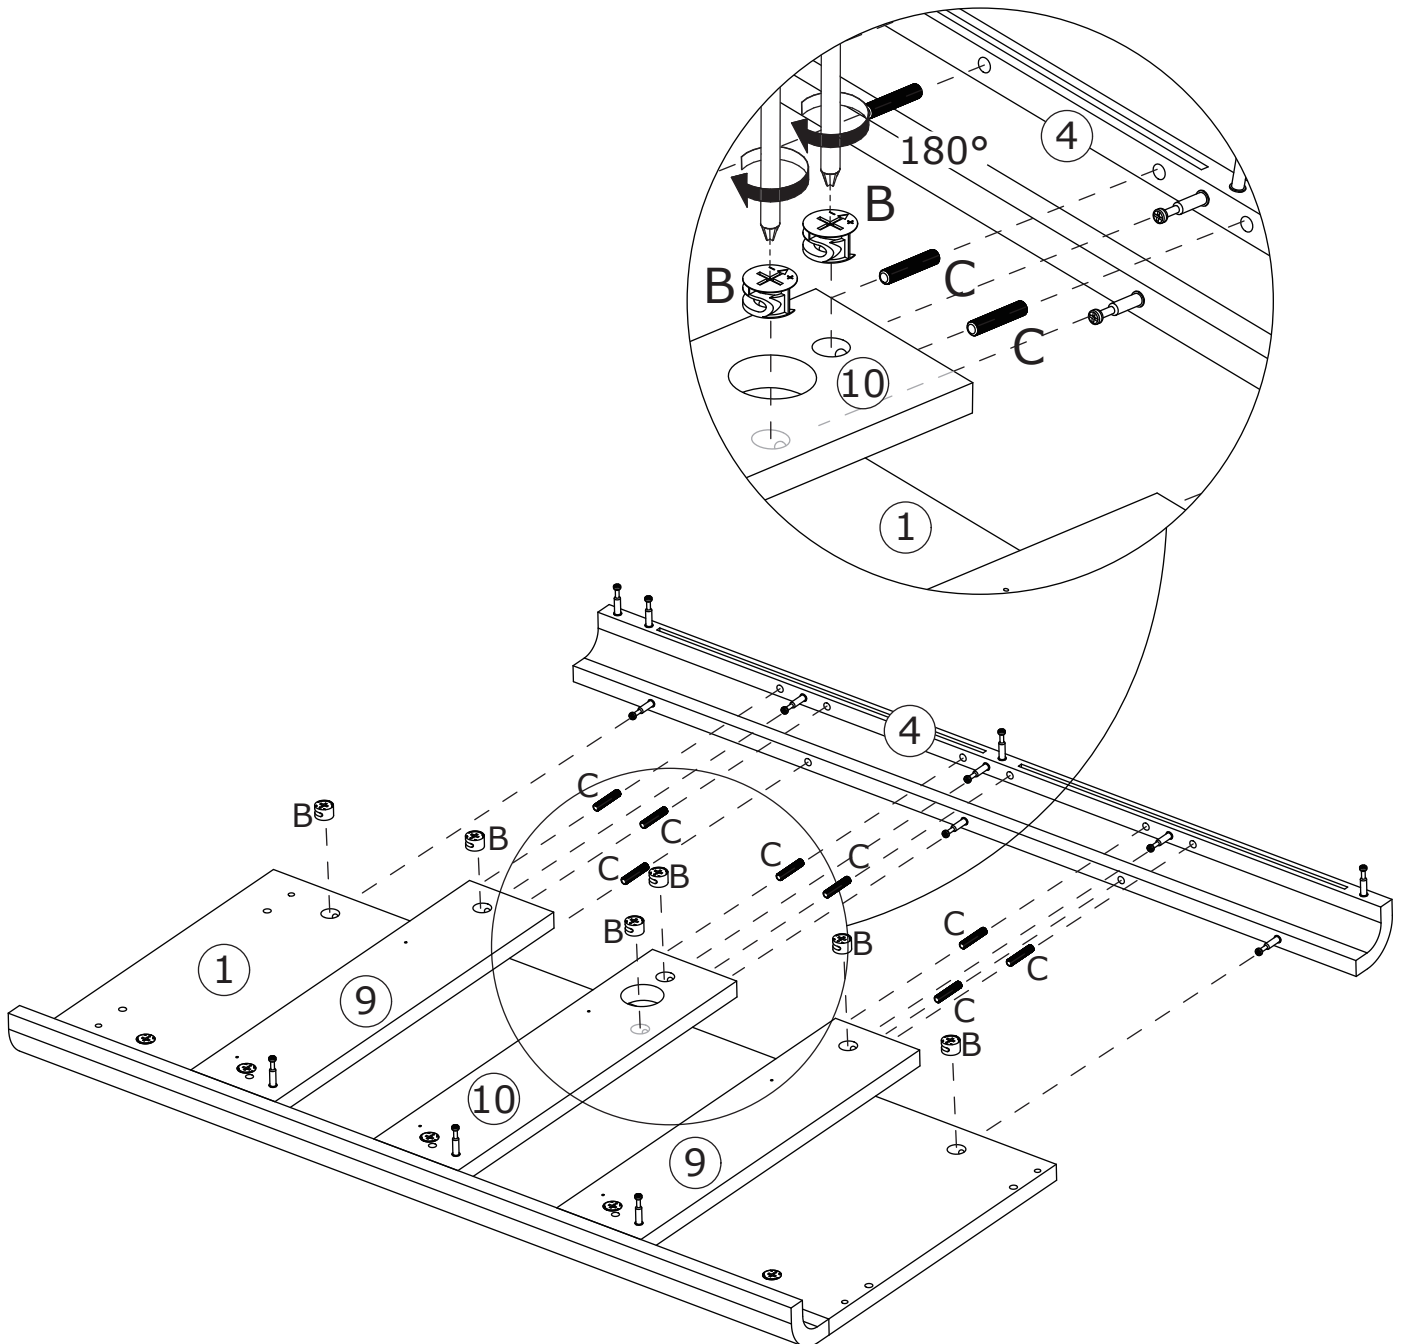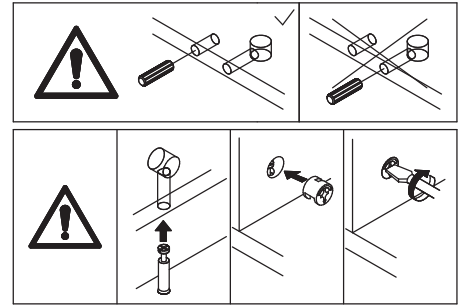


17

A x 4

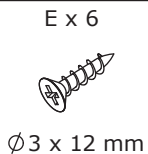 Ø6 x 35 mm




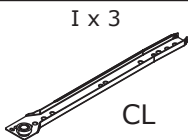
E x 6

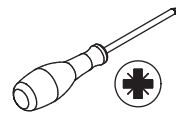 Ø3 x 12 mm

I x 3

 CL

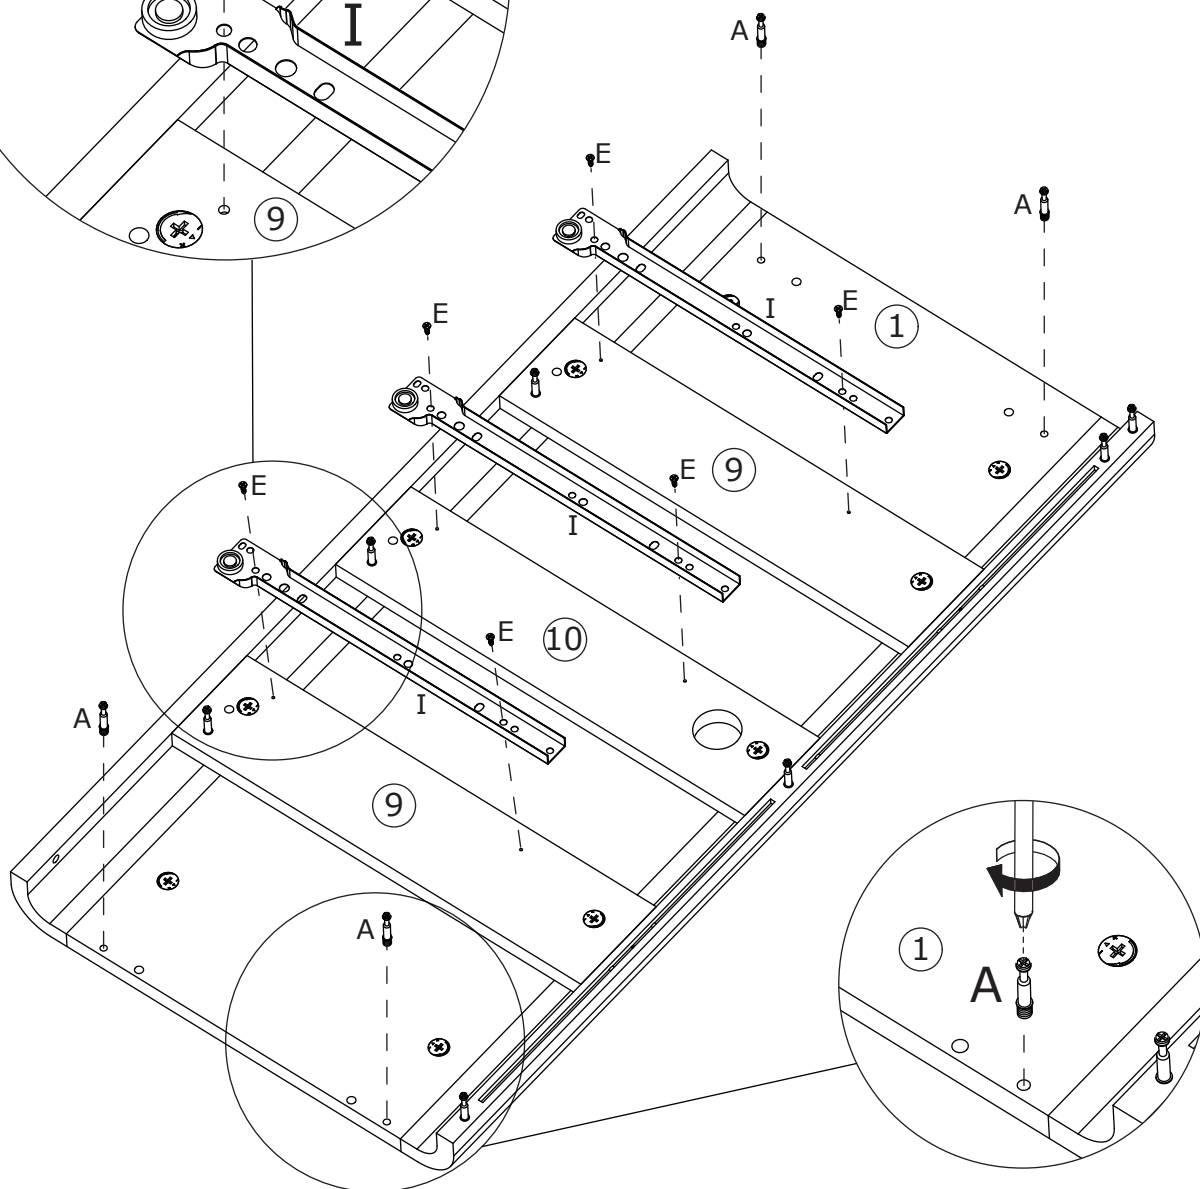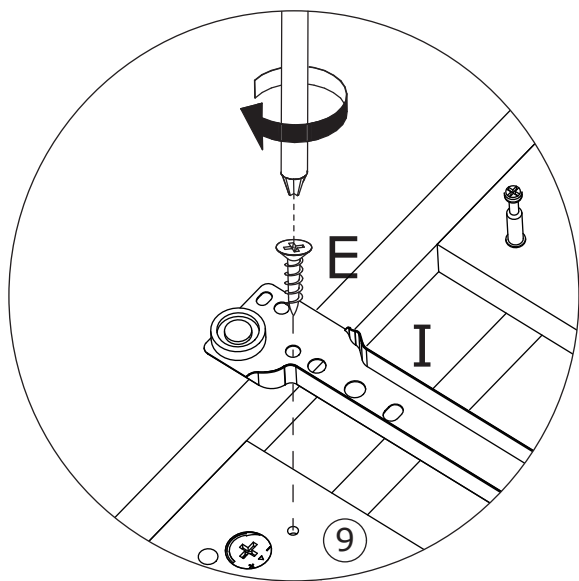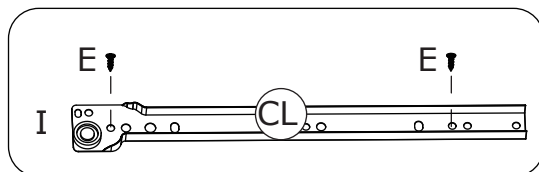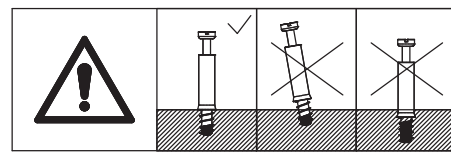

Screw eccentric rod(A) into panel 1 at first.

Fix rail(CL) to panel 9 and 10 with screw(E) as shown.



18

E x 2





Ø3 x 12 mm



I x 1



CL

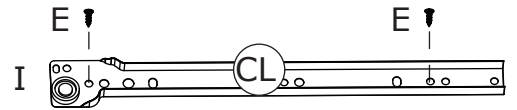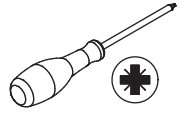


Fix rail(CL) to panel 11 with screw(E) as shown.

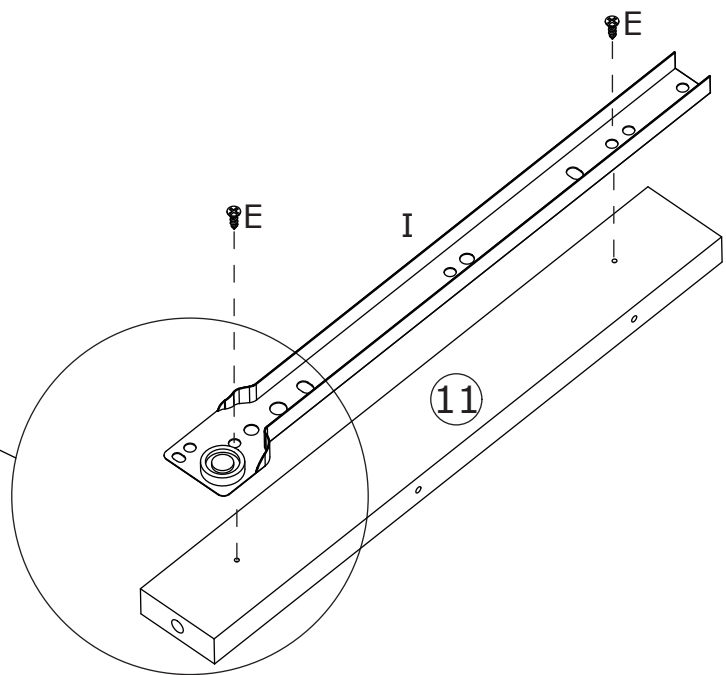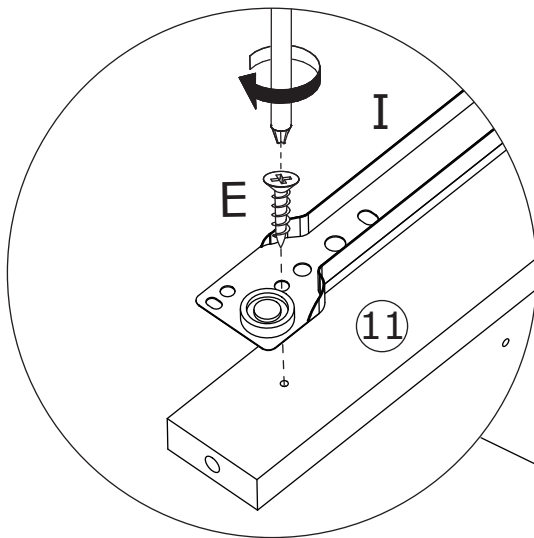


19

<p>E x 2</p>  <p>Ø 3 x 12 mm</p>	<p>J x 1</p>  <p>CR</p>	
---	--	---

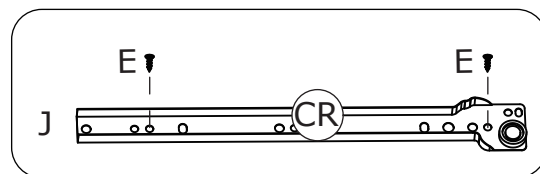

Fix rail(CR) to panel 8 with screw(E) as shown.

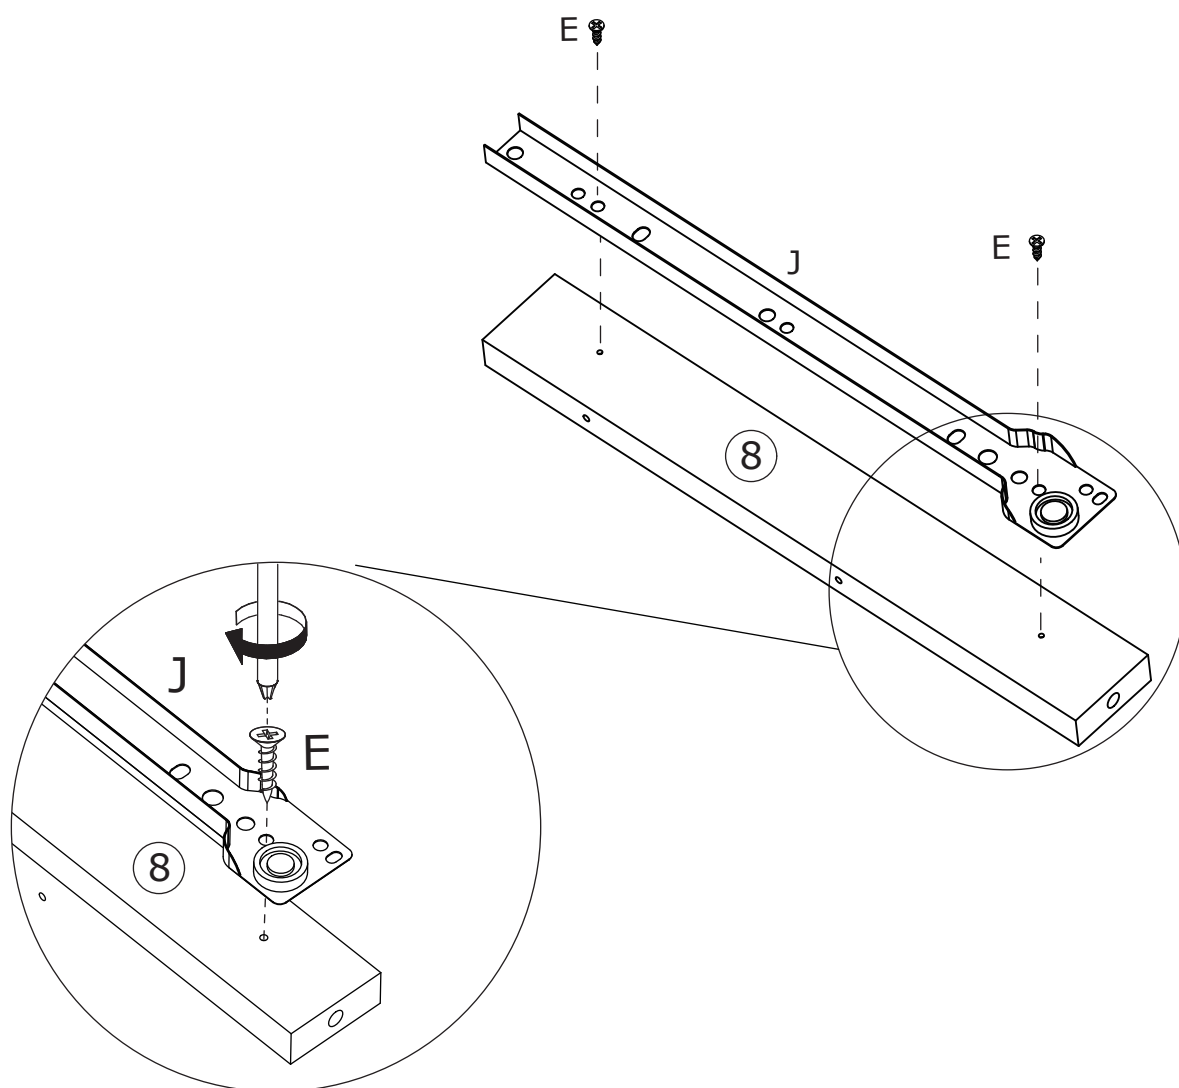

20

E x 16




Ø3 x 12 mm

I x 4




CL

J x 4



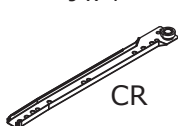


CR


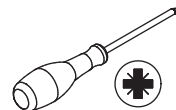


Fix rail(CR) to panel 12 with screw(E)
at first.


Flip to back, fix rail(CL) as well.

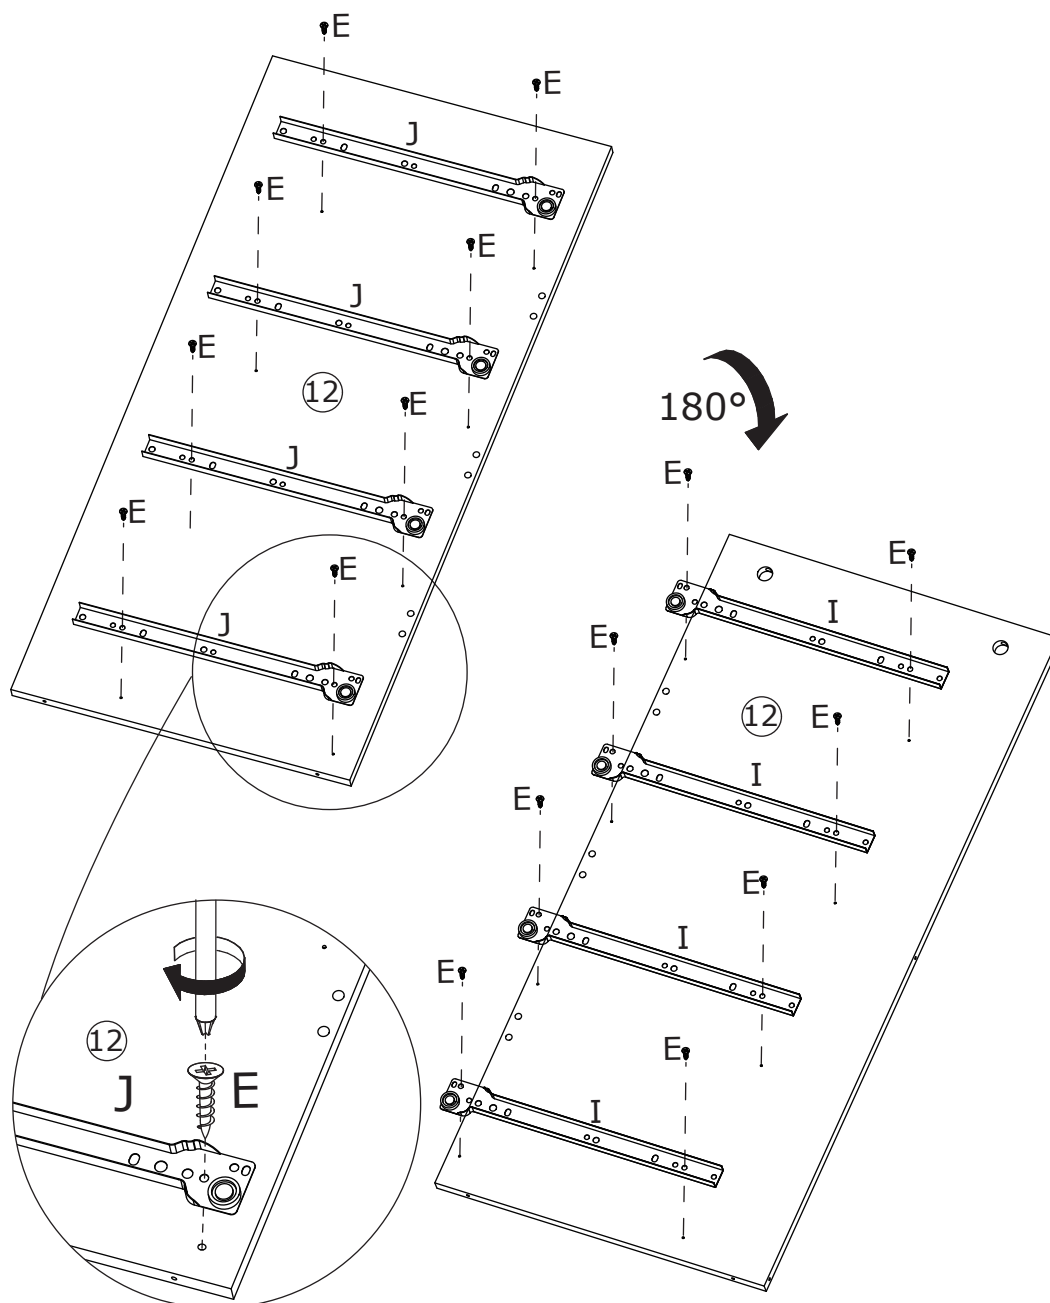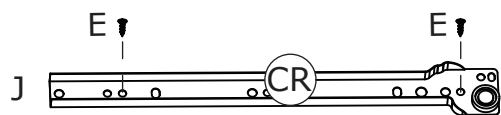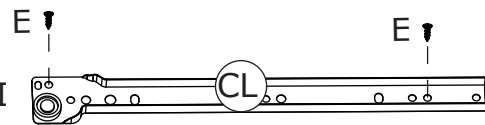


21

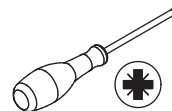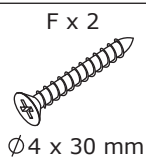

Fix panel 12 to panel 14 with screw(F) as shown.


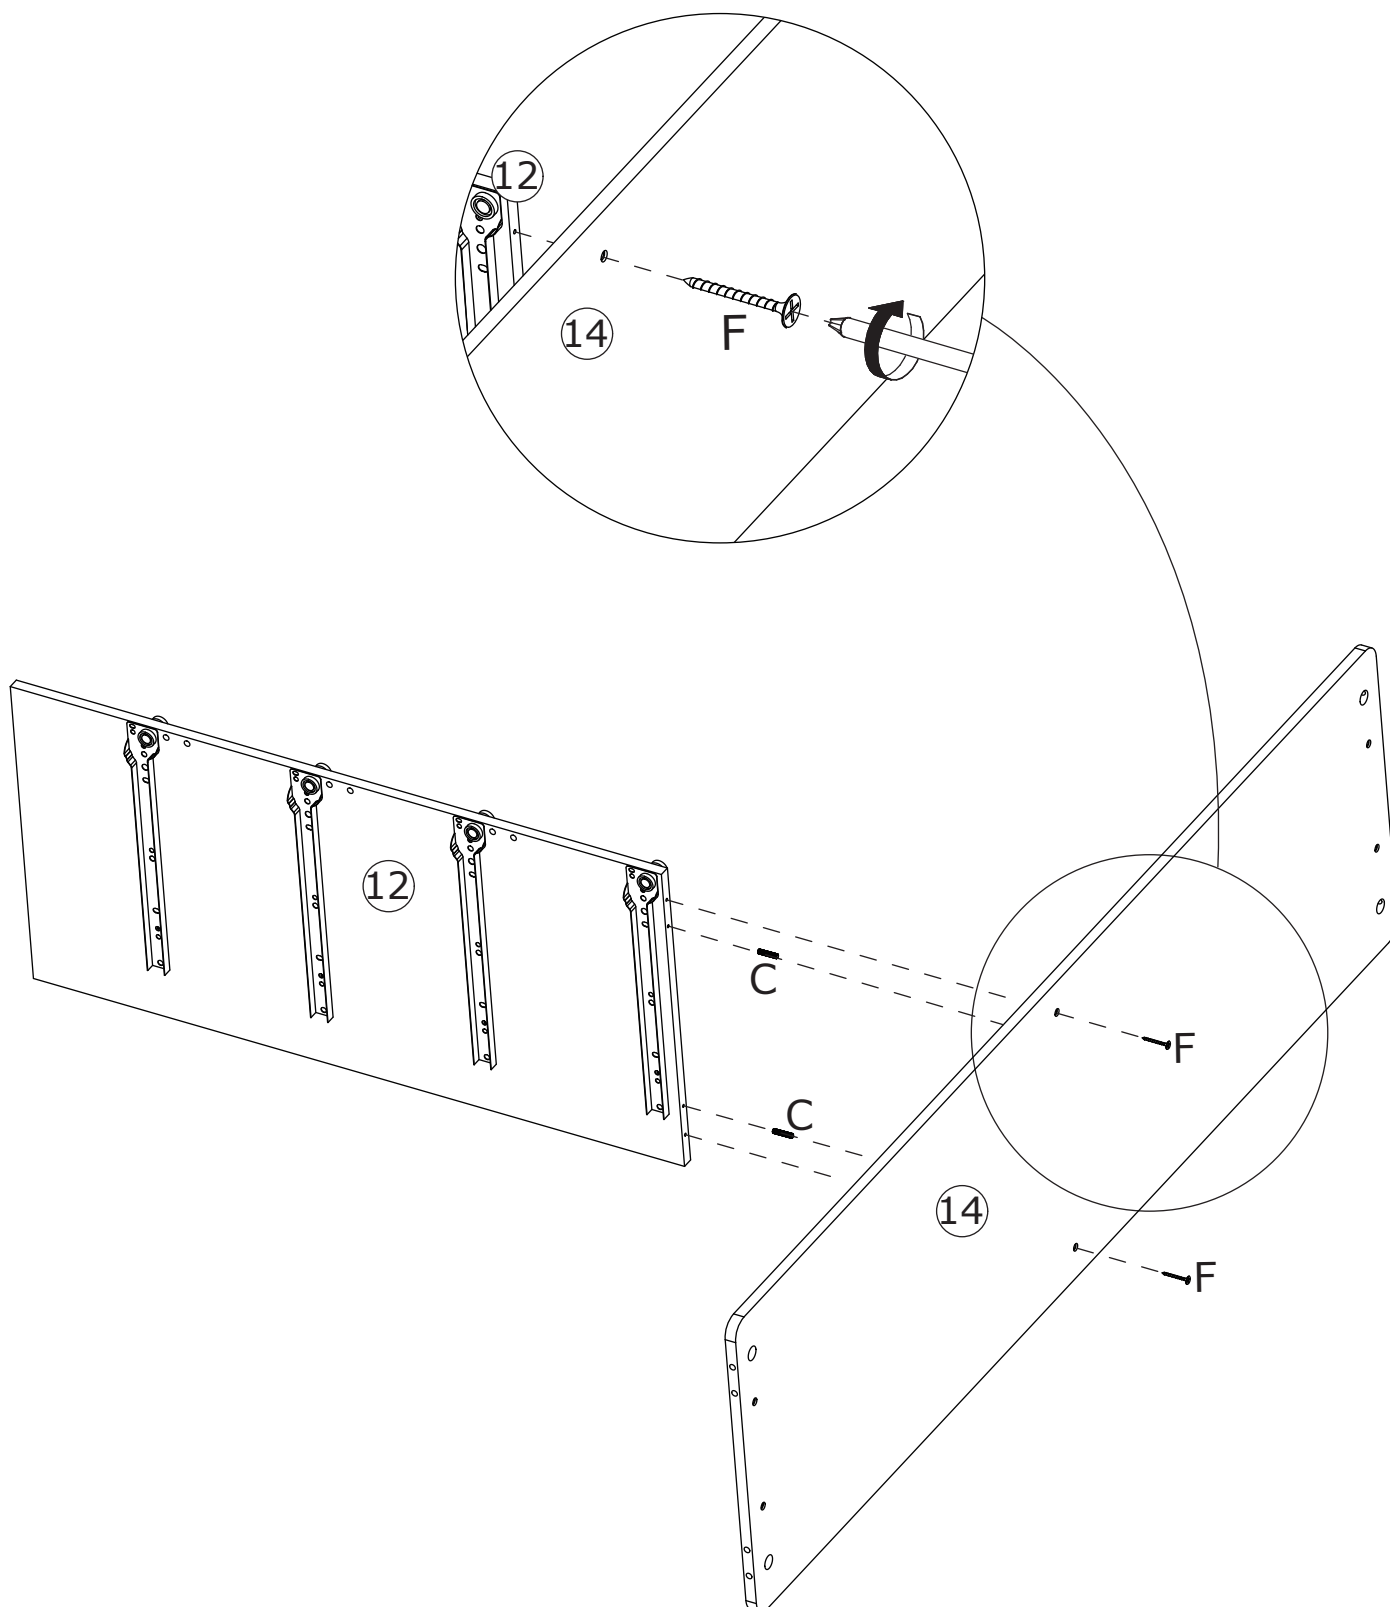


22

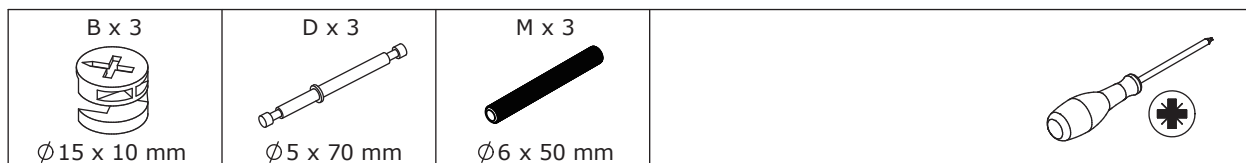


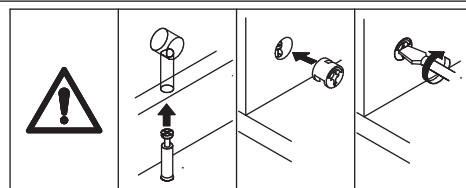
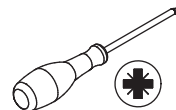
Screw eccentric rod(D) into panel 12 at first.

Attach panel 18 to panel 12 using wooden dowel(M), add cam lock(B) into panel 18 and turn clockwise to tighten as shown.

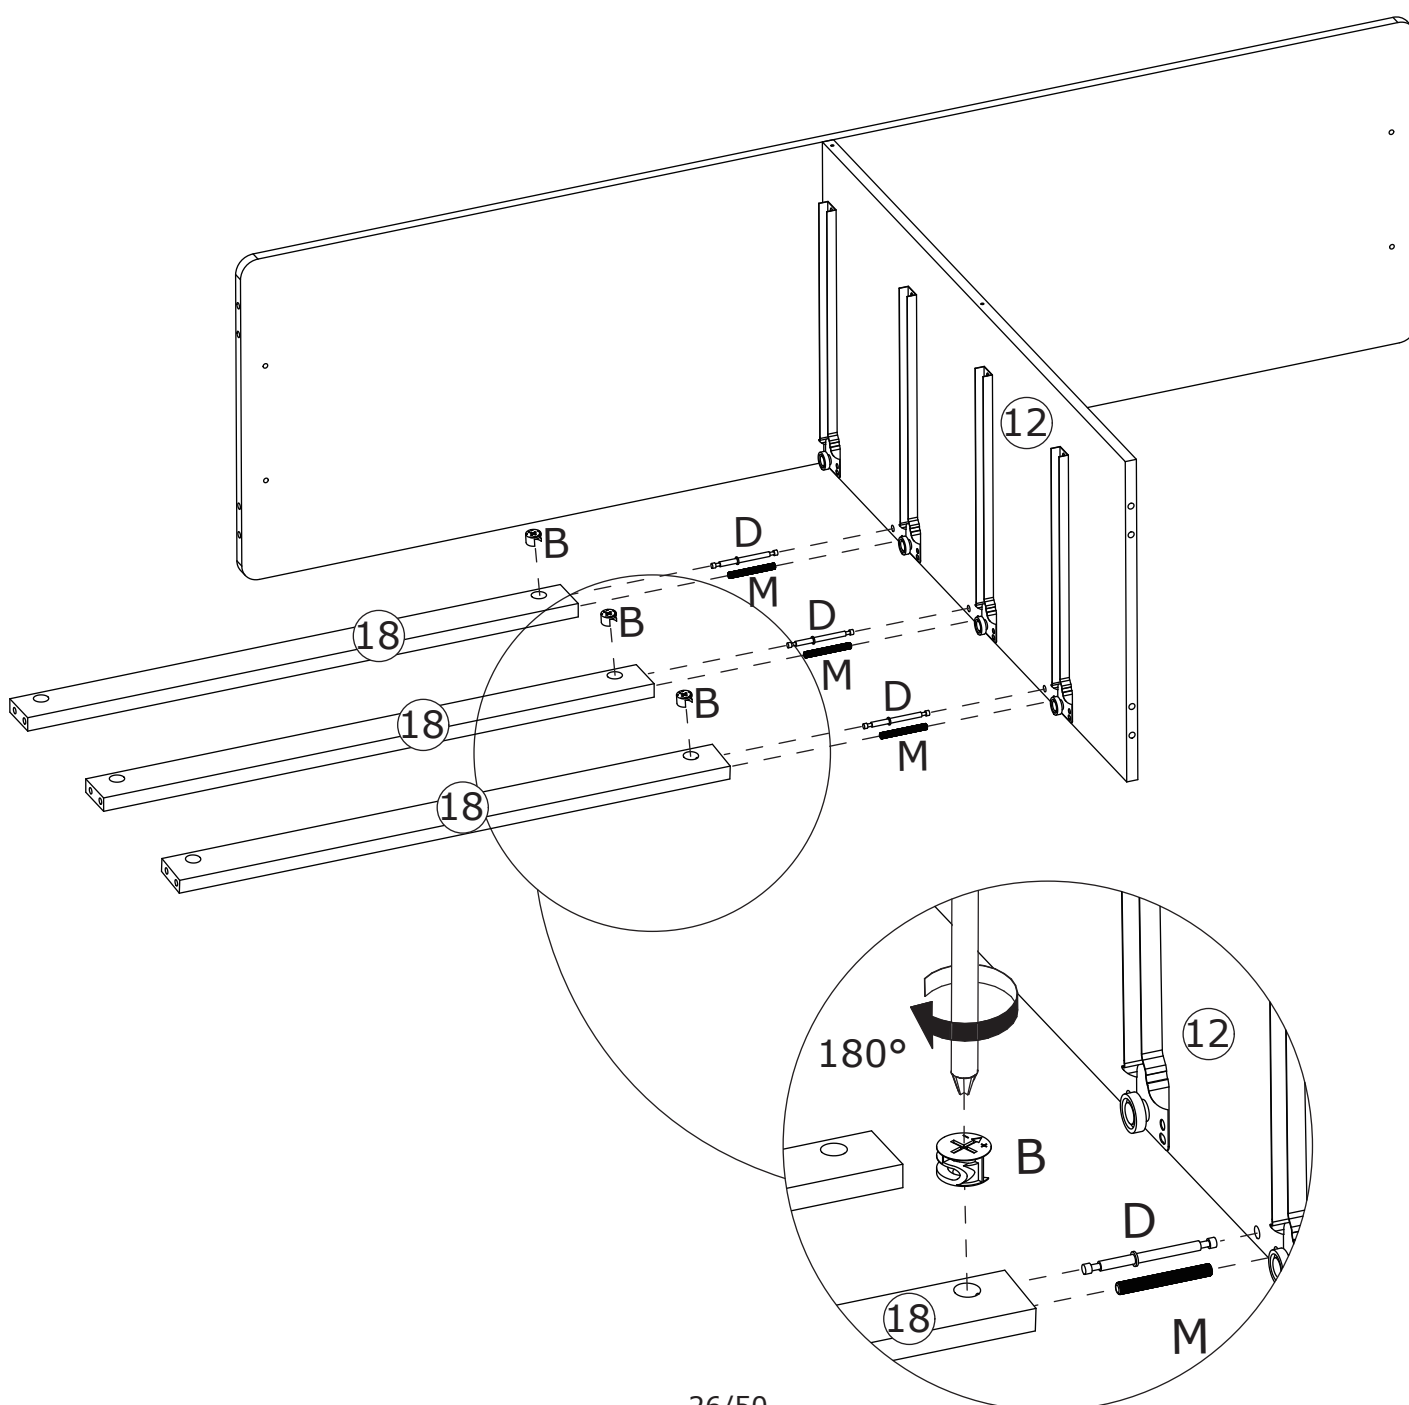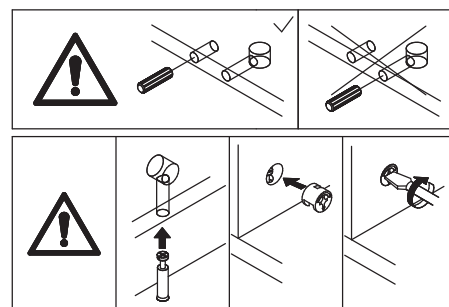


23





B x 3

 Ø 15 x 10 mm

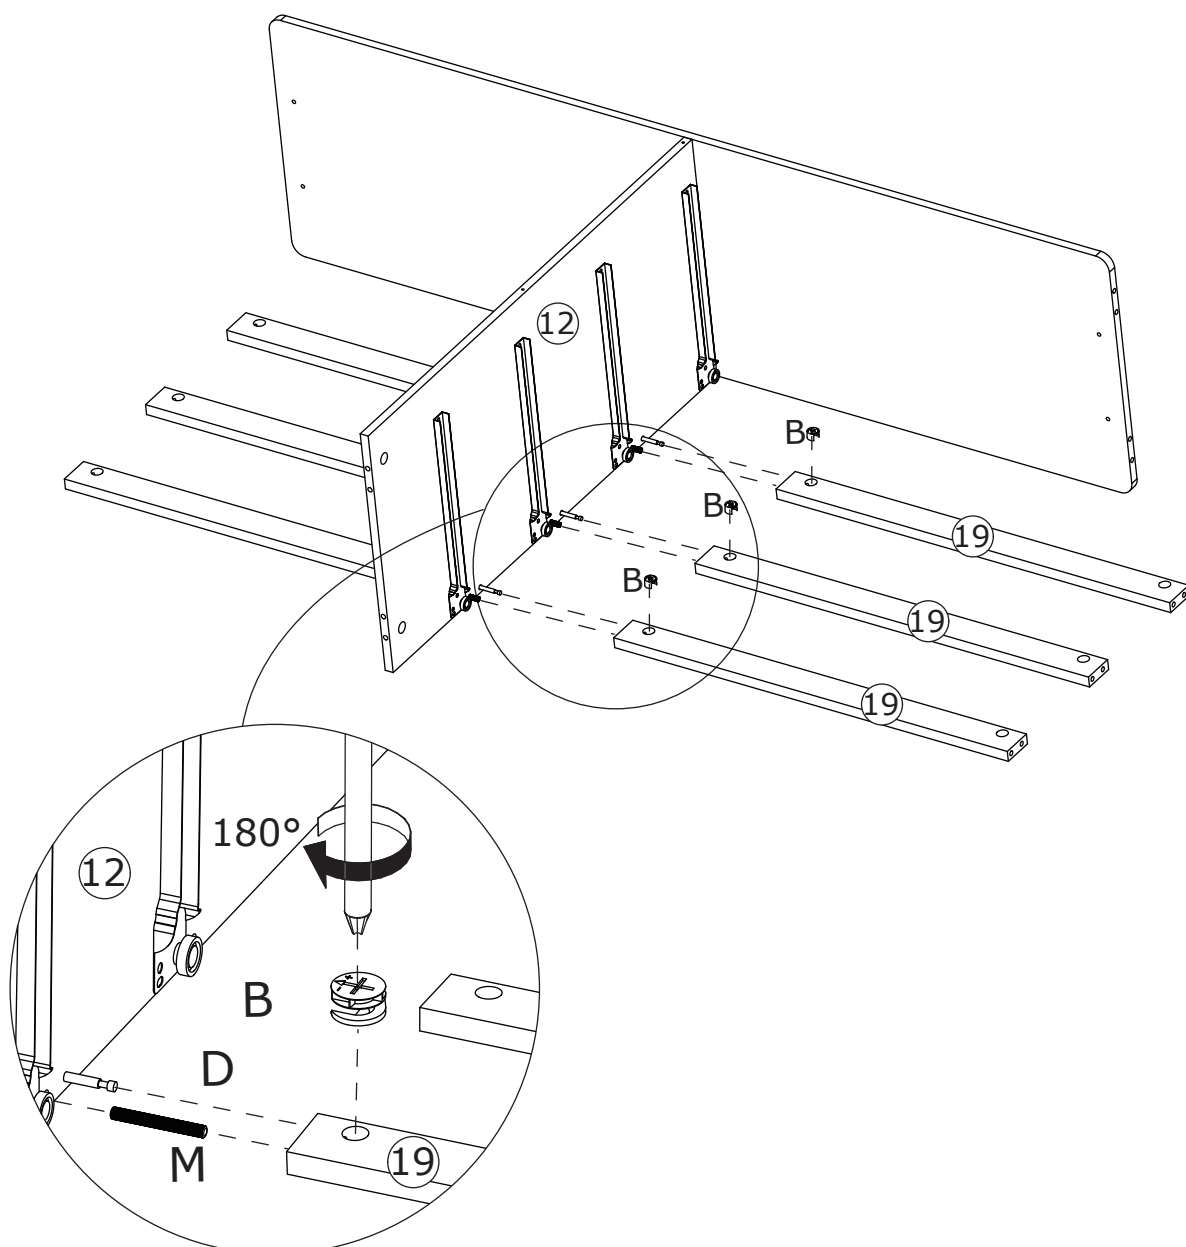



Attach panel 19 to panel 12, add cam lock(B)
 into panel 19 and turn clockwise to tighten
 as shown.

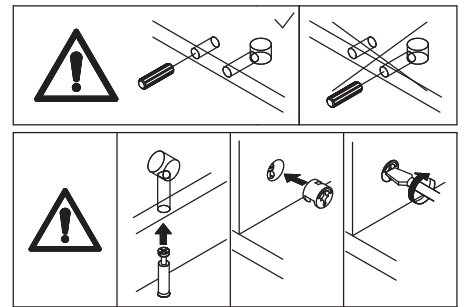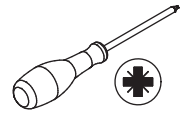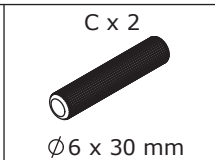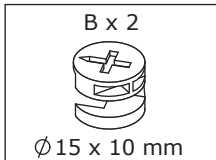


24




Attach panel 13 to panel 12 using wooden dowel(C), add cam lock(B) into panel 12 and turn clockwise to tighten as shown.

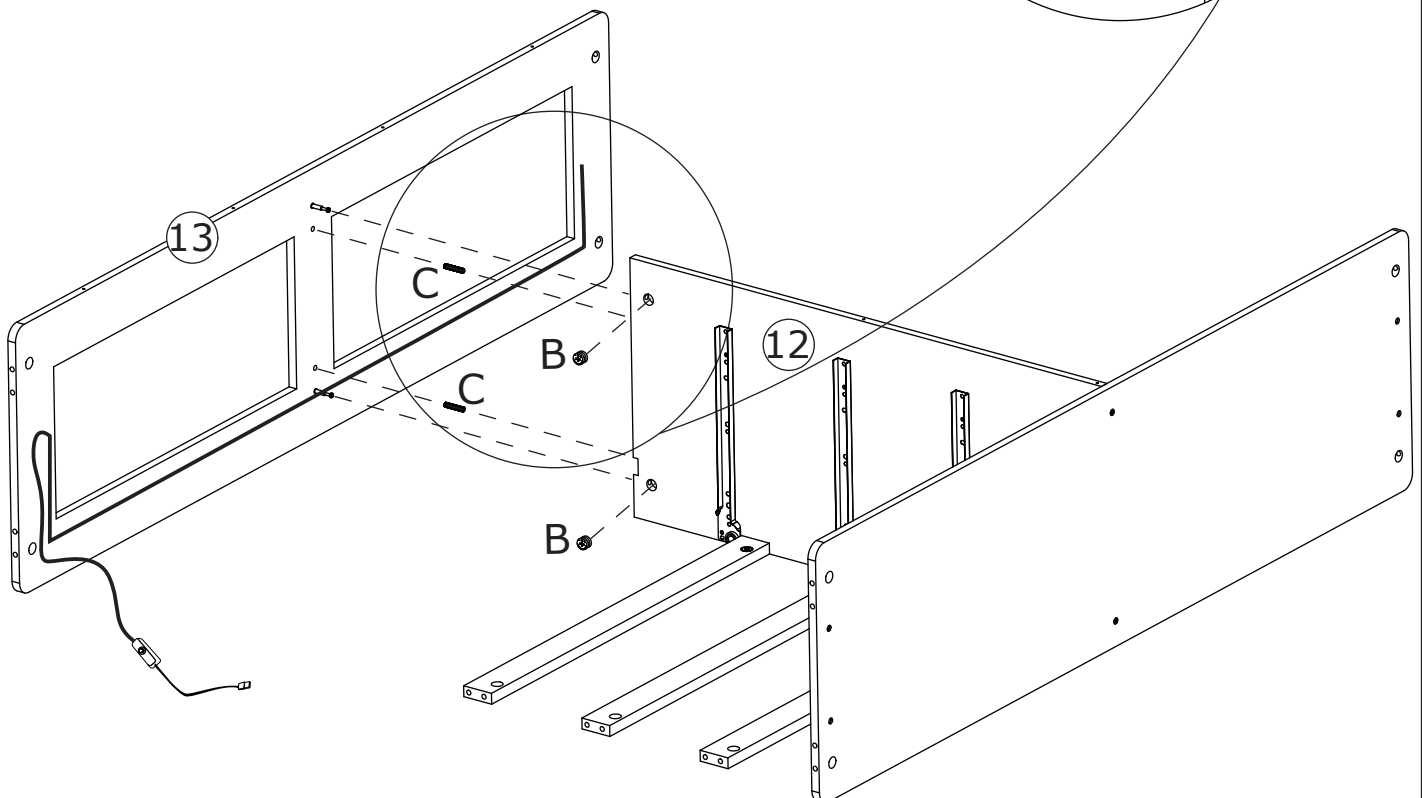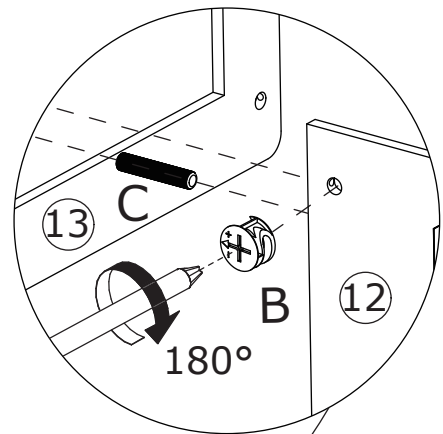





25

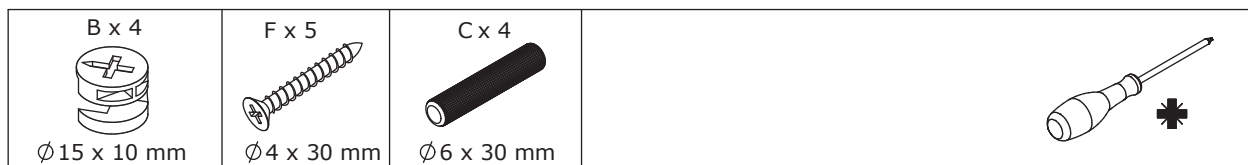


Attach panel 15, 16 and 17 to panel 2, add cam lock(B) into and turn clockwise to tighten as shown.

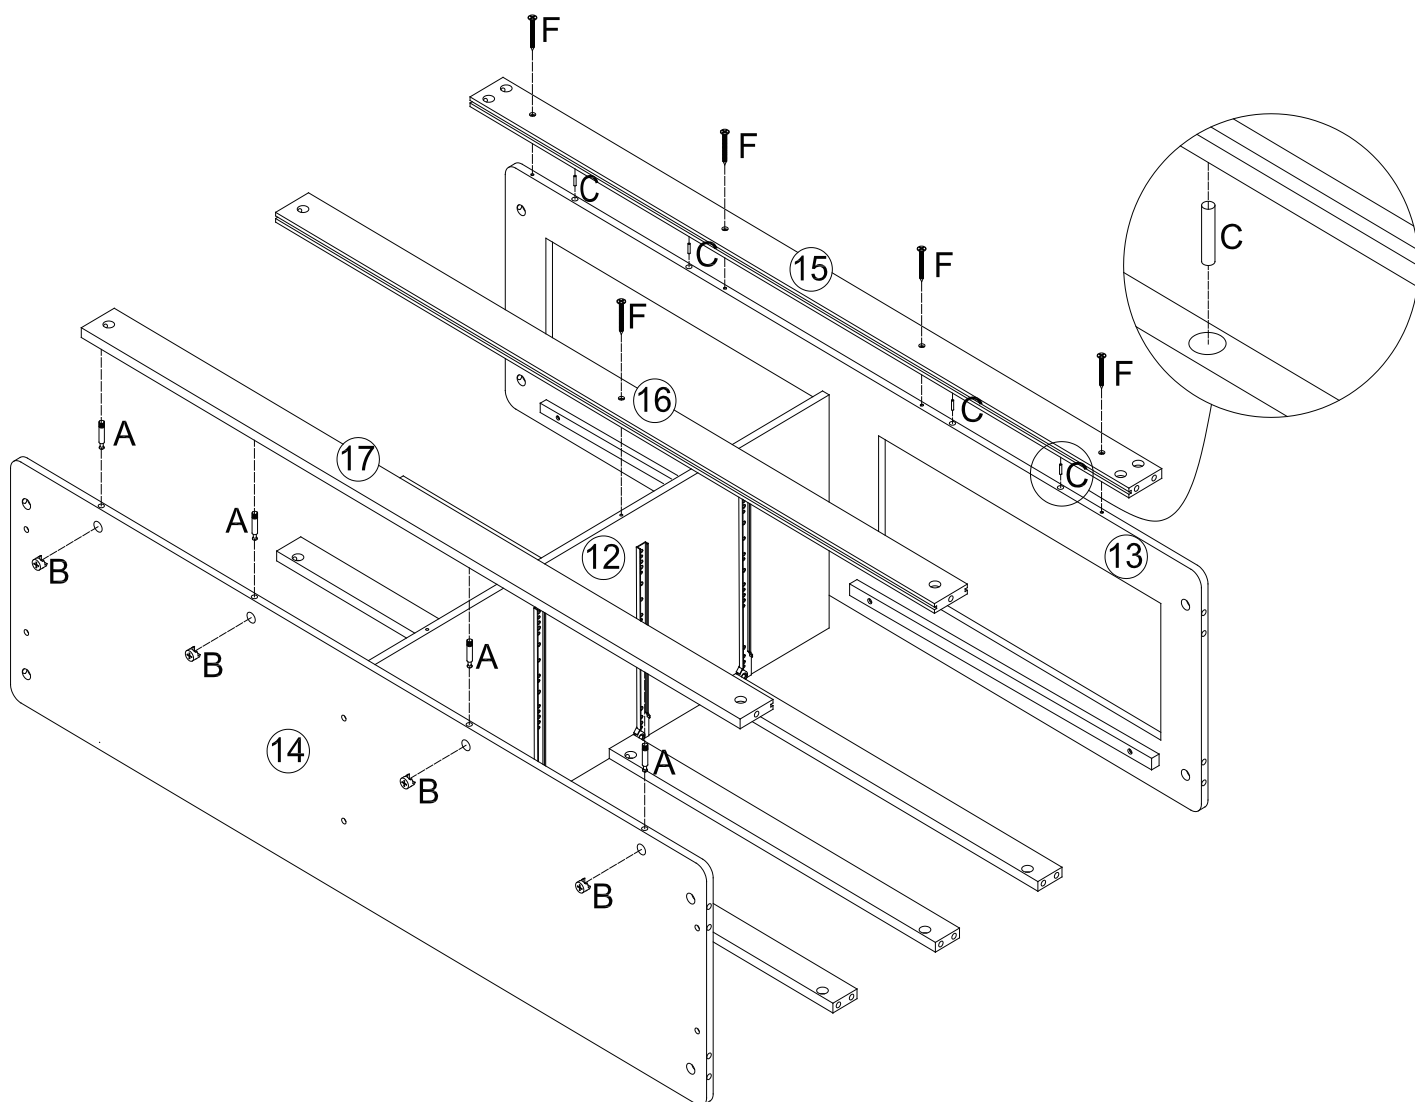

26

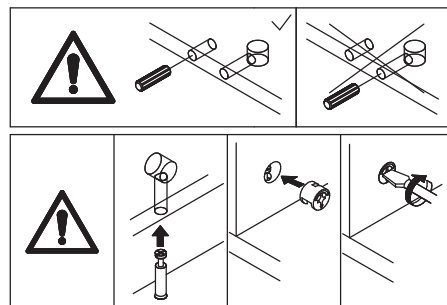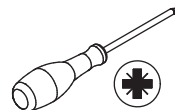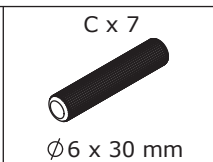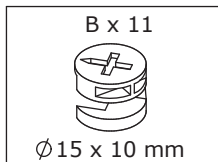


Attach the component(assembled in step 13)
to panel 13, 18 and 14 using wooden dowel(C),
add cam lock(B) into and turn clockwise to
tighten as shown.




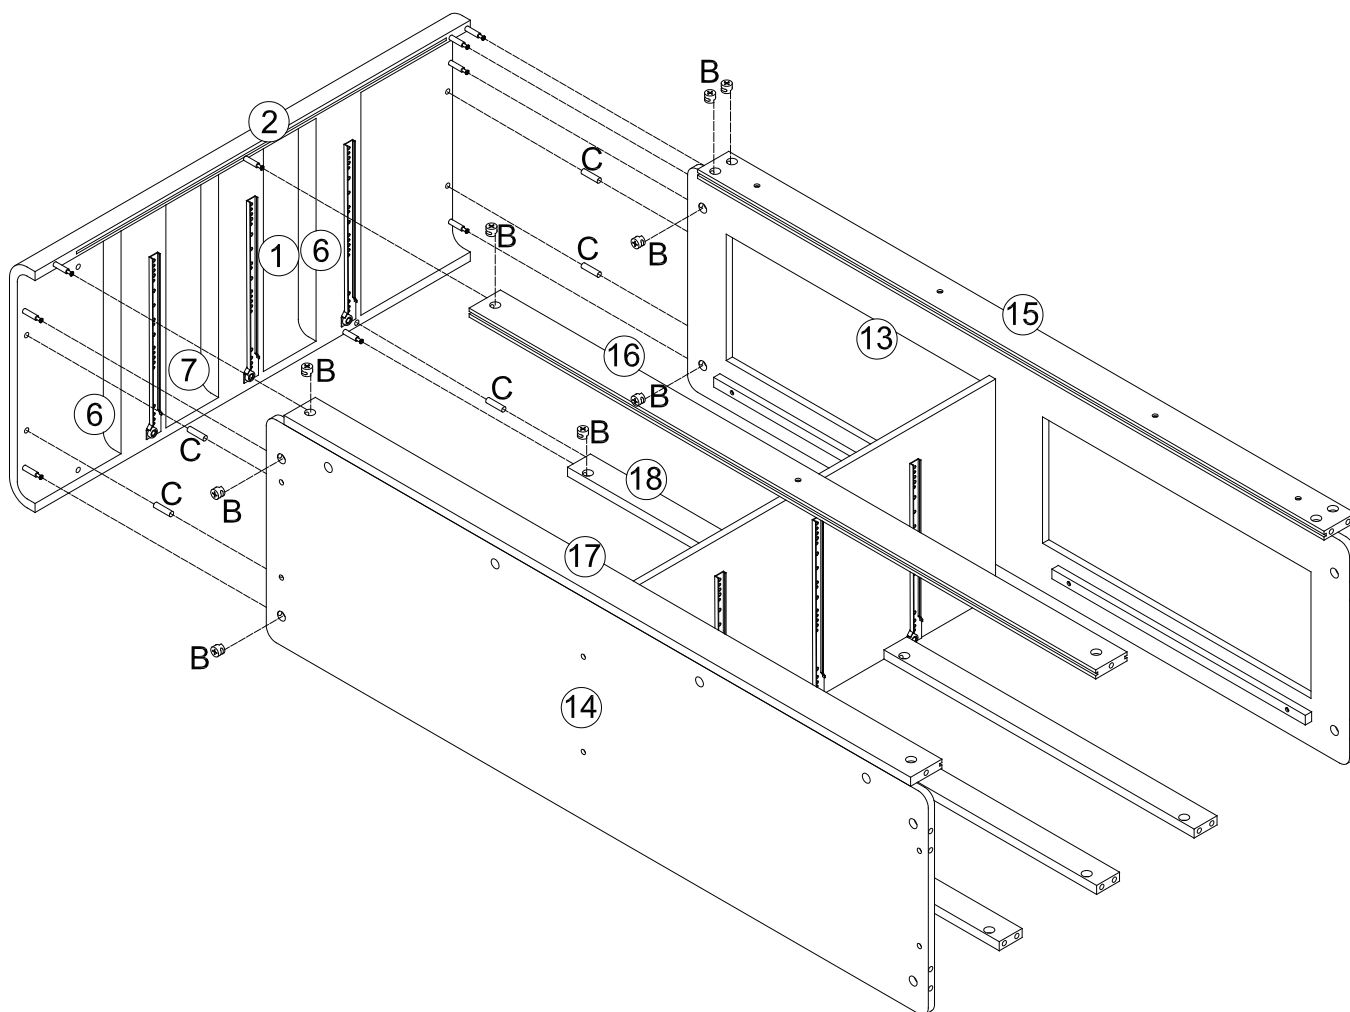


27


Insert back panel 20 along available grooves as shown.

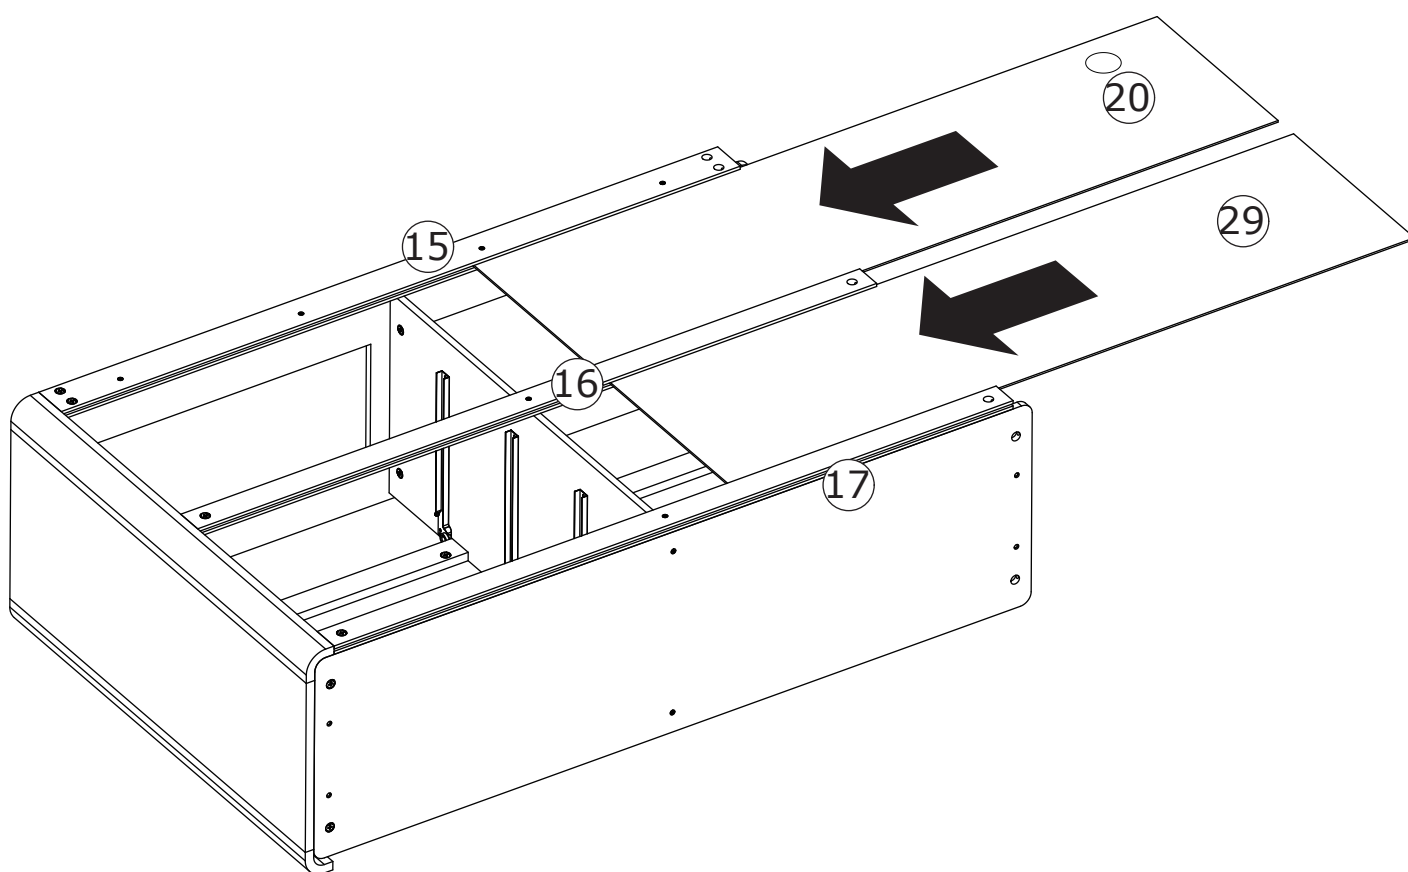

28

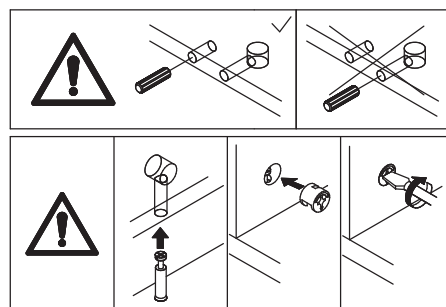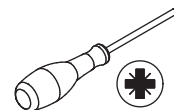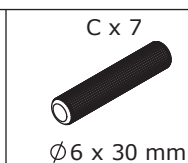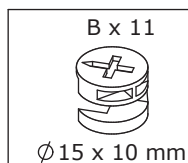

Attach the component(assembled in step 17) to panel 13, 14, 15, 16, 17 and 19 using wooden dowel(C), add cam lock(B) into and turn clockwise to tighten as shown.

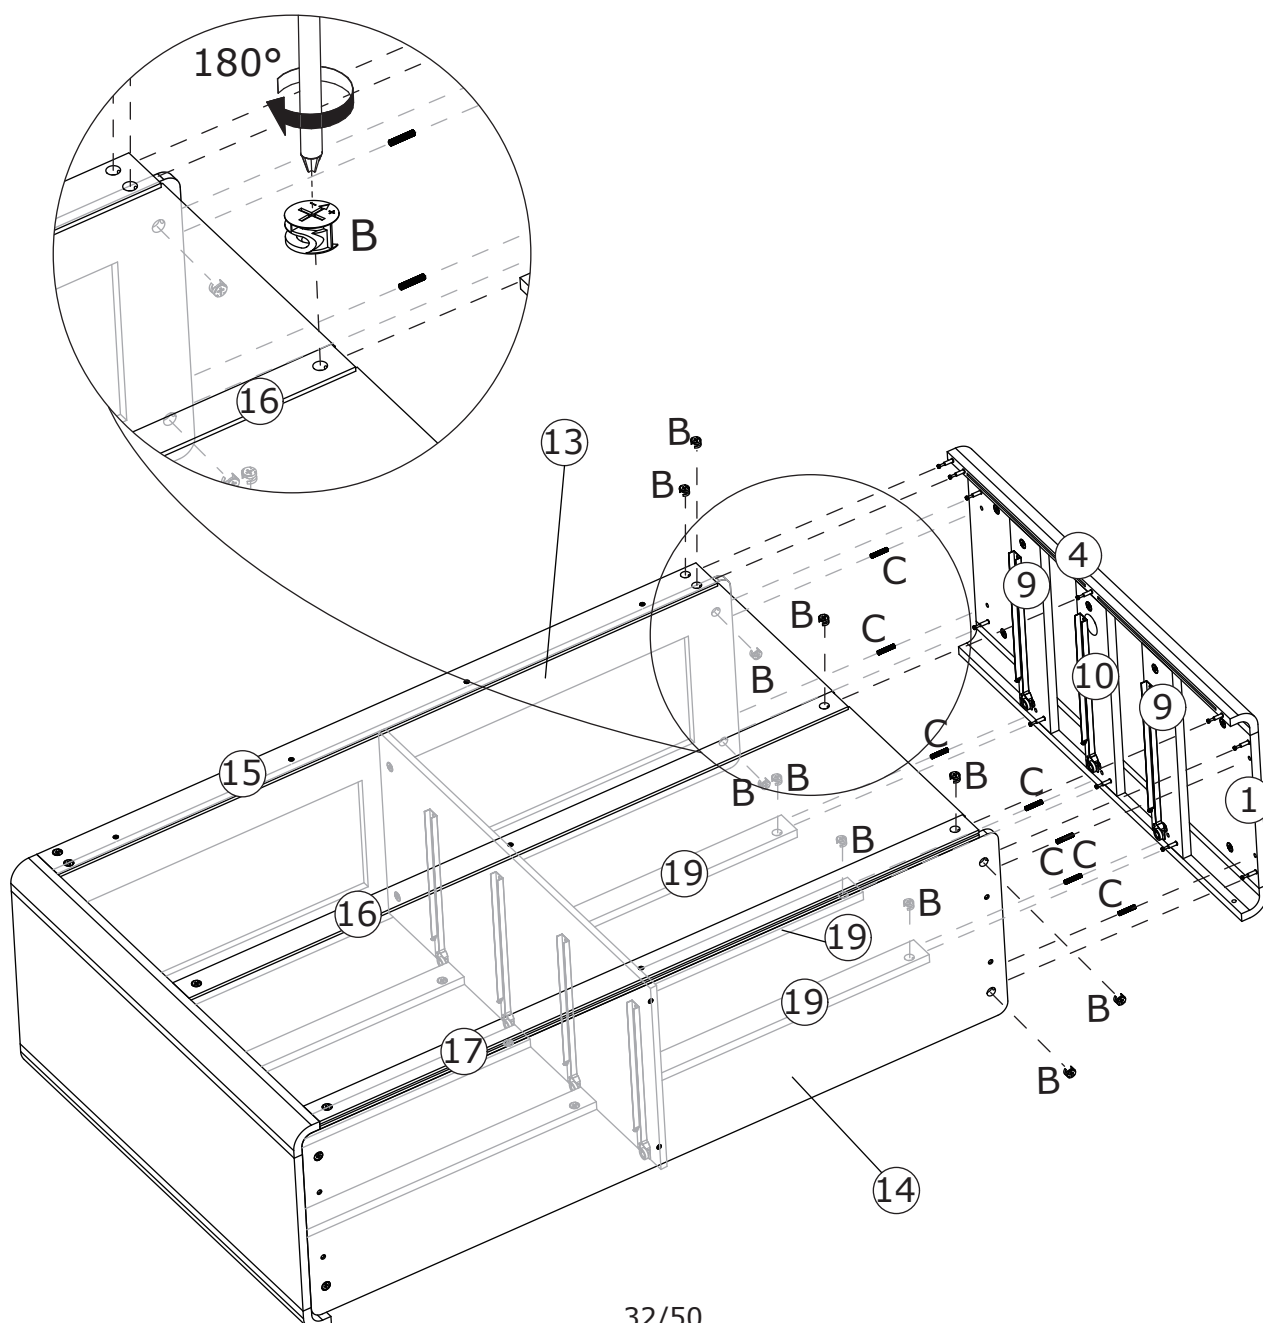

29

C x 2






Ø6 x 30 mm

F x 8





Ø4 x 30 mm

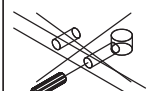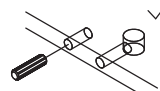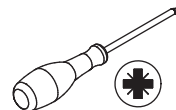



Attach panel 8 and 11 to panel 3 and 5 using wooden dowel(C).

Fix panel 8 and 11 to panel 14 with screw(F) as shown.

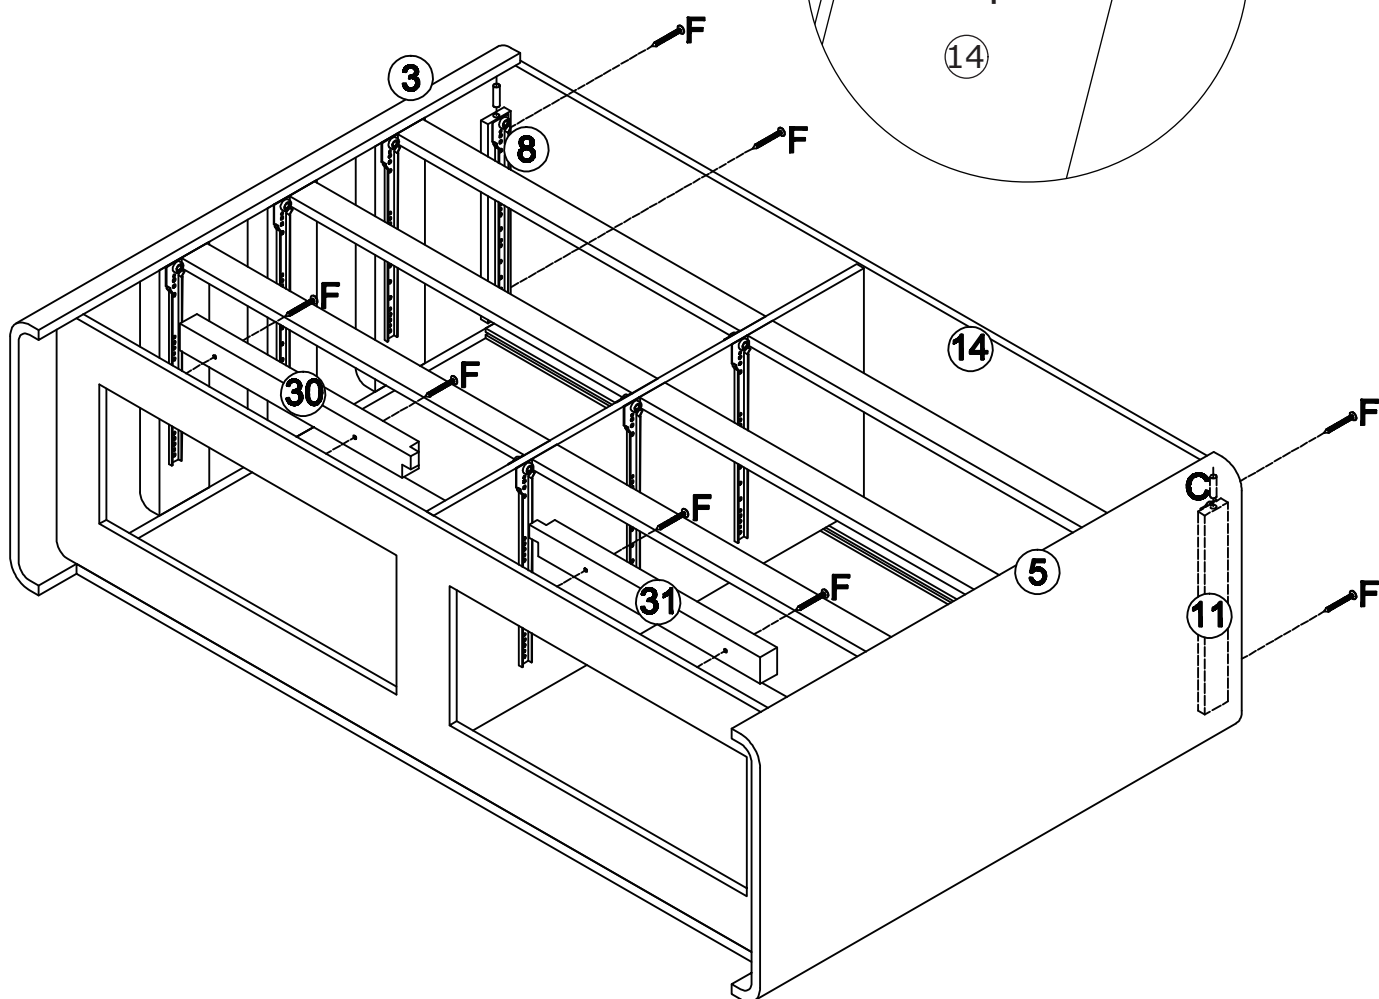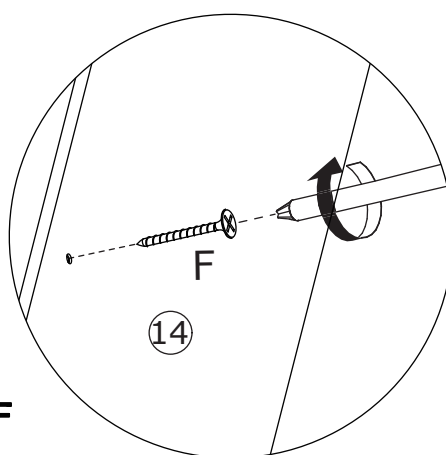


30

A x 20
Ø6 x 35 mm

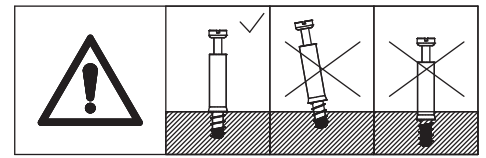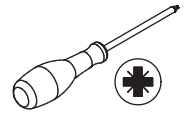



Screw eccentric rod(A) into
panel 22 at first.

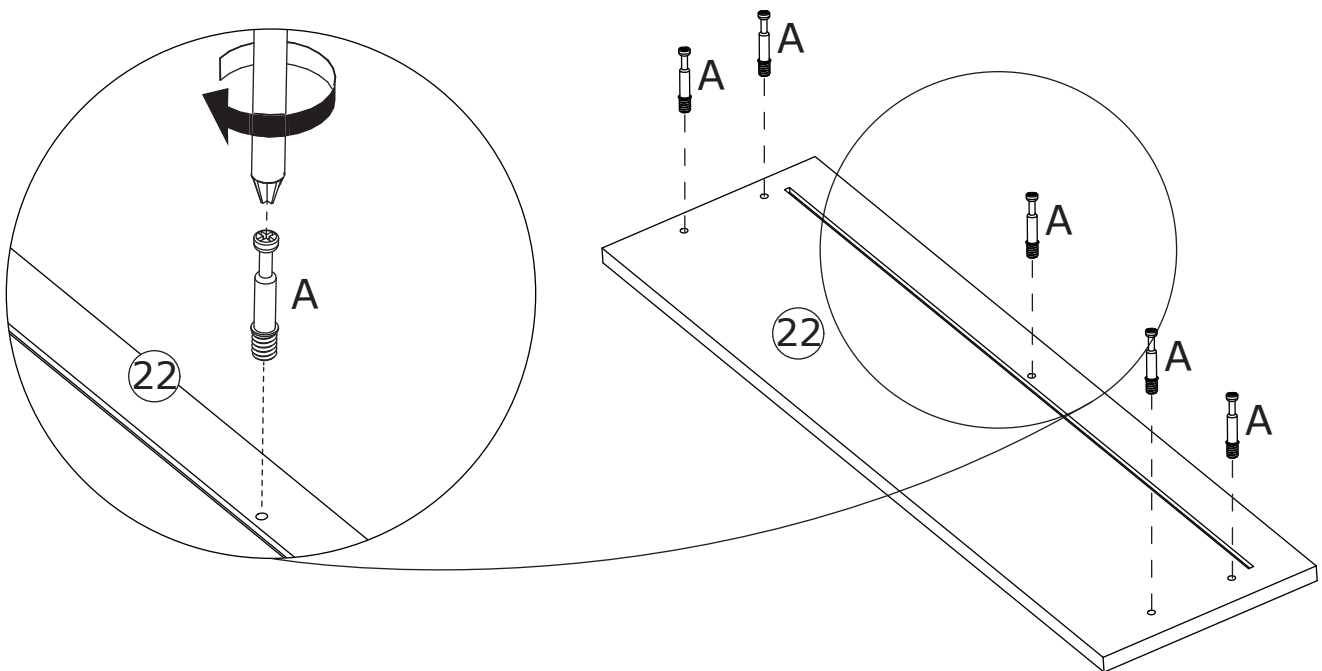


x4

31

A x 20
Ø6 x 35 mm


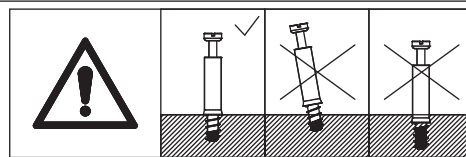
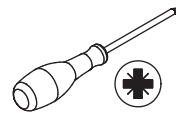


Screw eccentric rod(A) into panel 23 at first.


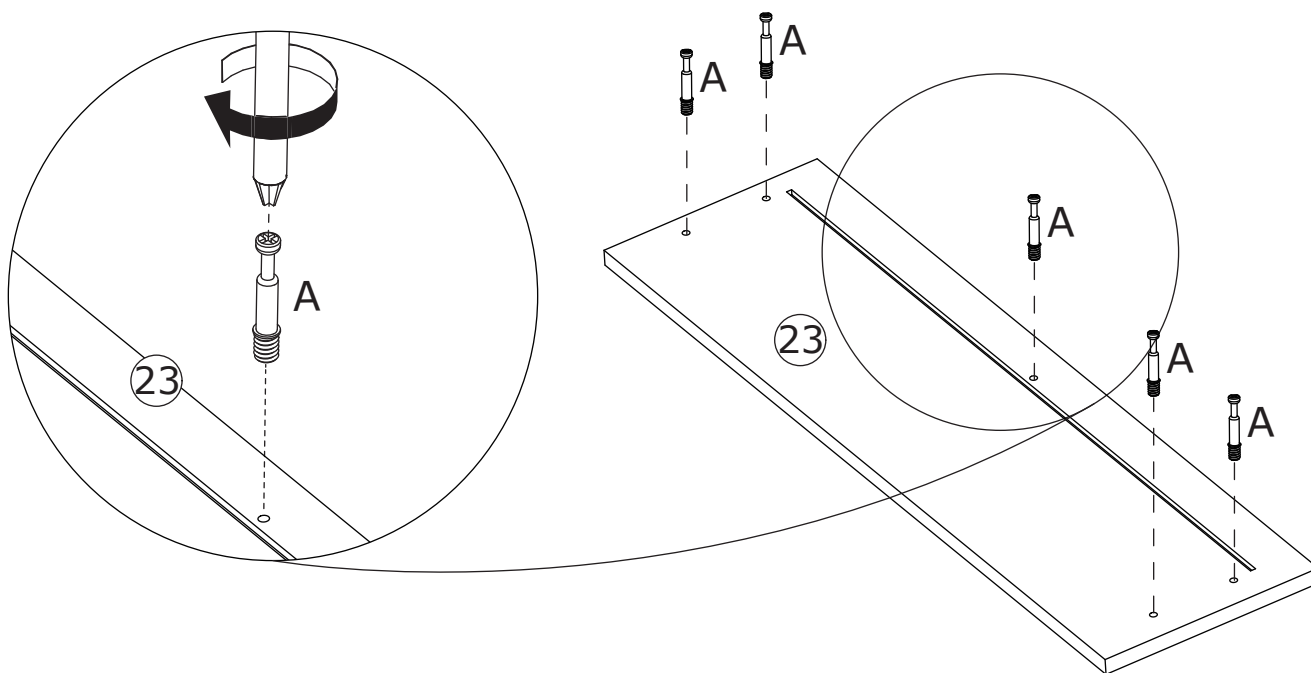


x4

32

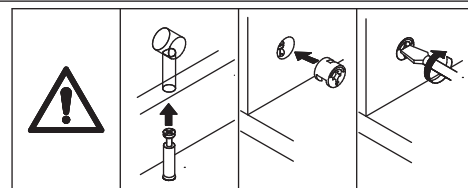
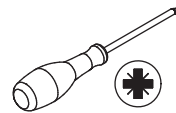
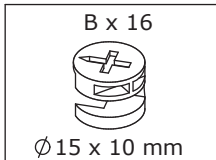


Attach panel 22 to panel 24 and 25,
add cam lock(B) into and turn clockwise
to tighten as shown.

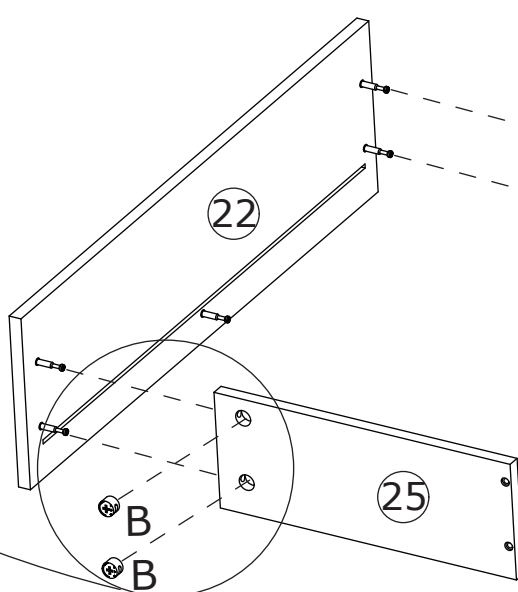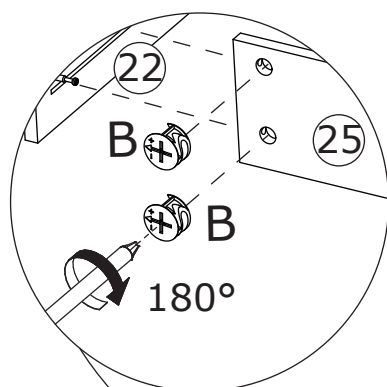


x4

33

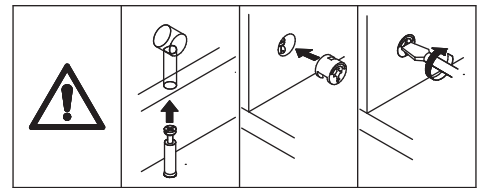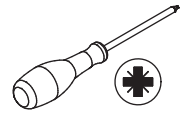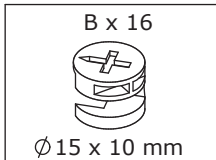


Attach panel 23 to panel 24 and 25, add cam lock(B) into and turn clockwise to tighten as shown.

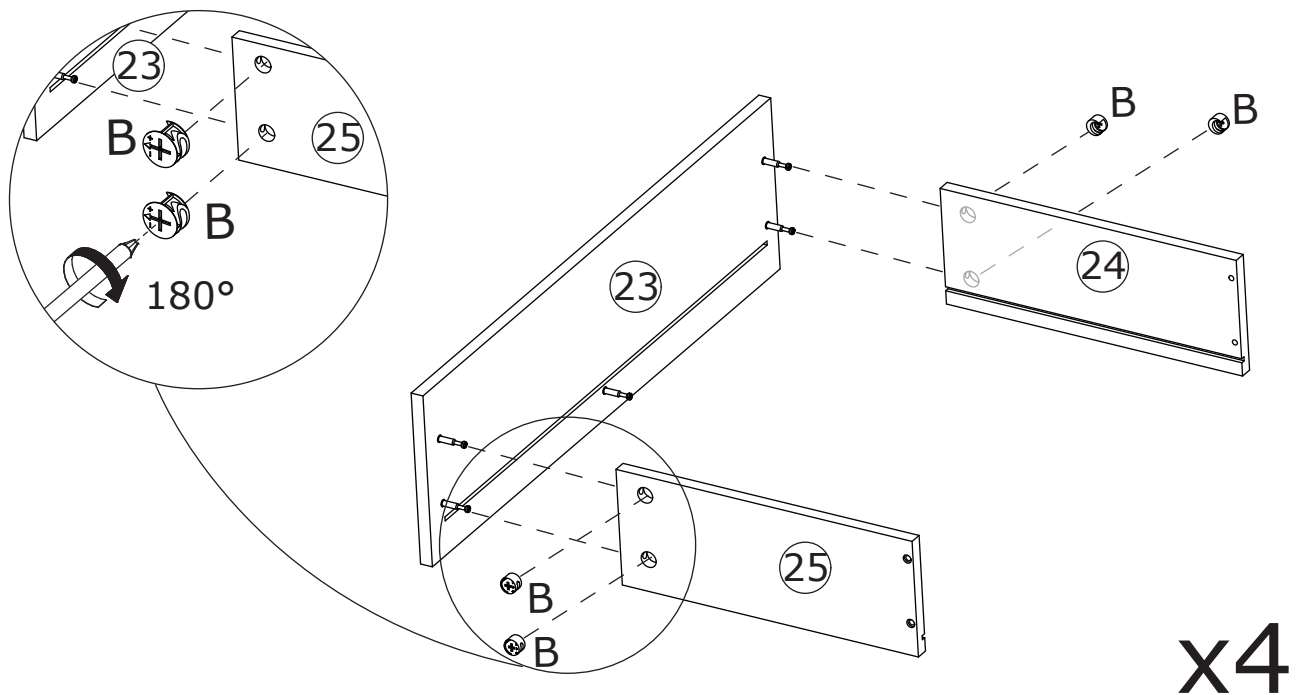

34


Insert back panel 26 along available grooves as shown.

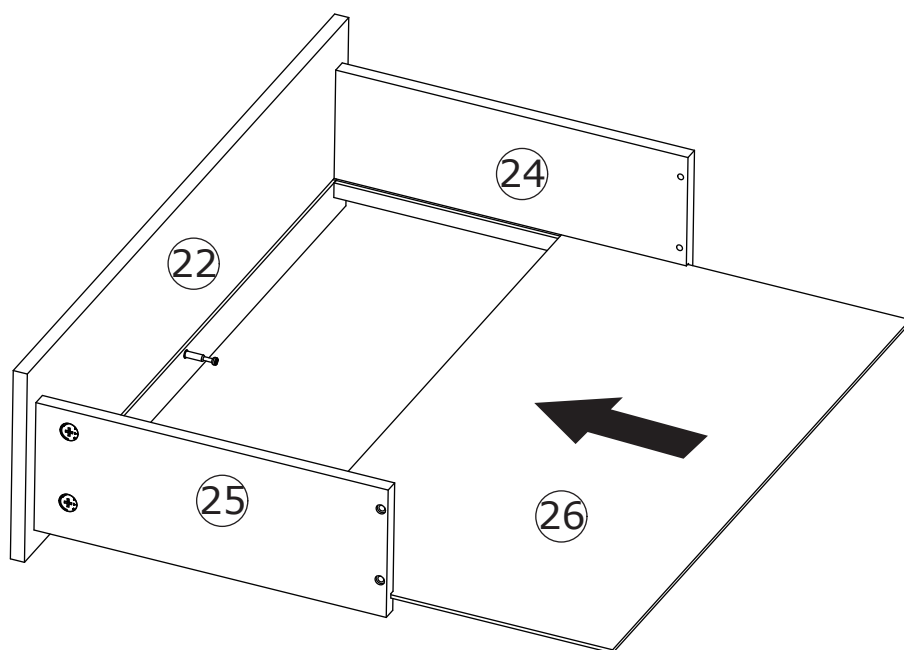

x4




35

Insert back panel 26 along available grooves as shown.

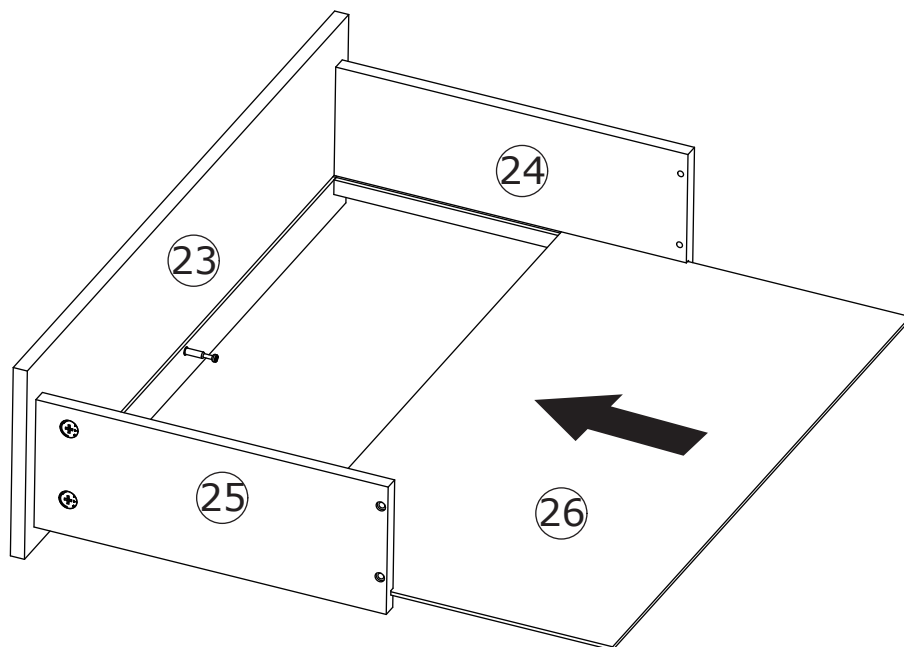


x4

36

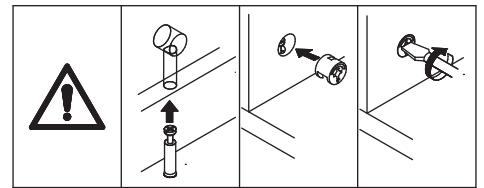
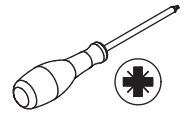
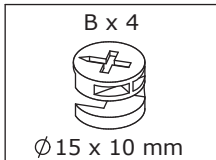


Attach panel 28 to panel 22, add cam lock(B) into and turn clockwise to tighten as shown.

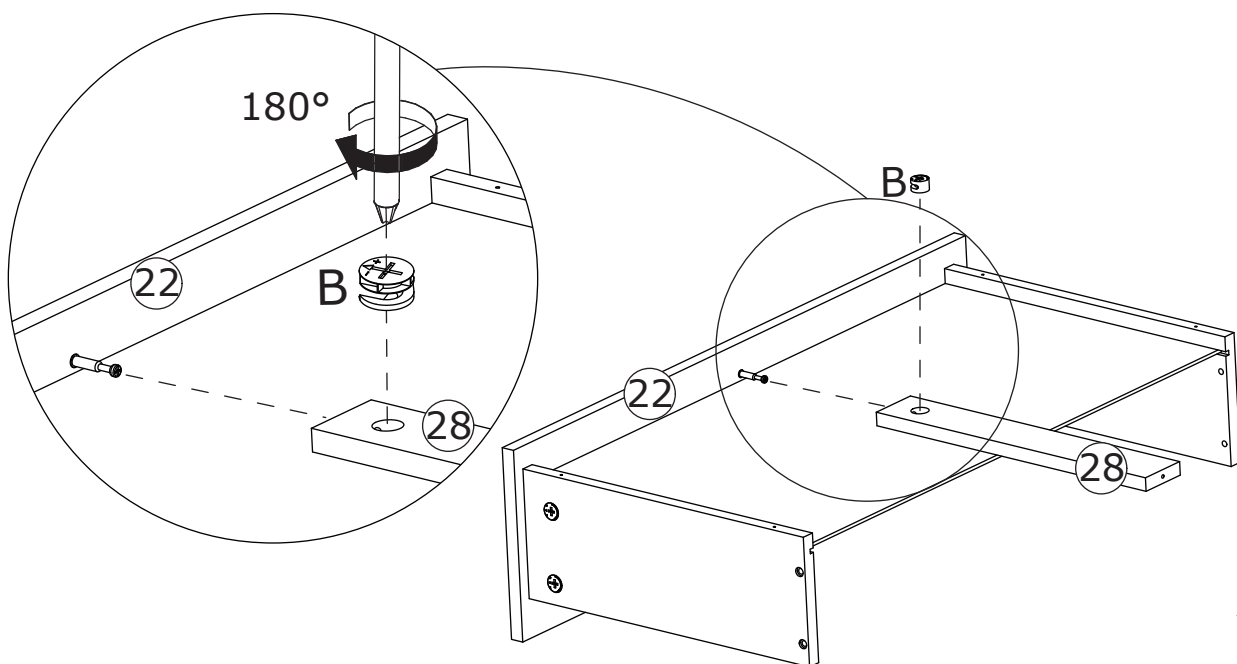


x4

37

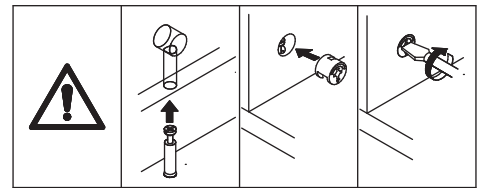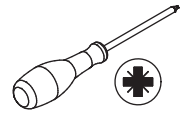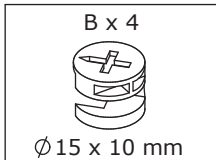


Attach panel 28 to panel 23, add cam lock(B) into and turn clockwise to tighten as shown.

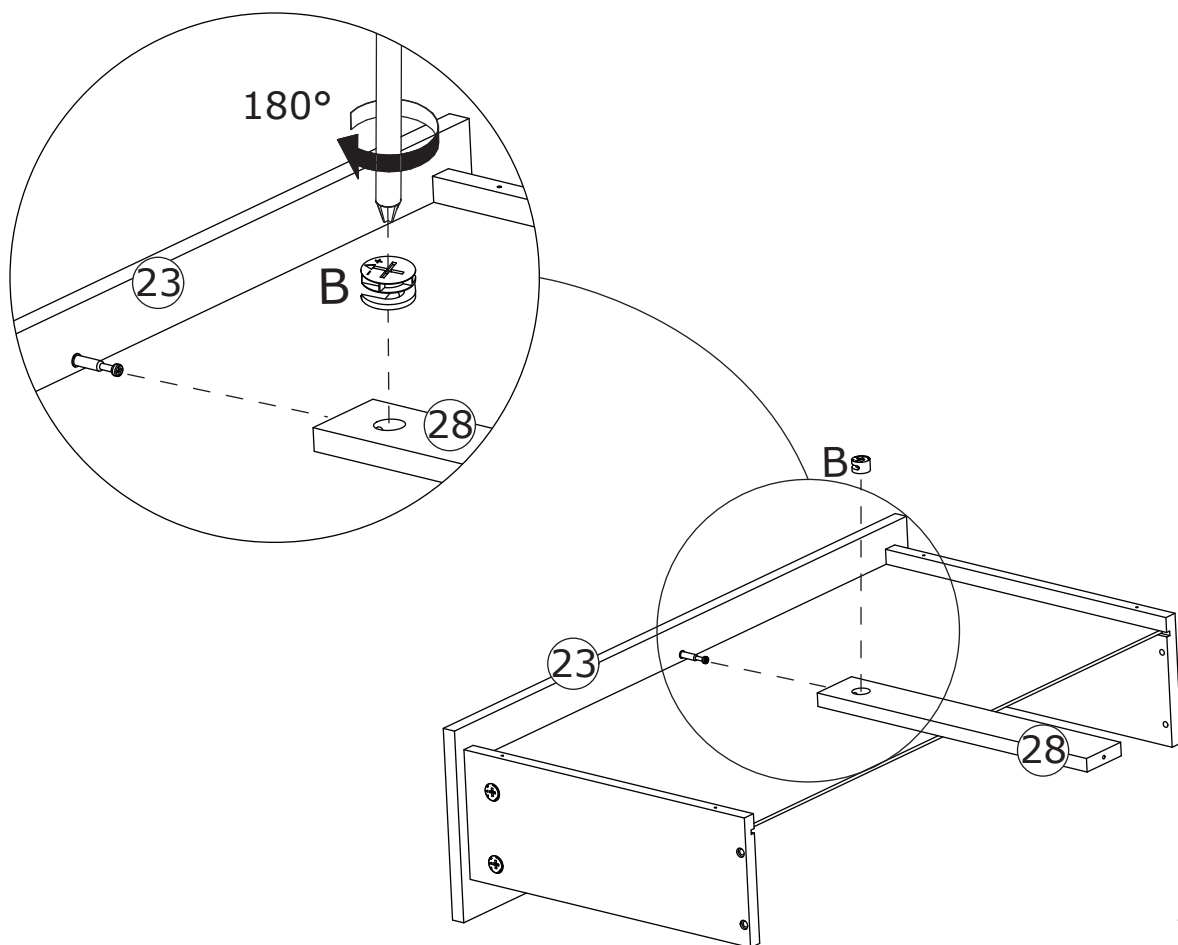


x4

38

F x 20
Ø4 x 30 mm

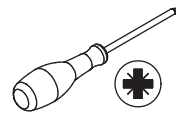


Fix panel 27 to panel 24, 28 and 25
with screw(F) as shown.

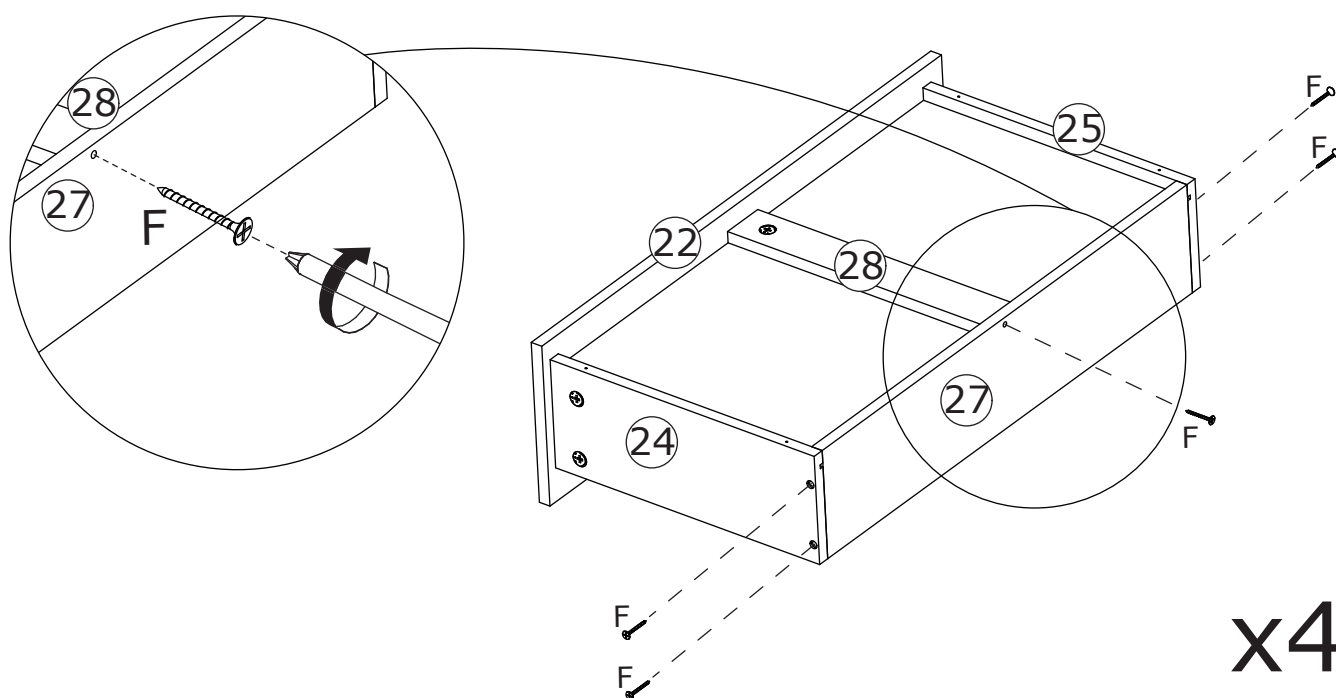


39


F x 20
Ø 4 x 30 mm

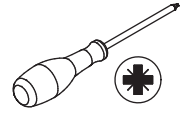


Fix panel 27 to panel 24, 28 and 25
with screw(F) as shown.

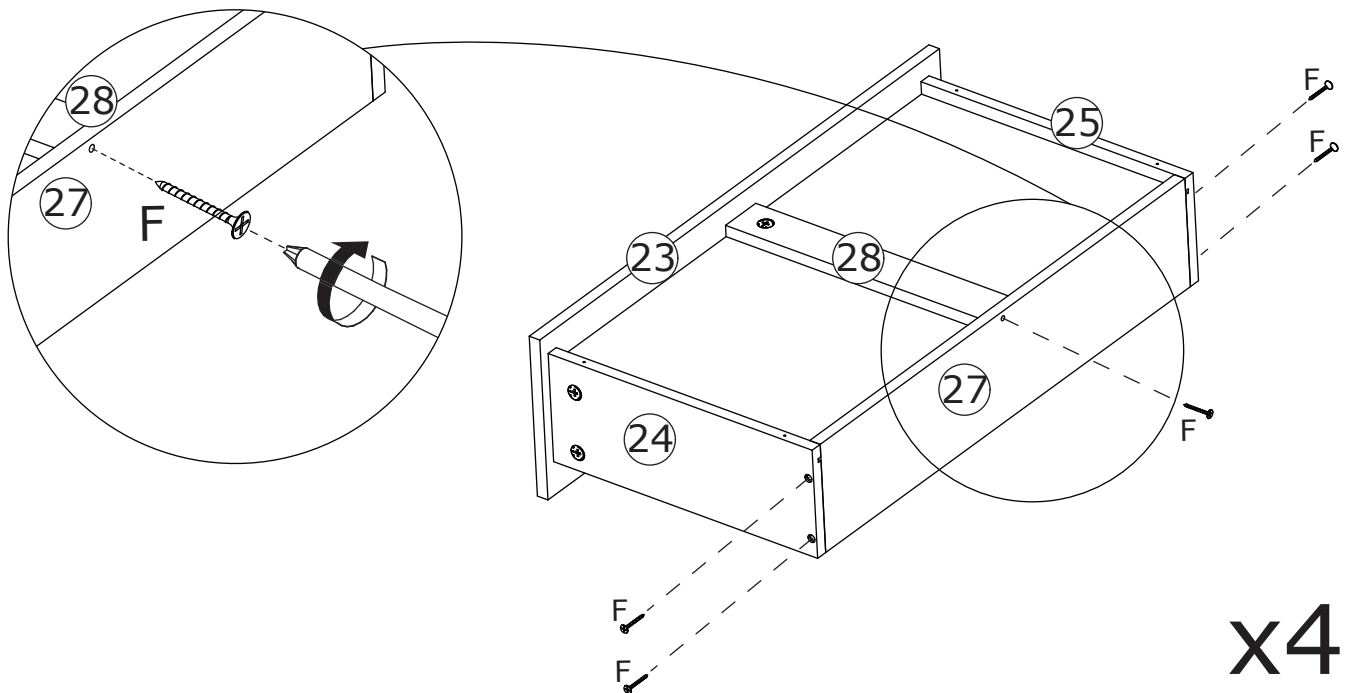

40

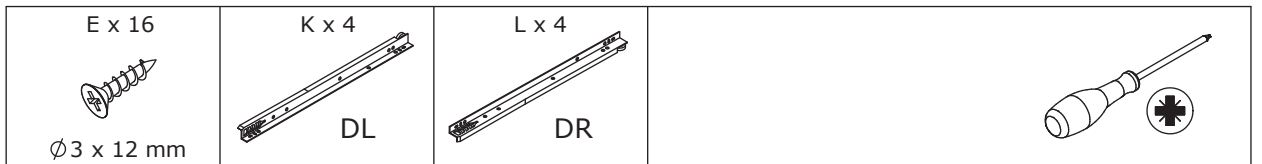

Fix track(DL) and (DR) to panel 24 and 25 with screw(E) as shown.

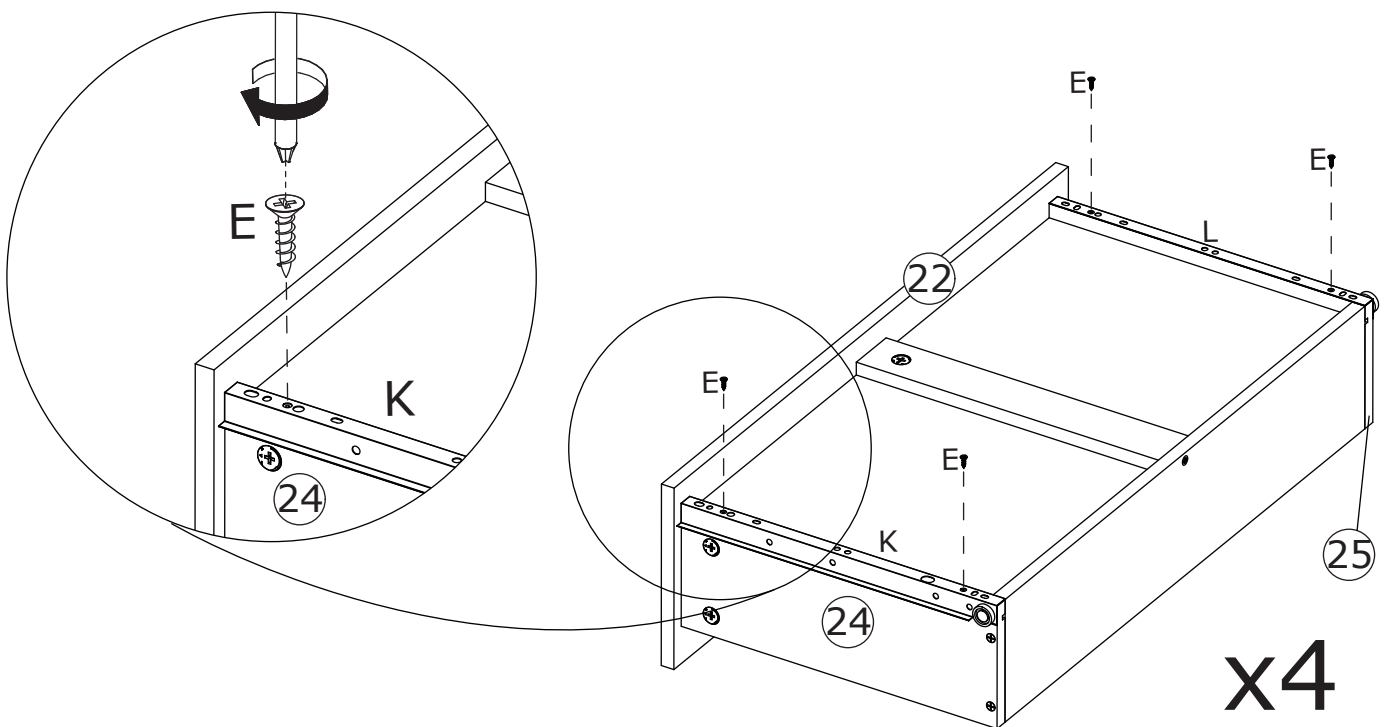

x4


41

E x 16




Ø3 x 12 mm

K x 4

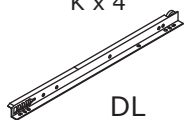


DL



L x 4

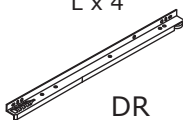


DR

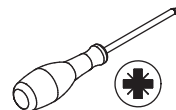


Fix track(DL) and (DR) to panel 24 and 25 with screw(E) as shown.

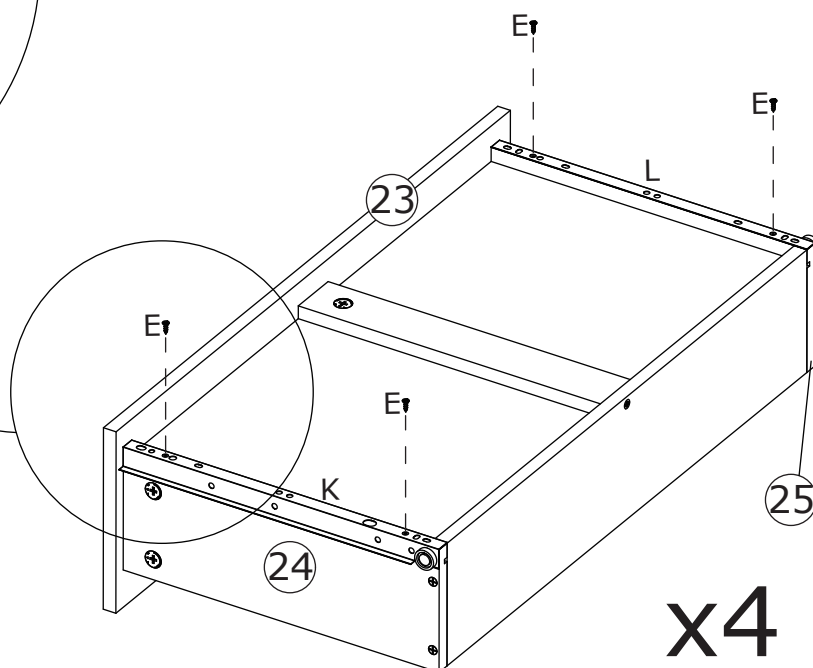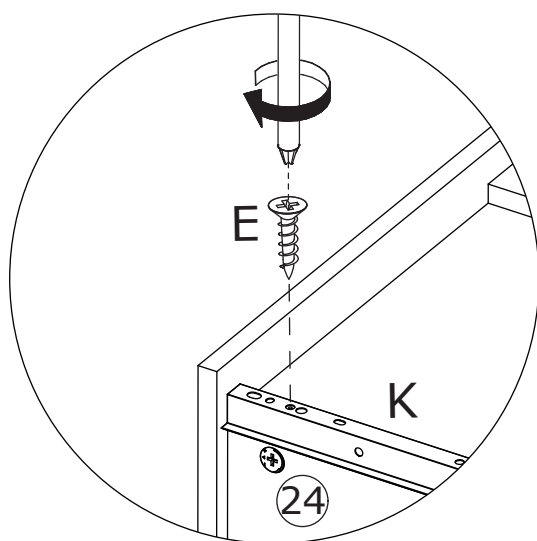

42

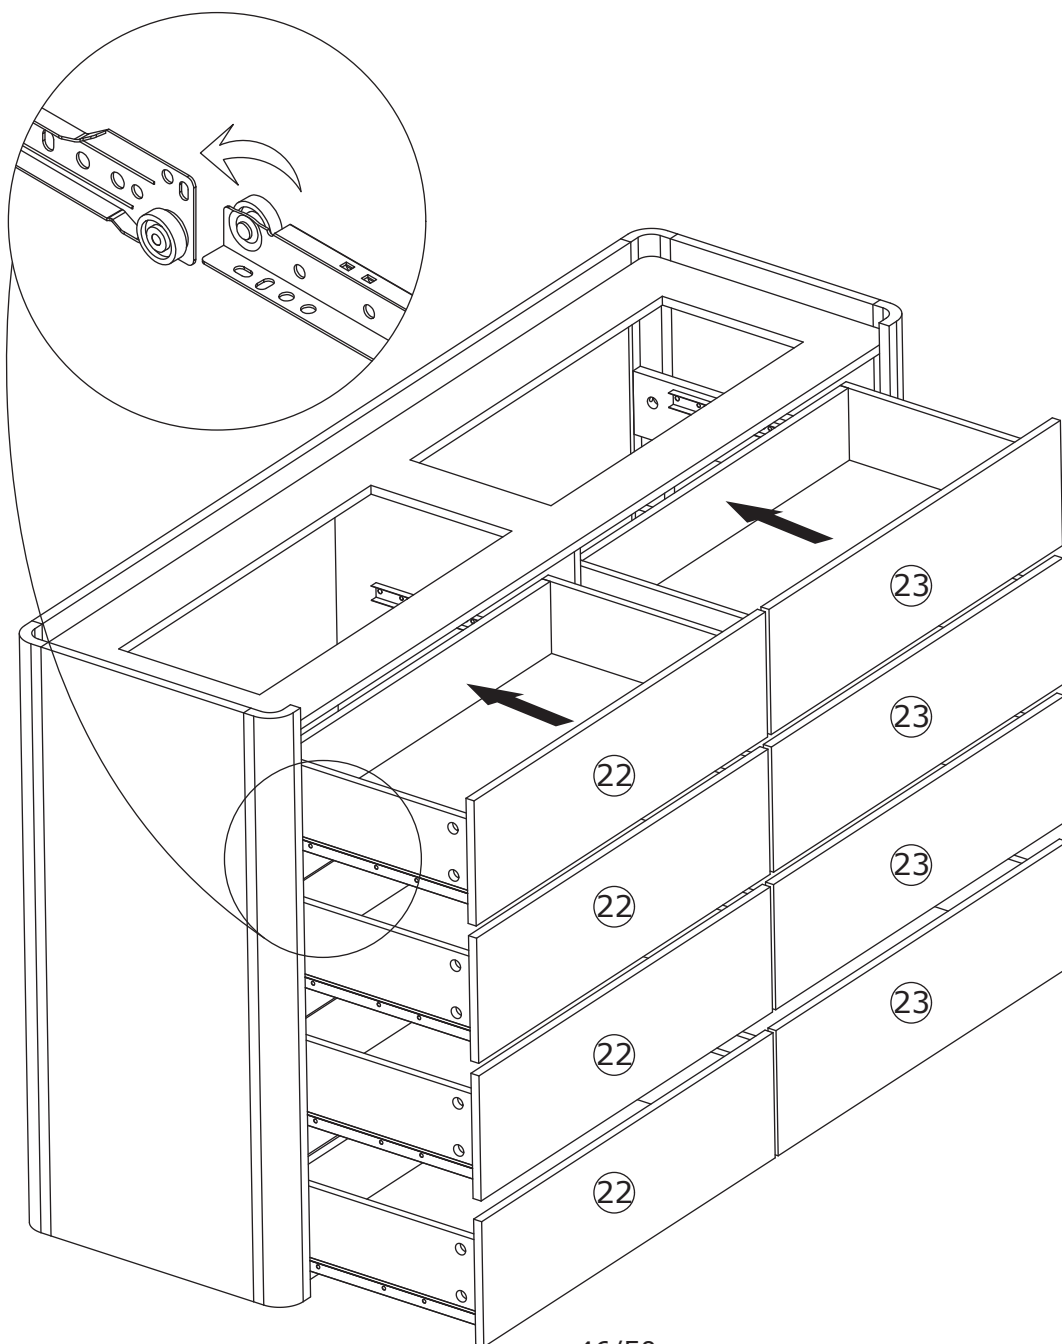

43

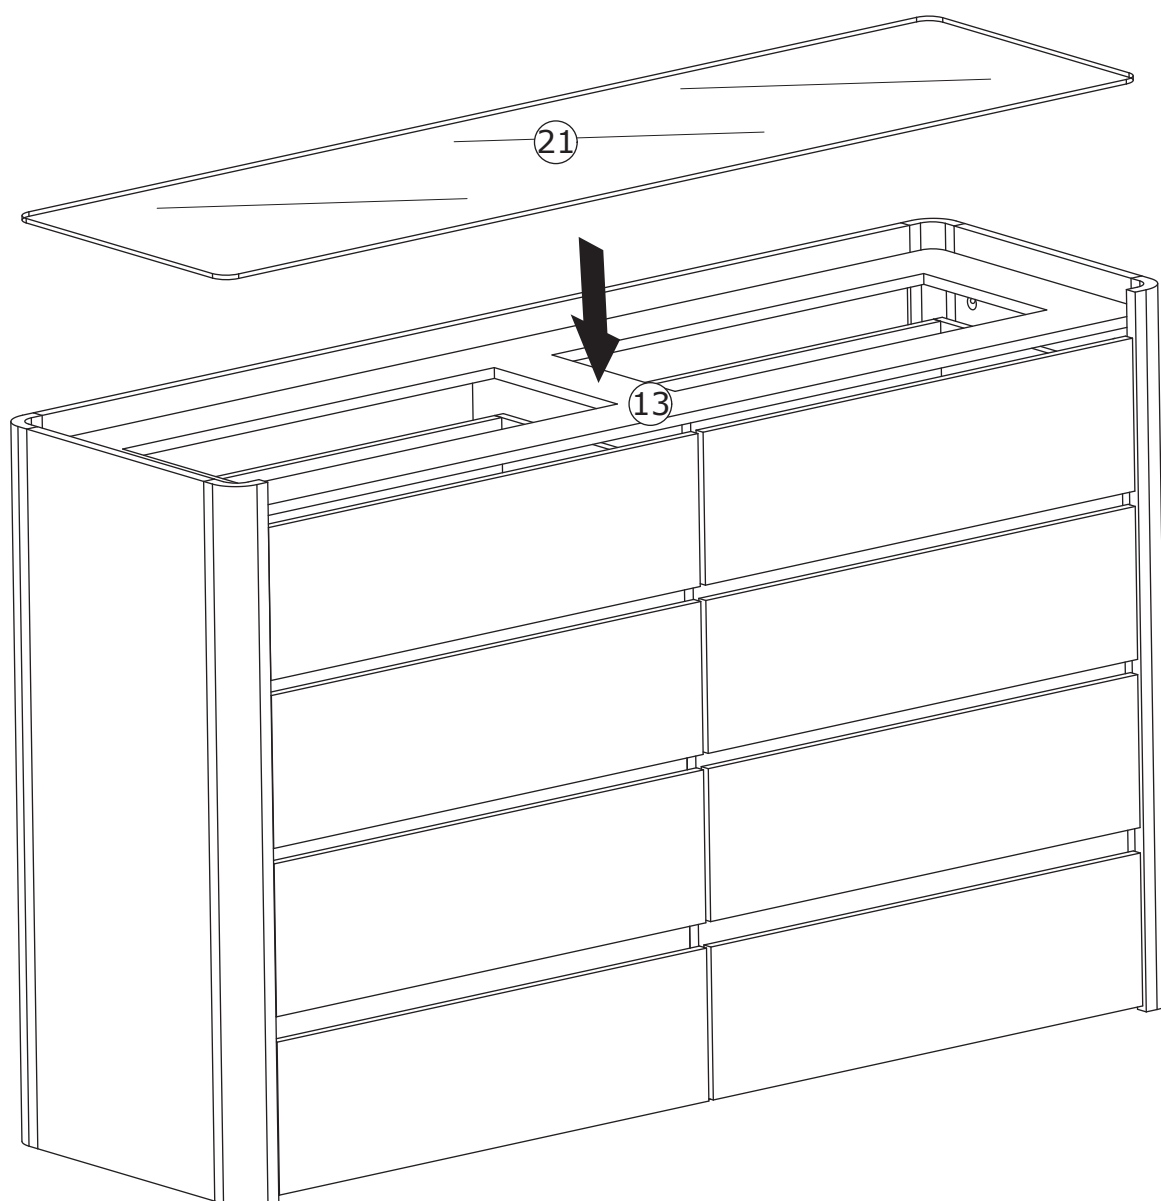


44

E x 20





Ø 3 x 12 mm










G x 20

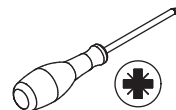

Insert buckle(G) into back slots and fix with screw(E) as shown.


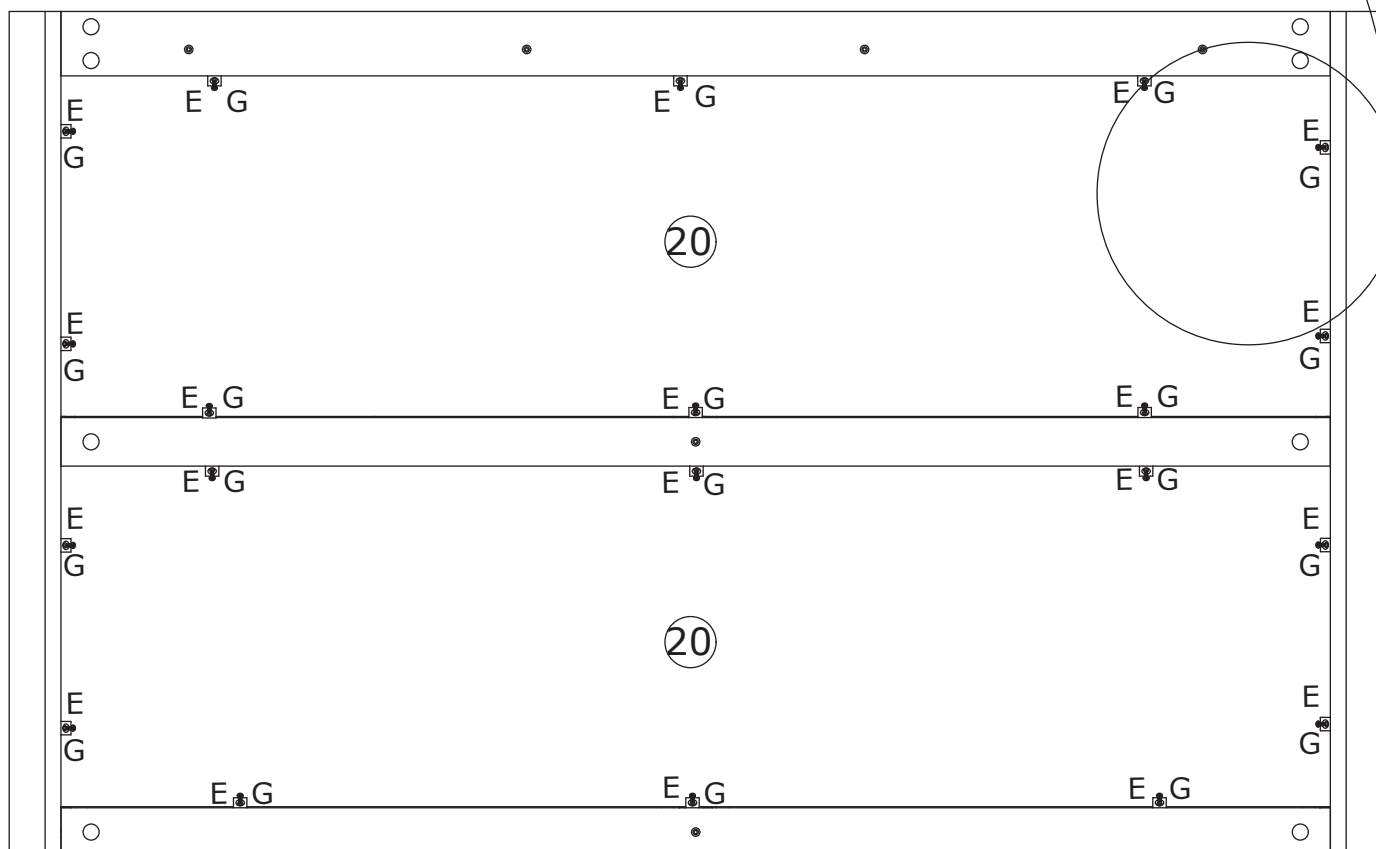
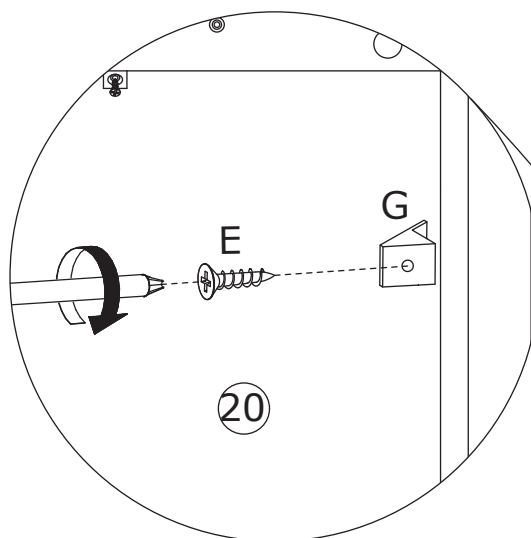


45

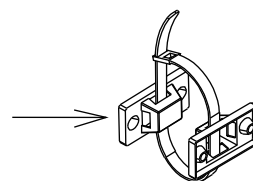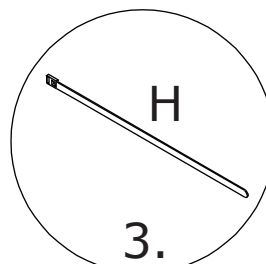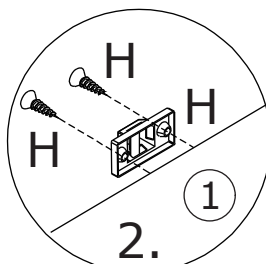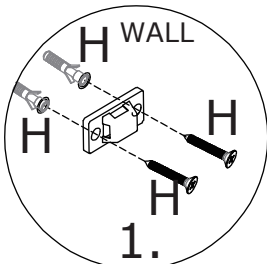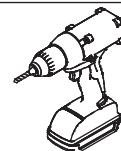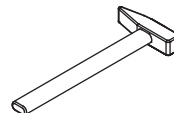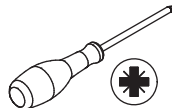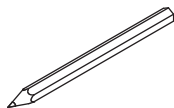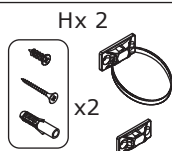

WALL

Install anti-tipping device.

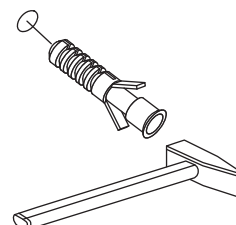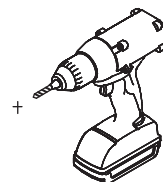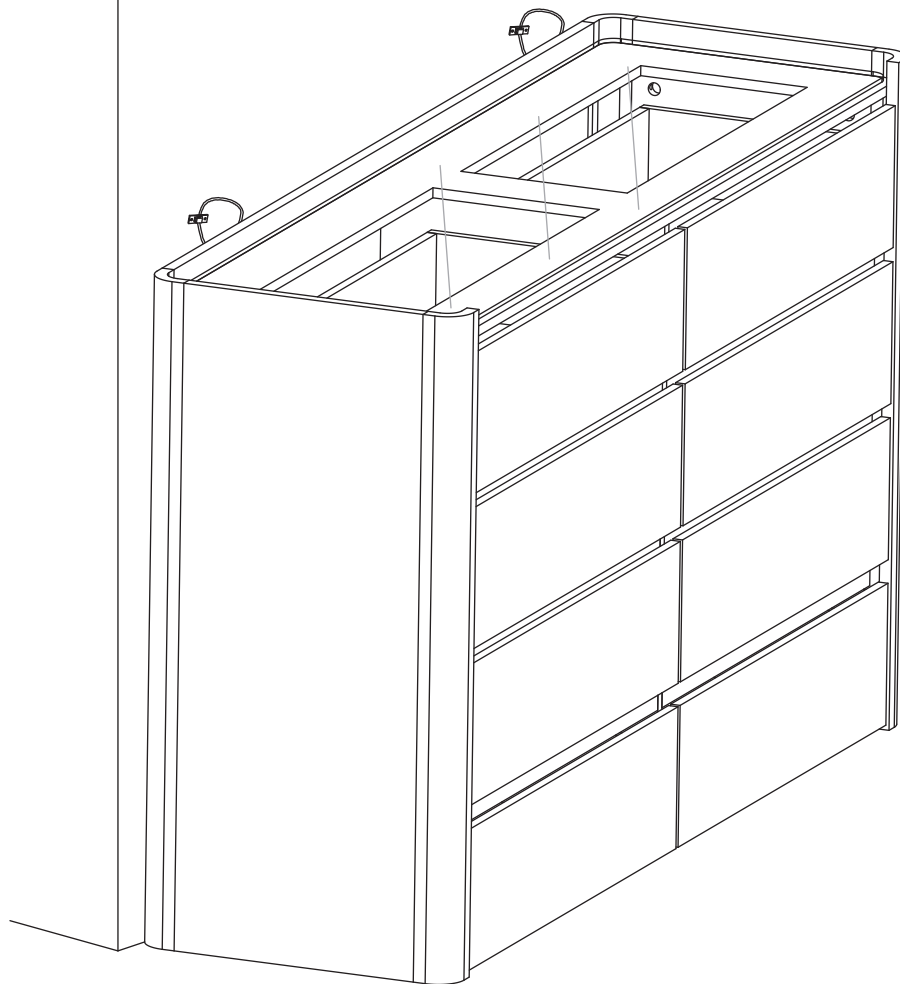

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



feedbackstation@163.com



(303)800-6387