

**COASTER**  
FINE FURNITURE

**103531**

DINGING TABLE WITH TWO 14" LEAF

**ASSEMBLY INSTRUCTION**  
**COASTER FINE FURNITURE**



[www.coastercompany.com](http://www.coastercompany.com)

2012/06/06

# ASSEMBLY INSTRUCTION

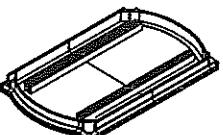
 
 
**ASSEMBLY TIPS:**

- 1.Remove hardware from box and sort by size
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast &easy assembly.

**Warning !**

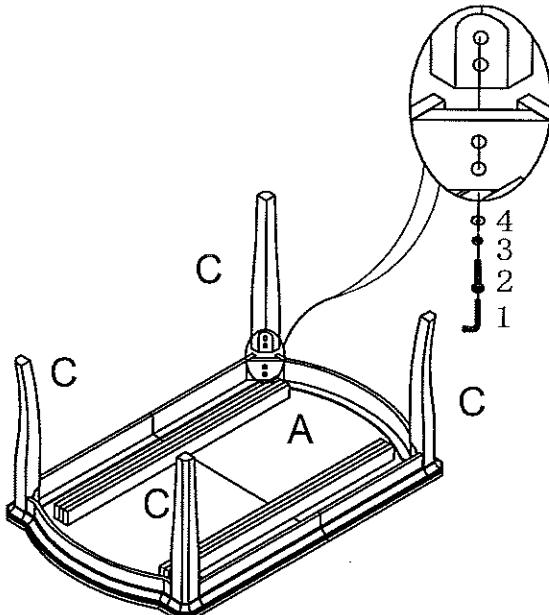
- 1.Don't attempt to repair or modify parts that are broken or defective,Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.

**PARTS IDENTIFICATION**

A	TABLE TOP		1PC
B	LEAF		2PCS
C	LEG		4PCS

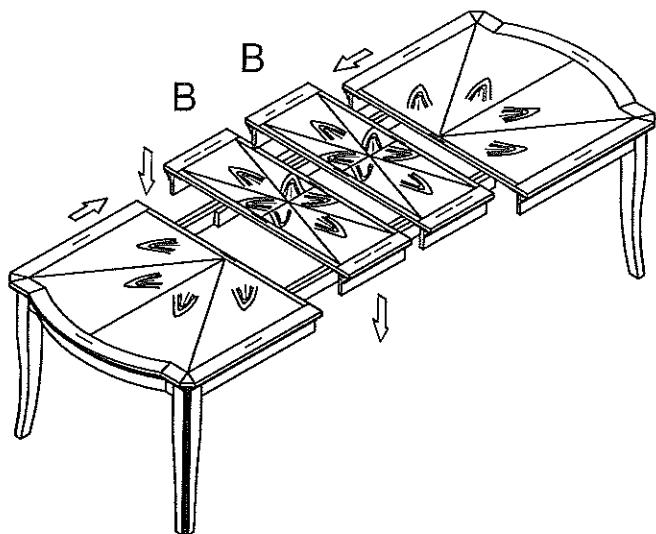
**Z HARDWARE PACKAGE**

NO	DESCRIPTION	FIGURE	QTY
1	ALLEN WRENCH (5MM)		1PC
2	ALLEN BOLT (Ø5/16" *2")		8PCS
3	LOCK WASHER (Ø5/16")		8PCS
4	FLAT WASHER (Ø5/16" *19MM)		8PCS

**STEP 1**


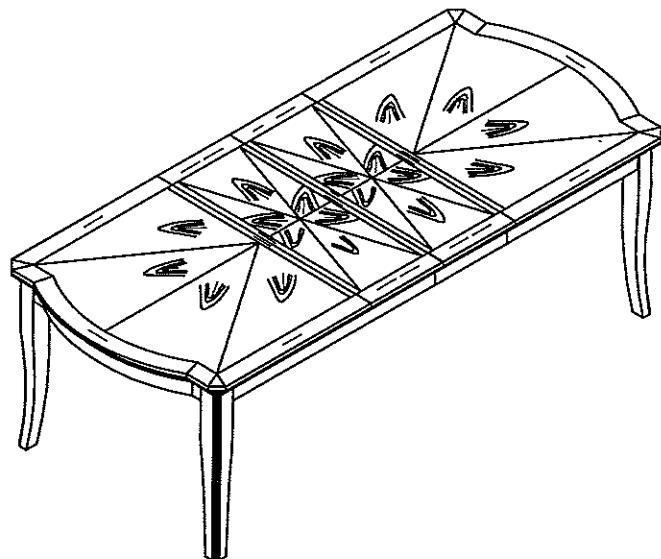
Place table top on a soft surface ,then secure legs to table as shown using #2 Allen bolt ,#3 lock washer and #4 flat washer ,Tighten all bolts using Allen wrench.

## STEP 2



Stand table upright and pull table apart, insert leaf by aligning the pins to the holes and close table top.  
Locks are located on the underside of the table and should be used to better secure the table top together

## STEP 3



Assmbly completed