 


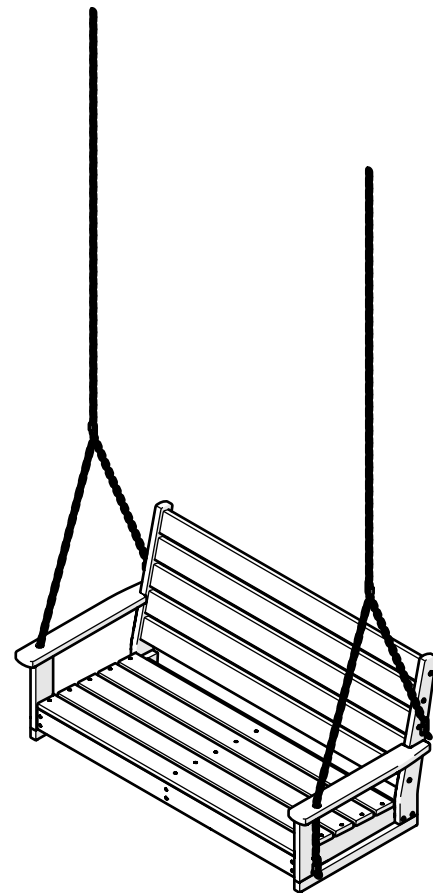

Assembly Instructions



TXMNS485

Monterrey Bay 48" Swing

20-Year Warranty

To view our full warranty, please visit
trexfurniture.com/warranty

Share your space

We love to see where our furniture
ends up — snap a pic and share
it with us on Facebook!
facebook.com/trexfurniture

Having Trouble?

If you have questions or concerns regarding
assembly instructions or missing parts,
please contact us at **(877) 907-TREX** (8739)
or email support@trexfurniture.com

Cleaning Tips

Keep your Trex Outdoor Furniture™
looking brand new:

For a quick clean:

Simply wipe down with soap and water.

 
 
For a deeper clean:

You'll need:


- » 1/3 bleach and 2/3 water solution
- » clean cloth
- » soft bristle brush

Wipe on solution with your cloth
and let it sit on the lumber for a few
minutes (this will not affect the color).
Then, loosen any dirt and debris that
may catch in surface grooves with a
soft bristle brush; hose down to rinse.


TOOLS

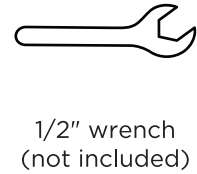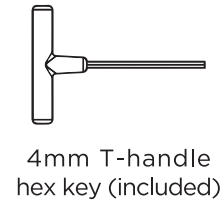



PARTS

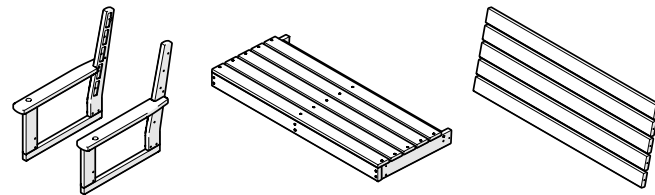 

A x 2 **B** x 12 **C** x 2

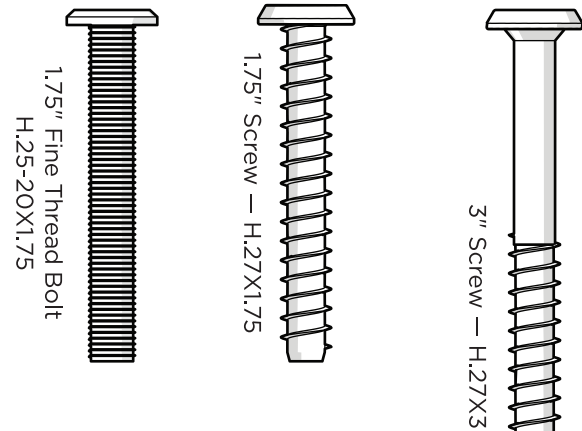 

D x 2

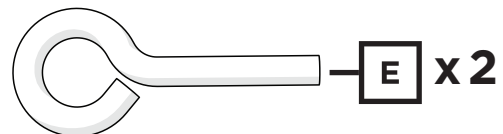  


E x 2




x 4



 x 8




x 6

 

x 4


1

 x 2
 x 4

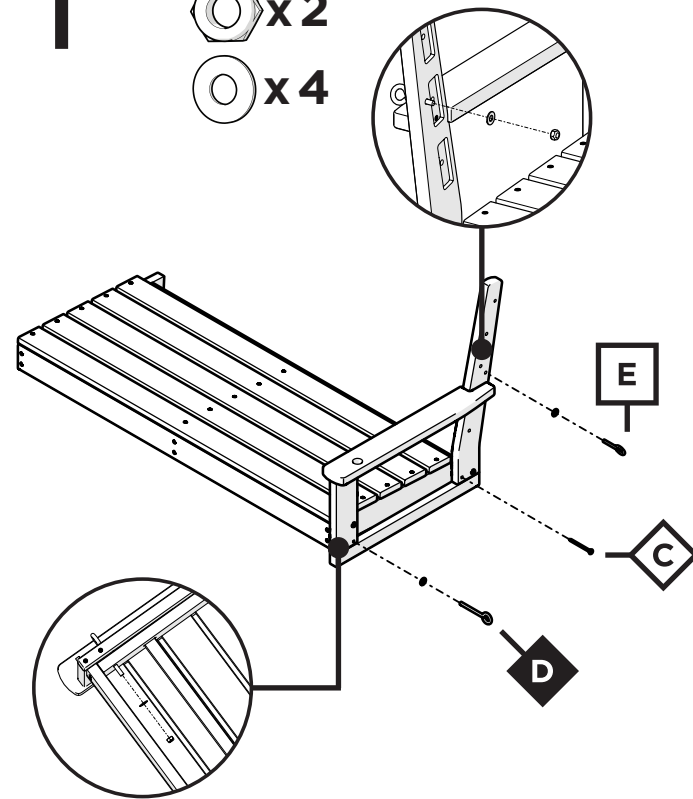


Do not fully tighten bolts in
steps 1-4

 2

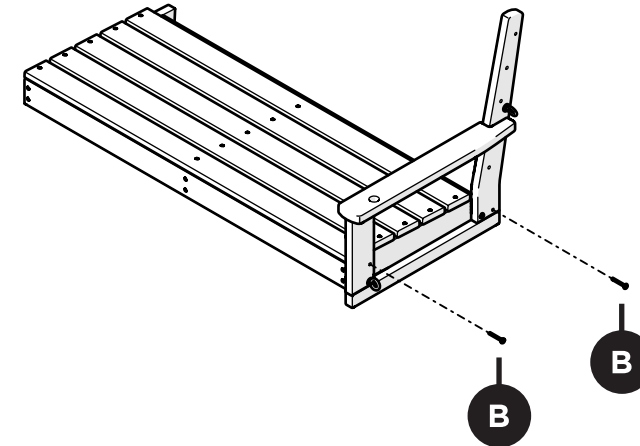


3

 x 2
 x 4

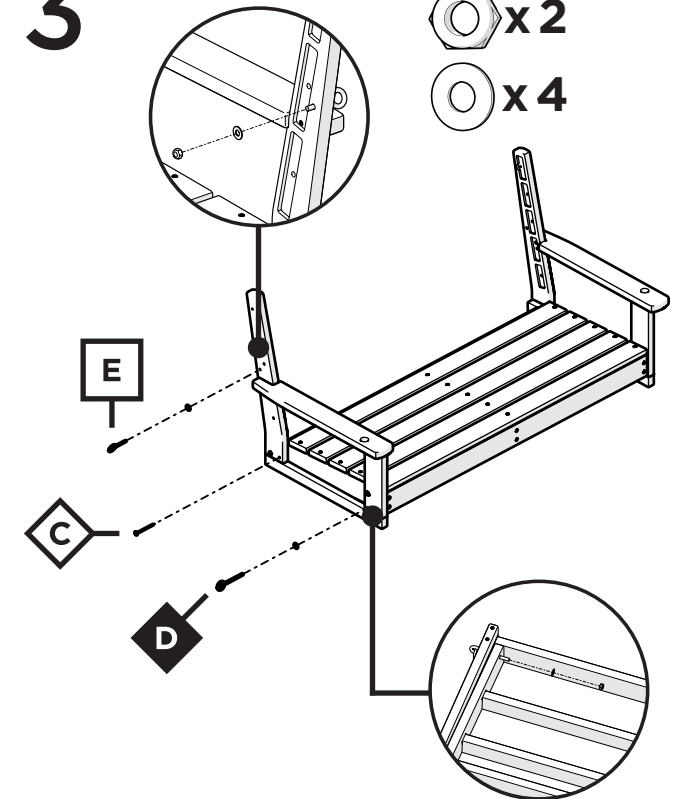


4

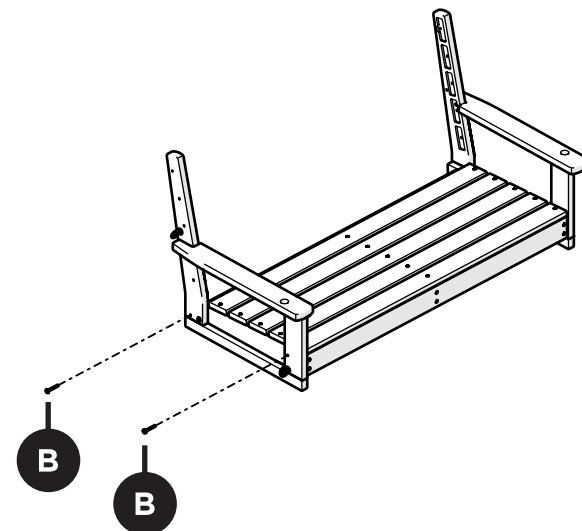 


5

 Ensure **Fine Thread Bolts** are used

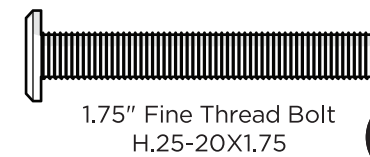

A

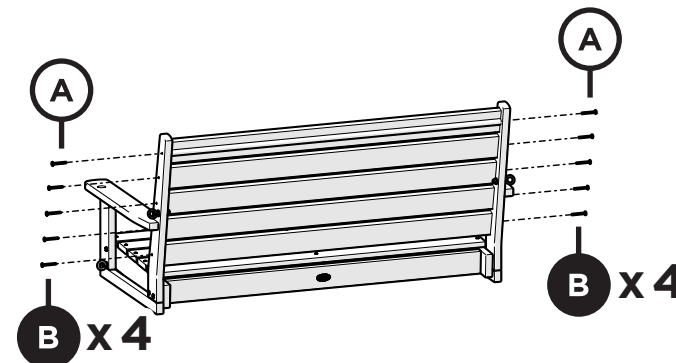 


All bolts may be fully tightened

6

Tip: Hanging mounts should be
about 55" apart.
(Hanging Hardware is not included)



 x 6

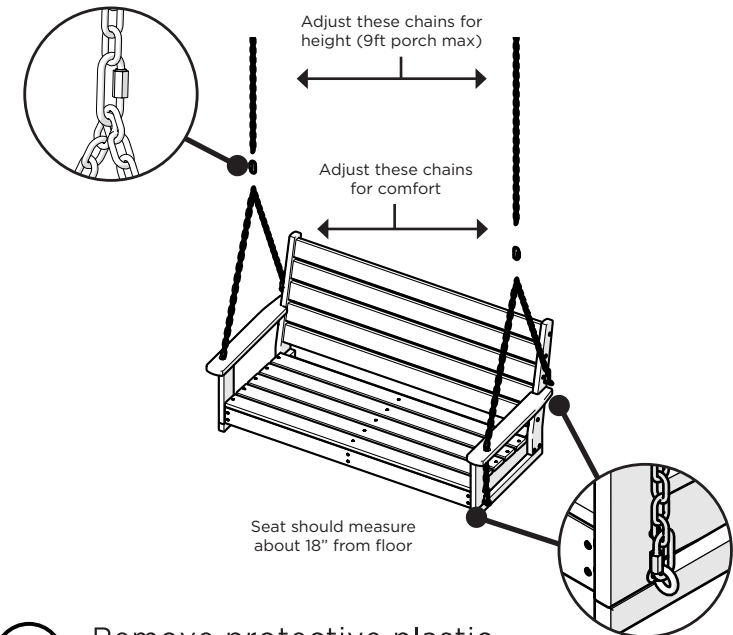

Remove protective plastic
film from the logo medallion.