




# Wardrobe

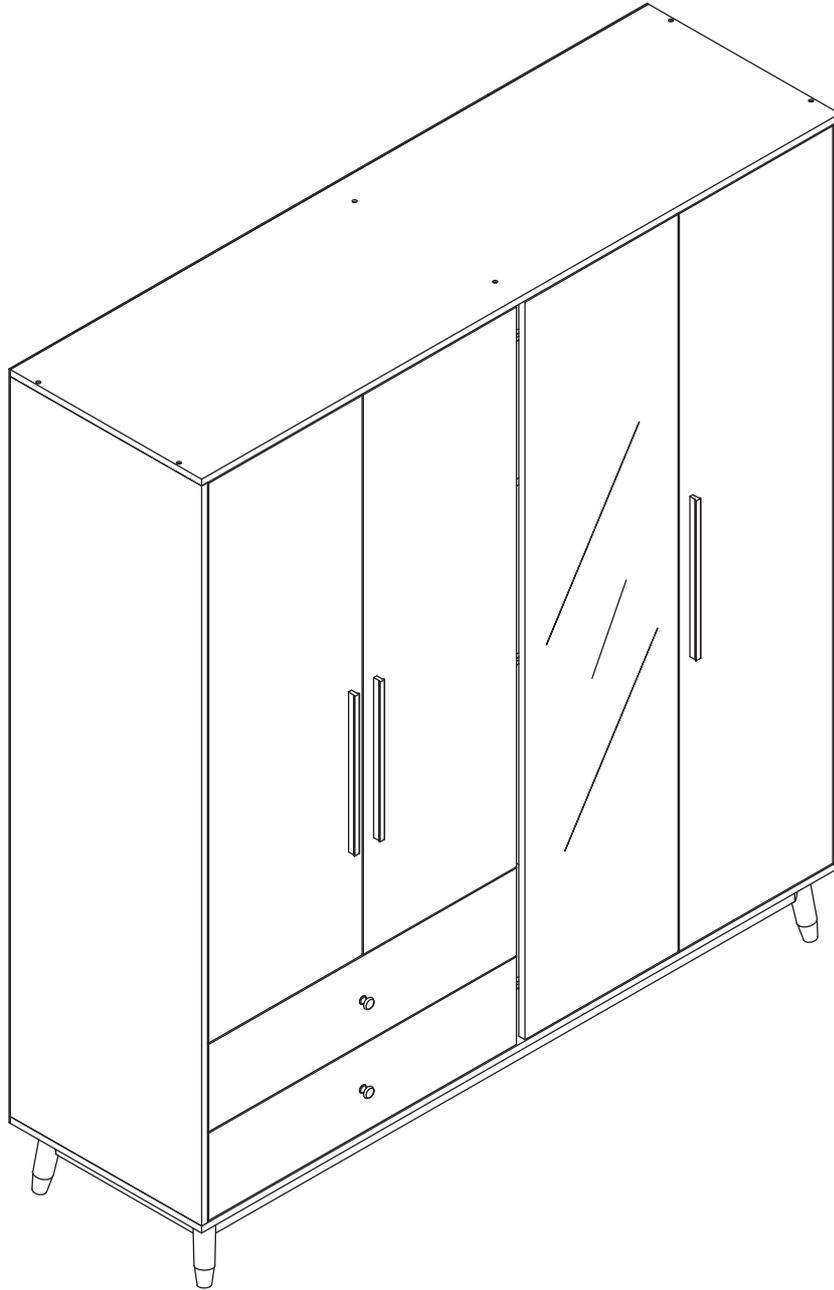

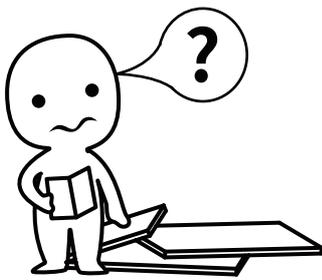


### IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

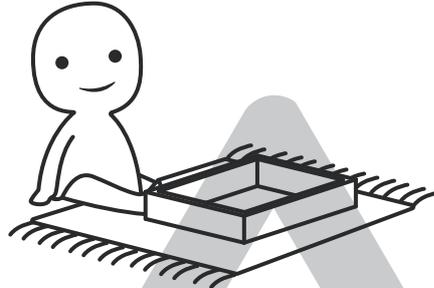



### AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer- could be a rug.

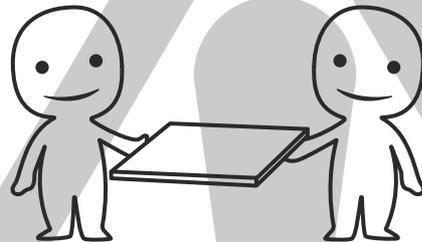

### IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

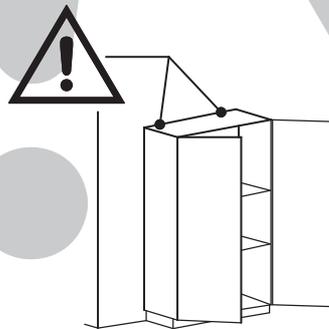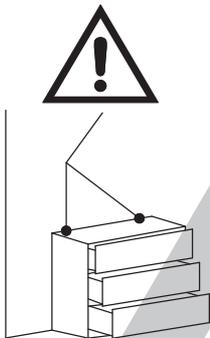

### ANTI-TOPPLE WARNING !


Overturnd furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

### IMPORTANT !





It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

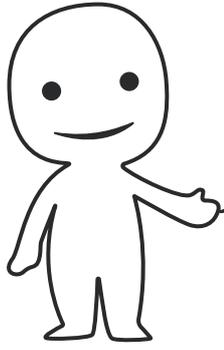

Please prepare the following tools

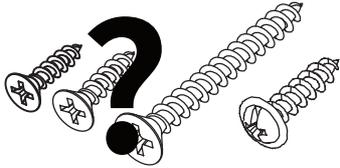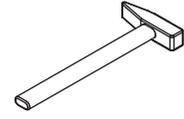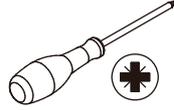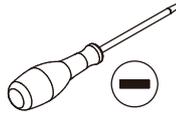

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

Ax32(+2)



Ø6x35mm

Bx32(+2)



Ø15x10mm

Cx52(+2)



Ø6x30mm

Dx22(+2)




Ø4x35mm

Ex24(+2)




Ø3x12mm

Fx2

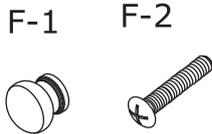

Ø4x20mm

Gx14(+1)

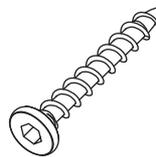

Ø5x40mm

Hx4



380mm

Jx5



Kx5




Lx60(+2)




Ø3.5x14mm

Mx2

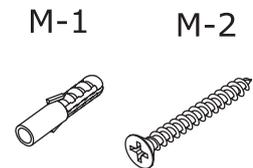

Ø4x35mm

Nx2

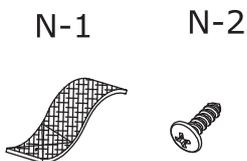

Px1




Ø4mm

Qx4



Rx4

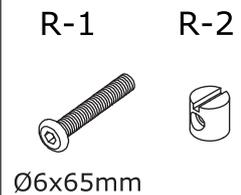

Ø6x65mm

Sx8



Ø3x14mm

Tx3

T-1 T-2



Ux51(+3)



Ø3x12mm

Vx4





Ø15mm

Wx1




Xx1

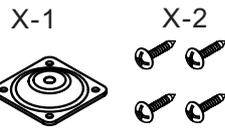


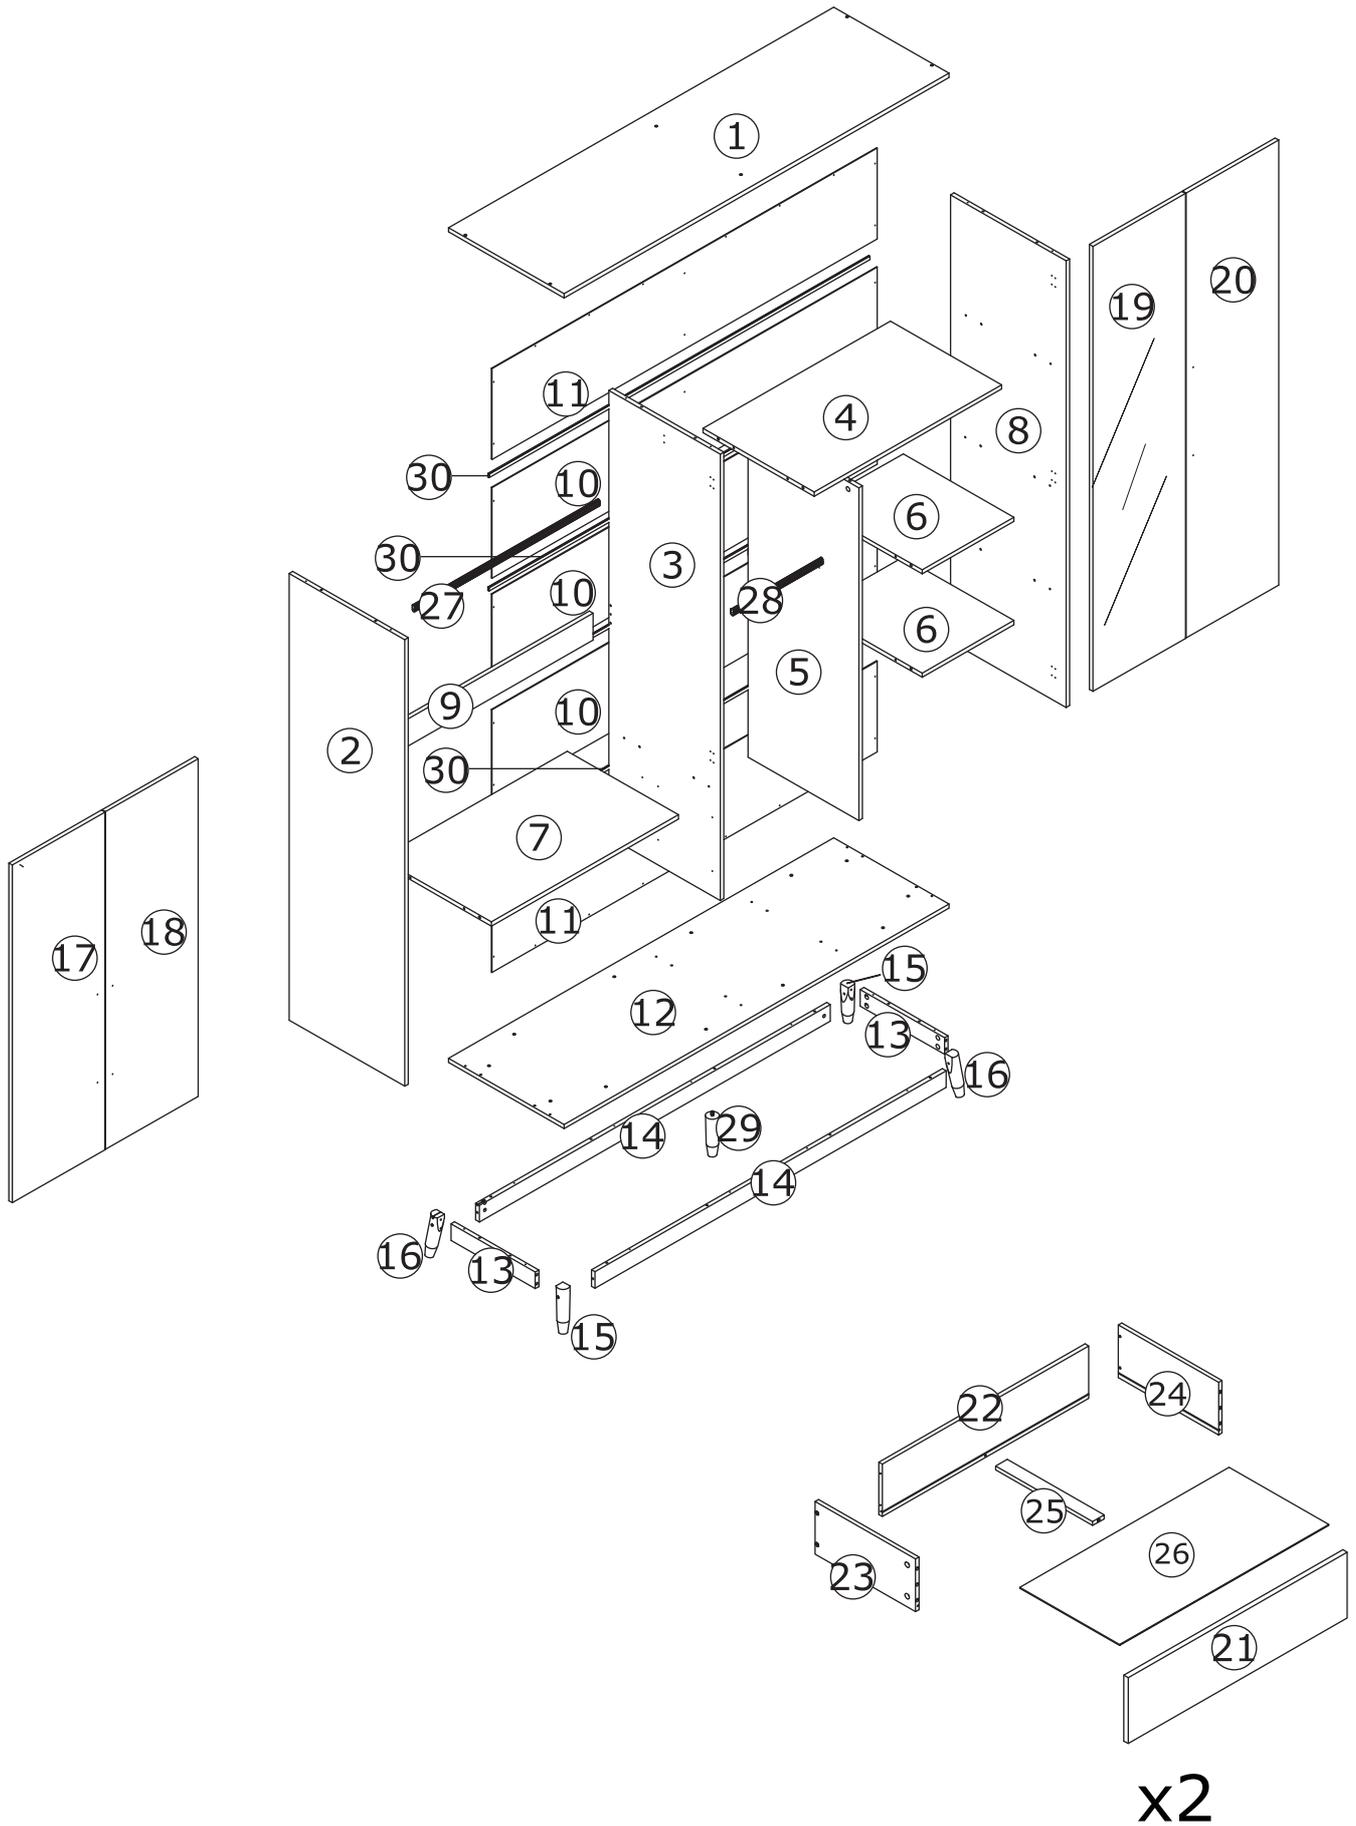


1

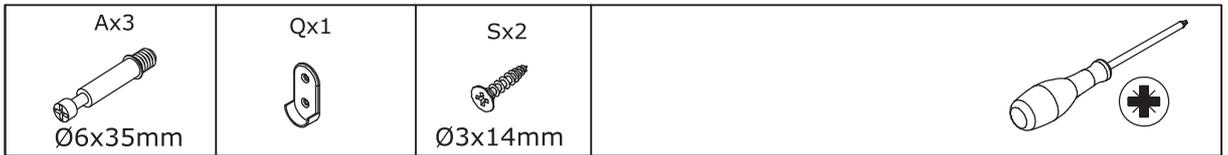


Fix part(Q) to plate 2 using screw(S) as shown.



Insert quickfit screw(A) into corresponding holes in plate 2 with a screwdriver as shown.

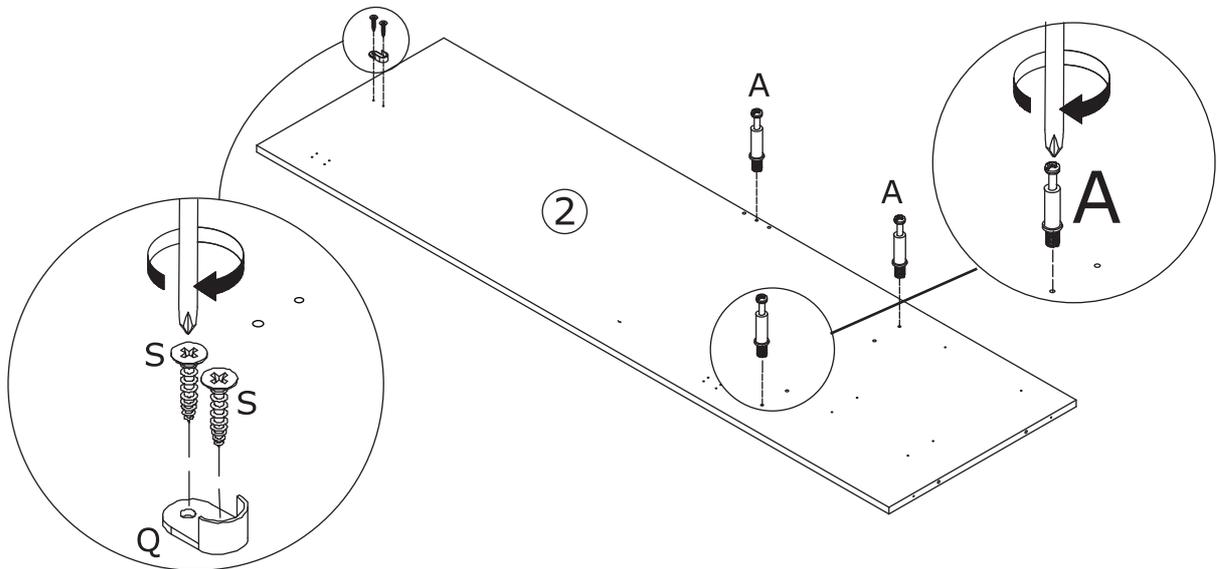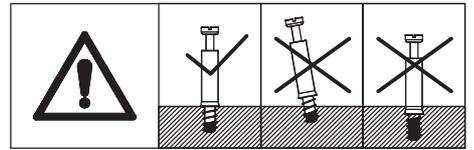

2

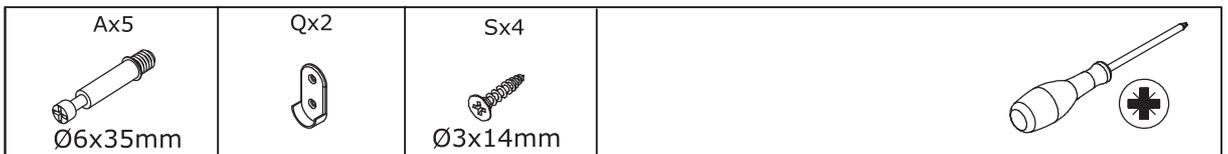

Fix part(Q) to plate 3 using screw(S), insert quickfit screw(A) into plate 3 as shown. Flip the plate, fix part(Q) using screw(S), insert quickfit screw(A) into as shown.




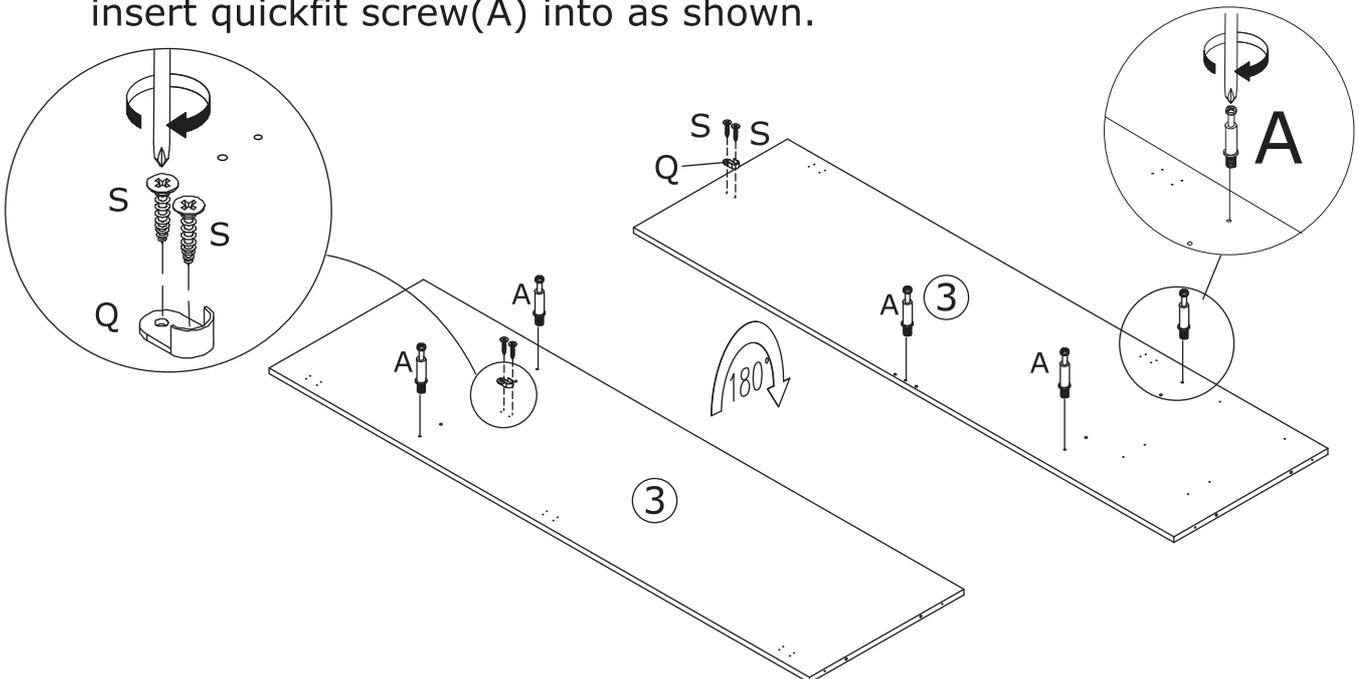
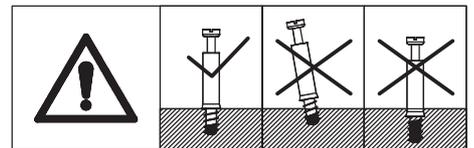


3


Ex12




Hx4

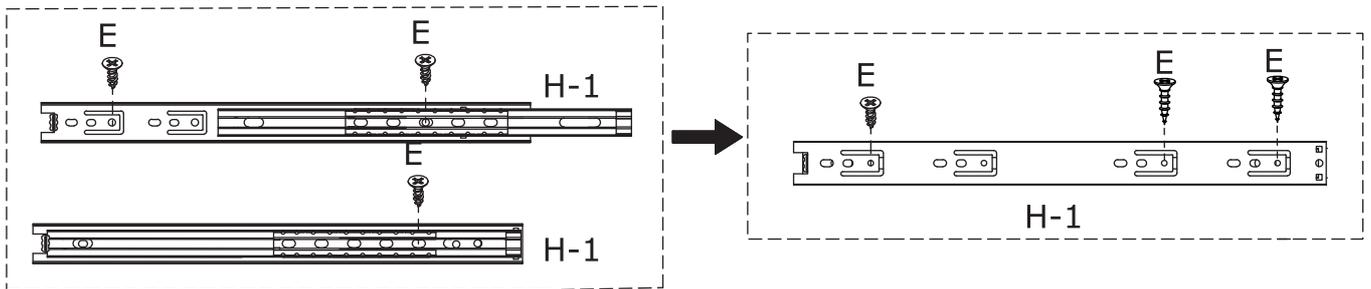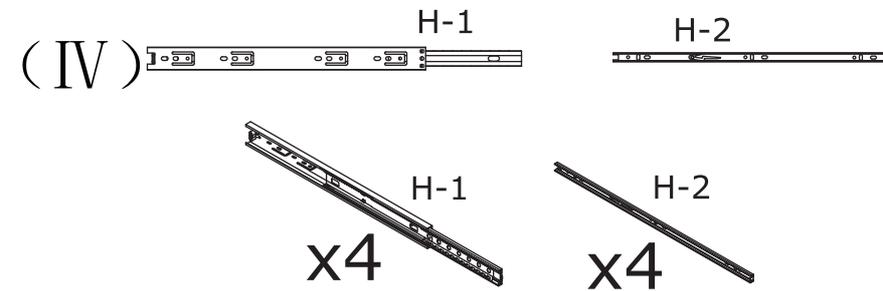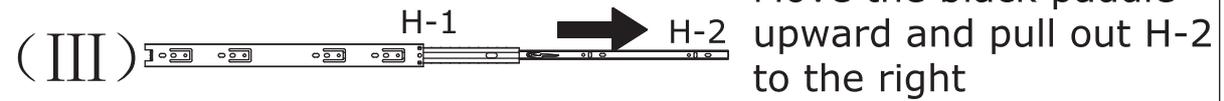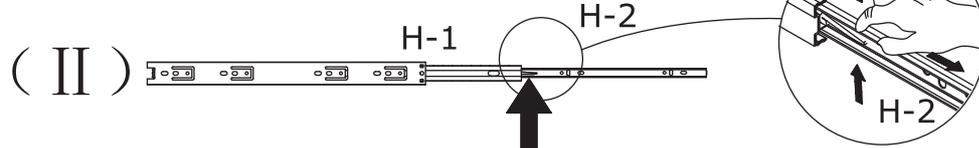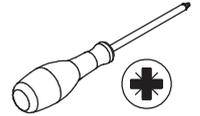



Separate the glide into two parts.  
Fix slide rail(H-1) to plate 2 and 3  
using screw(E) as shown.

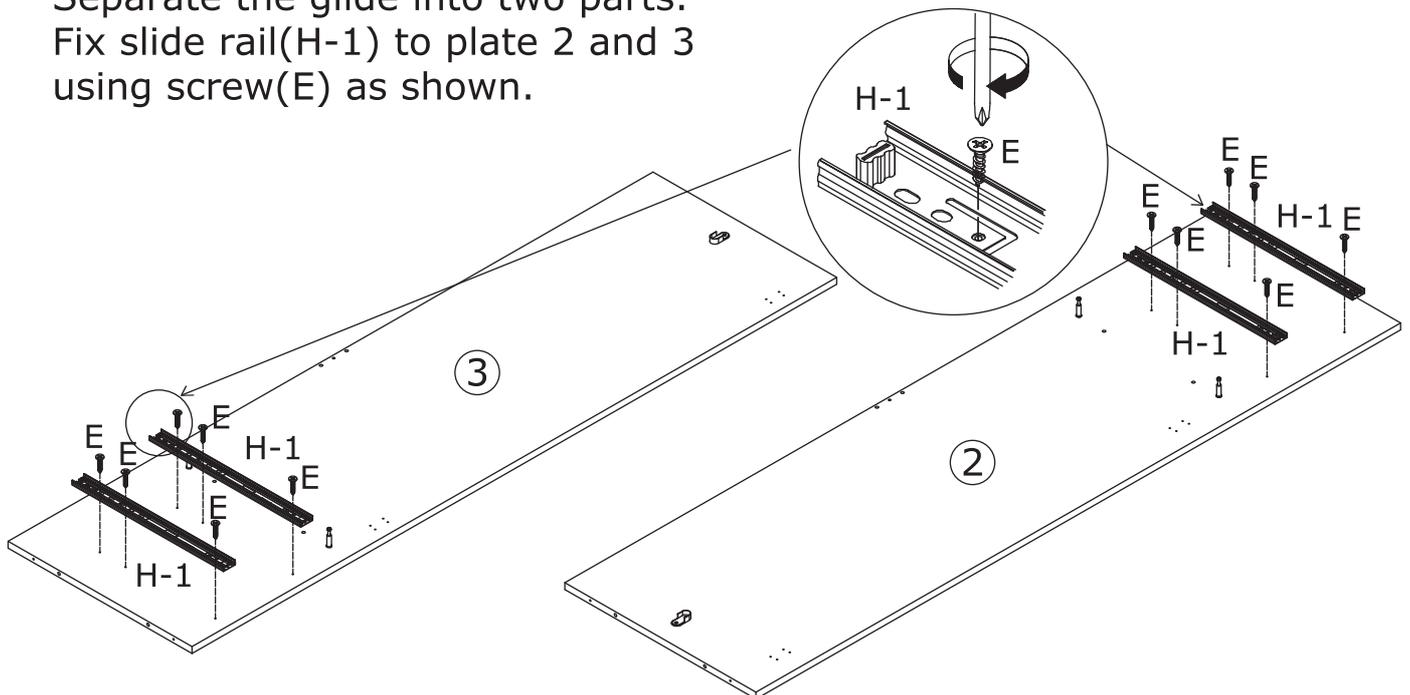


4
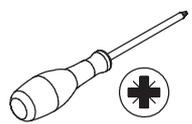
<p>Ax4 Ø6x35mm</p> 	<p>Qx1</p> 	<p>Sx2 Ø3x14mm</p> 	
--	--	--	---



Fix part(Q) to plate 5 using screw(S)as shown.  
Flip the plate, insert quickfit screw(A) into  
as shown.

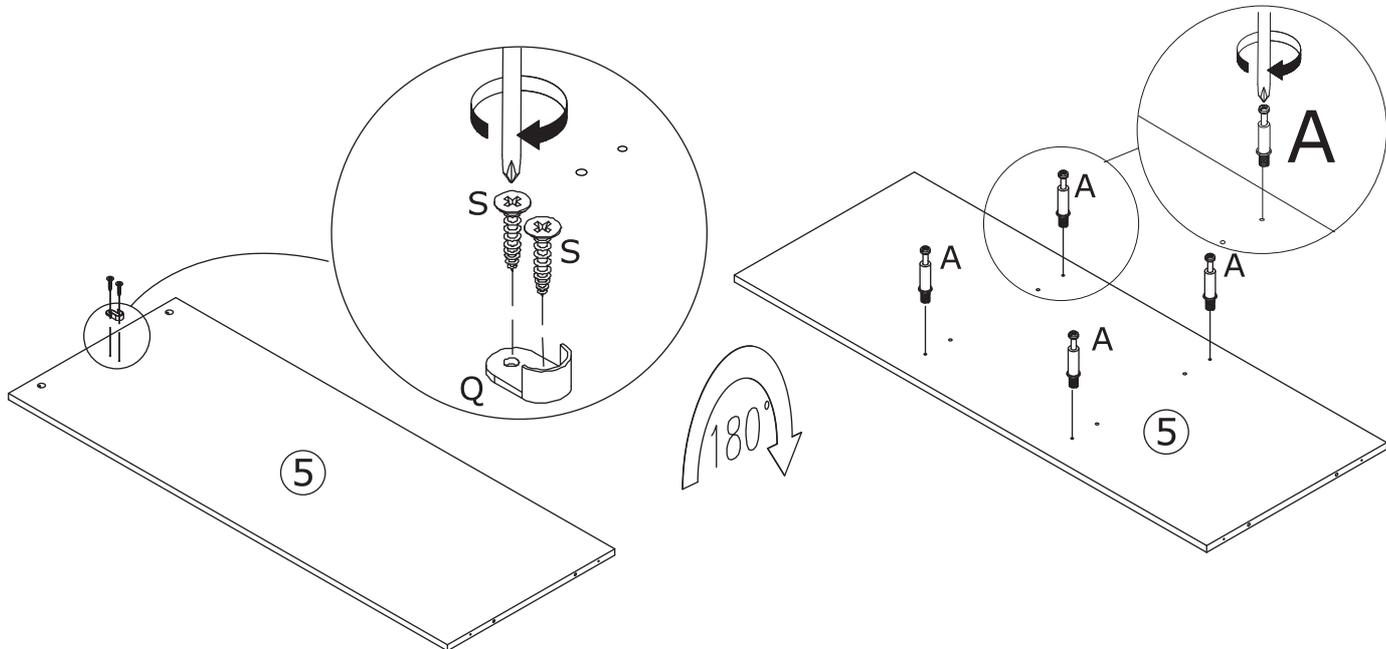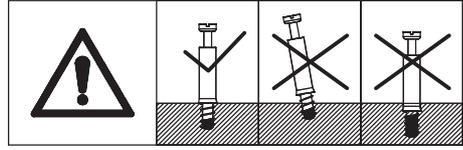


5
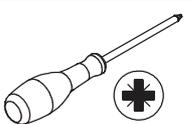
<p>Ax10 Ø6x35mm</p> 	
---	---

Insert quickfit screw(A) into plate 4 and  
leg 15,16 with a screwdriver as shown.

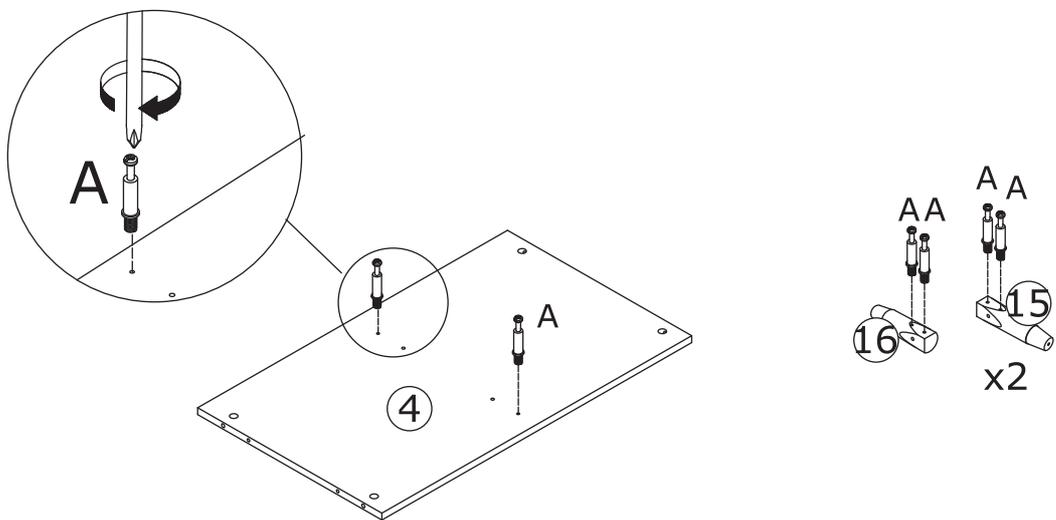
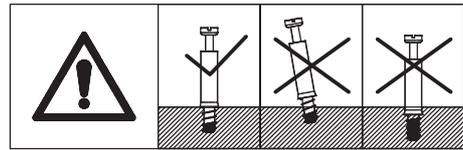


6

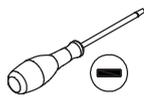
Bx2  Ø15x10mm	Cx2  Ø6x30mm	
--	---	---

Attach plate 4 to plate 5 with wooden dowel(C) at first.

Put cam lock(B) into holes in plate 5 and turn clockwise to tighten as shown.

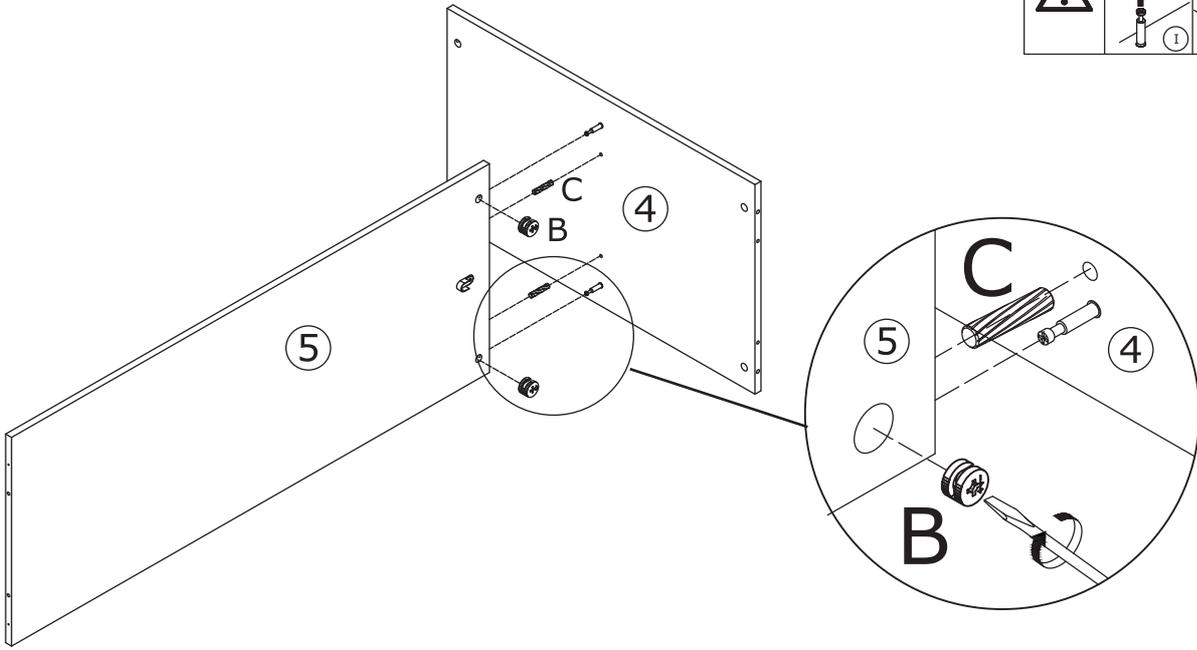
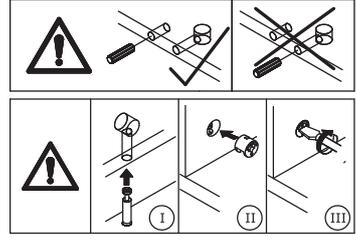


7

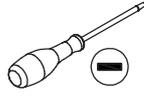
Bx4  Ø15x10mm	Cx4  Ø6x30mm	
--	---	---

Attach plate 6 to plate 5 with wooden dowel(C) at first.



Put cam lock(B) into holes in plate 6 and turn clockwise to tighten as shown.

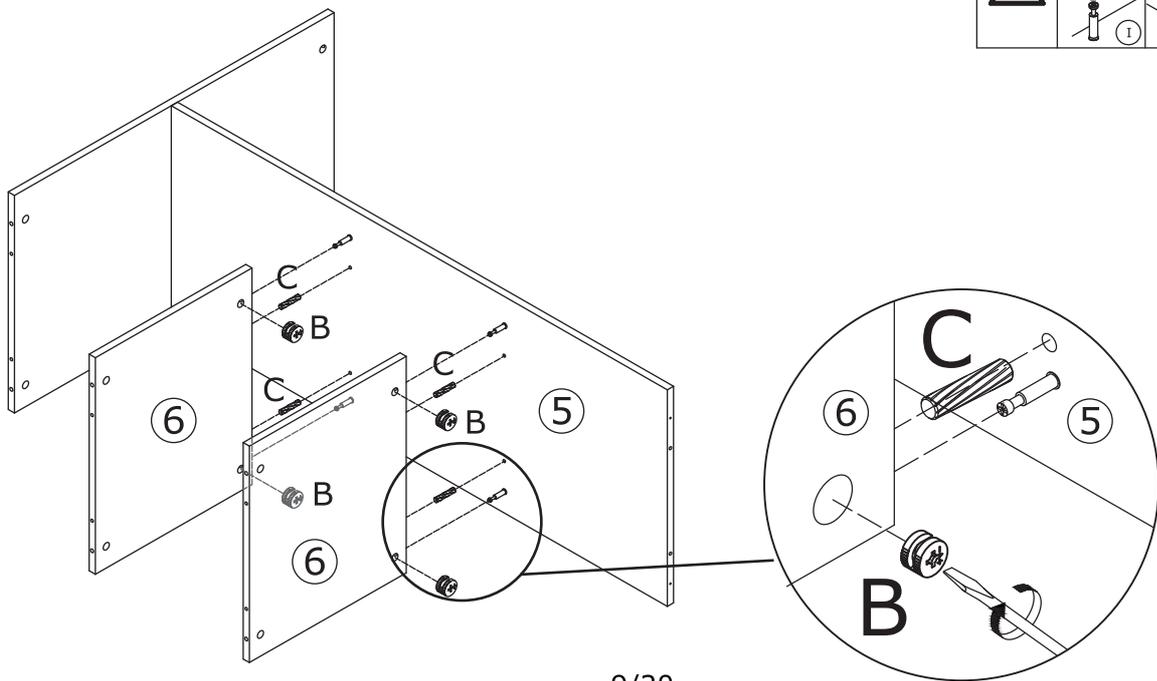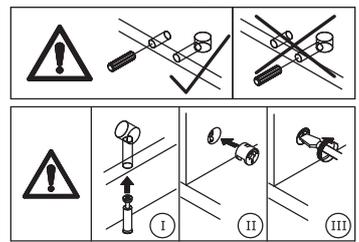

8

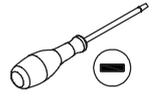Bx2  Ø15x10mm	Cx2  Ø6x30mm	
--	---	---



Attach plate 3 to plate 4 with wooden dowel(C) at first.  
Put cam lock(B) into holes in plate 4 and turn clockwise to tighten as shown.

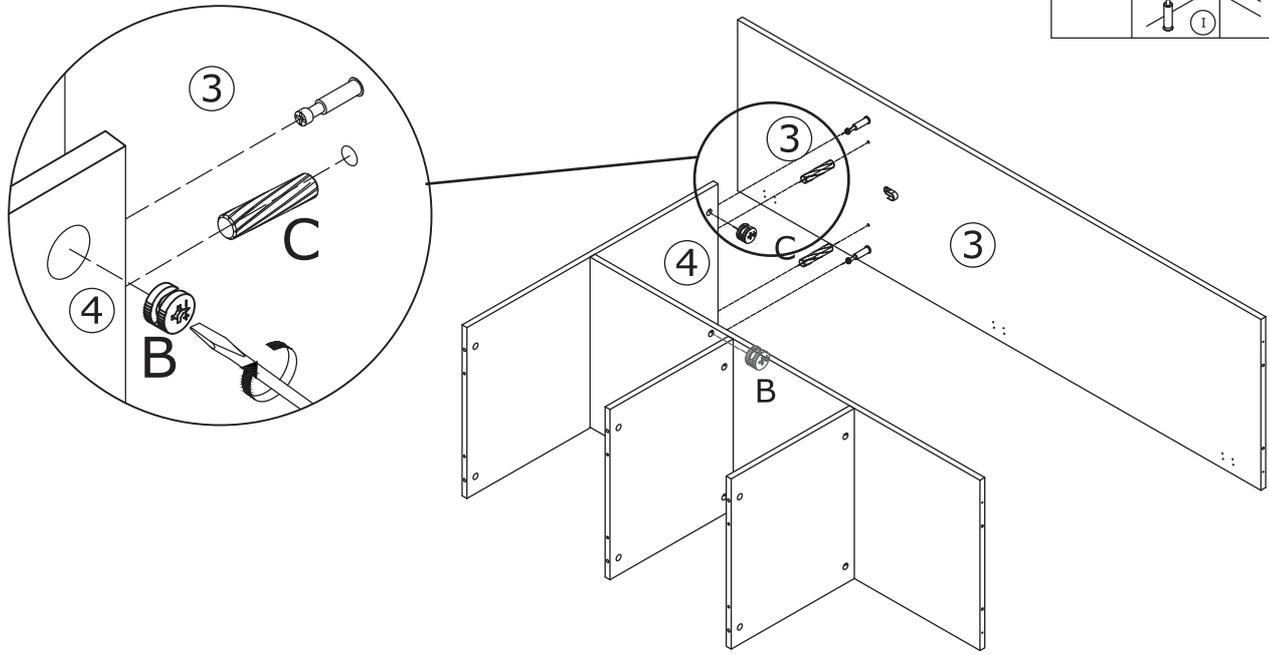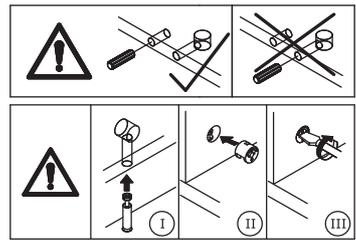


9

Bx2  Ø15x10mm	Cx2  Ø6x30mm	
--	---	---



Attach plate 7 to plate 3 with wooden dowel(C) at first.  
Put cam lock(B) into holes in plate 7 and turn clockwise to tighten as shown.

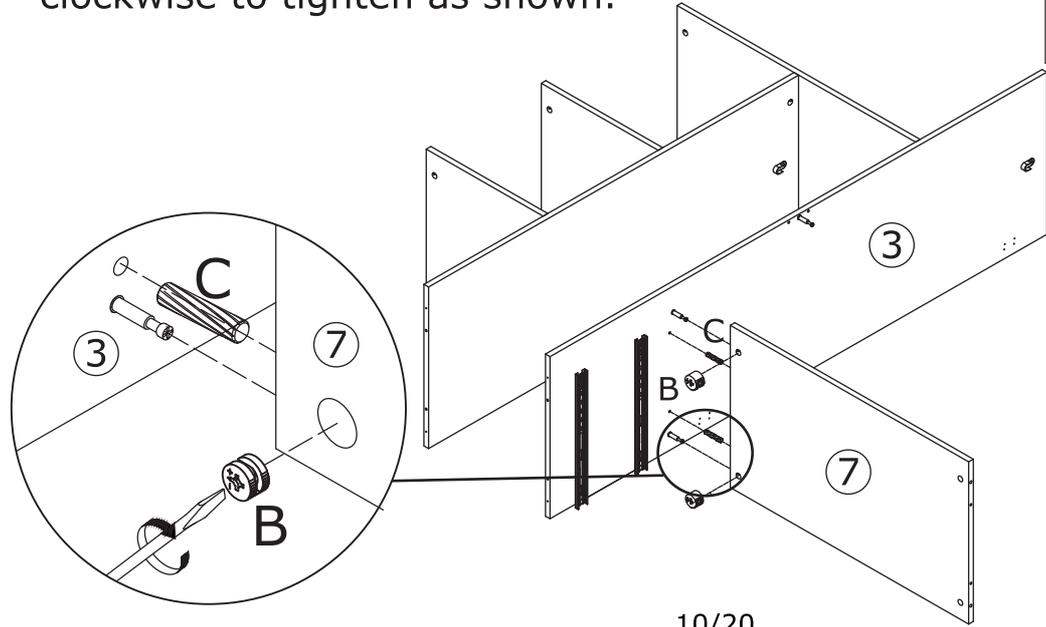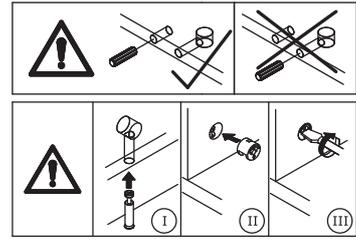

# 10

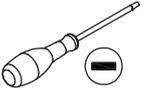Bx10  Ø15x10mm	Cx12  Ø6x30mm	
---	--	---

Connect plate 2 and 3 with plate 9 using wooden dowel(C) as shown.

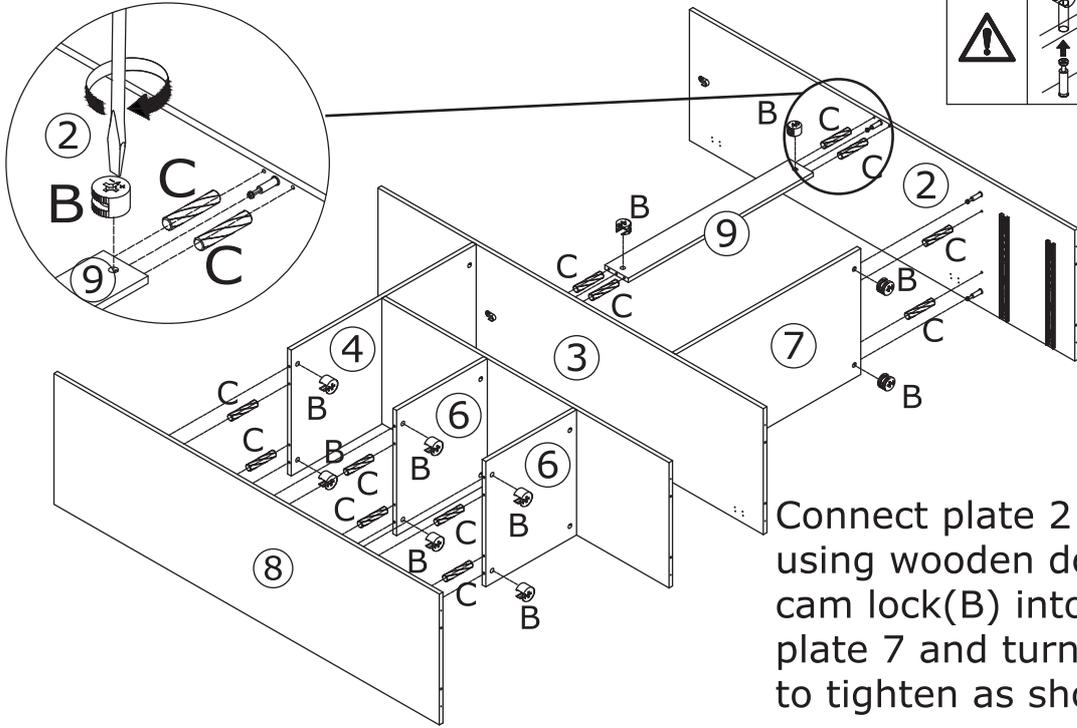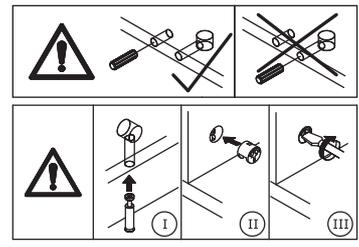


Connect plate 2 with plate 7 using wooden dowel(C), put cam lock(B) into holes in plate 7 and turn clockwise to tighten as shown.

# 11


Cx14  Ø6x30mm	Gx14  Ø5x40mm	Px1  Ø4mm	Xx1 X-1 	X-2 
--	--	--	--	--

Cover plate 1 to plate 2,3 and 8 with wooden dowel(C), then fix using screw(G) as shown.


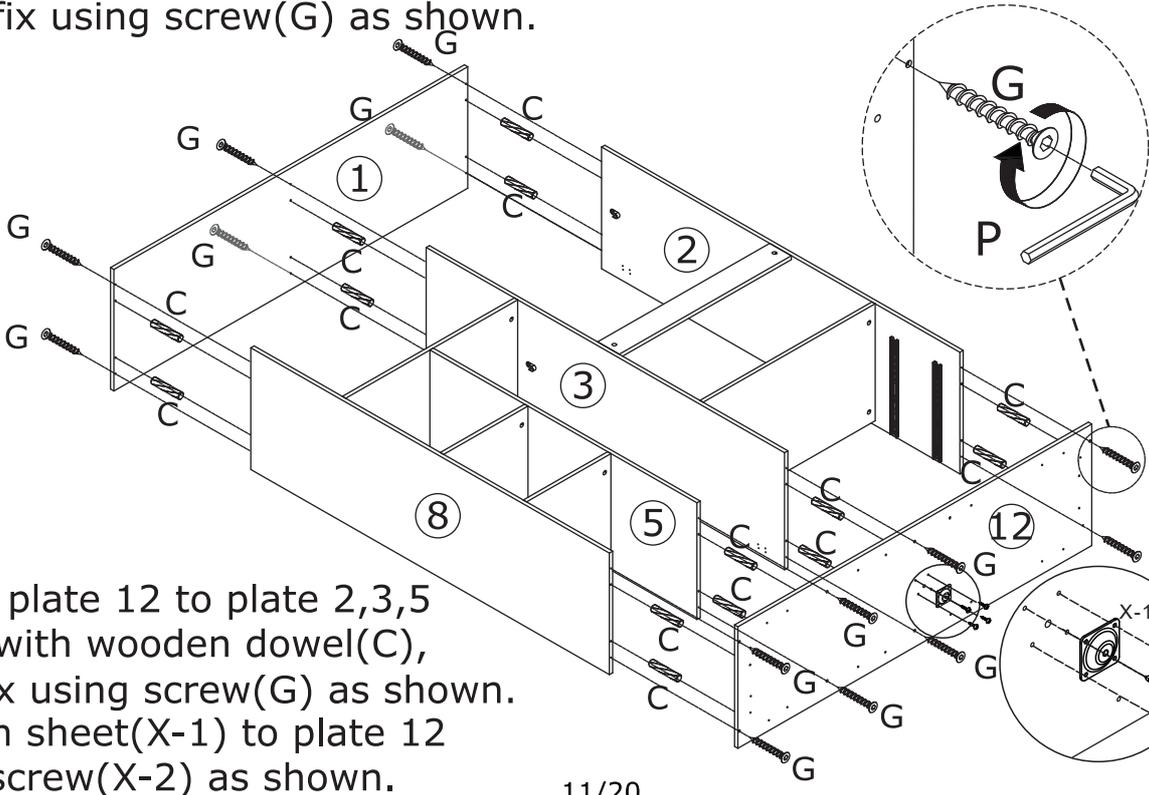


Attach plate 12 to plate 2,3,5 and 8 with wooden dowel(C), then fix using screw(G) as shown. Fix iron sheet(X-1) to plate 12 using screw(X-2) as shown.

# 12

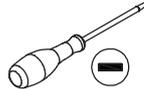Bx8  Ø15x10mm		
--	--	---


Connect leg 15 and 16 with plate 13, put cam lock(B) into holes in plate 13 and turn clockwise to tighten as shown.

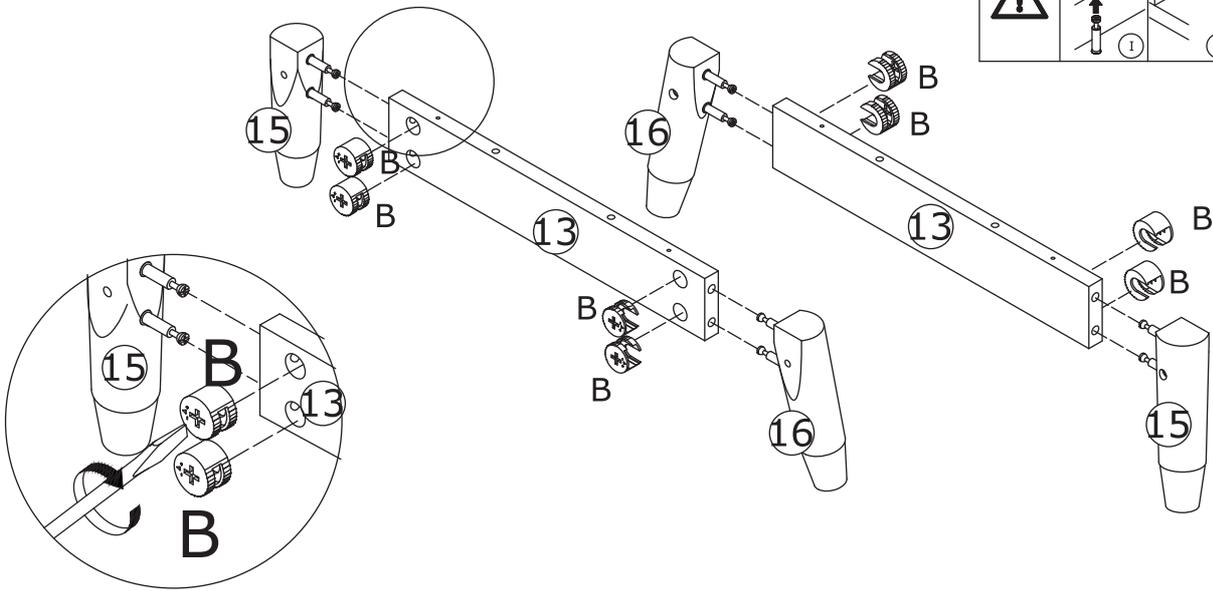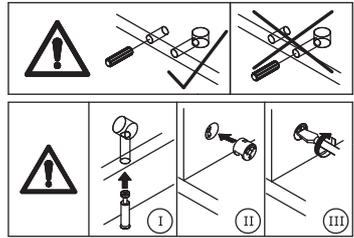


# 13

Rx4 R-1 R-2  Ø6x65mm	Px1  Ø4mm	
--	--	--


Put nut(R-2) into plate 14 at first. Connect the two leg components with plate 14, and fix using screw(R-1) as shown.

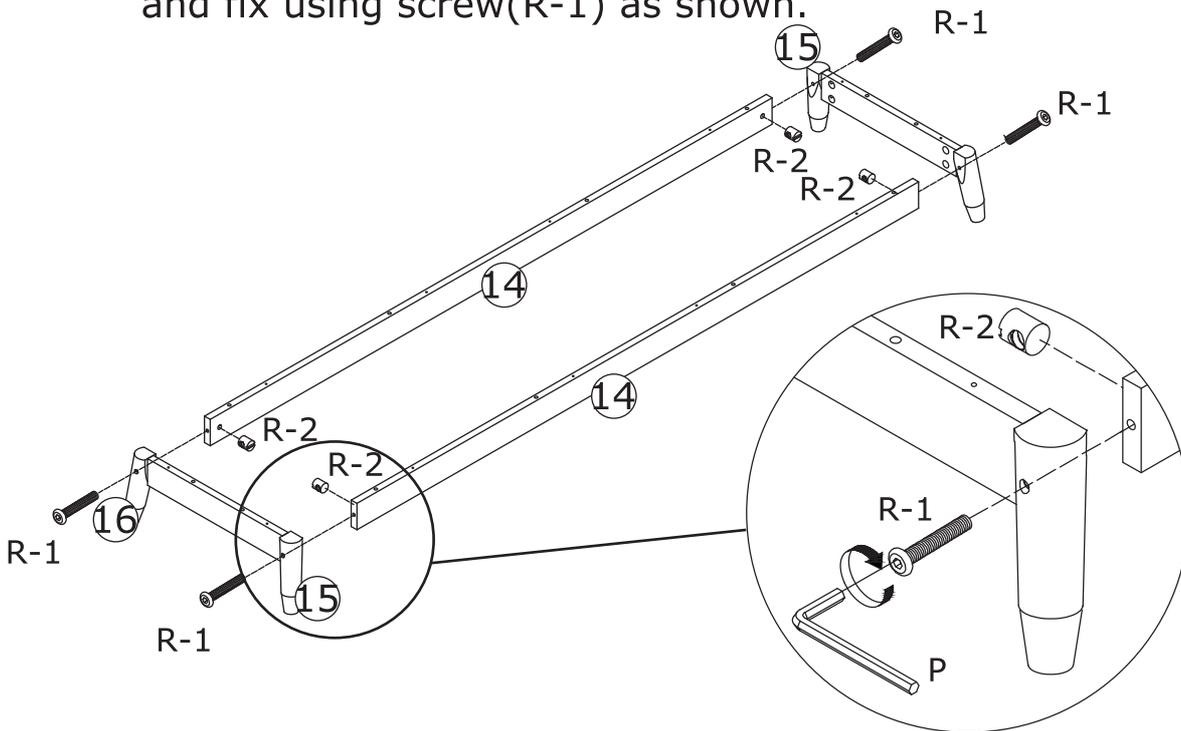

# 14

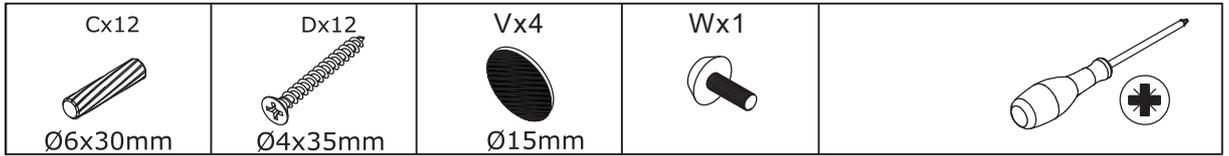



Attach the base to plate 12 with wooden dowel(C), then fix using screw(D) as shown.  
Fix leg support 29 to plate 12 using screw(D) as shown.  
Rotate part(V) into leg support 12.

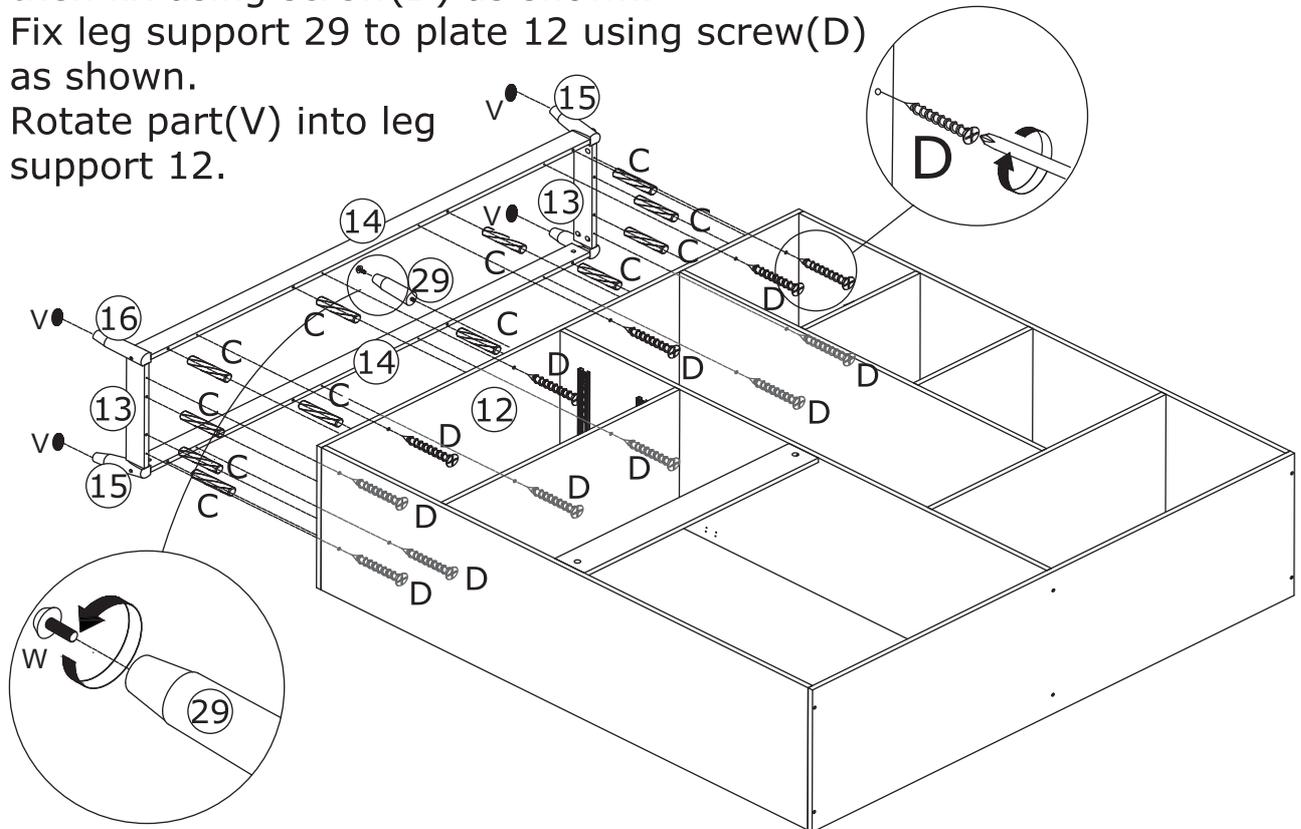

# 15




Fix back plate 10 and 11 using screw(U) as shown.

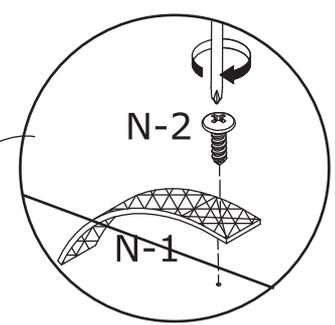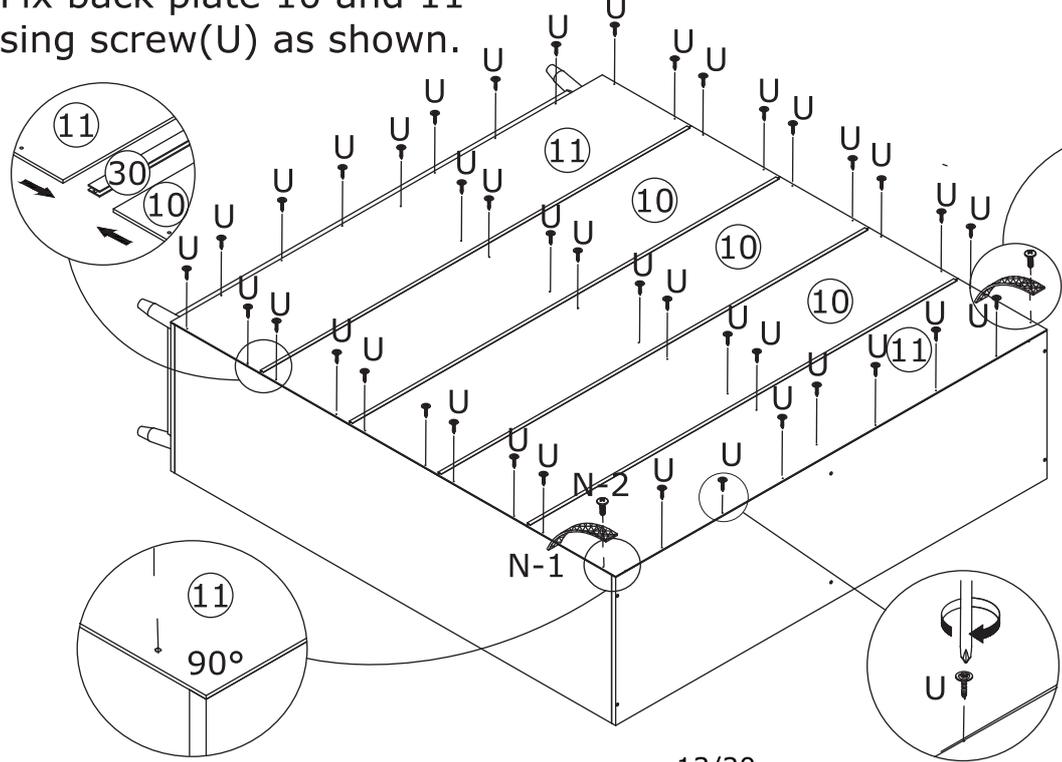


Fix part(N-1) to plate 11 using screw(N-2) as shown.



# 16

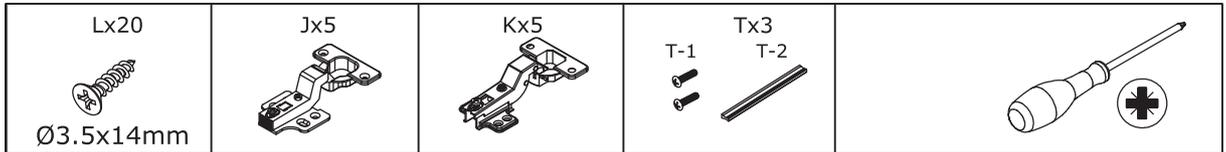

Fix hinge(J) to plate 17 and 20 using screw(L) as shown.

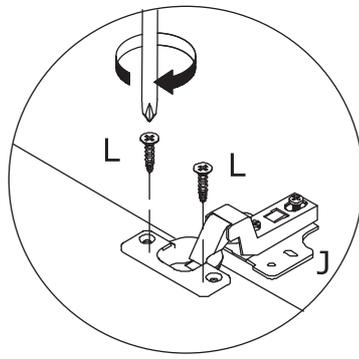


Fix hinge(K) to plate 18 and 19 using screw(L) as shown.

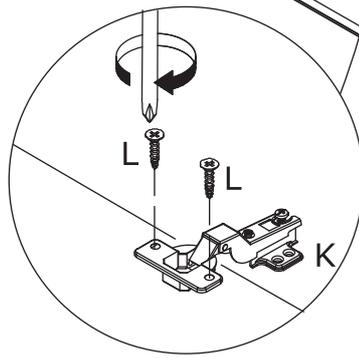
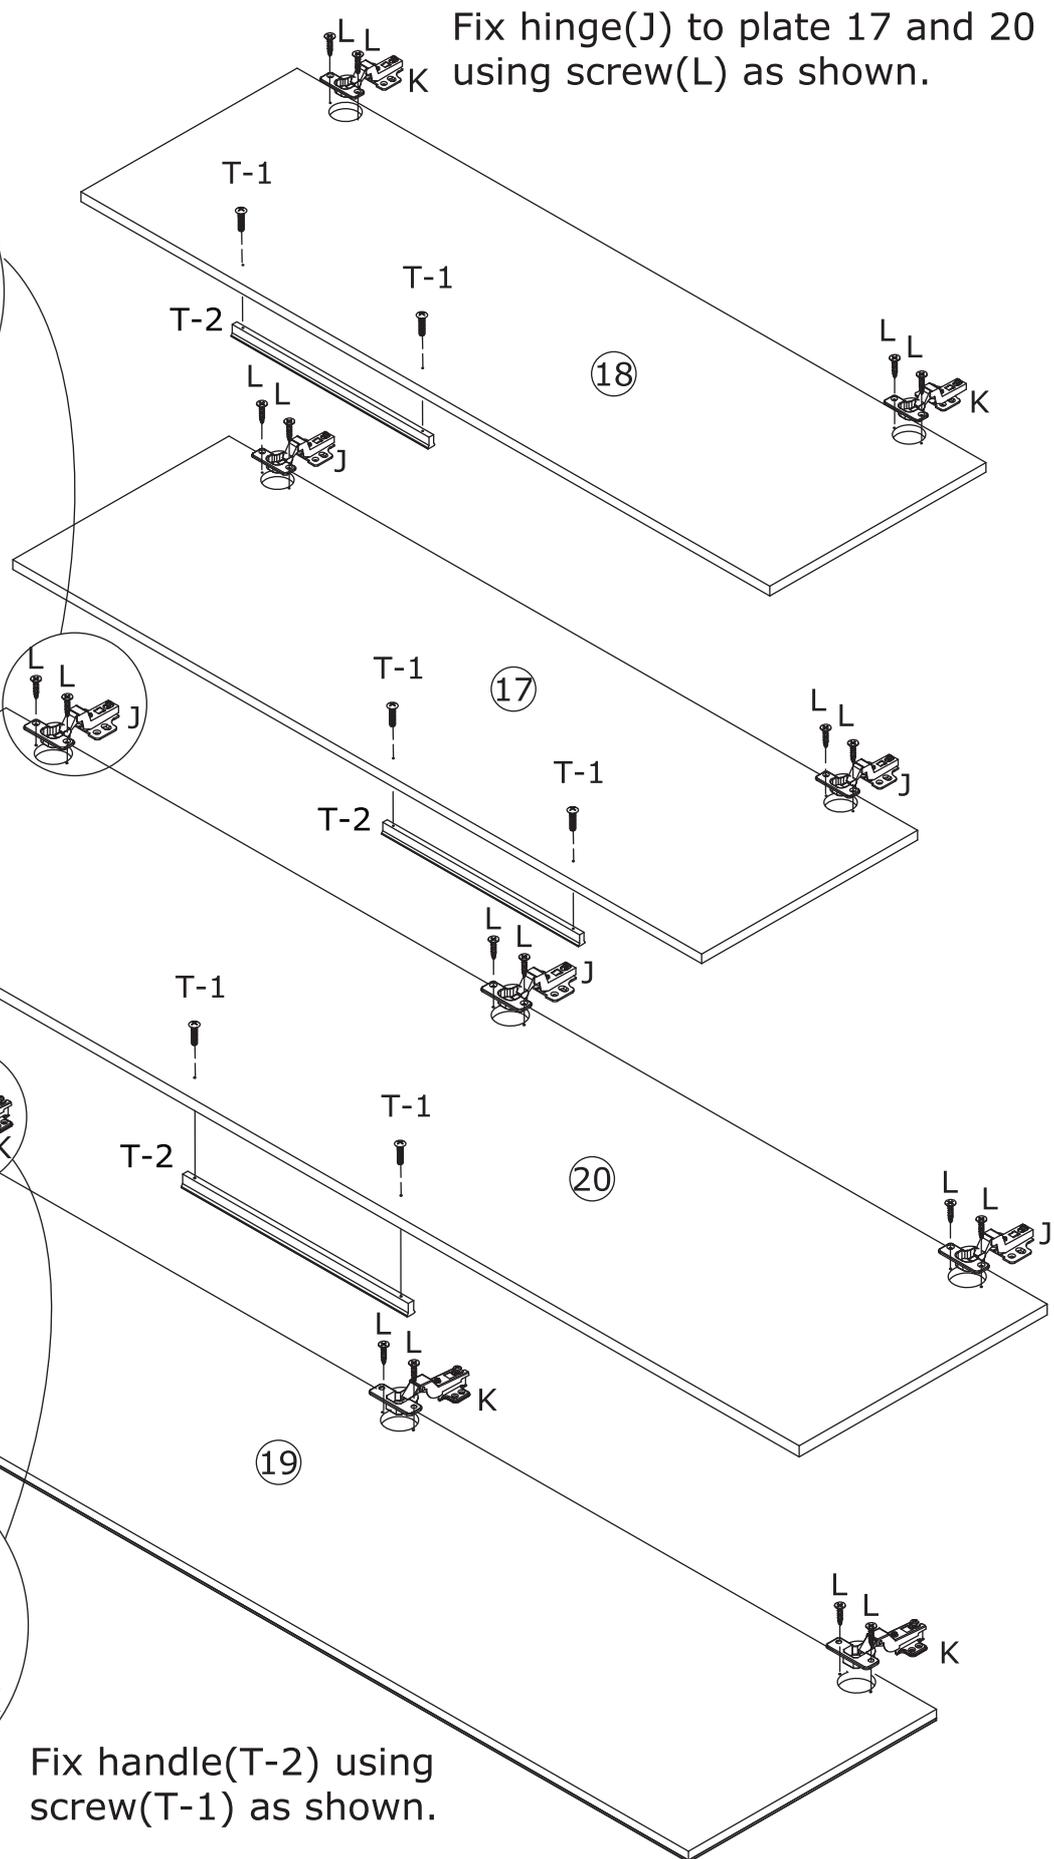


Fix handle(T-2) using screw(T-1) as shown.

17

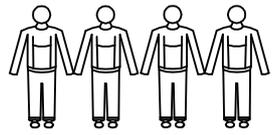


Place clothing rod 27 and 28 as shown.

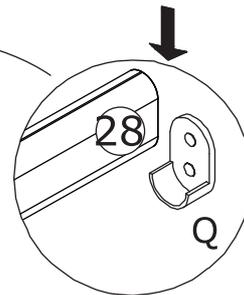
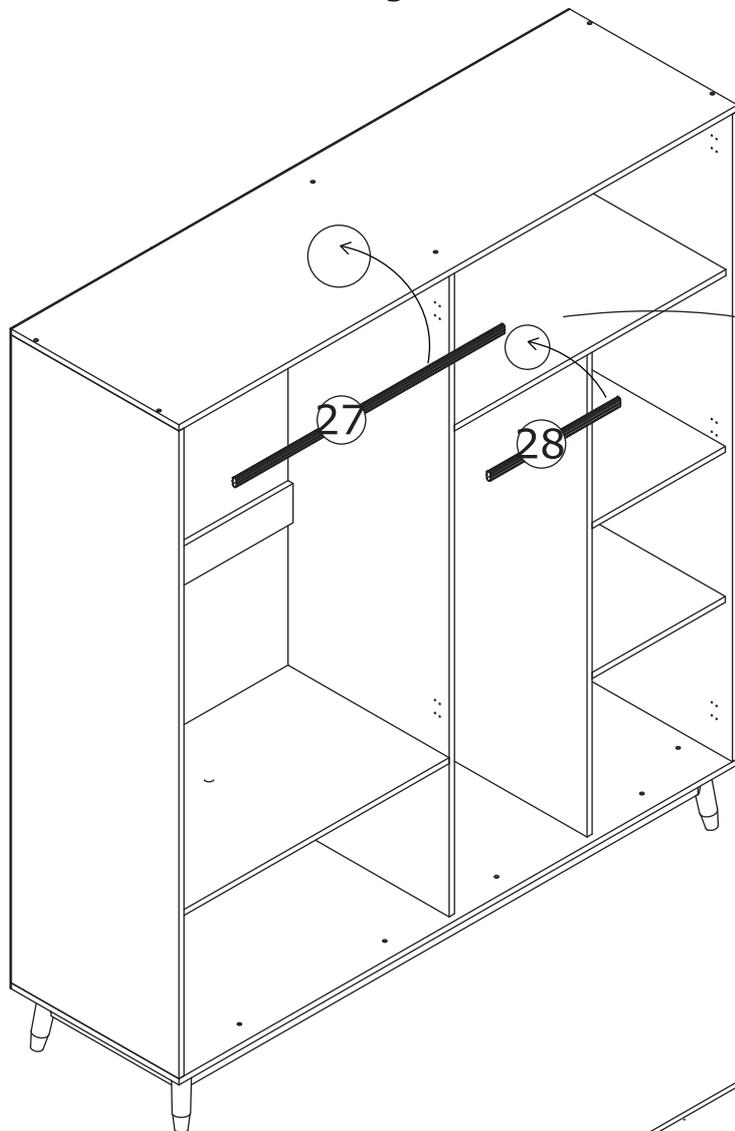


In this step, four persons are required to lift in the air and ensure that their legs do not touch the ground. Flip over 90 degrees before landing.





90°

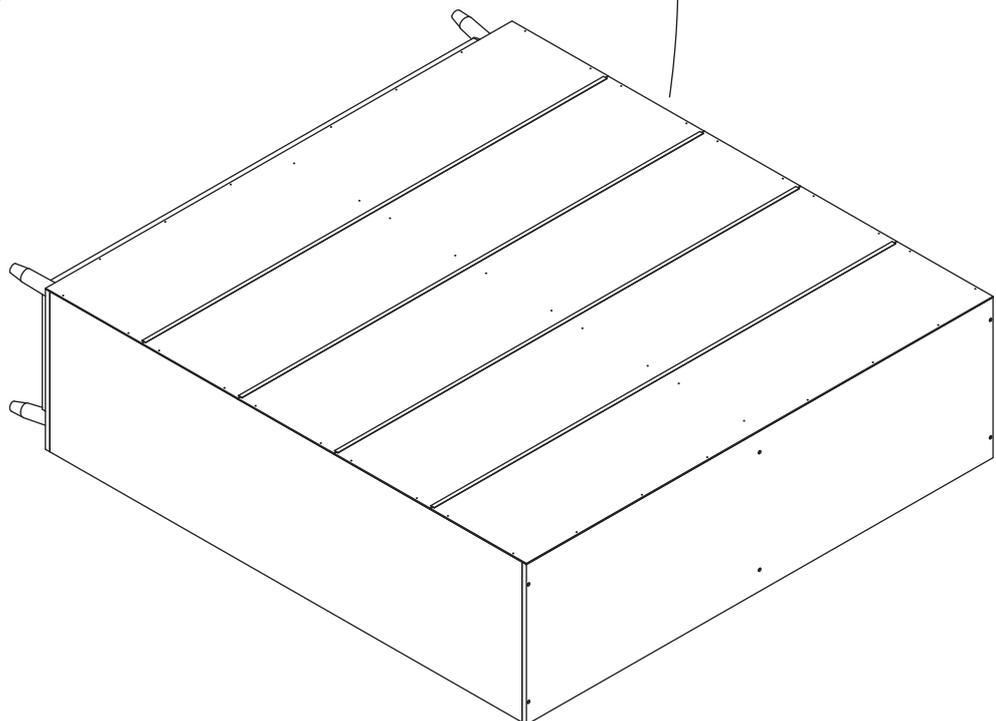


18

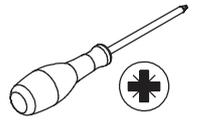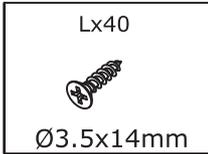



Attach door plate 17, 18, 19, 20 to each sides by fixing hinge using screw(L) as shown.

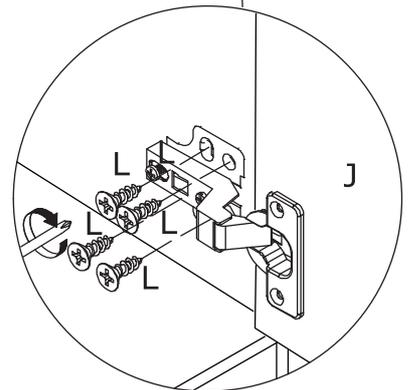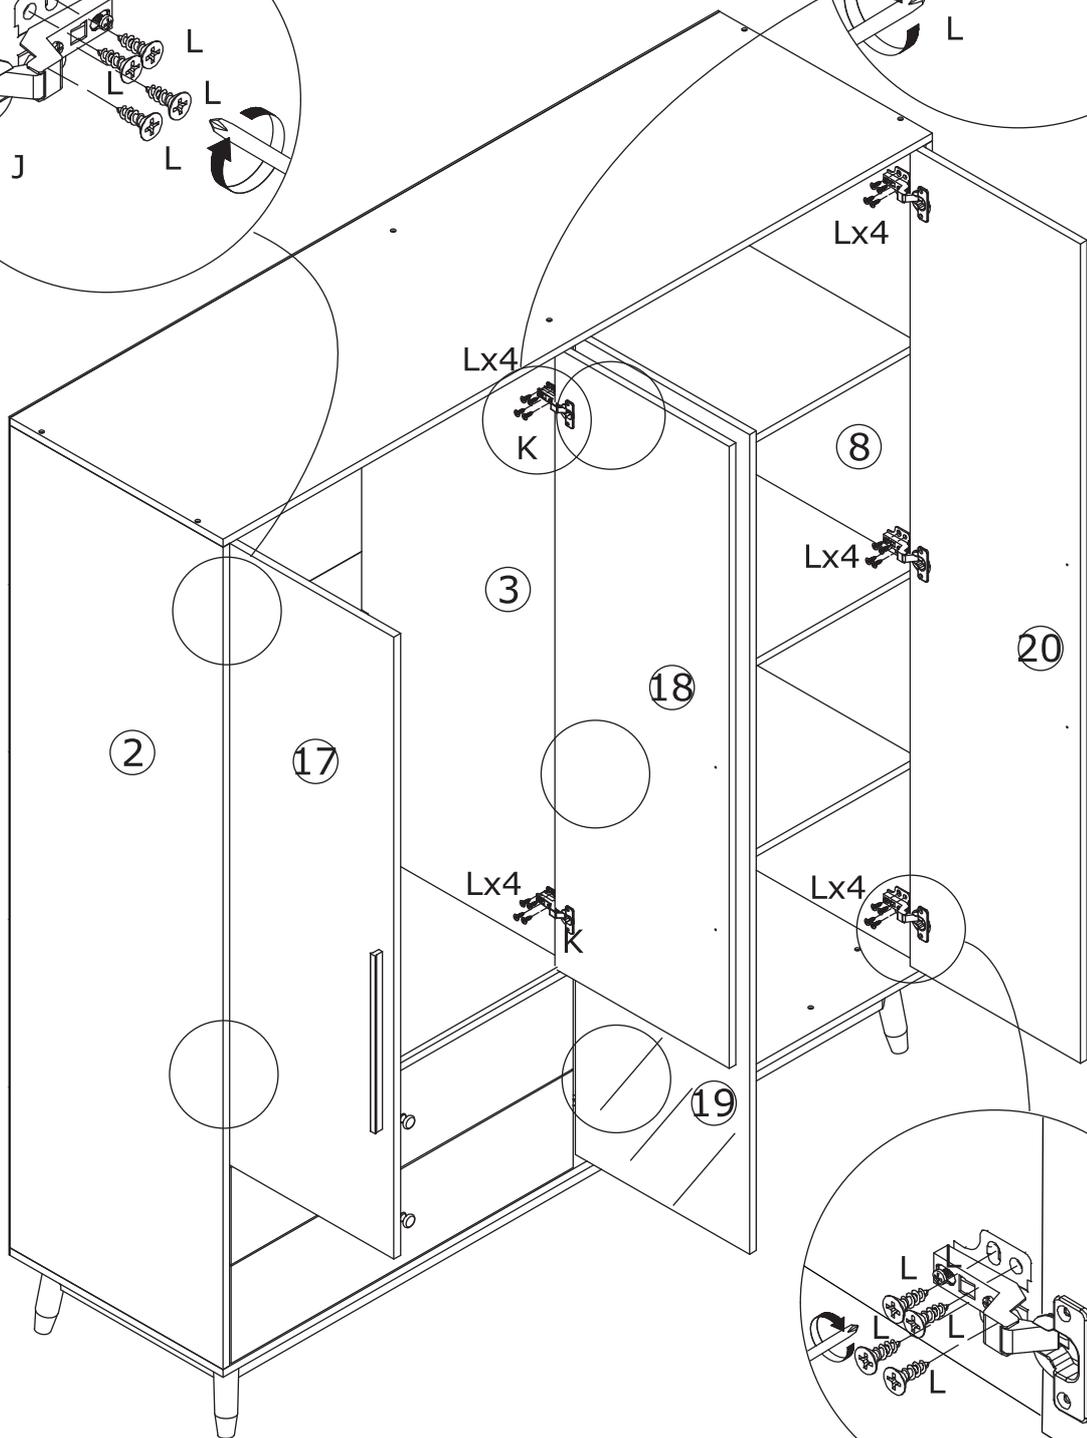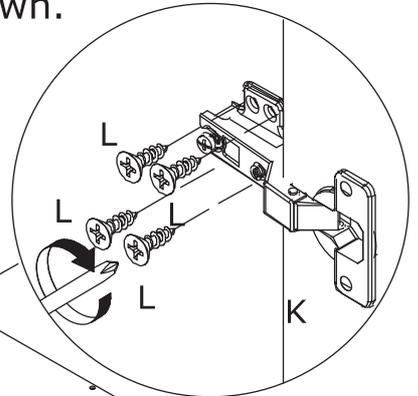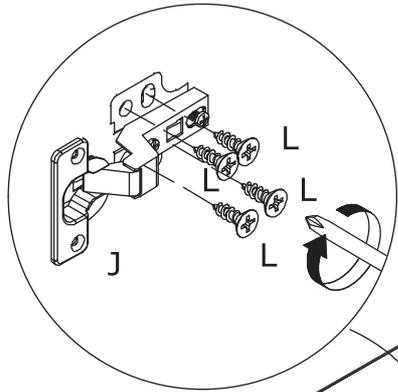


# 19
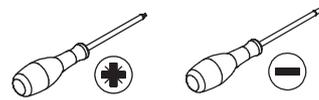
<p>Ax10            Ø6x35mm</p>	<p>Bx10            Ø15x10mm</p>	<p>Cx4            Ø6x30mm</p>	<p>Dx10            Ø4x35mm</p>	
---	--	--	--	---

Insert quickfit screw(A) into plate 21 at first.  
 Attach plate 23,24 and 25 to plate 21 with  
 wooden dowel(C), put cam lock(B) into holes  
 in plate 23,24,25, and turn clockwise to tighten  
 as shown.  
 Slide plate 26 along grooves as shown.  
 Fix plate 22 to plate 23,24 and 25 using screw(D)  
 as shown.

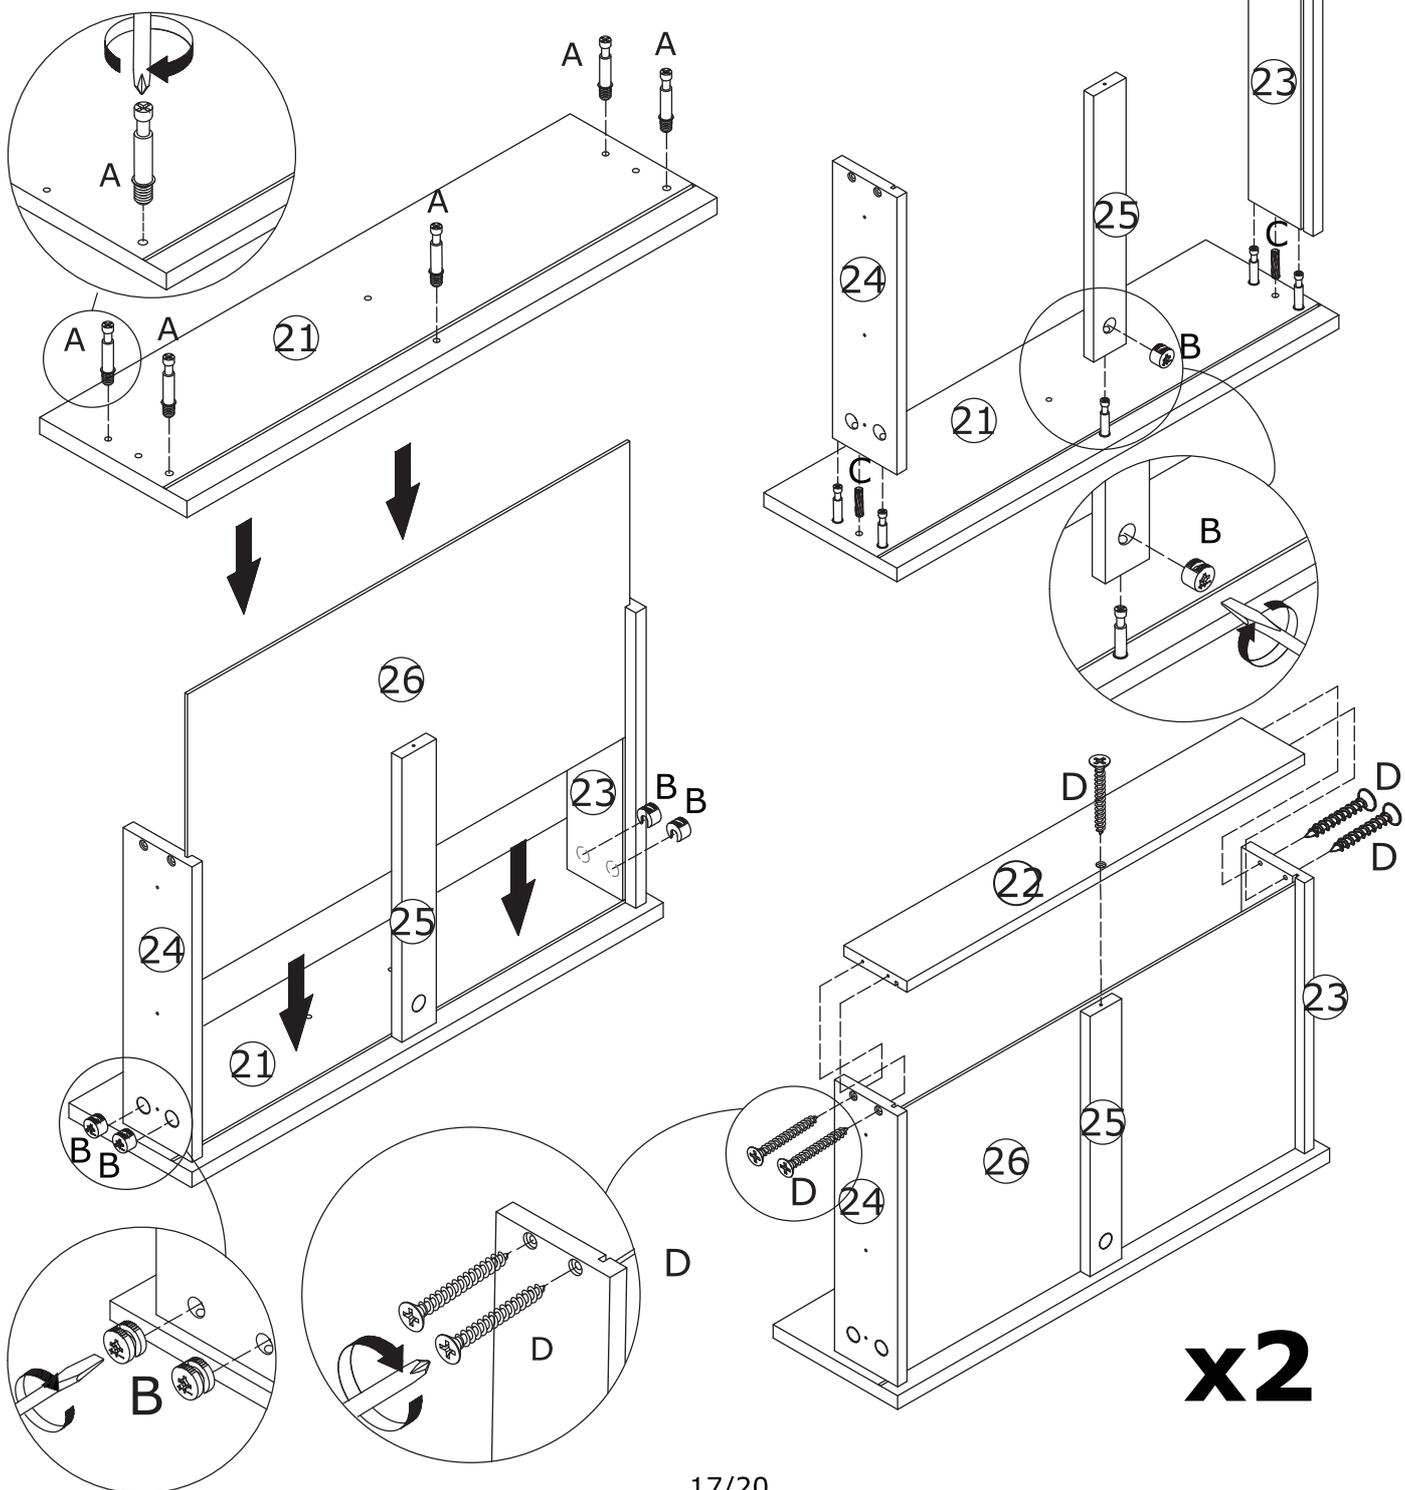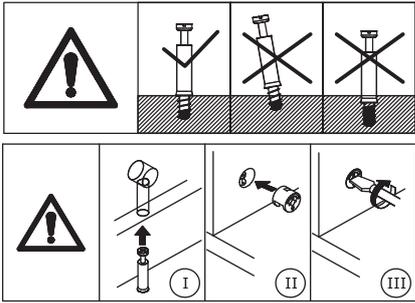


20

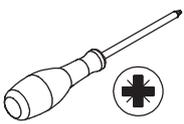Ex12  Ø3x12mm	Fx2 F-1  F-2  Ø4x20mm	Hx4  380mm	 
--	--	---	---


Fix runner(H-2) to plate 23 and 24 using screw(E) as shown.

x2


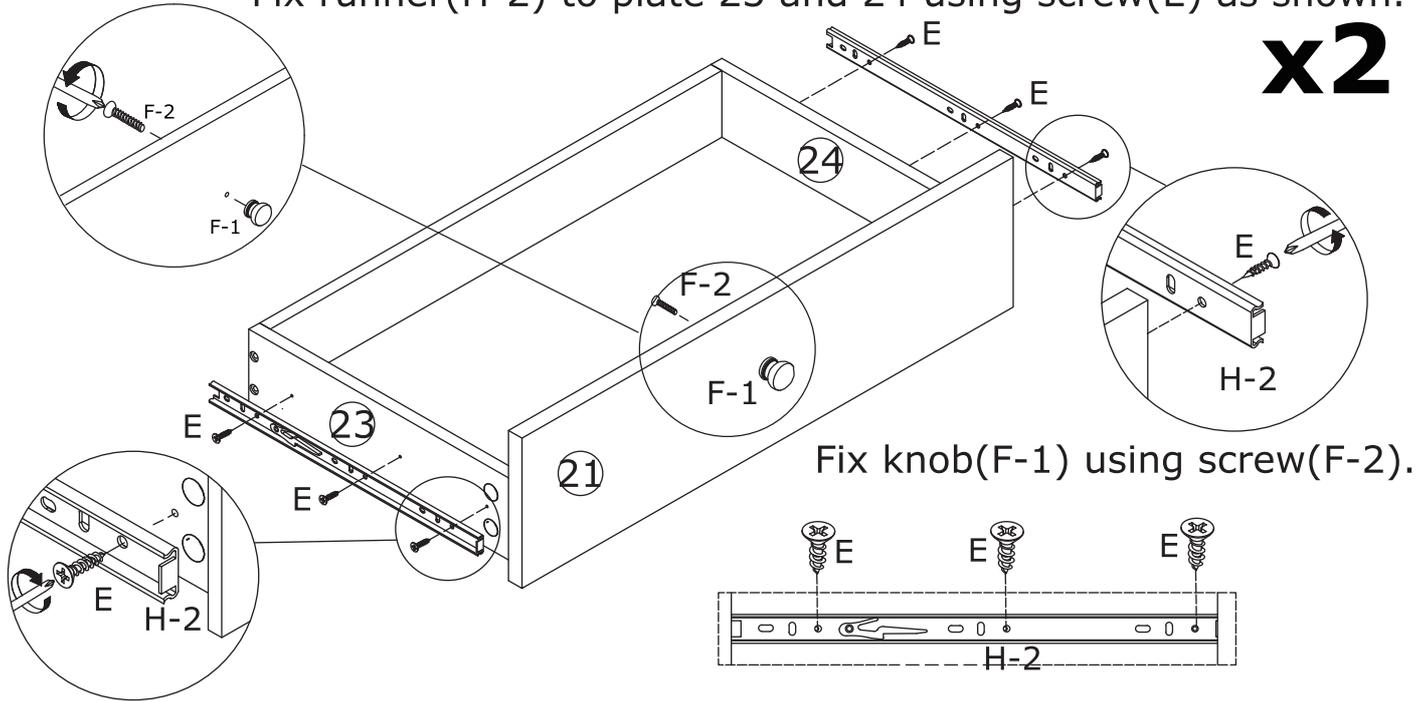


Fix knob(F-1) using screw(F-2).

21

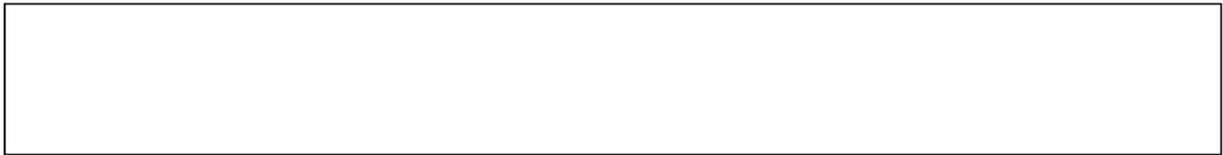

Align rails, slide the drawers.

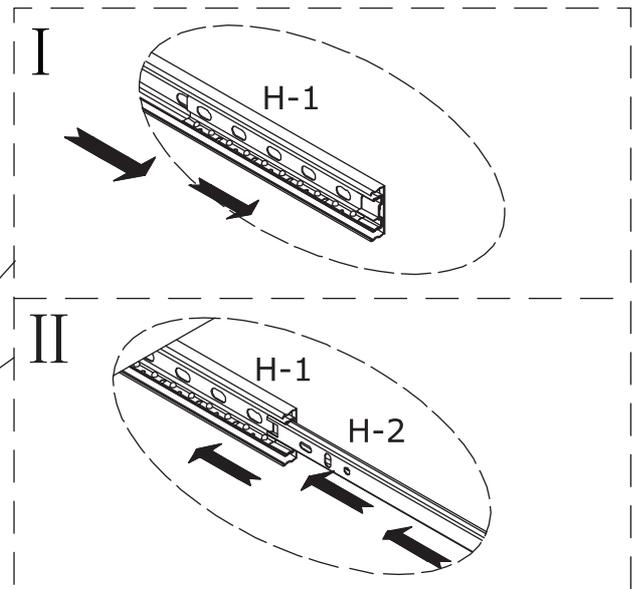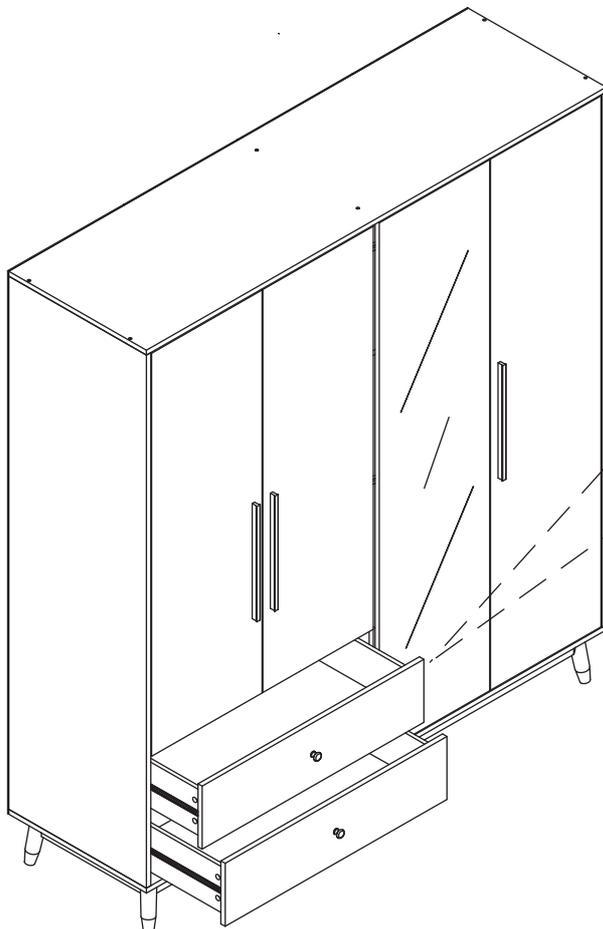


Align rails, slide drawers.


22















Install anti-tipping device(M) as shown.

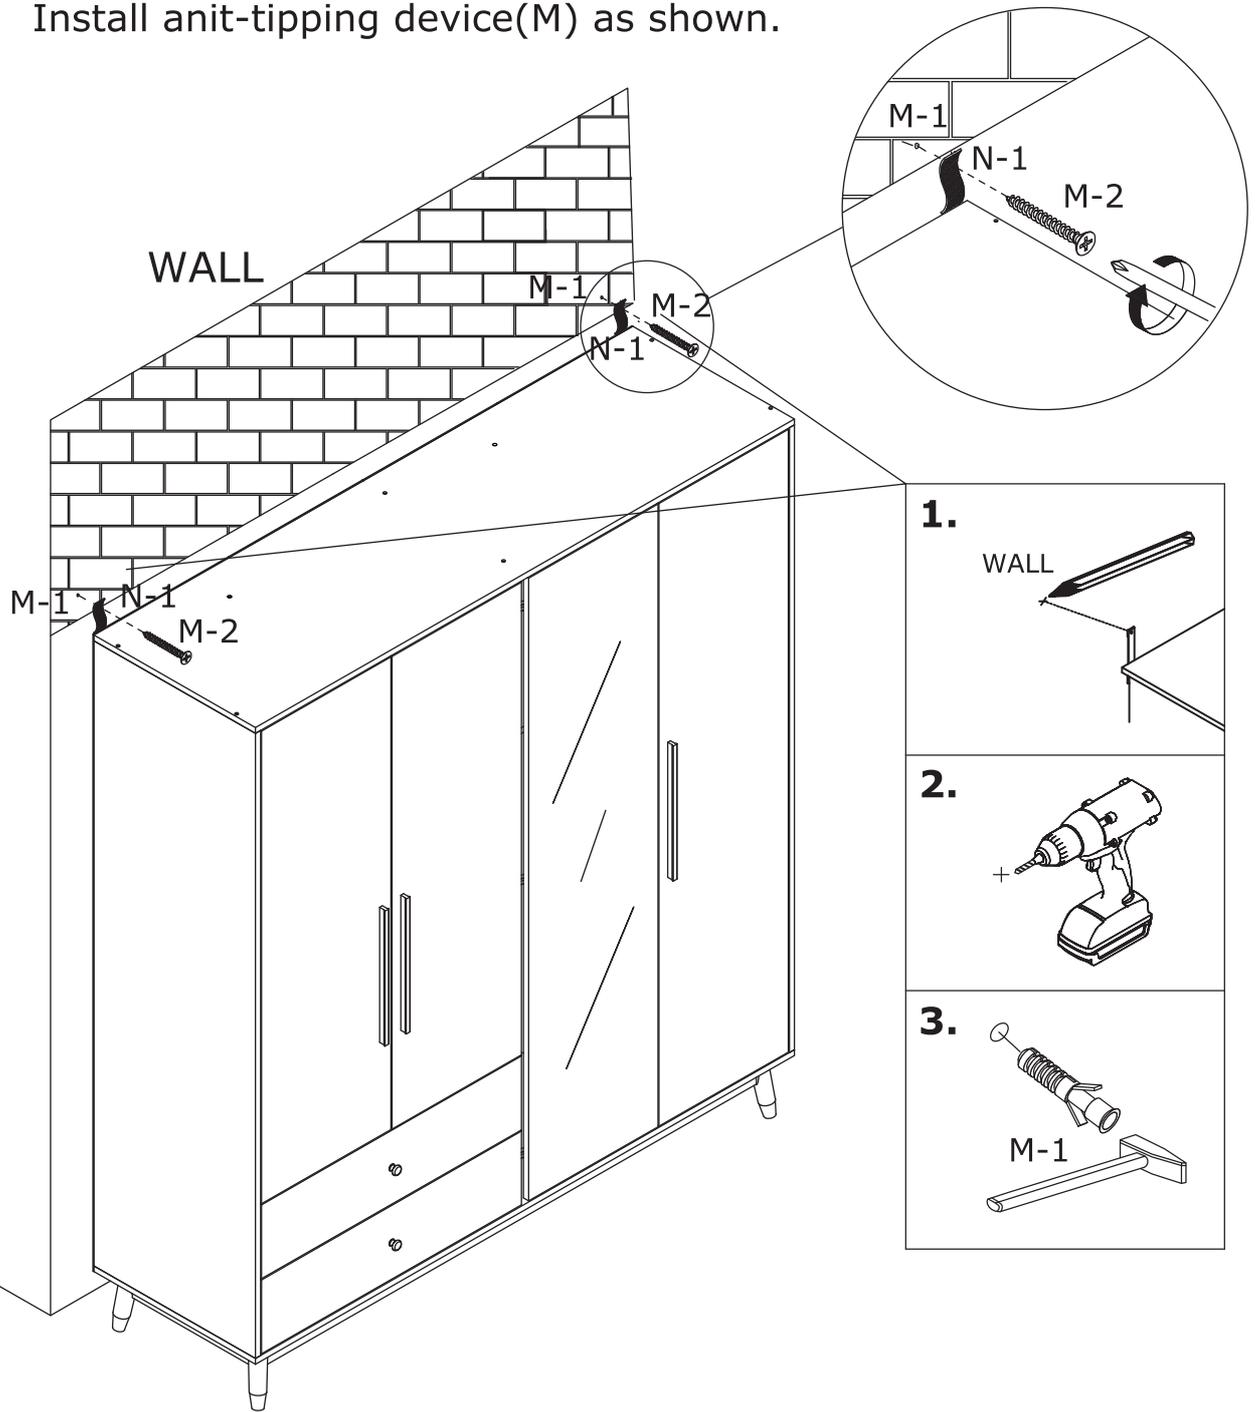

# 23

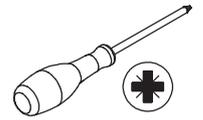

If there is misalignment after you install, adjust the screw to the best condition.

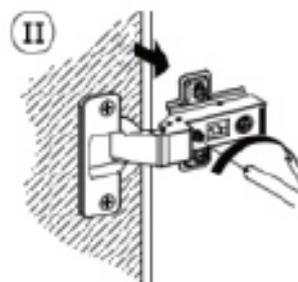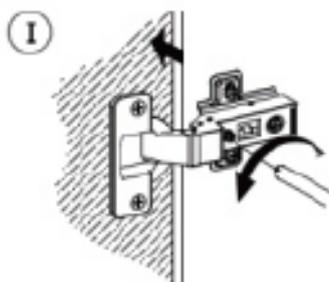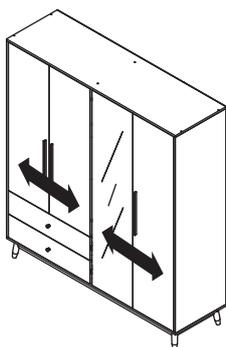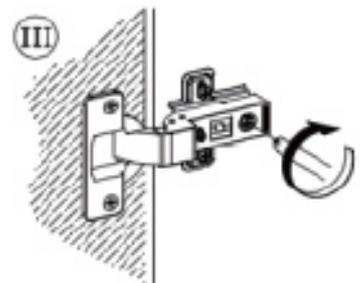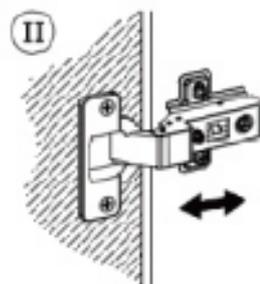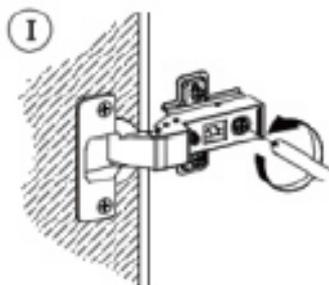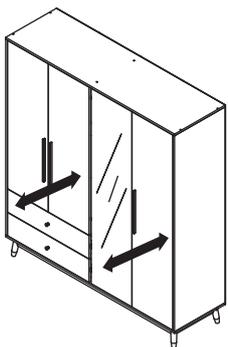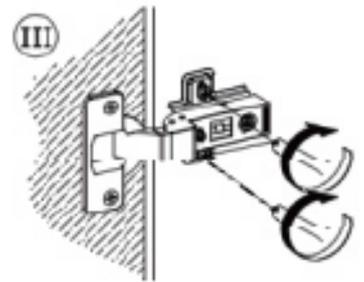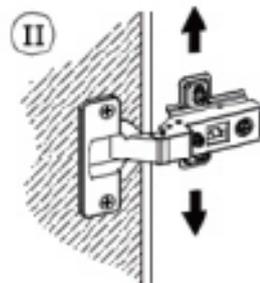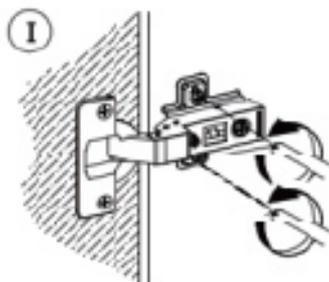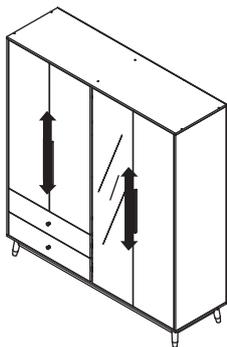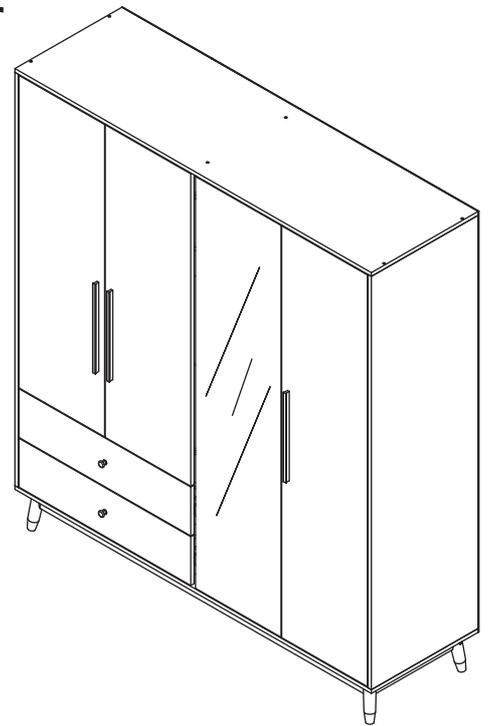

# WARRANTY

## WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

## Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

## Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

## The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

# RETURNS

## **CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?**

### **PLEASE FOLLOW THE BELOW INSTRUCTIONS:**

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

### **DEFECTIVE ITEMS**

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

### **DAMAGED ITEMS**

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.  
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.