 
 




Display Cabinet

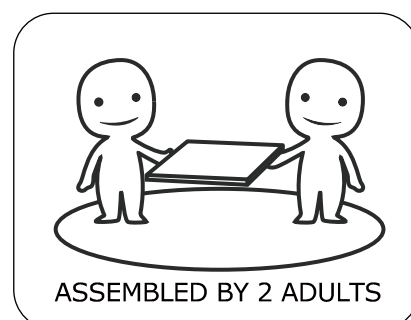

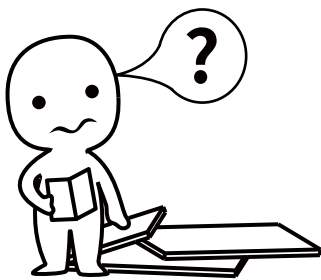


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

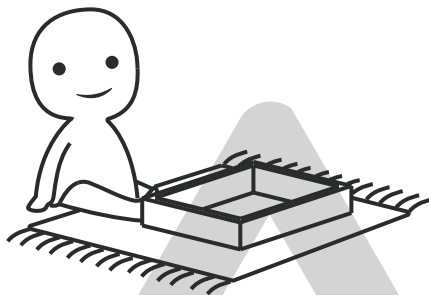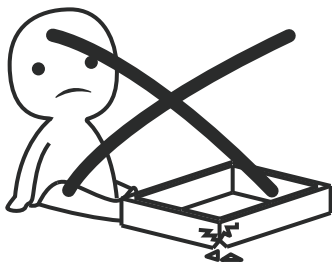



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

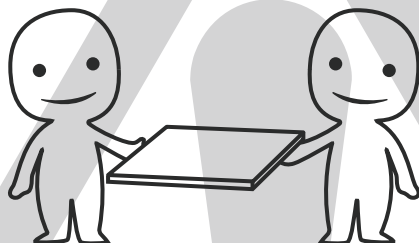

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

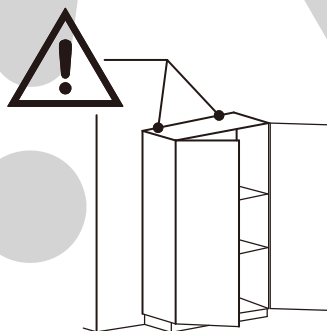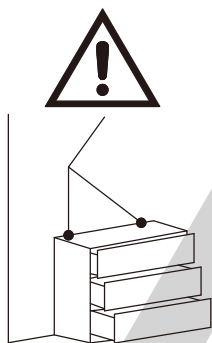

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !







It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

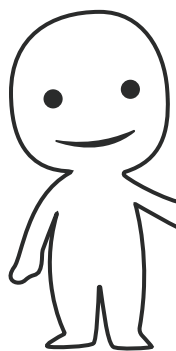


Please prepare the following tools

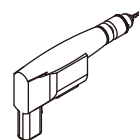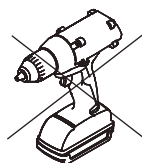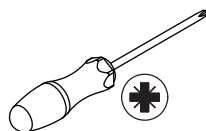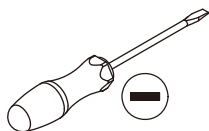      

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 30



Ø6x35mm

B x 30



 
Ø14x9mm

C x 28



Ø8x30mm

D x 4



Ø4x35mm

E x 47

 


Ø2.5X10mm


F x 1



G x 4



H x 8

 


M4x18mm

J x 60




Ø4x14mm

 K x 10

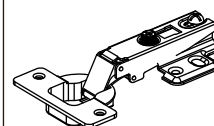

L x 4

 


M x 2




Ø4x14mm

 N x 2




P x 2

 

Ø4x40mm

 Q x 2



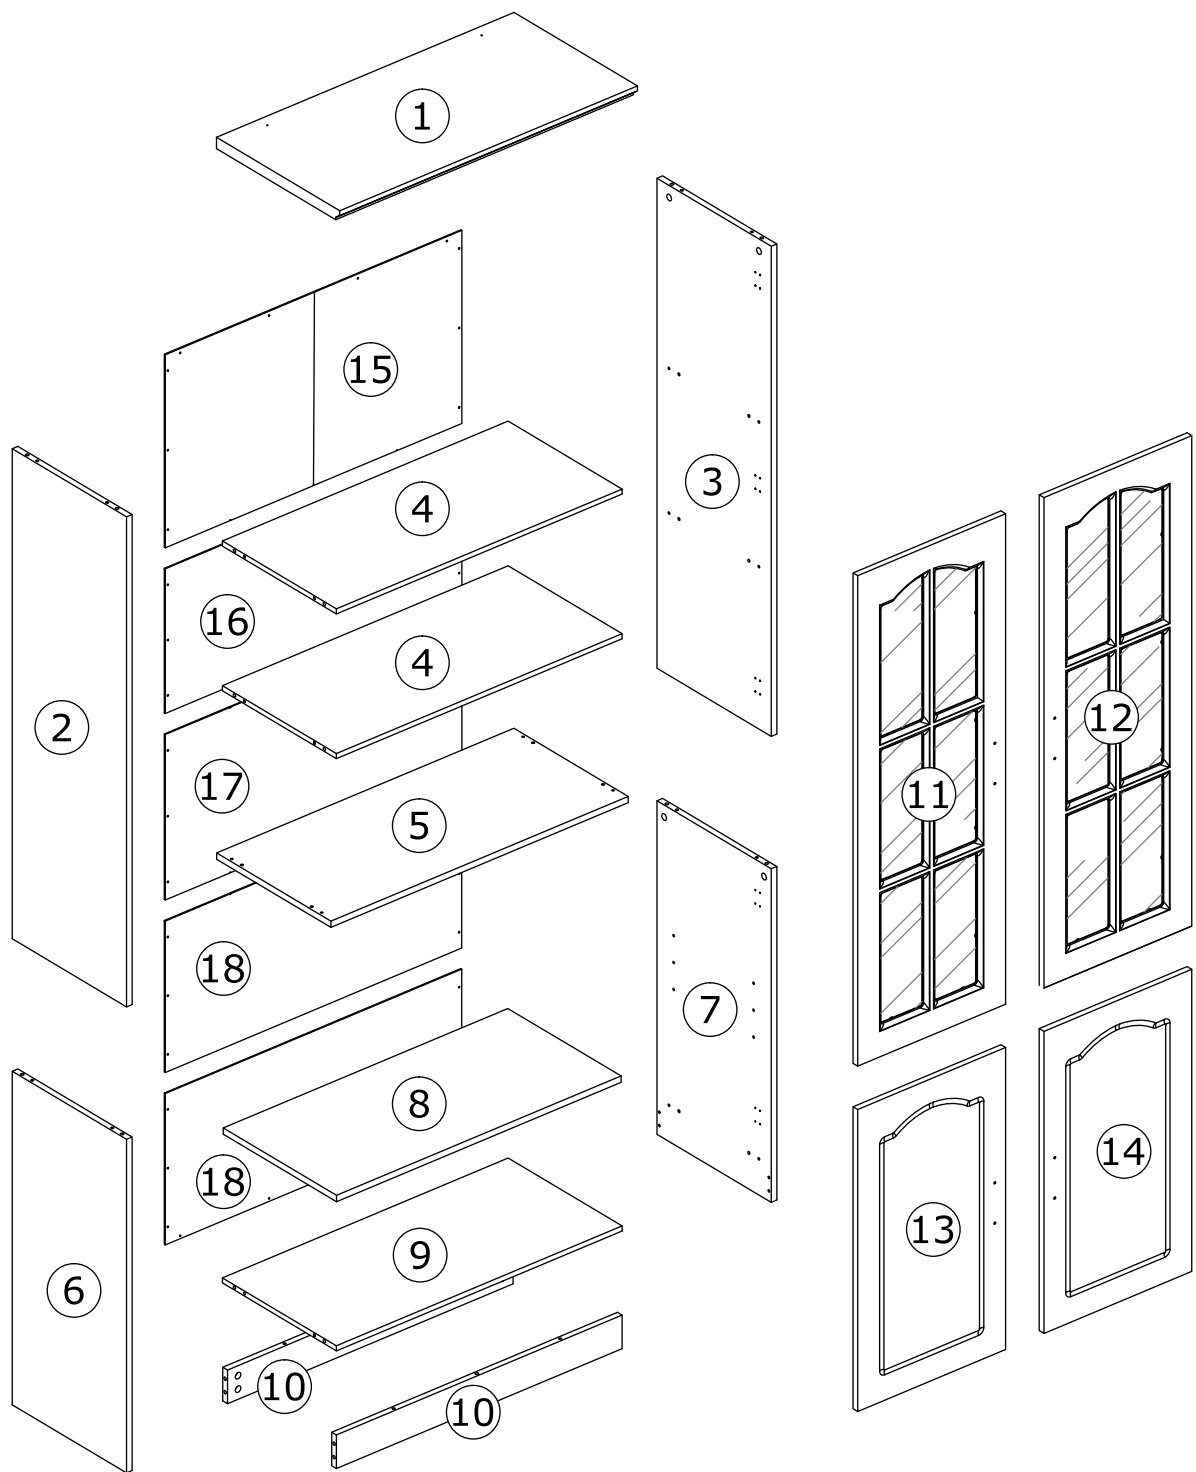

⚠ WARNING

 


Children have died from furniture tipover. To reduce the risk of furniture tipover:




- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.



*This is a permanent label.
Do not remove!*

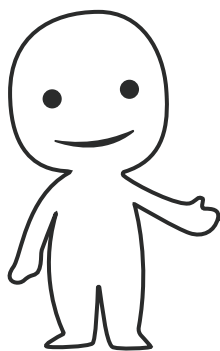



Please prepare the following tools

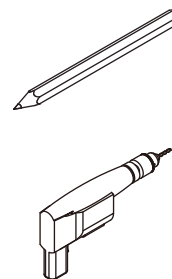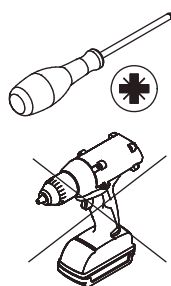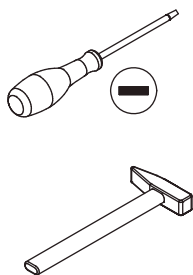   



When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

① x 1 	② x 1 	③ x 1 	④ x 2 	⑤ x 1
⑥ x 1 	⑦ x 1 	⑧ x 1 	⑨ x 1 	⑩ x 2
⑪ x 1 	⑫ x 1 	⑬ x 1 	⑭ x 1 	⑮ x 1
⑯ x 1 	⑰ x 1 	⑱ x 2 		


 
 
1

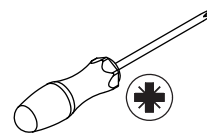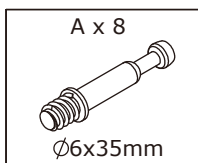

  Screw eccentric rod(A) into board 2 and 3 with a screwdriver as shown.

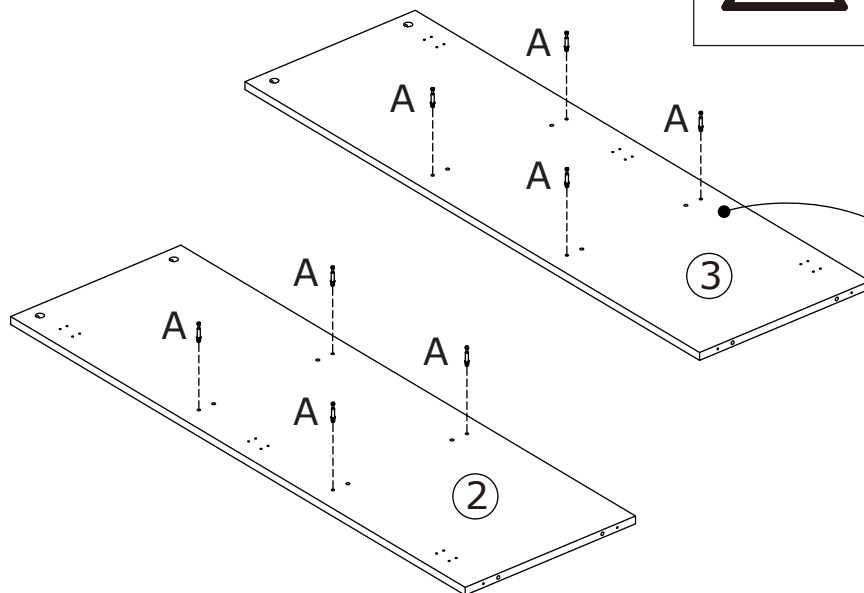
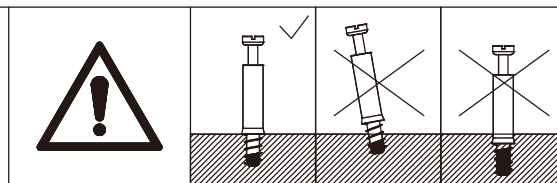


2

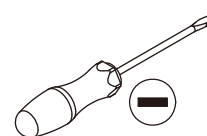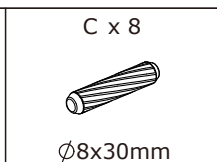  
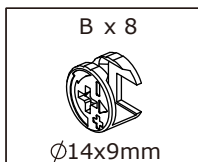 


Insert wooden dowel(C) into board 4 at first.


 
 
Attach board 2 and 3 to board 4, add cam lock(B) into board 4 and turn clockwise to tighten as shown.

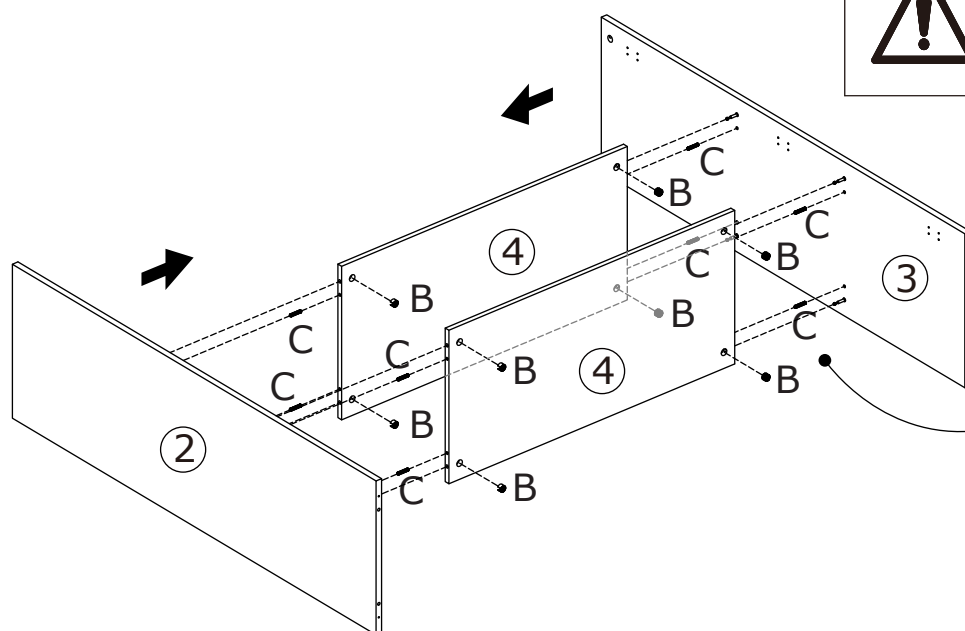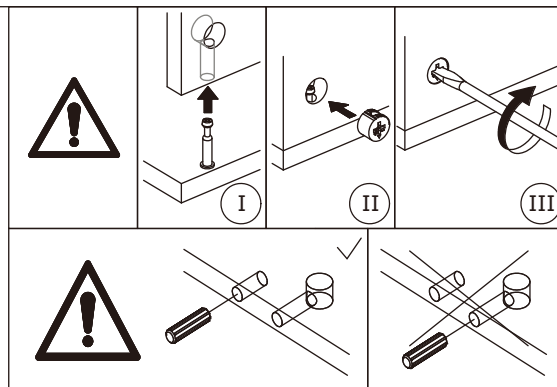




3

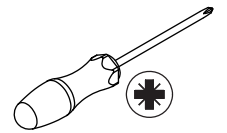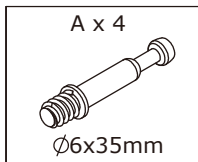  

 
 
 
Screw eccentric rod(A) into board 1 with a screwdriver as shown.

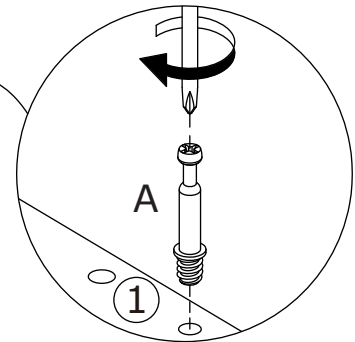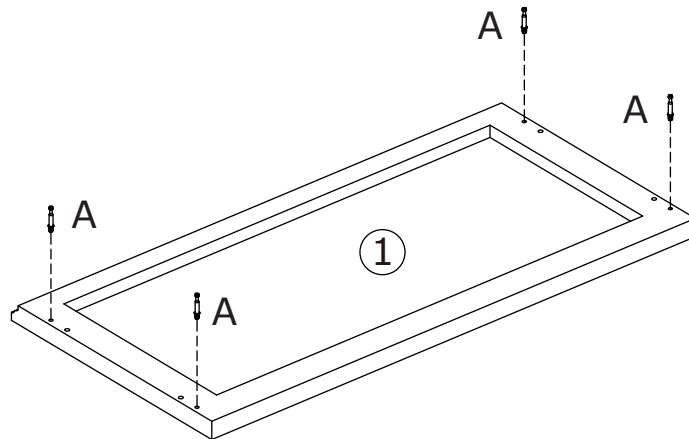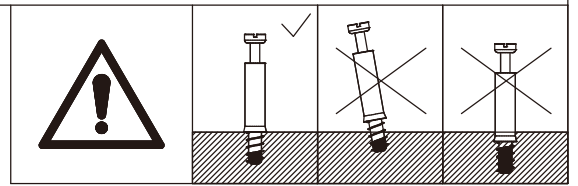




4

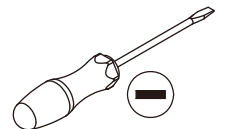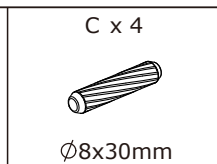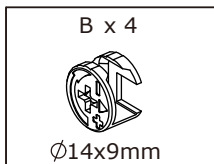   

  
 
Insert wooden dowel(C) into board 3 and 2 at first.
Cover board 1 to the top, add cam lock(B) and turn clockwise to tighten as shown.

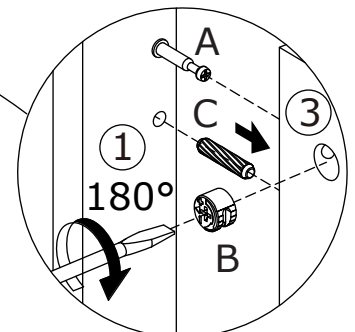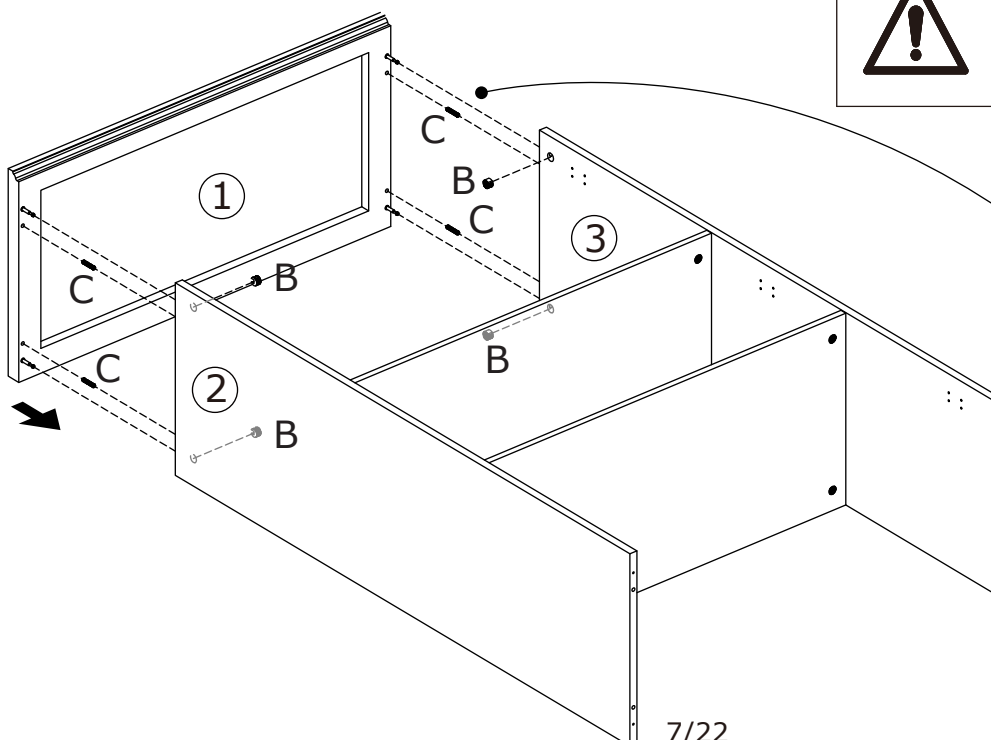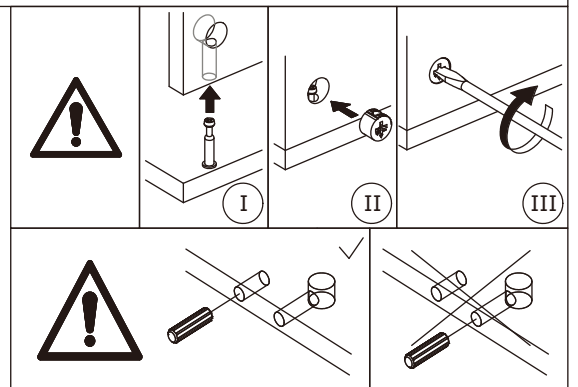

5

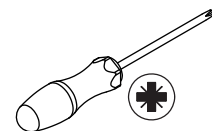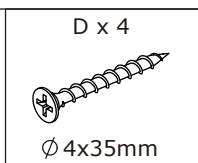  
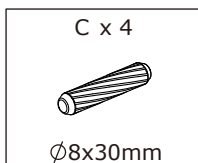 


  Insert wooden dowel(C) into board 3 and 2 at first.

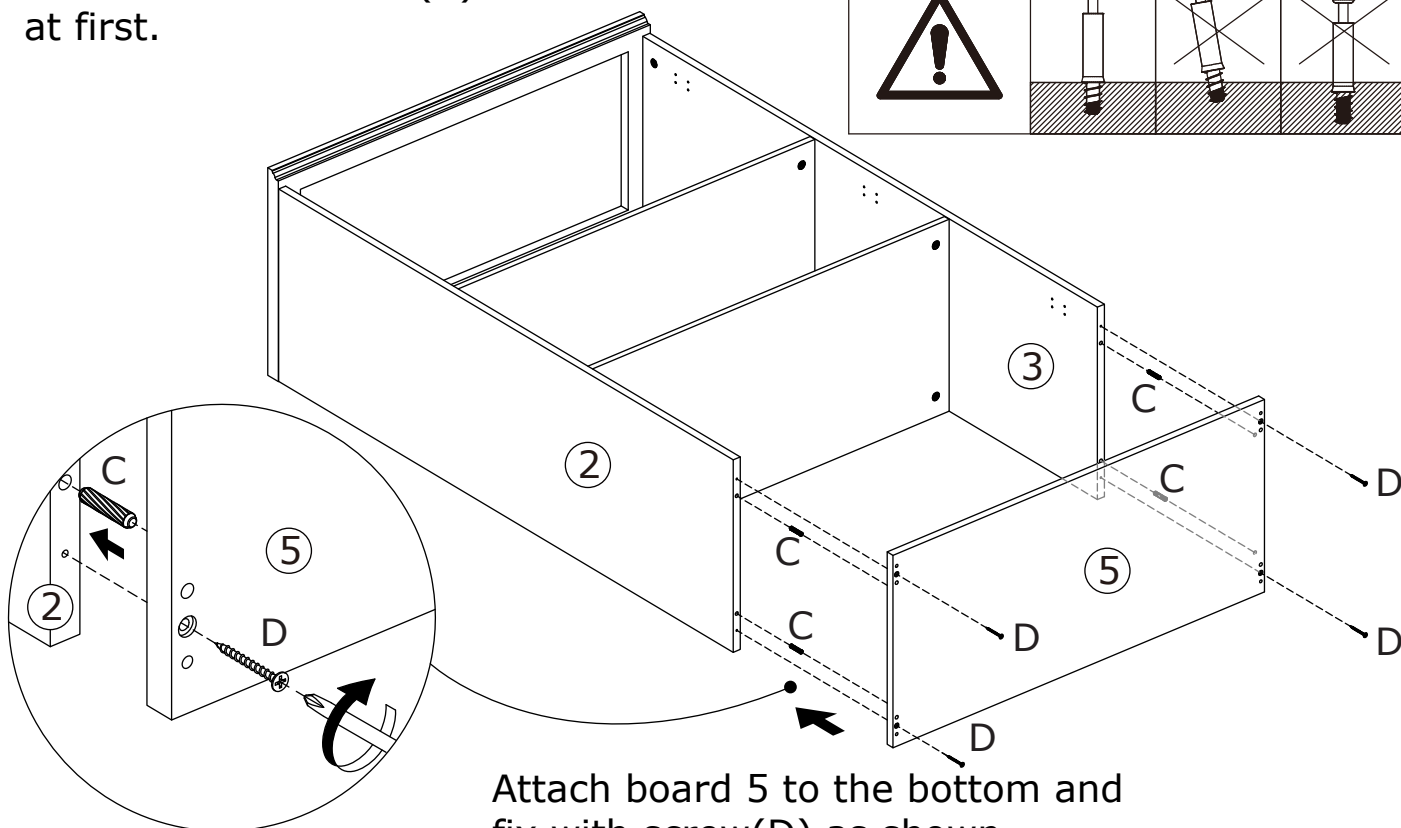
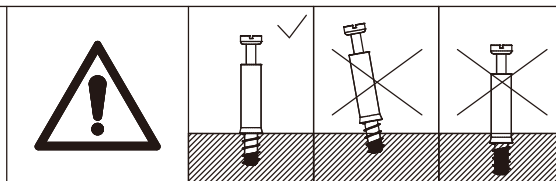


Attach board 5 to the bottom and fix with screw(D) as shown.

 
 
6

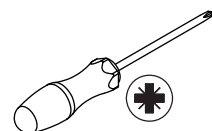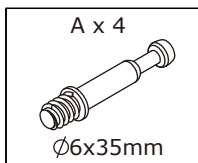


 
 
Screw eccentric rod(A) into board 5 with a screwdriver as shown.

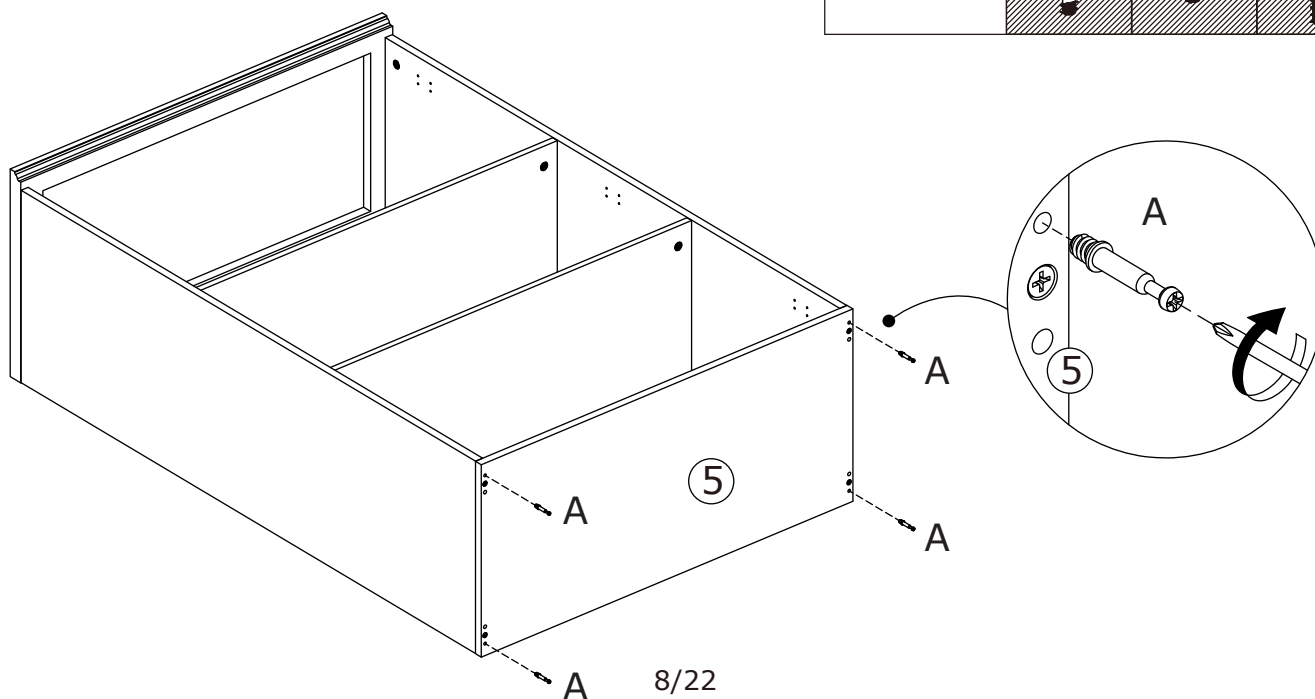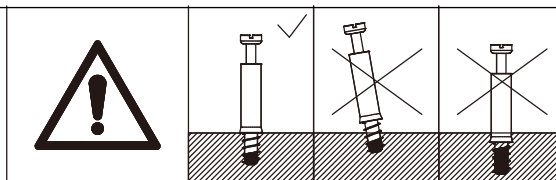




7

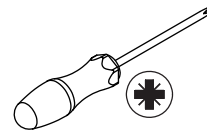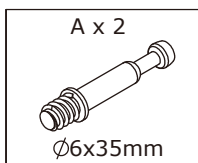  

   Screw eccentric rod(A) into board 9 with a screwdriver as shown.

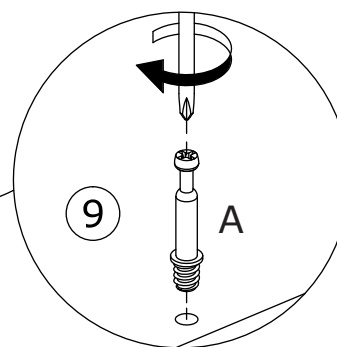
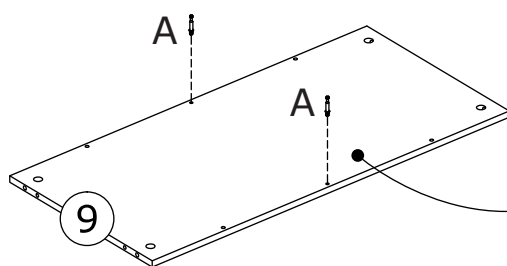
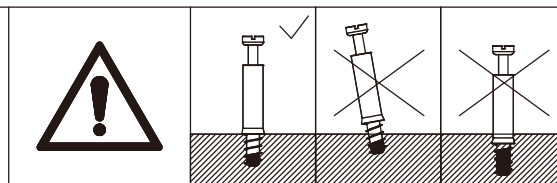


8

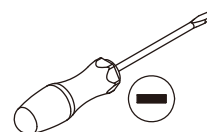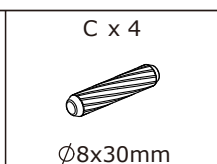  
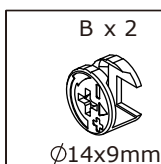 


Insert wooden dowel(C) into board 9 at first.

  
 
Attach board 10 to board 9, add cam lock(B) into board 10 and turn clockwise to tighten as shown.

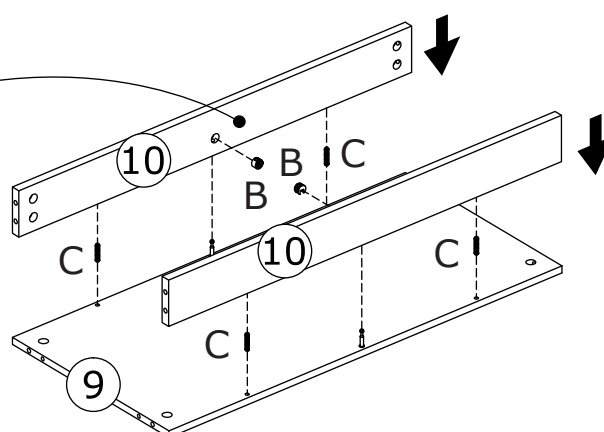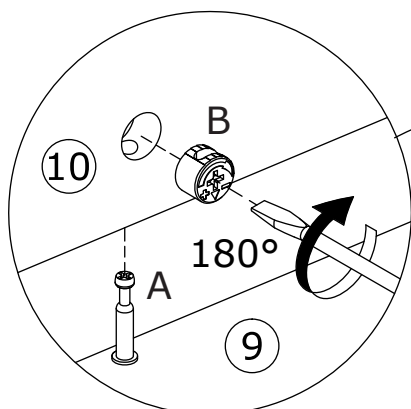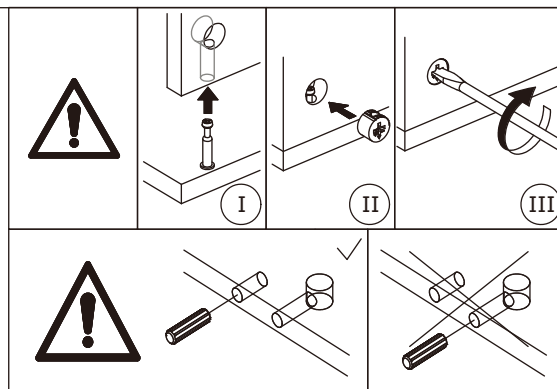




9

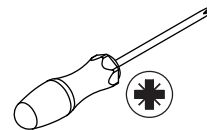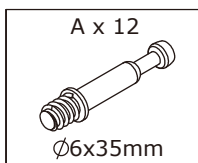  

 
 
Screw eccentric rod(A) into board 6 and 7 with a screwdriver as shown.

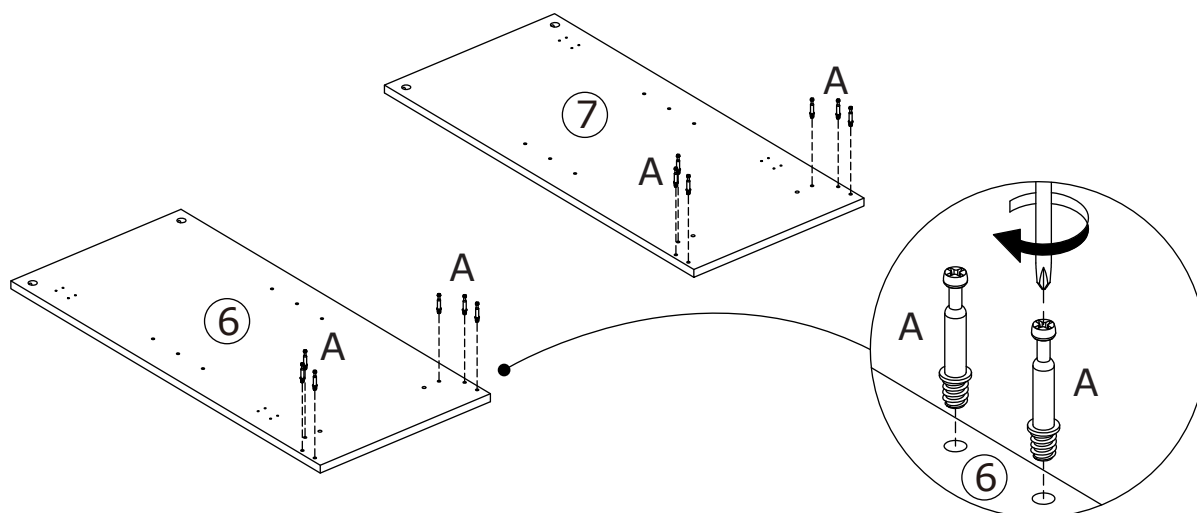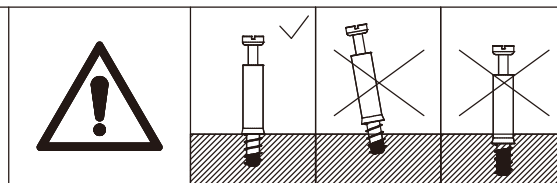

10

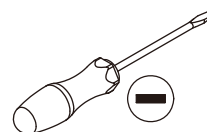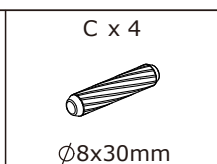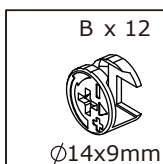   

  Insert wooden dowel(C) into board 6 and 7 at first.
Attach board 6 and 7 to board 9 and 10, add cam lock(B) into board 9, 10 and turn clockwise to tighten as shown.

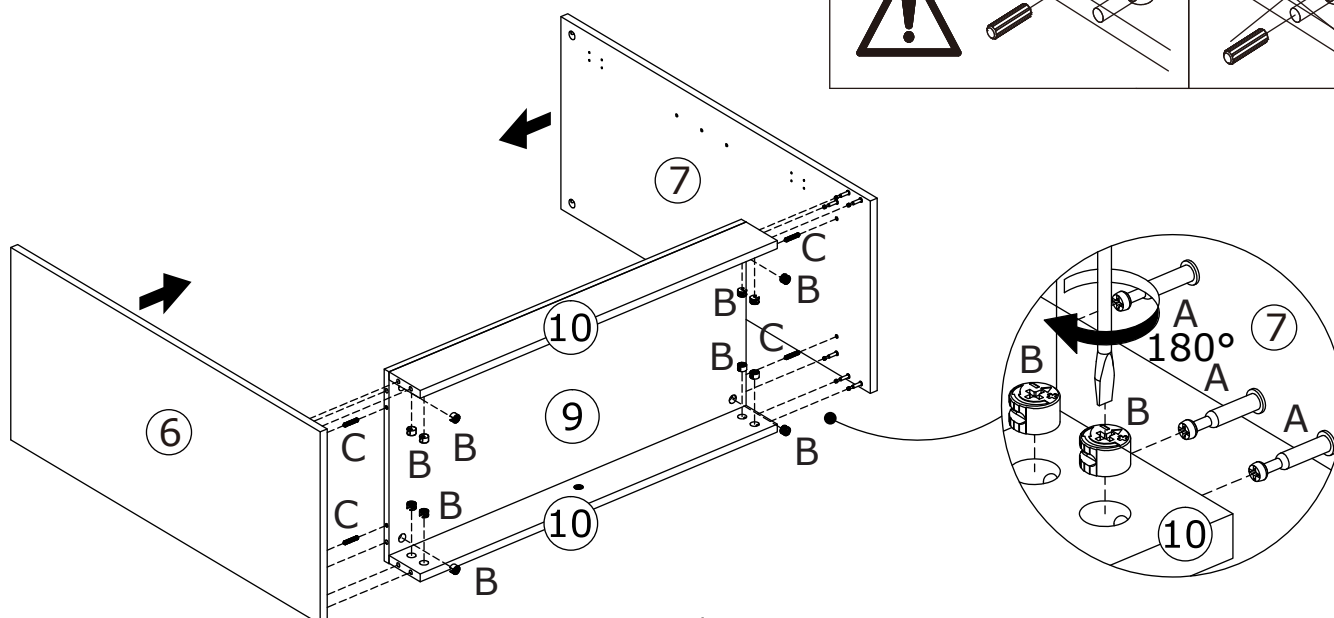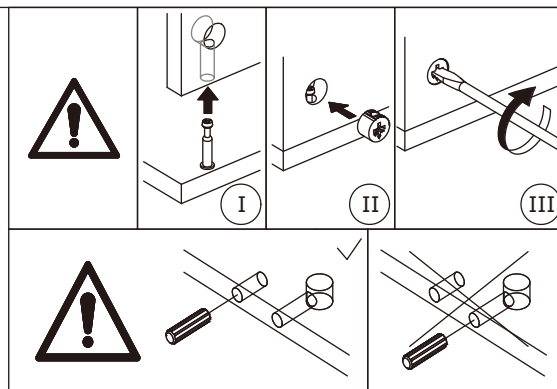


11

B x 4




Ø14x9mm

 C x 4





Ø8x30mm

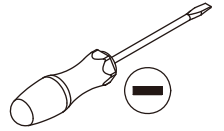 

Insert wooden dowel(C) into board 6 and 7 at first.

  Connect the two assembled components, add cam lock(B) into board 6,7 and turn clockwise to tighten as shown.

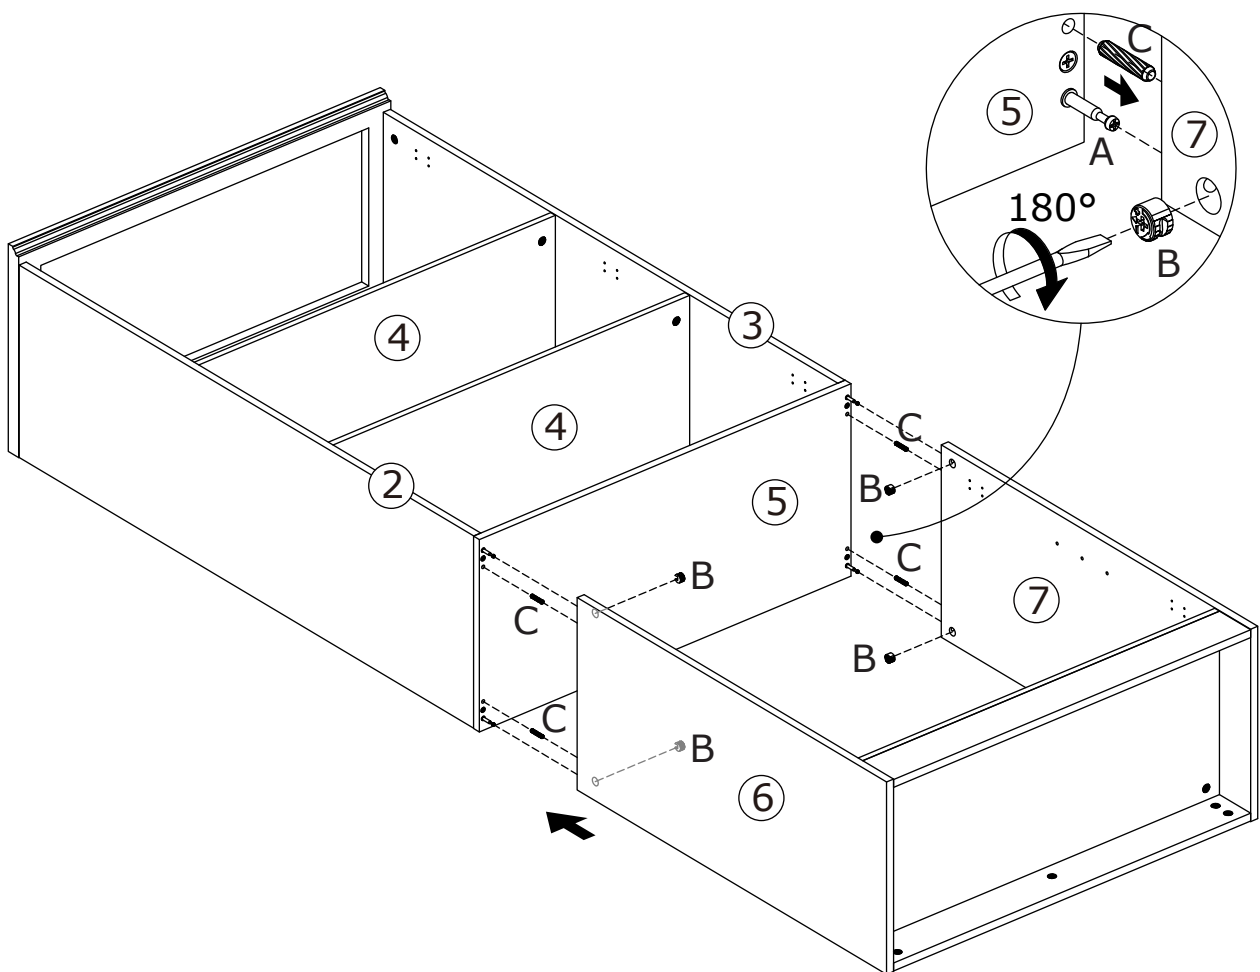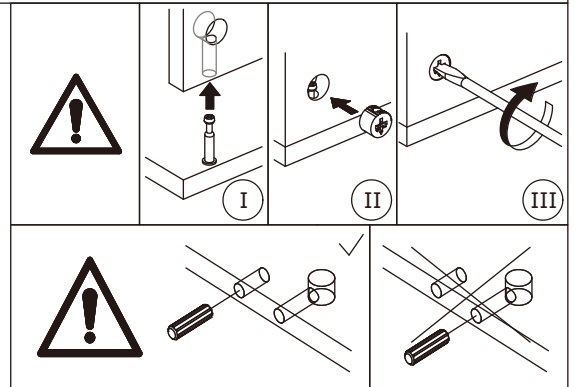


12



E x 37



 
Ø2.5X10mm

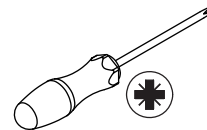

  
Flip the cabinet to the back
Fix back board 15, 16, 17 and 18 to cabinet
with screw(E) as shown.

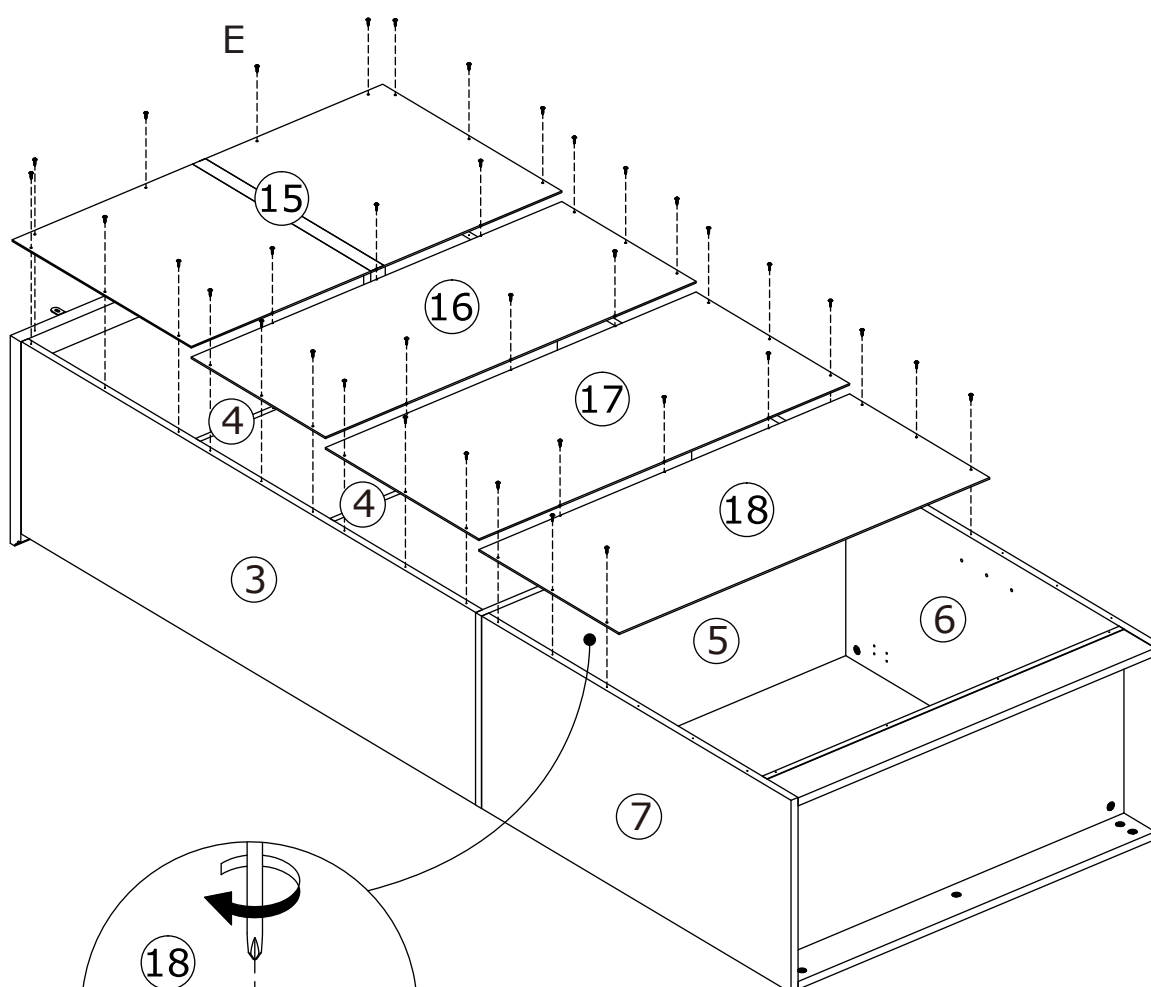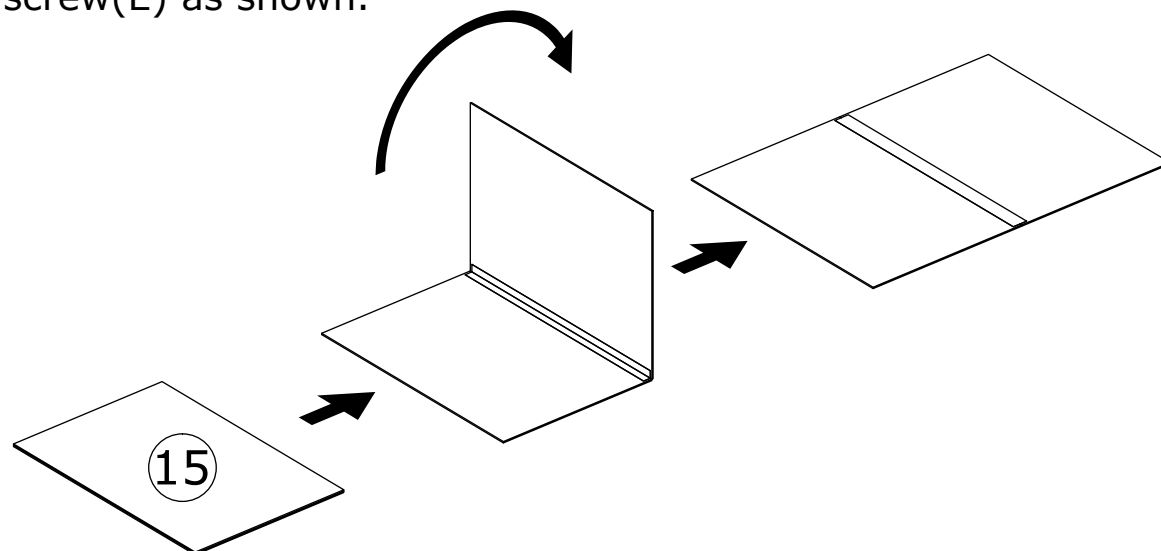

13

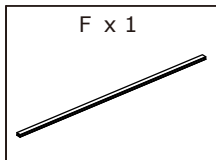 

 Insert backboard strip(F) at first,
then insert back board 18 as shown.

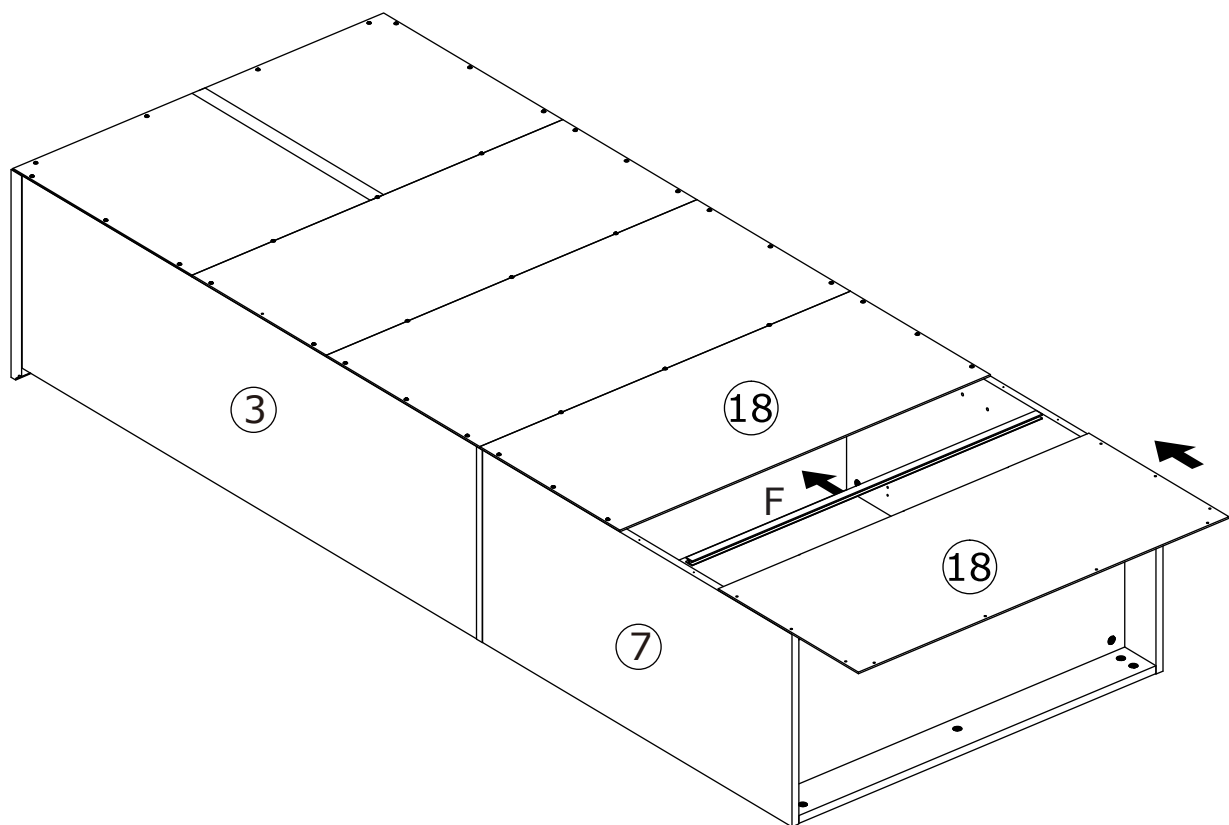


14

 
E x 10



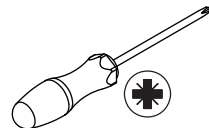




Ø2.5X10mm

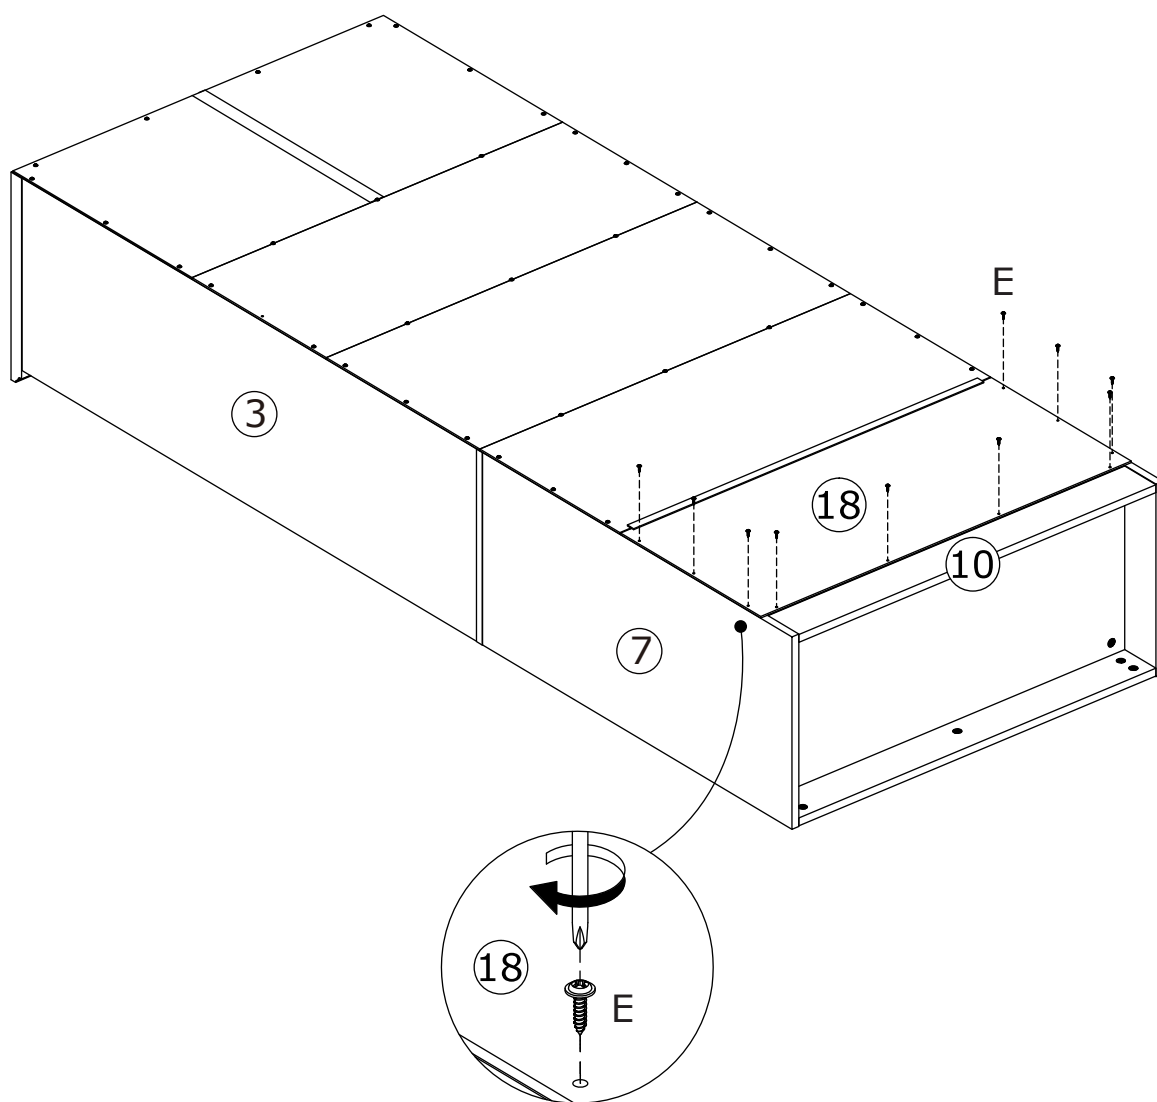 


Fix back board 18 with
screw(E) as shown.



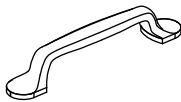


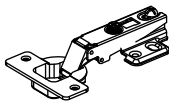
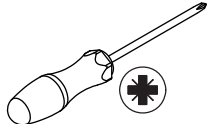
15

<p>G x 2</p> 	<p>H x 4</p>  <p>M4x18mm</p>	<p>J x 12</p>  <p>Ø4x14mm</p>	<p>K x 6</p> 	
--	---	--	---	---

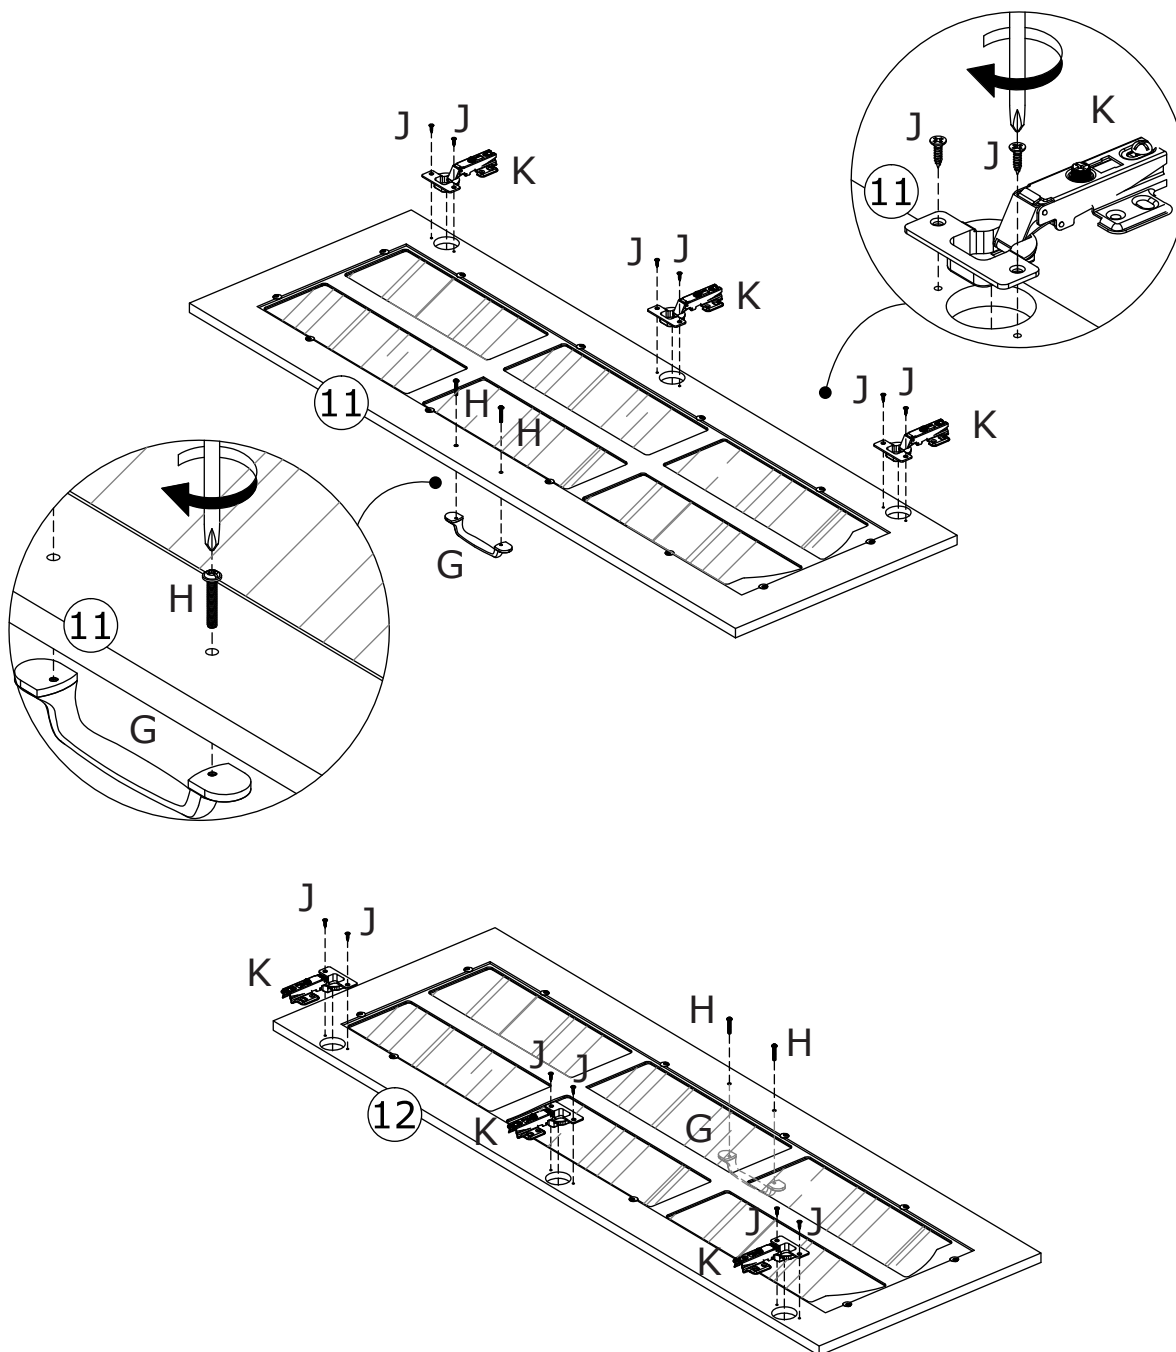 
Fix hinge(K) to board 11 and 12 with screw(J) as shown.
Fix handle(G) to board 11 and 12 with screw(H) as shown.

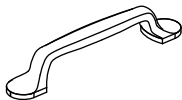


16

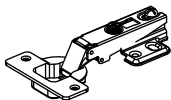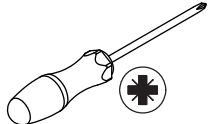
<p>G x 2</p> 	<p>H x 4</p>  <p>M4x18mm</p>	<p>J x 8</p>  <p>Ø4x14mm</p>	<p>K x 4</p> 	
--	---	---	---	---

 Fix hinge(K) to board 13 and 14 with screw(J) as shown.
Fix handle(G) to board 13 and 14 with screw(H) as shown.


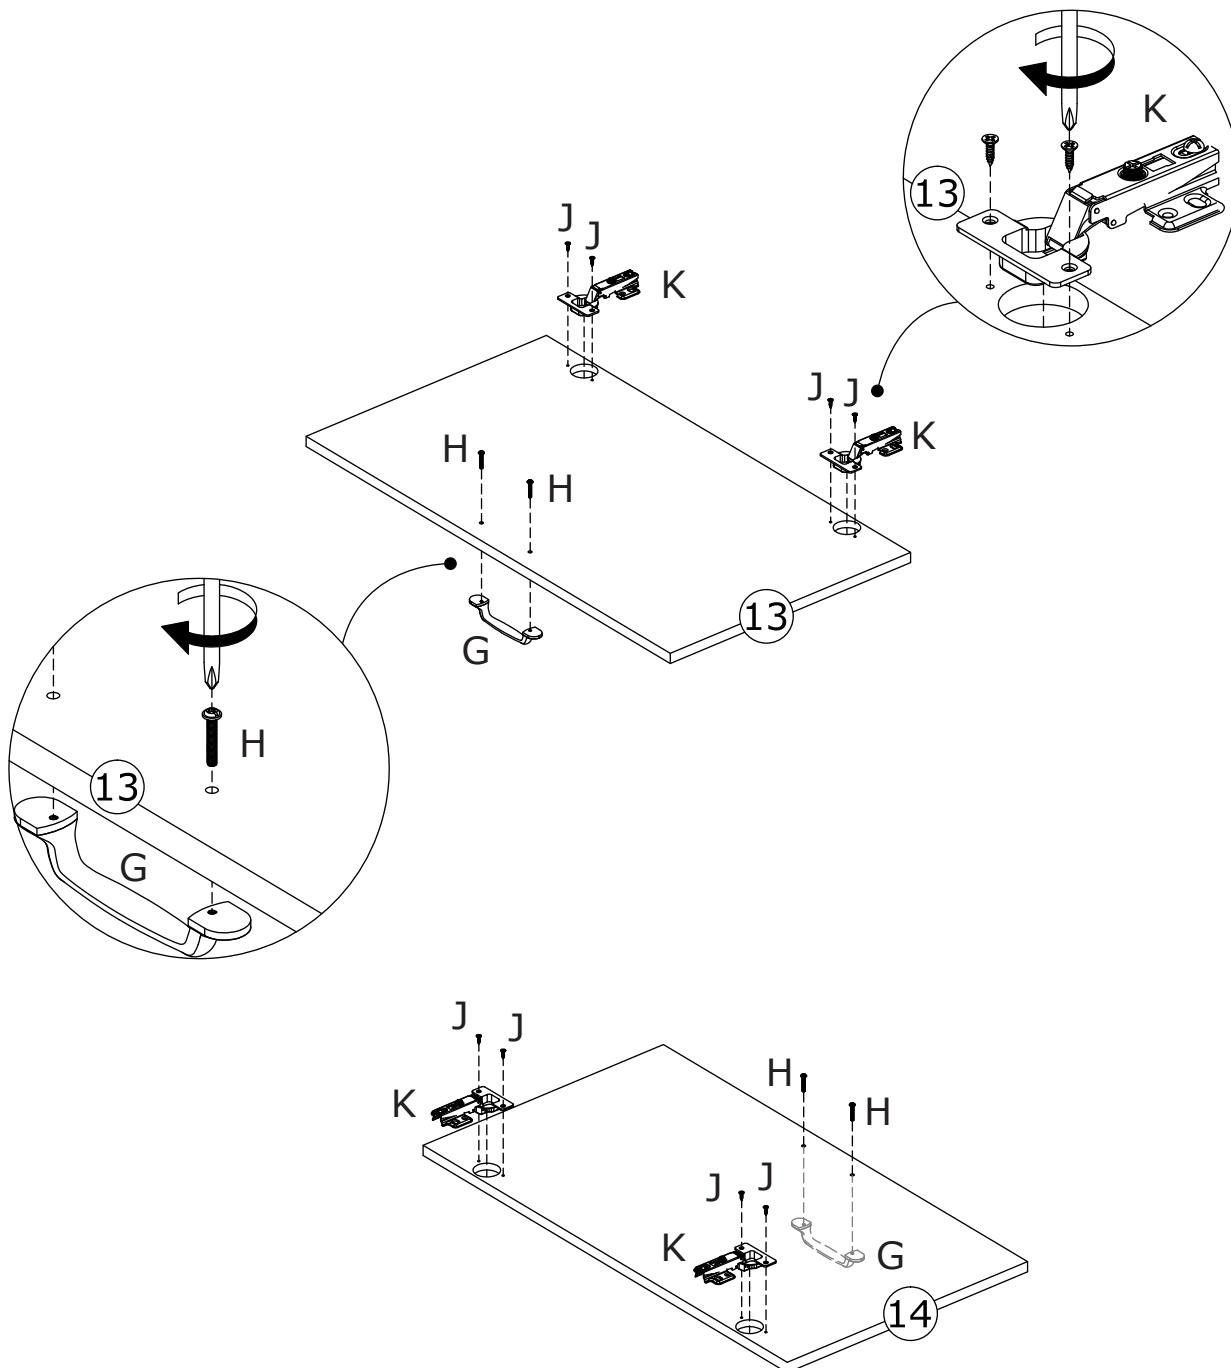


17

 J x 24

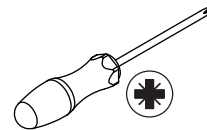 Ø4x14mm

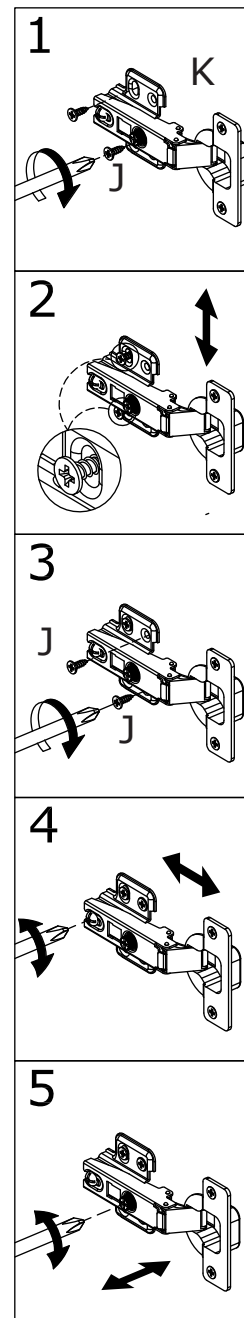 
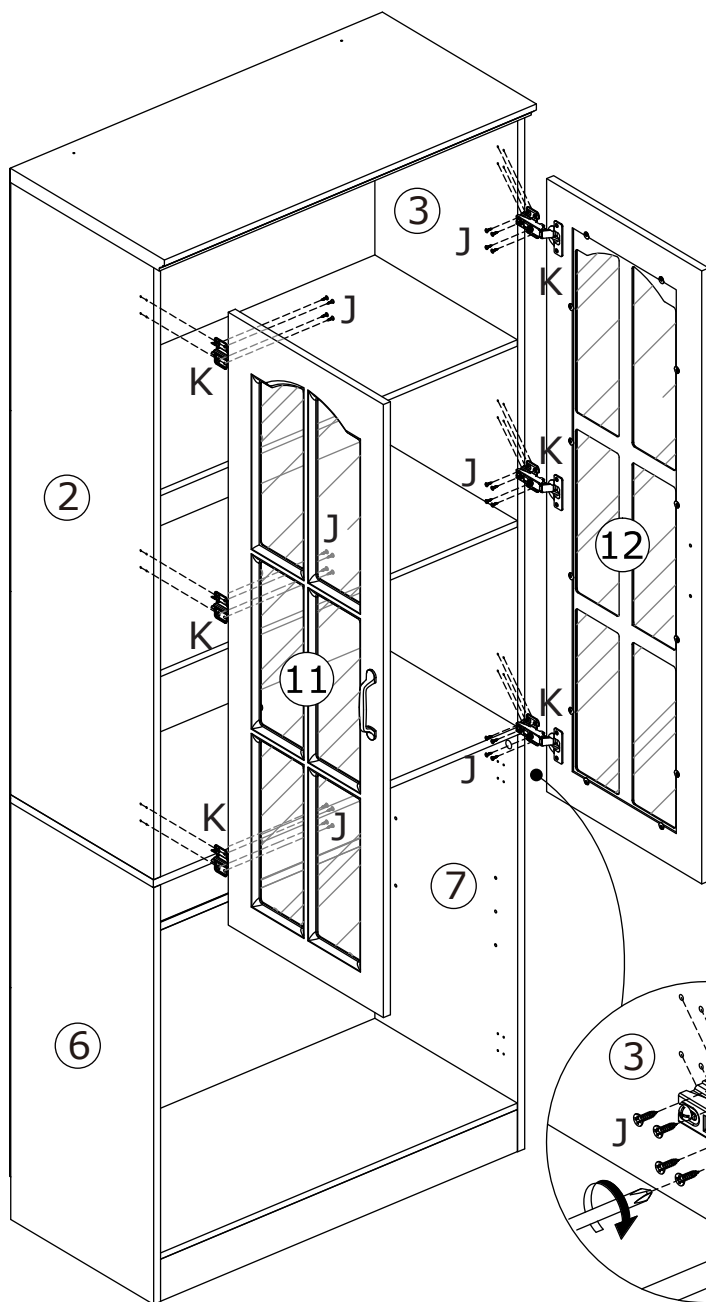 


Assemble door 11 and 12 to unpper cabinet by fixing hinge with screw(J) as shown.




18

  L x 4

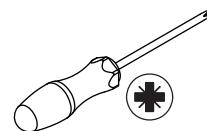

 Insert layer pin(L) into board 6 and 7,
then place shelf board 8 in as shown.

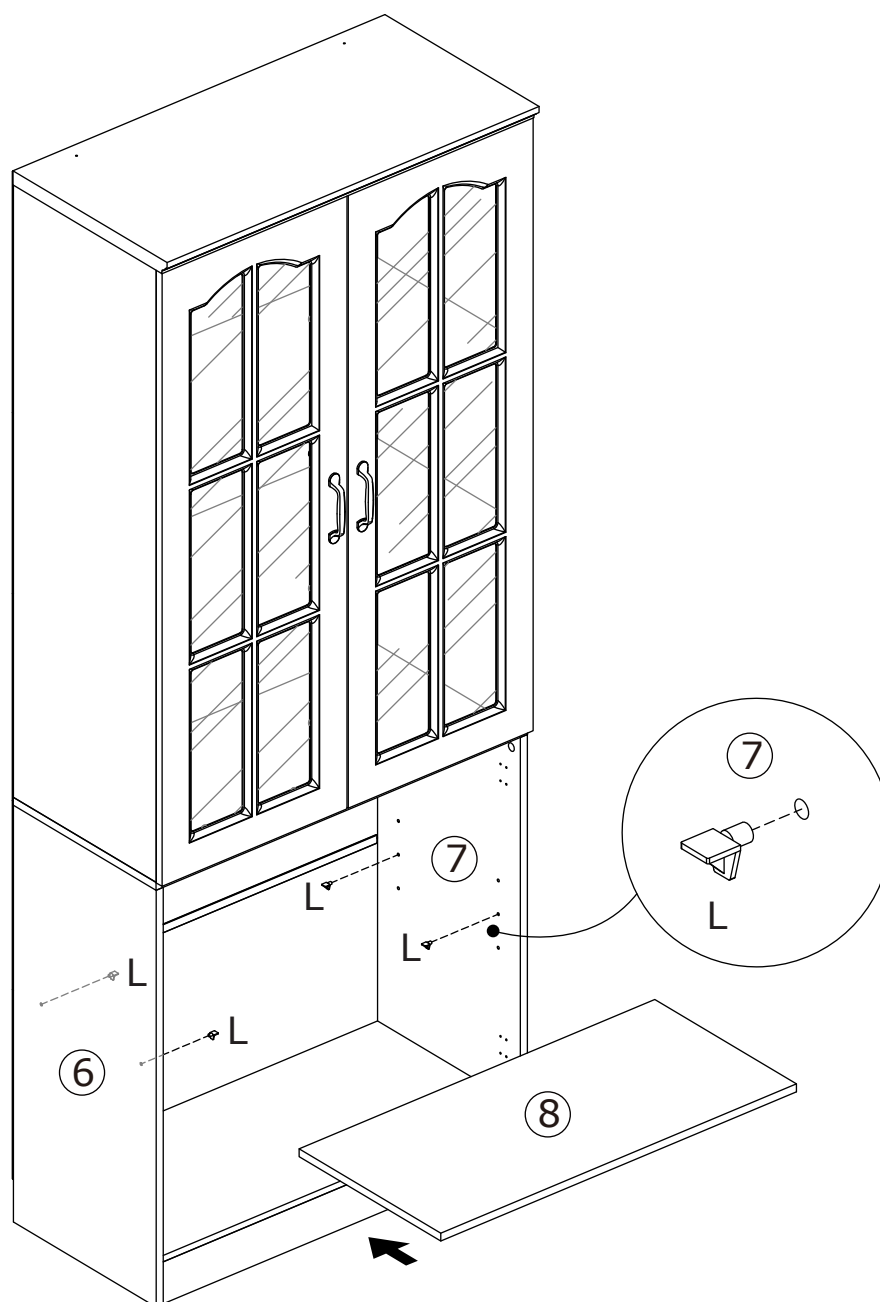


19



J x 16



 Ø4x14mm

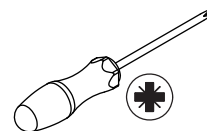

  Assemble door 13 and 14 to lower cabinet by fixing hinge with screw(J) as shown.

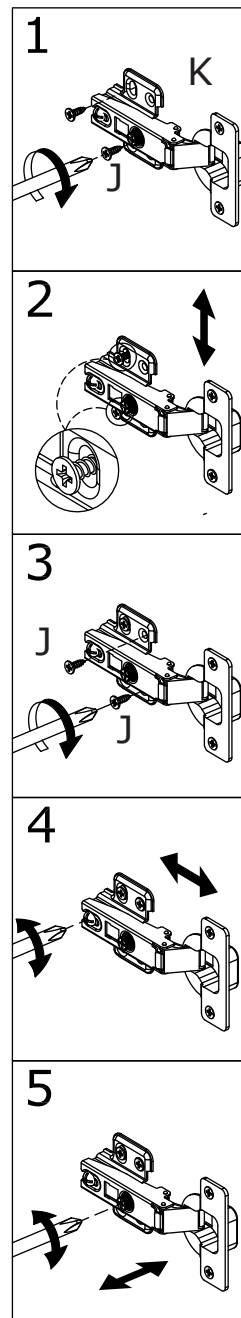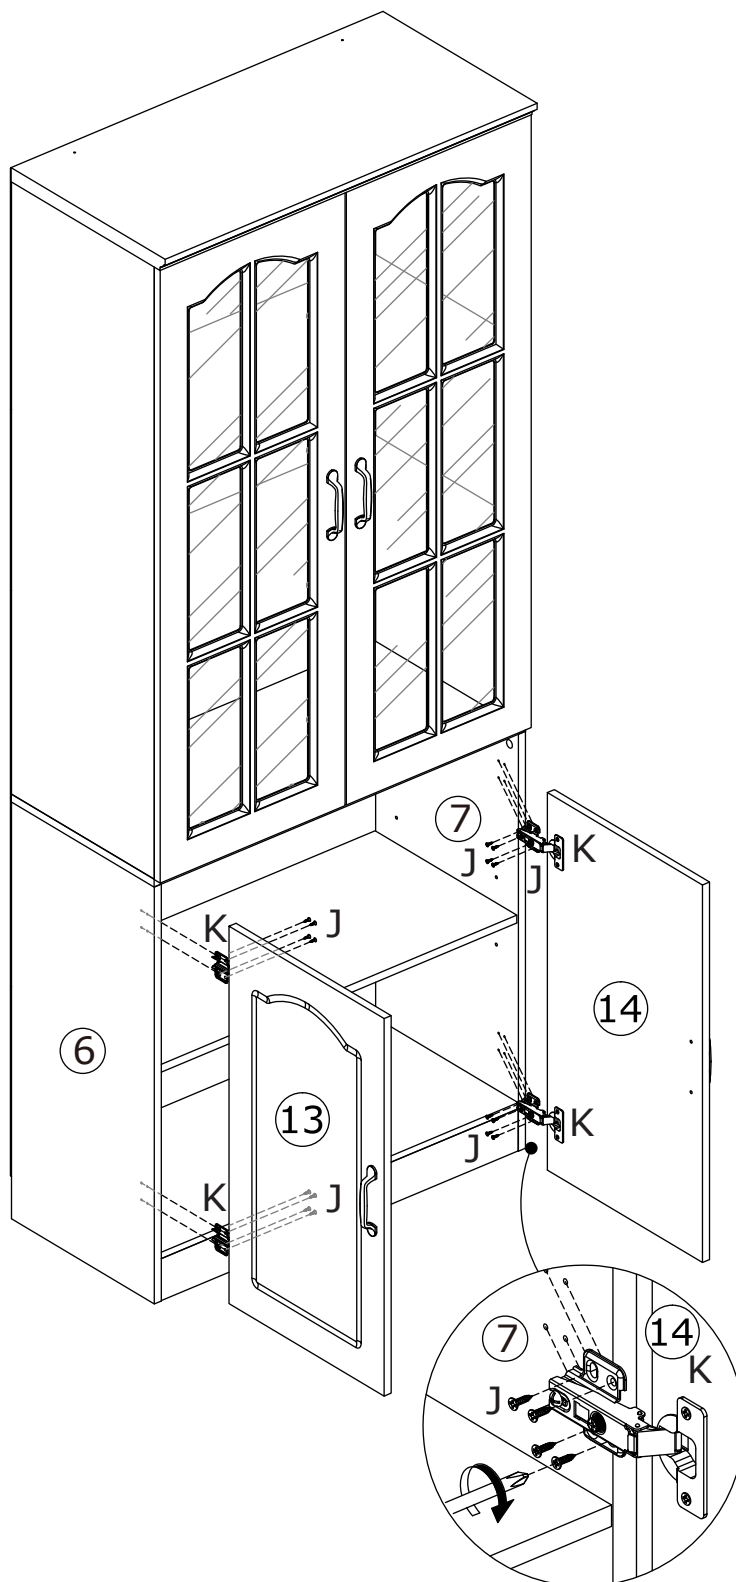



20

M x 2




Ø4x14mm


 
 
N x 2

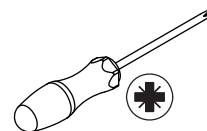

 
Fix part(N) to board 1 with screw(M) as shown.

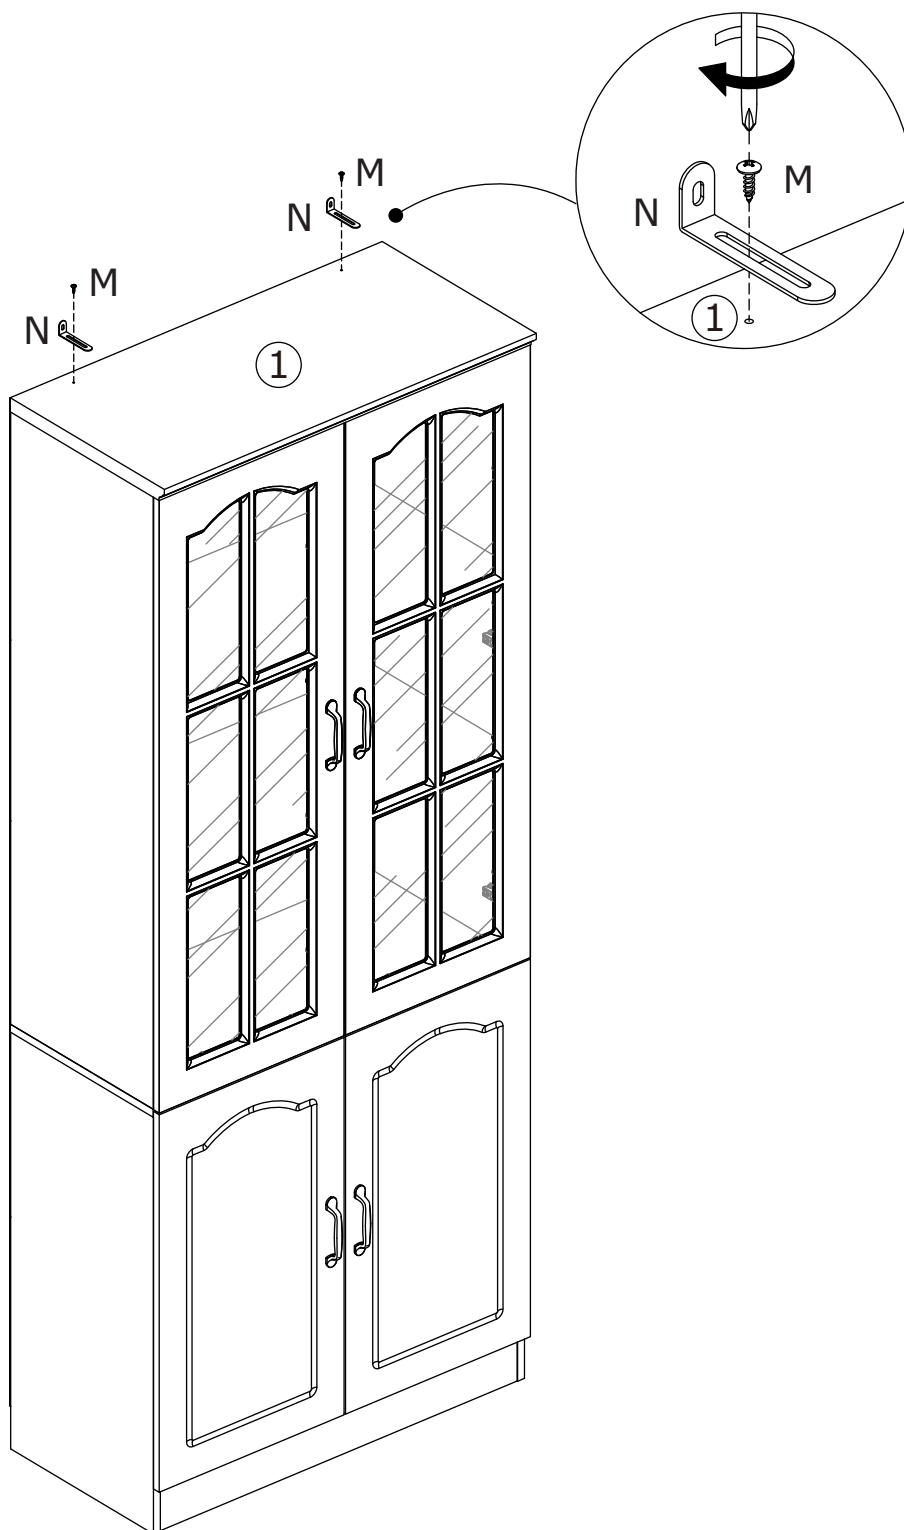

21









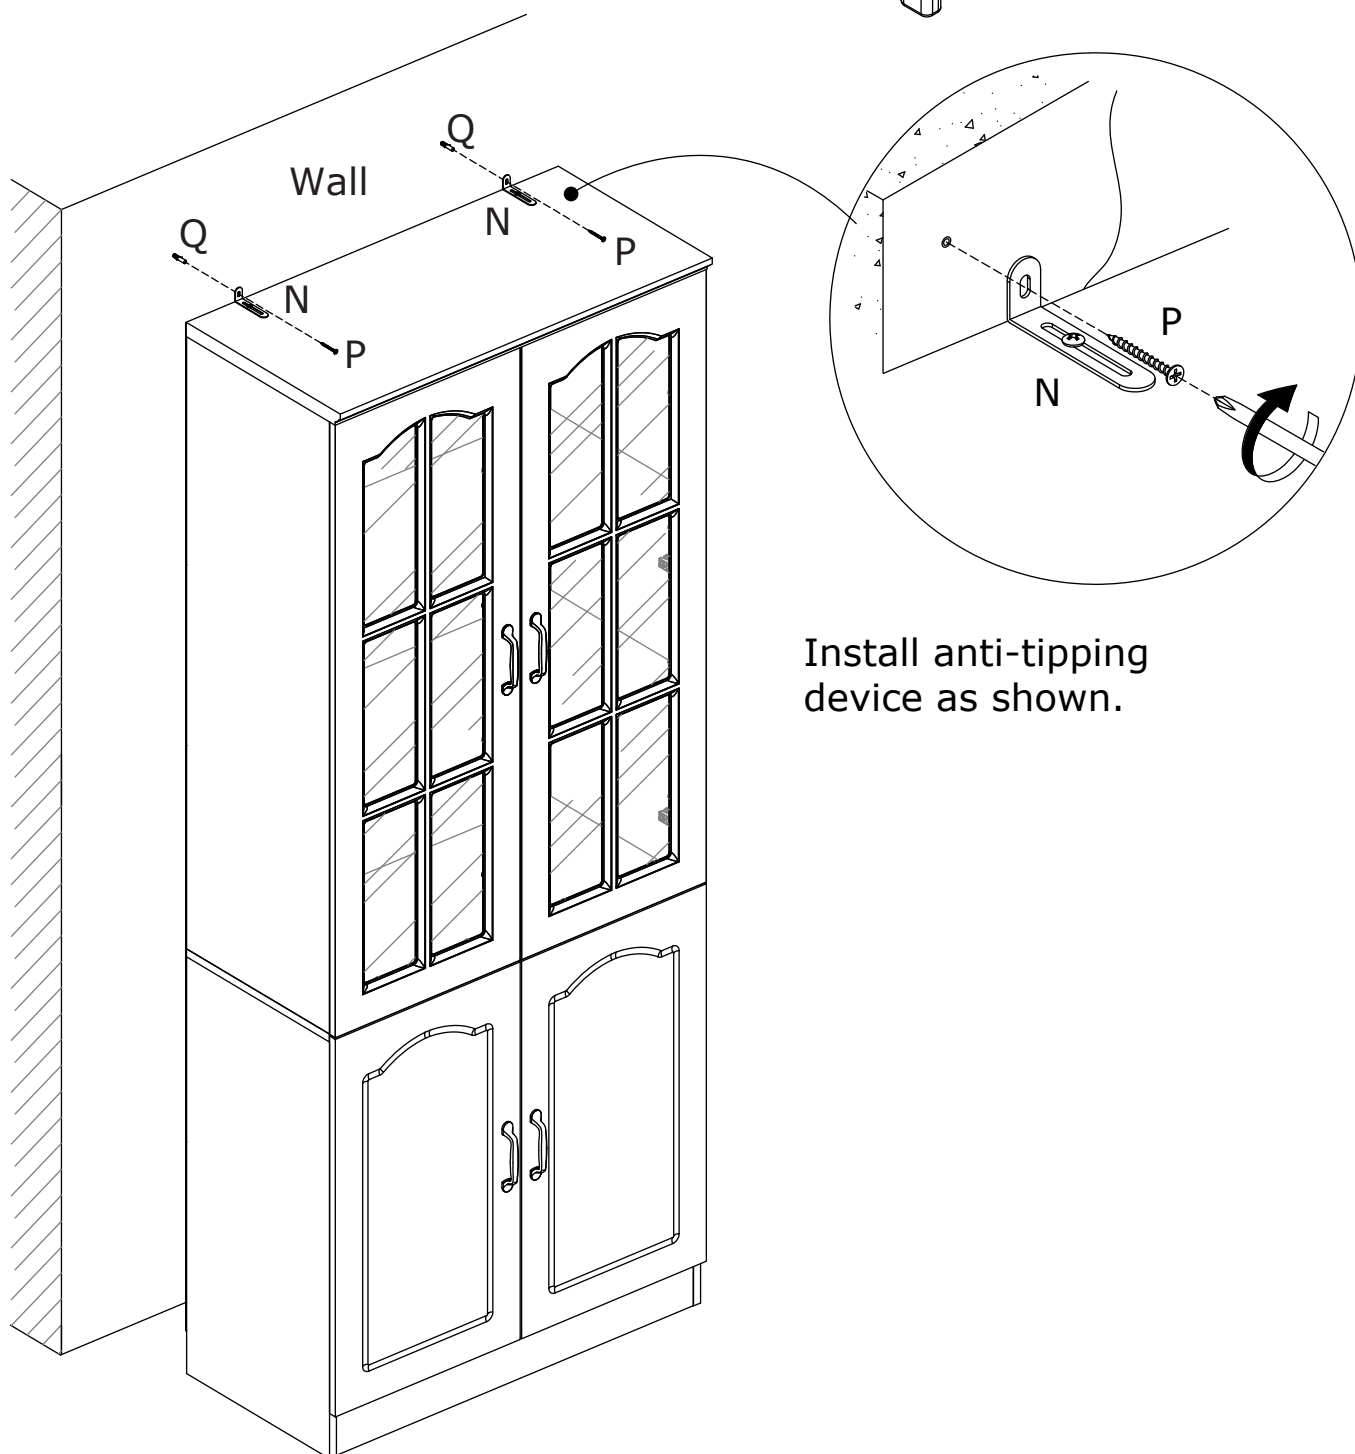 
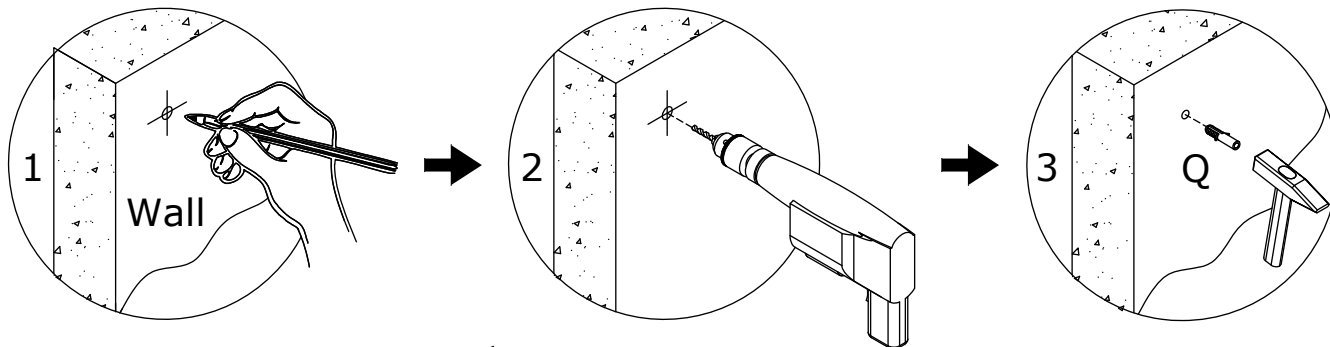 
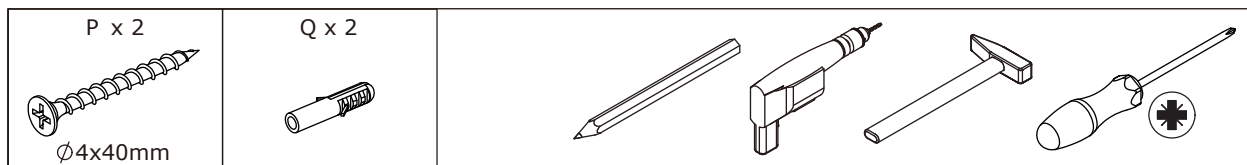 


Install anti-tipping device as shown.

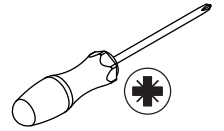 

More detailed hinge adjustment mode:

           - 1) Rotate out the screws connected with the cabinet counterclockwise, adjust the gap between the overall door frame and the upper and lower, and then rotate the screws clockwise after adjusting;
- 2) Rotate the screws at the end of the hinge counterclockwise to adjust the gap between the whole door frame and the cabinet before and after the adjustment, and then rotate the screws clockwise (rotate out to the movable door frame, do not need to over-rotate out);
- 3) Counterclockwise rotation of the screws in the middle of the hinge will offset the corresponding part of the rear door frame to the left, and clockwise rotation of the screws in the middle of the hinge will offset the corresponding part of the rear door frame to the right

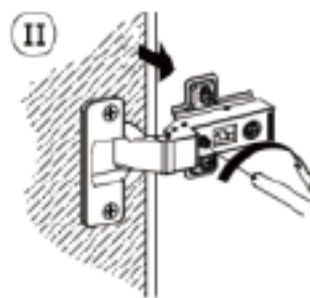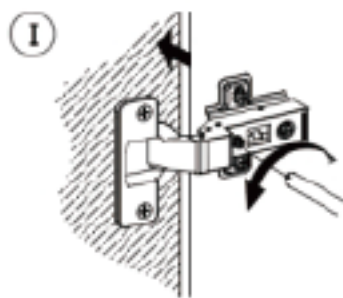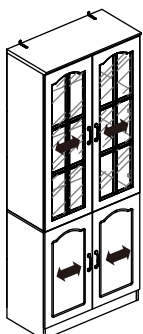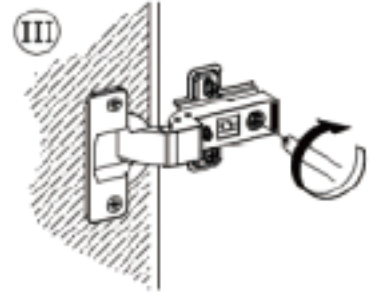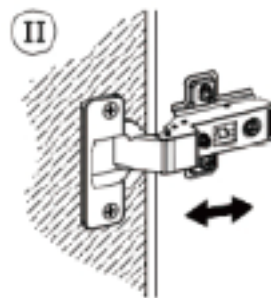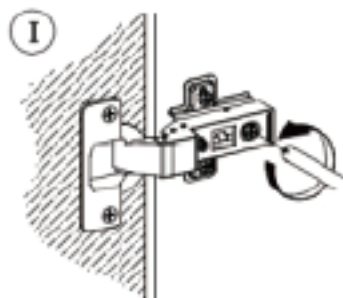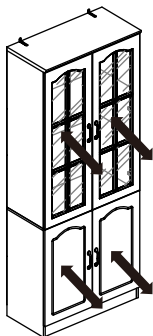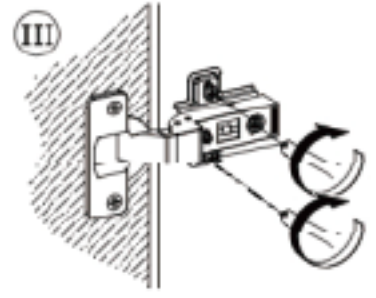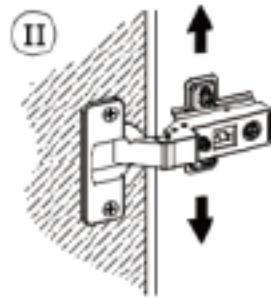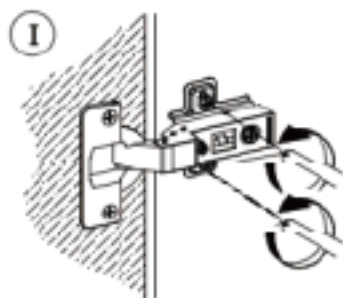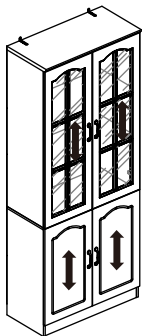

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

 
 
DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.


DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

Display Cabinet

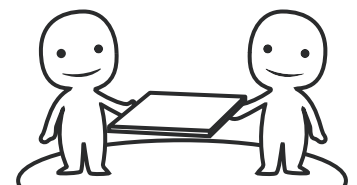
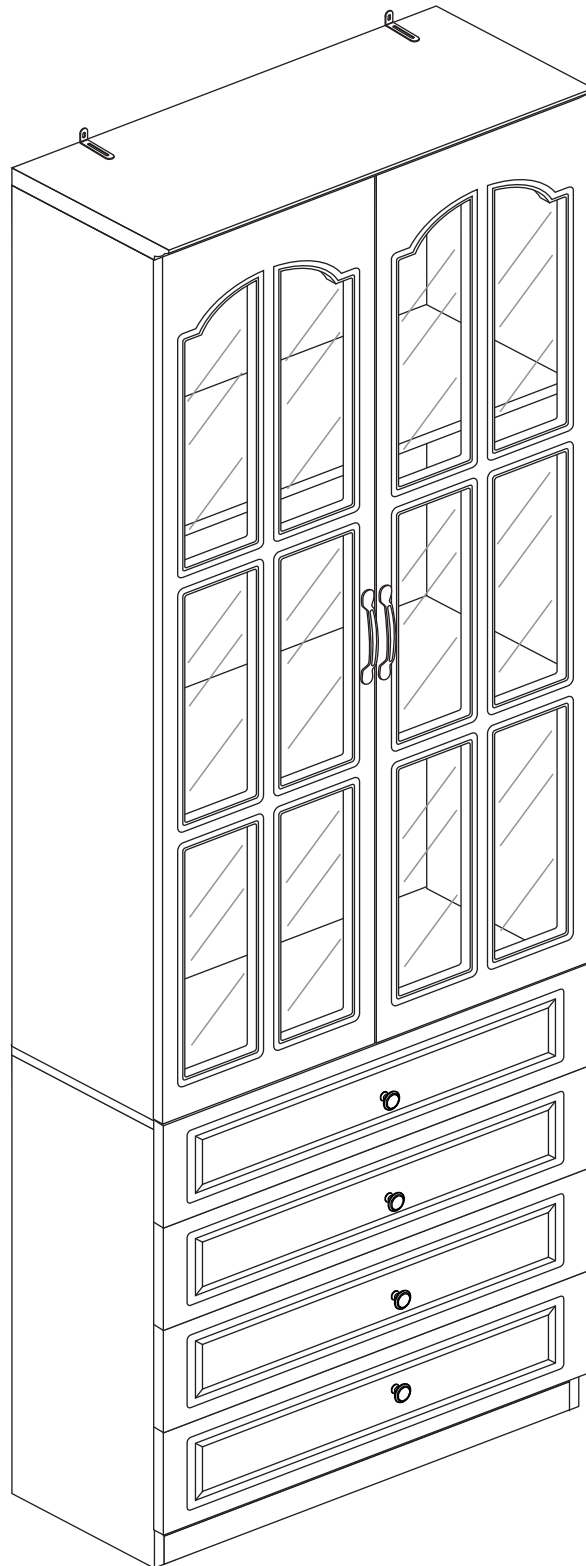


ASSEMBLED BY 2 ADULTS

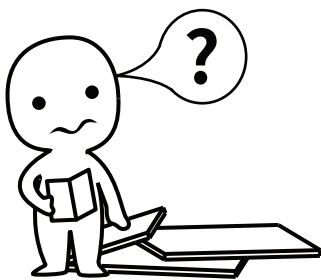 


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

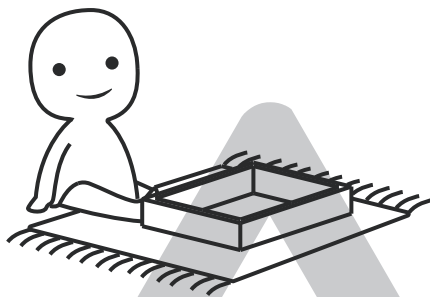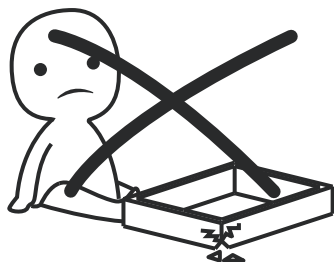



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

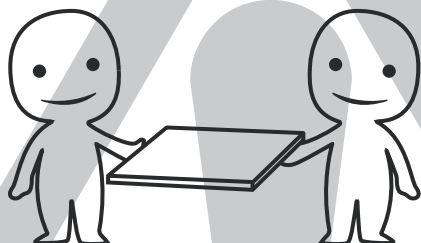

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

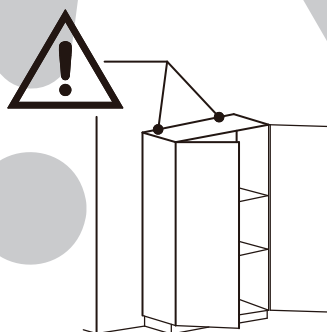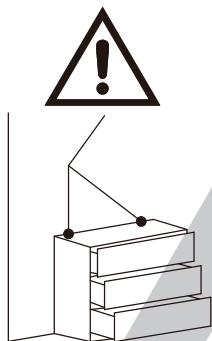

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !







It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

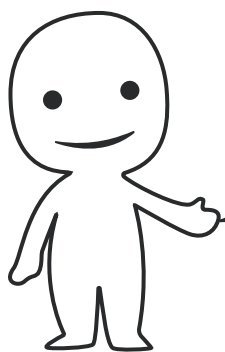


Please prepare the following tools

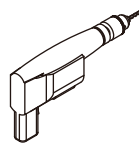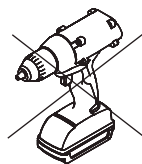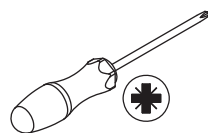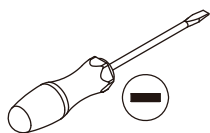      

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

<p>Ax52</p> <p>Ø 6x35mm</p>	<p>Bx52</p>	<p>Cx24</p> <p>Ø 8x30mm</p>	<p>Dx48</p> <p>Ø 3x12mm</p>	<p>Ex6</p>
<p>Fx36</p> <p>Ø 4x14mm</p>	<p>Gx20</p> <p>Ø 4x30mm</p>	<p>Hx6</p> <p>Ø 4x40mm</p>	<p>Jx4</p> <p>Ø 4x18mm</p>	<p>Kx4</p>
<p>Lx4</p> <p>Ø 4x20mm</p>	<p>Mx2</p>	<p>Nx2</p> <p>Ø 4x40mm</p>	<p>Px47</p> <p>Ø 2.5x10mm</p>	<p>Qx2</p> <p>Ø 4x14mm</p>
<p>R x 2</p>	<p>CL x 4</p> <p>350mm</p>	<p>CR x 4</p> <p>350mm</p>	<p>DL x 4</p> <p>350mm</p>	<p>DR x 4</p> <p>350mm</p>

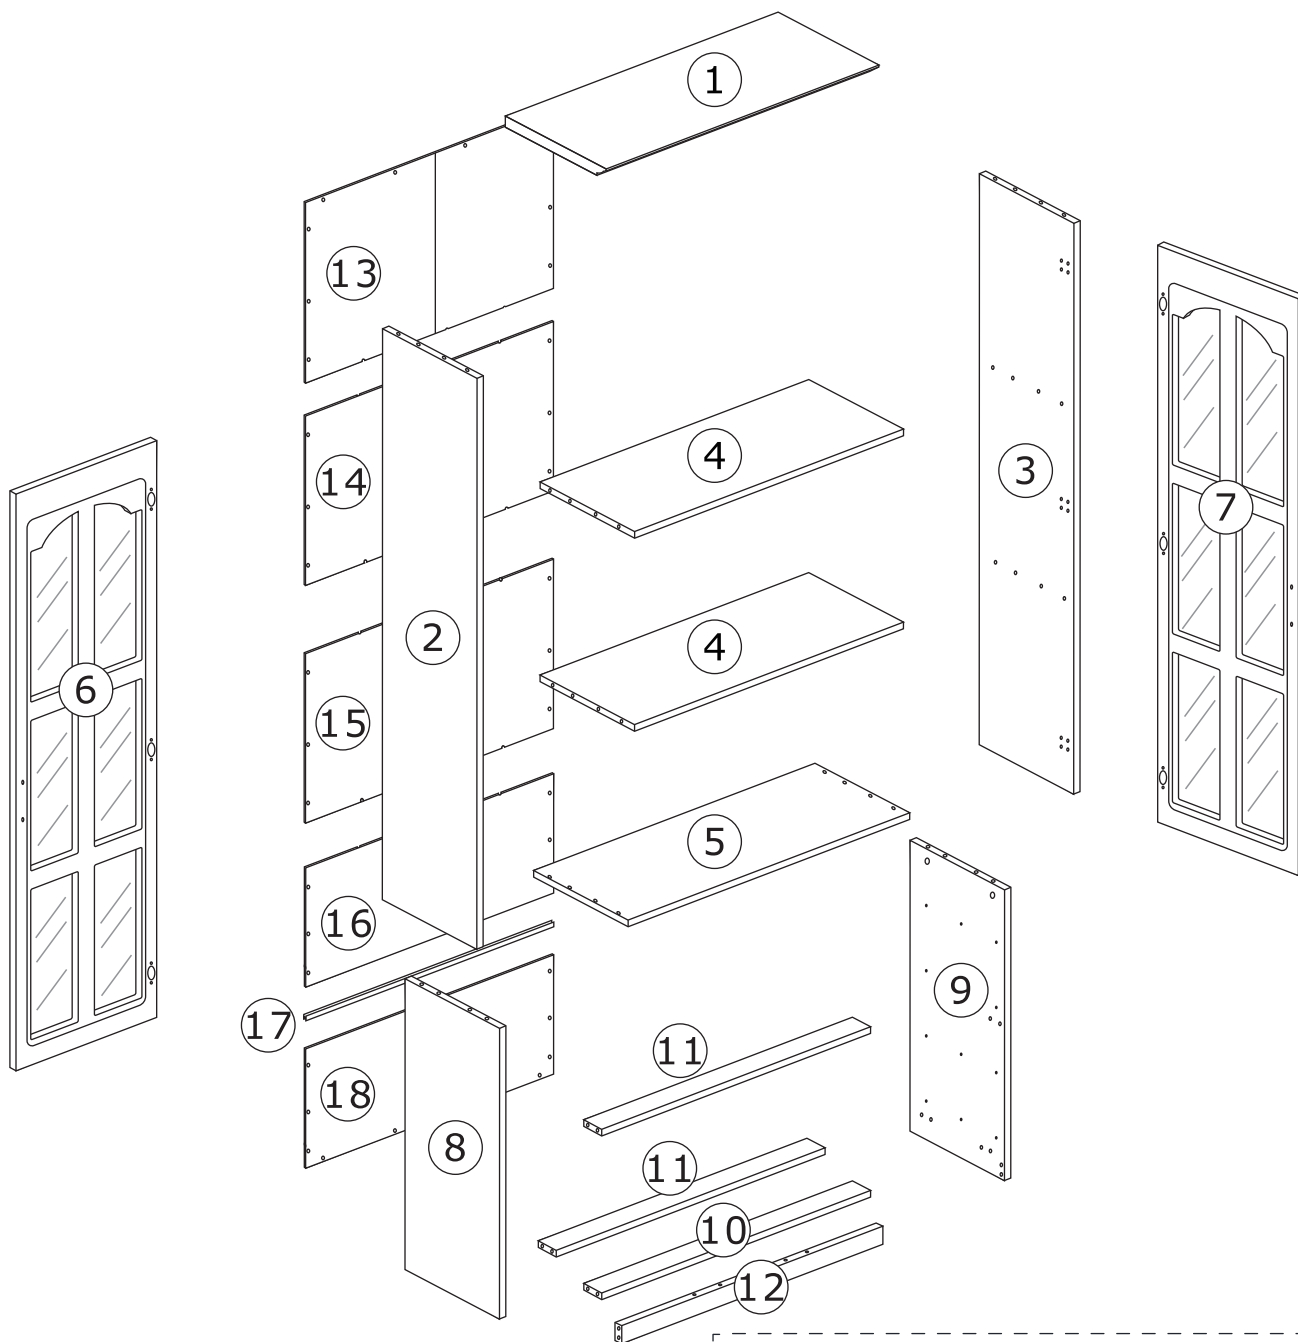 


⚠ WARNING




Children have died from furniture tipover. To reduce the risk of furniture tipover:




- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

     *This is a permanent label.
Do not remove!*

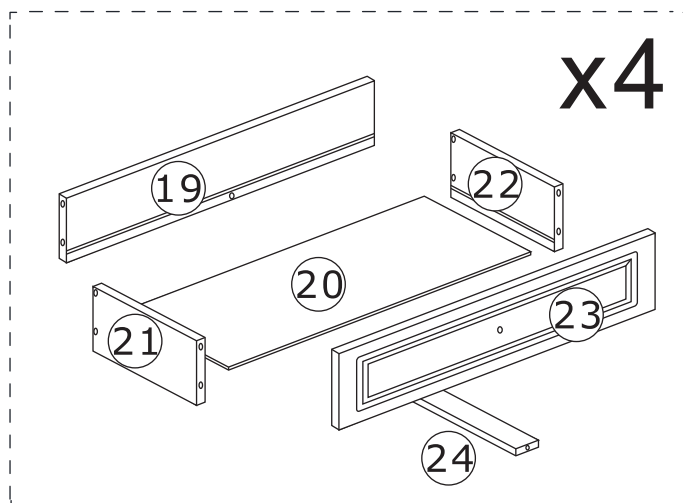

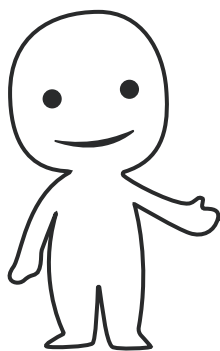


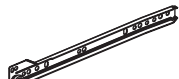

Please prepare the following tools

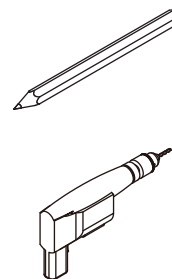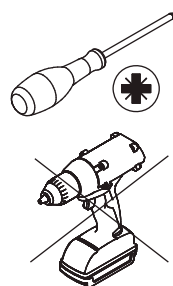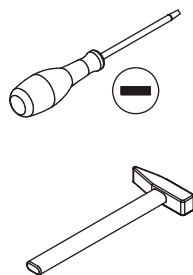


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size


① x 1 	② x 1 	③ x 1 	④ x 2 	⑤ x 1
⑥ x 1 	⑦ x 1 	⑧ x 1 	⑨ x 1 	⑩ x 1
⑪ x 2 	⑫ x 1 	⑬ x 1 	⑭ x 1 	⑮ x 1
⑯ x 1 	⑰ x 1 	⑱ x 1 	⑲ x 4 	⑳ x 4
㉑ x 4 	㉒ x 4 	㉓ x 4 	㉔ x 4 	

1


D x 24  Ø3x12mm	CL x 4  350mm	CR x 4  350mm
--	--	--

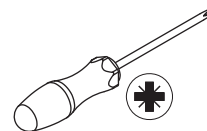 


 Fix slide rail(CL) and (CR) to board 8 and 9 respectively with screw(D) as shown.


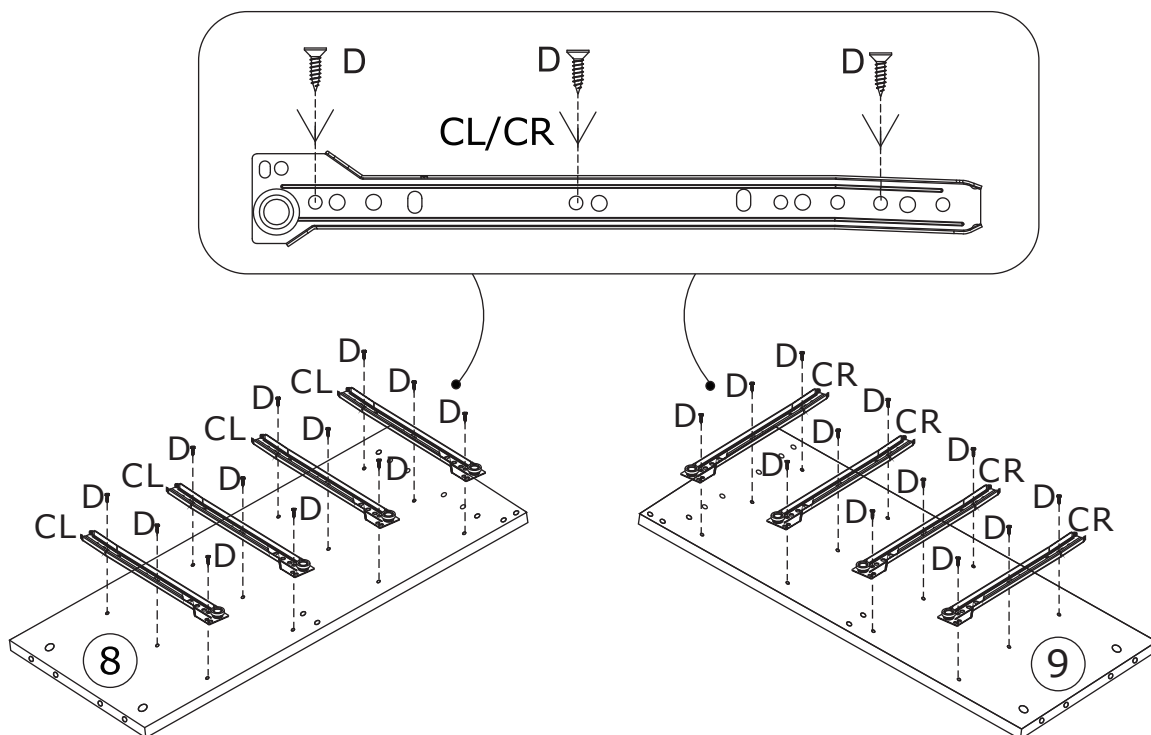


2

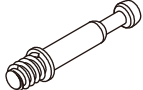A x 14  Ø6x35mm
--

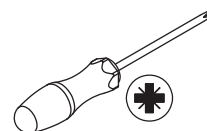 


  Screw eccentric rod(A) into board 8 and 9 with a screwdriver as shown.



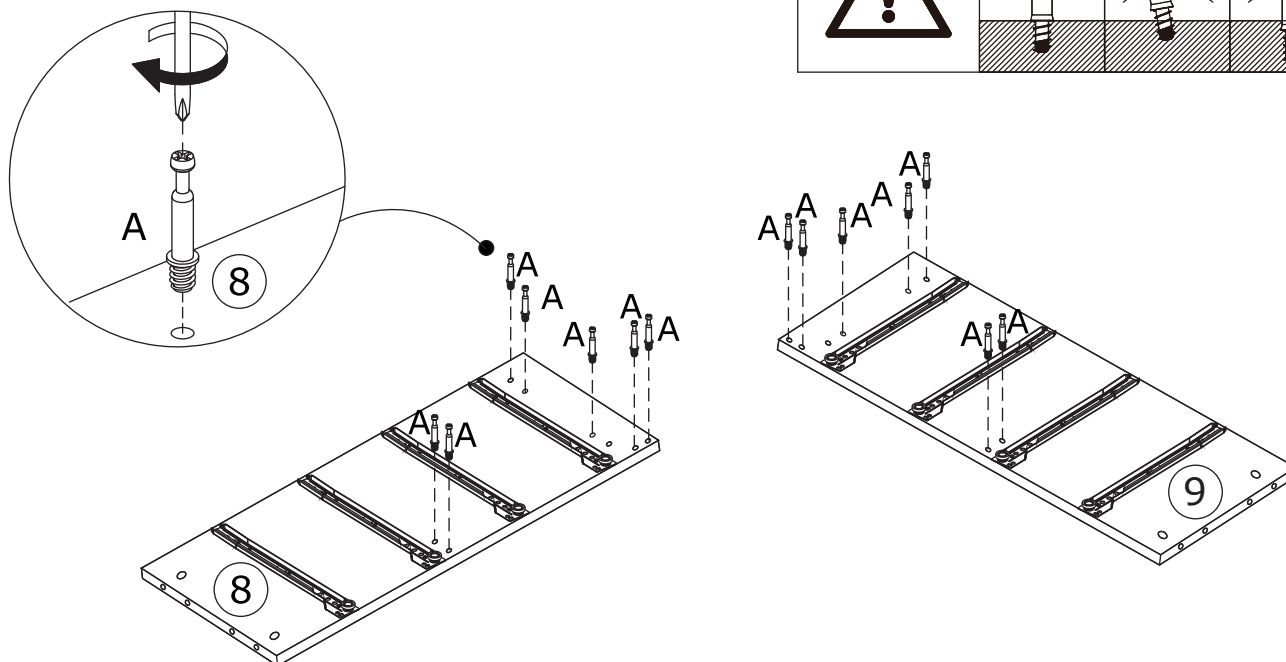
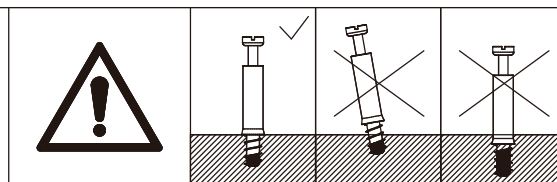


3

 A x 2

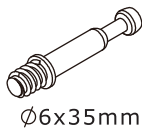

Ø6x35mm

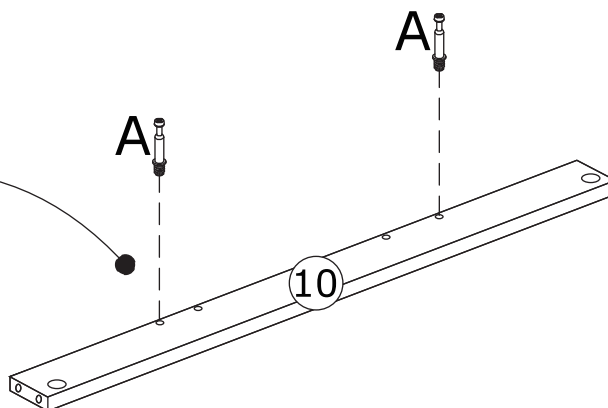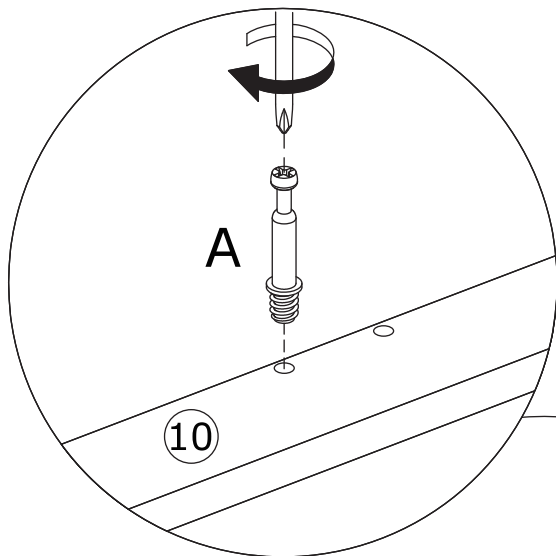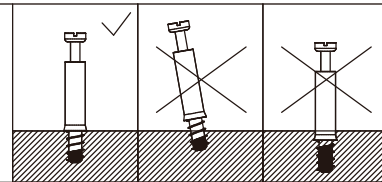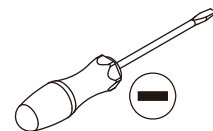    

Screw eccentric rod(A) into board 10 with a screwdriver as shown.

4

 
 
 
B x 2




C x 2



Ø8x30mm

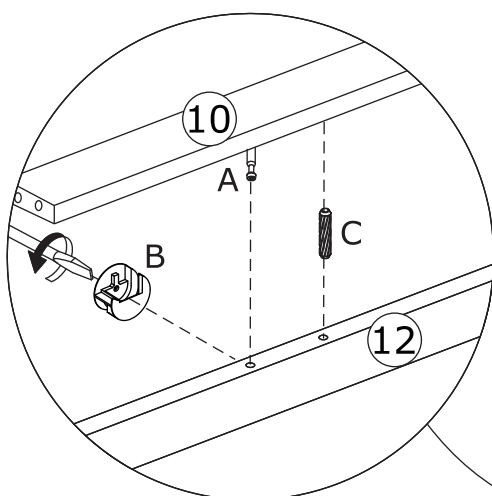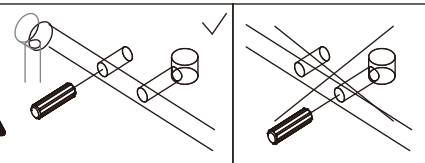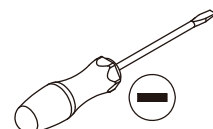

 Connect board 10 to board 12 with wooden dowel(C), add cam lock(B) into board 12 and turn clockwise to tighten as shown.

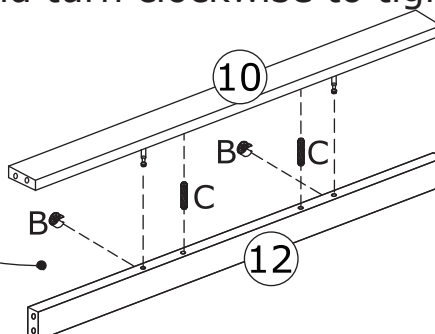

5

 
 
 
 
 
 
 
B x 14




C x 2



Ø8x30mm

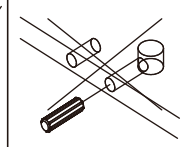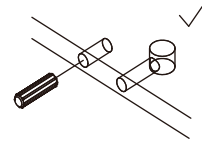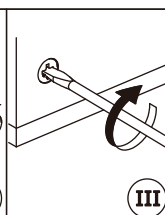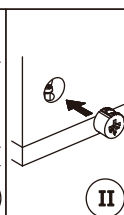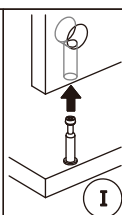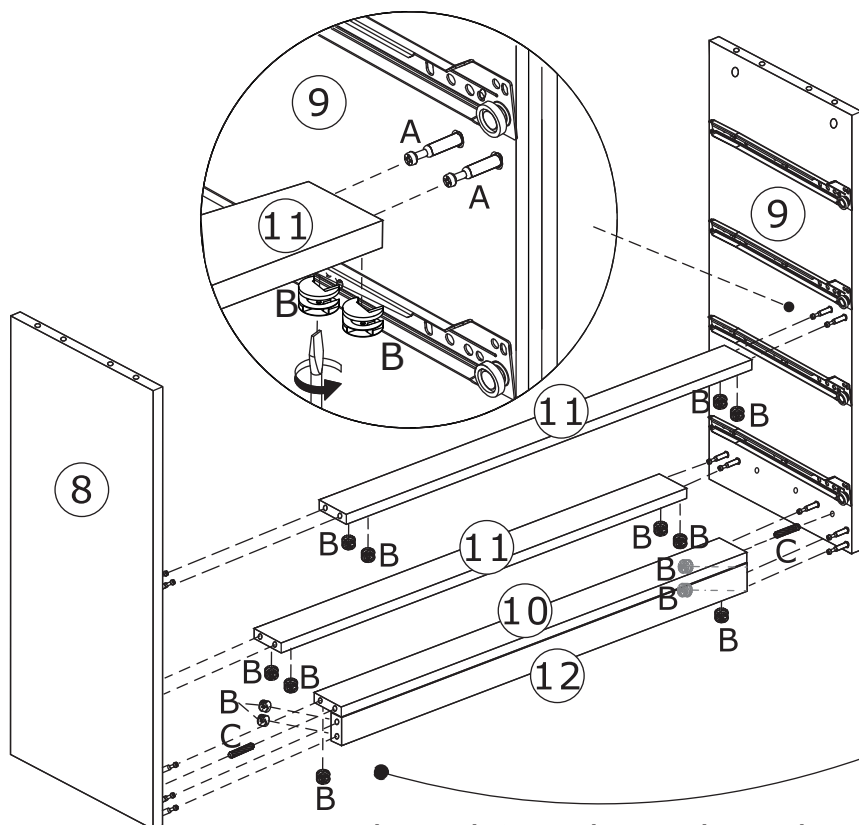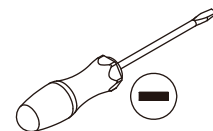

 
Insert wooden dowel(C) into board 10 at first.

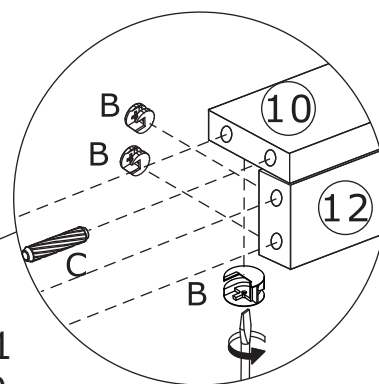








Connect board 8 and 9 to board 10, 11 and 12, add cam lock(B) into board 10, 11,12 and turn clockwise to tighten as shown.

6

 A x 8





Ø6x35mm

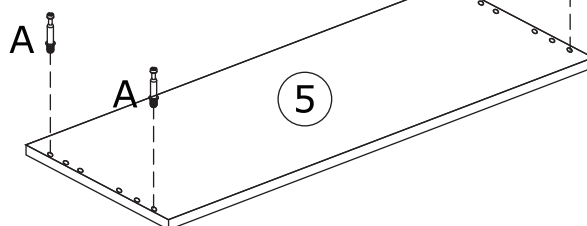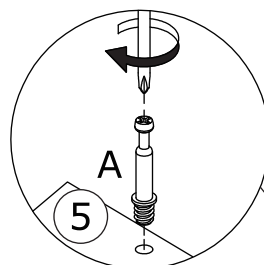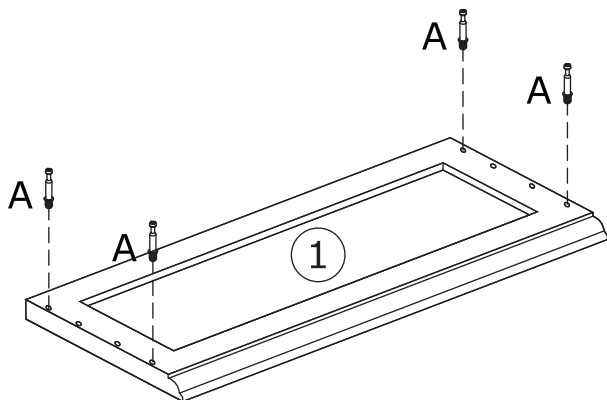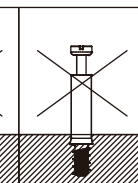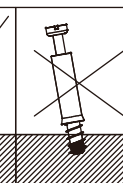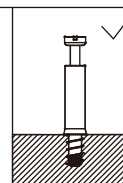      
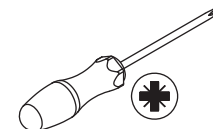 


Screw eccentric rod(A) into board 1 and 5 with a screwdriver as shown.

  7

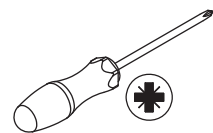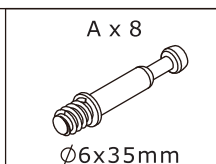

  Screw eccentric rod(A) into board 2 and 3 with a screwdriver as shown.

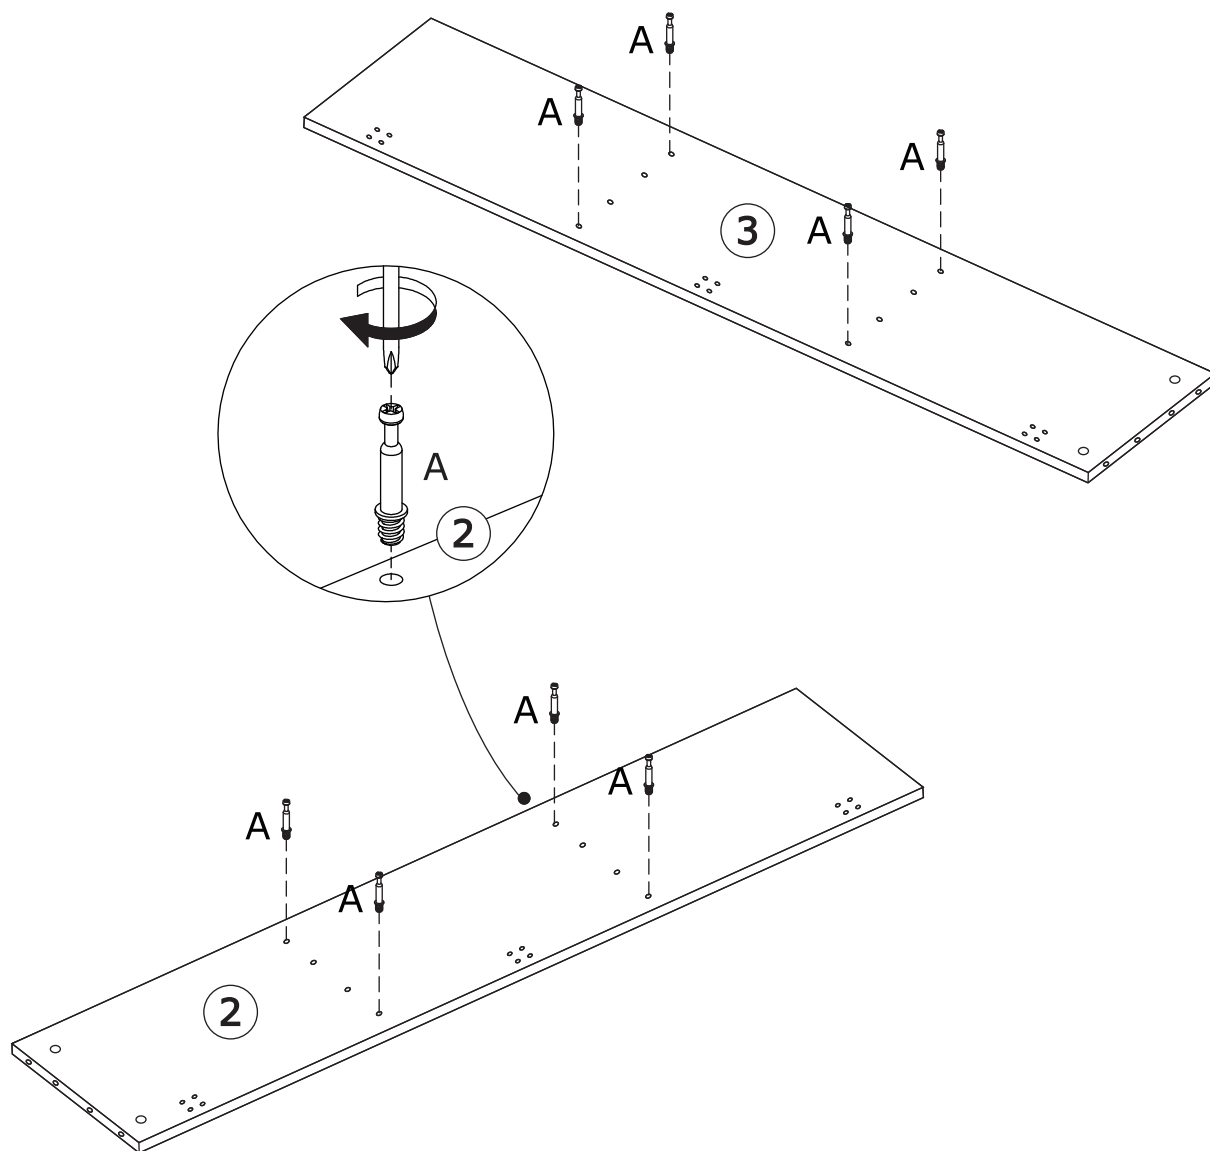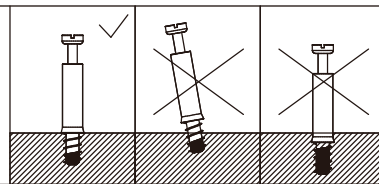


8


B x 8



 C x 8









Ø8x30mm

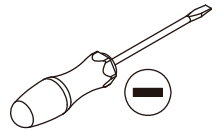 

Insert wooden dowel(C) into board 4 at first.

      Connect board 2 and 3 to board 4, add cam lock(B) into board 4 and turn clockwise to tighten as shown.

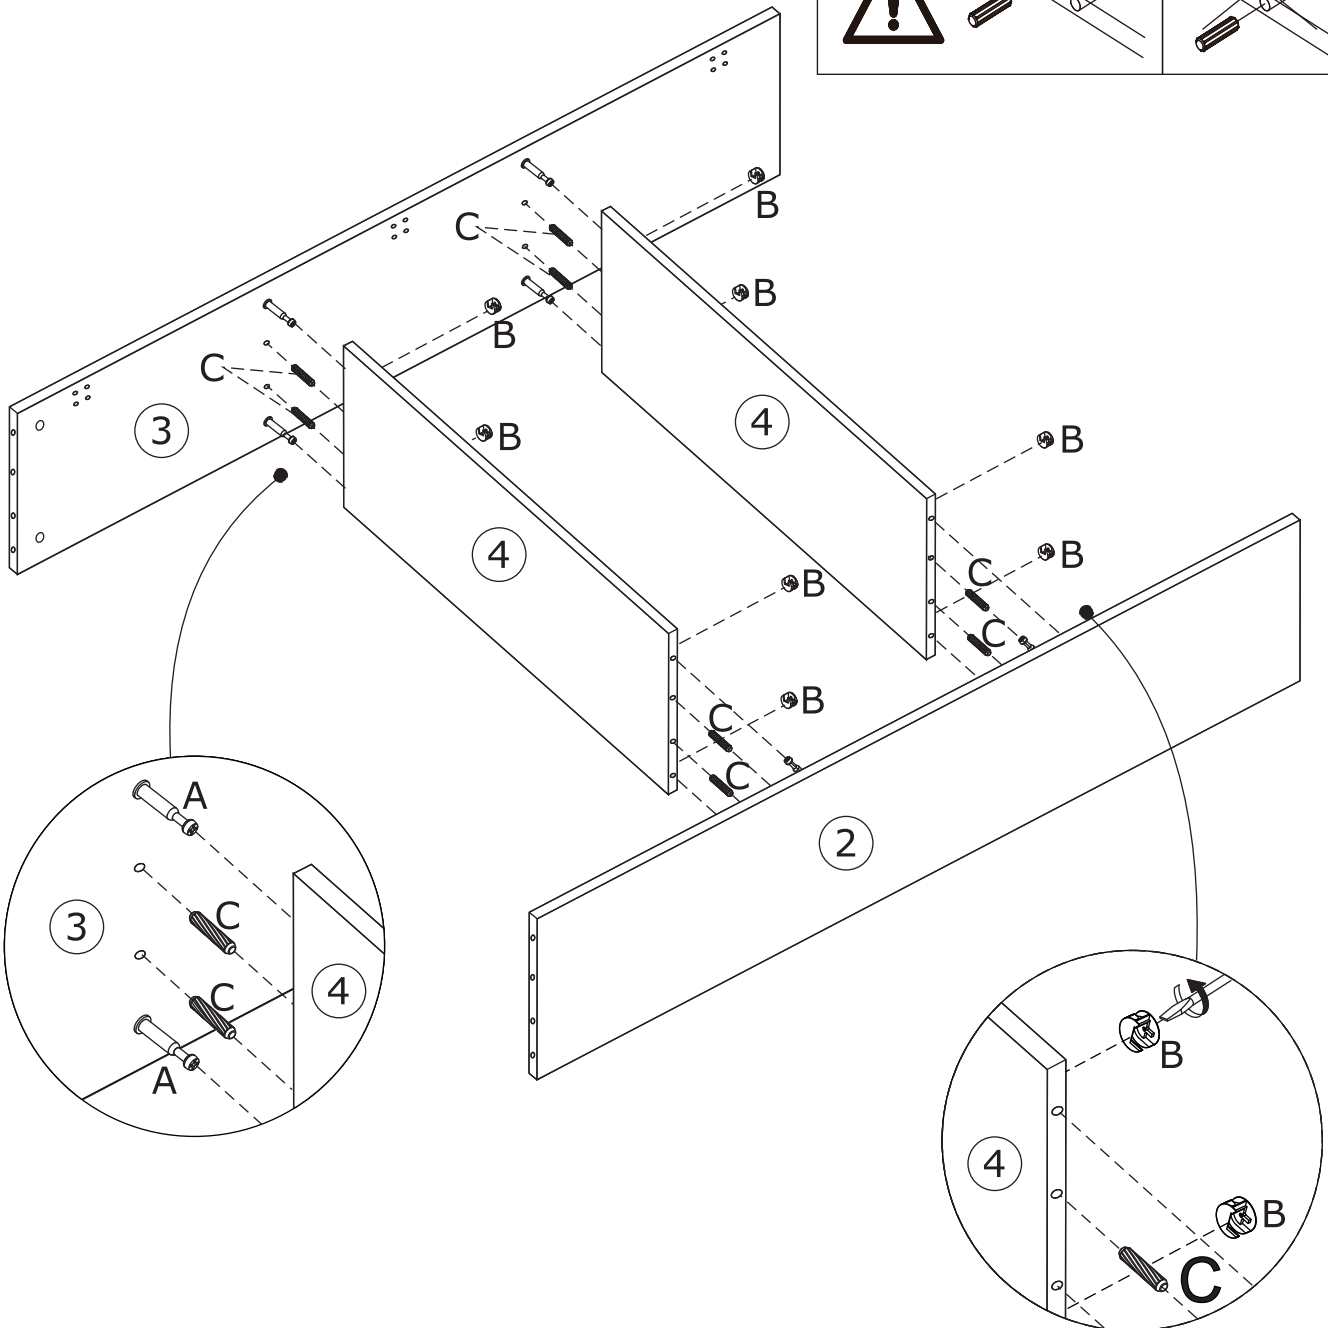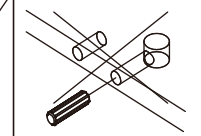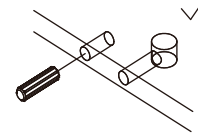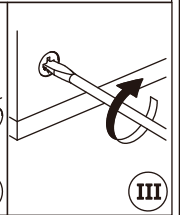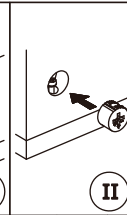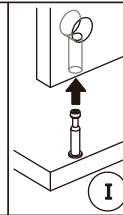

9

B x 4



C x 8

 
 


Ø8x30mm

H x 4









Ø4x40mm

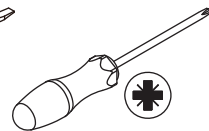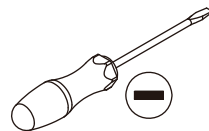

Insert wooden dowel(C) into board 2 and 3 at first.

Attach board 1 to board 2 and 3, add cam lock(B) into board 2,3 and turn clockwise to tighten as shown.

      Attach board 5 to board 2 and 3, and fix with screw(H) as shown.

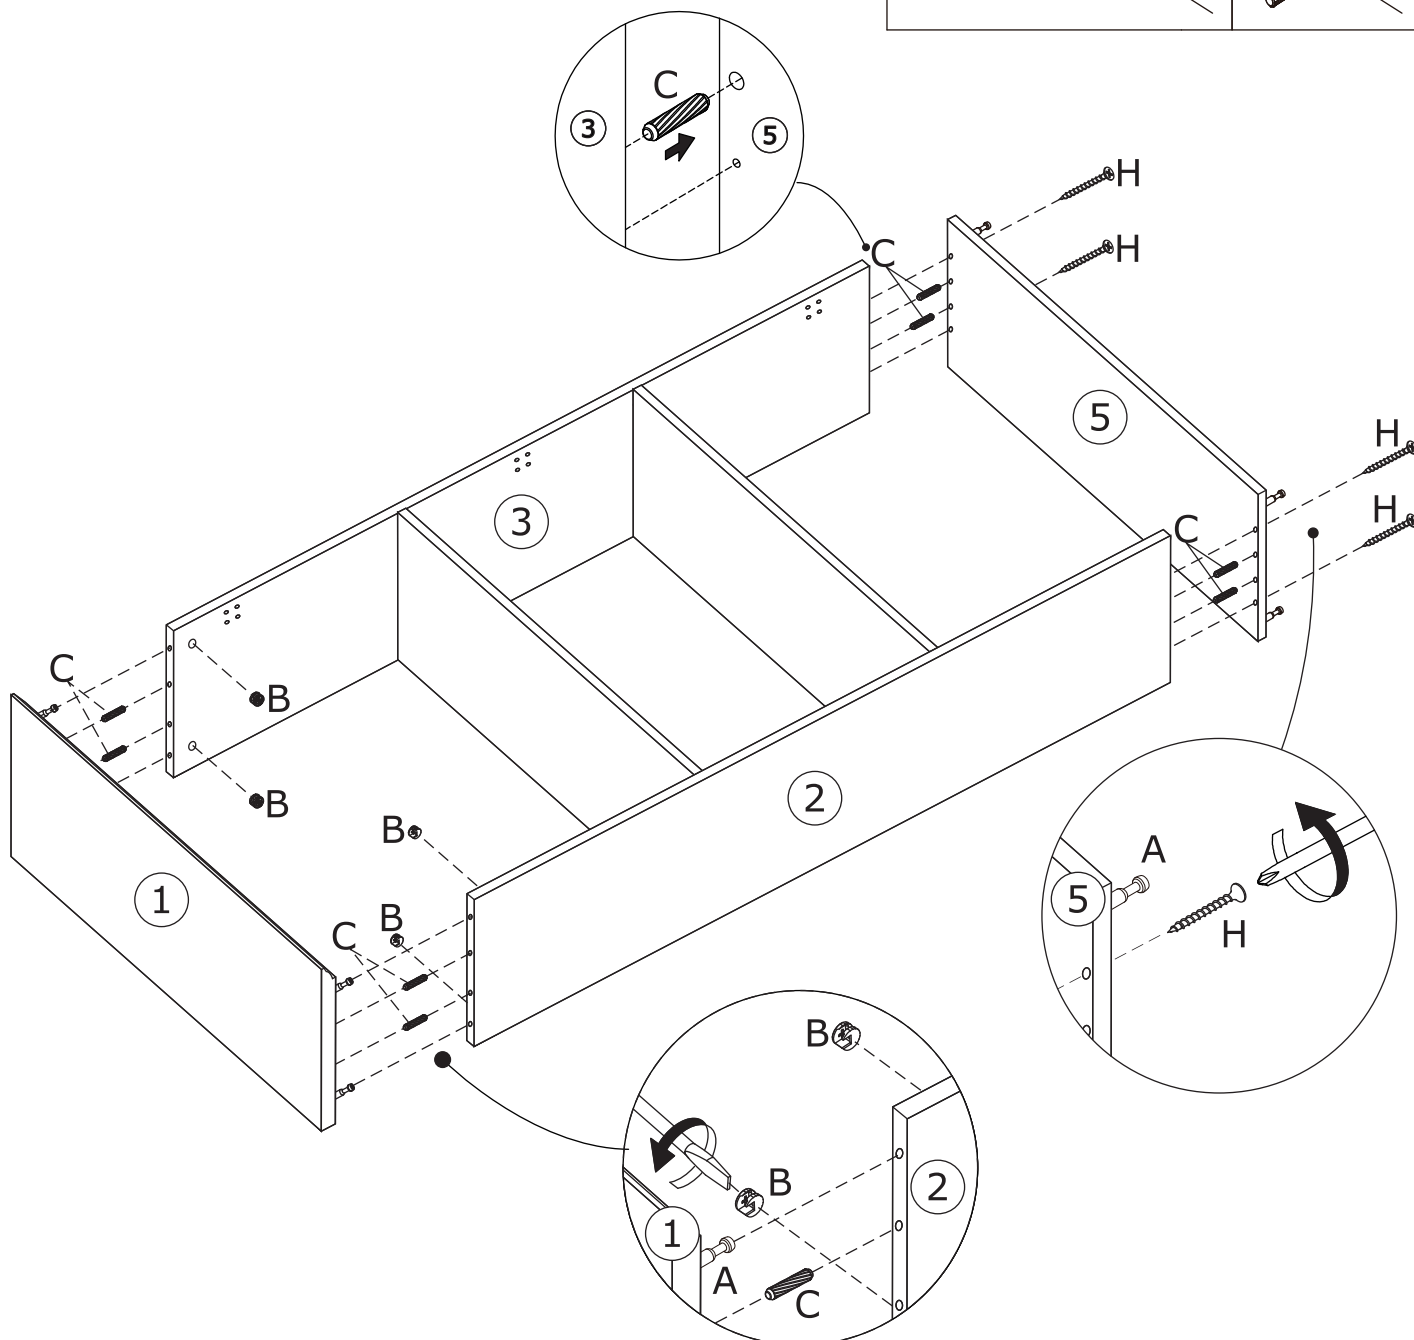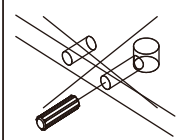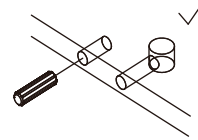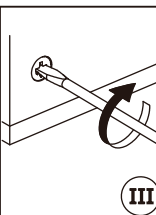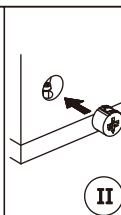

10

 
 
 
B x 4



 
C x 4



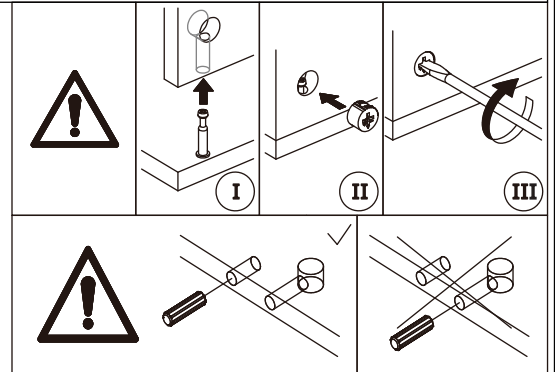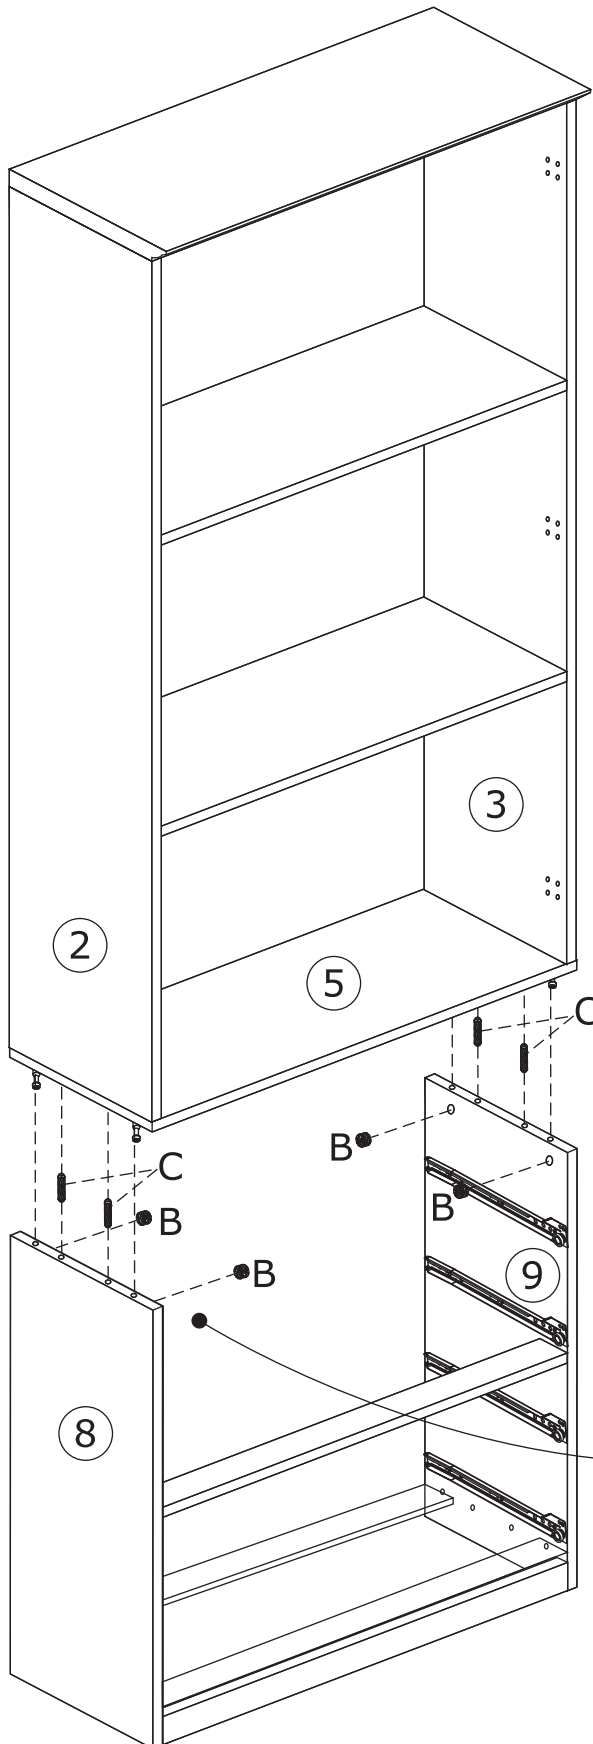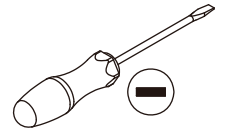


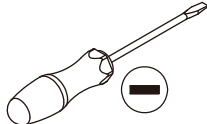
Ø8x30mm



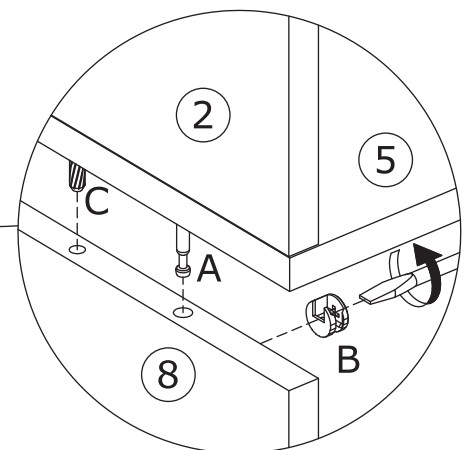


Insert wooden dowel(C) into board 8 and 9 at first.
Connect the two components, add cam lock(B) into board 8,9 and turn clockwise to tighten as shown.
We suggest more than two people to assemble in this step.









11




<p>M x 2</p> 	<p>Q x 2</p>  <p>Ø4x14mm</p>	<p>C x 4</p>  <p>Ø2.5x10mm</p>	
--	---	---	---

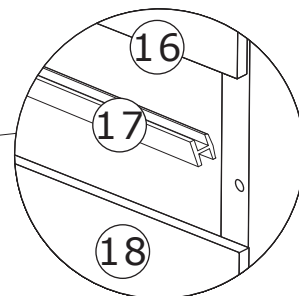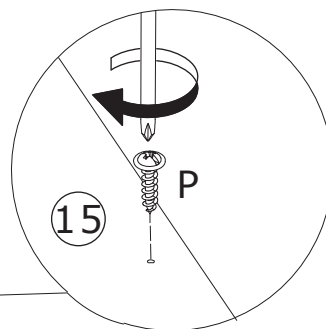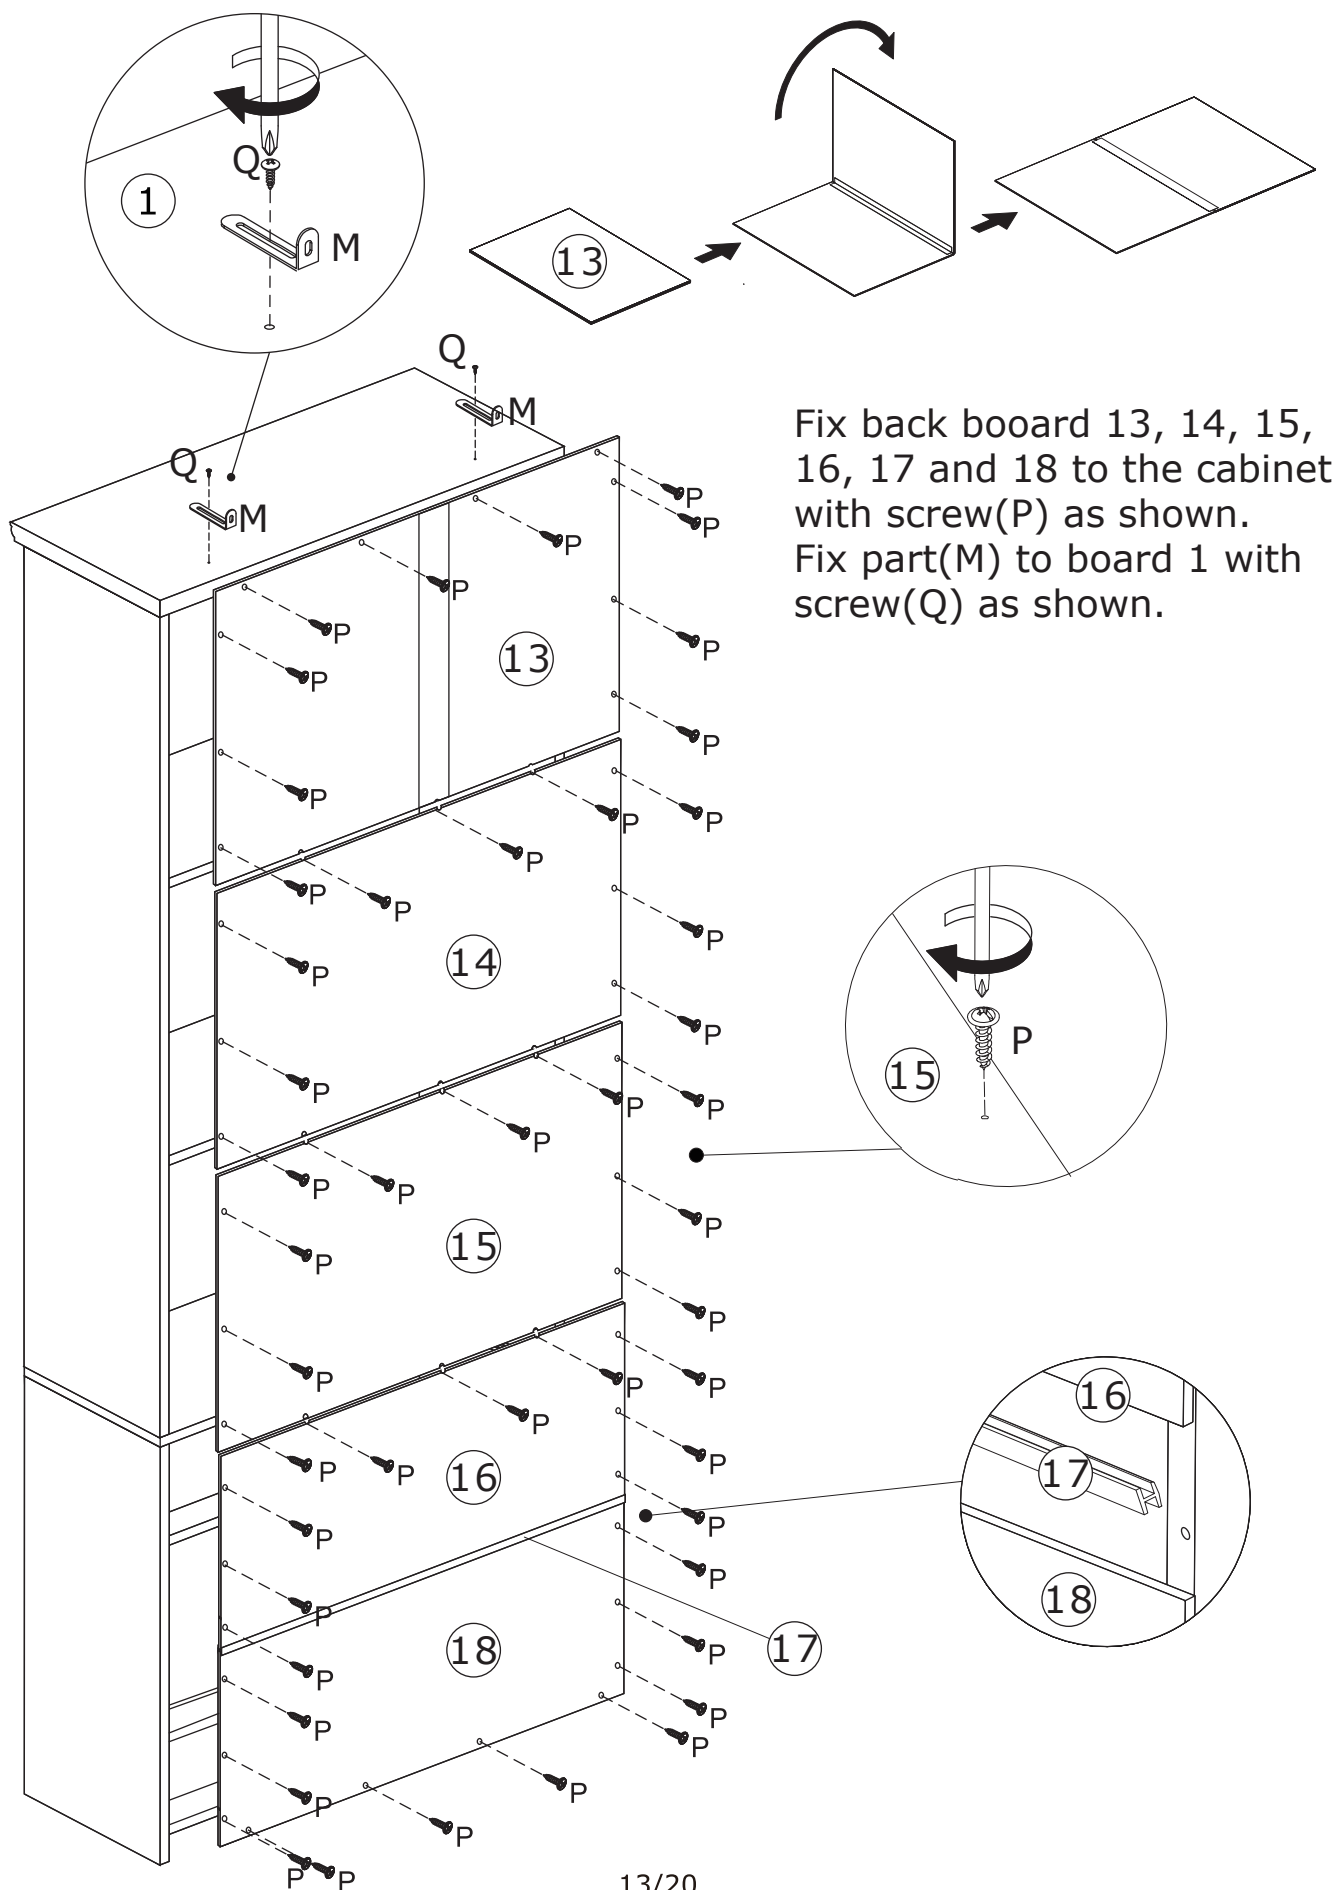   




12

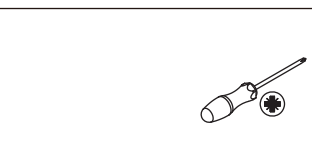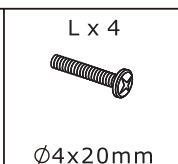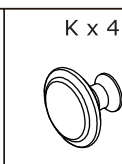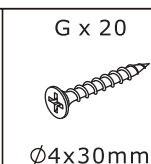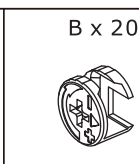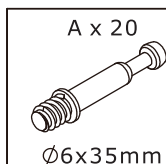      



Screw eccentric rod(A) into board 23.

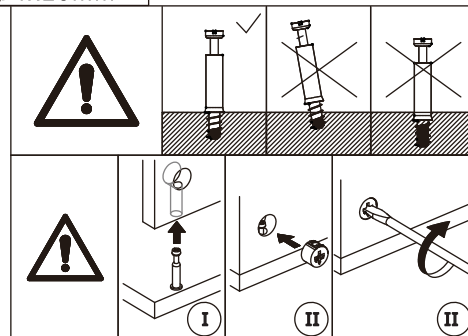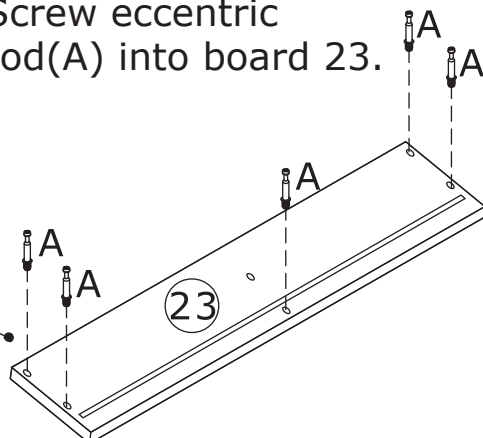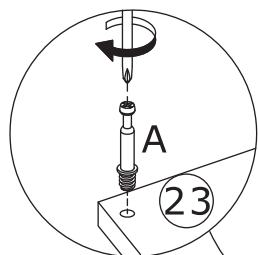   

   Fix board 21, 24 and 22 to board 19 with screw(G) as shown.

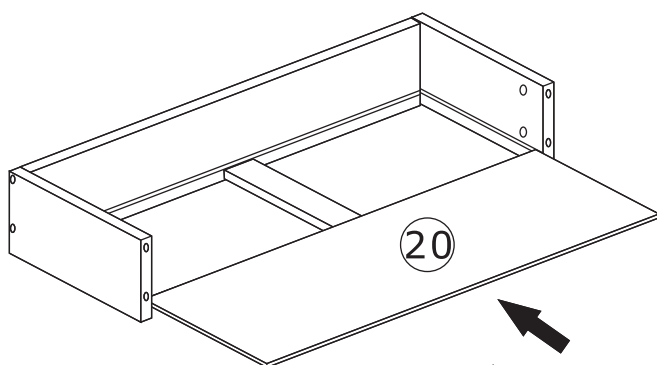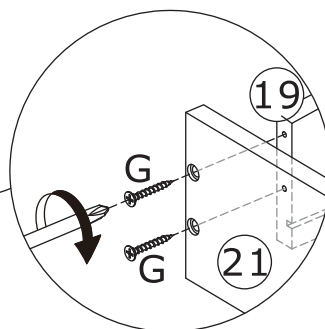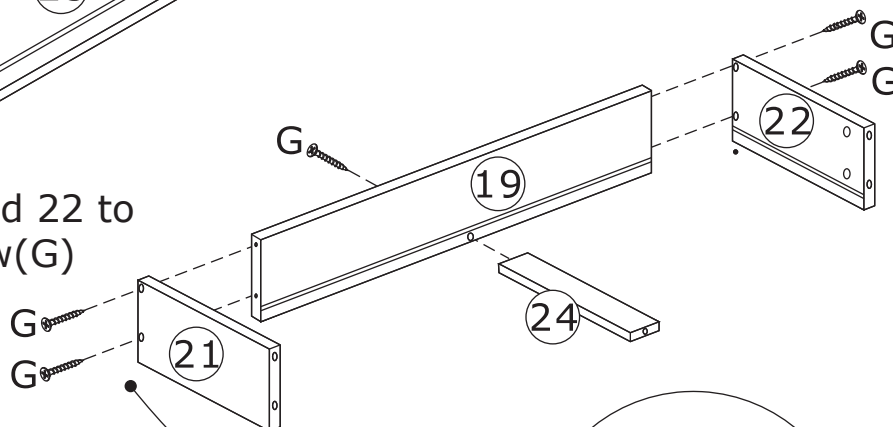



Insert board 20 along grooves as shown.

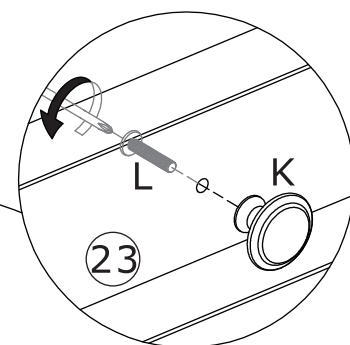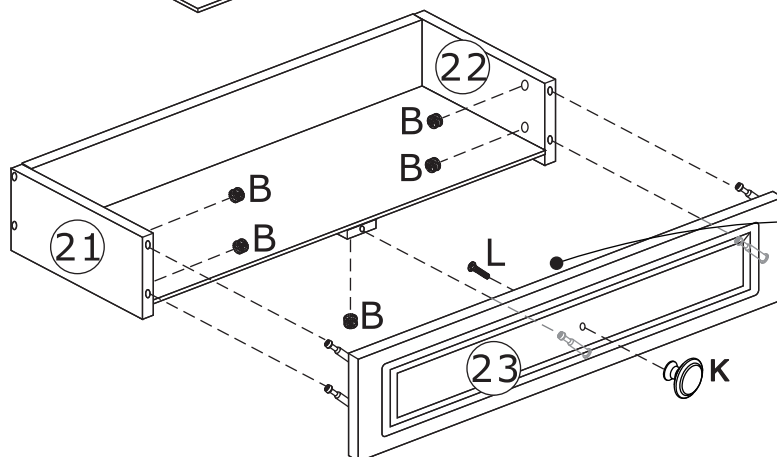  

Attach board 23 to the component, turn cam lock(B) clockwise to tighten as shown. Fix knob(K) with screw(L).

x4

  
13

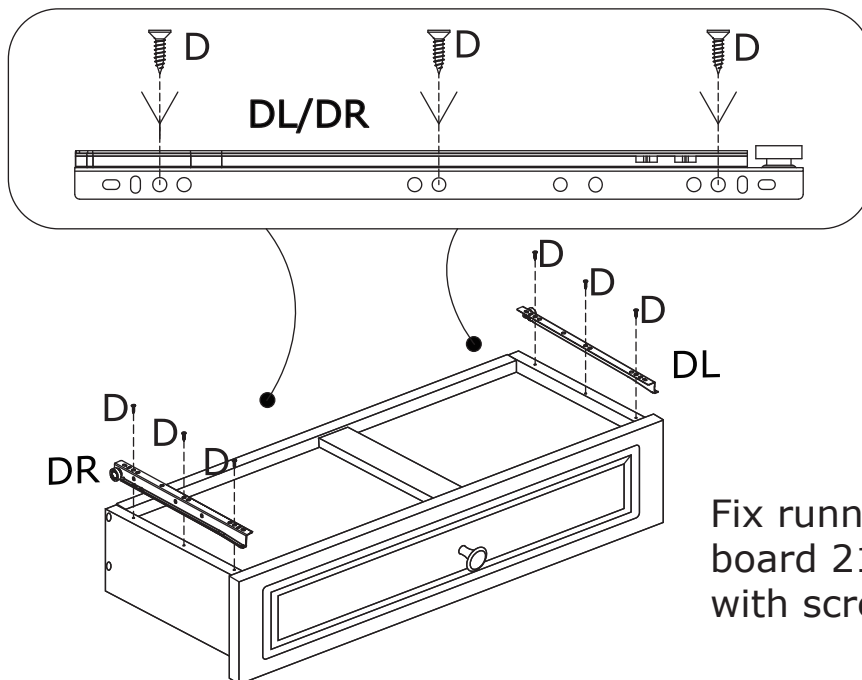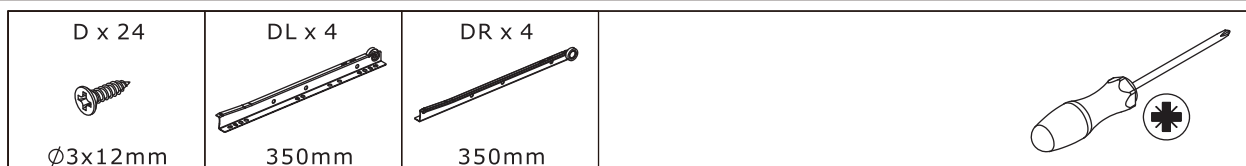


x4

Fix runner(DL) and (DR) to board 21 and 22 respectively with screw(D) as shown.

 14

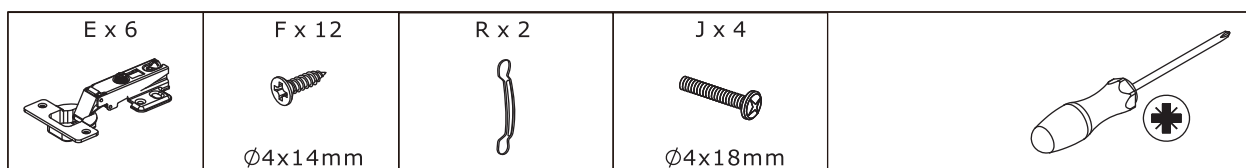

 Fix hinge(E) to board 6 and 7 with screw(F) as shown. Fix handle(R) with screw(J).

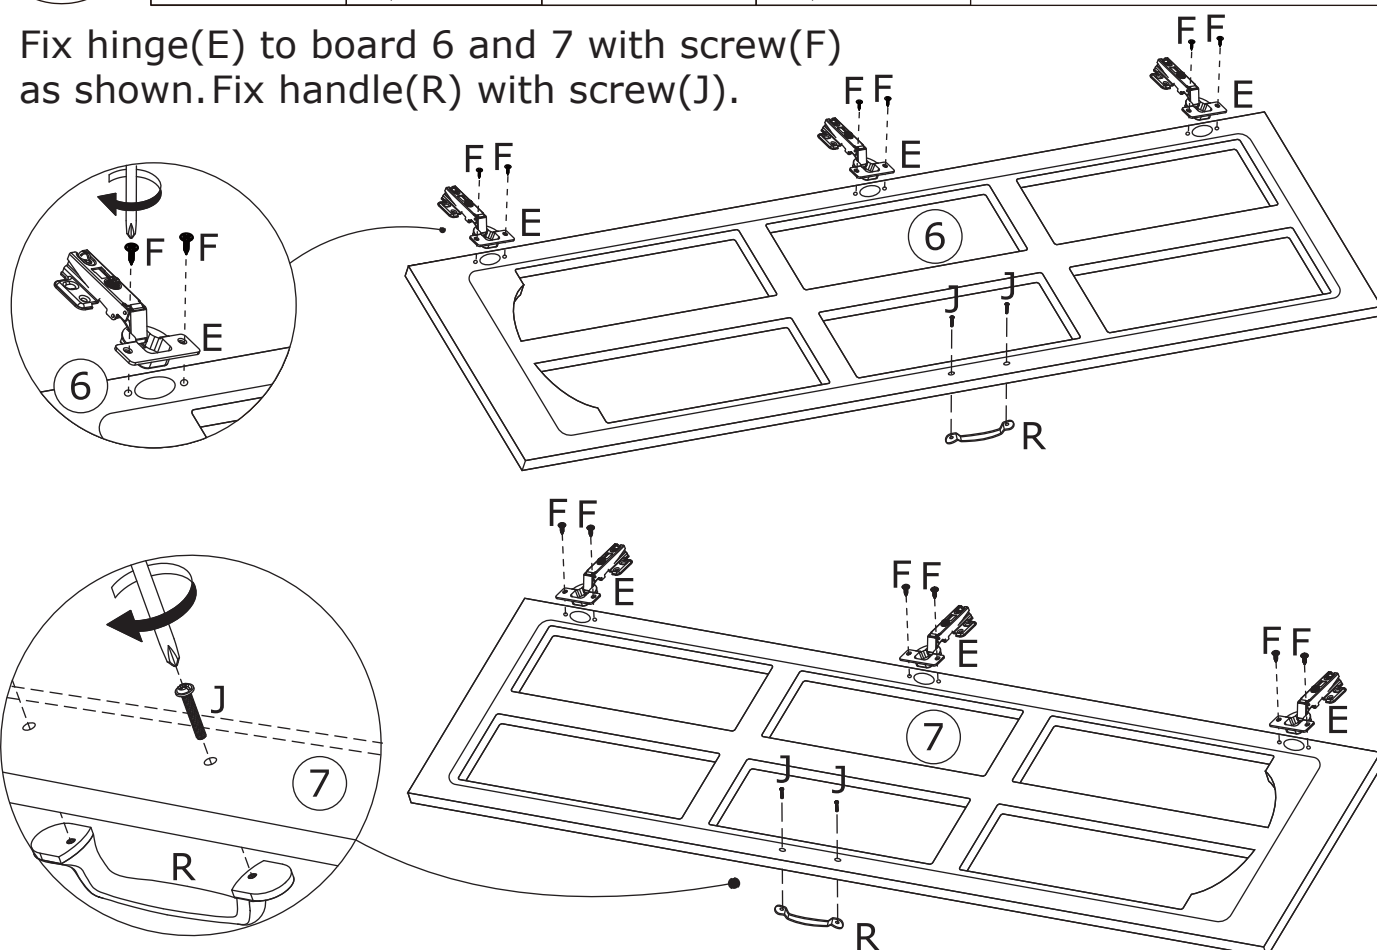


15



F x 24



 Ø4x14mm

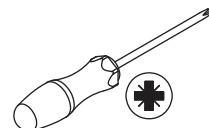


  Assemble door 6 and 7 to the cabinet by fixing hinge with screw(F) as shown. Insert drawers in.



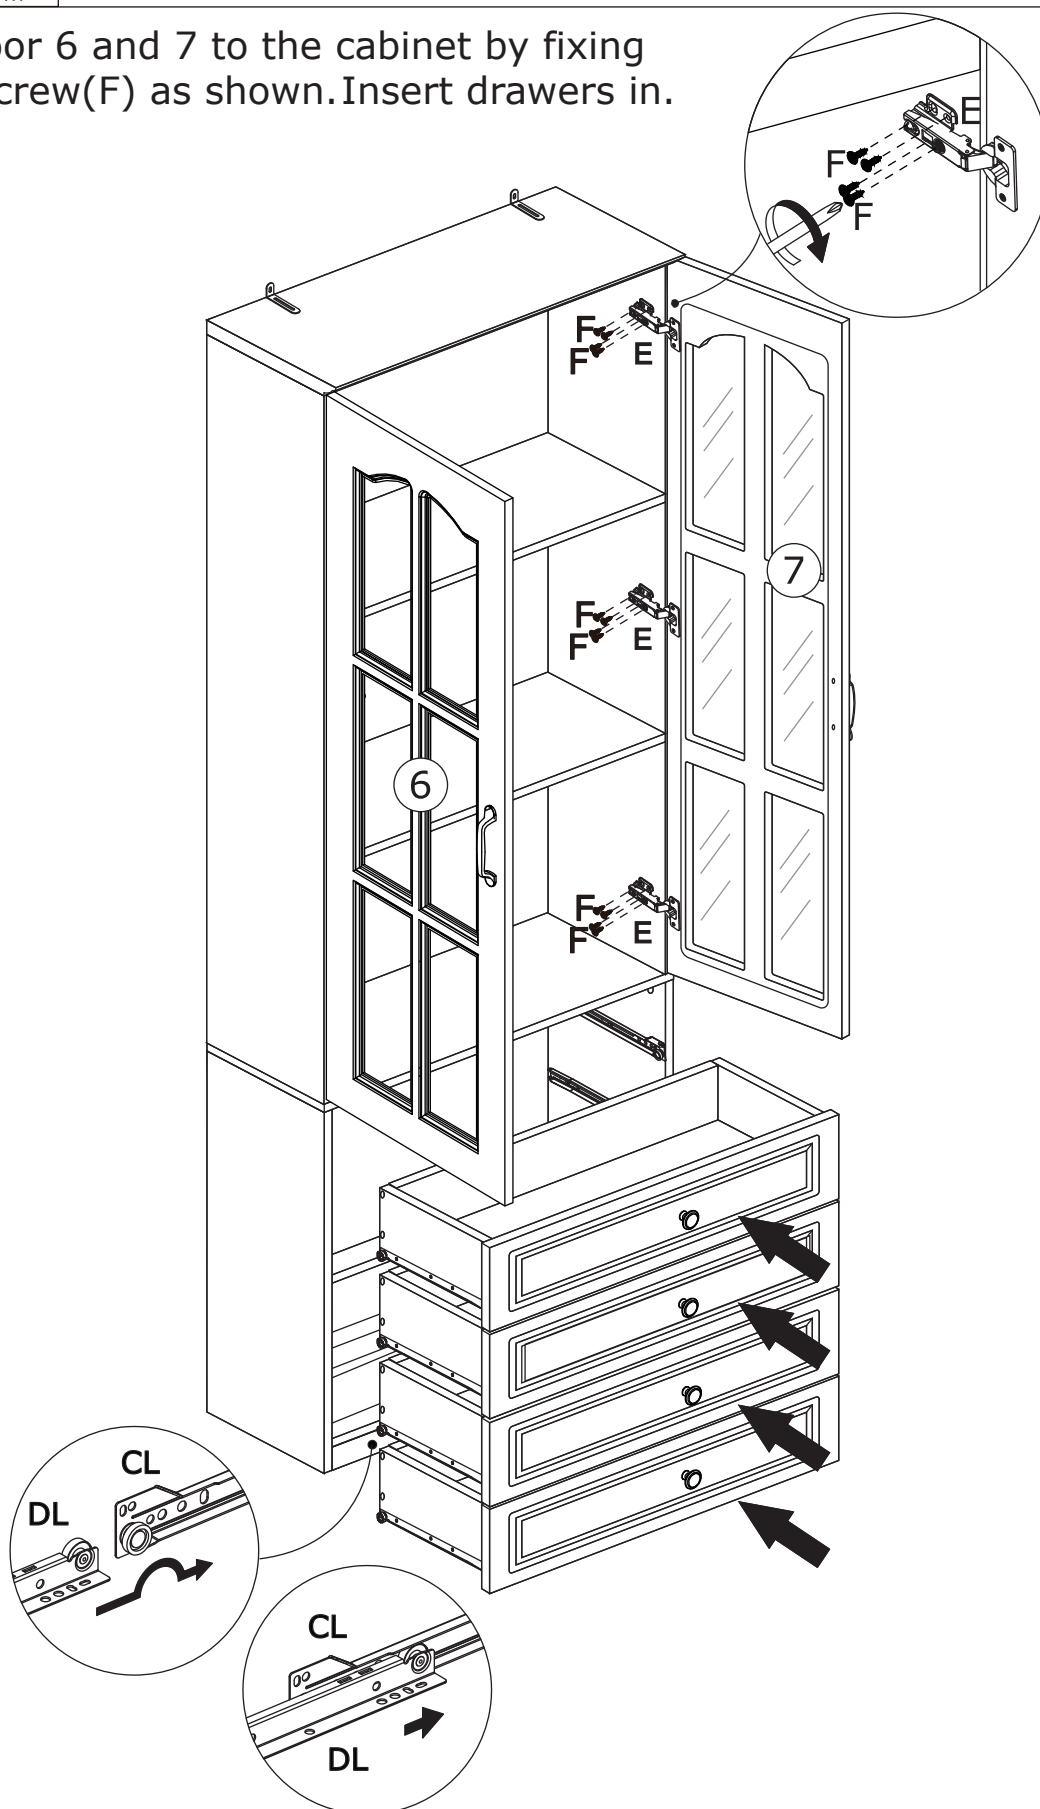
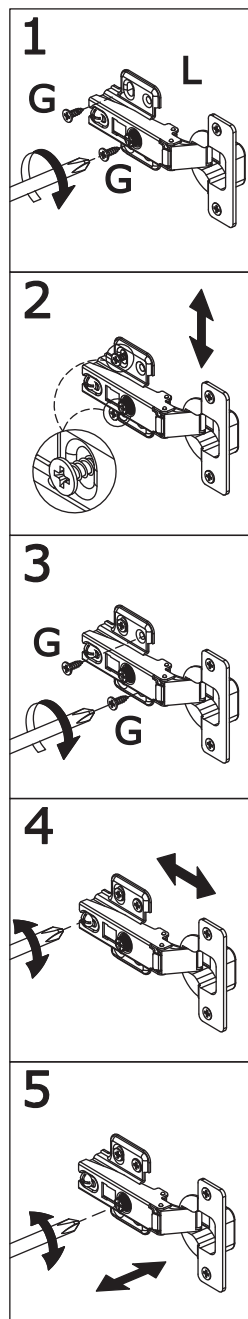


16

 H x 2


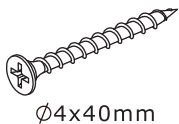


N x 2

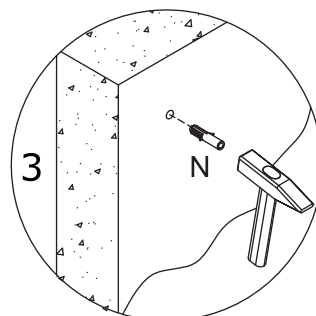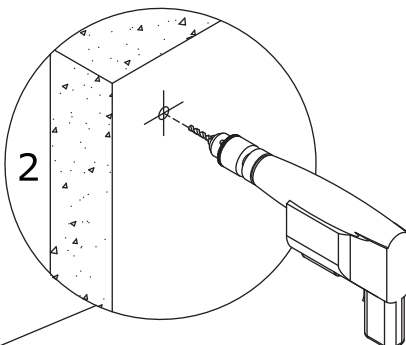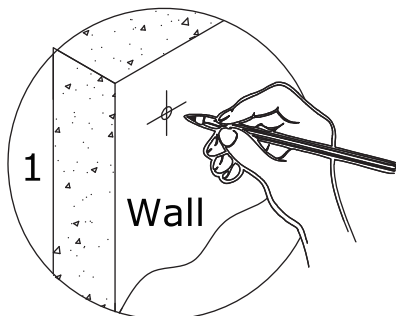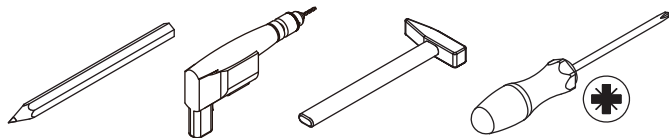    


H

  Wall










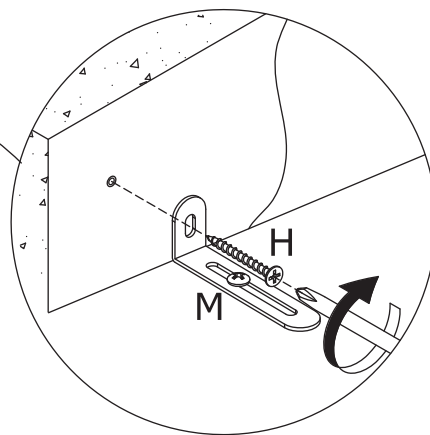
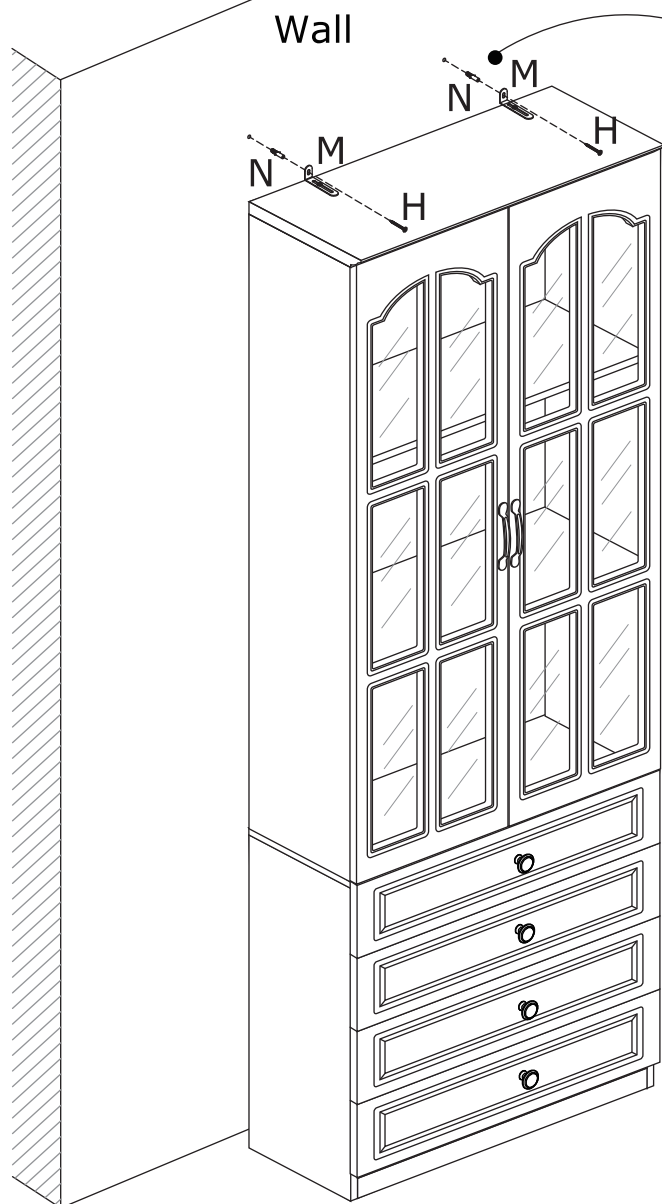


Install anti-tipping device as shown.

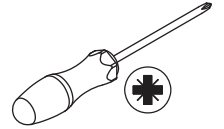 

More detailed hinge adjustment mode:

           - 1) Rotate out the screws connected with the cabinet counterclockwise, adjust the gap between the overall door frame and the upper and lower, and then rotate the screws clockwise after adjusting;
- 2) Rotate the screws at the end of the hinge counterclockwise to adjust the gap between the whole door frame and the cabinet before and after the adjustment, and then rotate the screws clockwise (rotate out to the movable door frame, do not need to over-rotate out);
- 3) Counterclockwise rotation of the screws in the middle of the hinge will offset the corresponding part of the rear door frame to the left, and clockwise rotation of the screws in the middle of the hinge will offset the corresponding part of the rear door frame to the right

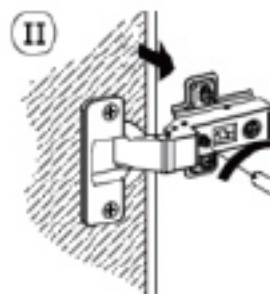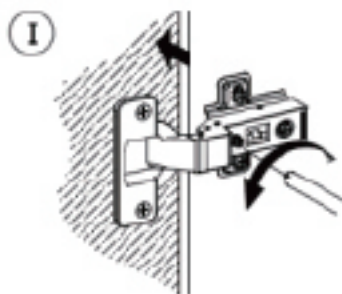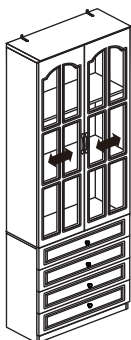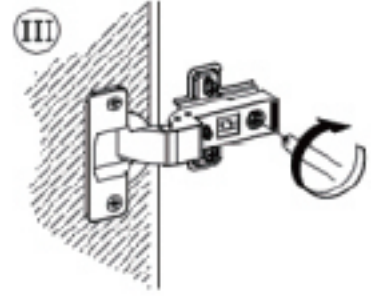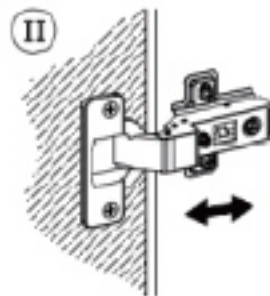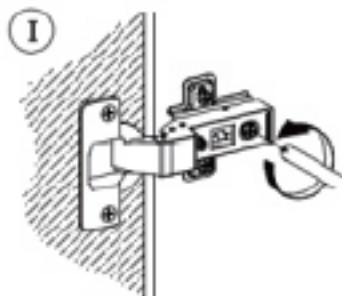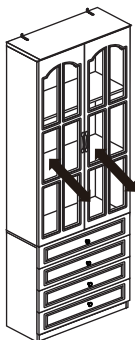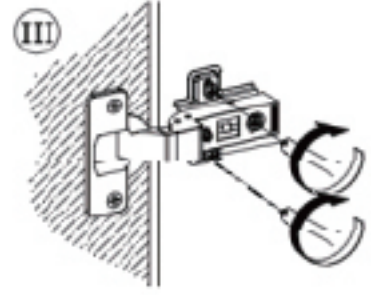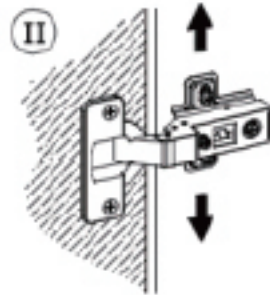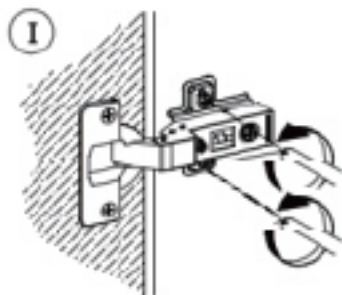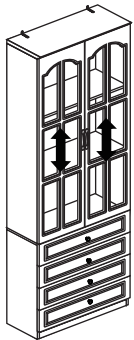

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

 
 
DEFECTIVE ITEMS

 
- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.



Display Cabinet

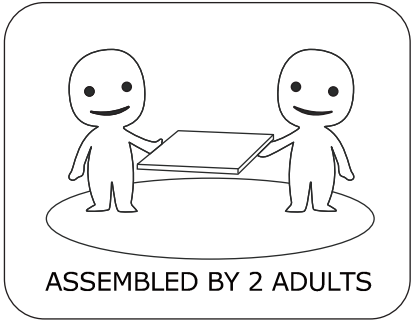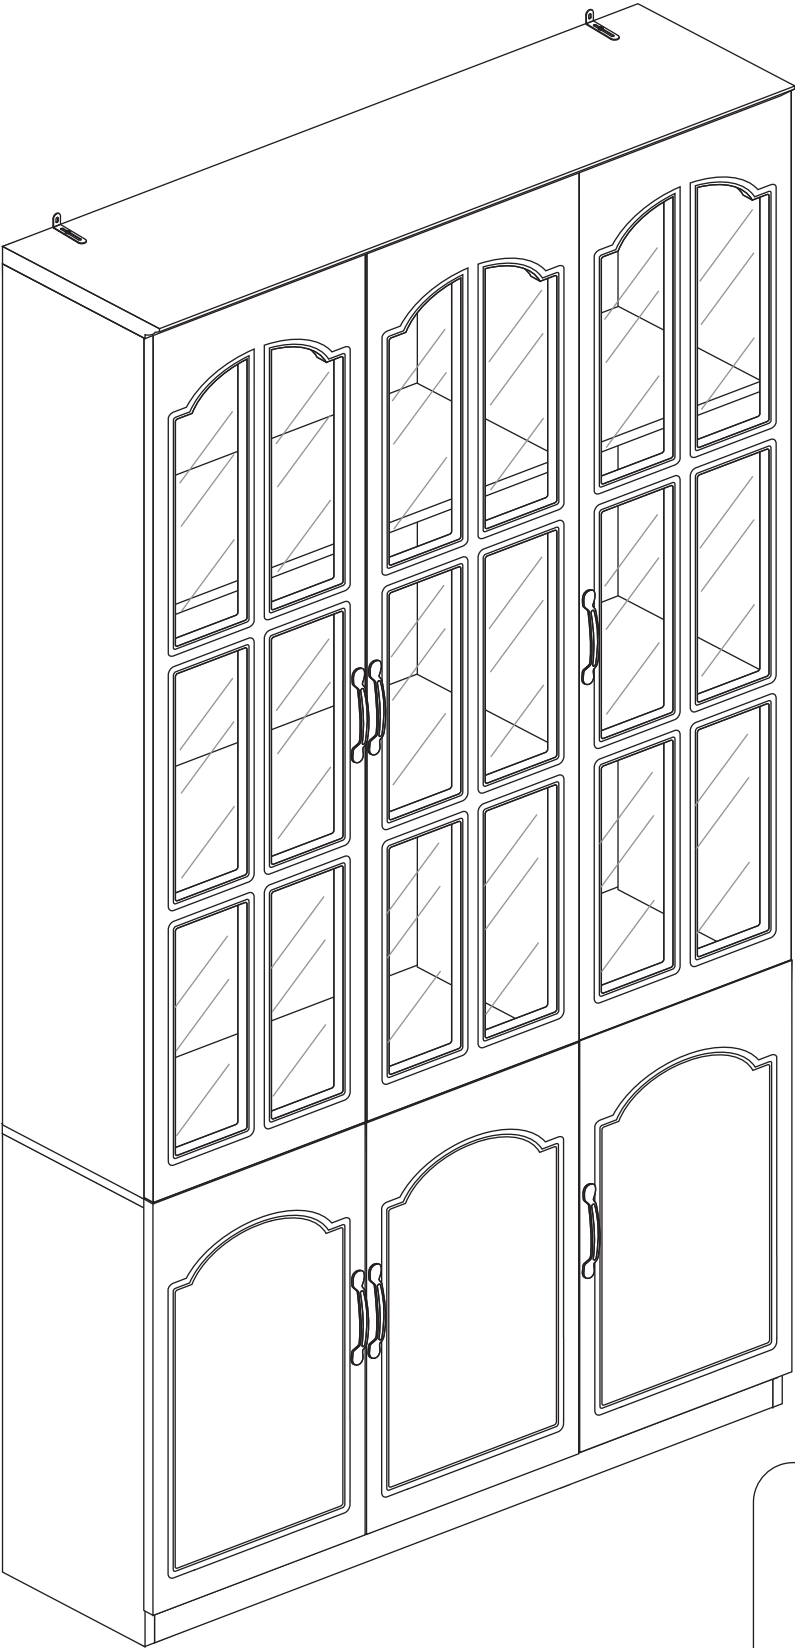

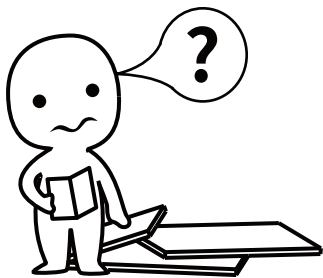


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

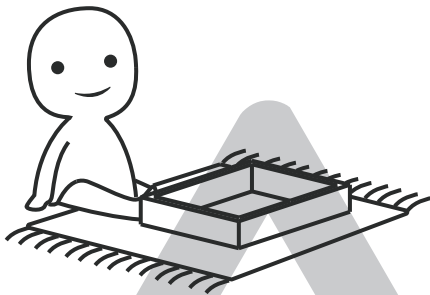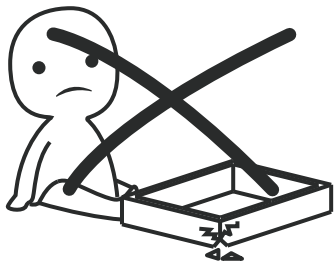


AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.

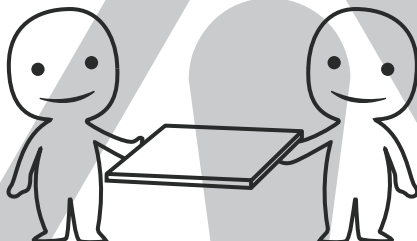

IMPROVE EFFICIENCY !

 Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

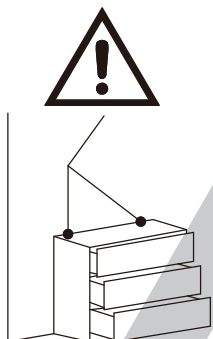

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

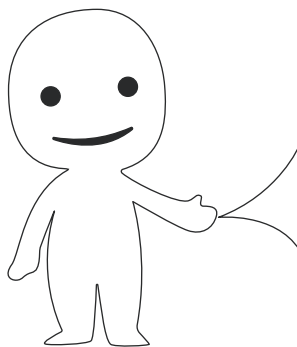


Please prepare the following tools

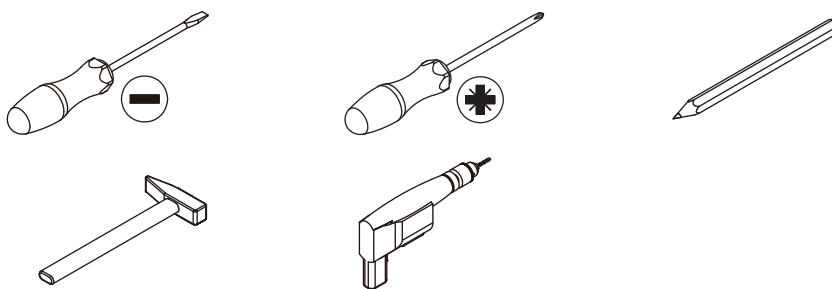 

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

Ax44	Bx44	Cx36	Dx4	Ex8
 Ø6x35mm	 Ø14x9mm	 Ø8x30mm	 Ø8x50mm	
Fx90	Gx6	Hx10	Jx18	Kx5
 Ø4x14mm	 	 Ø4x40mm	 Ø4x18mm	
Lx10	Mx2	Nx2	Px79	Qx2
 	 	 	 Ø2.5x10mm	 Ø4x14mm

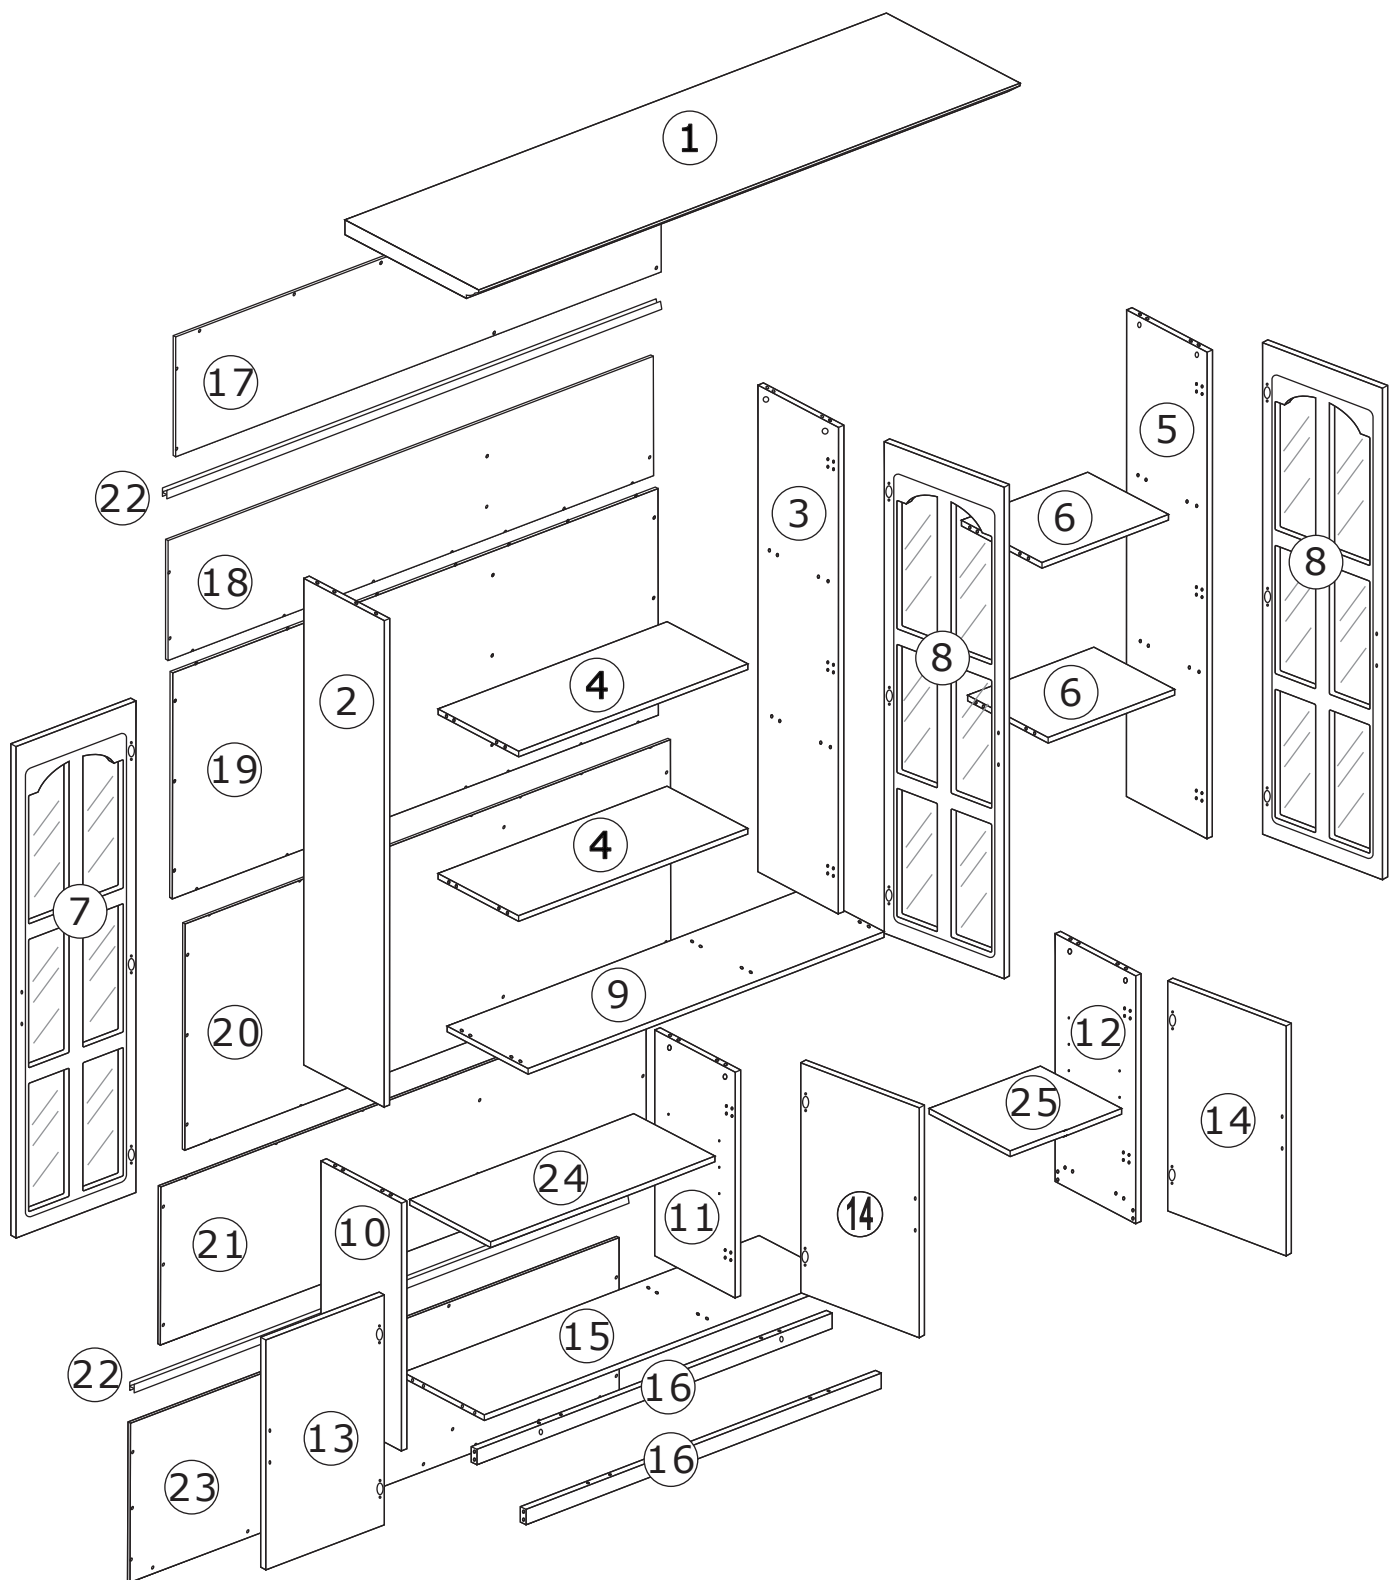 


⚠ WARNING







Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*

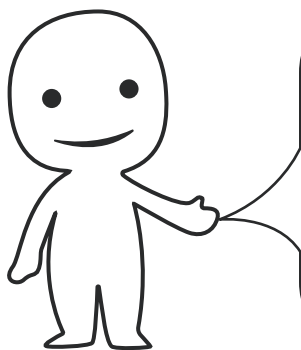

Please prepare the following tools

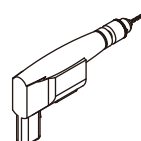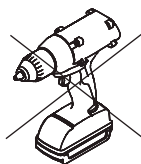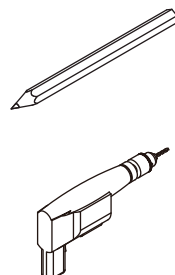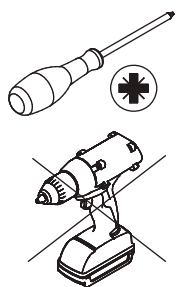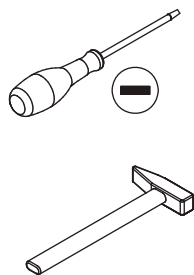      

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

① x 1



② x 1



 
③ x 1




④ x 2




⑤ x 1

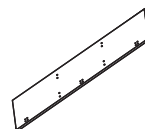


⑥ x 2

 


⑦ x 1

 


⑧ x 2

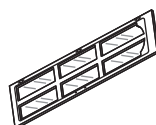 


⑨ x 1

 


⑩ x 1

 


⑪ x 1

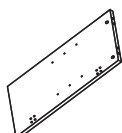 


⑫ x 1

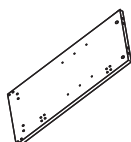 

⑬ x 1

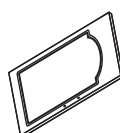 

⑭ x 2

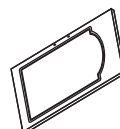 


⑮ x 1




⑯ x 2



 
⑰ x 1

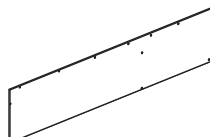


⑱ x 1

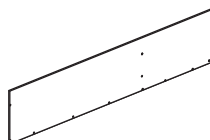 


⑲ x 1

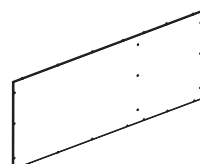 


⑳ x 1

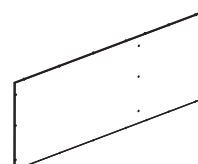 


㉑ x 1

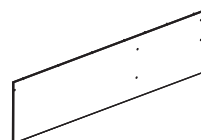 

㉒ x 1

 


㉓ x 1

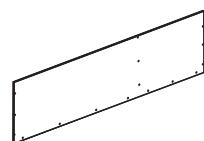 

㉔ x 1



 ㉕ x 1








1


Ax16



     Ø6x35mm

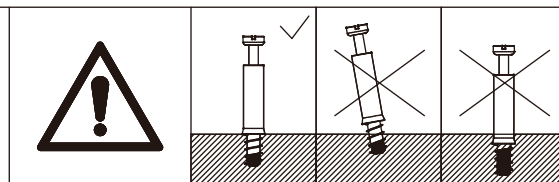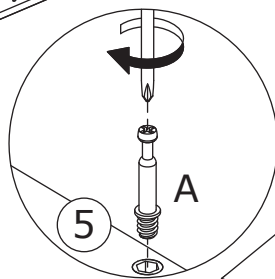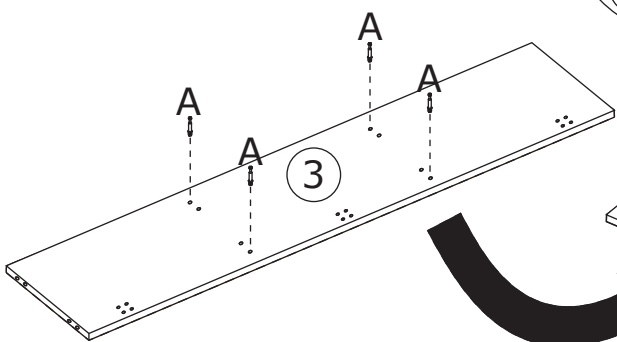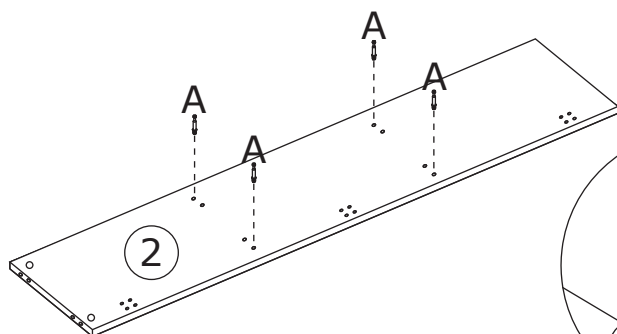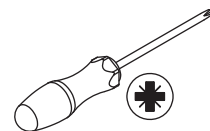

 Screw eccentric rod(A) into board 2, 3 and 5 with a screwdriver as shown.

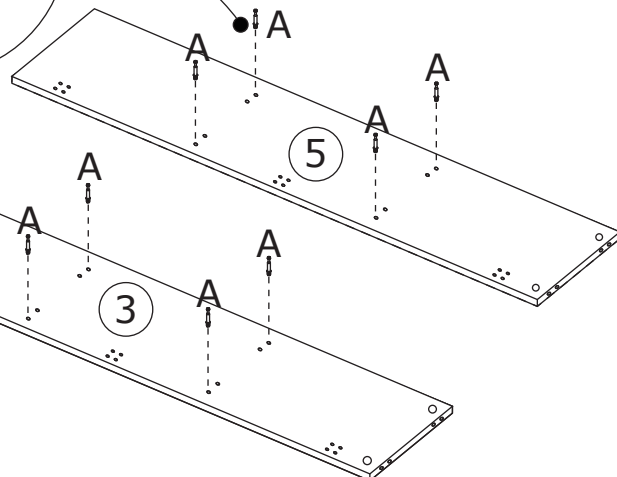

2

Bx8



Ø14x9mm

Cx4







Ø8x30mm


Dx4



    Ø8x50mm

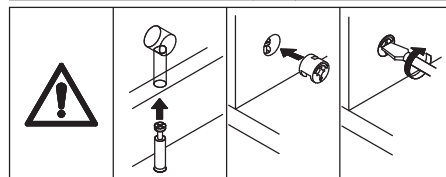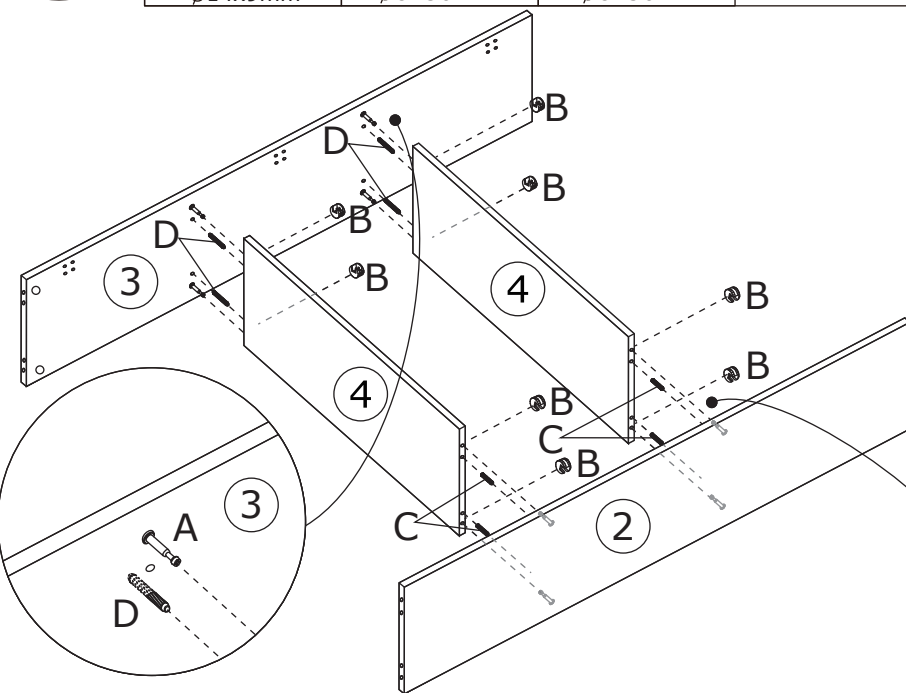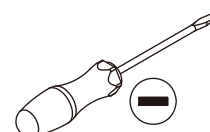

 Insert LONG wooden dowel(D) into board 3; insert SHORT wooden dowel(C) into board 2 at first. Attach board 2 and 3 to board 4, add cam lock(B) into board 4 and turn clockwise to tighten as shown.

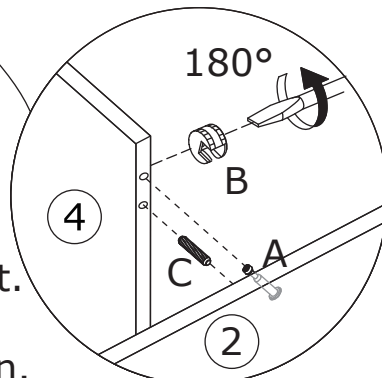

3

Bx8




Ø14x9mm



Cx4



 Ø8x30mm

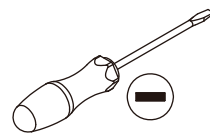

  
Insert SHORT wooden dowel(C) into board 5 at first.

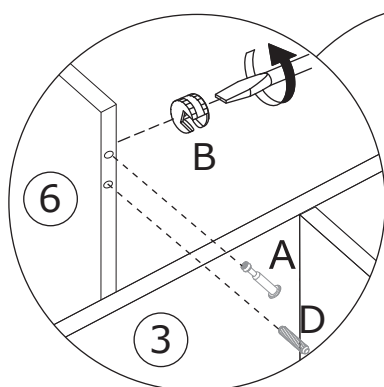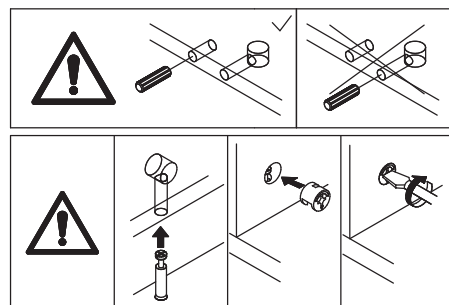


Connect board 5 and 3 to board 6, add cam lock(B) into board 6 and turn clockwise to tighten as shown.

4


 
Ax12



Ø6x35mm

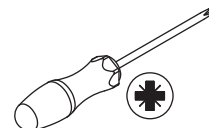 


  Screw eccentric rod(A) into board 1 and 9 with a screwdriver as shown.

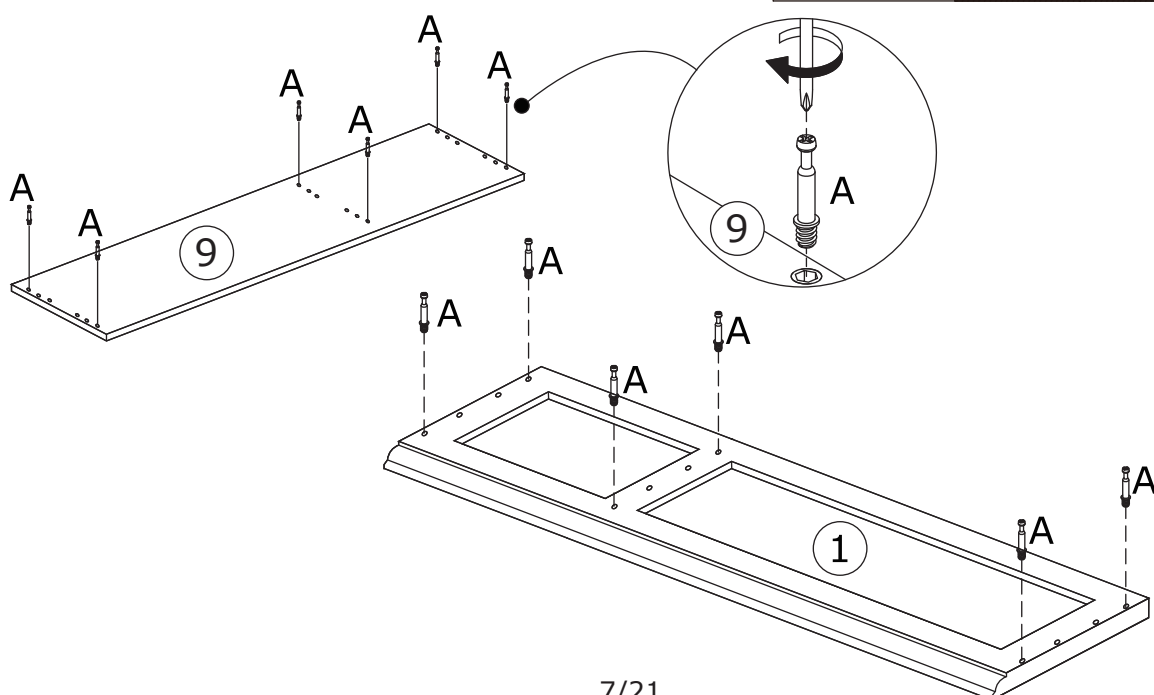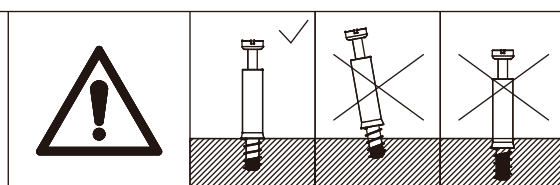

5

 Cx6








Ø8x30mm

Hx6



     Ø4x40mm

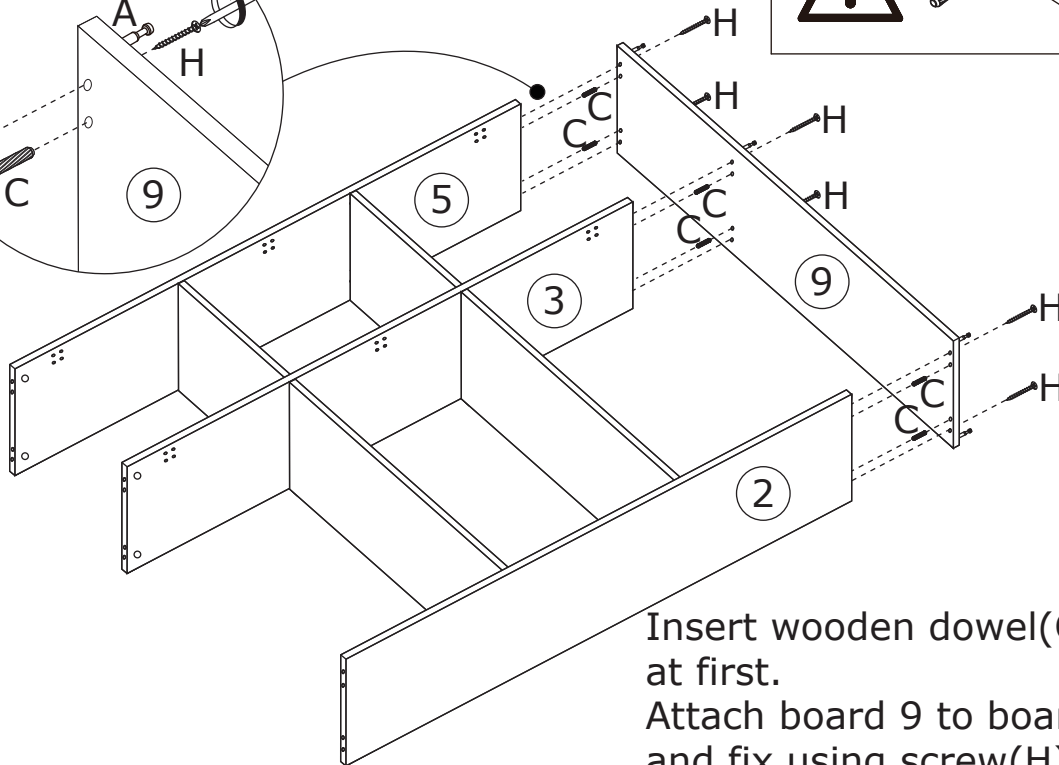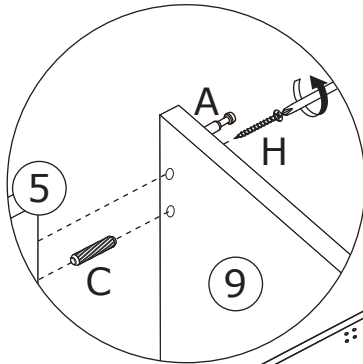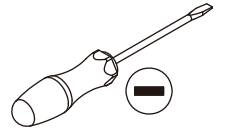

Insert wooden dowel(C) into board 9 at first.
Attach board 9 to board 2, 3 and 5, and fix using screw(H) as shown.

6

Bx6








Ø14x9mm

Cx6




     Ø8x30mm

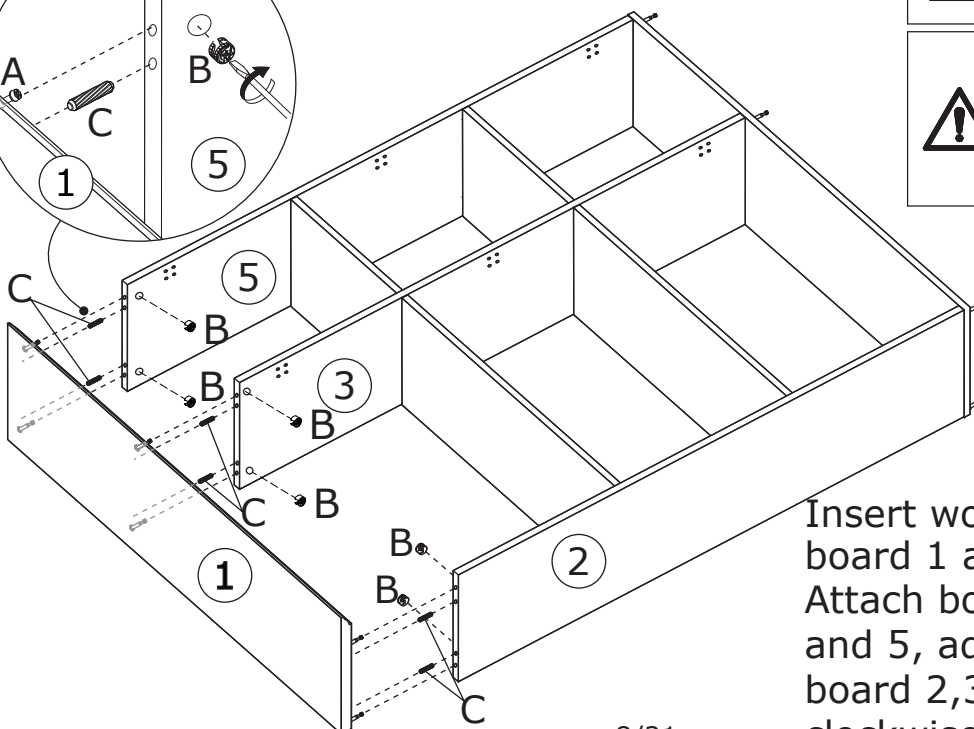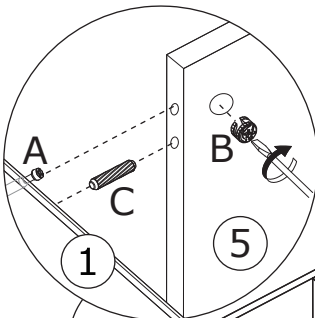
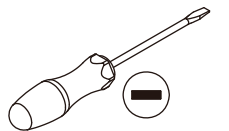


Insert wooden dowel(C) into board 1 at first.
Attach board 1 to board 2, 3 and 5, add cam lock(B) into board 2,3,5 and turn clockwise to tighten as shown.

 
7

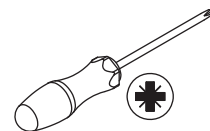



 
 
Screw eccentric rod(A) into board 10, 12 and 15 with a screwdriver as shown.

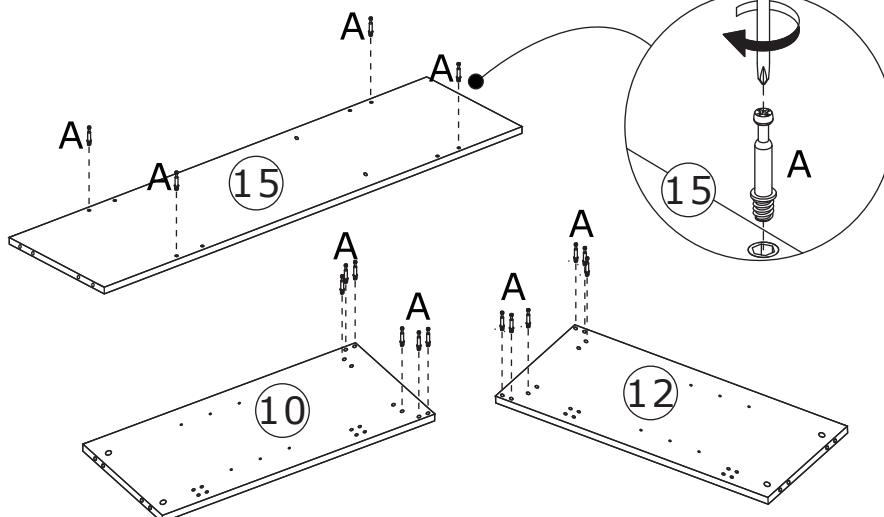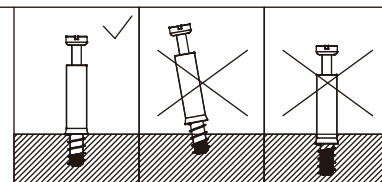


8

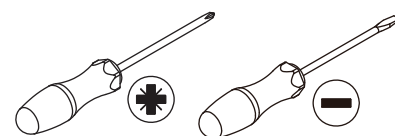 

   
 
Insert wooden dowel(C) into board 15 at first.
Attach board 15 to board 16, add cam lock(B) into board 16 and turn clockwise to tighten as shown.

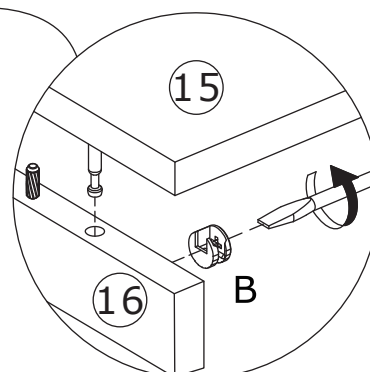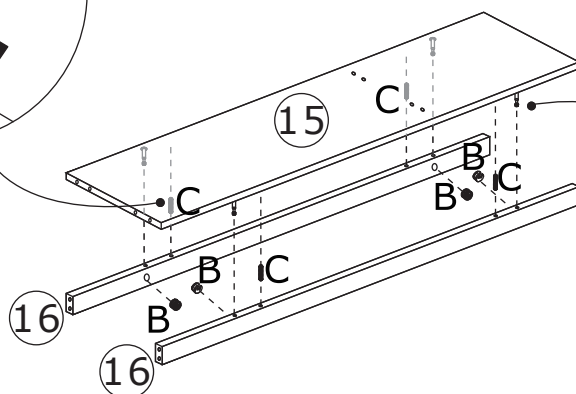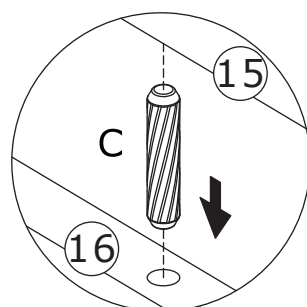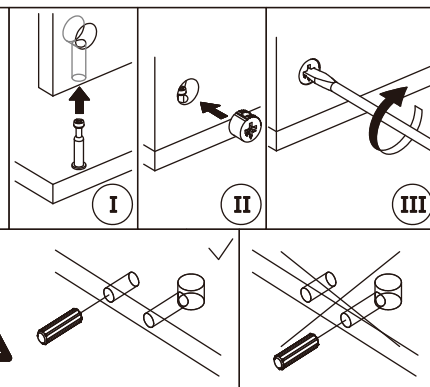

9


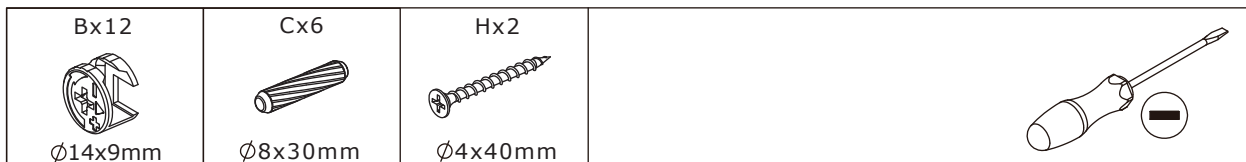 


  Insert wooden dowel(C) into board 15 at first.
Attach board 10 and 12 to board 15 and 16,
add cam lock(B) into board 15,16 and turn
clockwise to tighten as shown.

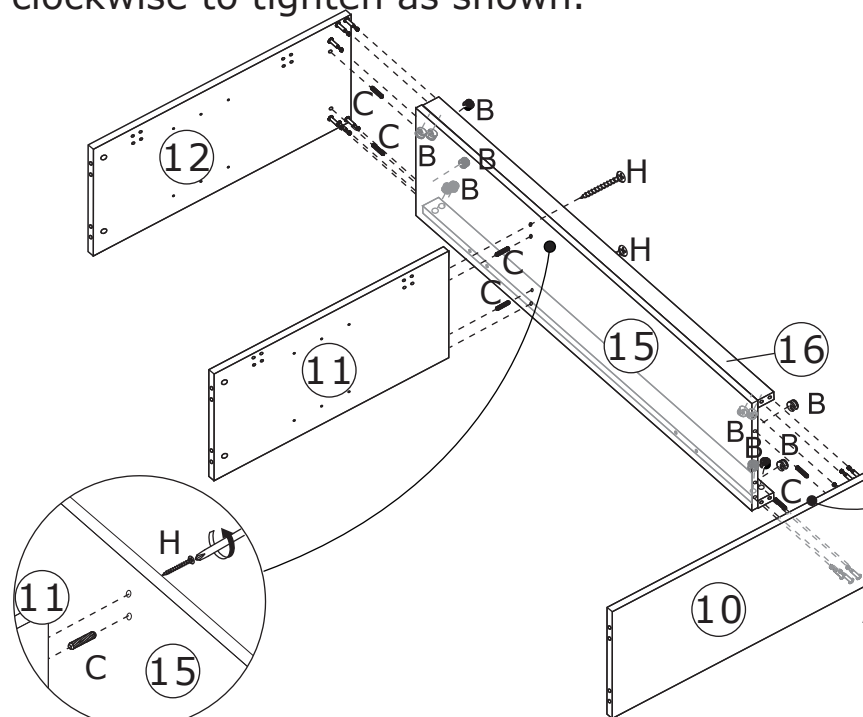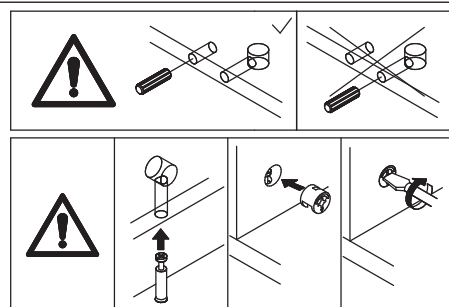


Attach board 11 to board 15,
and fix using screw(H) as
shown.

  10

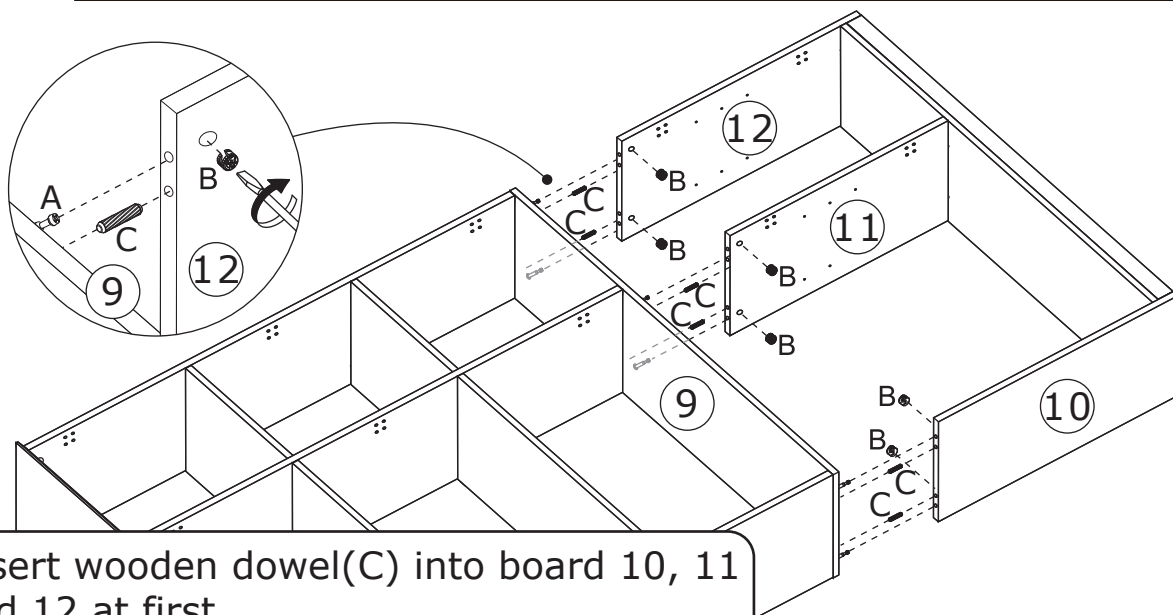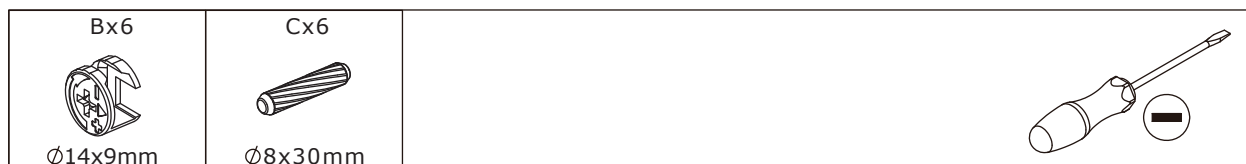


 Insert wooden dowel(C) into board 10, 11
and 12 at first.
Connect the two assembled components,
add cam lock(B) into board 10,11,12 and
turn clockwise to tighten as shown.

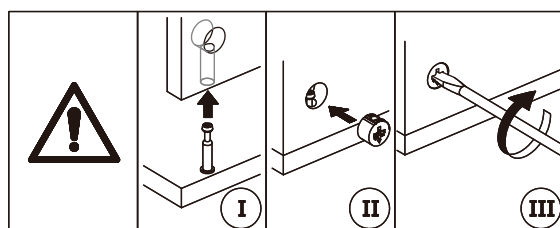

11

 Connect board 17 and 18, 21 and 23 using strip 22 at first.

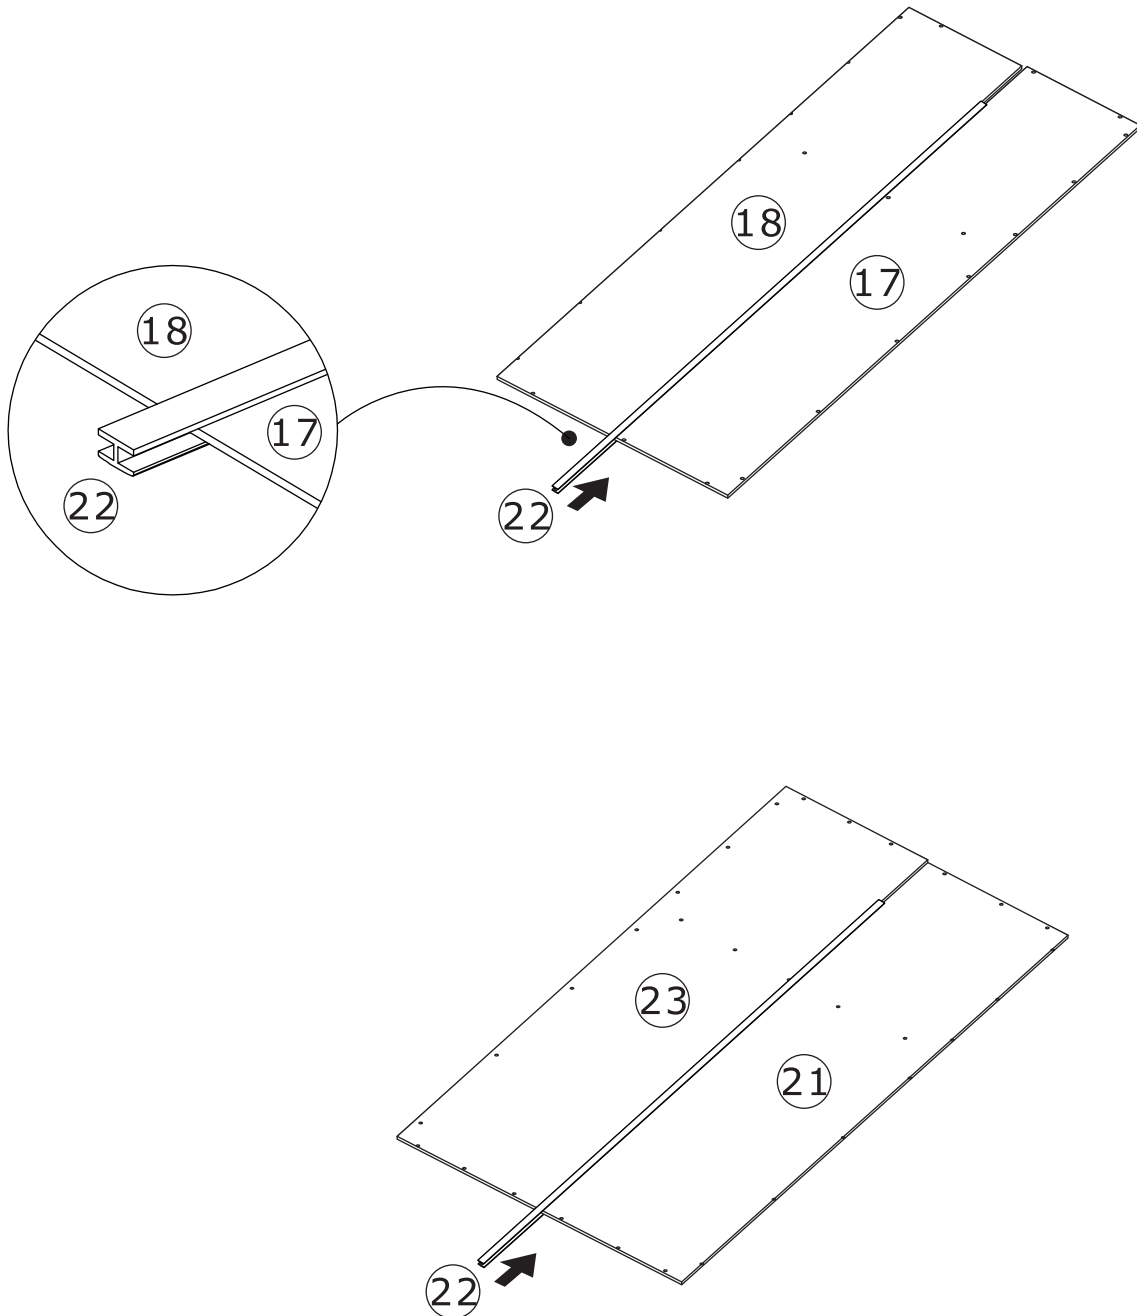


12


P x 79



 Ø2.5x10mm

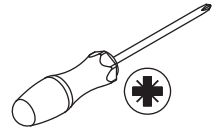

 Fix back board 17, 18, 19, 20, 21 and 23 to the cabinet using screw(P) as shown.

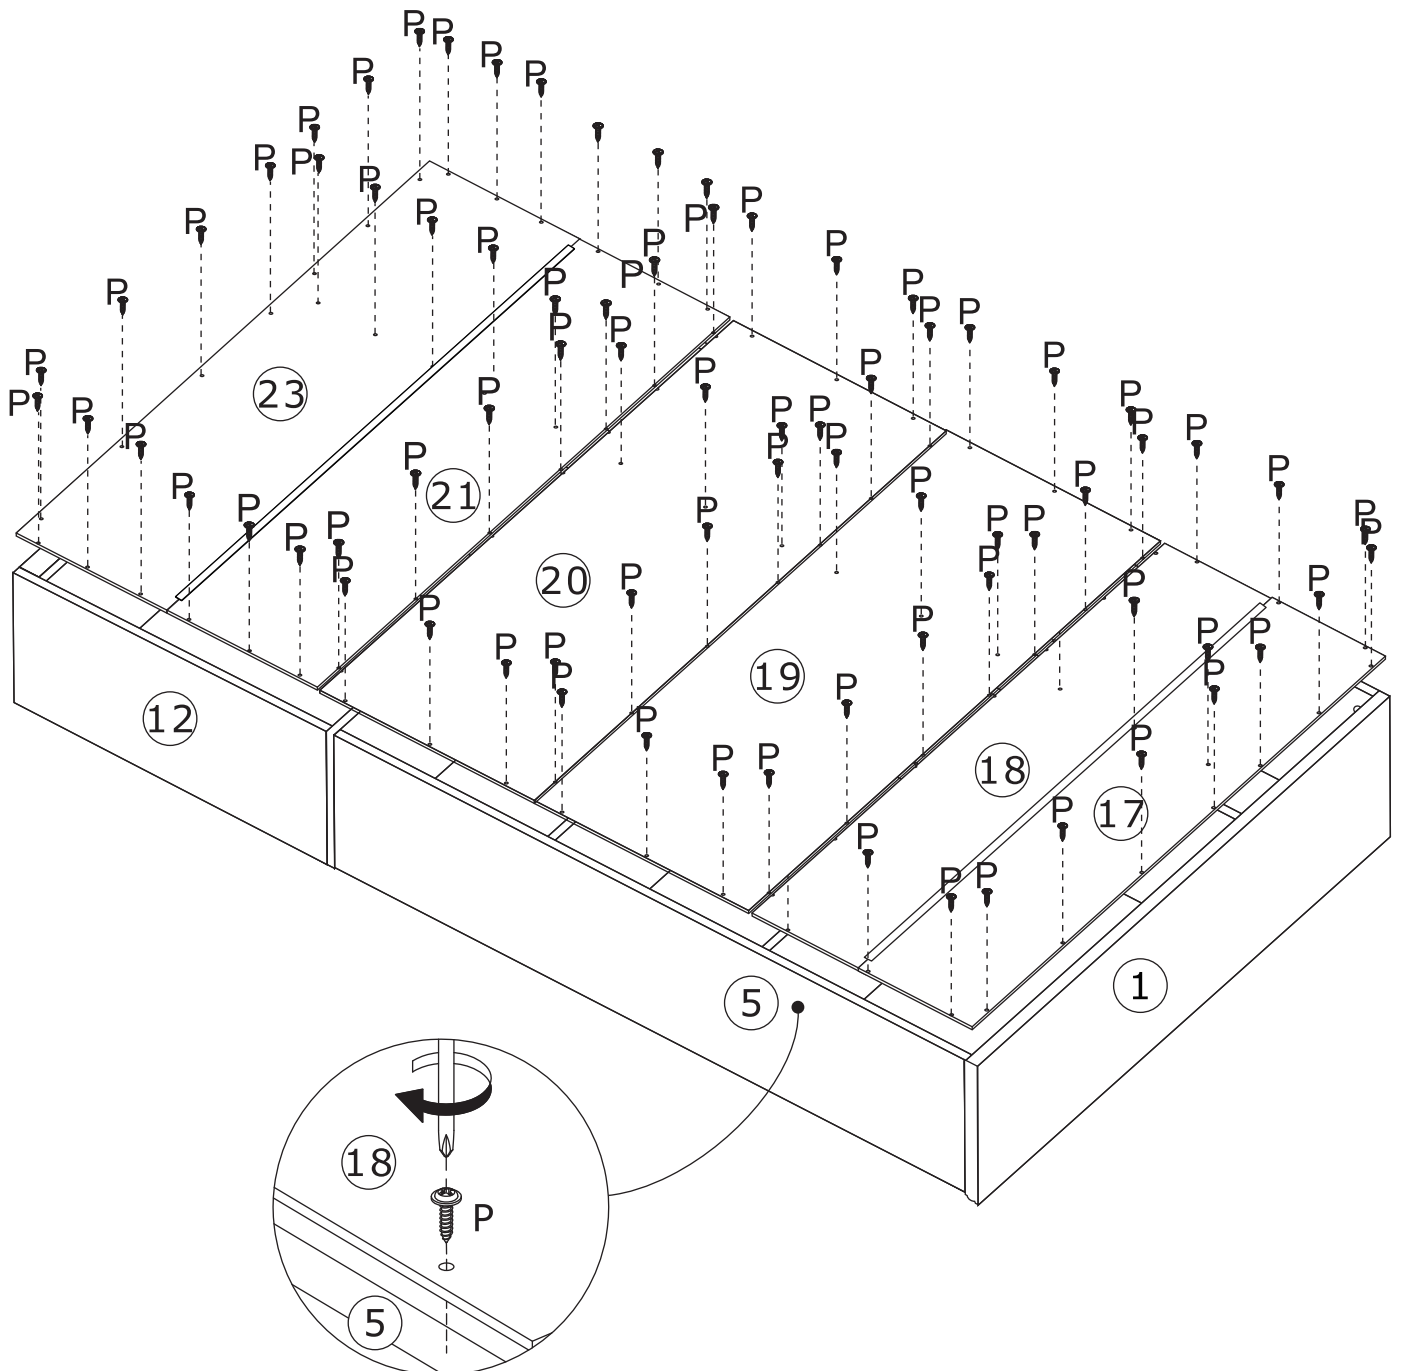


13

Fx20







Ø4x14mm

 Lx10

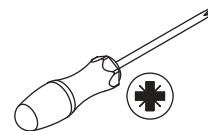

    Fix hinge(L) to board 7, 8, 13 and 14 with screw(F) as shown.

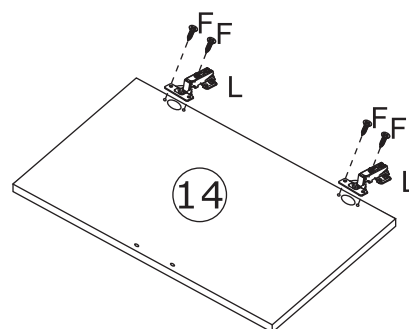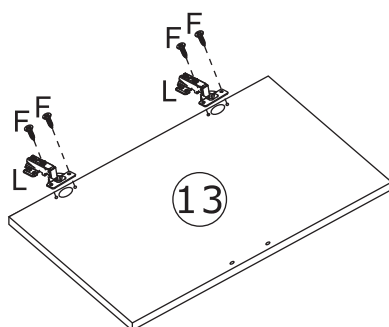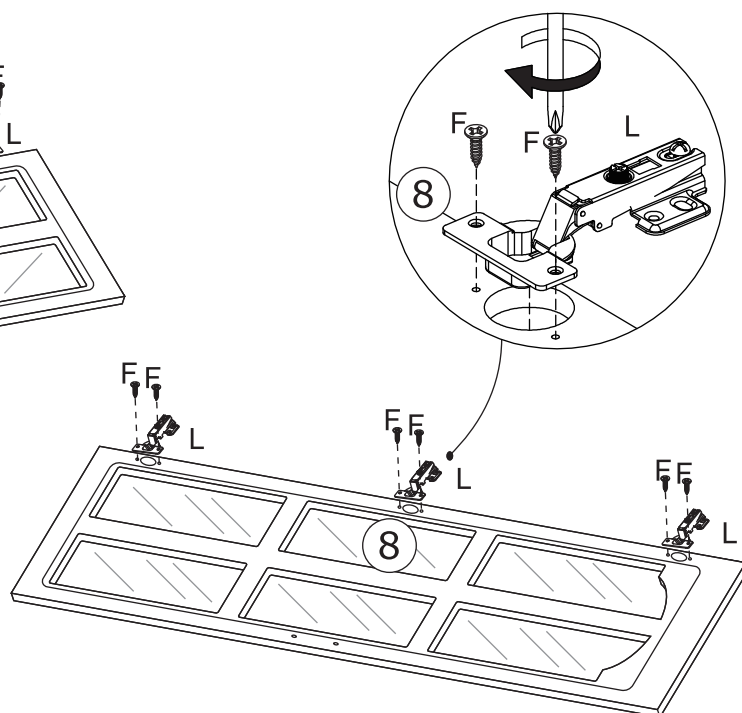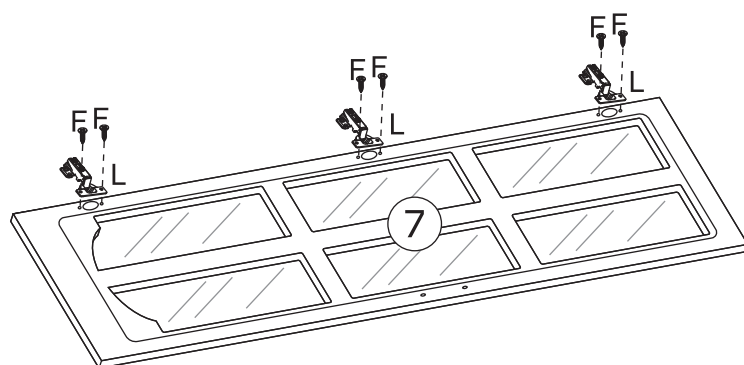


14



Fx40



 Ø4x14mm

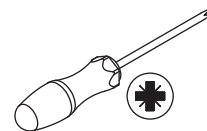

  Assemble door 7 to board 2; door 8 to board 5;
door 13 to board 10; door 14 to board 12 by fixing
hinge(L) with screw(F) as shown.

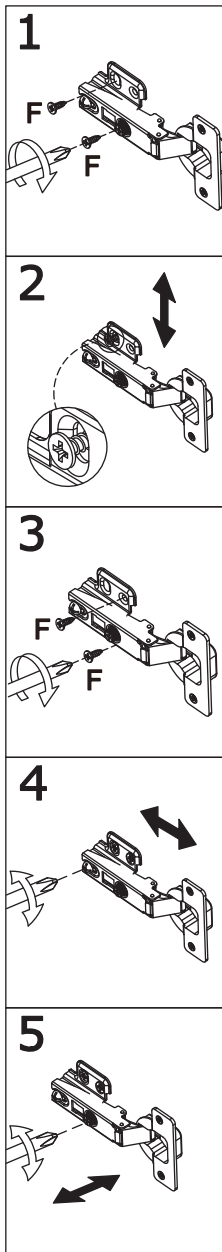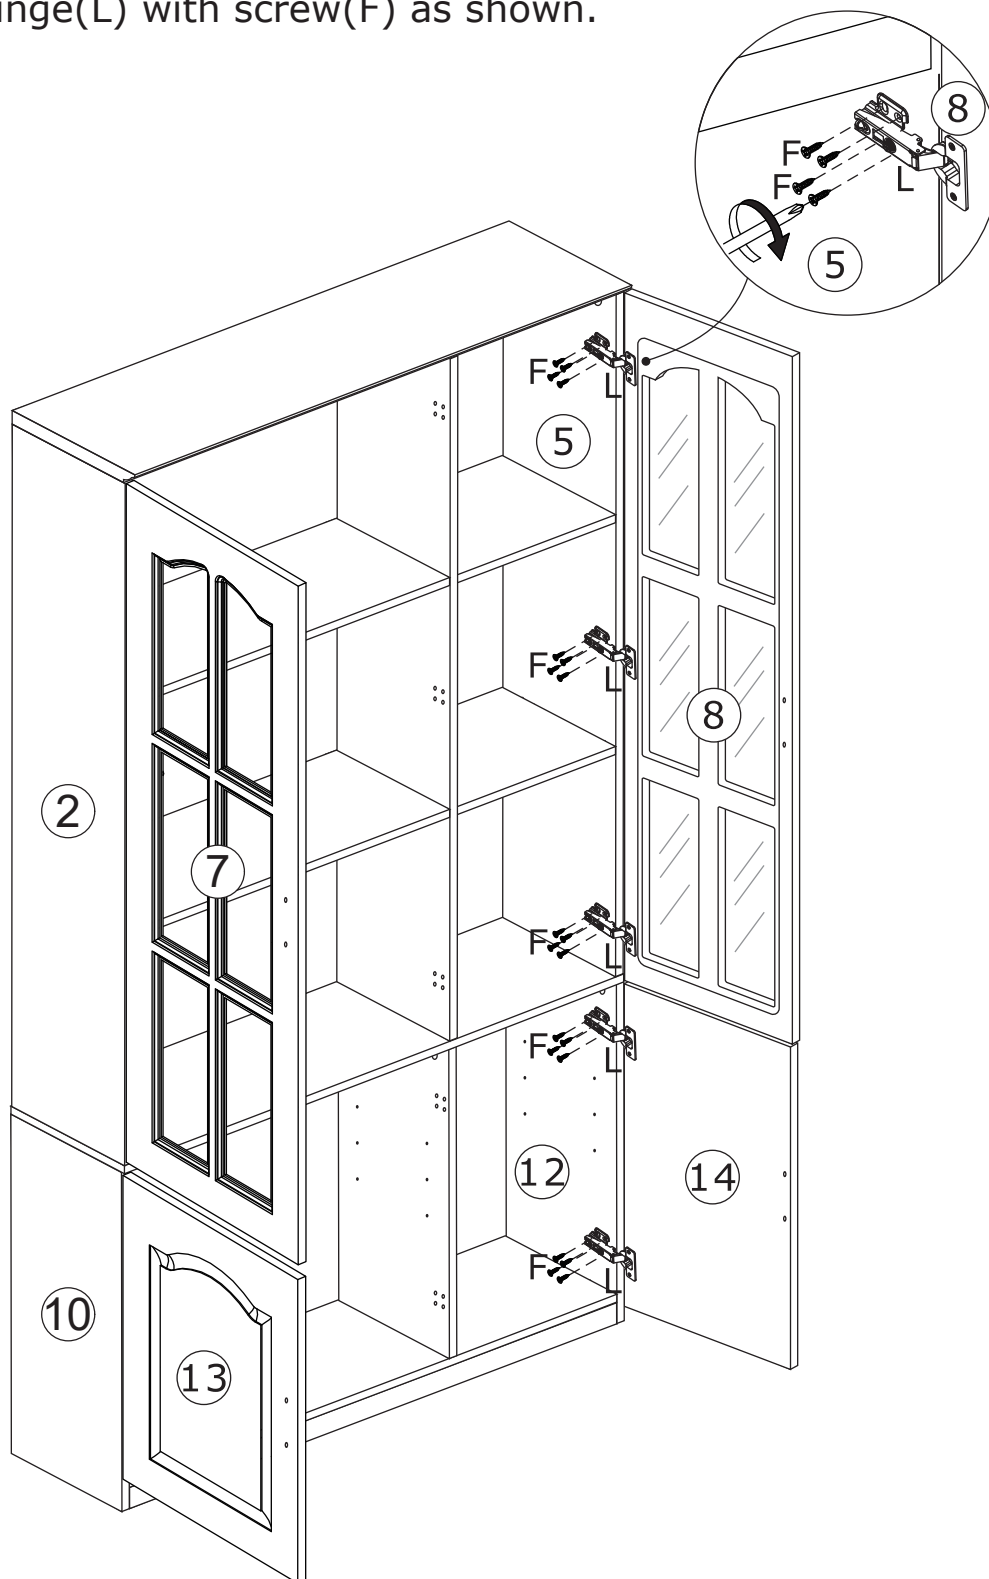


15

Fx10




Ø4x14mm

 Kx5

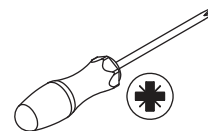

 Fix hinge(K) to another board 8 and 14 with screw(F) as shown.

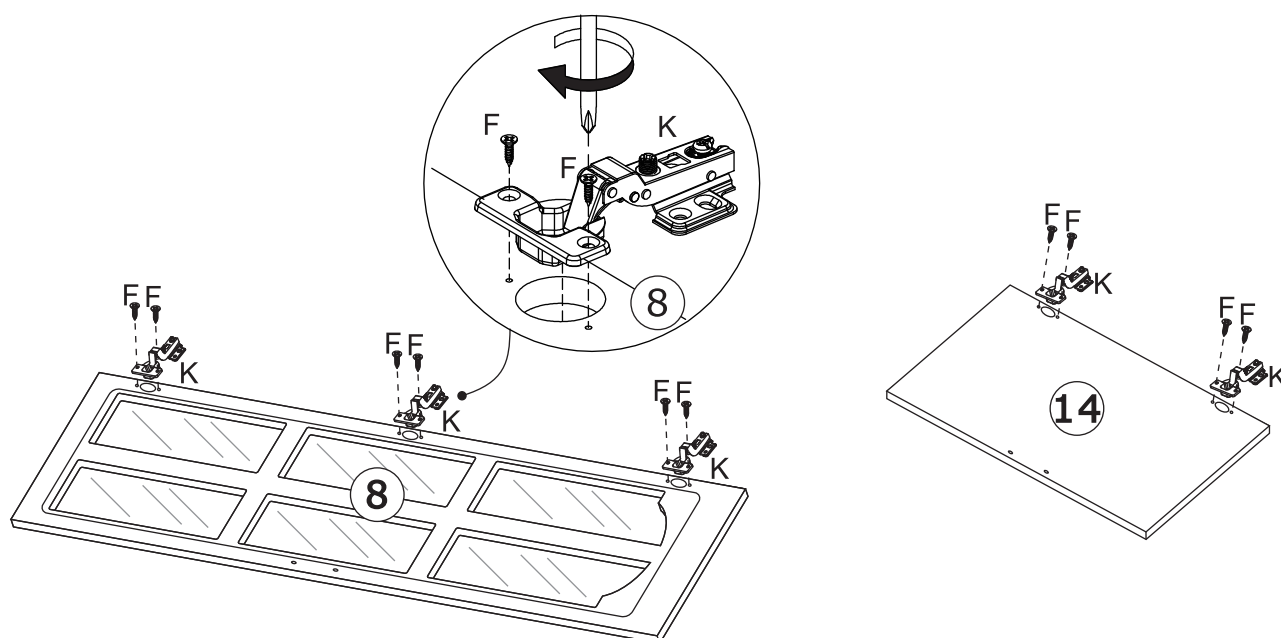


16




Fx20



 Ø4x14mm

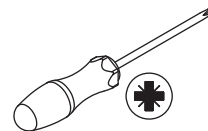

   Assemble another door 8 to board 3;
door 14 to board 11 by fixing hinge(K)
with screw(F) as shown.

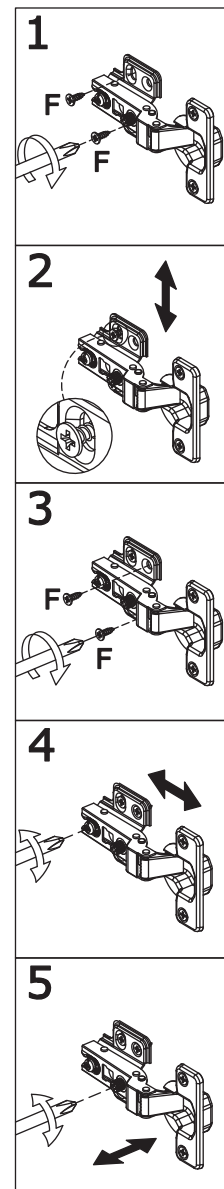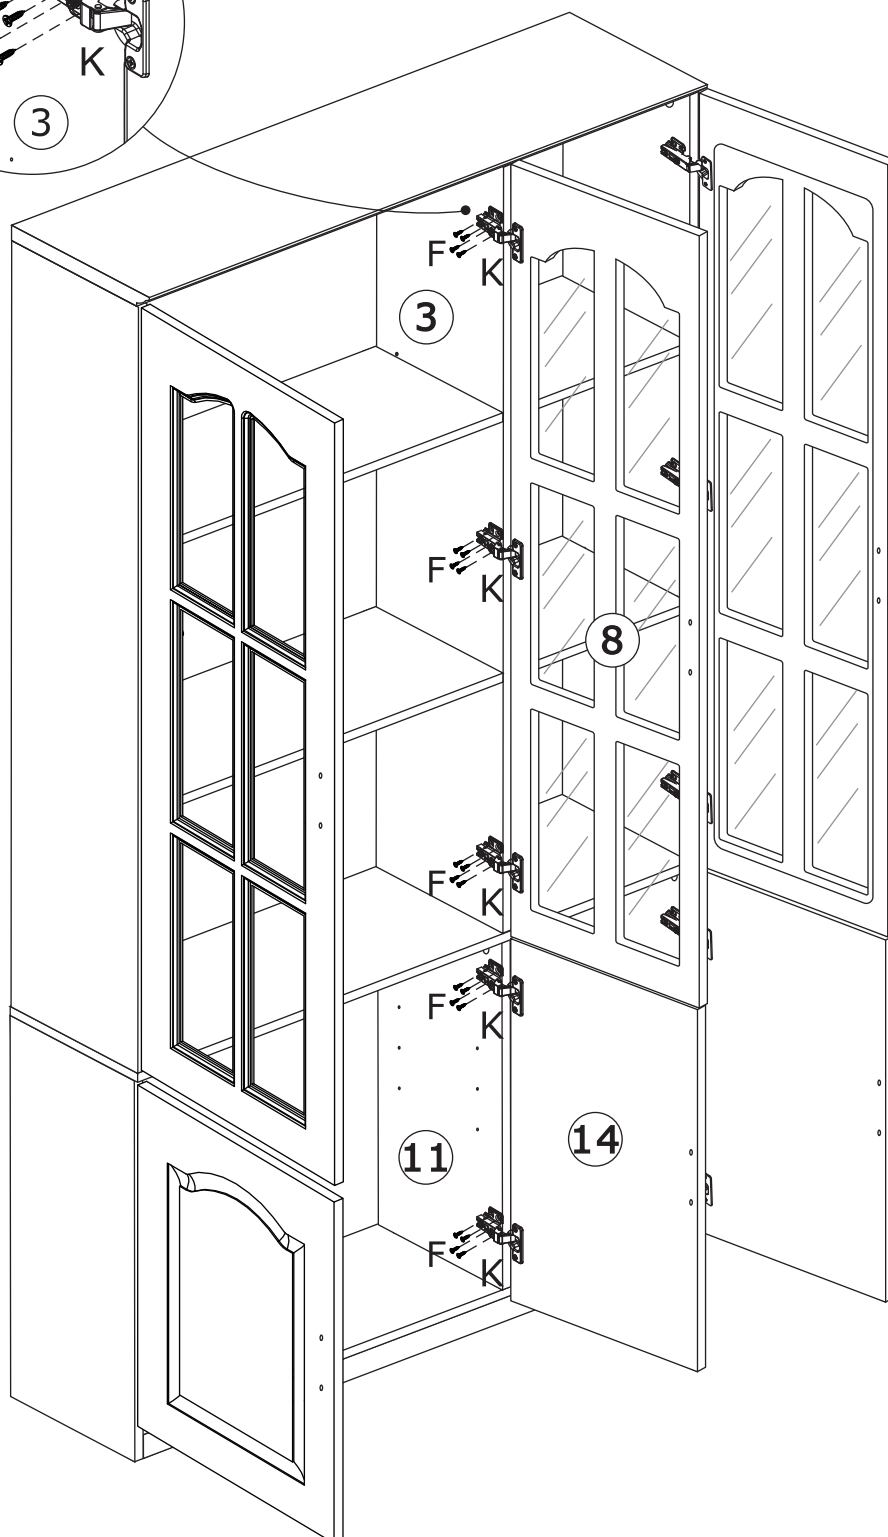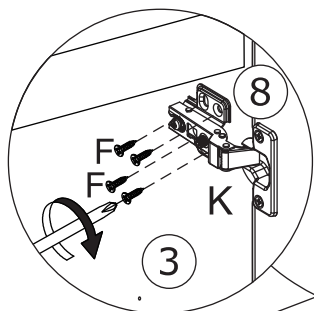

17

Gx6




Jx12




Ø4x18mm

 Ex8

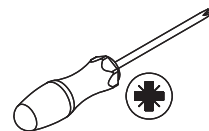

 
Fix handle(G) with screw(J).
Insert layer pin(E) into.

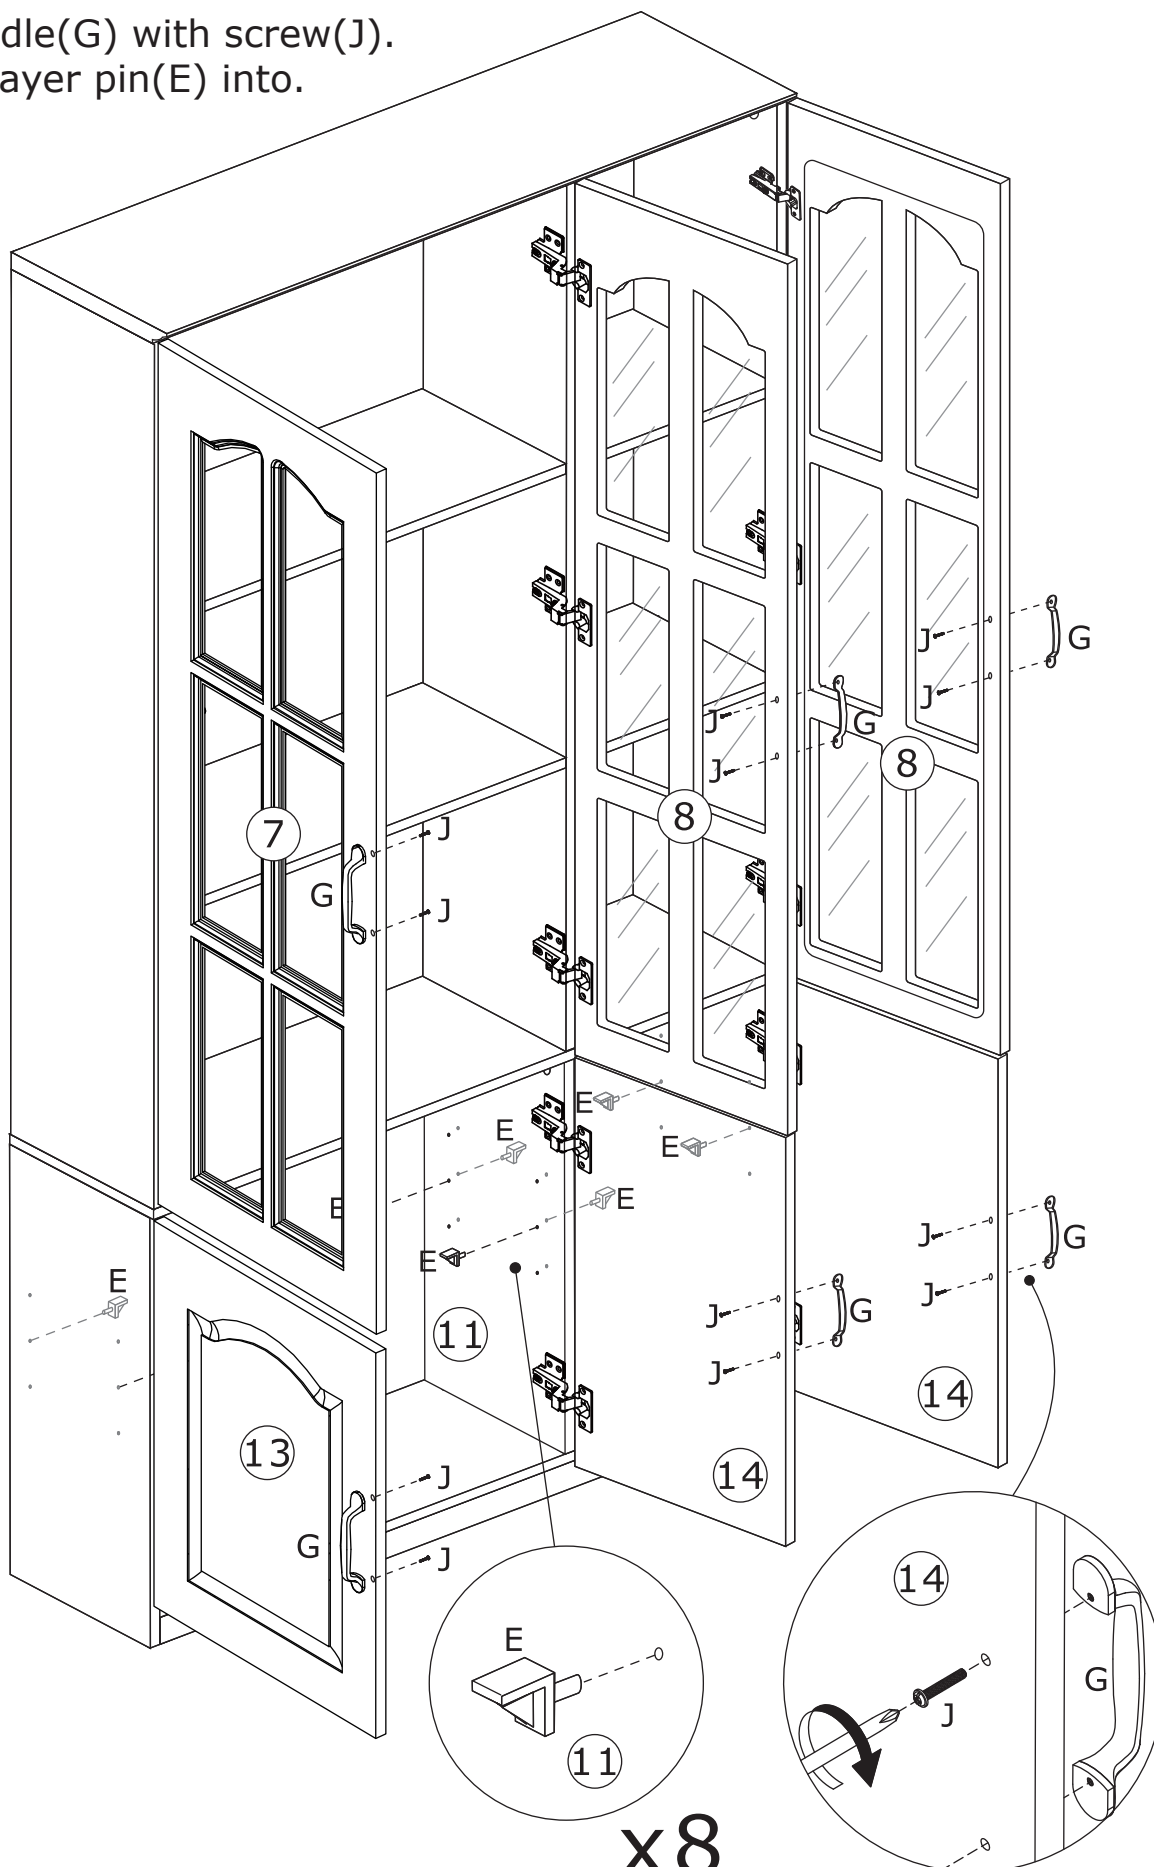

x8


18

 Place shelf board 24 and 25 in.

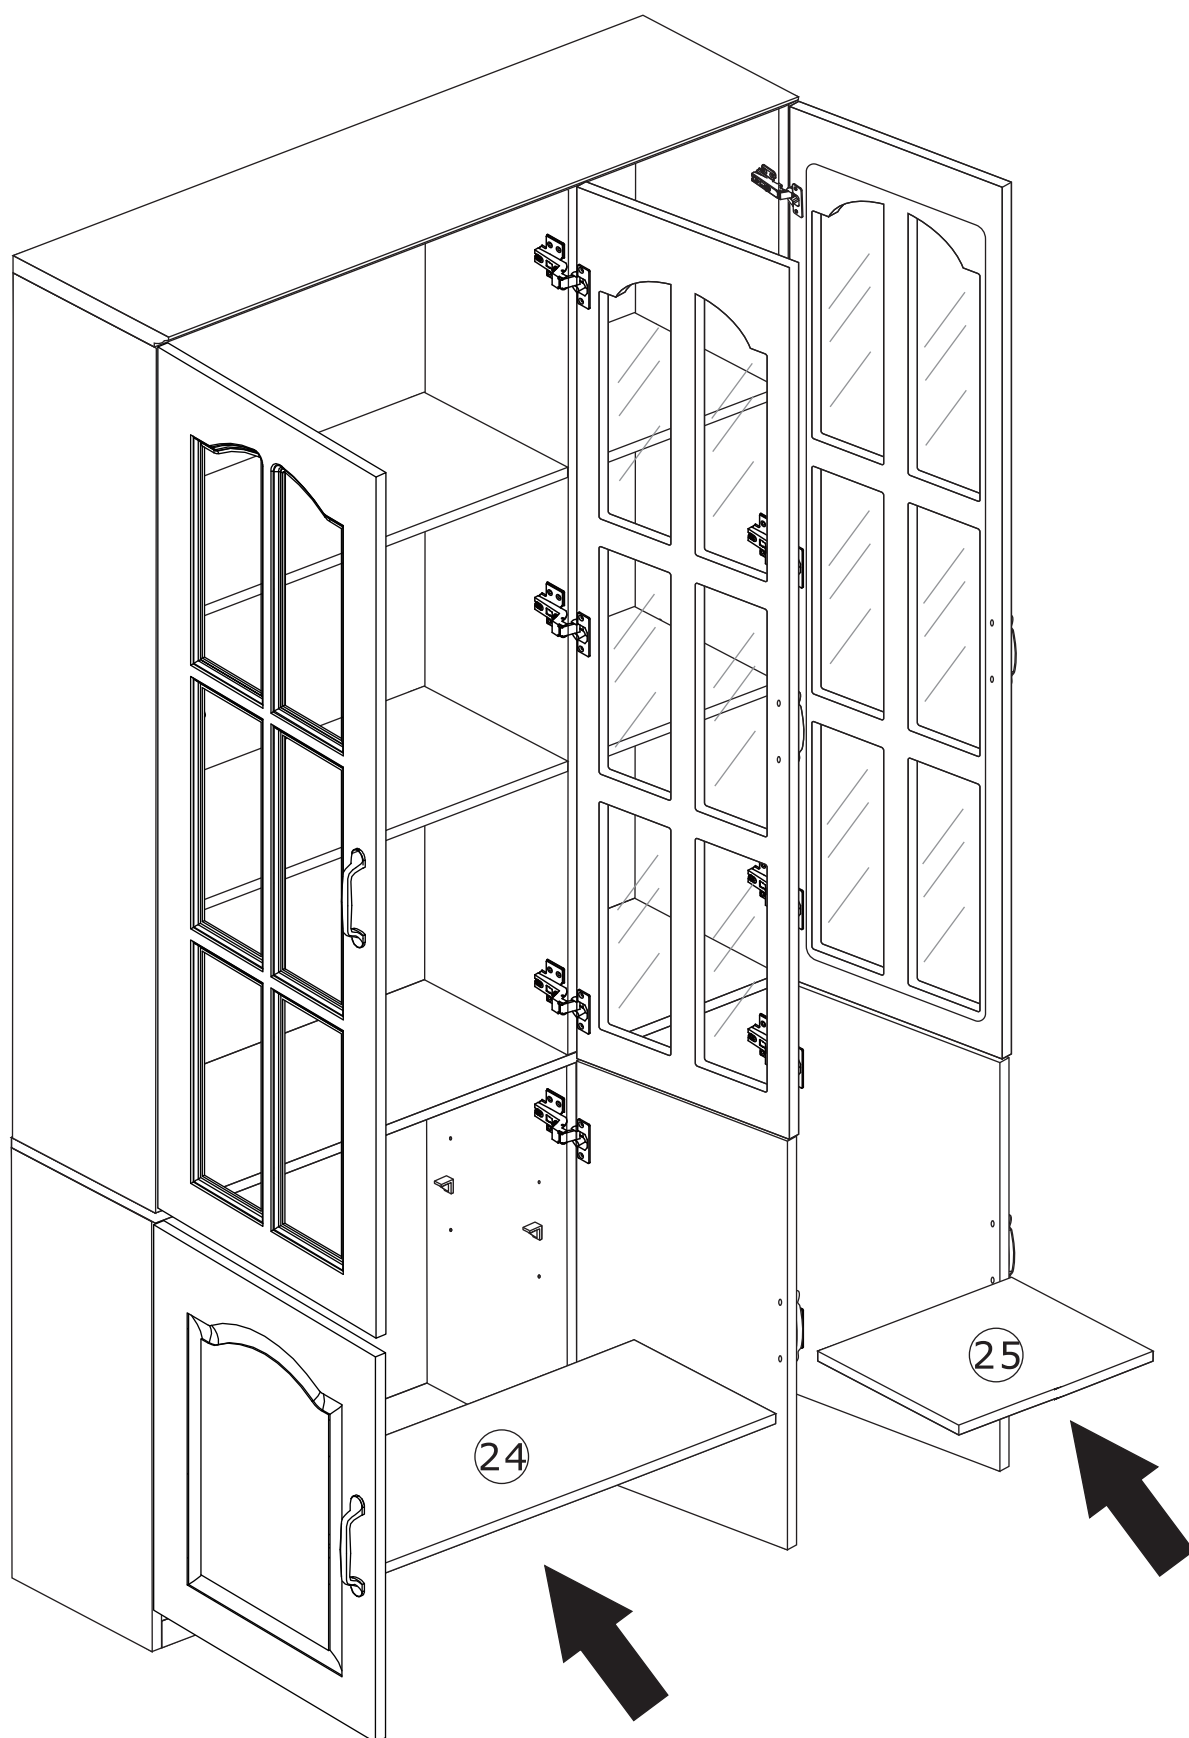

19

 
Mx2





Qx2





 
Ø4x14mm

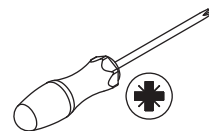

  
Fix part(M) to board 1 with screw(Q) as shown.

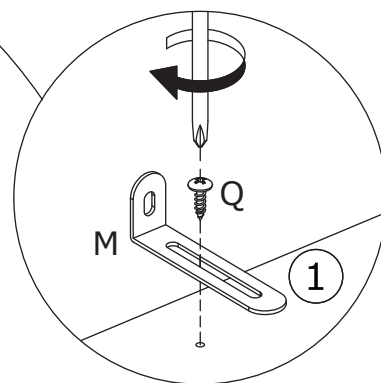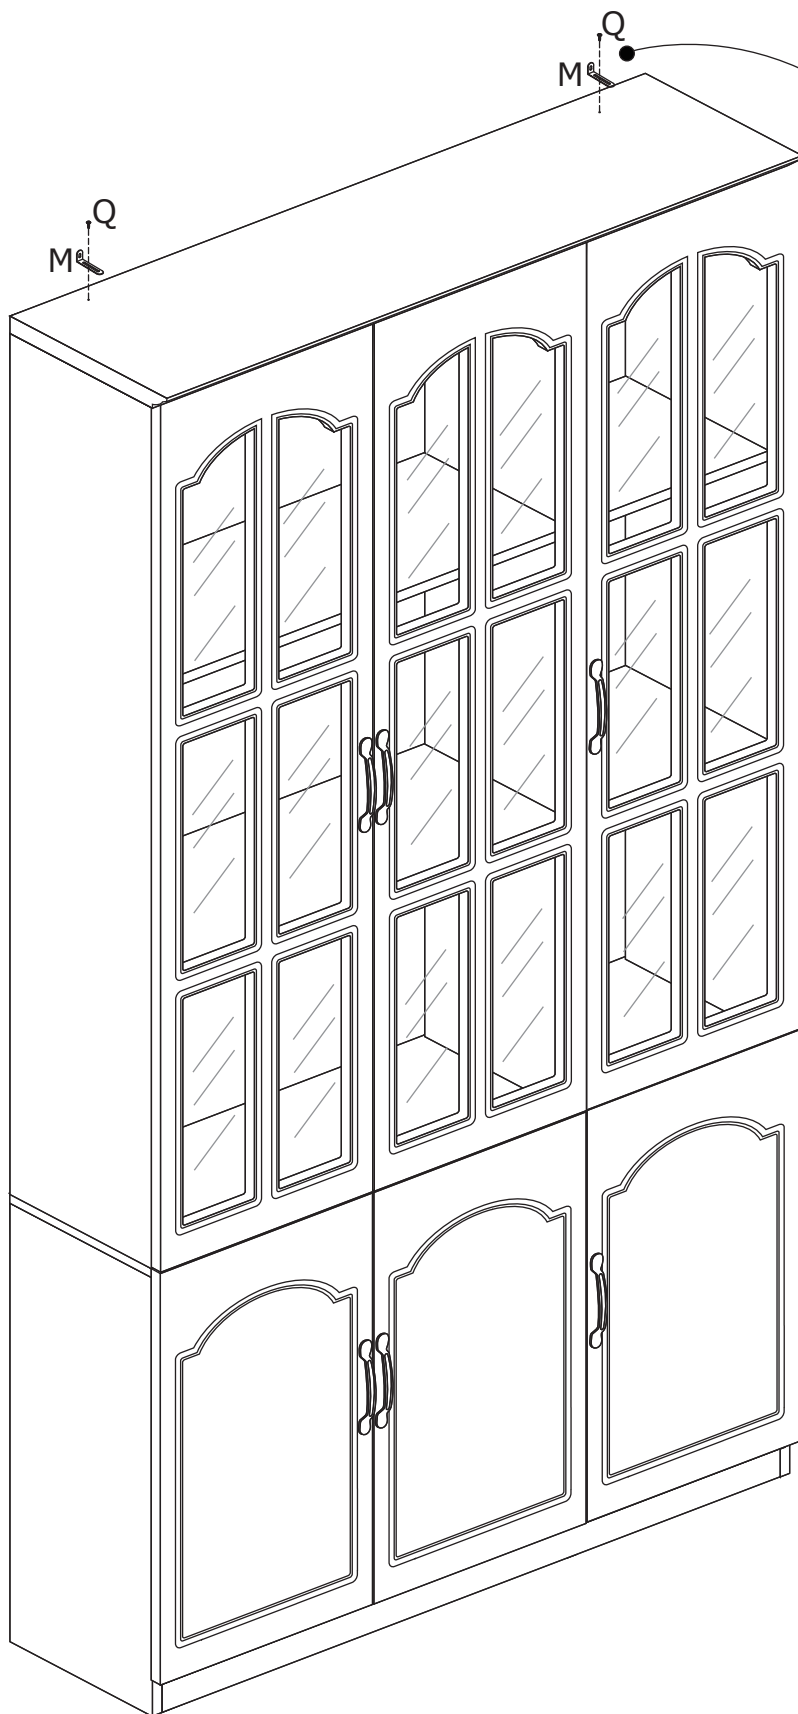

20









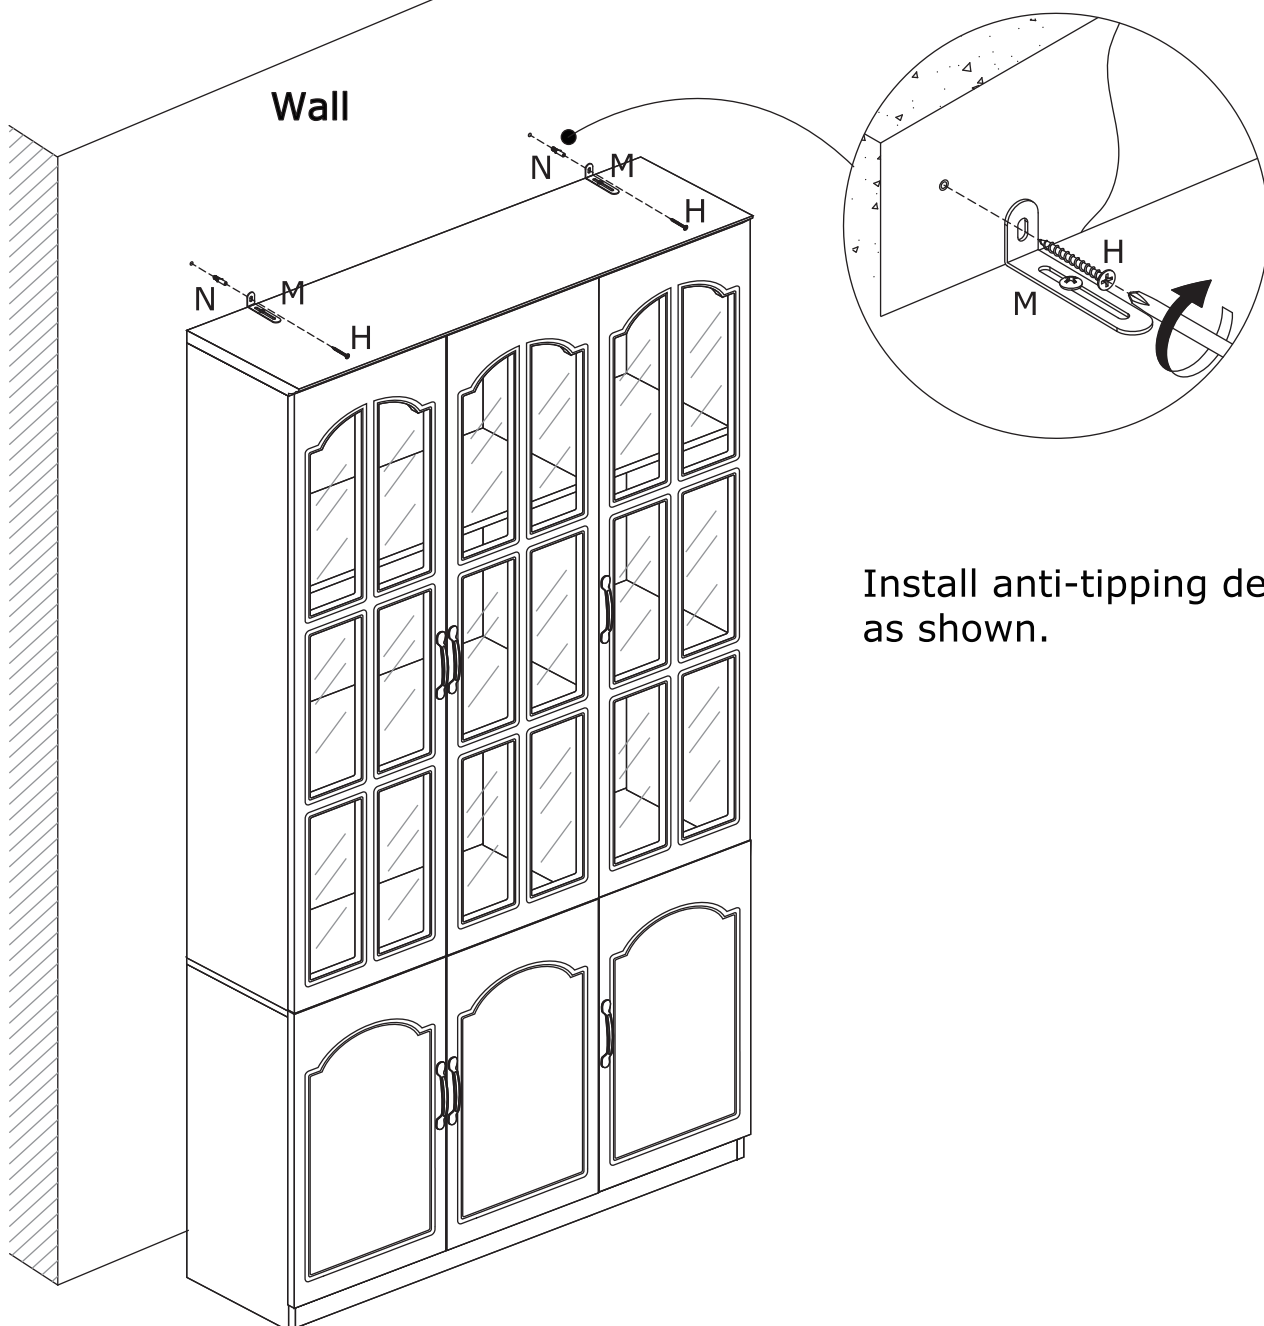 
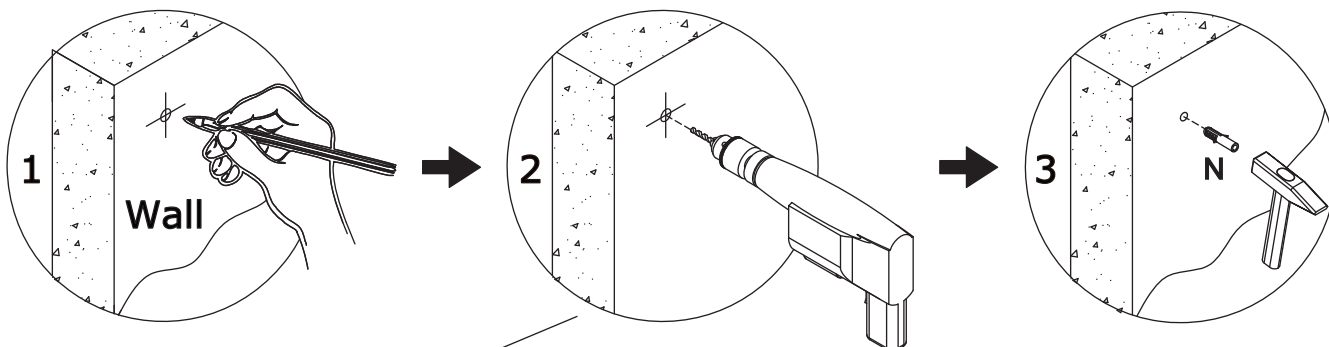 
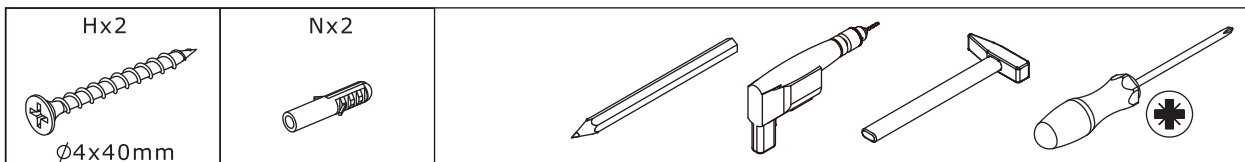 


Install anti-tipping device as shown.

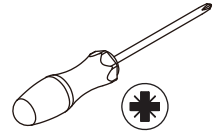 

If doors are still not aligned if the hinges are properly correctly,
please watch the video.
           
<https://youtu.be/n0Lb36SoODM>

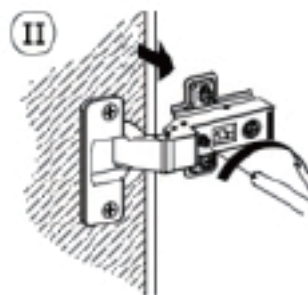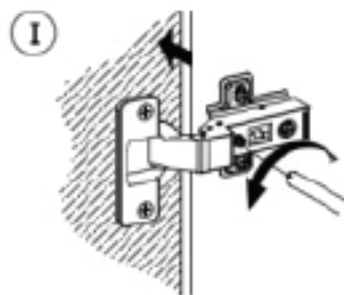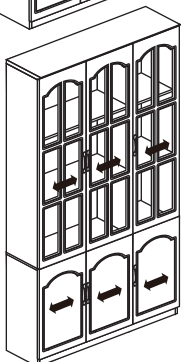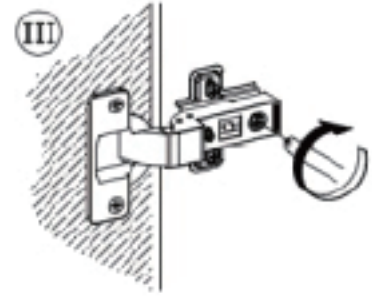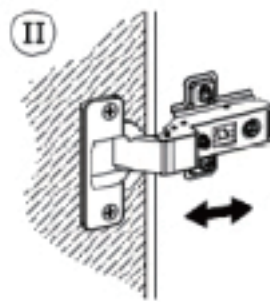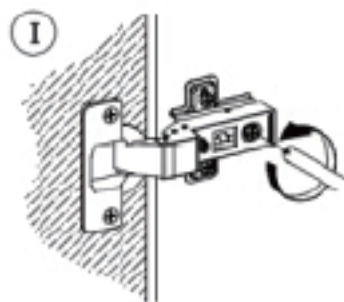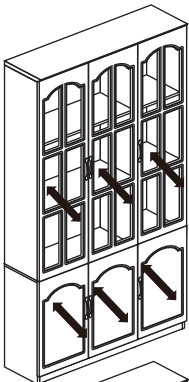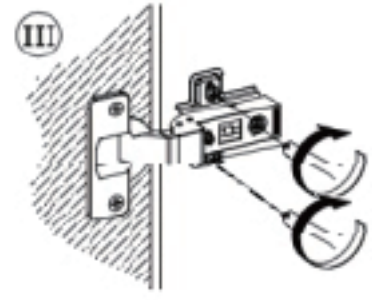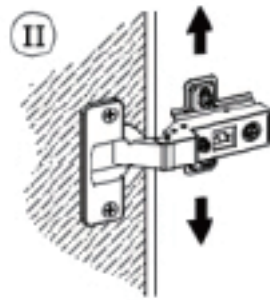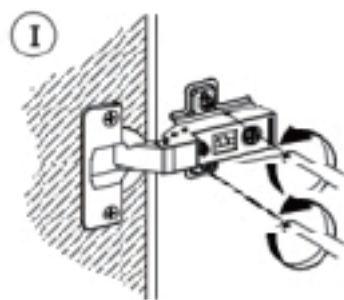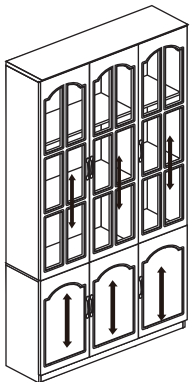

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

 
 
DEFECTIVE ITEMS

 
- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.



Cabinet

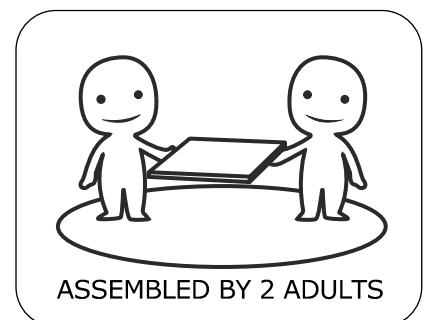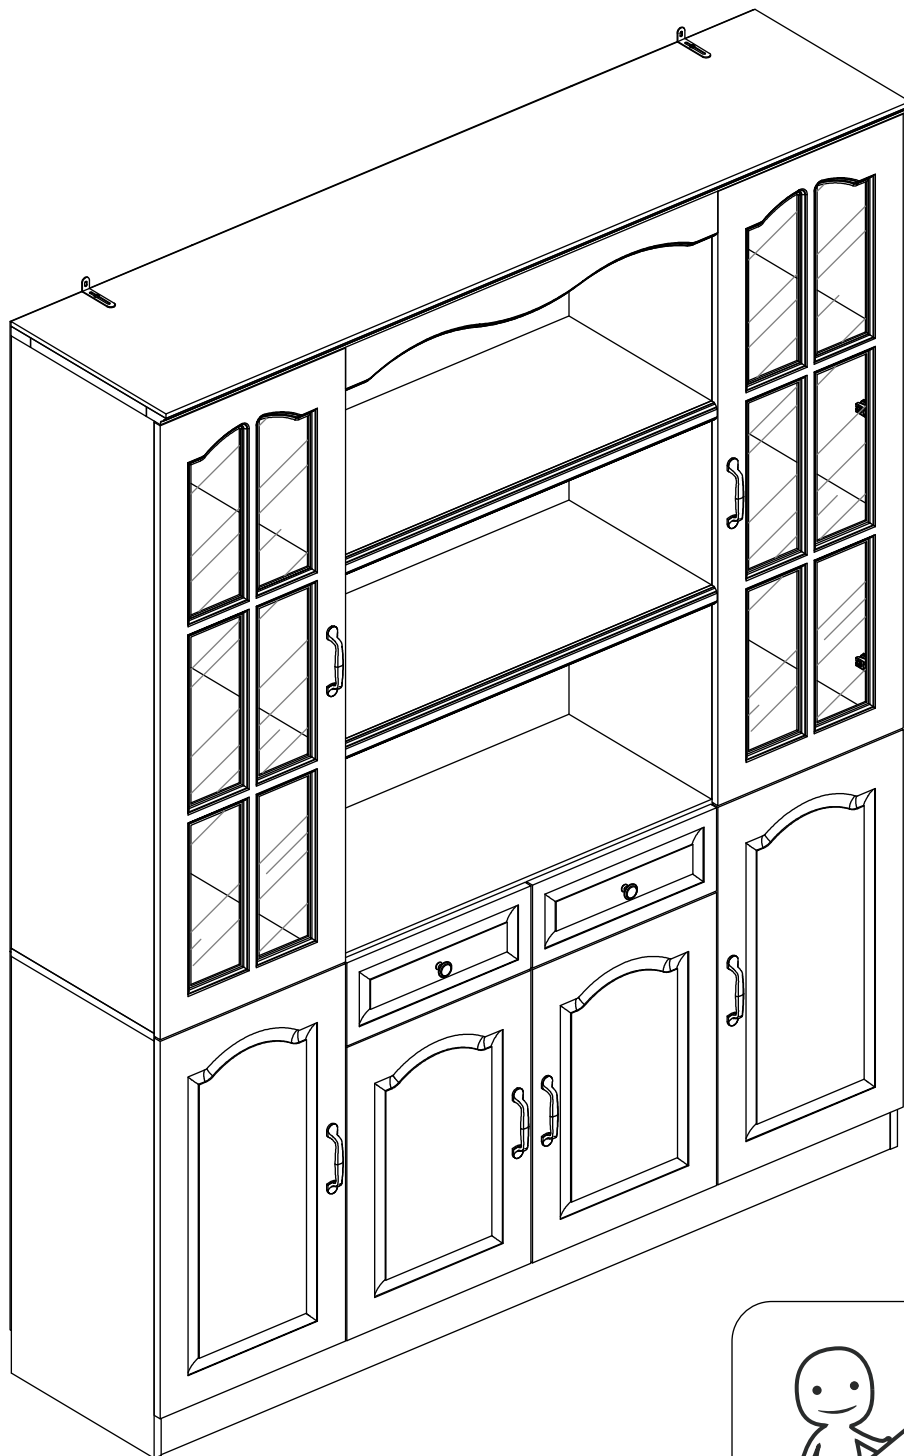

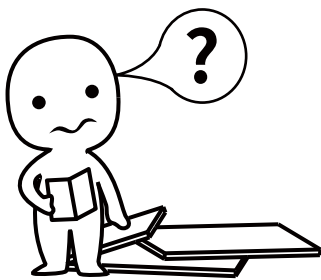


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

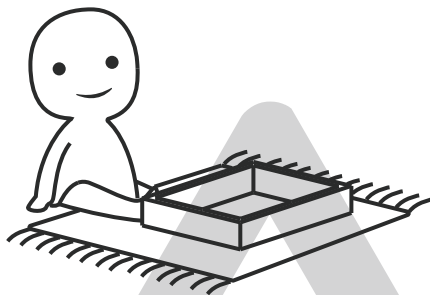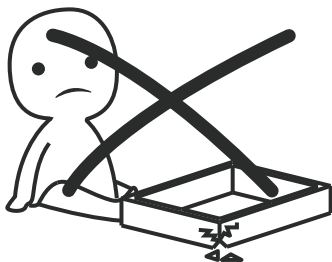



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

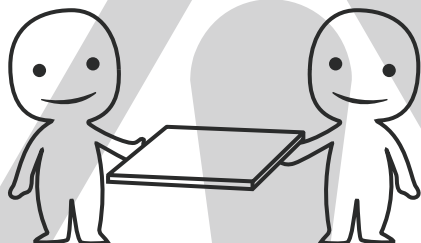

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

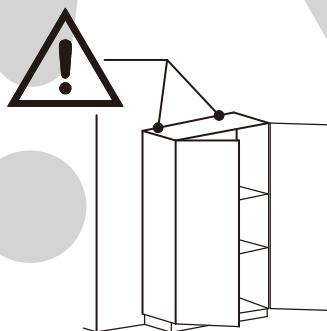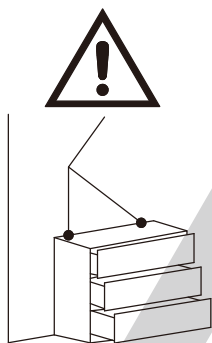

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !

 
 
 
 
 
 
It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.




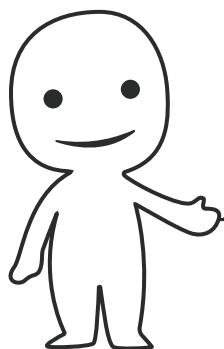



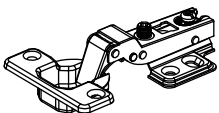
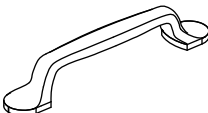
 
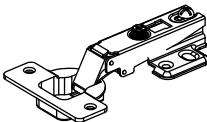



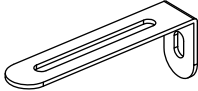


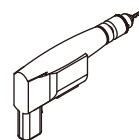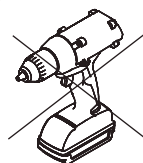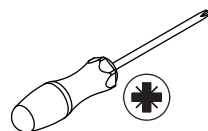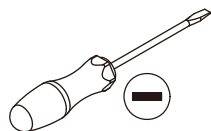Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

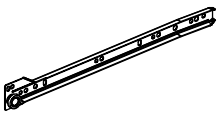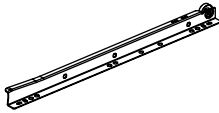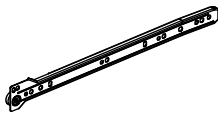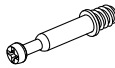


Please prepare the following tools



When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

CL x 2 	DL x 2 	DR x 2 	CR x 2 	A x 81  Ø6x35mm
B x 81  Ø14x9mm	C x 74  Ø8x30mm	D x 14  Ø4x40mm	E x 24  Ø3.5x12mm	F x 69  Ø2.5x10mm
G x 84  Ø4x14mm	H x 4 	J x 6 	K x 8 	L x 10 
M x 10  Ø4x30mm	N x 2  M4x20mm	P x 2 	Q x 2  Ø4x14mm	R x 2 
S x 2 	T x 2 	U x 12  M4x18mm		

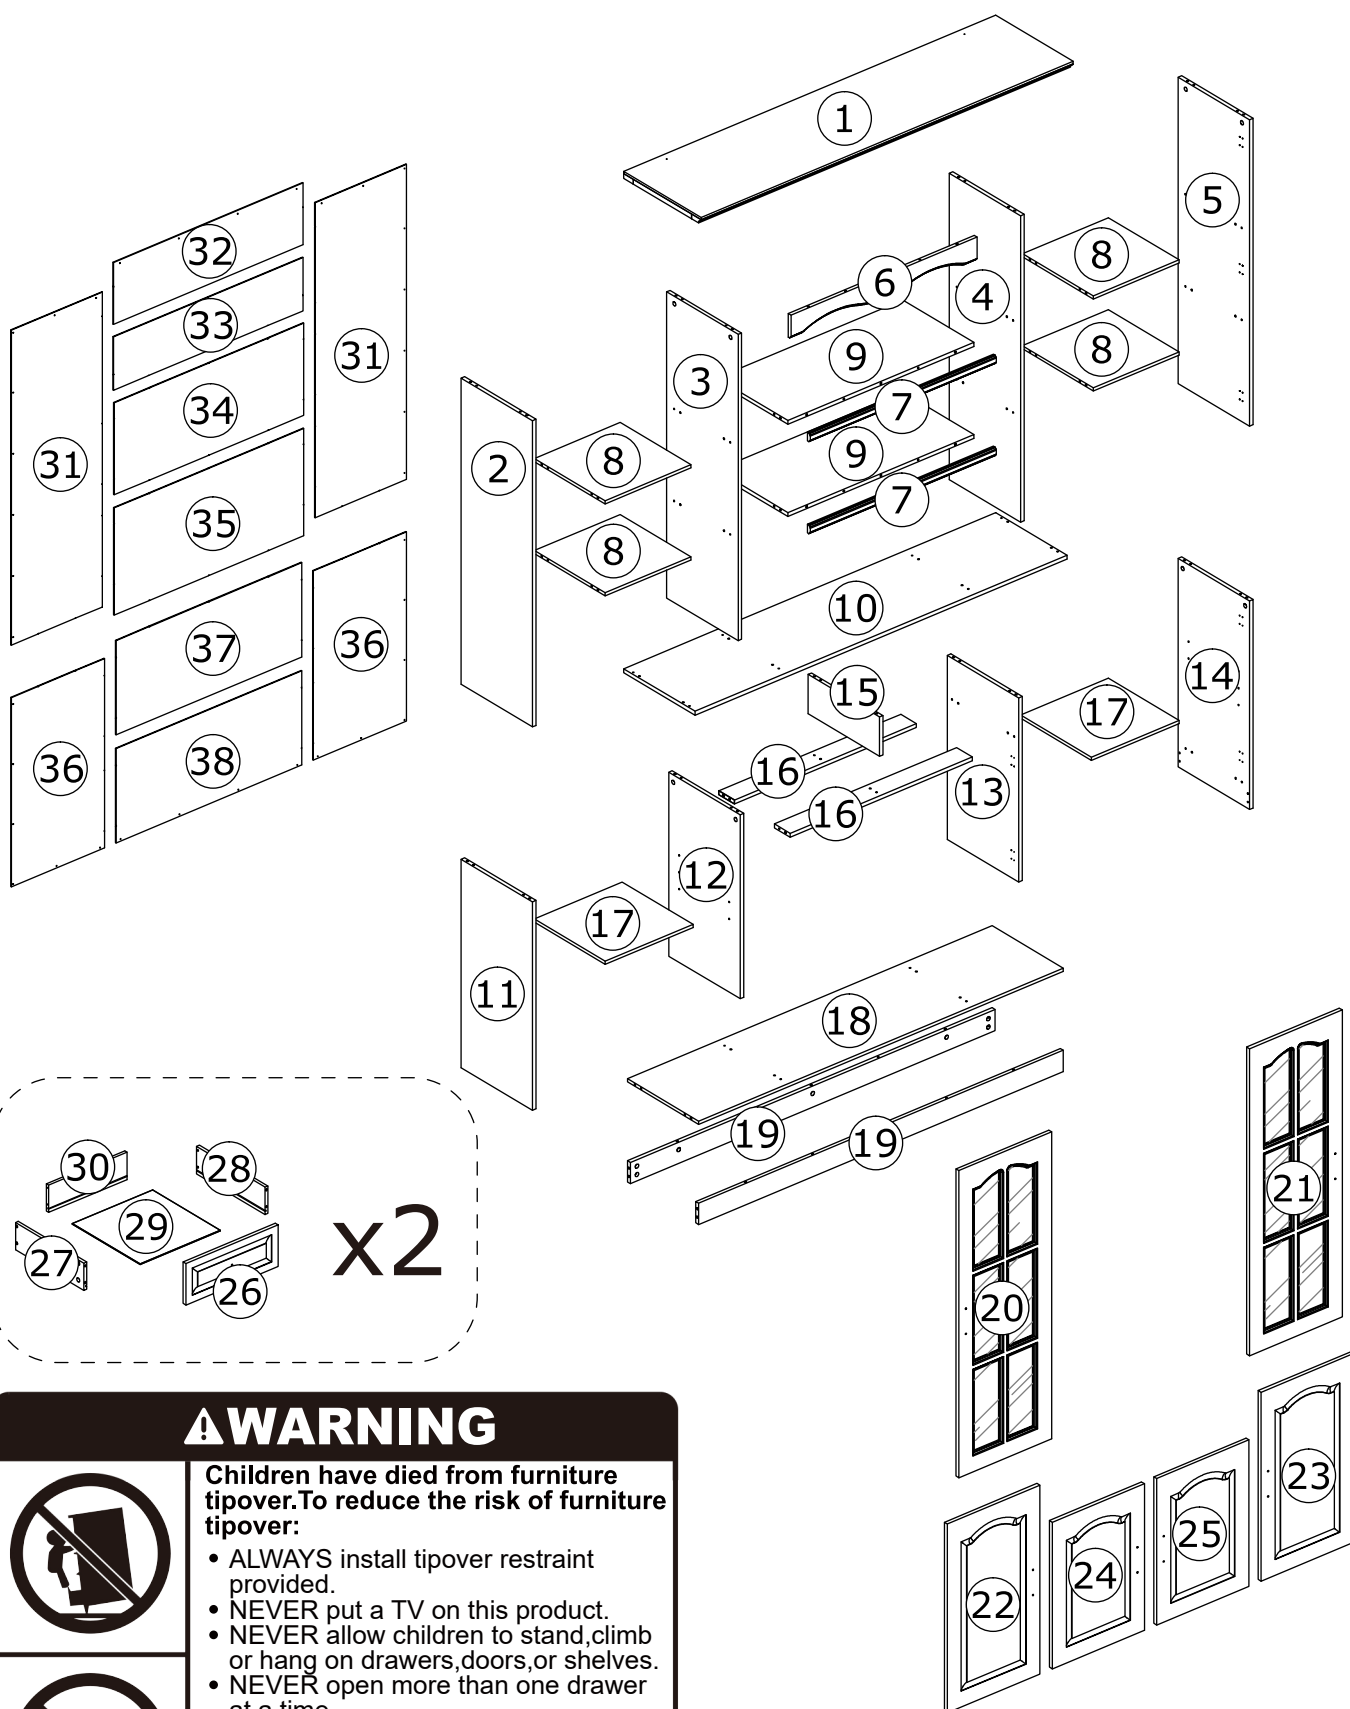 


⚠ WARNING






Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

























 
*This is a permanent label.
Do not remove!*

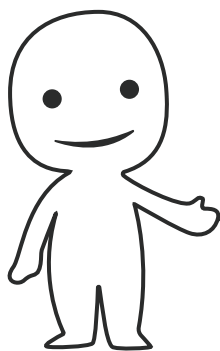


Please prepare the following tools

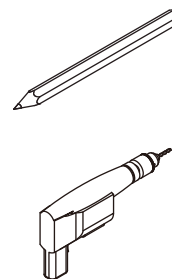 
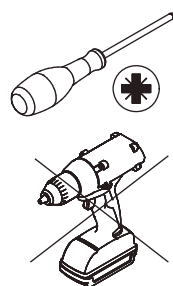 
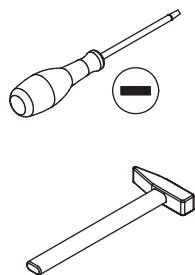 


                          When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

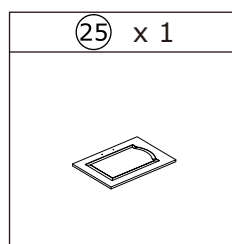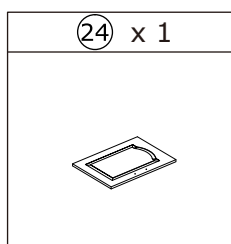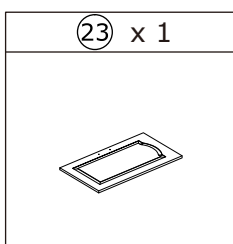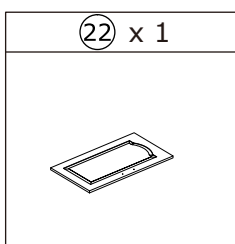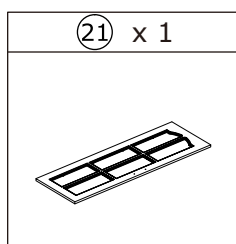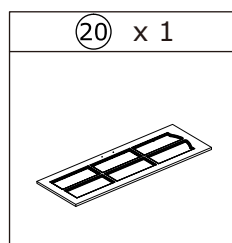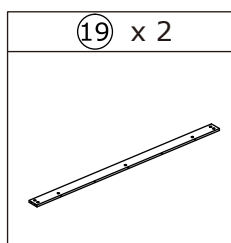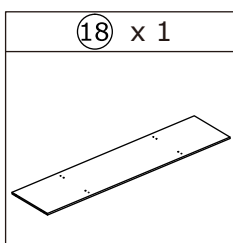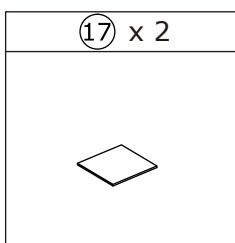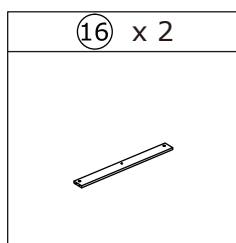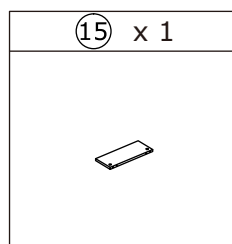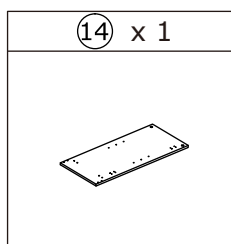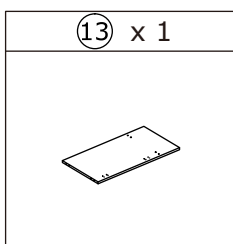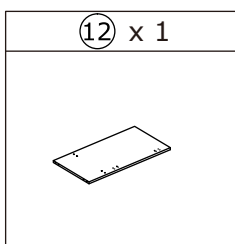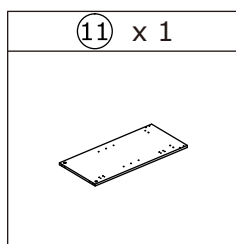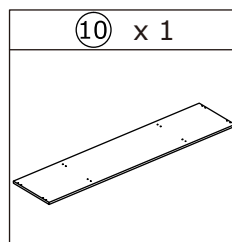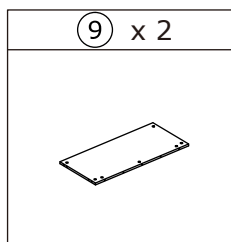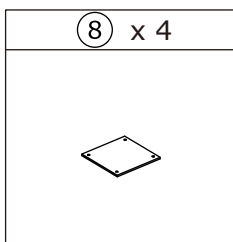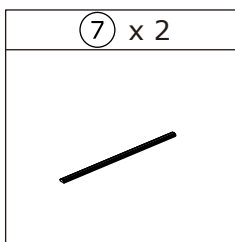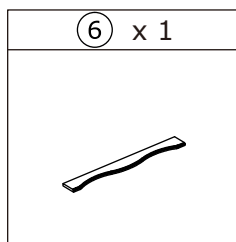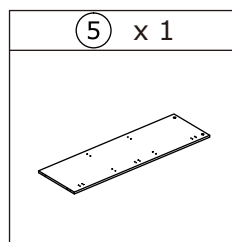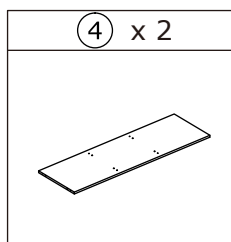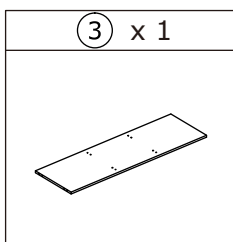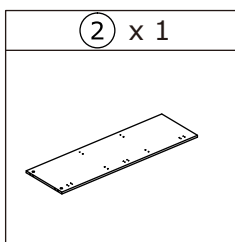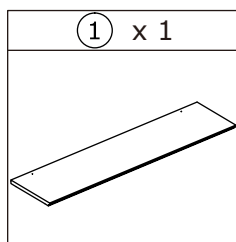

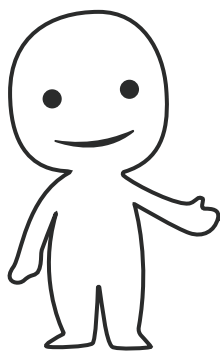



Please prepare the following tools

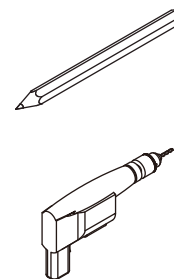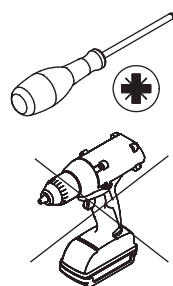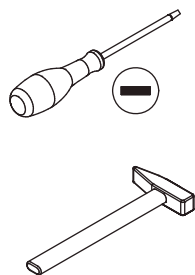   



When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

<div>②⑥ x 2</div>	<div>②⑦ x 2</div>	<div>②⑧ x 2</div>	<div>②⑨ x 2</div>	<div>③⑦ x 2</div>
<div>③① x 2</div>	<div>③② x 1</div>	<div>③③ x 1</div>	<div>③④ x 1</div>	<div>③⑤ x 1</div>
<div>③⑥ x 2</div>	<div>③⑦ x 1</div>	<div>③⑧ x 1</div>		


 
 
1

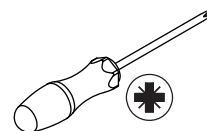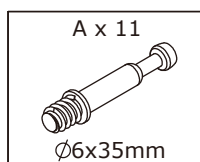

 
 
Screw eccentric rod(A) into board 1 with a screwdriver as shown.

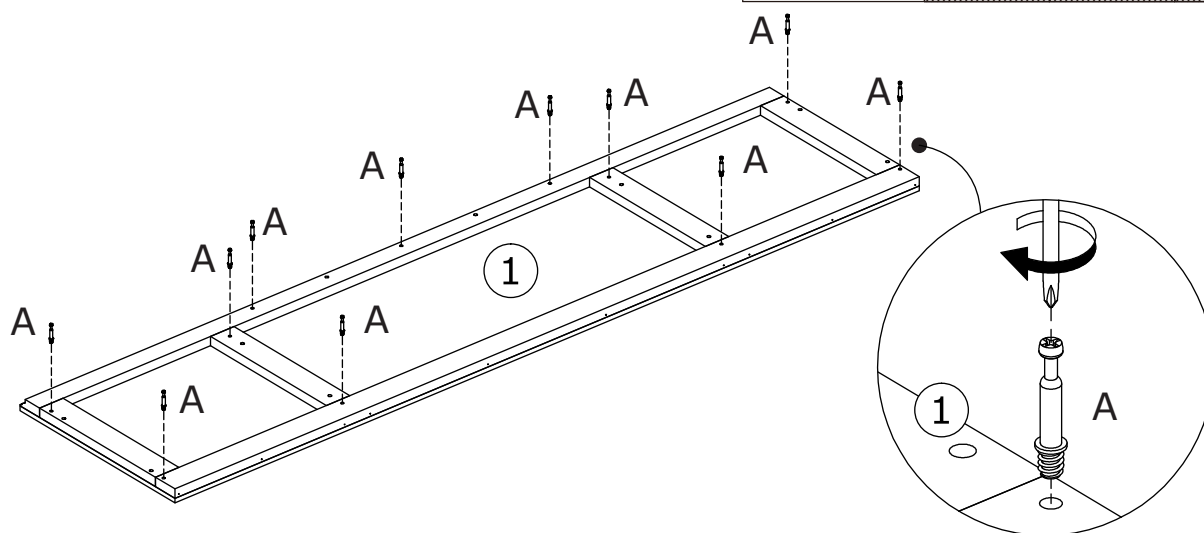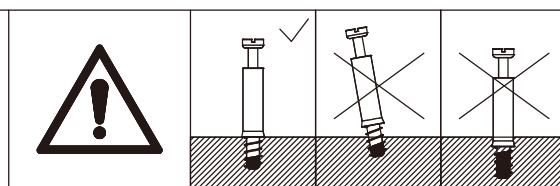



2

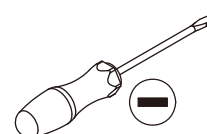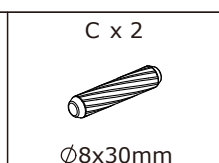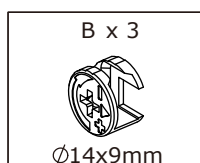   


 
 
Attach board 6 to board 1 using wooden dowel(C) at first, add cam lock(B) into board 6 and turn clockwise to tighten as shown.

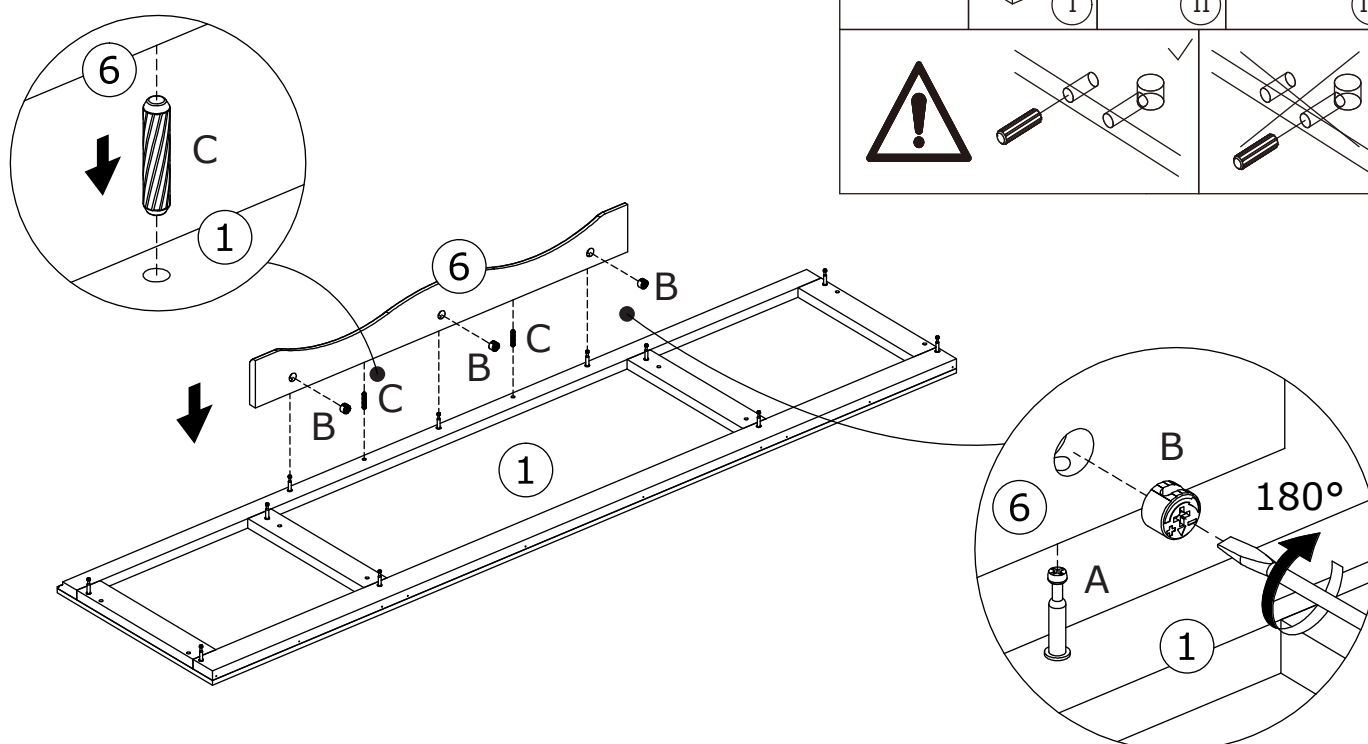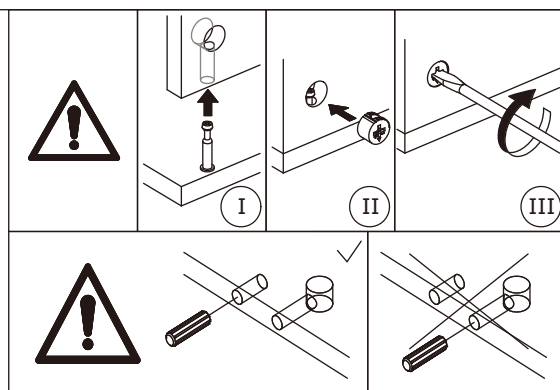

3


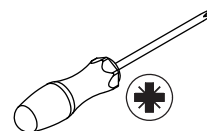 
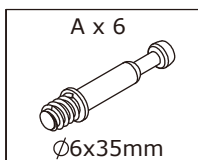 


   Screw eccentric rod(A) into board 7 with a screwdriver as shown.


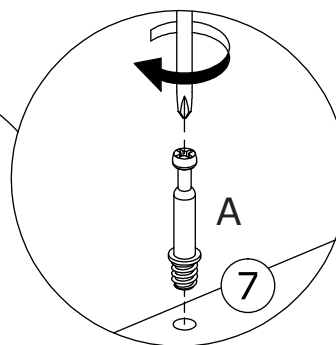
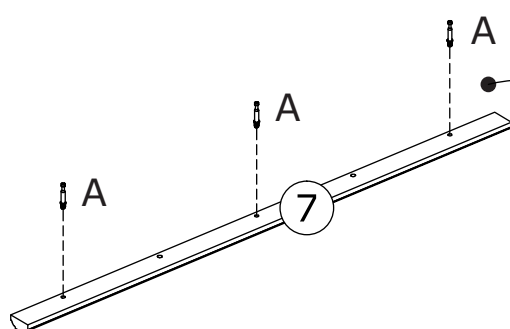
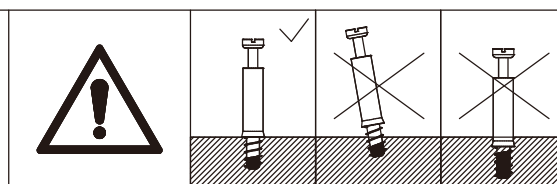


x2

   4

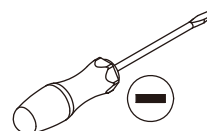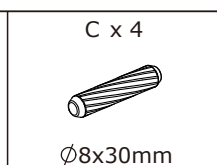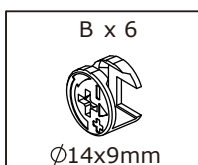

    Attach board 7 to board 9 using wooden dowel(C) at first, add cam lock(B) into board 9 and turn clockwise to tighten as shown.

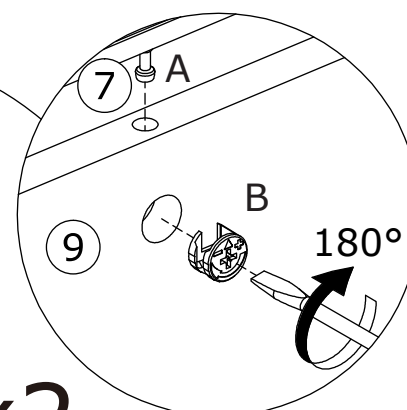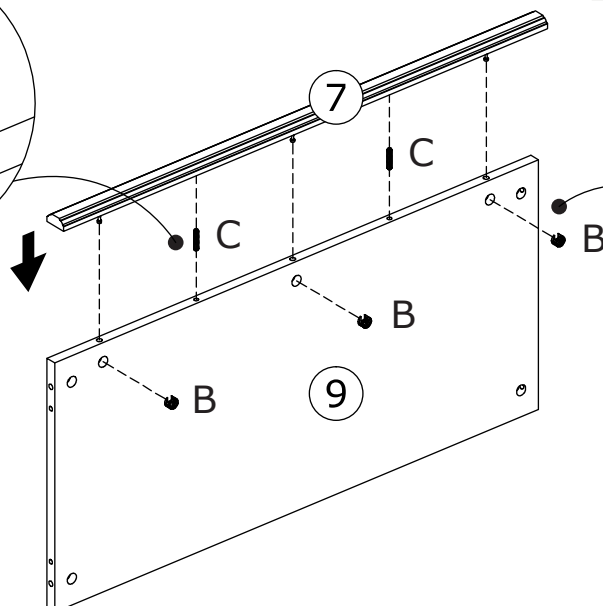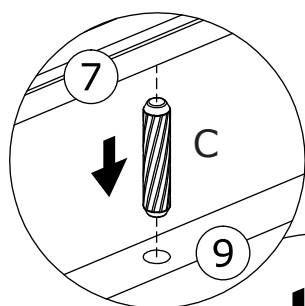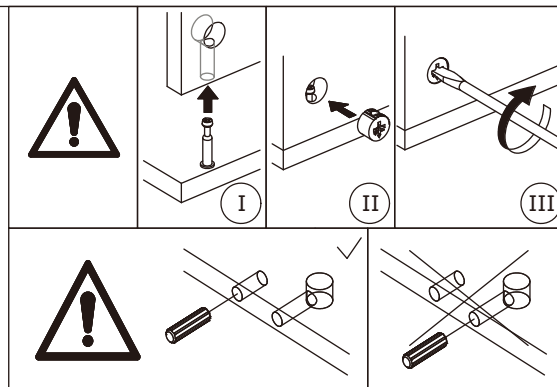


x2

5



A x 8



 Ø6x35mm

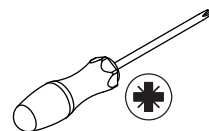

  Screw eccentric rod(A) into board 3 and 4 with a screwdriver as shown.

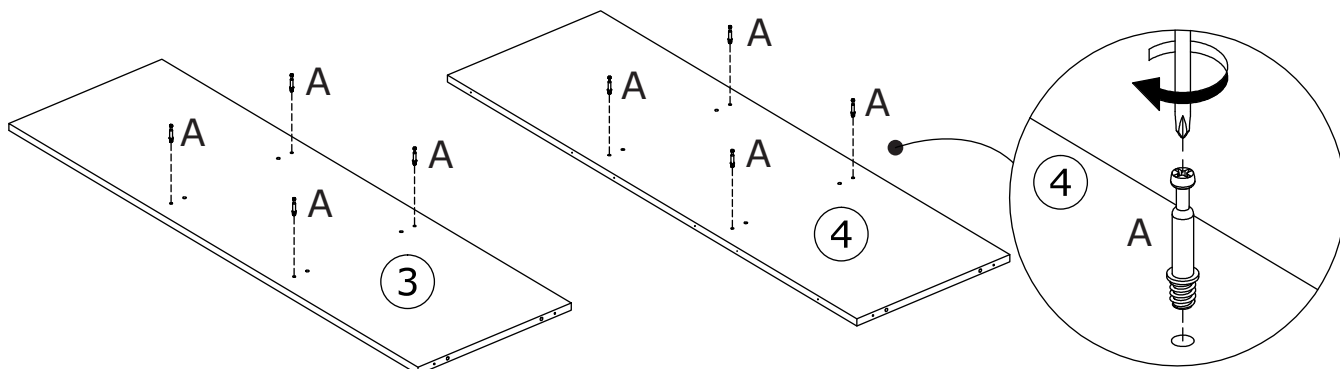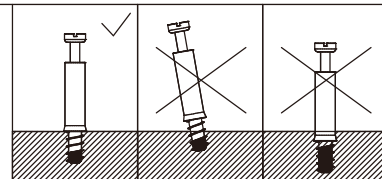

6

B x 8

 


Ø14x9mm




C x 8





Ø8x30mm

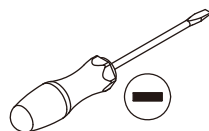

  
 
Connect board 3 and 4 to board 9, add cam lock(B) into board 9 and turn clockwise to tighten as shown.

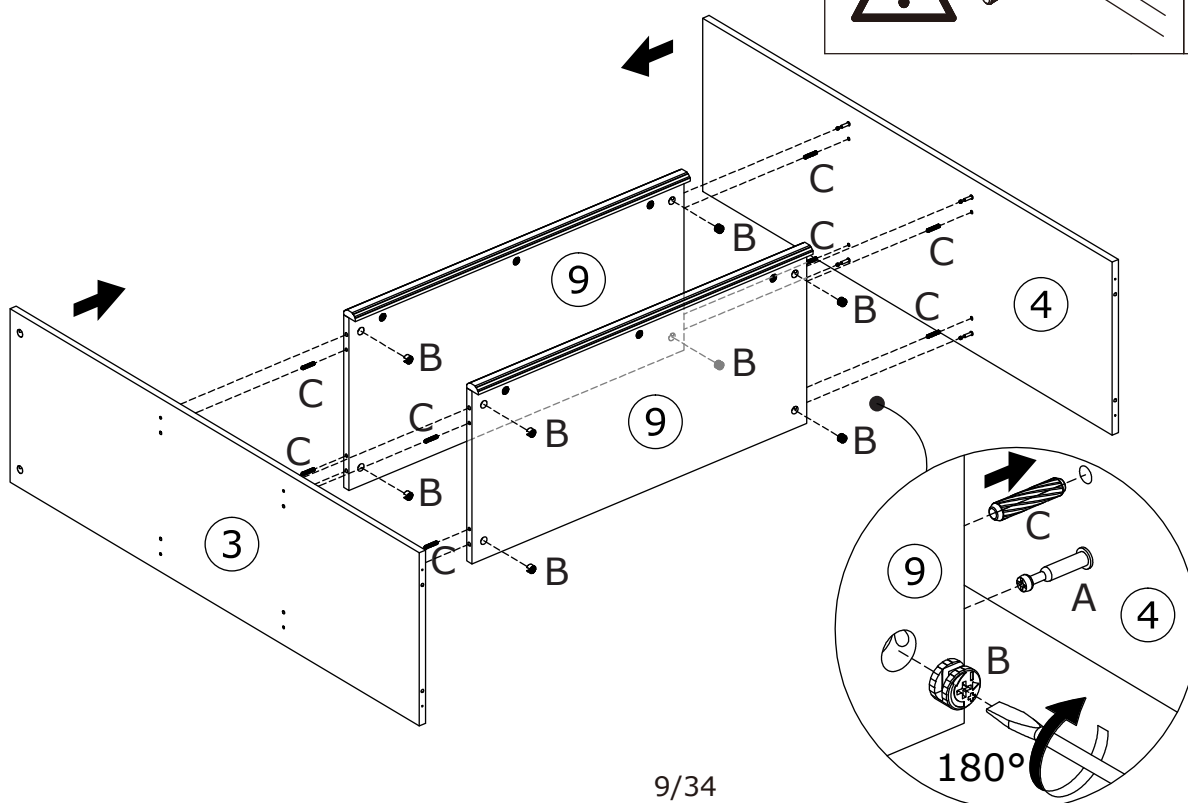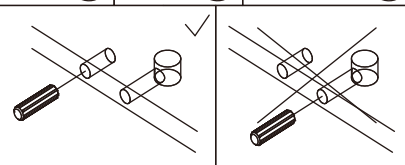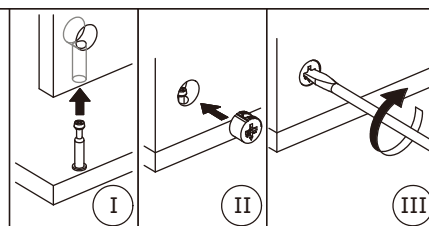




7

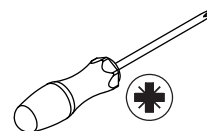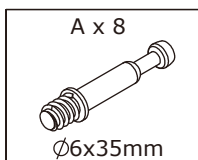  

 
 
Screw eccentric rod(A) into board 3 and 4 with a screwdriver as shown.

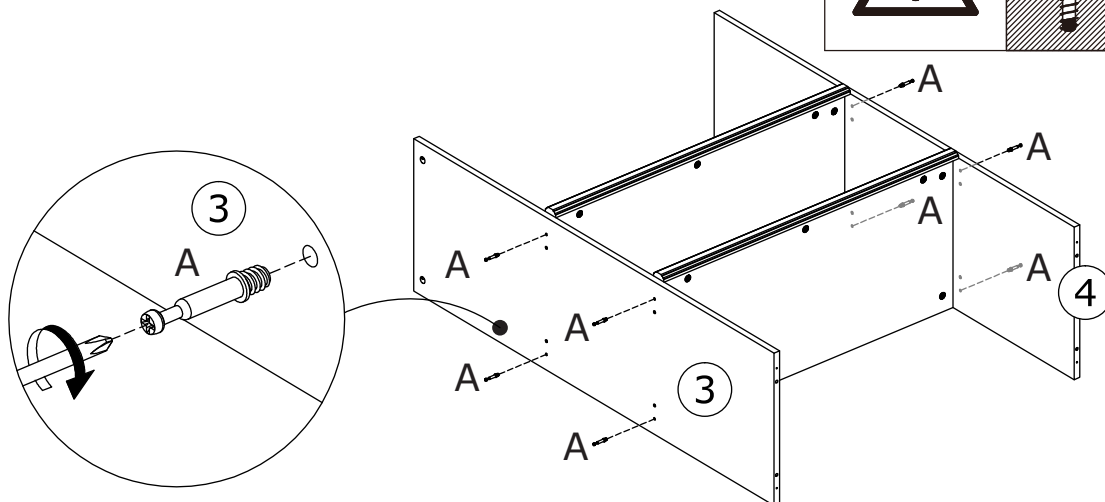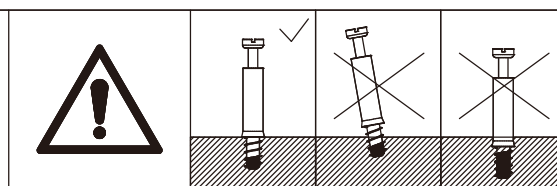



8

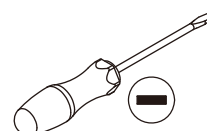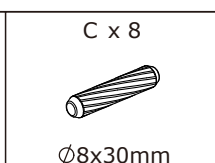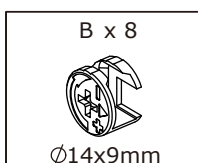   

 
 
Attach board 8 to board 3 and 4 using wooden dowel(C) at first, add cam lock(B) into board 8 and turn clockwise to tighten as shown.

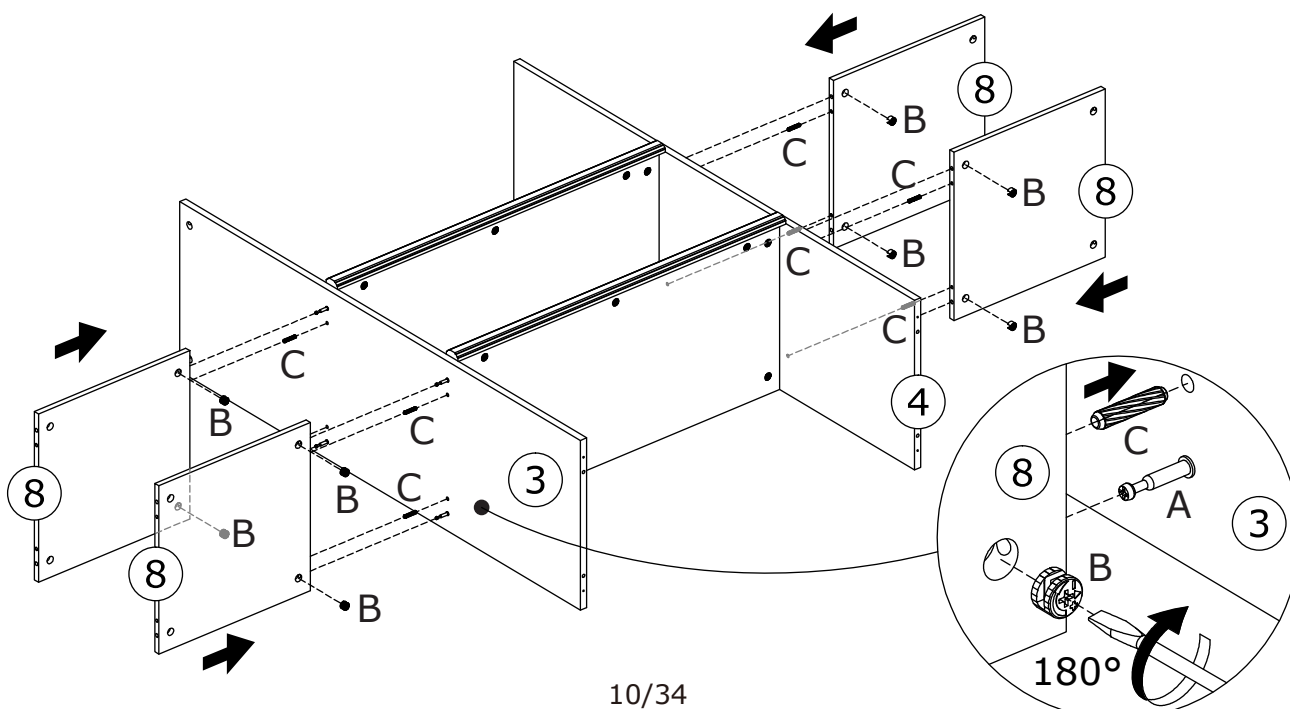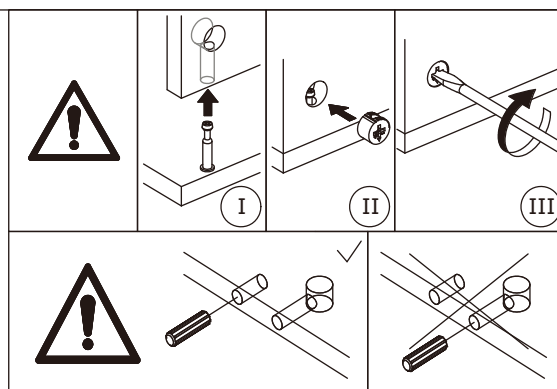




9

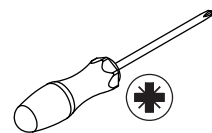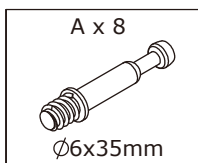  

 
 
Screw eccentric rod(A) into board 2 and 5 with a screwdriver as shown.

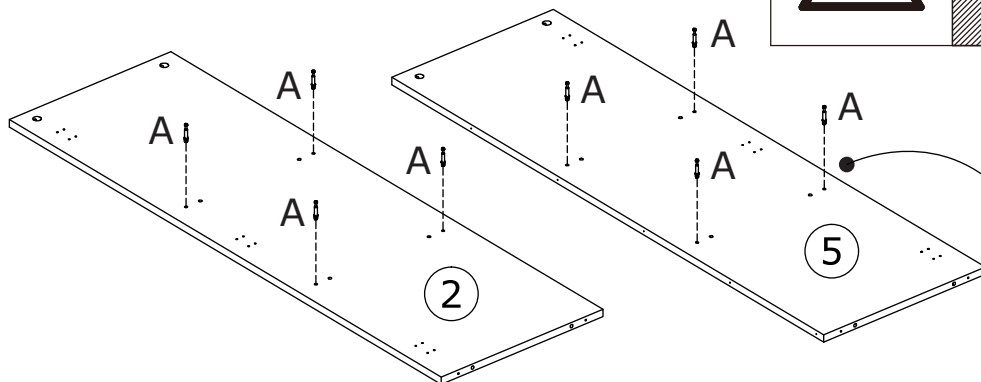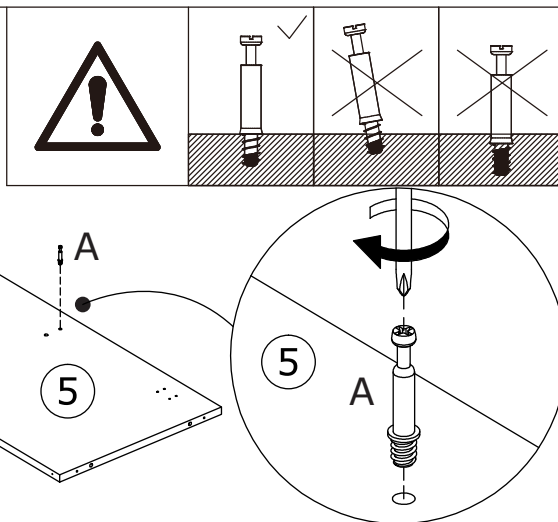




10

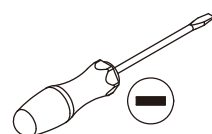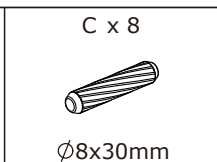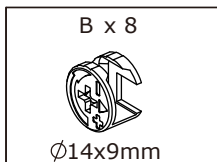   

 
 
Attach board 2 and 5 to board 8 using wooden dowel(C) at first, add cam lock(B) into board 8 and turn clockwise to tighten as shown.

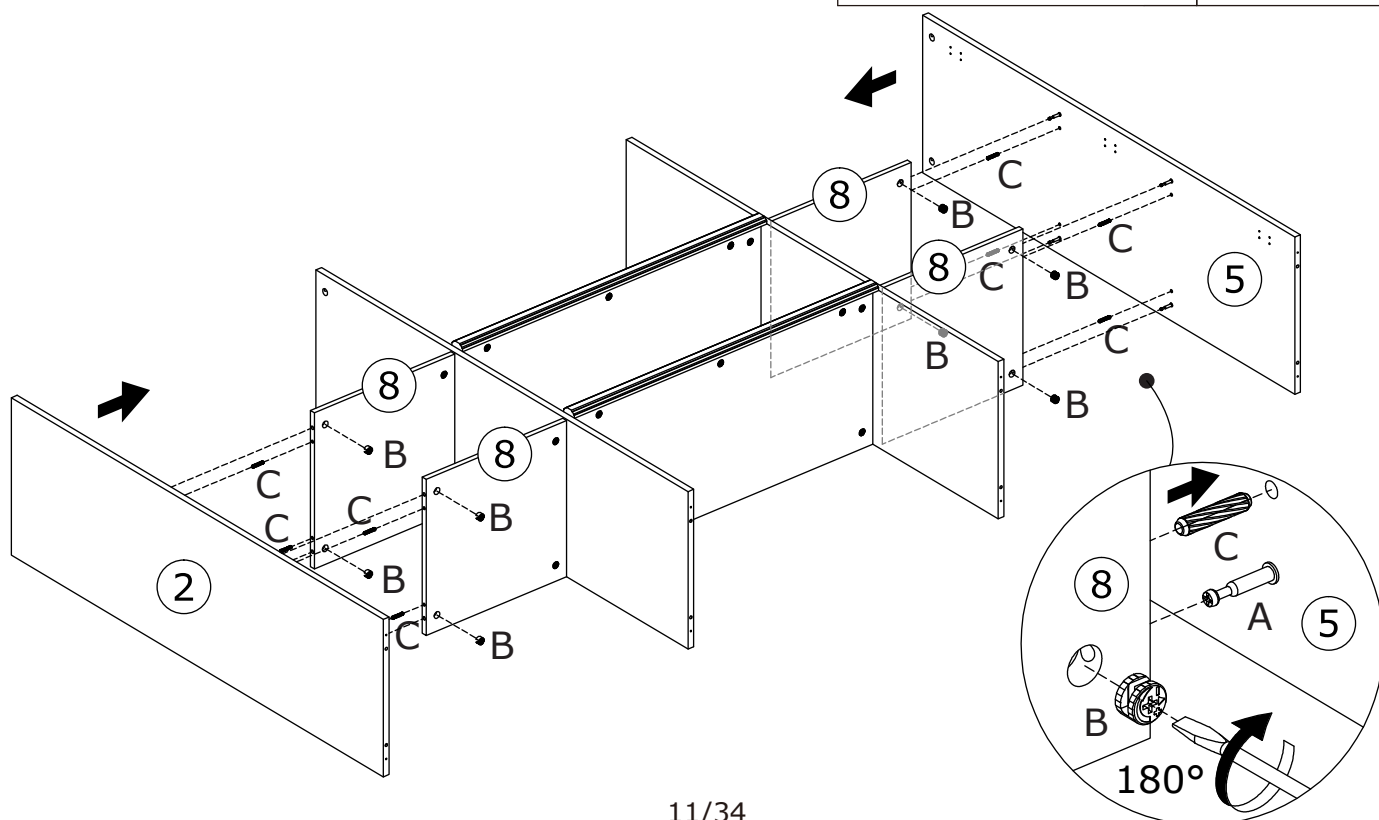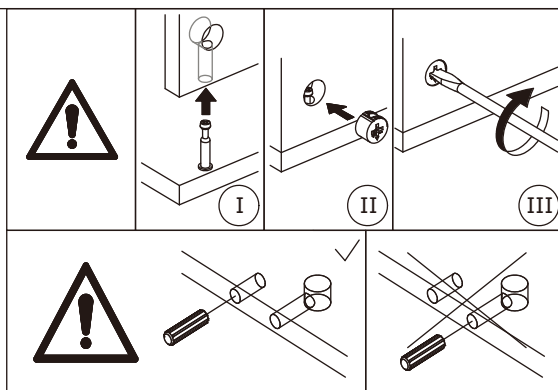



11

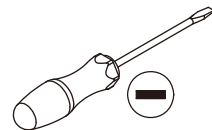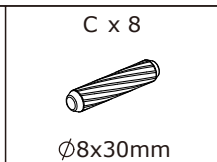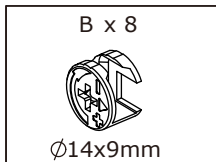   

  
Cover board 1 to board 2, 3, 4 and 5 with wooden dowel(C), add cam lock(B) into board 2,3,4,5 and turn clockwise to tighten as shown.

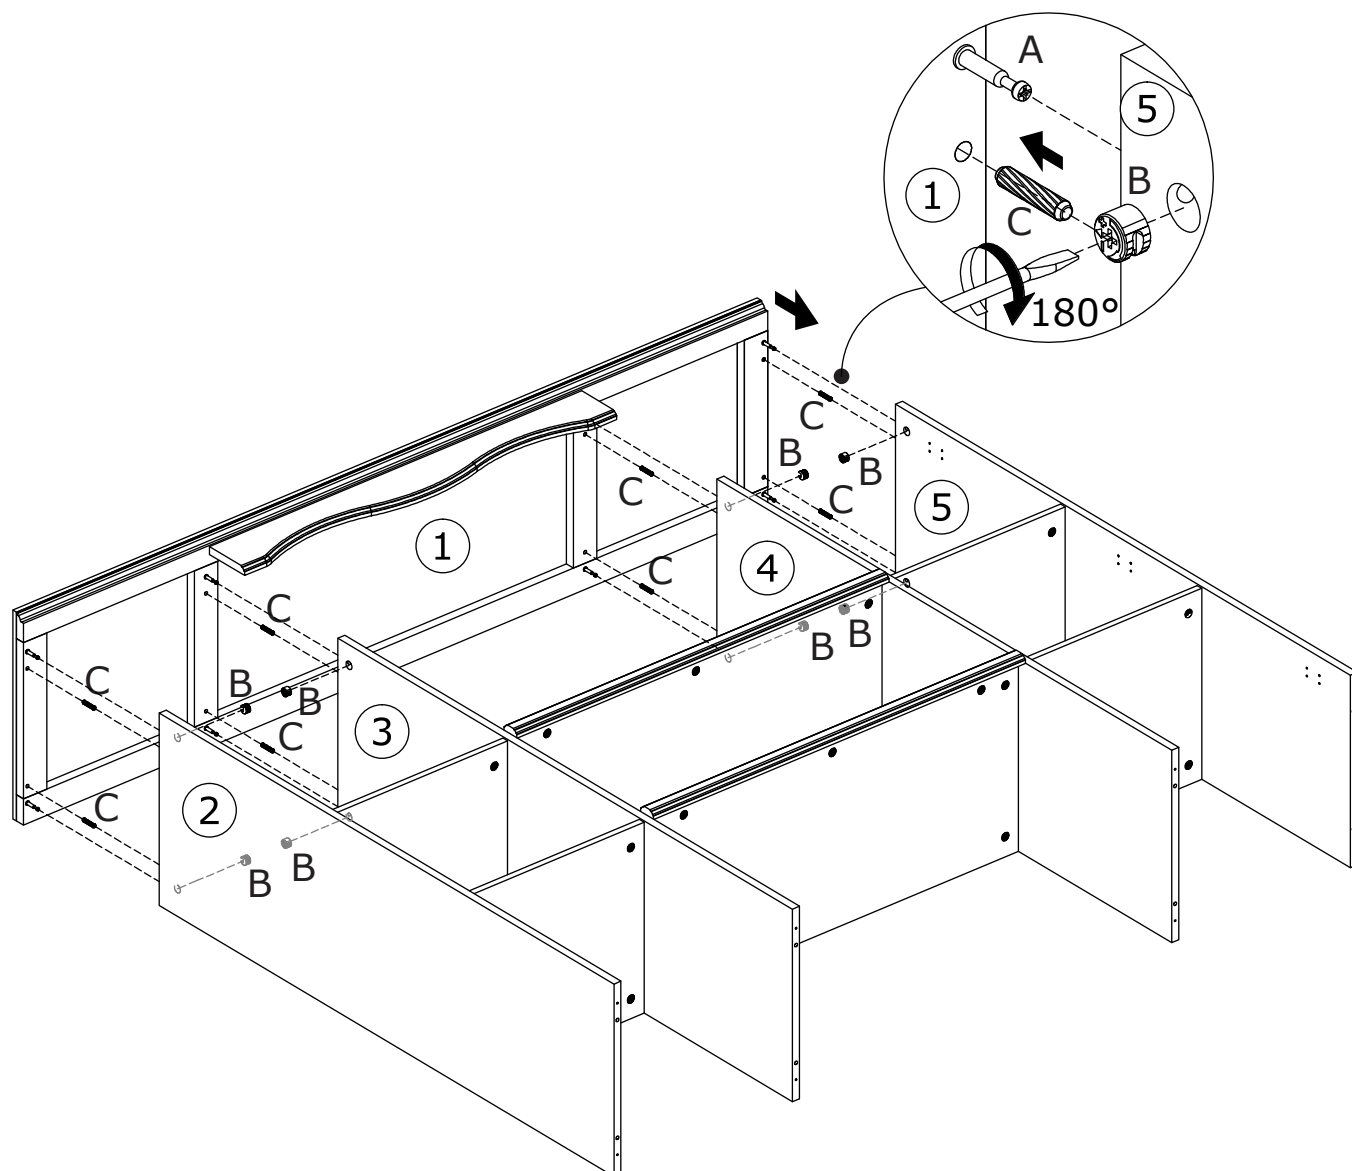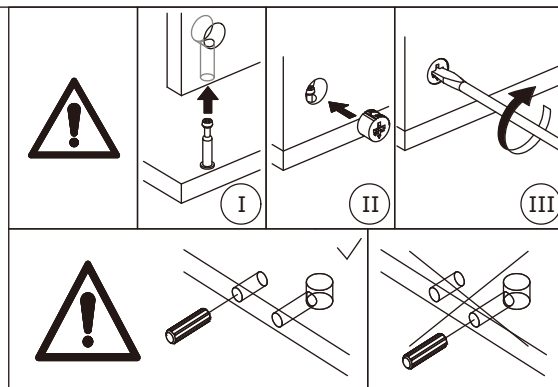



12

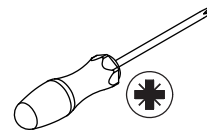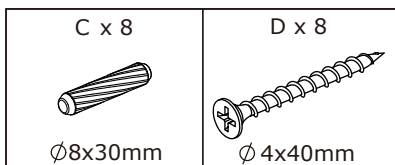  

    
 
Attach board 10 to board 2,3,4 and 5 using wooden dowel(C) at first, and fix with screw(D) as shown.

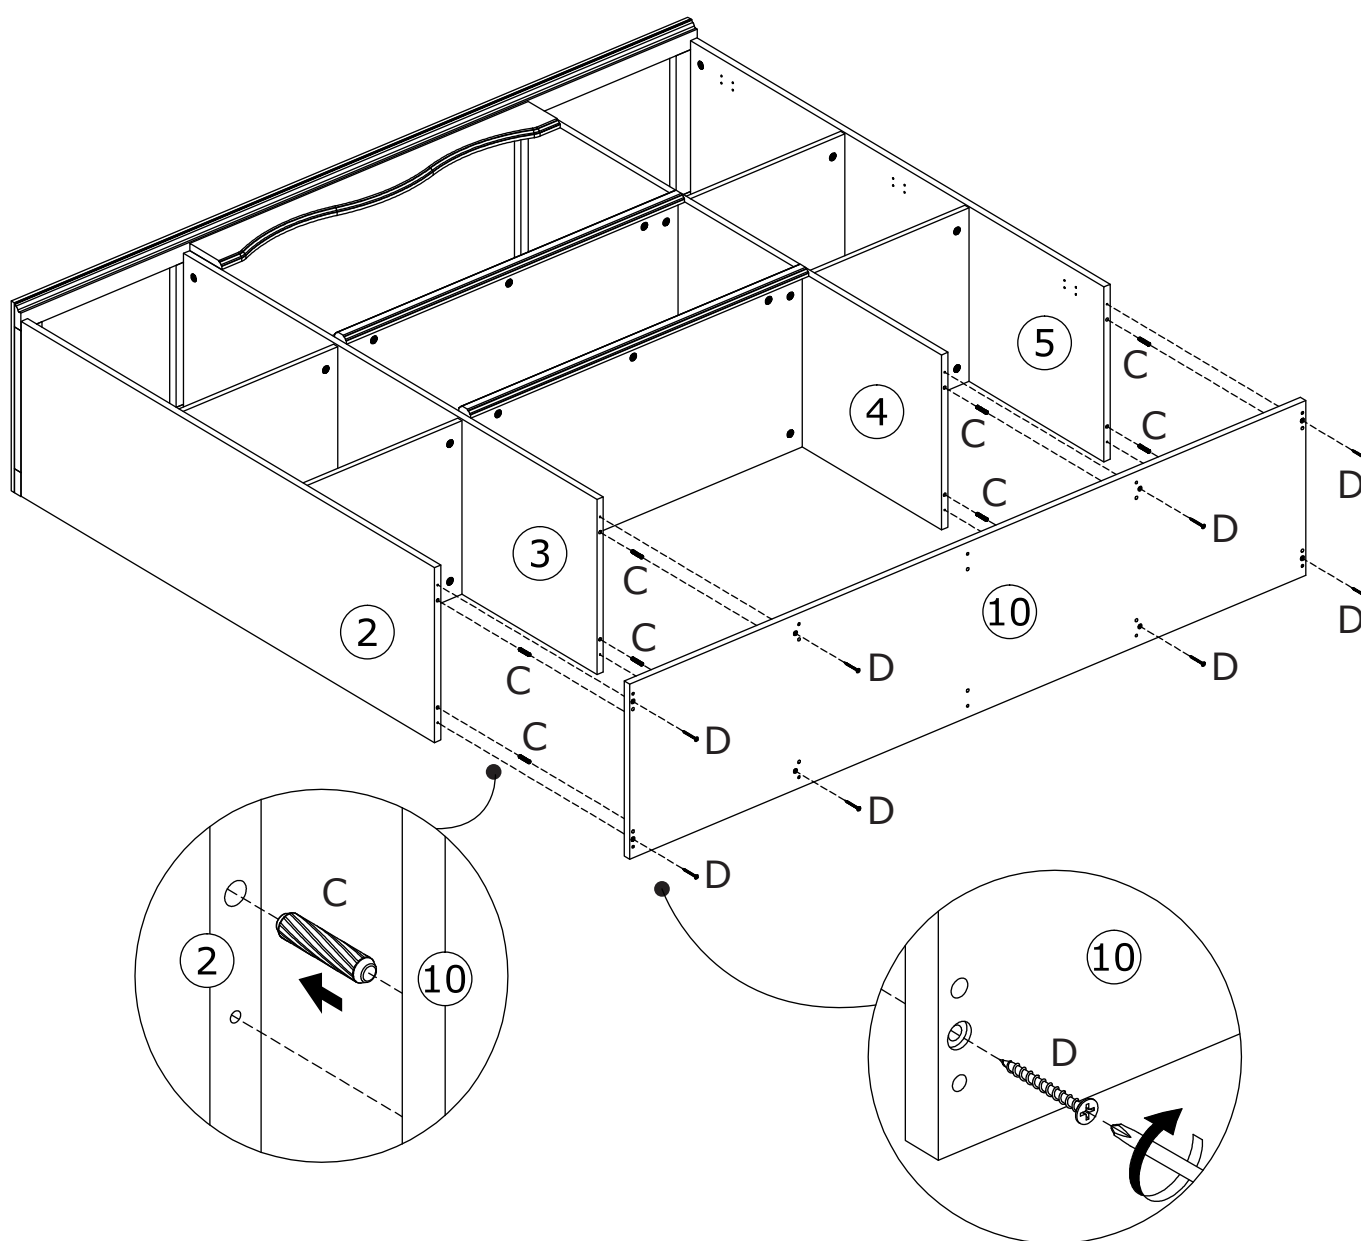


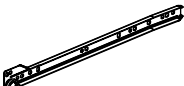

13

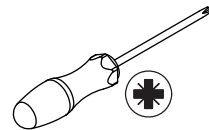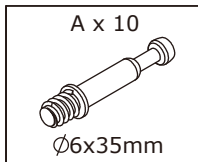





Screw eccentric rod(A) into board 10 with a screwdriver as shown.

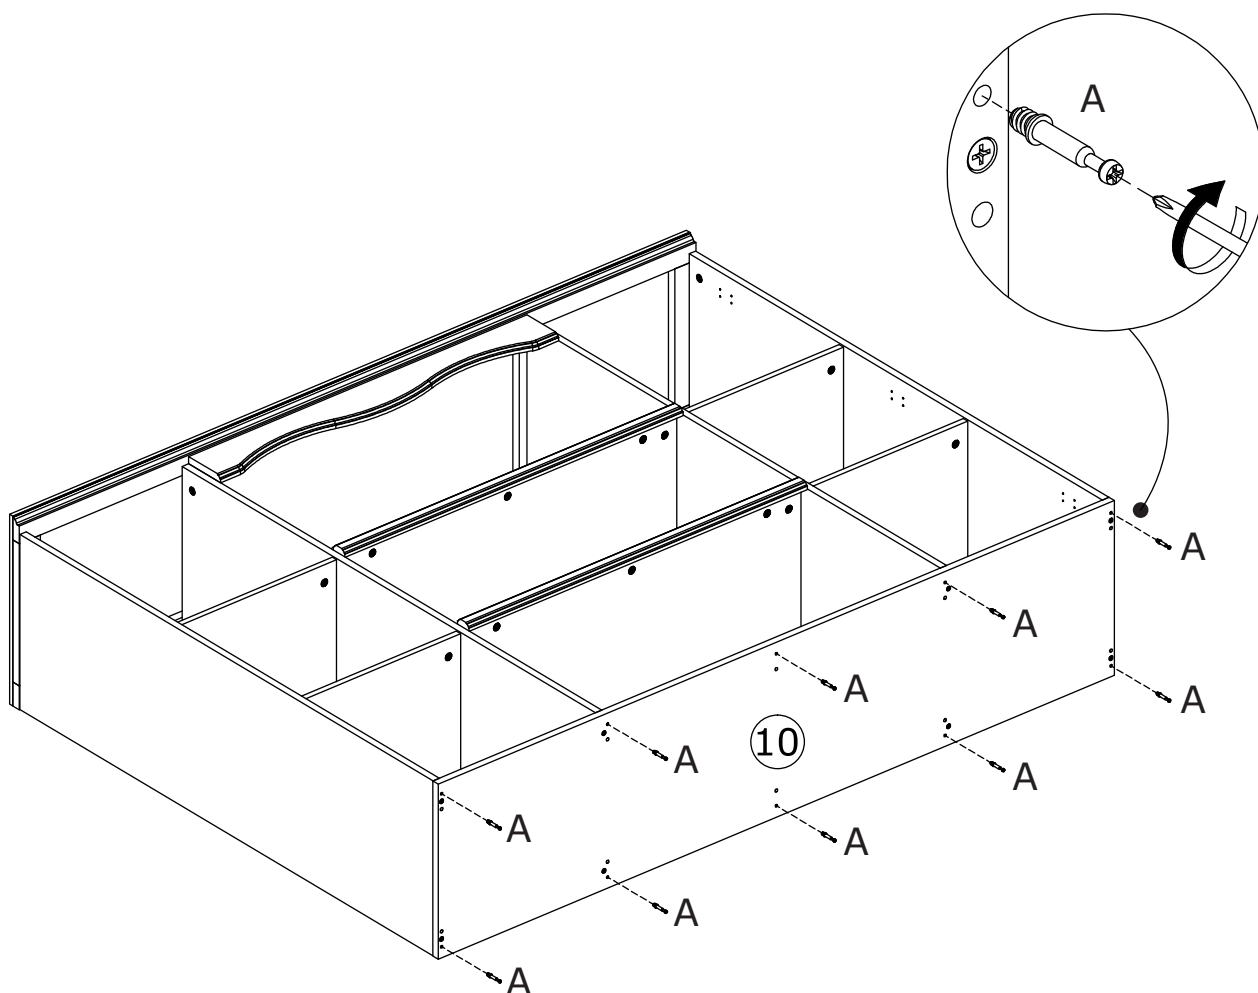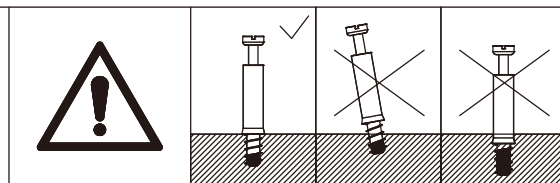


14

E x 6  Ø3.5x12mm	CL x 1 	CR x 1 
---	---	---

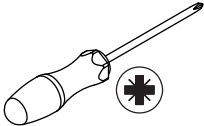

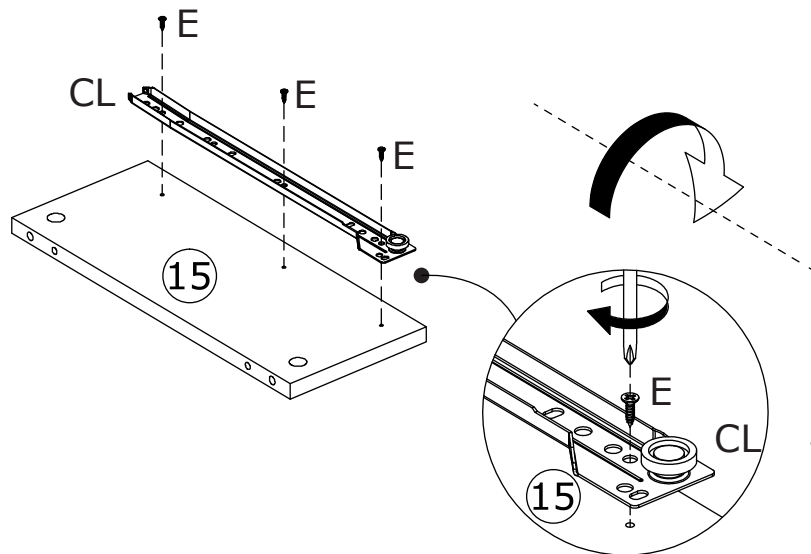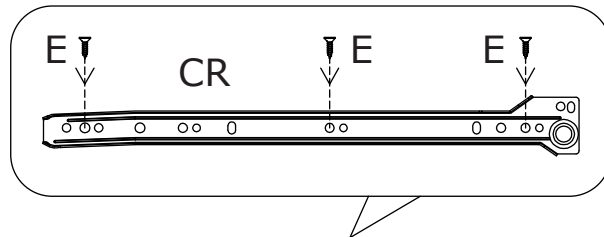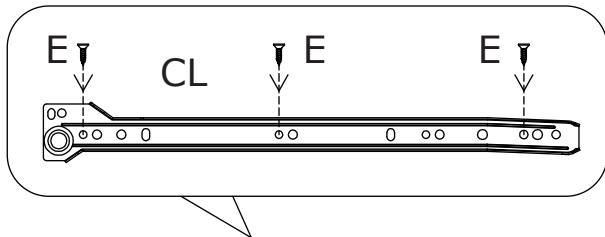   

 Fix slide rail(CL) to board 15 with screw(E) at first.
Flip the board 180°, fix slide rail(CR) as well.


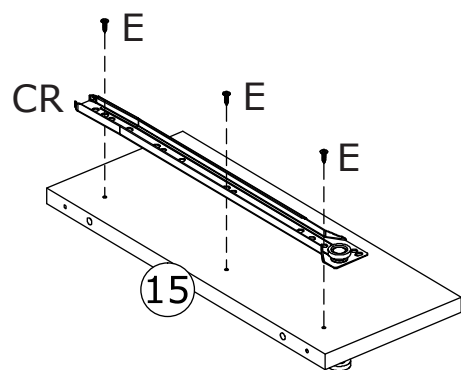


15


C x 2  Ø8x30mm	M x 2  Ø4x30mm
---	---






 
 
Attach board 16 to board 15 using wooden dowel(C) at first, and fix with screw(M) as shown.

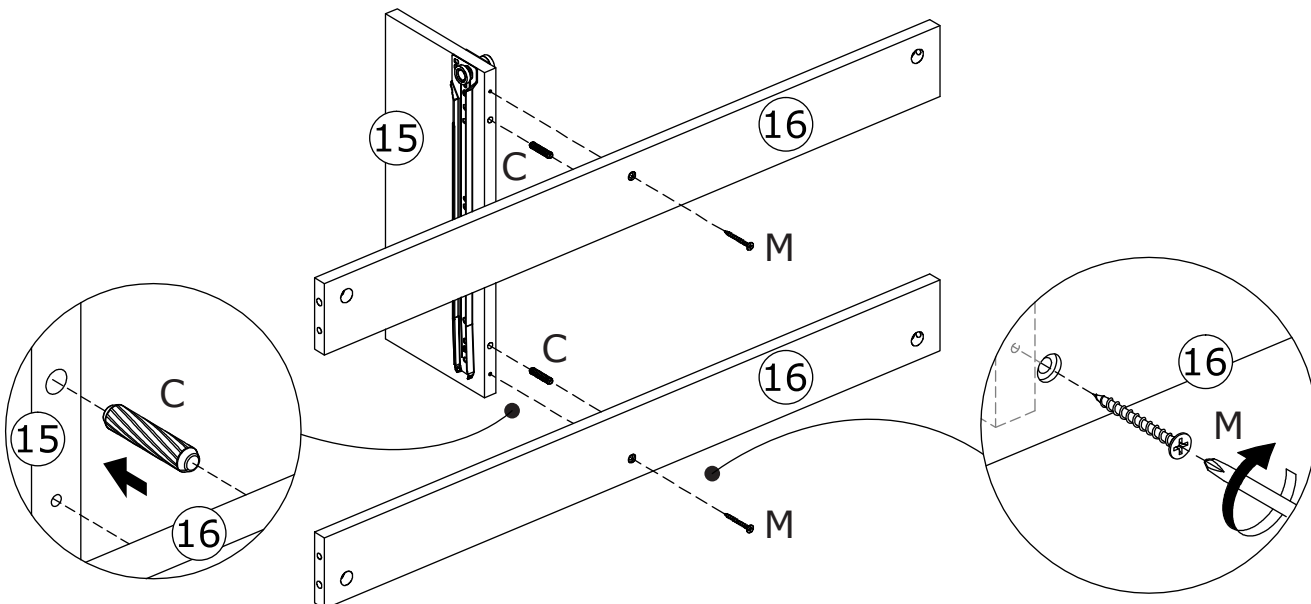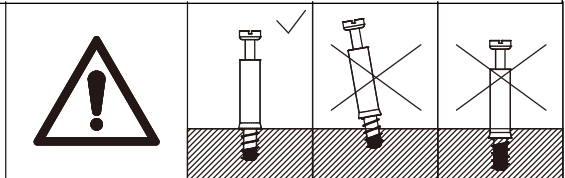

16

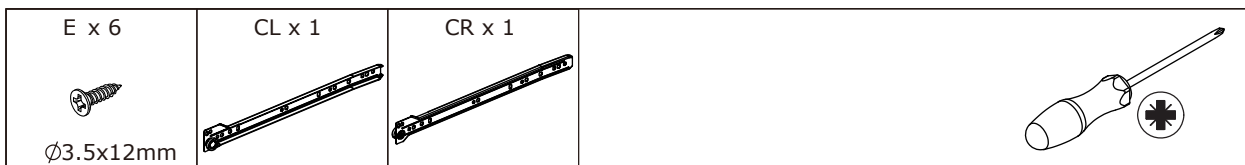 

  
 
 
 
Fix slide rail(CL) and (CR) to board 12 and 13 respectively with screw(E) as shown.

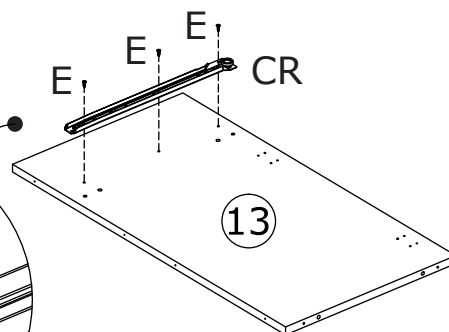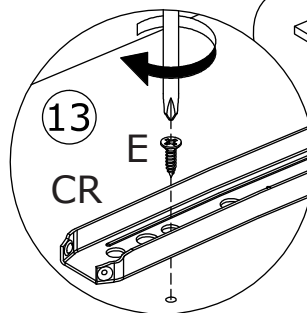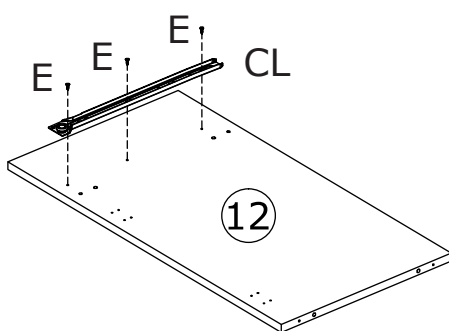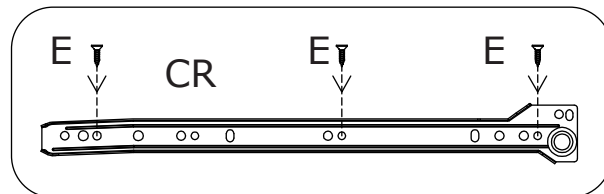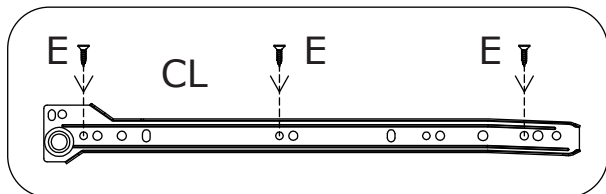



17



   
 
Screw eccentric rod(A) into board 12 and 13 with a screwdriver as shown.

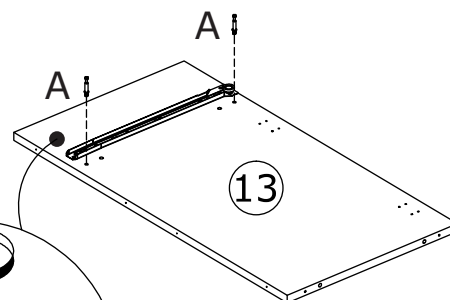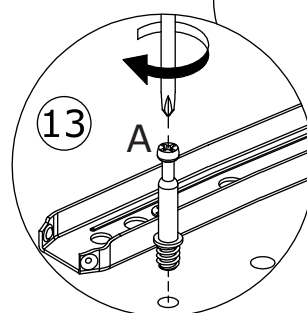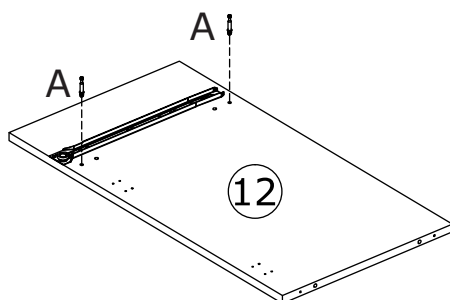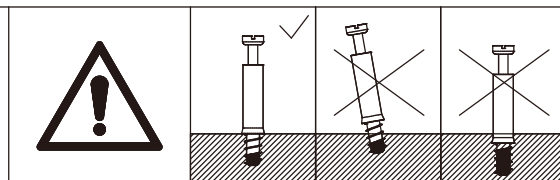



18

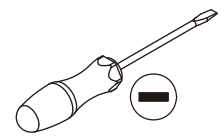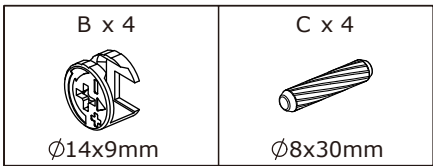  

 
 
Attach board 12 and 13 to board 16 using wooden dowel(C) at first, add cam lock(B) into board 16 and turn clockwise to tighten as shown.

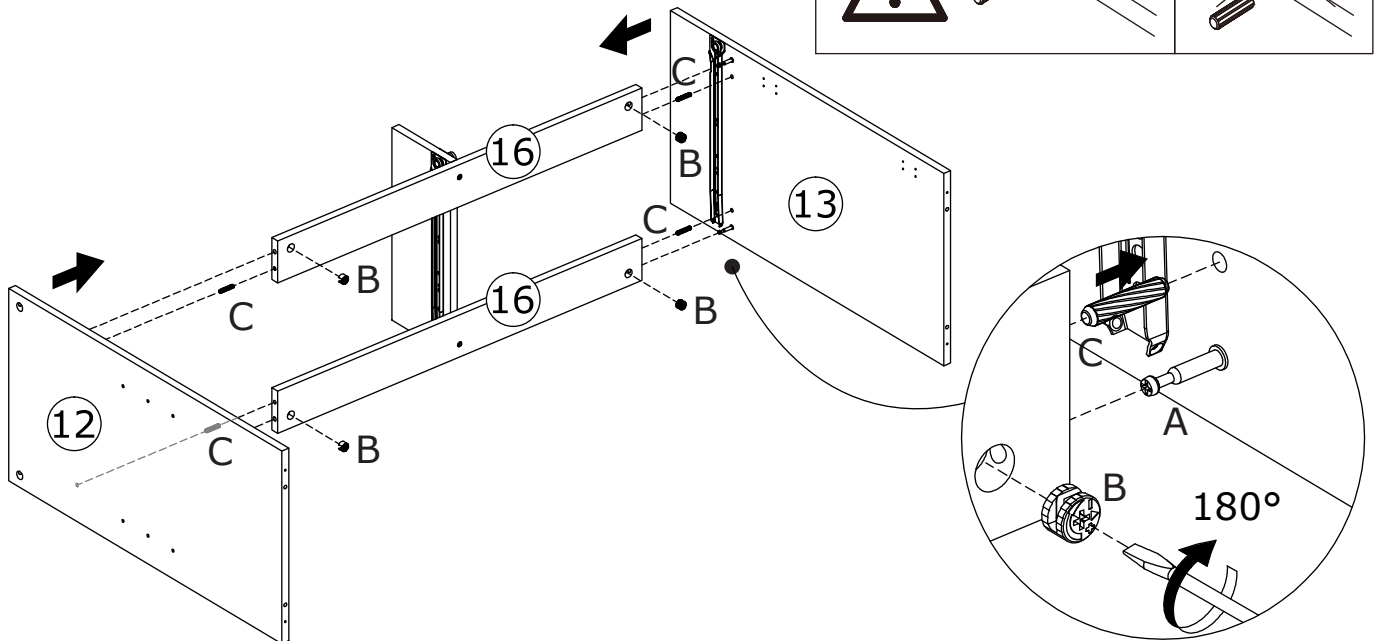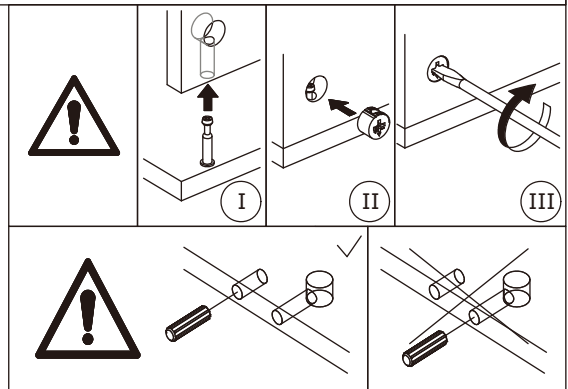



19

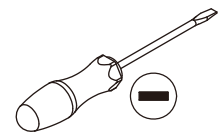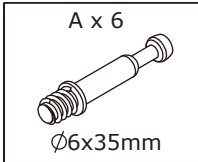  

 
 
Screw eccentric rod(A) into board 18 with a screwdriver as shown.

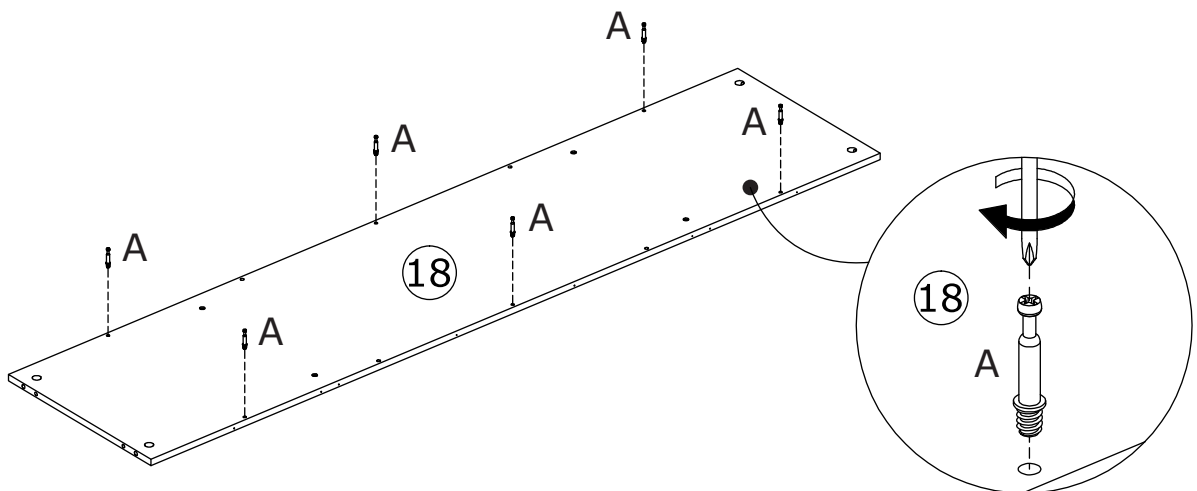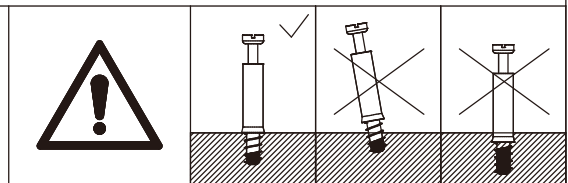



20

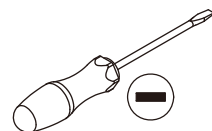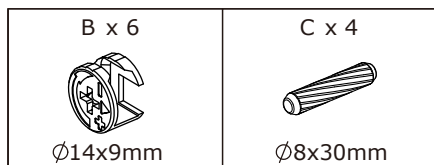  

  
Connect board 19 to board 18 with wooden dowel(C), add cam lock(B) into board 19 and turn clockwise to tighten as shown.

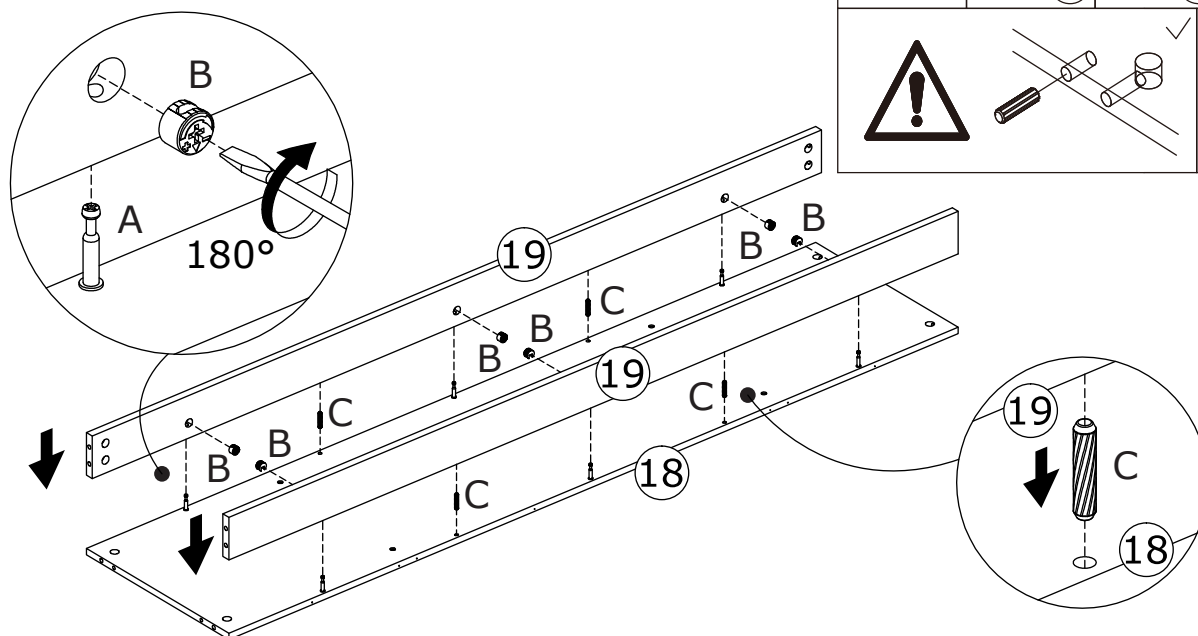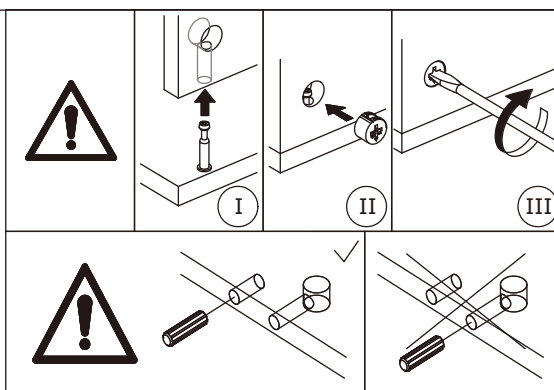

21

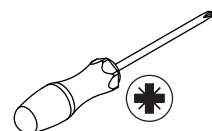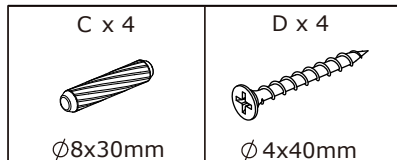  

 Attach board 18 to board 12 and 13 using wooden dowel(C) at first, and fix with screw(D) as shown.

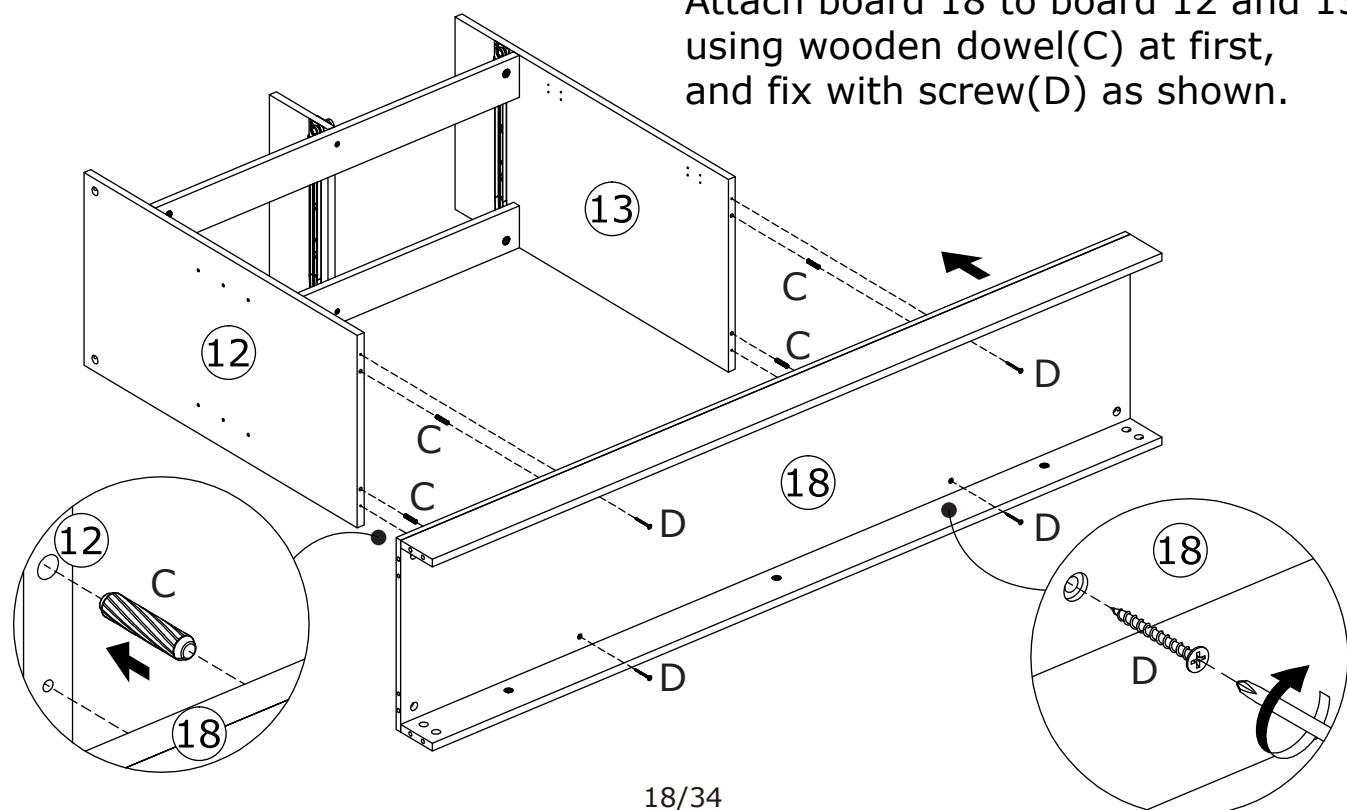


22





A x 12



 Ø6x35mm

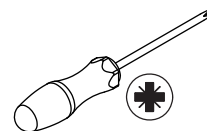

    Screw eccentric rod(A) into board 11 and 14 with a screwdriver as shown.

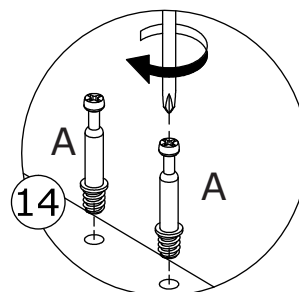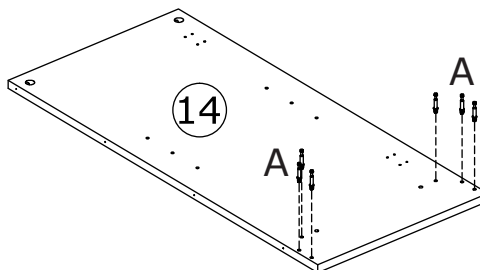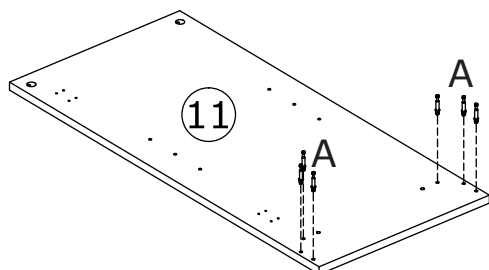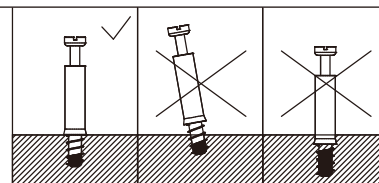

23

B x 12

 


Ø14x9mm




C x 4



Ø8x30mm

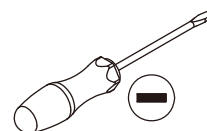

   Attach board 11 and 14 to board 18 and 19 using wooden dowel(C) at first, add cam lock(B) into board 18,19 and turn clockwise to tighten as shown.

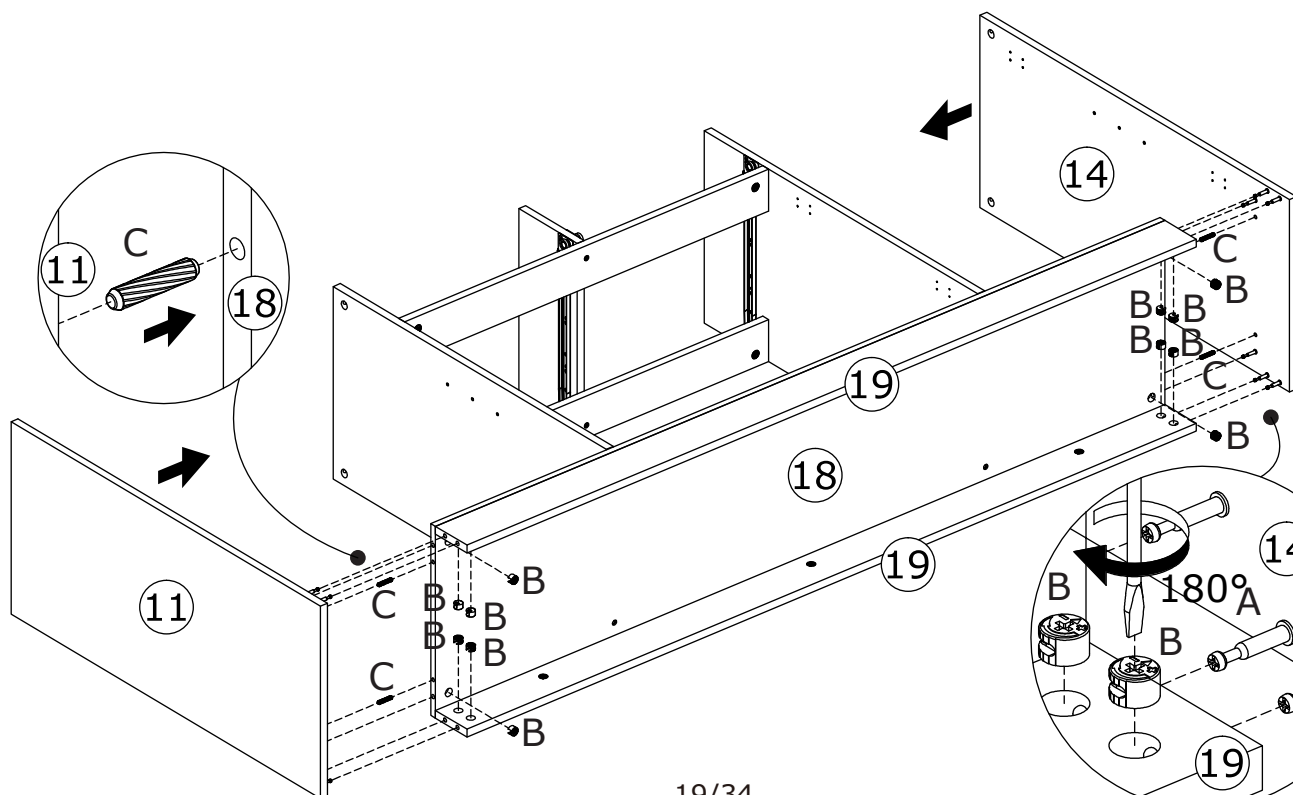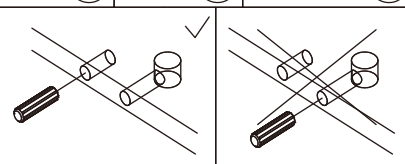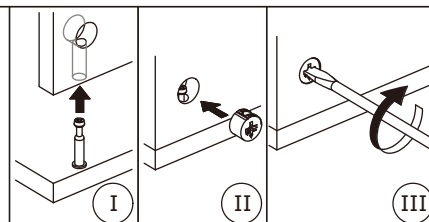

24

B x 10

 


Ø14x9mm



C x 10




Ø8x30mm

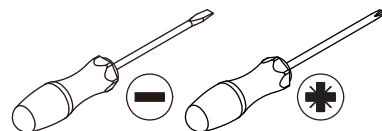

  
Connect the two components using wooden dowel(C), add cam lock(B) into board 11,12, 15,13,14 and turn clockwise to tighten as shown.

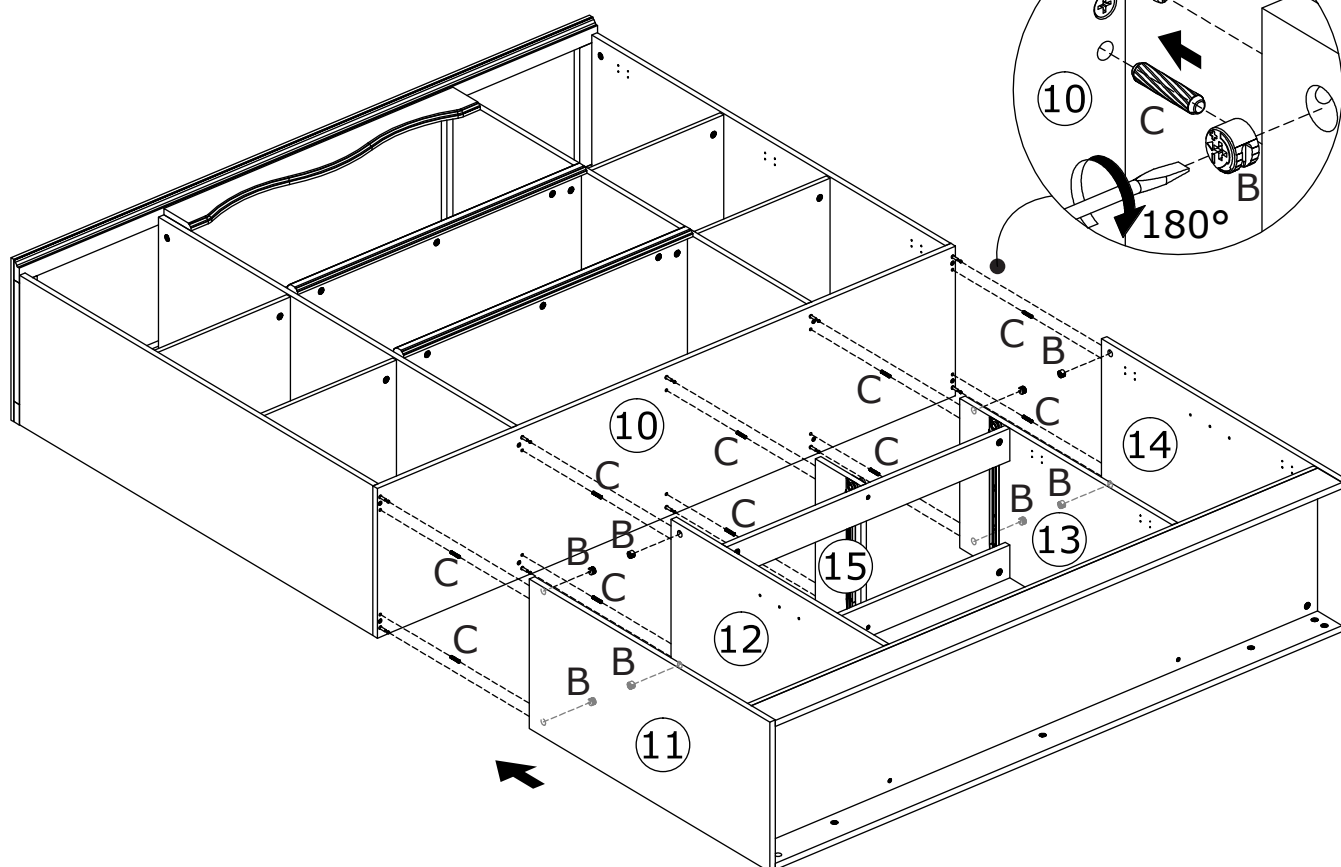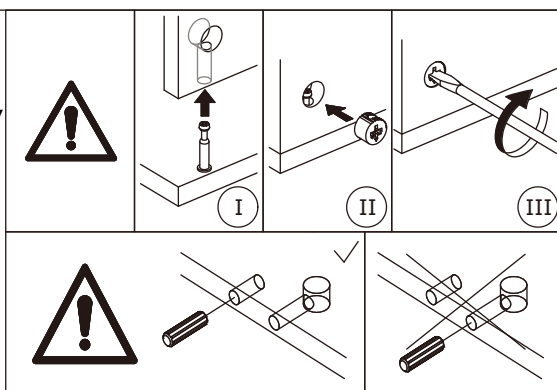



25

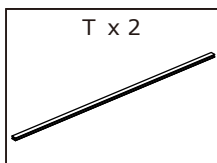 

    
Connect part 32 and 33 with strip(T).
Connect part 37 and 38 with strip(T).

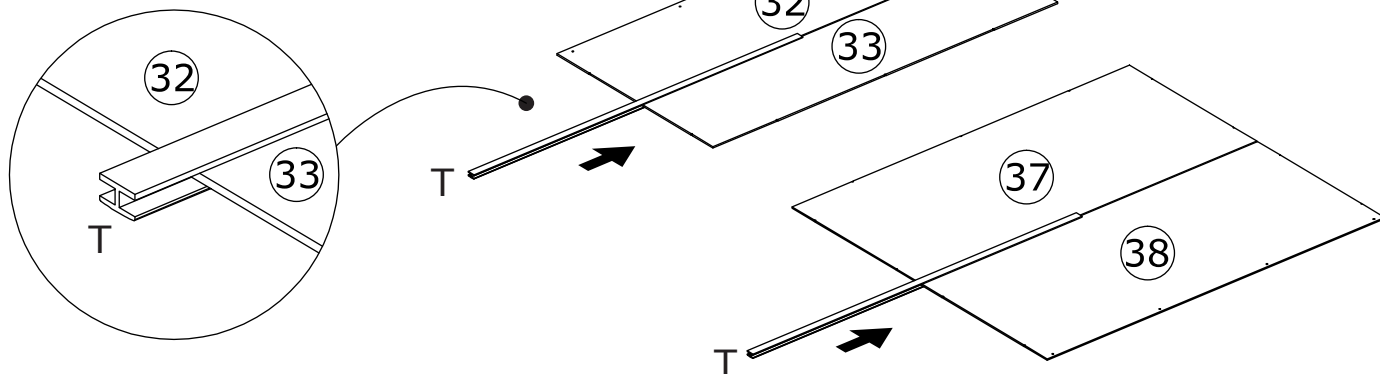


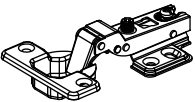
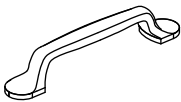

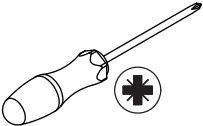
26

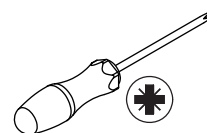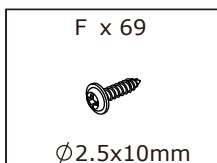


Fix back board 31,32,33,34,35,36,37 and 38 to the cabinet with screw(F) as shown.

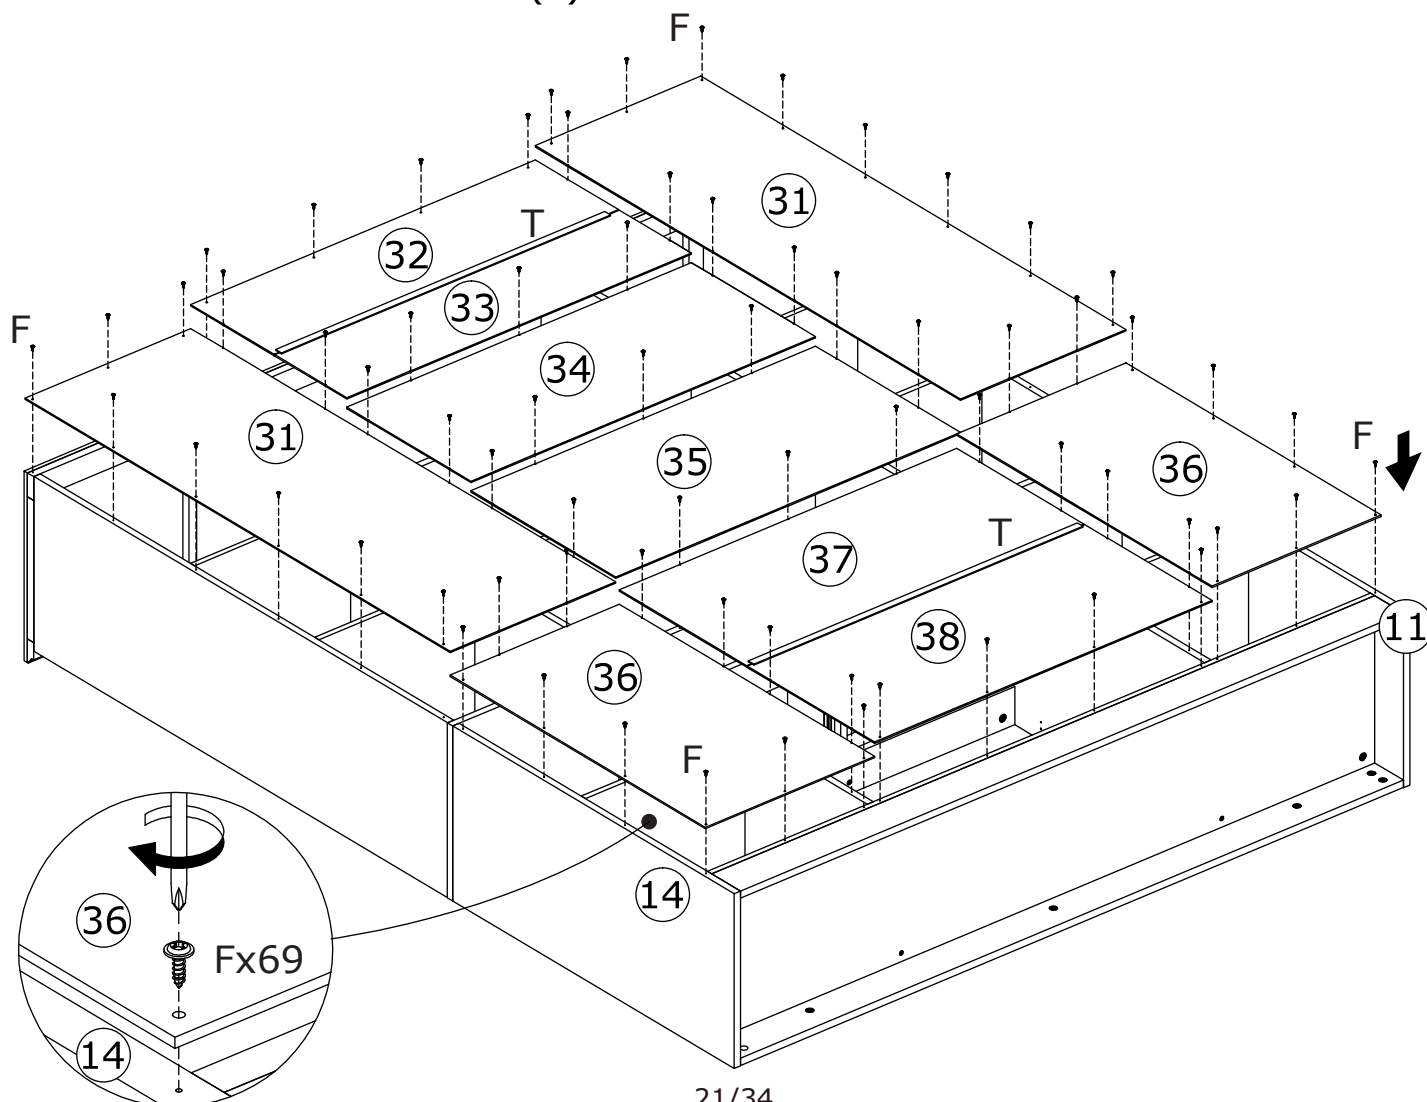

27

<p>G x 8</p>  <p>Ø4x14mm</p>	<p>H x 4</p> 	<p>J x 2</p> 	<p>U x 4</p>  <p>M4x18mm</p>	
---	--	--	--	---

 Fix hinge(H) to board 25 and 24 with screw(G) as shown.
Fix handle(J) with screw(U).

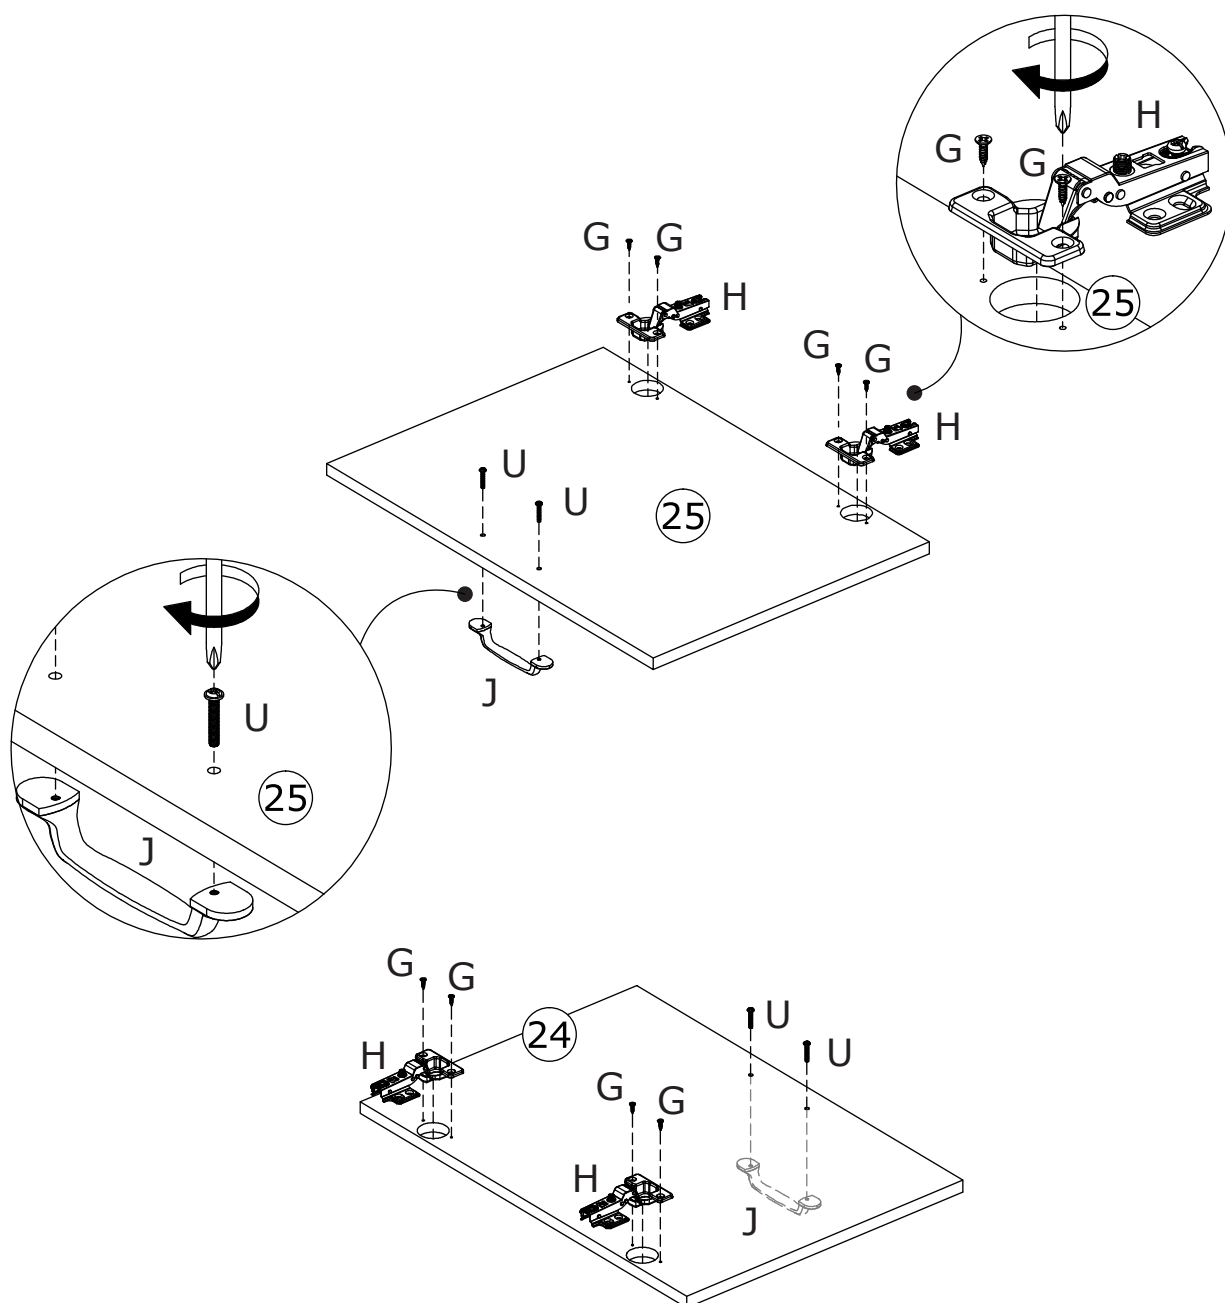


28




G x 16



 Ø4x14mm

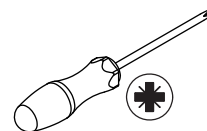


   Assemble door 24 and 25 to board 12 and 13 by fixing hinge with screw(G) as shown.

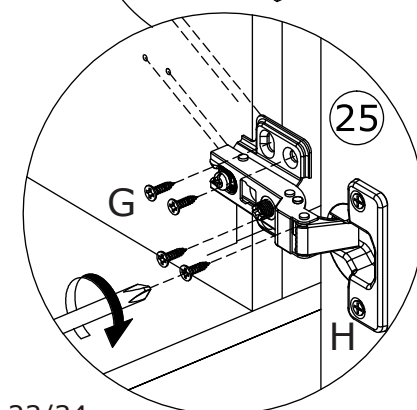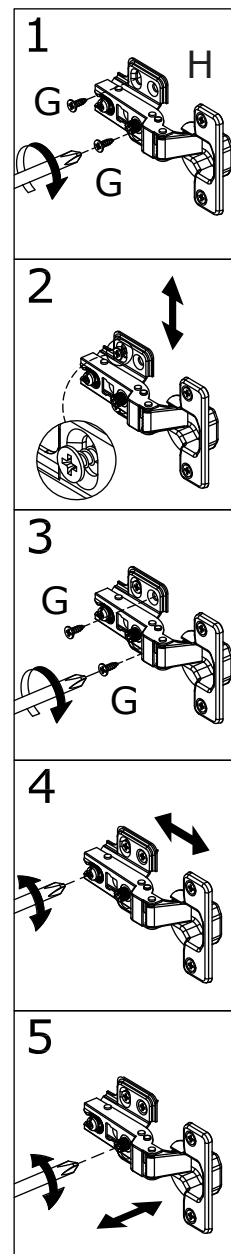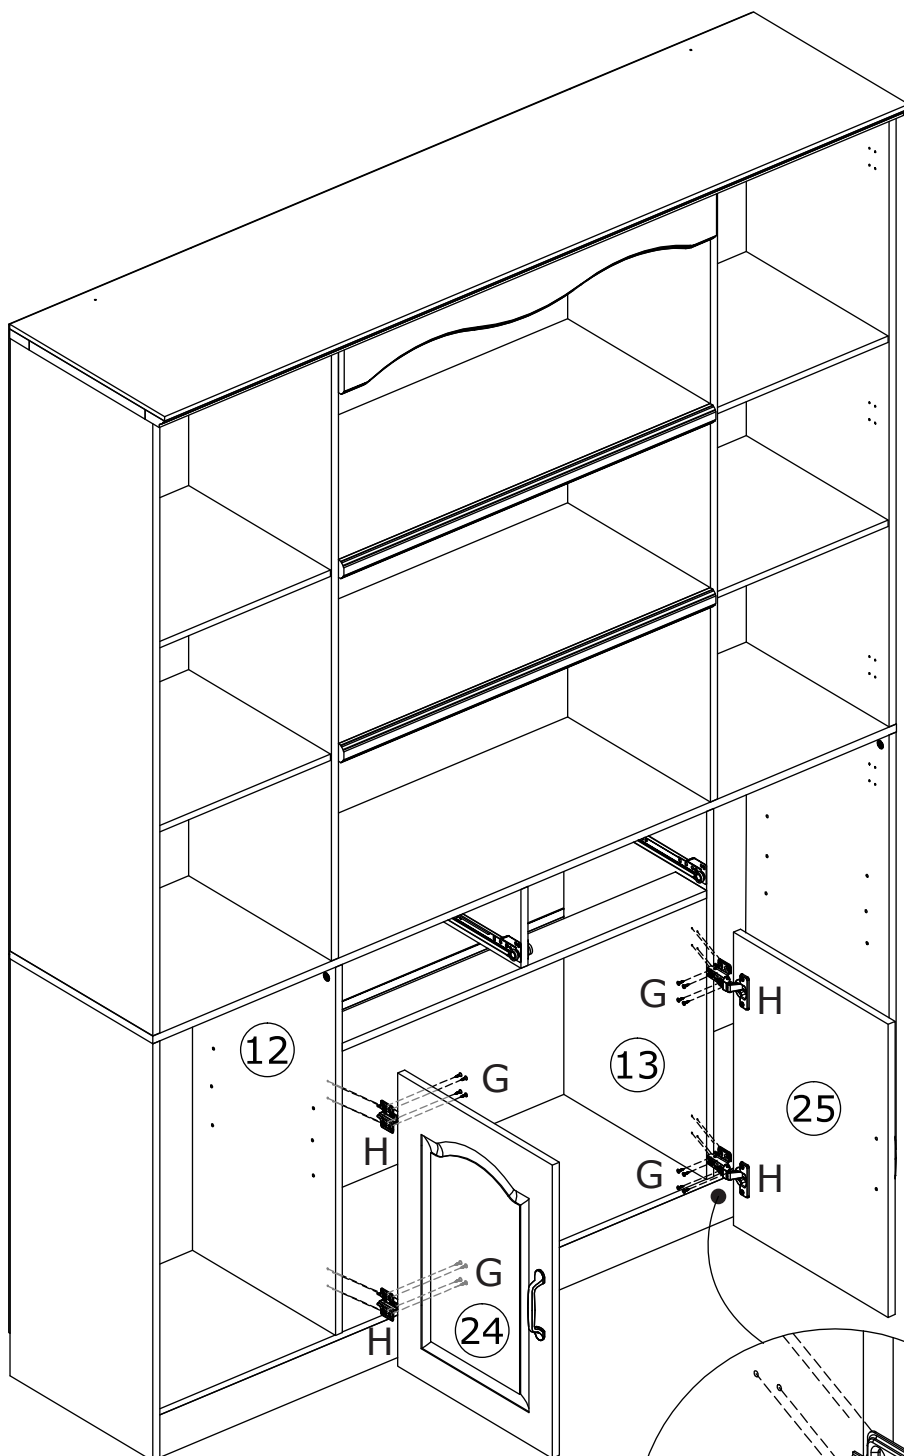


29

  
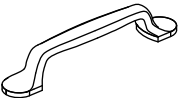

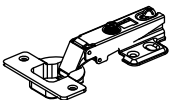
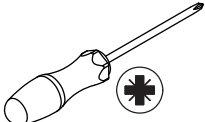
K x 8



Insert layer pin(K) into side boards,
place shelf 17 in as shown.

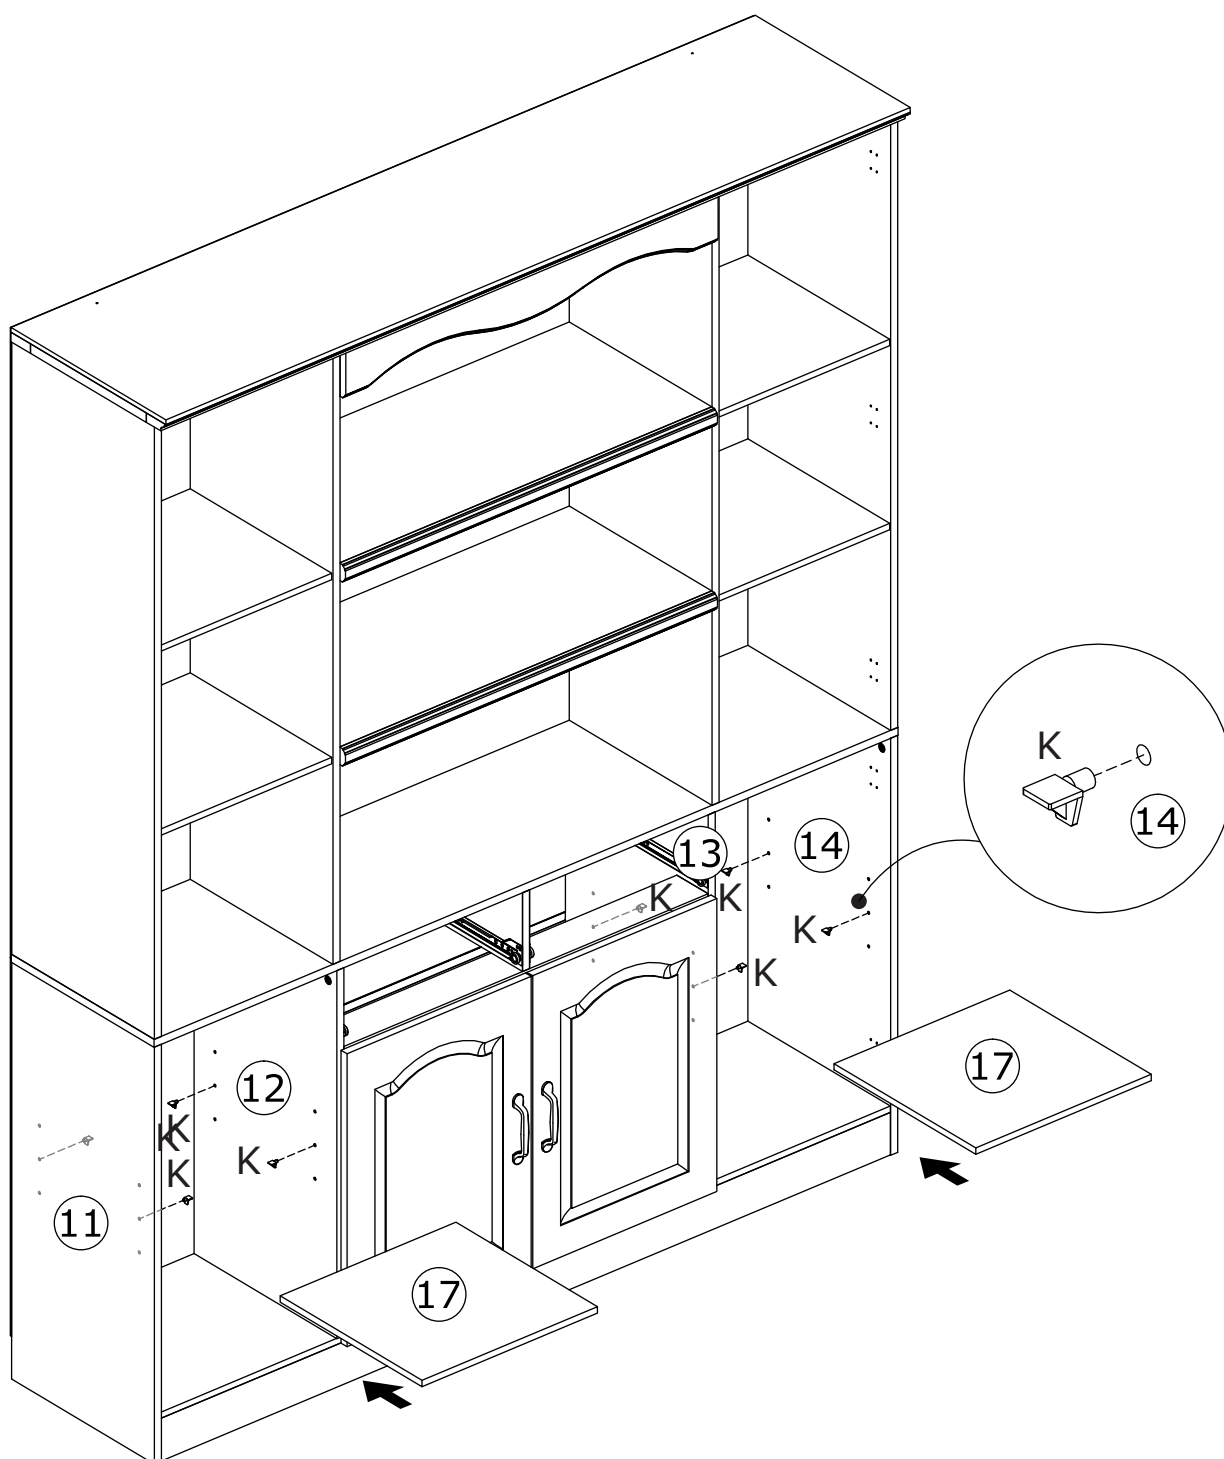


30

<p>G x 8</p>  <p>Ø4x14mm</p>	<p>J x 2</p> 	<p>U x 4</p>  <p>M4x18mm</p>	<p>L x 4</p> 	
---	--	---	---	---

Fix hinge(L) to board 23 and 22 with screw(G)
as shown.

 Fix handle(J) with screw(U).

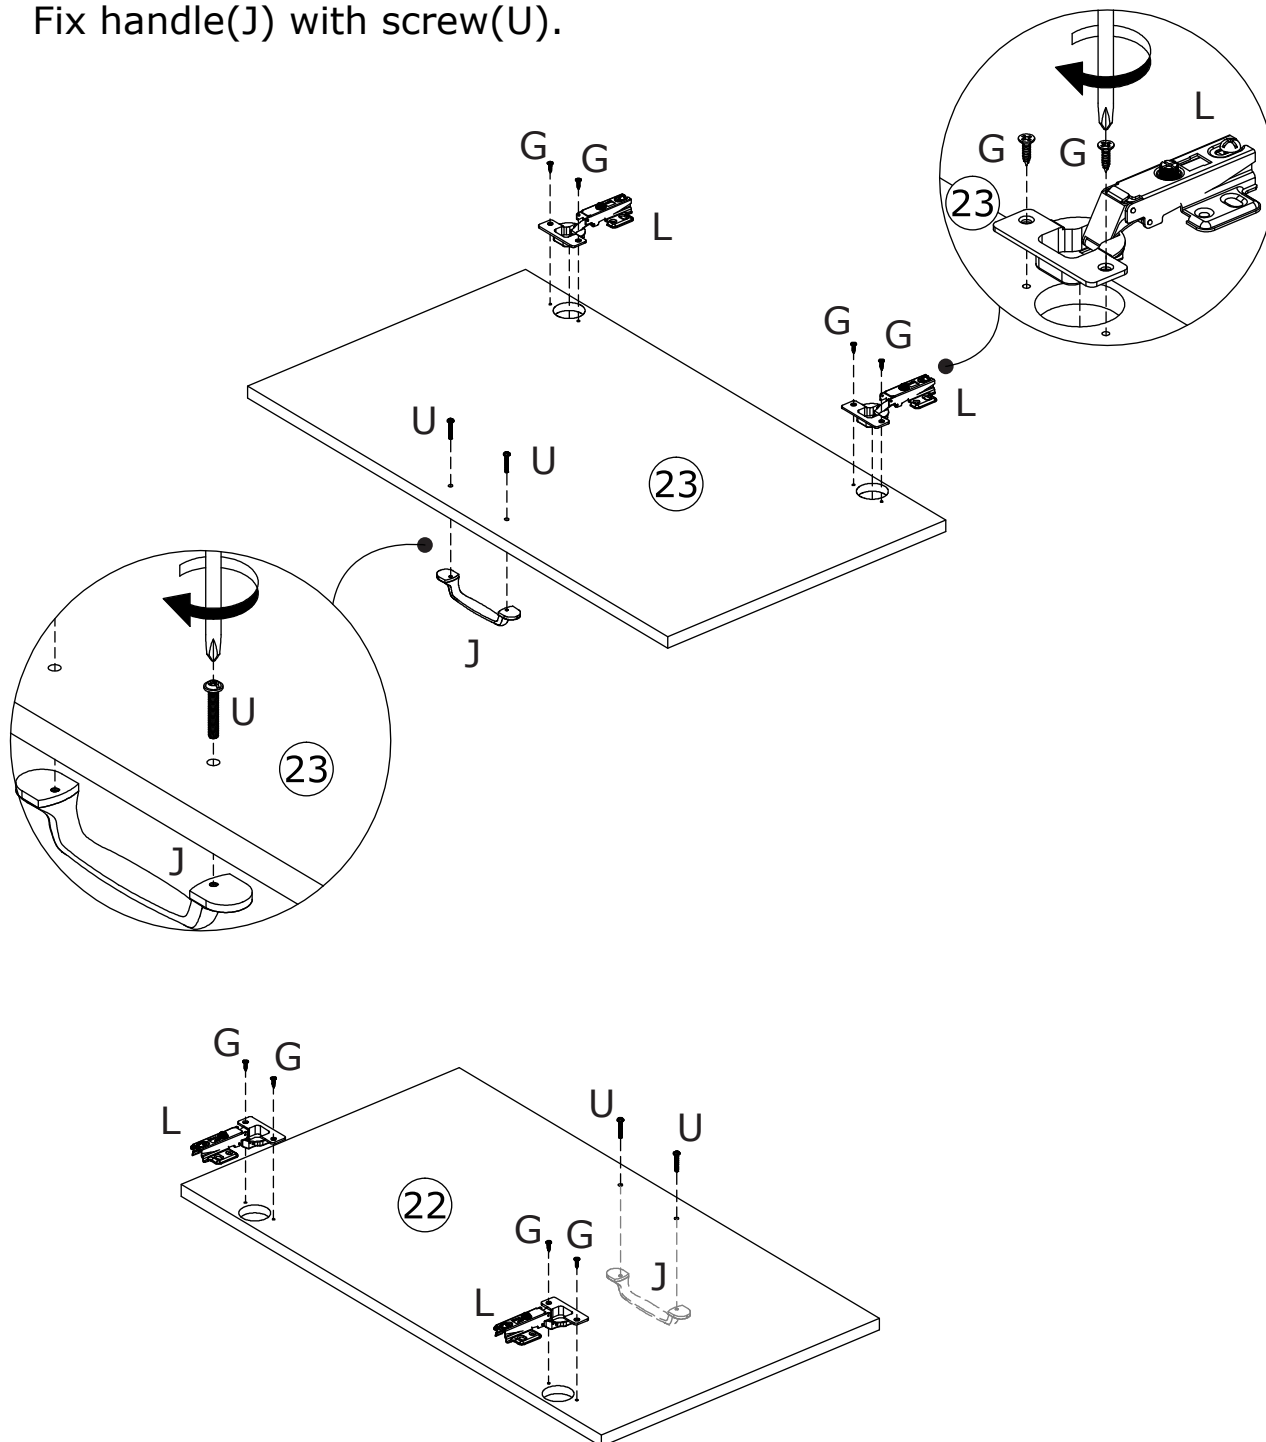


31

  
 
G x 16




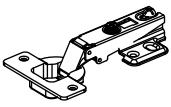
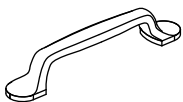

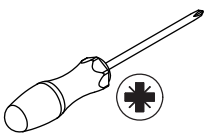
Ø4x14mm

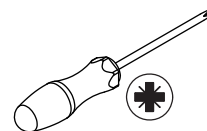


Assemble door 22 and 23 to board 11 and 14 by fixing hinge with screw(G) as shown.

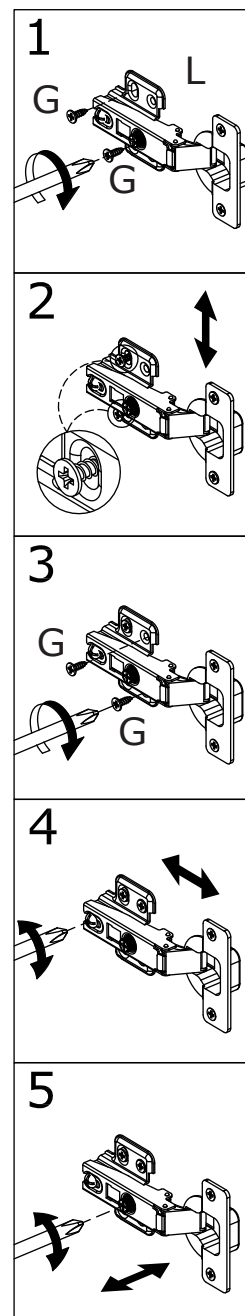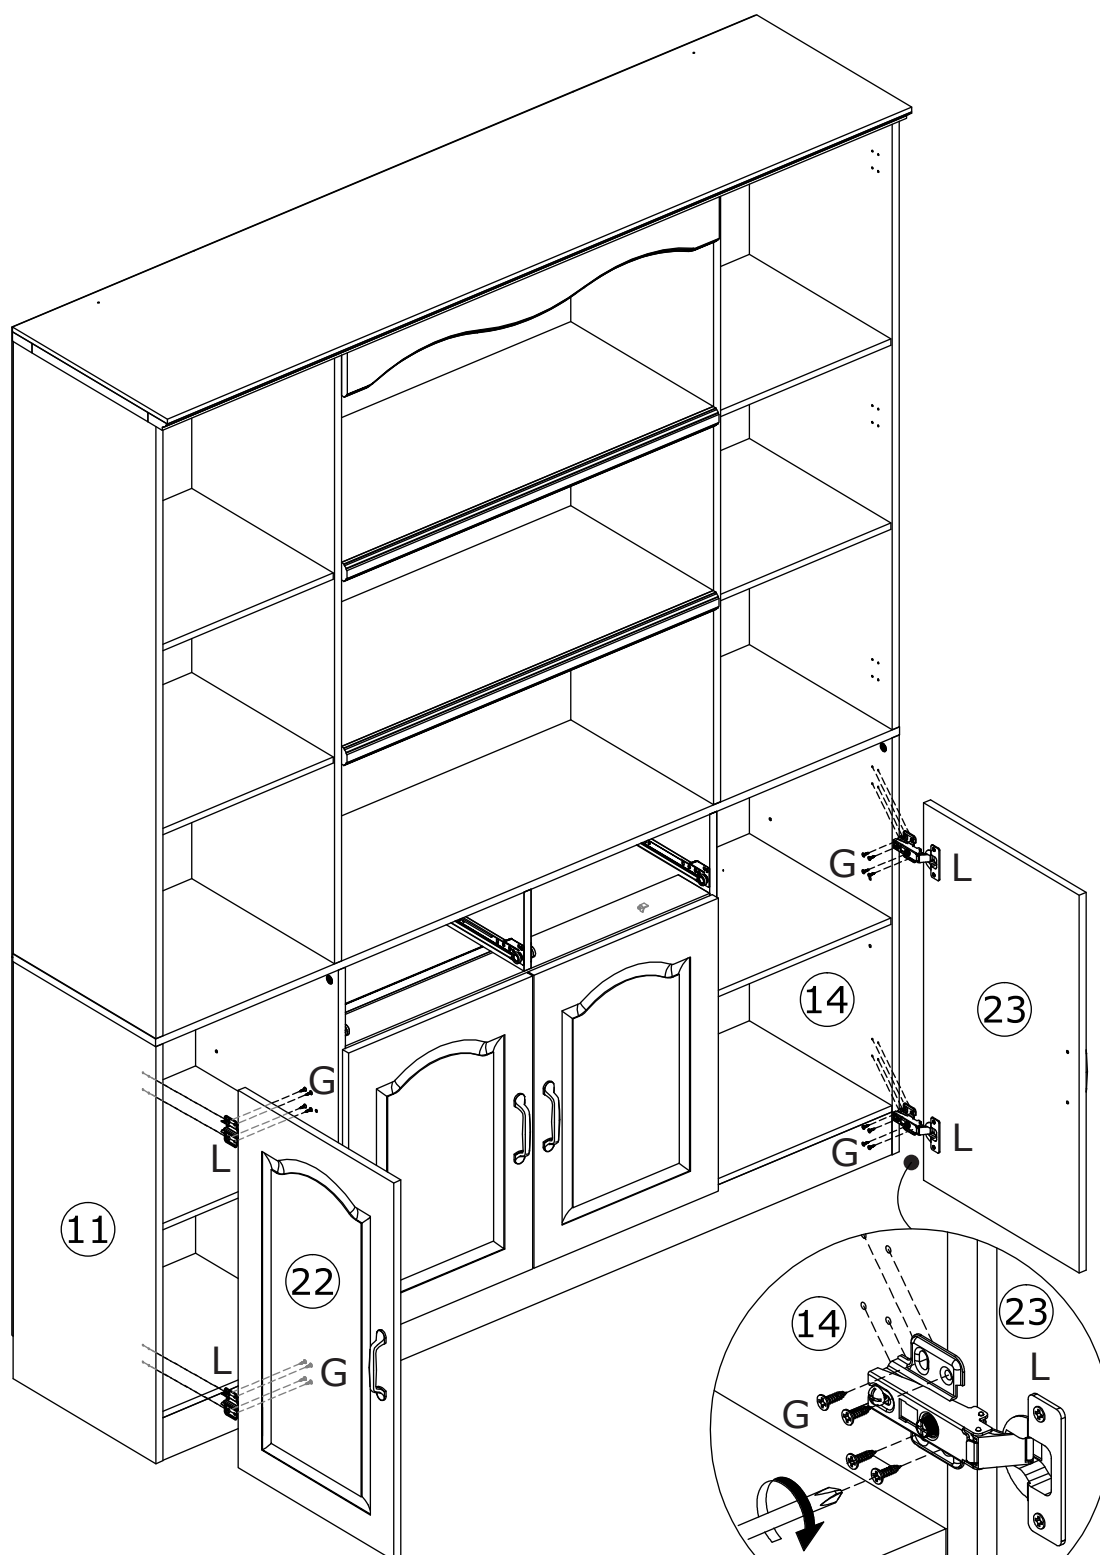

32

<p>G x 12</p>  <p>Ø4x14mm</p>	<p>L x 6</p> 	<p>J x 2</p> 	<p>U x 4</p>  <p>M4x18mm</p>	
--	--	--	--	---

 Fix hinge(L) to board 21 and 20
with screw(G) as shown.
Fix handle(J) with screw(U).

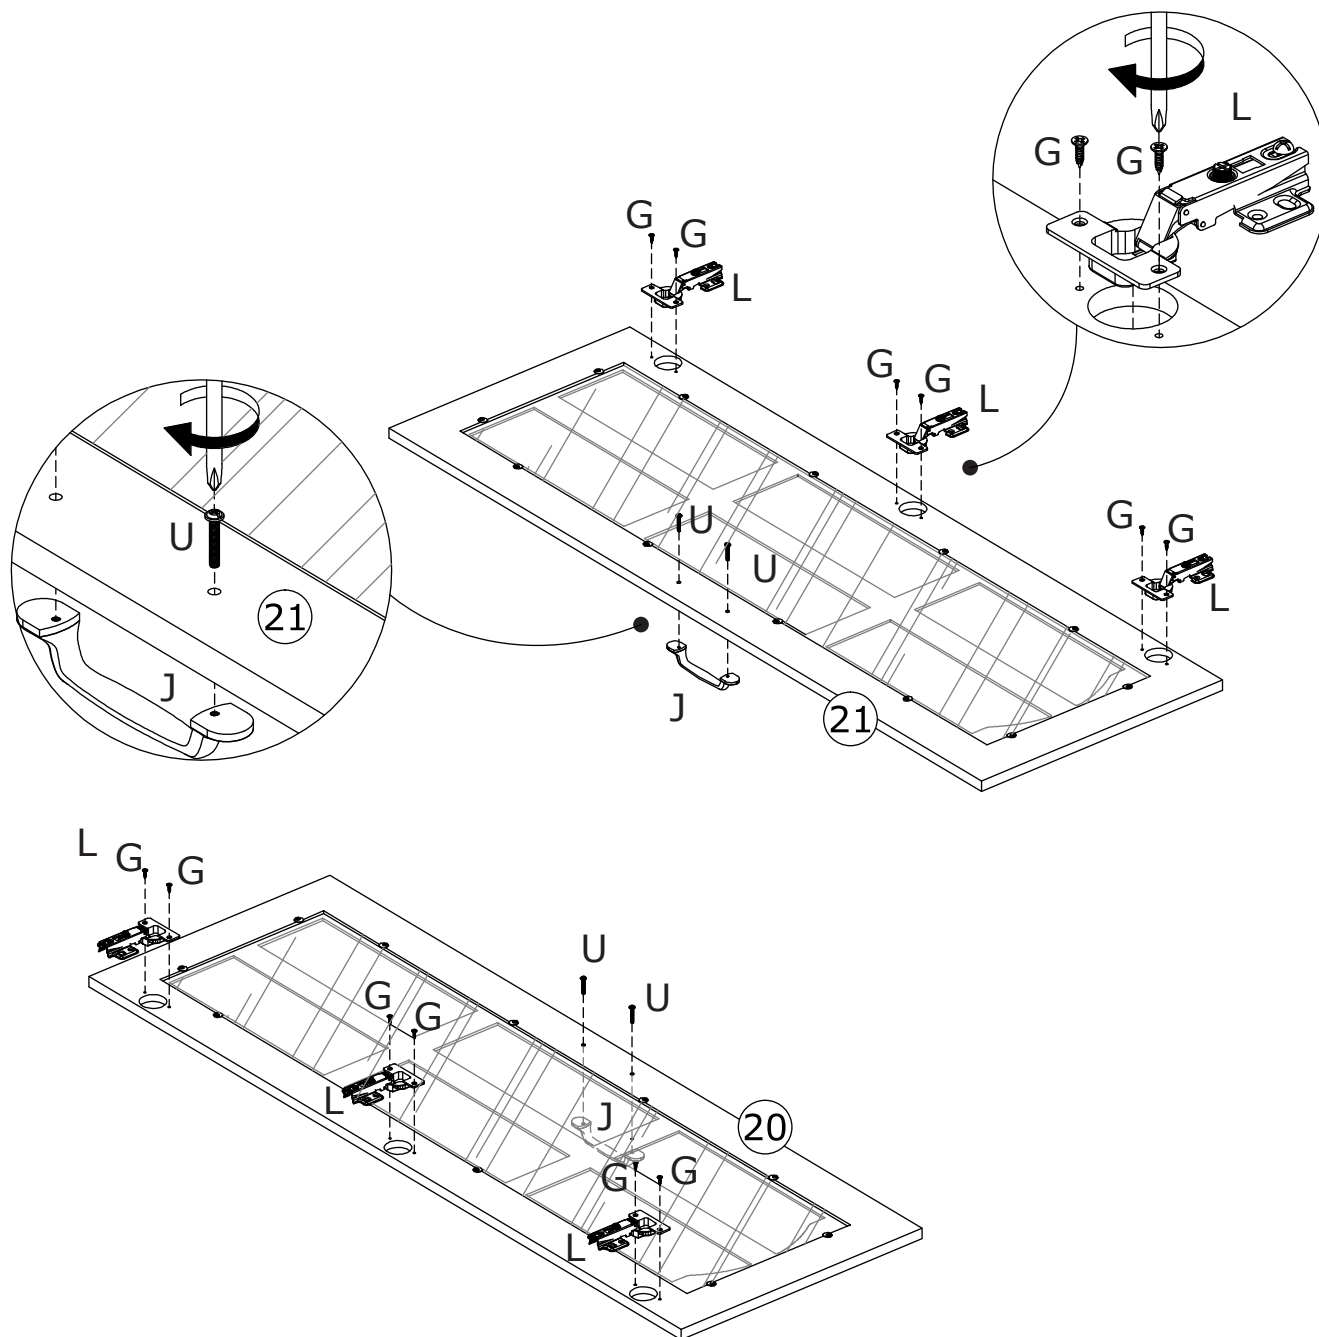


33



G x 24



 
Ø4x14mm

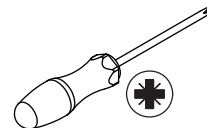

  Assemble door 20 and 21 to board 2 and 5 by fixing hinge with screw(G) as shown.

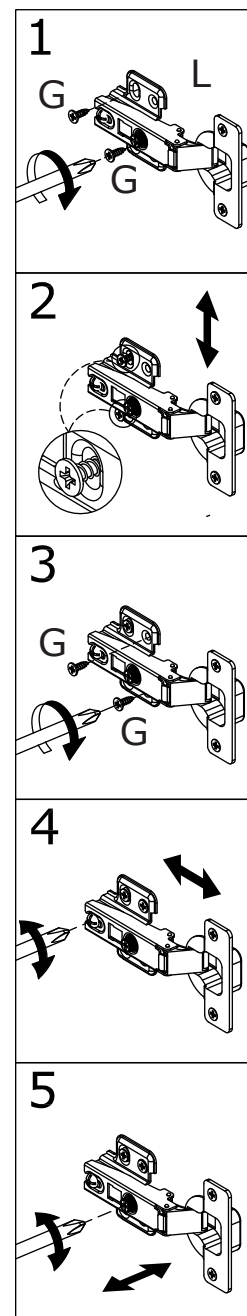
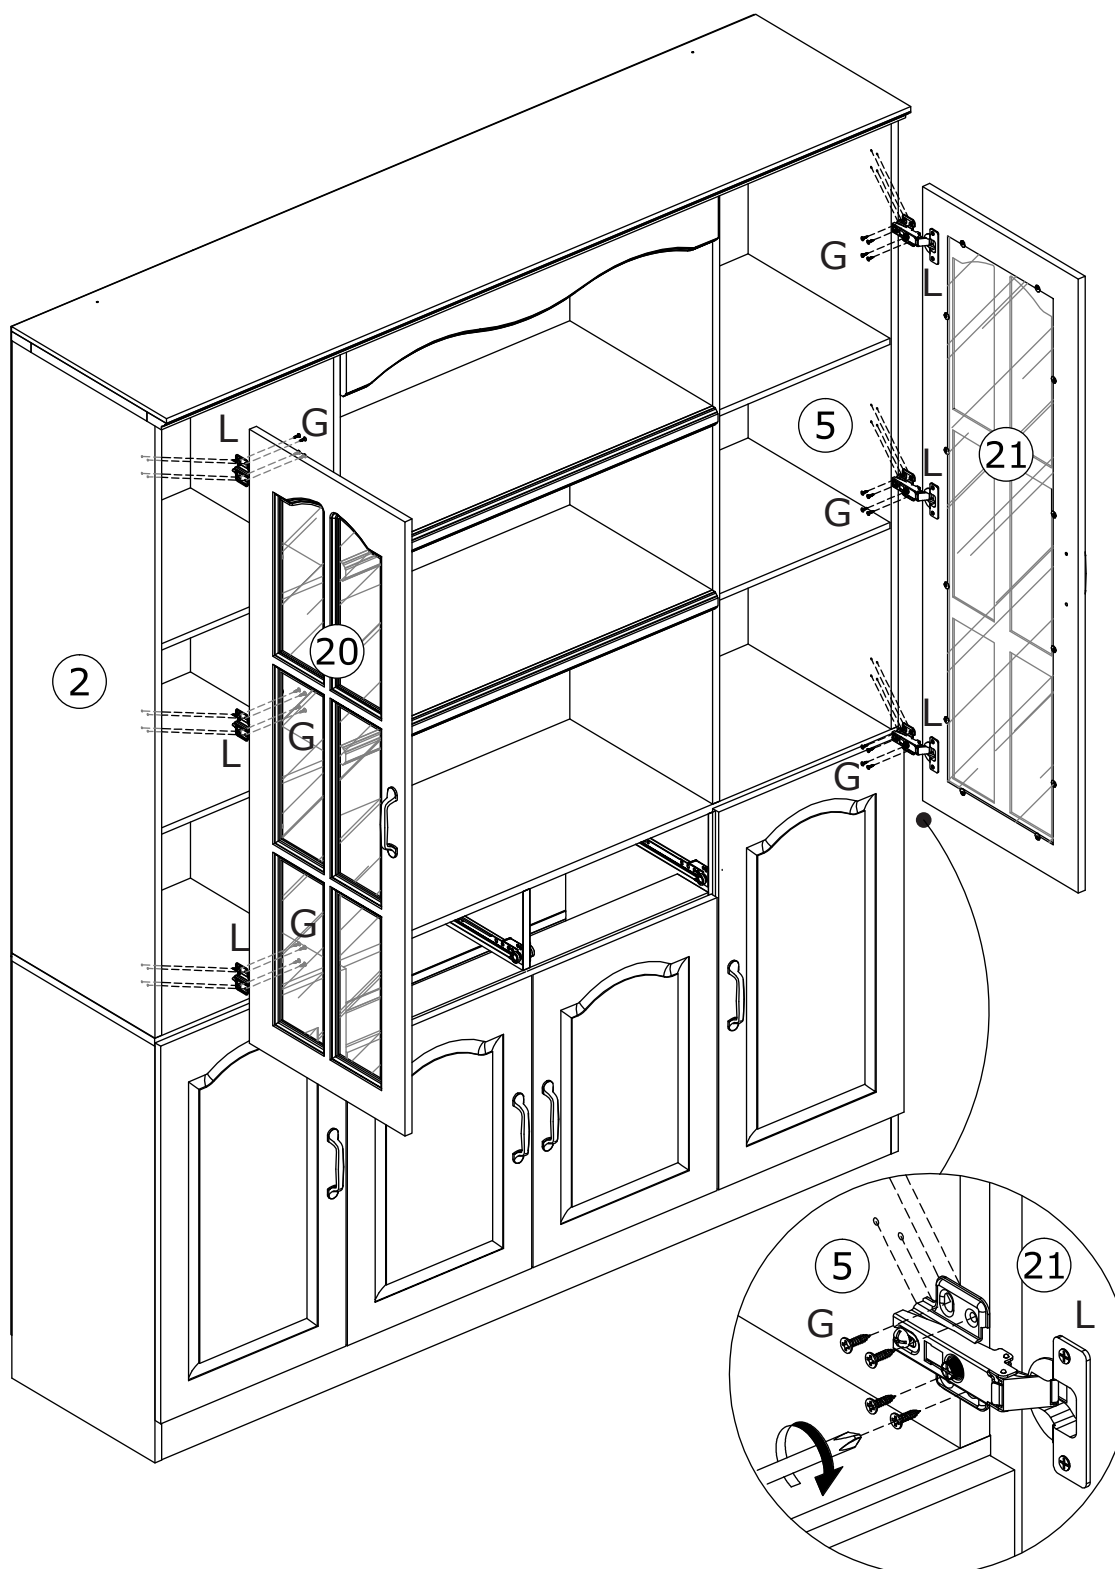


34

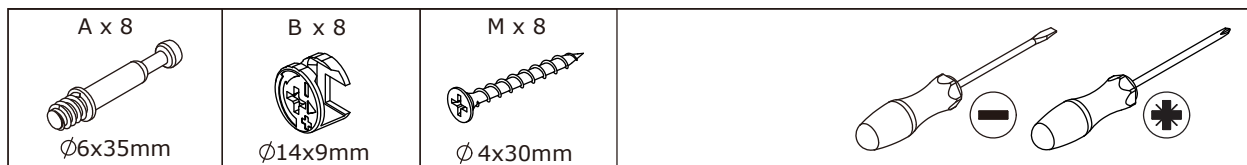 


Fix board 27 and 28 to board 30 with screw(M) as shown.

  
x2

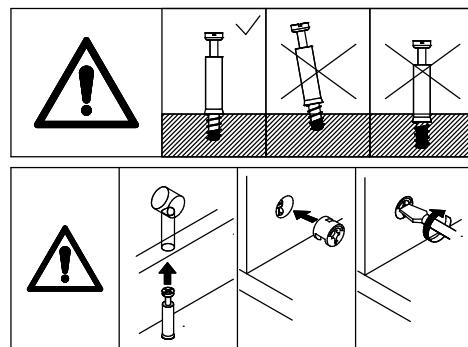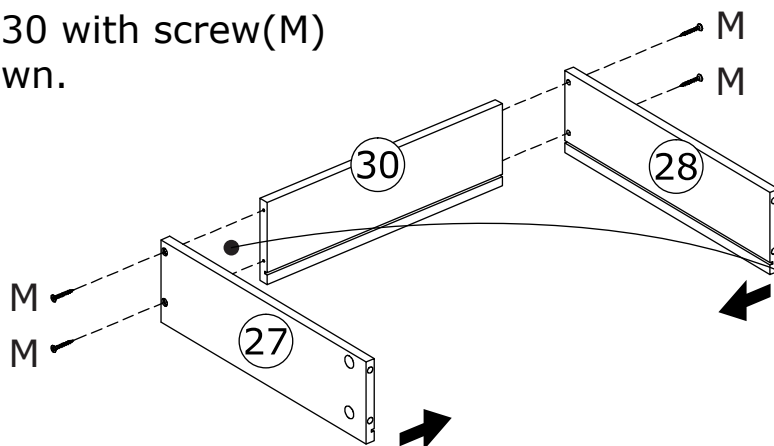




Insert board 29 along grooves as shown.

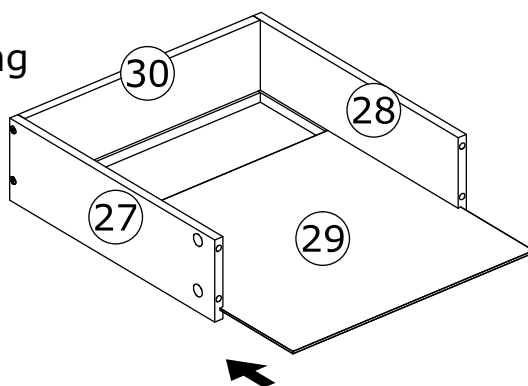 

Screw eccentric rod(A) into board 26.

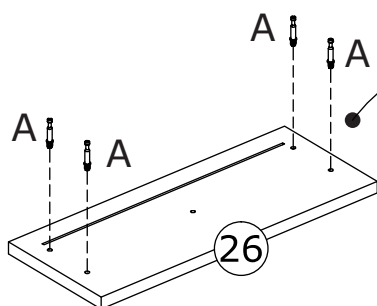 

   Attach board 26 to the component, turn cam lock(B) clockwise to tighten as shown.

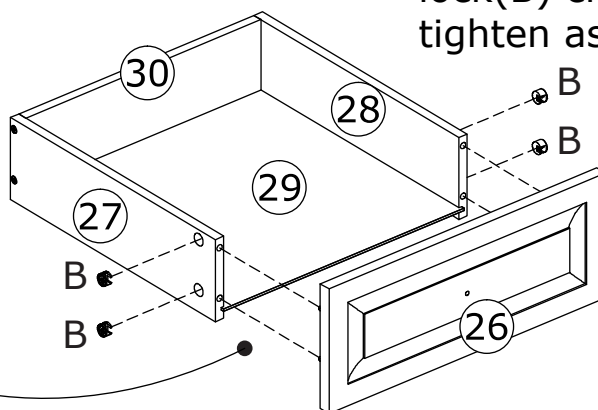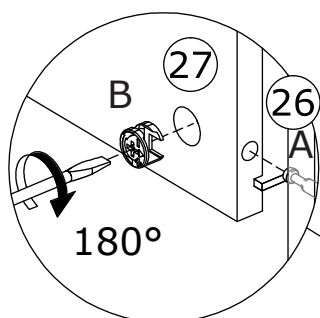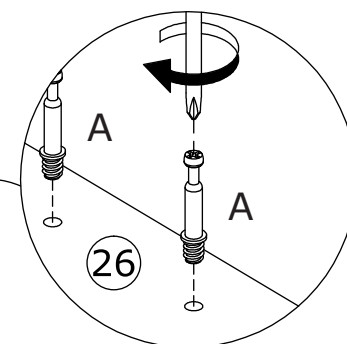

29/34

 
35

N x 2




M4x20mm

P x 2

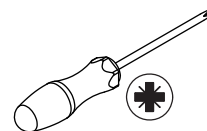

Fix knob(P) with screw(N).

 x2

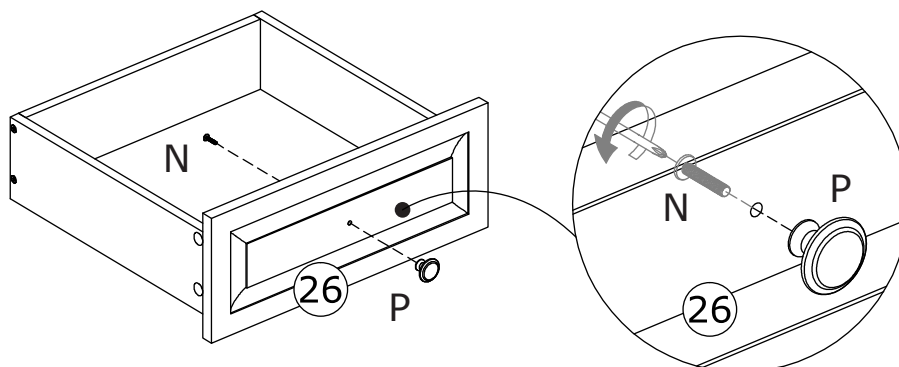


36

E x 12




Ø3.5x12mm


 
CL x 2



CR x 2

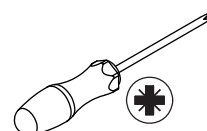 




x2

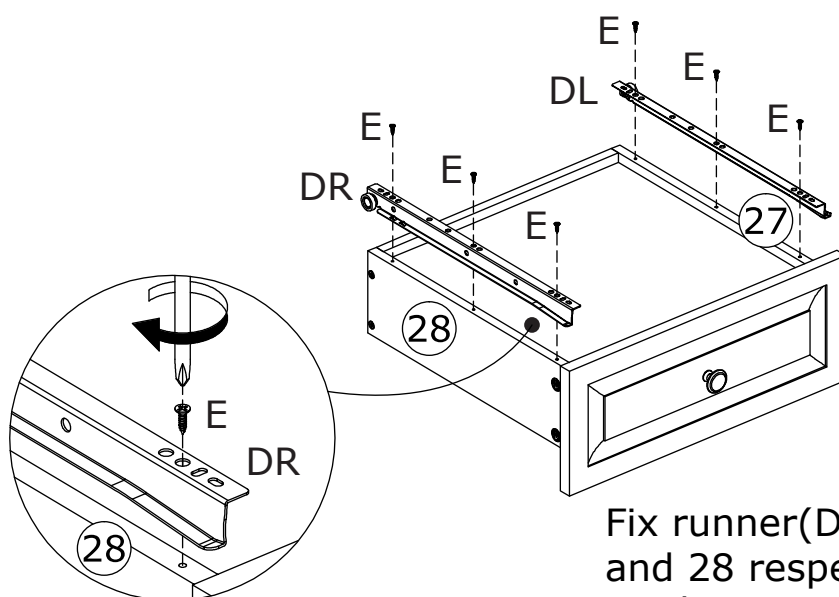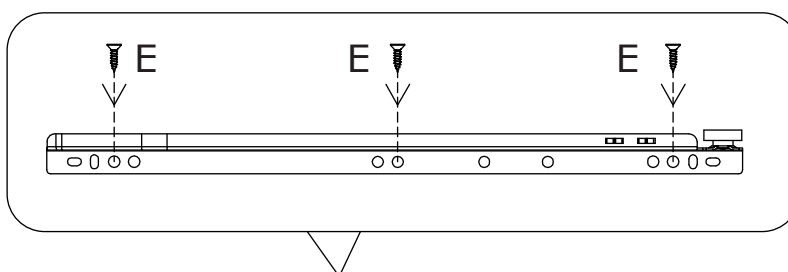  

Fix runner(DL) and (DR) to board 27 and 28 respectively with screw(E) as shown.

37

   Insert drawers in.

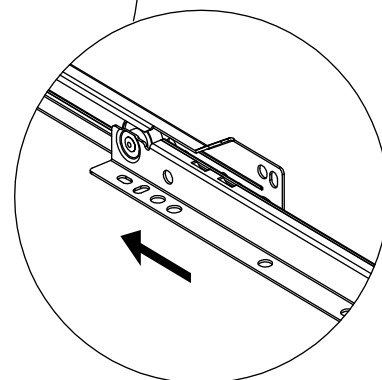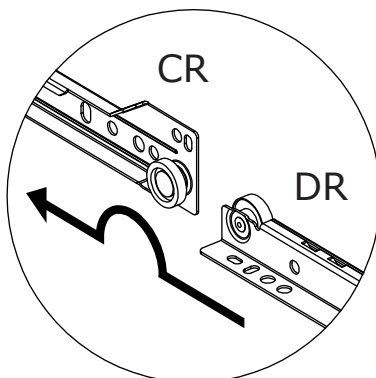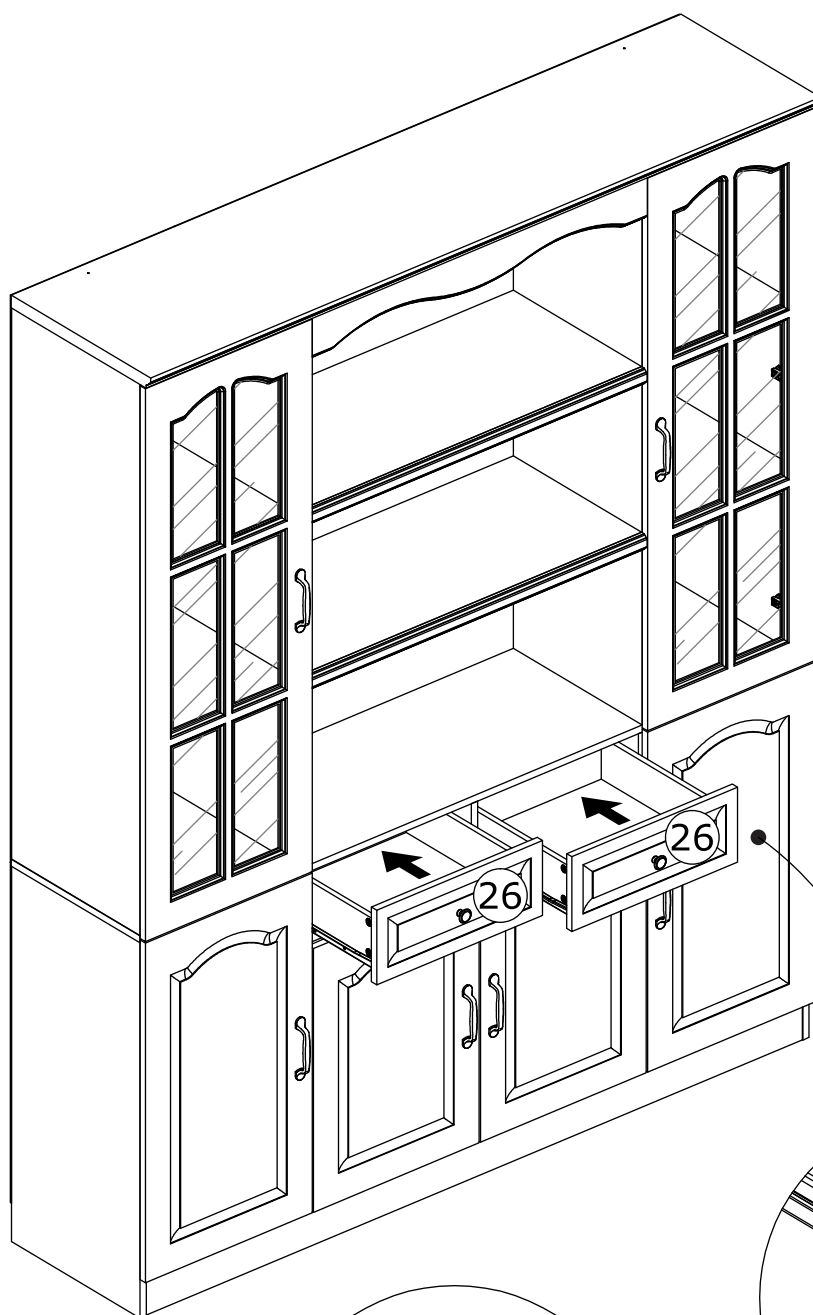



38

Q x 2




Ø4x14mm



 
 
R x 2

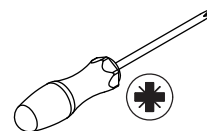

 
Fix part(R) to board 1 with screw(Q) as shown.

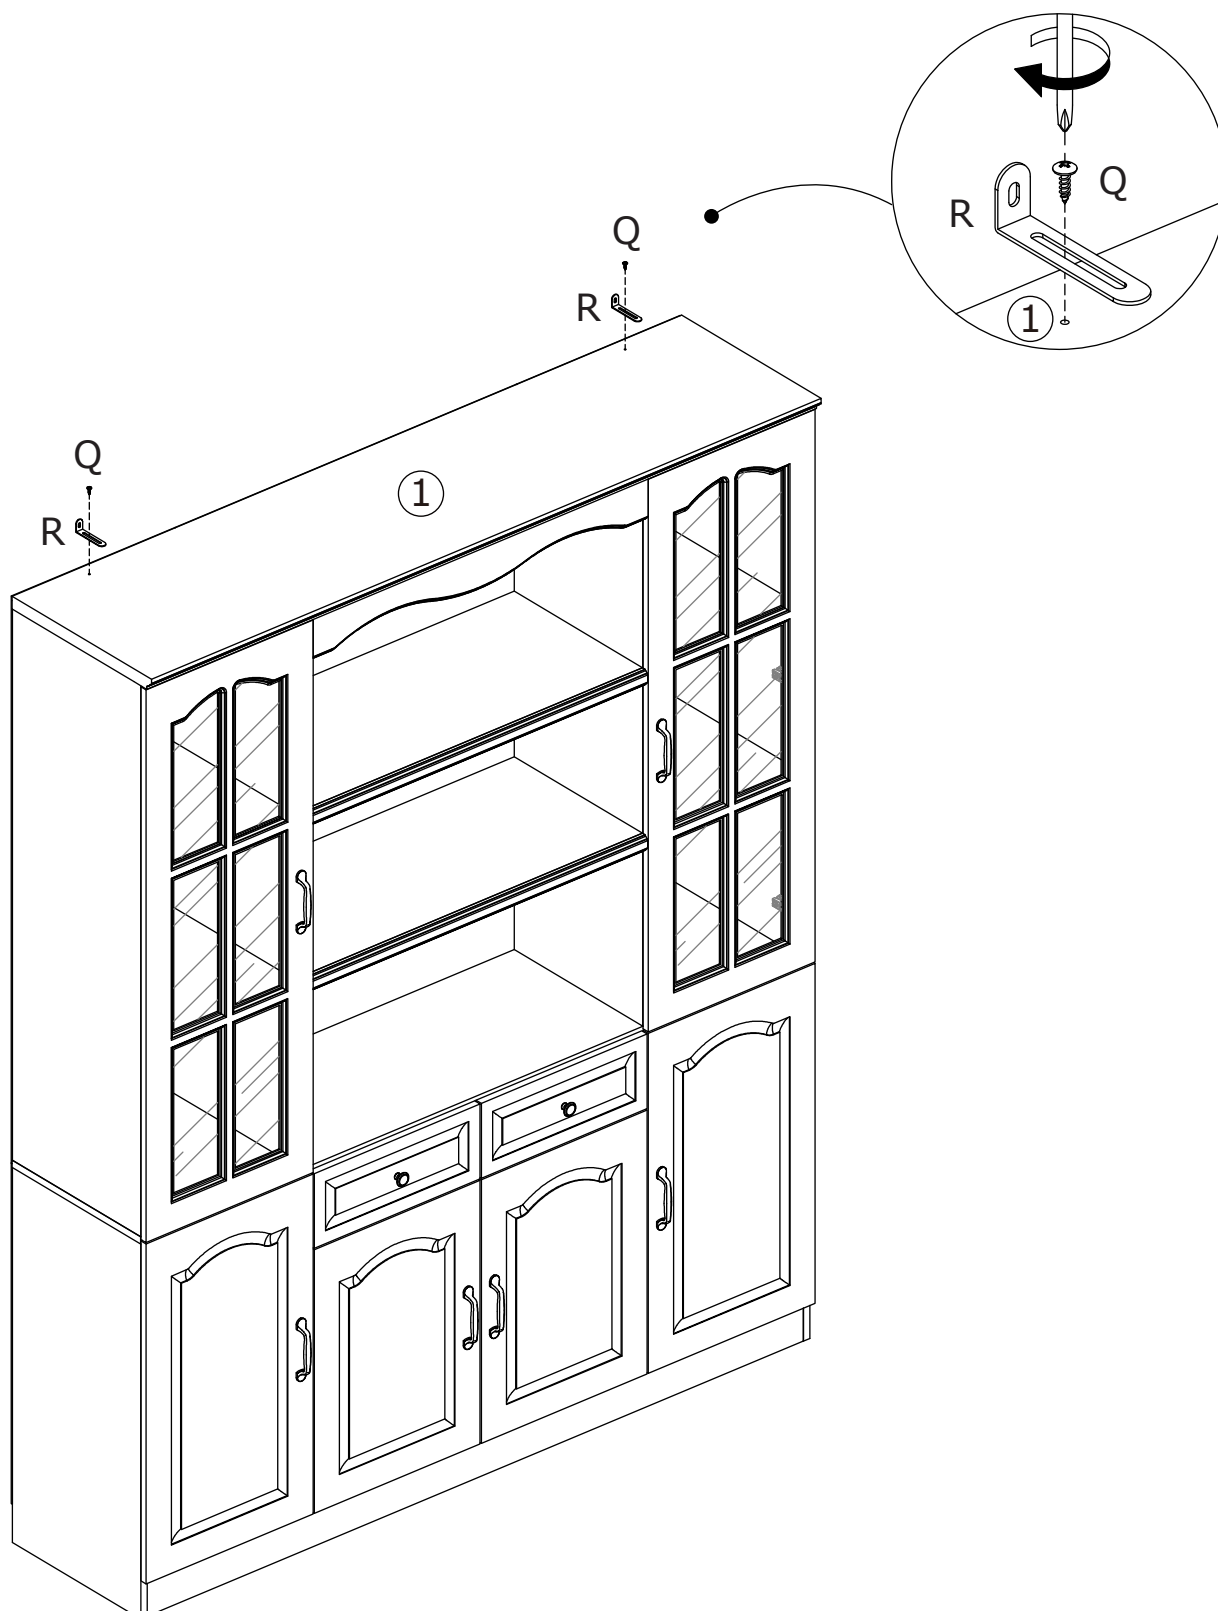

39








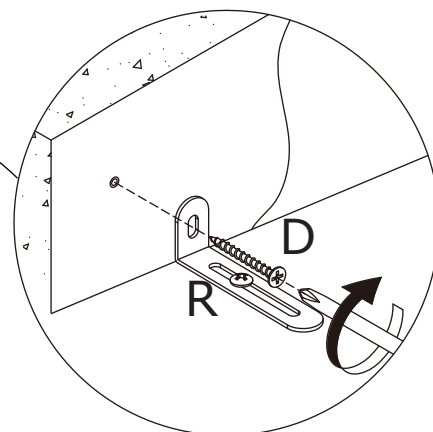 
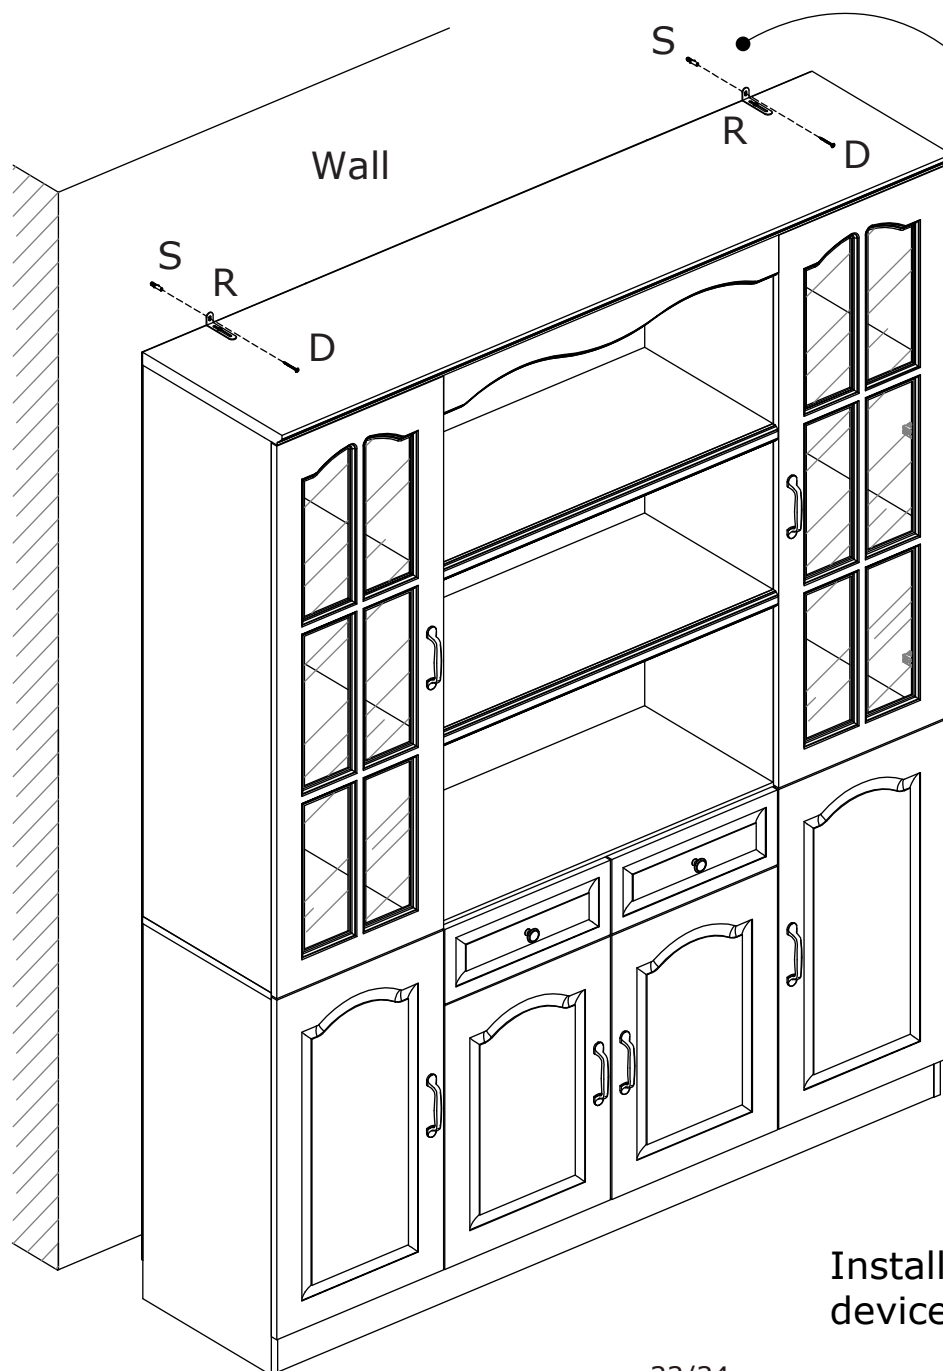 
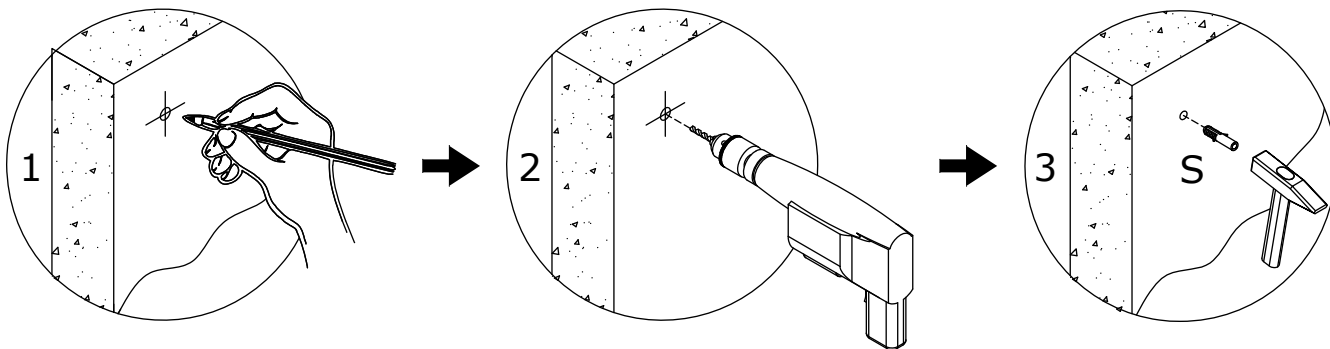 
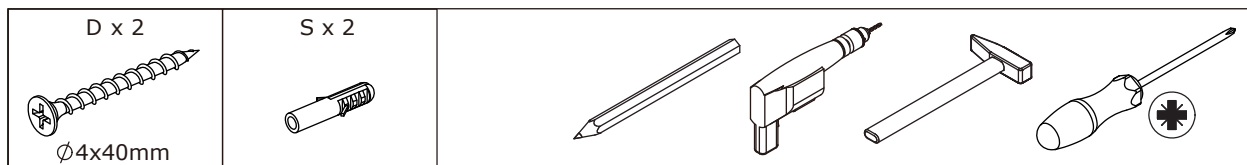 


Install anti-tipping device as shown.

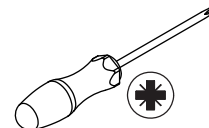 

If doors are still not aligned if the hinges are properly correctly, please watch the video.
           
<https://youtu.be/n0Lb36SoODM>

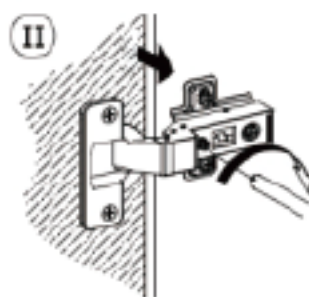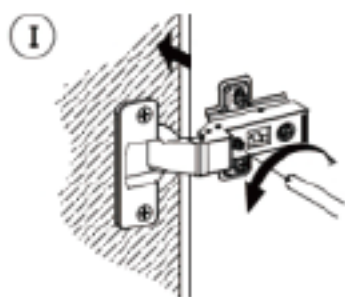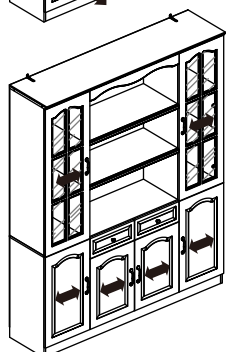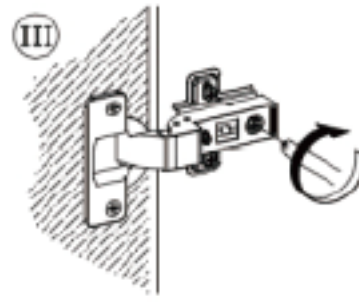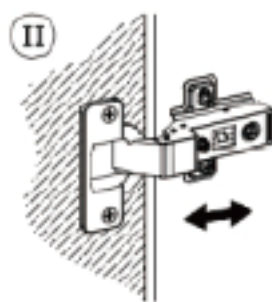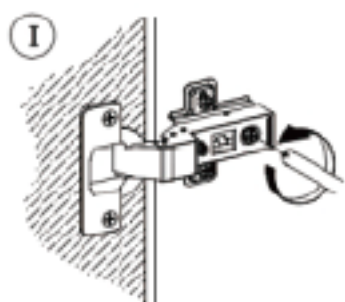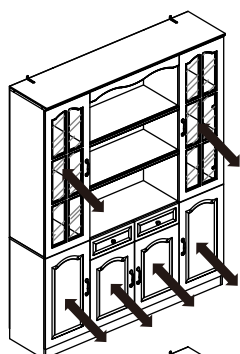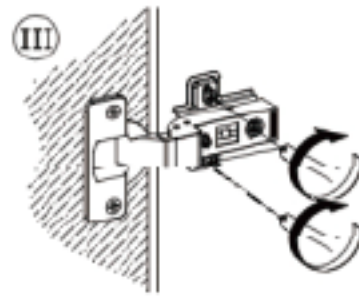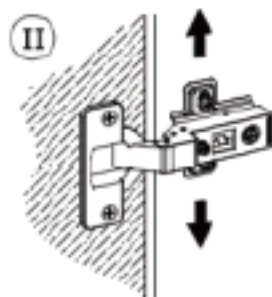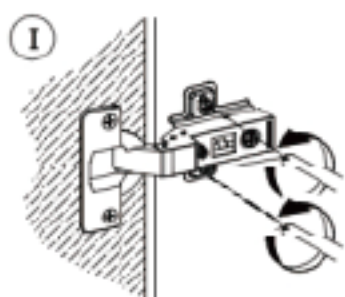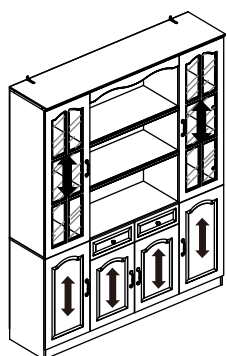

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.