

# SAUCER SWINGSET Mini Slide

## SWN0402

FOR AGES:

**3-7**

WEIGHT LIMIT:

 **35KG  
MAX**

TO BUILD:




TIME:

**2-3H**



**HOW-TO**  
Paper  
instructions

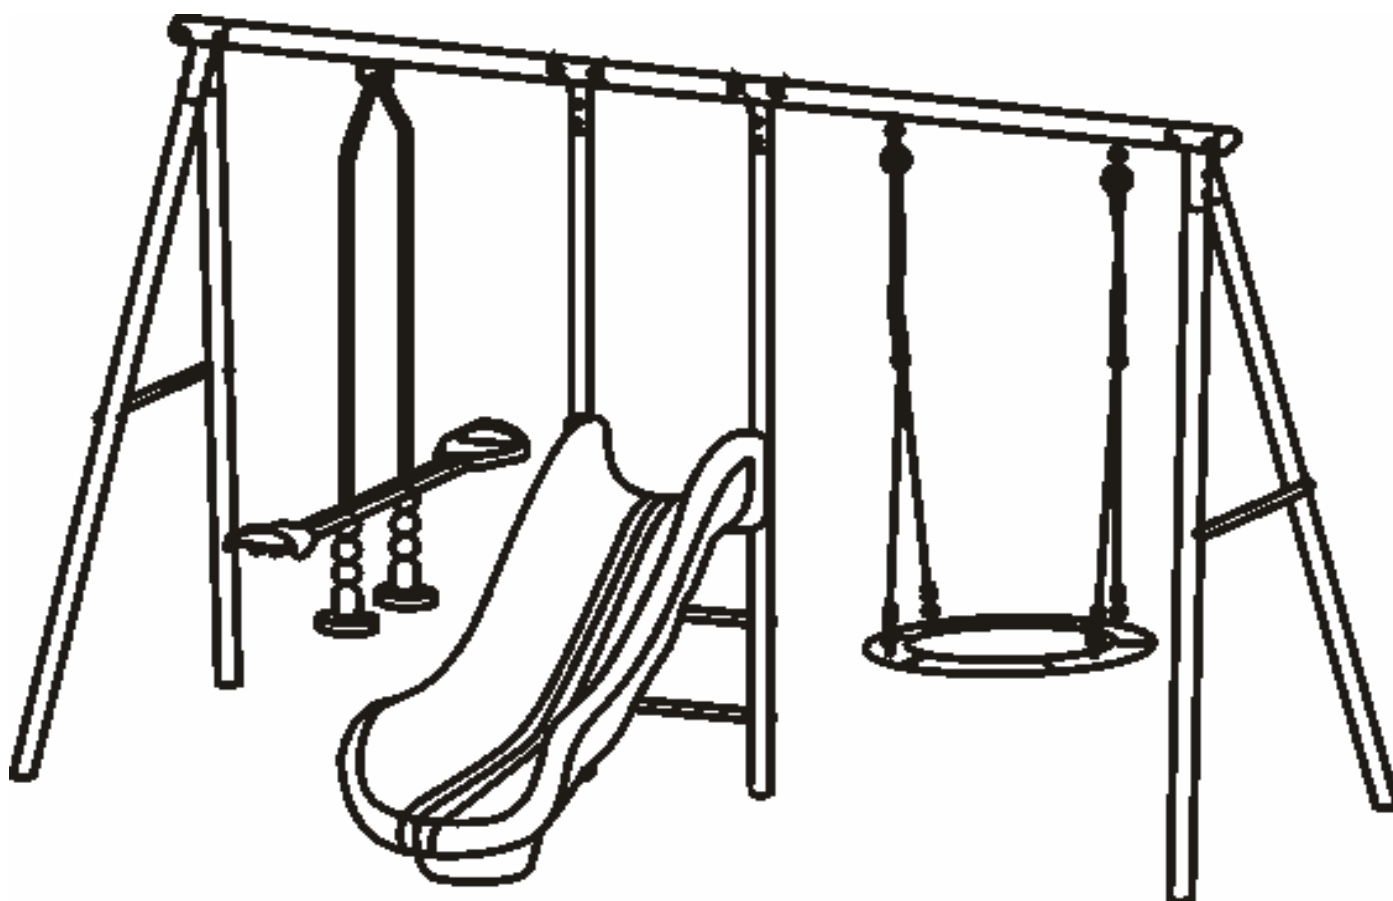


















The product has passed the EN71 test

### **WARNING: ONLY FOR DOMESTIC OUTDOOR USE**

   



 
To guarantee safety. Please give special attention to the assembly, safety, and care instructions detailed in this document.

# PARTS LIST
   
## Backbone component



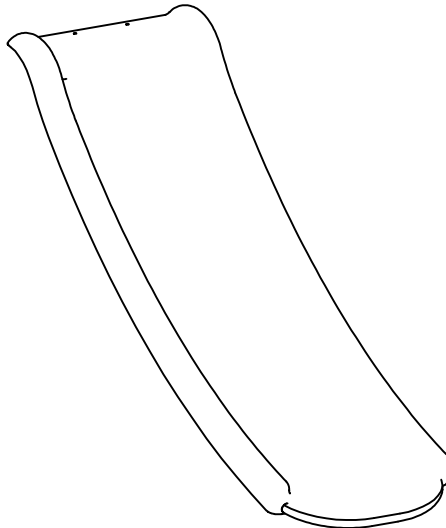

  


 


 


 







 


YC52 x2 	YC50 x2 	S15 x2 	S7Lx1 	S5 x1 
			YBB5x2 	S6Lx1 
YD2 x4 	YC51 x2 	S16 x2 	YB20 x2 	YB22x2 
		YB19 x2 		
		P-SWx1 	S8 x3 	
			S12-1 x1 	
			S9 x4 	
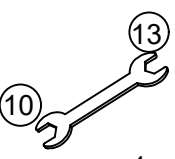
## Slide part

YC17 x1 	YC27 x2 
	BS1 x2 
	BS2 x2 
	BS4 x2 


# PARTS LIST

## Screw bag


<p>YG32 x2</p>  <p>M 4.5x40</p>	<p>YN3x8</p>  <p>Ø 8/M6x40</p>	<p>Fa8 x8</p>  <p>Ø 8/M6x35</p>	<p>YN4 x4</p>  <p>Ø 8/M6x20</p>	<p>YF2 x2</p>  <p>M 8x50</p>	<p>YF11x8</p>  <p>M 6x25</p>
<p>YE1x17</p>  <p>M 6x35</p>	<p>YE5 x2</p>  <p>M 8x78</p>	<p>YE9 x8</p>  <p>M 6x45</p>	<p>YE29 x1</p>  <p>M 6x20</p>	 <p>x2</p>	 <p>x1</p>
<p>YD10x18</p>  <p>Ø 6</p>	<p>YD11x28</p>  <p>Ø 8</p>	<p>YD12x2</p>  <p>Ø 10</p>	<p>YL1 x28</p>  <p>Ø 8</p>	<p>YL2 x18</p>  <p>Ø 6</p>	<p>YD3 x4</p> 
<p>YC3 x8</p> 	<p>YG1x8</p>  <p>M 6</p>	<p>YG13x38</p>  <p>M 6x20</p>	<p>YG2 x8</p>  <p>M 8</p>	<p>YG6x8</p> 	<p>YD15 x3</p> 

# ASSEMBLY INSTRUCTIONS

## STEP 1

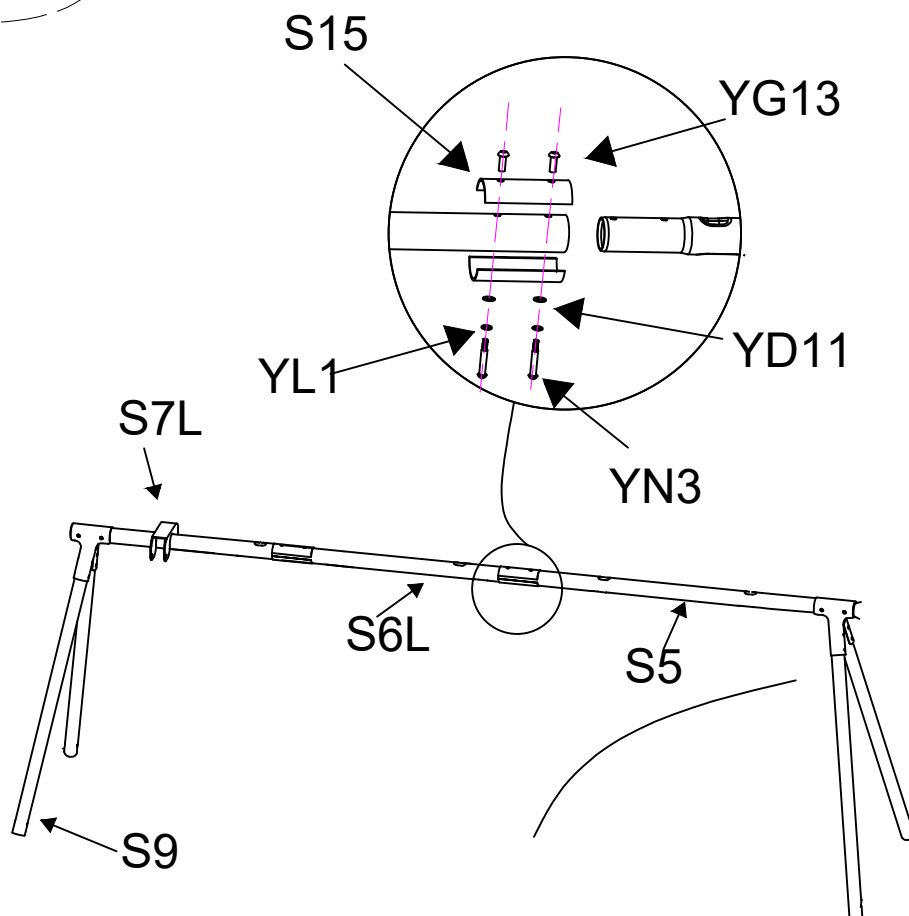


S5	x1
S7L	x1
S6L	x1
S9	x4
S19	x1
YD11	x16
YL1	x16
S16	x2
YN3	x8
Fa8	x8
YG13	x16
S15	x4

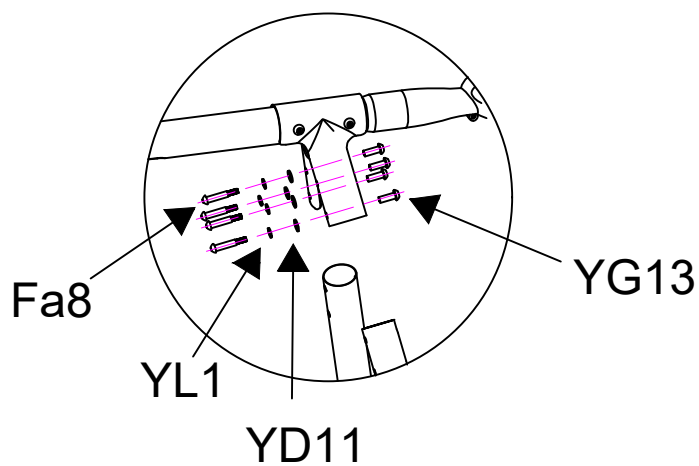

# ASSEMBLY INSTRUCTIONS


## STEP 2

YBB5 x2  
 S8 x3  
 P-SW x1  
 YC40 x1  
 YD10 x4  
 YL2 x4  
 YD3 x4  
 YG2 x4  
 YE1 x4  
 YG13 x4  
 S12-1 x1  
 P/DB x1

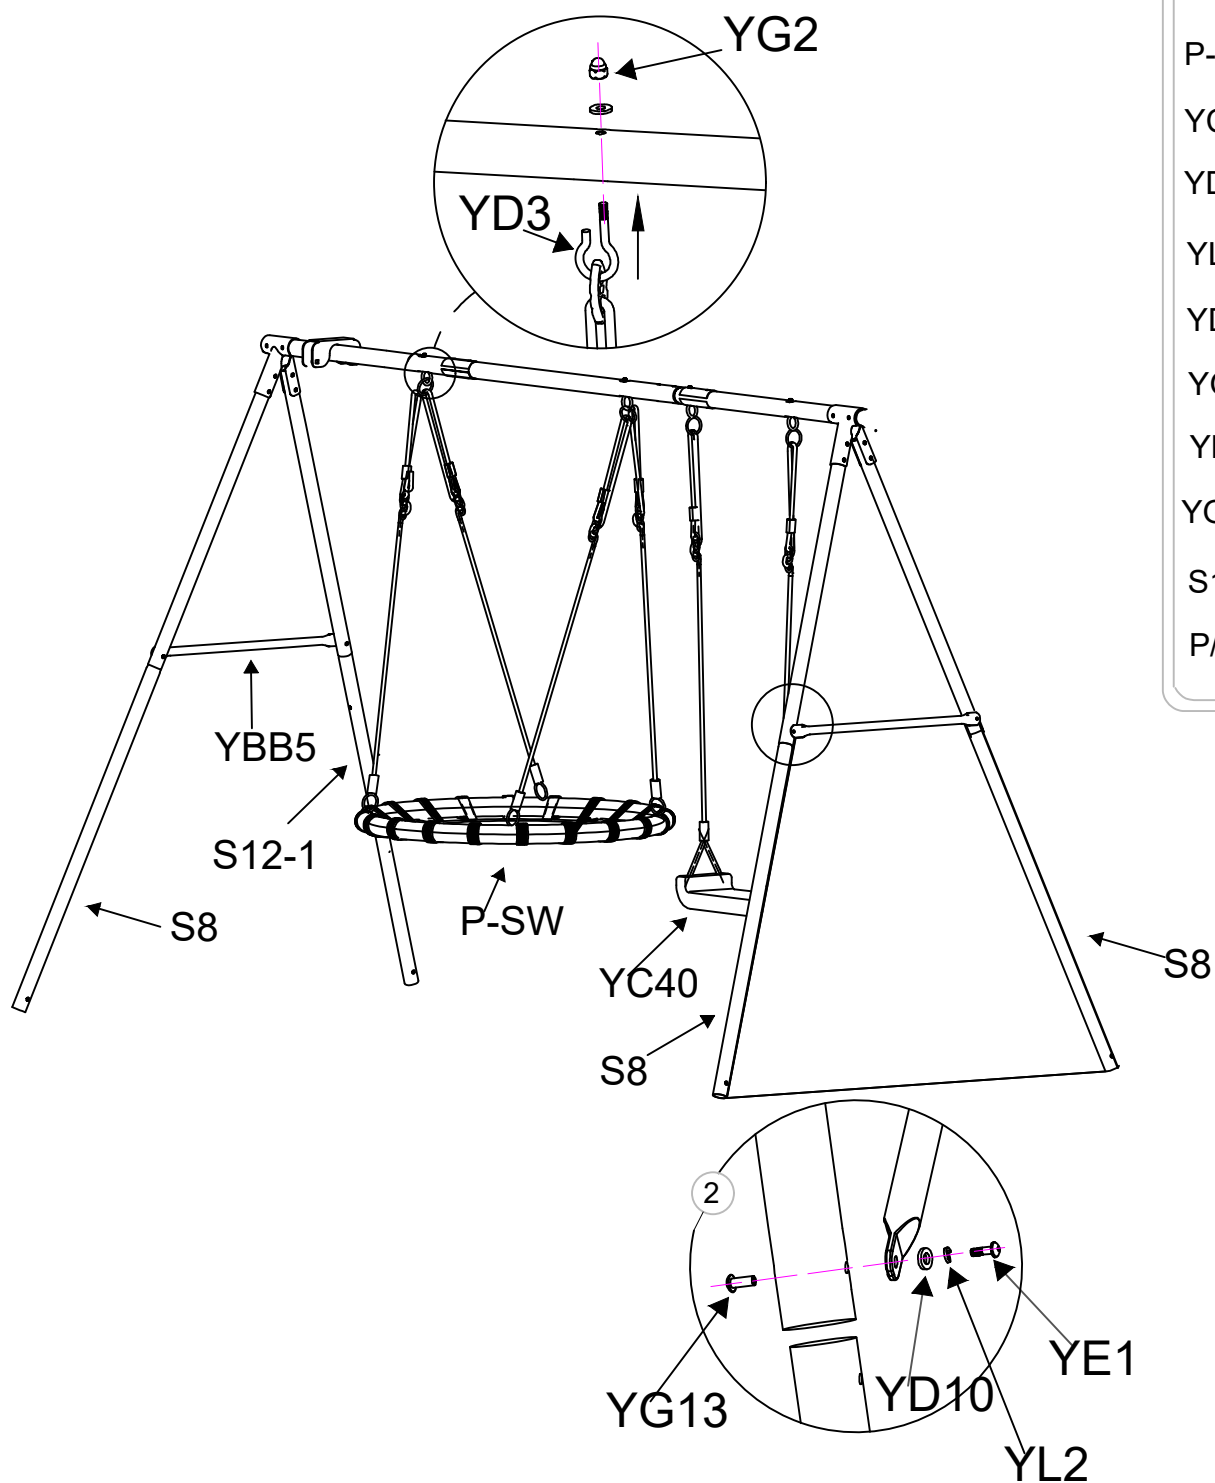

# ASSEMBLY INSTRUCTIONS

## STEP 3

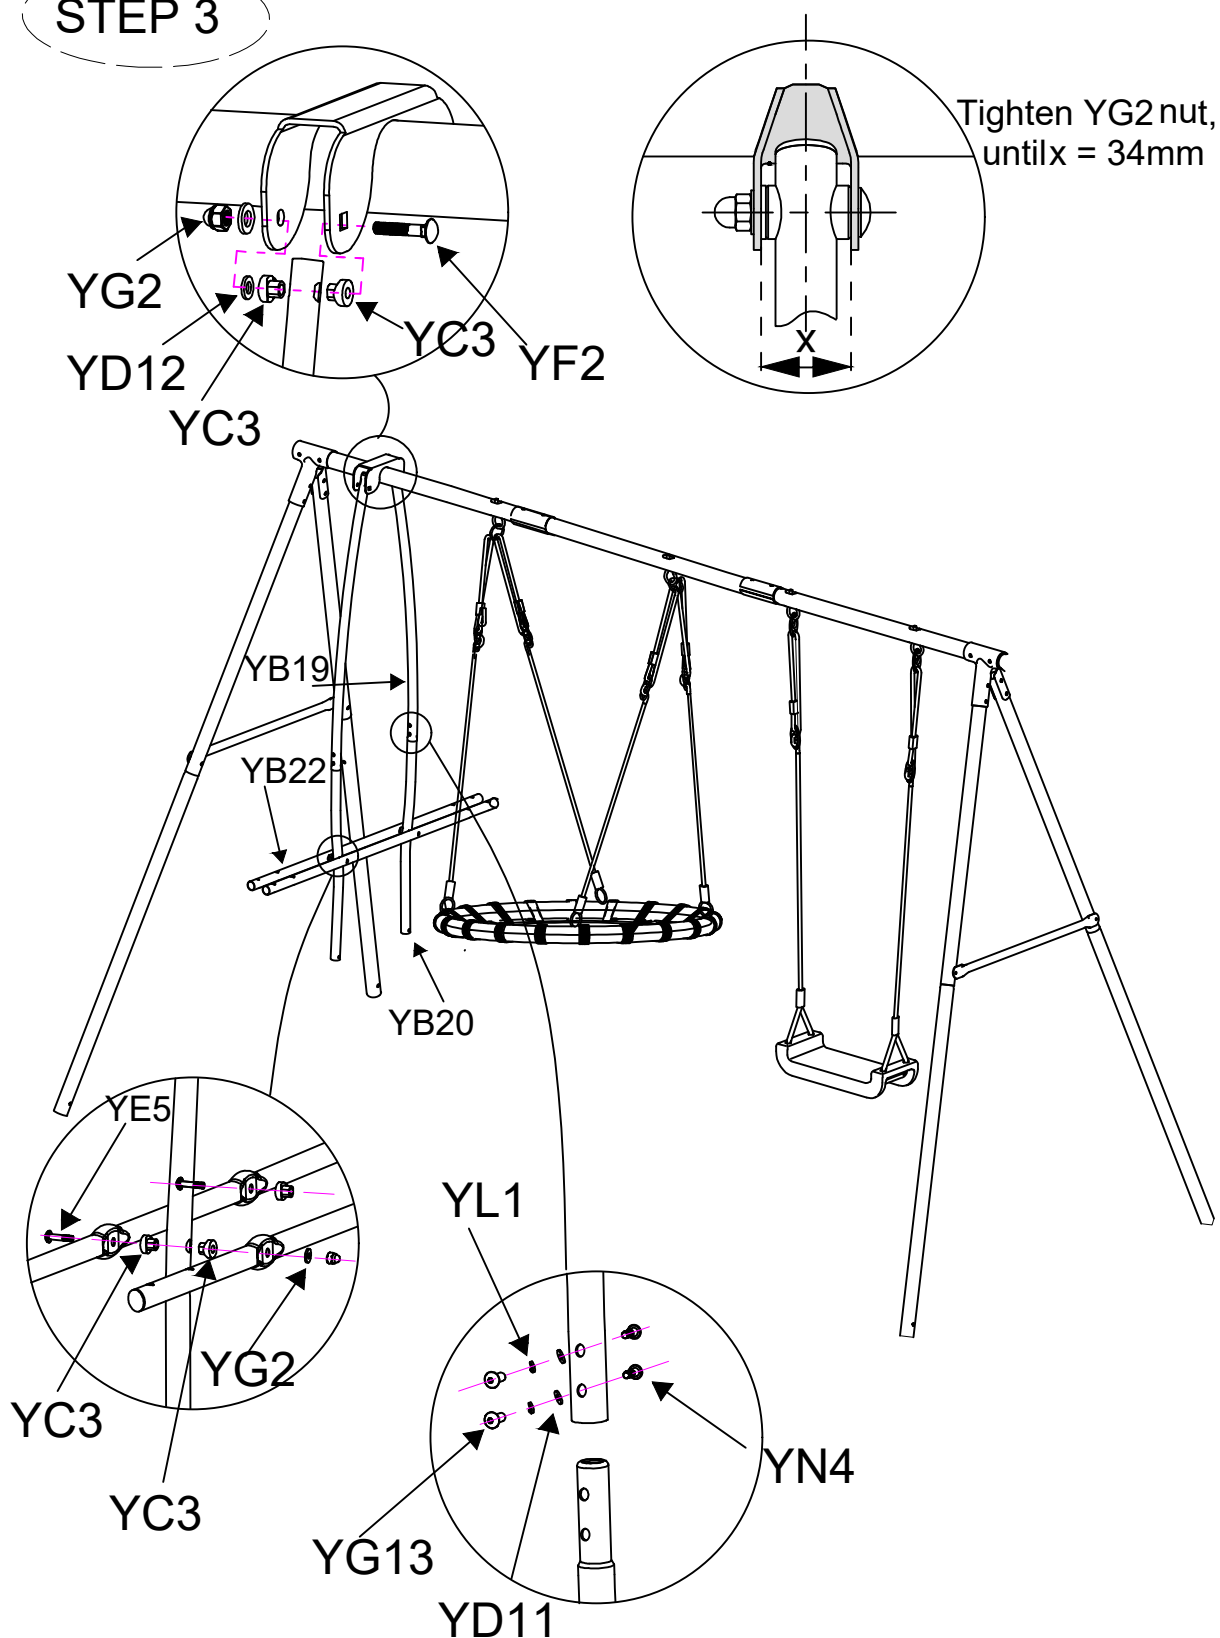


YD11	x4
YG2	x4
YF2	x2
YD12	x2
YC3	x8
YG13	x4
YL1	x4
YB19	x2
YB20	x2
YB22	x2
YN4	x4
YE5	x2

# ASSEMBLY INSTRUCTIONS

STEP 4

YD11	x8
YL1	x8
YF11	x8
YC50	x2
YG13	x8
YC51	x2
YC52	x2
YG1	x2
YE1	x2

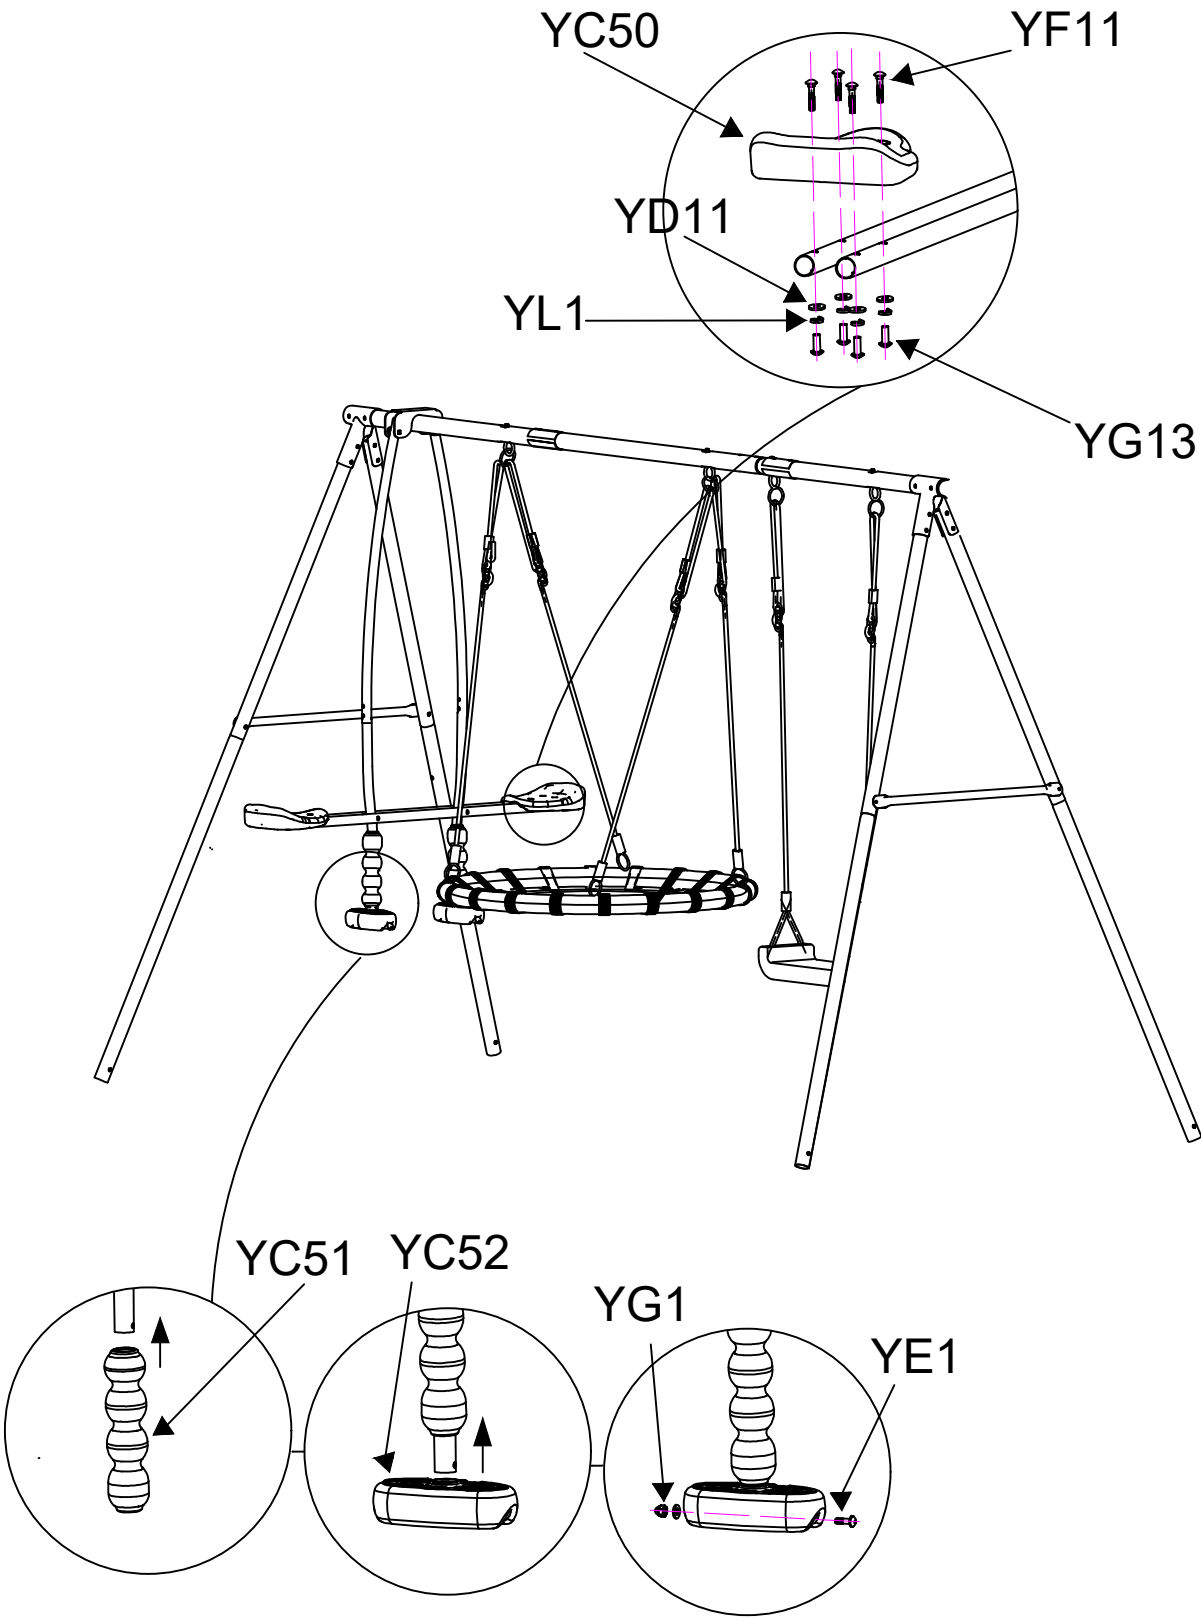












# ASSEMBLY INSTRUCTIONS

## STEP 9

S17 x1  
YG13 x2  
YL2 x2  
YD10 x2  
YE1 x1  
YE29 x1  
YD15 x3

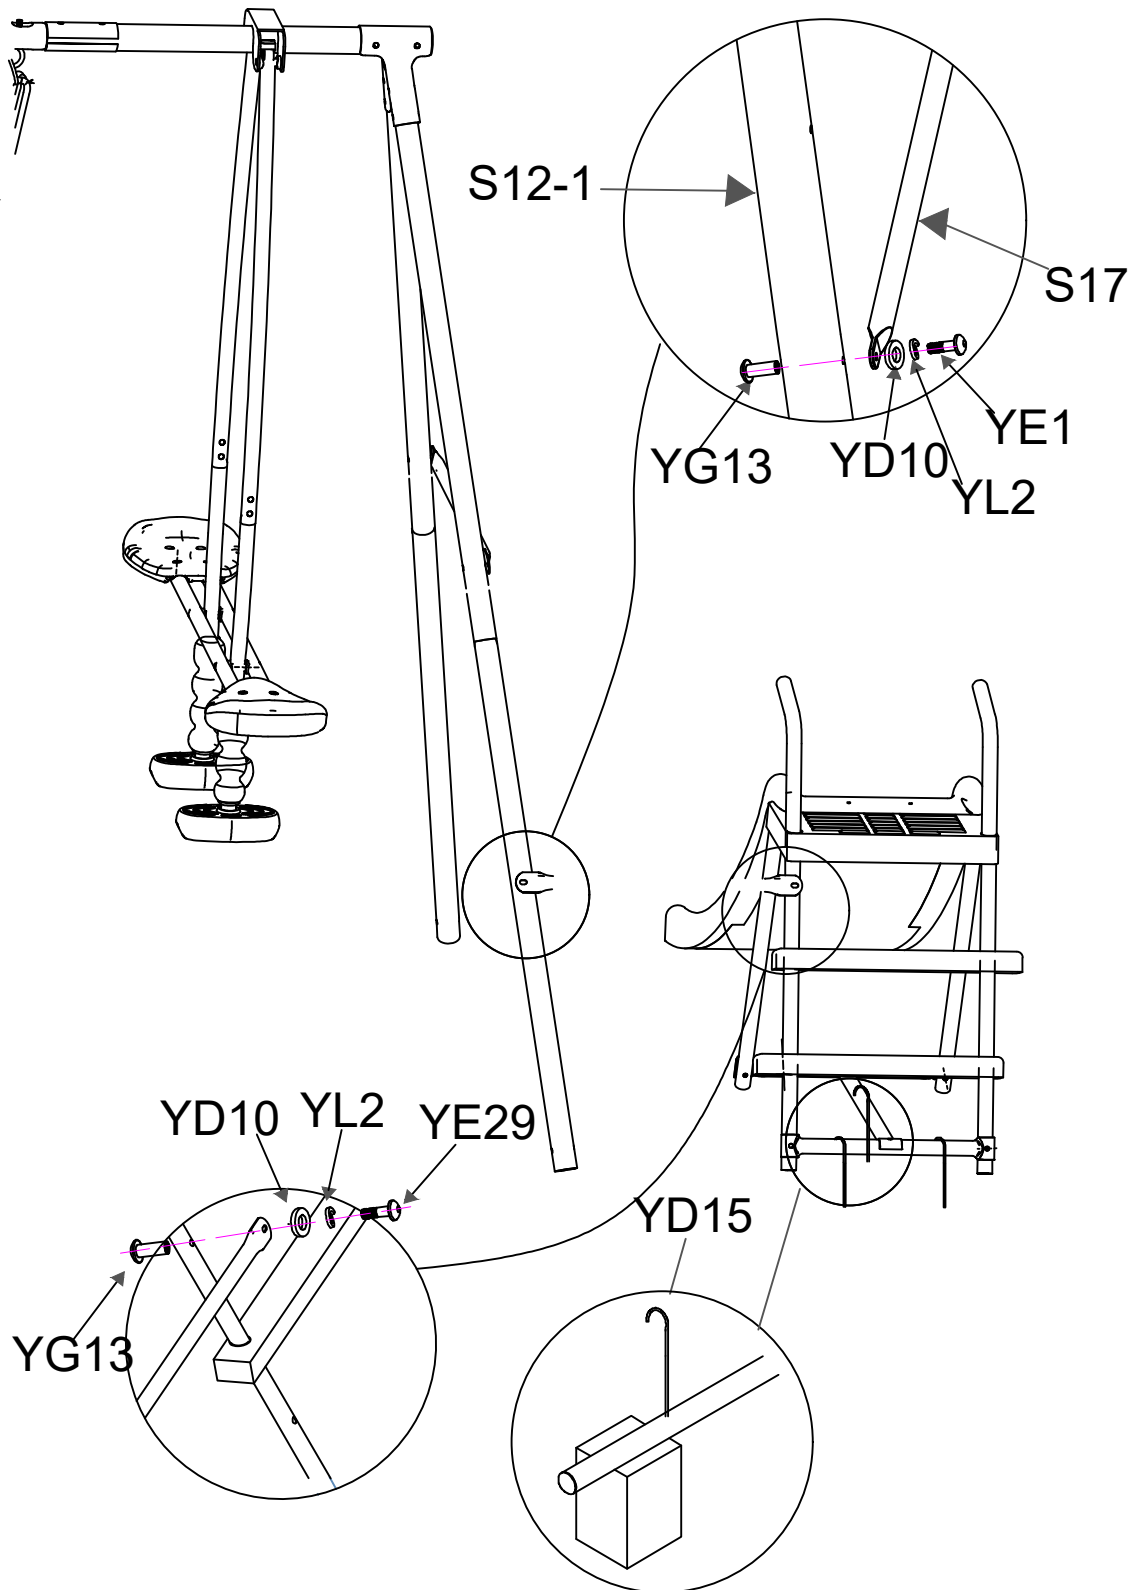

# WARNINGS

## ASSEMBLY INSTRUCTIONS

*To be retained for future reference.*

**WARNING:** *Only for domestic outdoor use.*

Dear Customer,

To guarantee safety, please give special attention to the assembly, safety, and care instructions detailed in this document.

### ASSEMBLY ADVICE

Please follow the assembly instructions exactly as given.

- 1) This product must be assembled by an adult.
- 2) Keep a copy of your assembly instructions for future reference. This can be particularly handy for identification of parts if any after sales service is required.
- 3) The EN 71-8, chapter 4.6 standard requires a 40cm minimum distance between the ground and a 2 person swing and a 35cm minimum distance between the ground and swings. These distances are important for safe use. After having assembled the playground, check these distances. In case of non-conformity, do not hesitate to contact our after-sales service.
- 4) We advise that the swing set is not faced towards the sun
- 5) Before commencing, check that none of the parts are missing. If you find that you are missing a part please contact our after sales service department.
- 6) Dispose of packaging thoughtfully.
- 7) Do not allow children to play with packaging.

### SAFETY ADVICE

- 1) This product must not be used by children under the age of 36 months. It is suitable only for children between the ages of 3 and 7 years with a maximum weight of 35kg. It must be used under adult supervision.
- 2) Only 4 children may safely use the equipment simultaneously
- 3) As this product contains small parts that could be swallowed, please keep parts away from children under 36 months.
- 4) This product is only for private use at home and must never be used in parks and public gardens, in schools, camp sites, hotels, public leisure areas, etc.
- 5) The swing set should be set up on a flat surface 2 meters away from all other things, structures or obstacles (walls, fences, trees, washing lines or electric cables etc.) that could cause injury during use.
- 6) This product must not be set up over hard surfaces such as concrete, asphalt or other hard surfaces. We recommend installation over grass or other soft surfaces.
- 7) This swing set must be embedded firmly into the ground. Please follow the instructions carefully for doing so. Only use this product when the concrete is dry.
- 8) Anchors should be placed level with or below ground level in order to reduce tripping hazards
- 9) The anchorage must be checked regularly, in addition to the hooks and fixtures.
- 10) Dispose of packaging thoughtfully.
- 11) Do not allow children to play with packaging.
- 12) During the assembly, keep children away from the toy to avoid child swallowing the small accessories.

### FIXING INTO THE GROUND

- 1) Assemble the swing set completely and place it in the desired place.
- 2) Locate and mark the position for the sealing legs.
- 3) Check the dimensions showed on the diagram, and correct if necessary.
- 4) Under the four feet, mark a square of 350 X 350 mm and dig a 350 mm deep hole.
- 5) Fill these holes with concrete following the diagram of the recto. The top of the concrete should not exceed ground level.
- 6) Place the sealing legs in the concrete in the located place (see point 2). Make sure the drilled end of the sealing legs is above the level of the concrete.
- 7) Once the concrete is set, screw the feet into the sealing legs.
- 8) Ensure that the concrete is completely dry before using the swing.
- 9) Cover the concrete with soil. We strongly advise checking this anchoring periodically

## MAINTENANCE

- 1) All metal parts are galvanized steel and powder coated for rust protection; however, in certain areas close to the sea we advise that additional rust prevention treatment may be necessary.
- 2) The surfaces of all the parts should be checked at least once a month, especially for the fixtures such as hooks on the overhead beam. If the fixtures and hooks show wear over 10% of their original thickness, then they should be replaced with the same fixtures as those originally provided.
- 3) To check all nuts and bolts for tightness and tighten when required.
- 4) To check all coverings for bolts and sharp edges and replace when required.
- 5) Toys may collapse or be dangerous if they don't check regularly.
- 6) All parts that are under constant friction should be oiled regularly with a suitable lubricant.
- 7) The ground on which the product is placed should be controlled regularly. All elements such as stones or other objects that could cause injury in the case of a fall should be removed. It is advised to remove the apparatus during the winter period, when not in use, to avoid any deterioration due to bad weather conditions.
- 8) Check for signs of wear, especially where swinging apparatus' plastic ring attaches to the metal swing hooks on the upper beam. As soon as the plastic ring shows signs of deterioration, the apparatus should be replaced.
- 9) All used apparatuses and/or parts must be replaced by a part delivered by our after sales service, or by an approved retailer.
- 10) If any modifications made by consumer to the original activity toy shall be carried out according to the instructions of the manufacturer.
- 11) Sand rusted areas and tubular members and repaint using a non-lead based paint when required.
- 12) Check swing seats, chains, ropes and other means of attachment for evidence of deterioration;

### PRACTICAL ADVICE

Frequent questions and observations

#### SAFETY

Safety checks should be carried out regularly on this product. These checks should include, if necessary, removing any sharp edges, replacing missing screw covers, and tightening the nuts and bolts. These checks should be done to avoid any danger or upturning of the swing set through normal wear and tear.

Comfort

- 1) If the swing set develops a squeak apply a suitable gel lubricant. Do not use liquid lubricant as it will run down the fixings and apparatus. The height of the swing can be adjusted using the plastic eyelet fixture. By pulling the rope through the fixture, the height of the seat can be adjusted to suit the user.

The dimensions given are indicative only, they may vary according to the assembly method.

- 2) This Swing Set must be used under adult supervision. Keep any additional components, they may be useful for later operation of maintenance.
- 3) When a child is playing on the device, other children can not run in the area of movements of elements to impact.

#### CAUTION !Fall danger

**IMPORTANT!** Wait until the concrete is set before using your slide and check anchorages regularly.



