

INSTRUCTIONS FOR USE AND CARE

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or any liquid.
4. Close supervision is necessary when any appliance is used near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot liquids.

WARNING

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other.) As a safety feature, this plug fits in a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

SHORT CORD

A short power supply cord is provided to reduce the risk of becoming entangled or snagged. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it will not hang over the countertop or tabletop where it can be pulled on by children or pets, or tripped over.

OPERATION

The Buffet Range has tubular surface elements controlled by individual thermostatic controls adjacent to the element. These controls cause the element to cycle on and off to maintain the desired temperature in the cooking utensil. When the control is in the extreme counter-clockwise position the element will be off; in the complete clockwise position the element will be continuously on; somewhere in between is the ideal setting for your needs. With some experience, you will determine the appropriate setting.

HOW TO CLEAN

- Disconnect the Buffet Range from the electrical wall socket before cleaning.
- The exterior of the Buffet Range should be cleaned by using a damp cloth. Do not use abrasive cleaners as they can result in a scratched surface.
- To facilitate cleaning, the surface elements lift up. The drip pan should be cleaned with a damp non-abrasive soapy cloth and dried with a non-abrasive cloth.
- The top, front and back of the units are made of high quality polished stainless steel. Use a soft soap filled cloth to clean and dry with a non-abrasive cloth.
- Do not use abrasives or oven cleaners as these could damage the finishes
- NEVER immerse the Buffet Range in water.

12. Always plug electric cord into wall outlet before turning on power. To disconnect, turn power to "OFF", then remove plug from wall outlet.
13. Do not use appliance for other than intended use.

POWER SUPPLY

Connect your new Buffet Range to a 120 volt, 60 hertz wall receptacle only. This appliance has a high output burner and therefore should not be used at the same time as another appliance on the same circuit.

INDICATOR LIGHTS

When you plug your unit in, the RED indicator lamp will light to indicate that the unit is plugged in. When you turn the burner knob to the ON position, the green lamp will light to indicate that the burner is heating. The green lamps will cycle ON and OFF according to the position of the temperature control knob.

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

WARRANTY

Length of Warranty

1 year from date of purchase

Within 1 year from date of purchase,

- 1) Return product to place of purchase (if your dealer allows)

OR

- 2) Send product postage pre-paid to:

I.E.A.C.

3030 East Vernon Avenue
Vernon, California, USA 90058



Please include original dated receipt, explanation of defect and return name and address as well as a contact phone number.

We will, within 10 days of receiving your product, return a new or refurbished (at our discretion) product at NO ADDITIONAL CHARGE.


We will also return your receipt. If product is found to be in working condition, we will return product postage collect.

PACK YOUR PRODUCT WELL!

We will not be responsible for damages incurred as a result of improper packing.

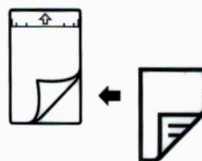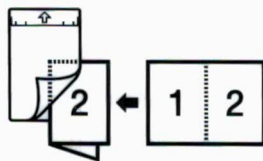

better chef[®]
BETTER RESULTS

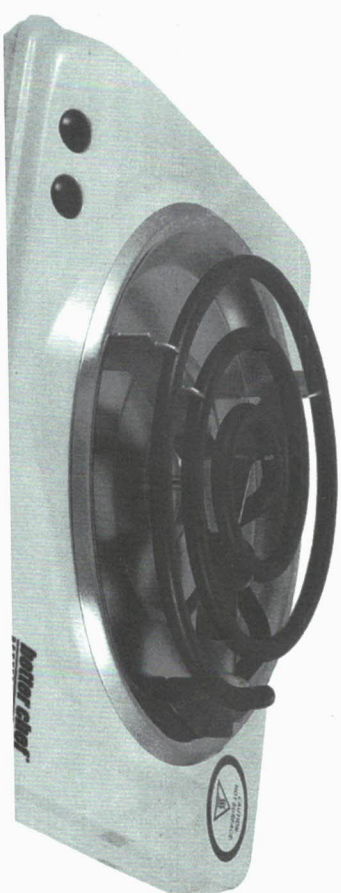

ELECTRIC BUFFET RANGE

RECHAUD INOX ELECTRIQUE
ESTUFA ELECTRICA DE UN QUEMADOR

MODEL NO. IM-305SB

READ AND SAVE THIS USE AND CARE BOOK
CONSERVER CE GUIDE D'ENTRETIEN ET D'UTILISATION
POR FAVOR LEA ESTE INSTRUCTIVO ANTES DE USAR EL PRODUCTO