


ASSEMBLY INSTRUCTIONS

SWING IT-130914

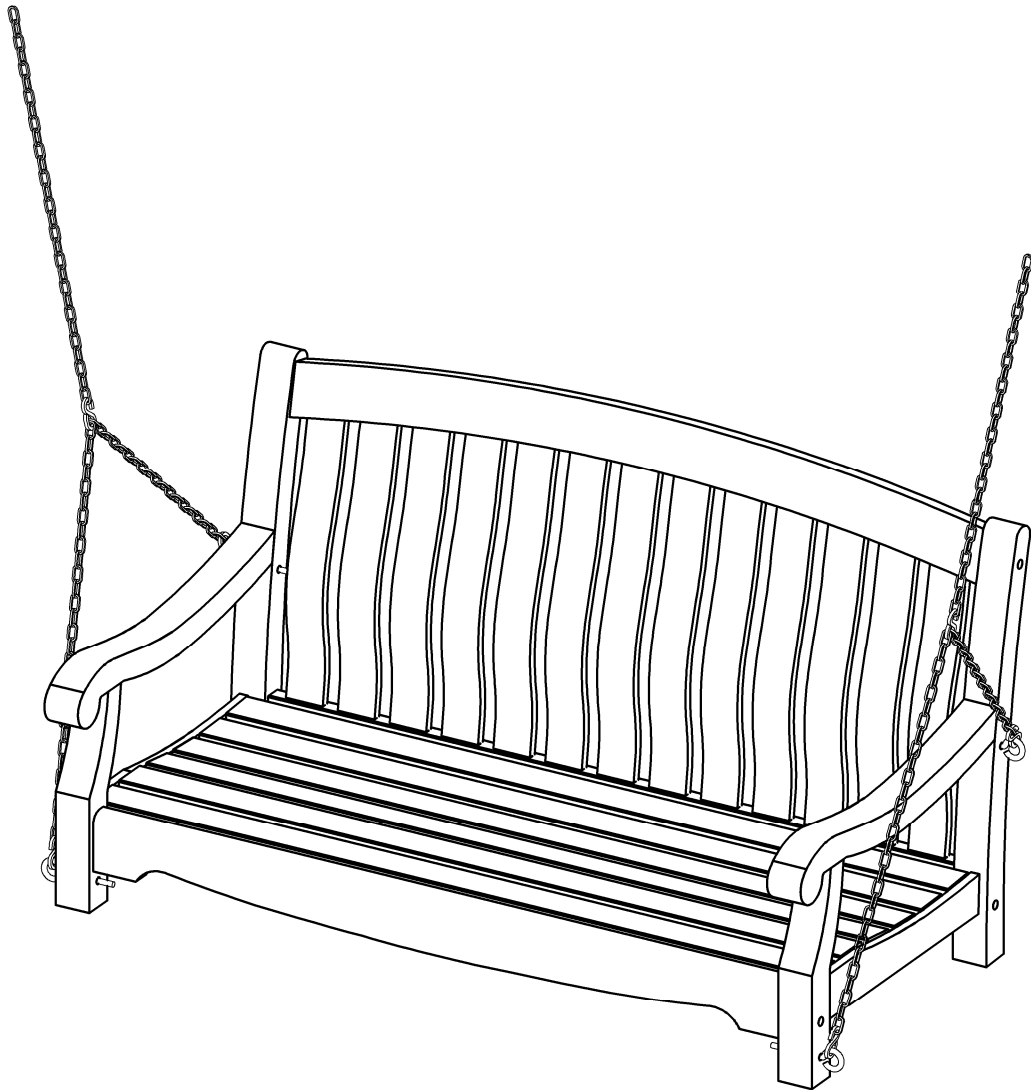

CUSTOMER SERVICE INFORMATION

Please email us at info@cambridge-casual.com for assembly tips, report damage, or request parts.
For faster response, please write down item number, code for missing parts,
attach the purchase receipt and picture of damaged parts.

 
 
GENERAL INFORMATION & TIPS

1. Please read the assembly instructions prior to assembling the Swing.
2. To avoid damage, assemble the swing on a non-abrasive surface such as carpet.
3. Make sure all bolts tightly fastened before the swing is used.
4. This swing is not for commercial use.








Please make sure you have all parts before beginning assembly. Please wait until all steps are completed before tightening bolts.

TOOLS REQUIRED


1. 8" Philips screwdriver (Not provided).
- For tightening all bolts and screws.
2. Rubber Mallet (Not provided).
- For tapping in the wooden caps.
3. Wrench (provided).
- For tightening all nuts



PARTS AND HARDWARE LIST

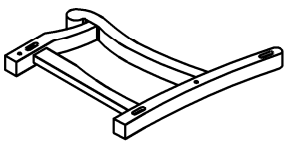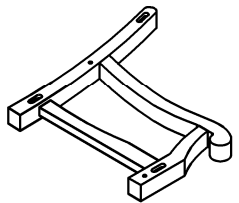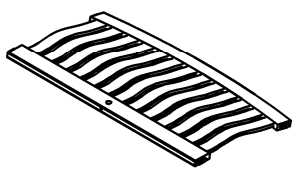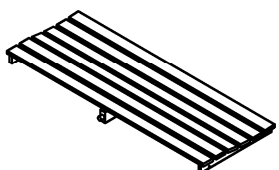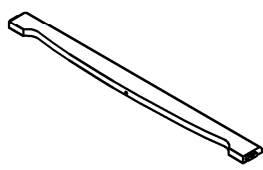  
A1. Right side frame	A2. Left side frame	B. Back support	C. Seat
			
Qty : 1 Pc	Qty : 1 Pc	Qty : 1 Pc	Qty : 1 Pc
D. Front apron	E. 2" Bolt	F. 2" Screw	G. 1" Screw
			
	Qty : 6 Pcs + 1	Qty : 2 Pcs + 1	Qty : 4 Pcs + 1
	H. Hanger Bolt with chain and chain lock		I. Hanger bolt
			
Qty : 1 Pc	Qty : 2 Pcs		Qty : 2 Pcs
J. Washer	K. Nut	L. Head nut	M. Wooden cap
			
Qty : 12 Pcs + 1	Qty : 6 Pcs + 1	Qty : 4 Pcs	Qty : 6 Pcs + 2

STEP 1

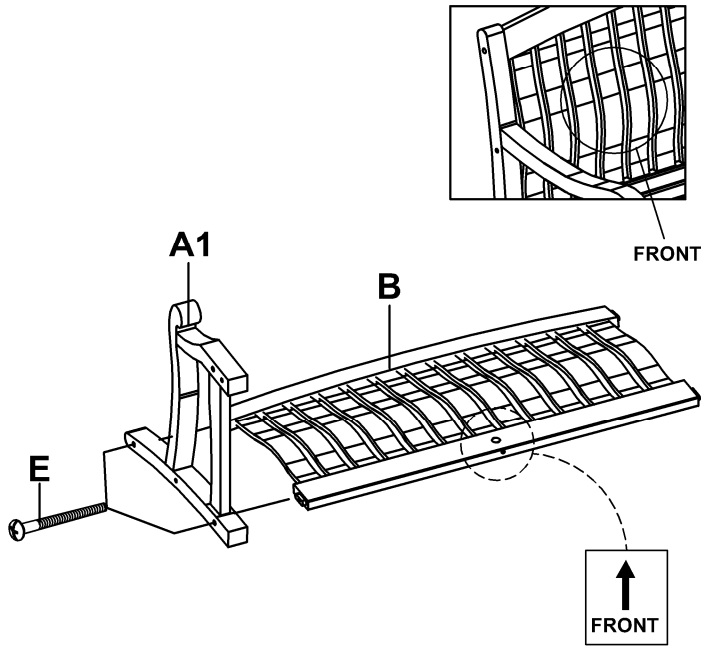


Install on level ground. Attach the right side frame (A1) into back support (D). Secure with 2" bolts (E). Do not tighten the bolts yet.

STEP 2

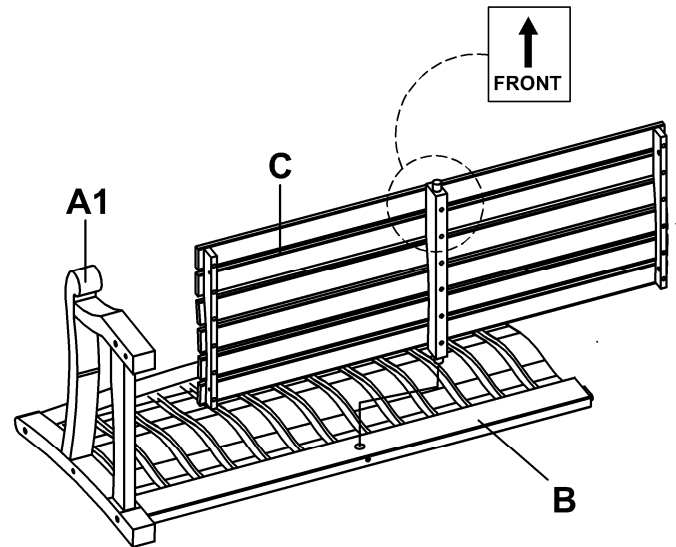


Next, attach the seat (C) into predrilled holes of back support (B).

STEP 3

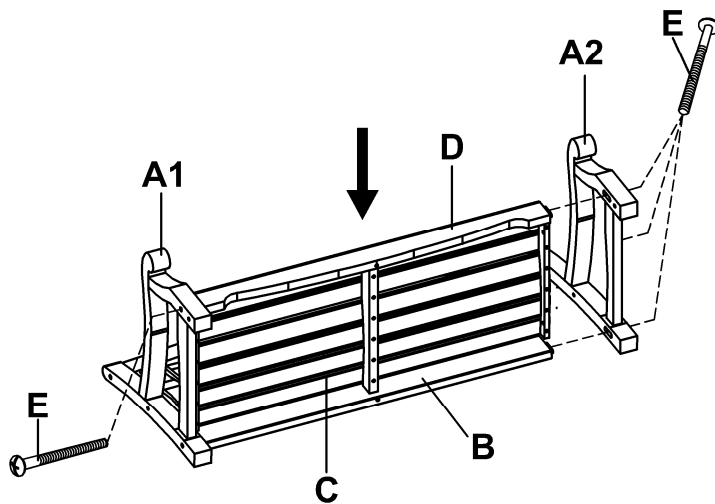


Attach the front apron (D) into seat (C) and right side frame (A1). Secure using 2" bolt (E). Next, attach the left side frame (A2) into back support (B) and front apron (D). Secure using 2" bolts (E).

STEP 4

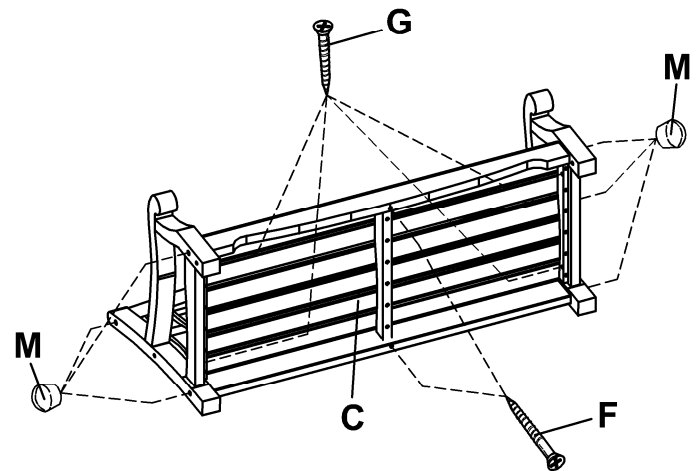



Secure the seat (C) using 2" screws (F) and 1" screws (G) as shown. Next, tighten all bolts completely using screwdriver before tapping in the wooden caps (M).

STEP 5

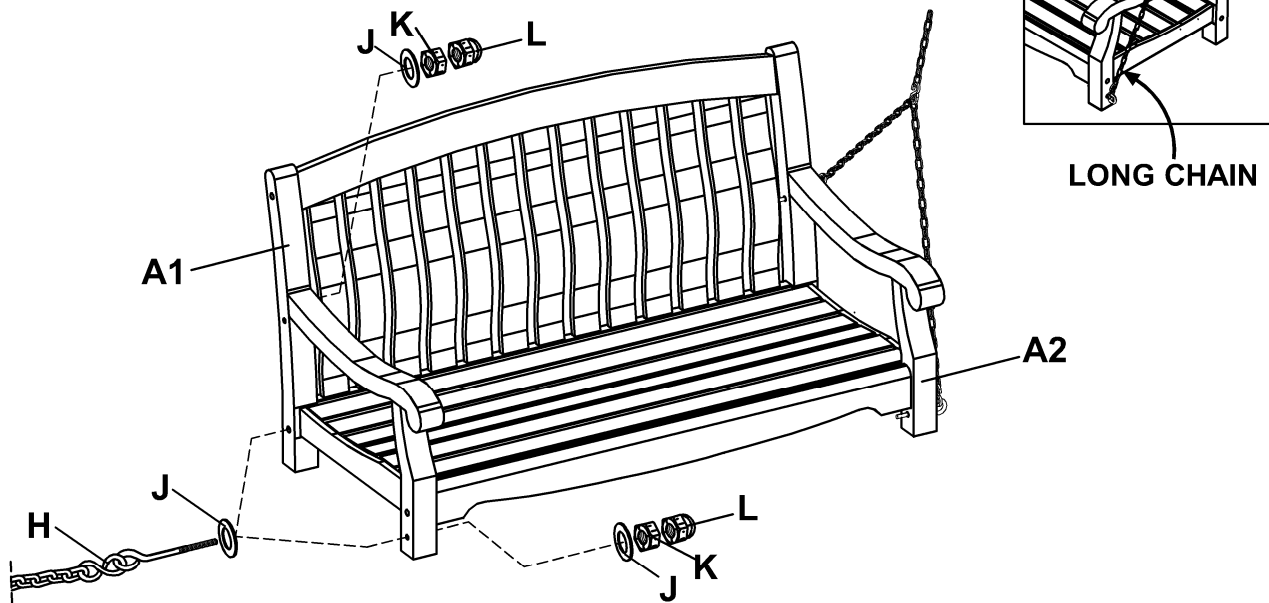

Secure the hanger bolts with chain (H) into predilled holes of the right side frame (A1) using washers (J), nuts (K), and head nuts (L) as shown. (The hanger bolts with long chain must be install in front). Repeat the same procedure to install the hanger bolts (H) into the left side frame (A2). make sure all parts are correctly connected and tighten all nuts completely using wrench.

STEP 6

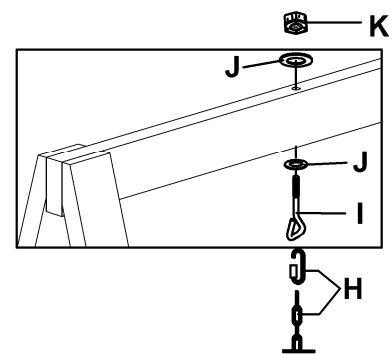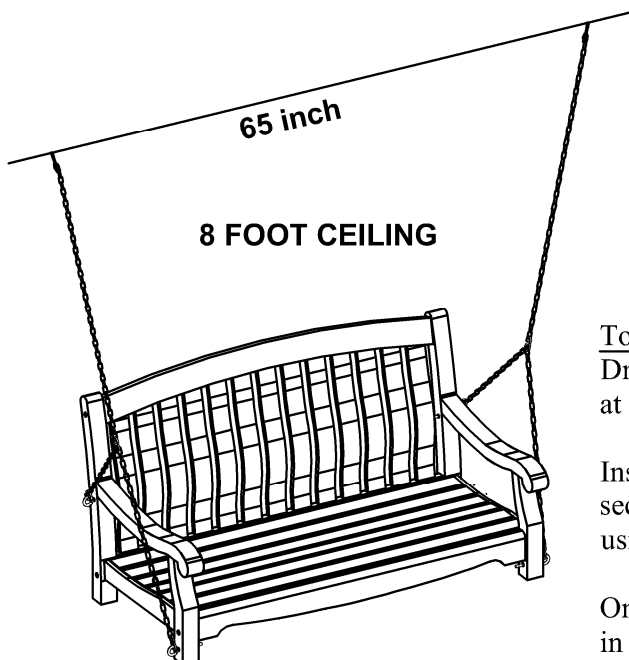

To hang up the swing :

Drill pilot holes on your swing frame/overhead beam of your porch, at the width of 65 inch.

Insert the hanger bolt (I) into predilled holes of swing frame and secure with washers (J) and nut (M) as shown. Tighten the nuts using wrench.

Once the hanging bolt (I) are in place, attach a chain lock (provided in the chain kit "H") to the hanging bolt (I) by open the thread. Then tighten the chain lock manually.

Repeat the same prosedure to install the other side.

Adjust the swing height for comfortable. Recommended height is 23.5 inch from the bottom of the seat to the ground.

THE SWING IS NOW READY FOR USE.

NOTICE :

Install not less than 6 feet from any obstruction such as fence, garage, house, overhanging branch laundry lines or electrical wires.

MAINTENANCE

Wood is a living material that continues to respond to climate condition even after being made into a piece of furniture.

After assembly rub the furniture with soft rag to remove any residual dust. Wood is a natural material whose appearance will change when left outdoors. This product has been treated prior to leaving the factory. To clean, use mild soap and warm water. Do not use abrasive material, cleansers or bleach products, Dry thoroughly with soft cloth,

Even though this piece of furniture is extremely durable and long lasting, to prolong life we recommend bringing it indoors during freezing temperatures. Place it at a shaded area and do not leave it in standing water or on wet ground.

Do not put hot items directly on furniture surface.

Do not store furniture in areas that have central heating or cooling vents to prevent excessive drying of the wood. This will decrease the furniture's longevity.

Do not write on furniture without a padded barrier to protect the surface.

In order to maintain the product's durability, please read carefully.

Do not leave your furniture in puddles of water or on wet ground.

Cover your furniture during winter months or move into covered storage, if in wet climates.

The manufacturer supports protection of the world's forest resources and is diligent in sourcing legally harvested wood.

Thank you

The manufacturer

1 year Limited Warranty

The furniture is warranted to be free from defects in material and workmanship of the original product when purchased from one of our authorized dealers. If a product fails and is under the terms of our limited warranty, the item will be replaced, usually for a small fee. In the case of discontinued models, an item of similar quality and style will be offered to the customer.

- 1 year limited frame warranty
Frames are warranted to be free from defects in material and workmanship. Fading or discoloring caused by putting the product under sunlight or rain is not covered by this limited warranty. Damage to the frame due to improper assembly or exposure to water and sub-freezing temperatures is not covered. (Do NOT allow water to accumulate inside frame)
- Finish
The finish is warranted against peeling, cracking, or blistering for a period of 1 year, provided the unit has not been scratched or abraded. Scratches and chips resulting from normal wear and use are not covered. Peeling resulting from exposure to elements is not covered.

Warranty Exclusions : Furniture used for commercial, contractor or any non-residential purposes, clearance items, display models or items purchased “as is”, freight damage, furniture damaged by acts of nature, vandalism, fire, abuse, lack of proper care and maintenance, or improper assembly, straps and fabric against fading or discoloration from exposure to elements, oil spills, fluids or chemicals; glass against breakage; hardware against corrosion or rusting; buckling or splitting of tubing resulting from exposure to water and freezing temperatures. Also excluded: loss of use or time, inconvenience, money, travel, packaging or any other consequential or incidental damages. In no event shall the manufacturer's responsibility exceed the value of the replacement product.

Warranty is to the original purchaser when items are purchased from one of our authorized retailers and is not transferable. Should replacement of the warranty item be unavailable, the manufacturer reserves the right to substitute items of our choice that are of similar style and quality. For quality control purposes and verification, we need documents in support of your claim :

- Packing slip / Invoice
- Additional documents (Photos or video) of damaged/ defected/ missing part
- Item number and part code (can be found on assembly instruction)

Note :

To expedite the handling of your claim, please include the above mentioned documents as your claim **WILL NOT BE PROCESSED** until properly supported. **Retain all damaged goods until the claim is concluded.**

The terms of this warranty are subject to change without notice.