





Display Cabinet

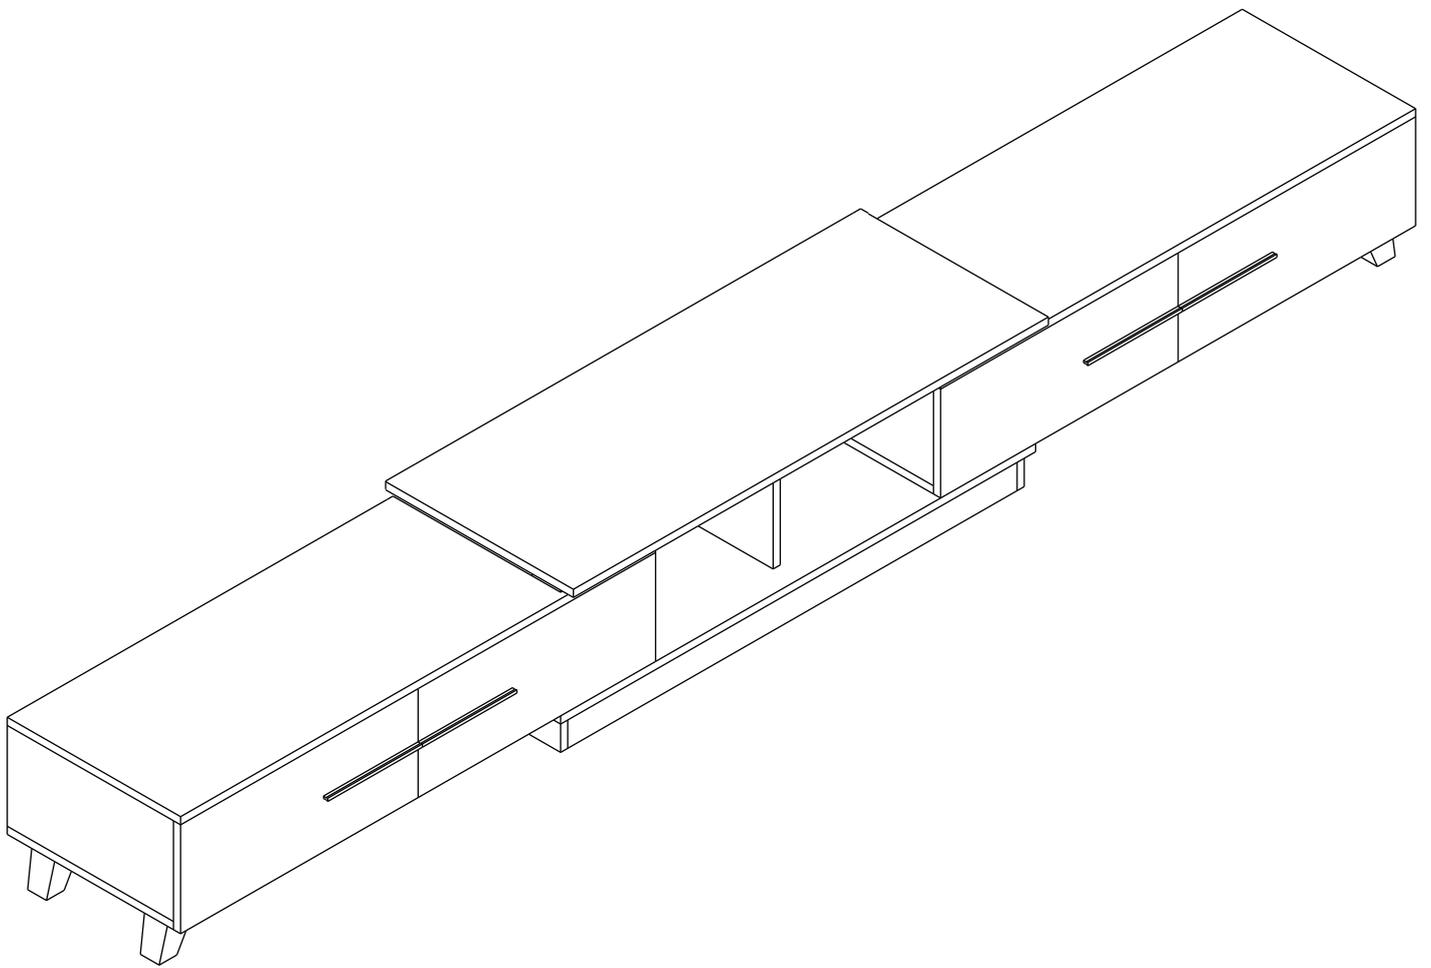

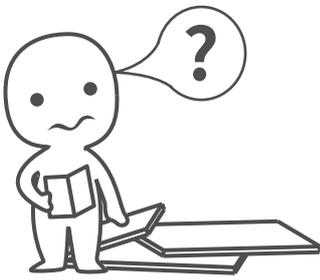


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

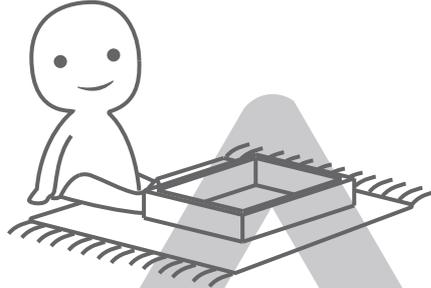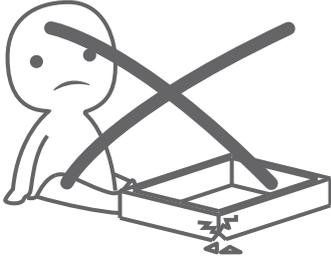



AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer- could be a rug.

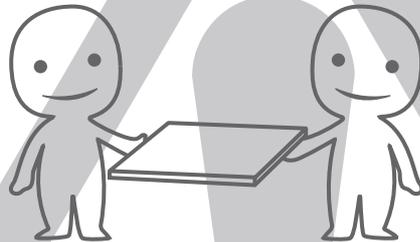

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

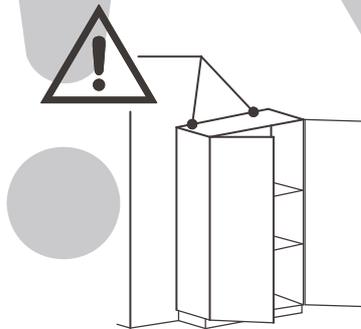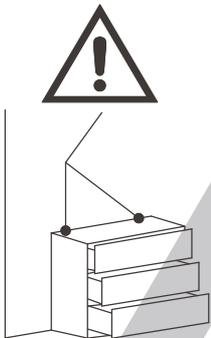

ANTI-TOPPLE WARNING !


Overturnd furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

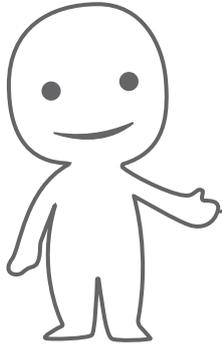


Please prepare the following tools

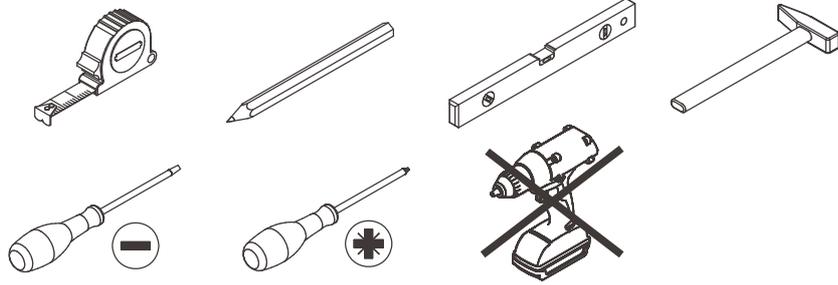

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 60



Ø6 x 35 mm

B x 60



Ø14 x 9 mm

C x 48



 
Ø3 x 12 mm

D x 24



Ø5 x 40 mm

E x 4




F x 11




Ø3 x 25 mm

 G x 12



Ø4 x 20 mm

 H x 56




Ø6 x 30 mm

CL x 4



 CR x 4



DL x 4



DR x 4



M x 28




Ø4 x 12 mm



N x 1





All screw holes of this product have reserved holes.
Please install hardware components in the correct reserved holes according to the figure and written instructions. Do not open the holes by yourself.

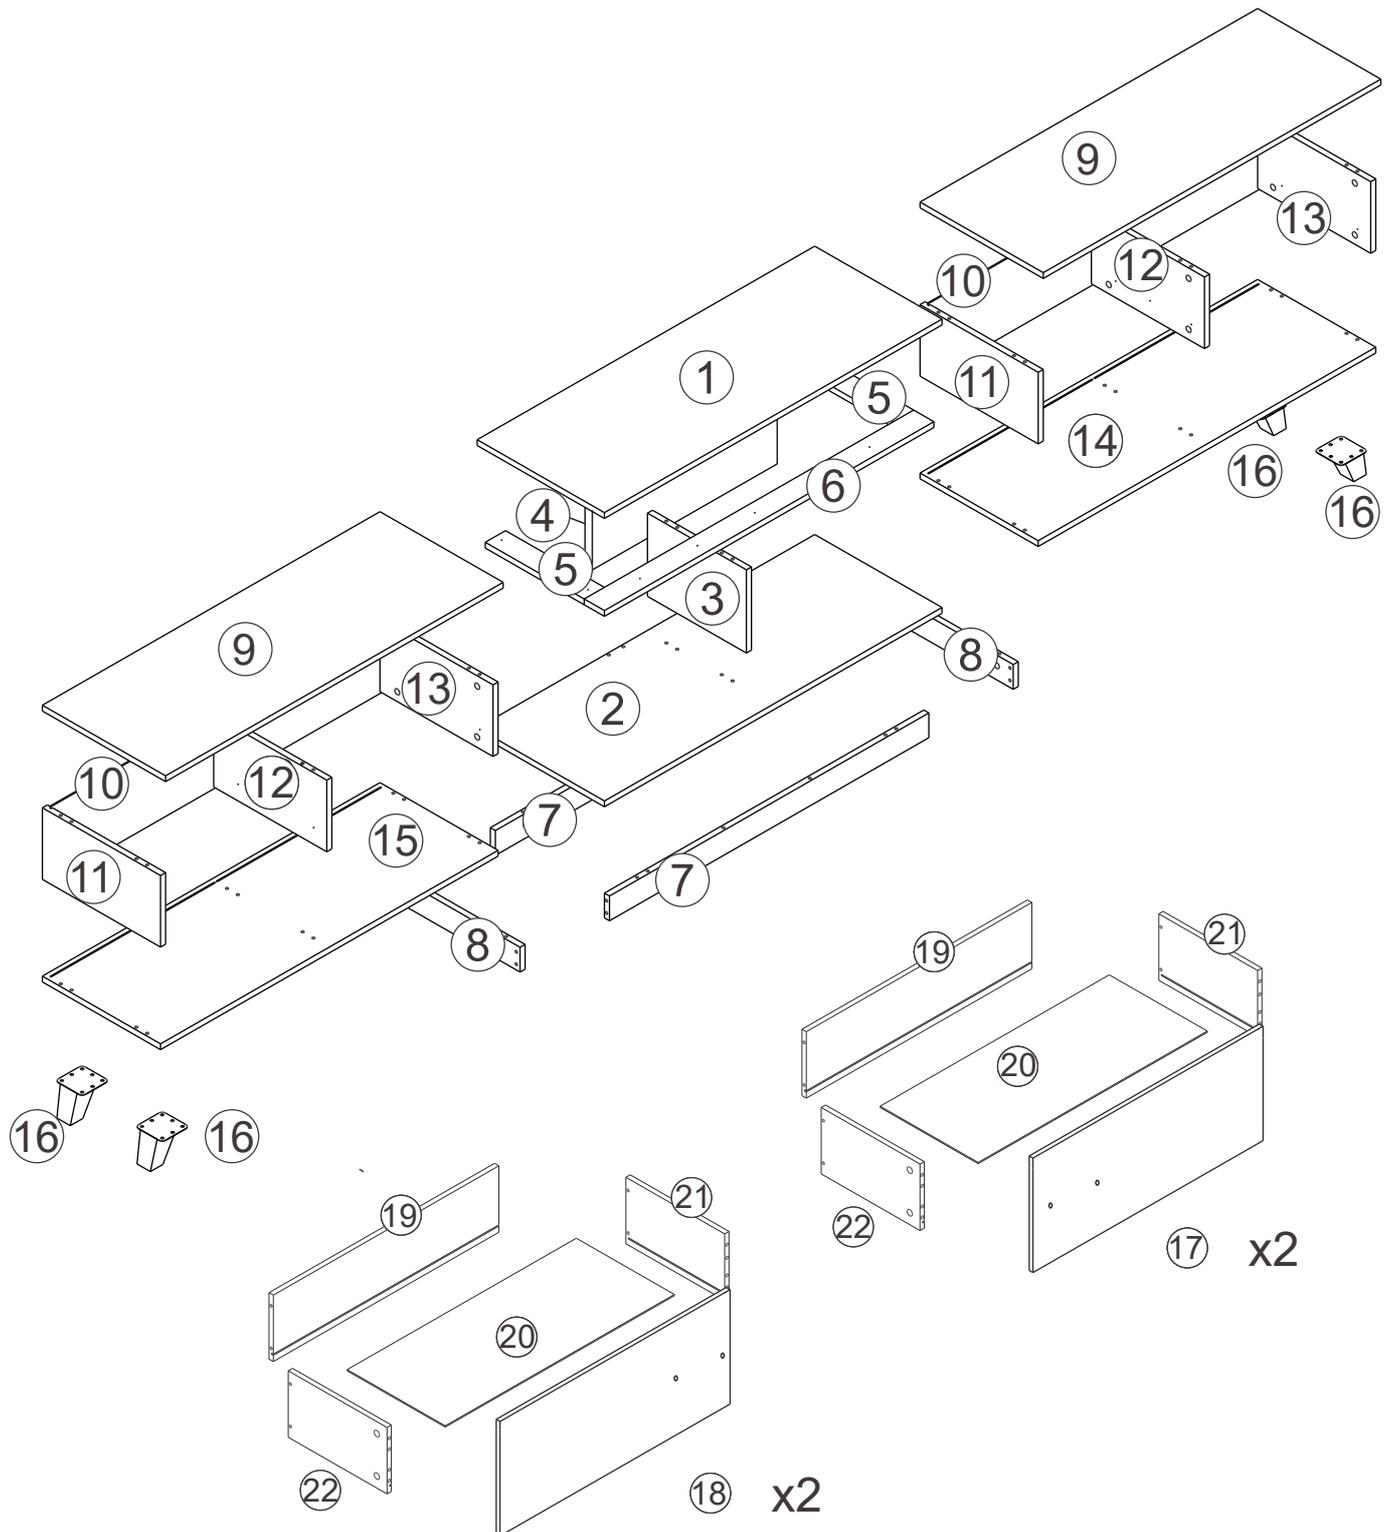




1

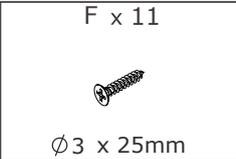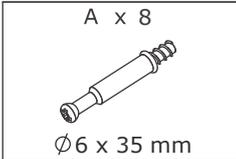




As shown in the figure, use screw No. F to connect board No. 5 and No. 6 to board No. 1, and fix screw No. A respectively in board No. 1 and No. 2 to the reserved holes.

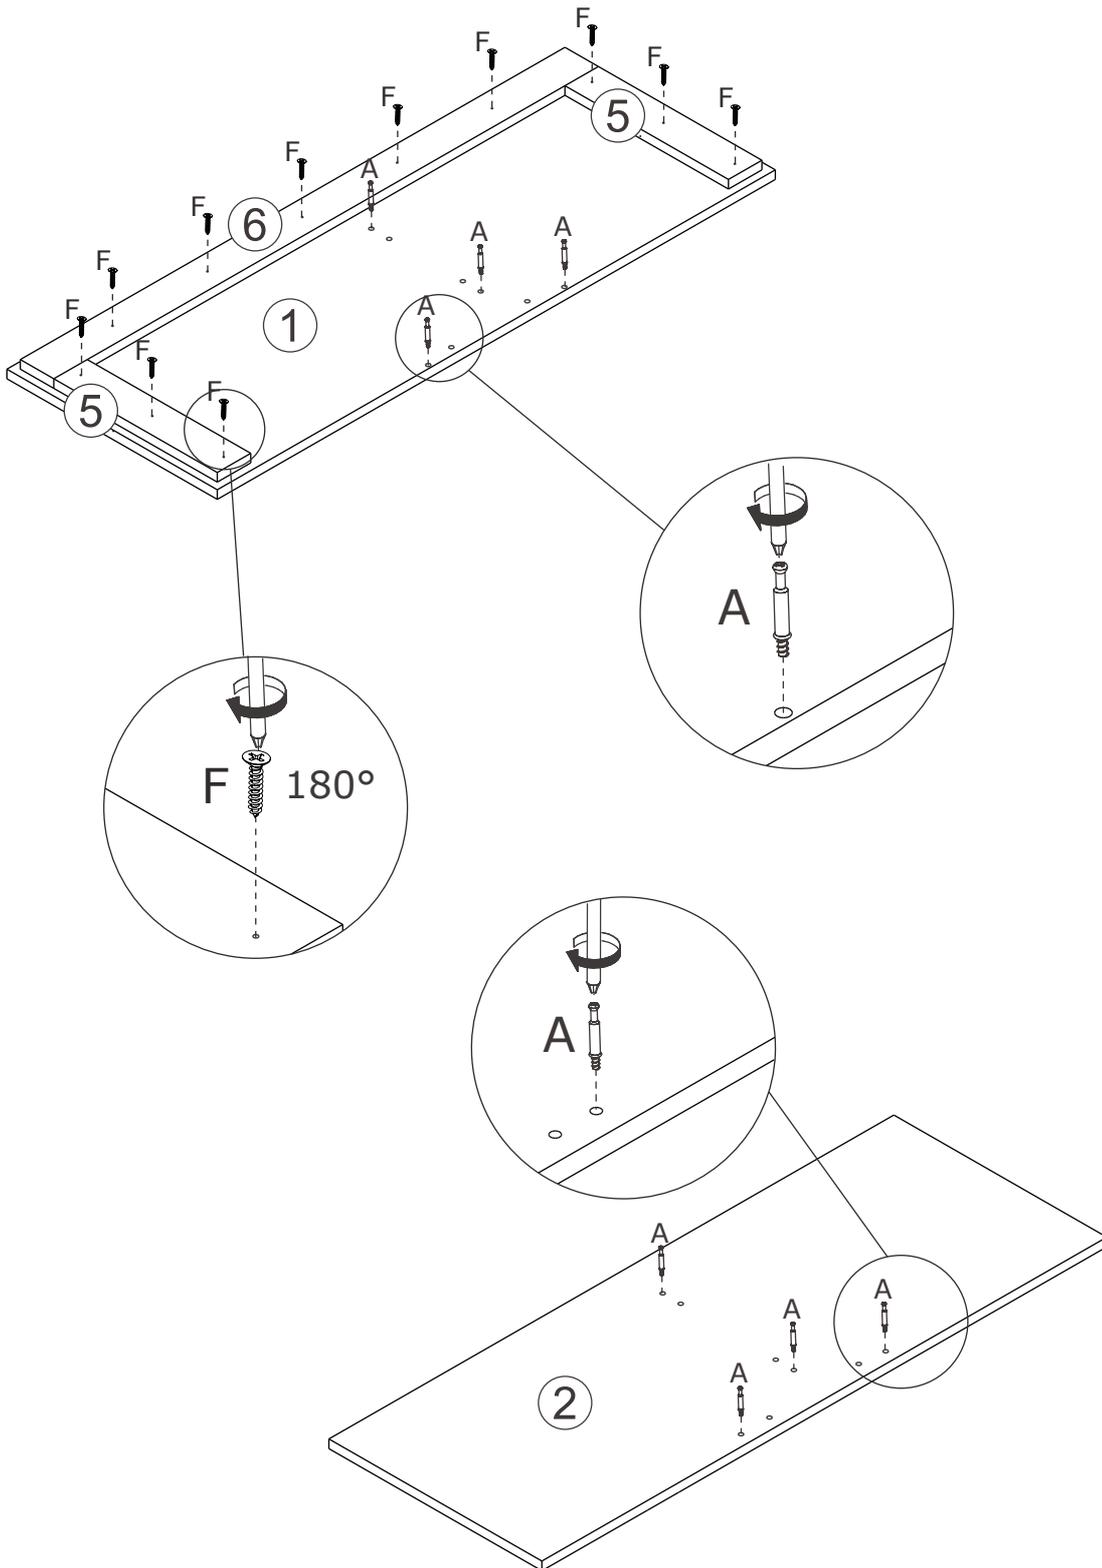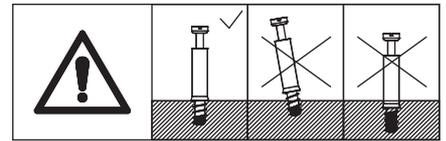




2

 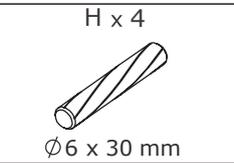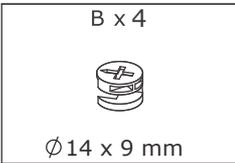




As shown in the picture, fix No. H wooden dowels in the hole reserved for No. 1 board, insert No. 3 and No. 4 boards respectively, and put in No. B eccentric wheel to rotate 90-180 degrees clockwise.

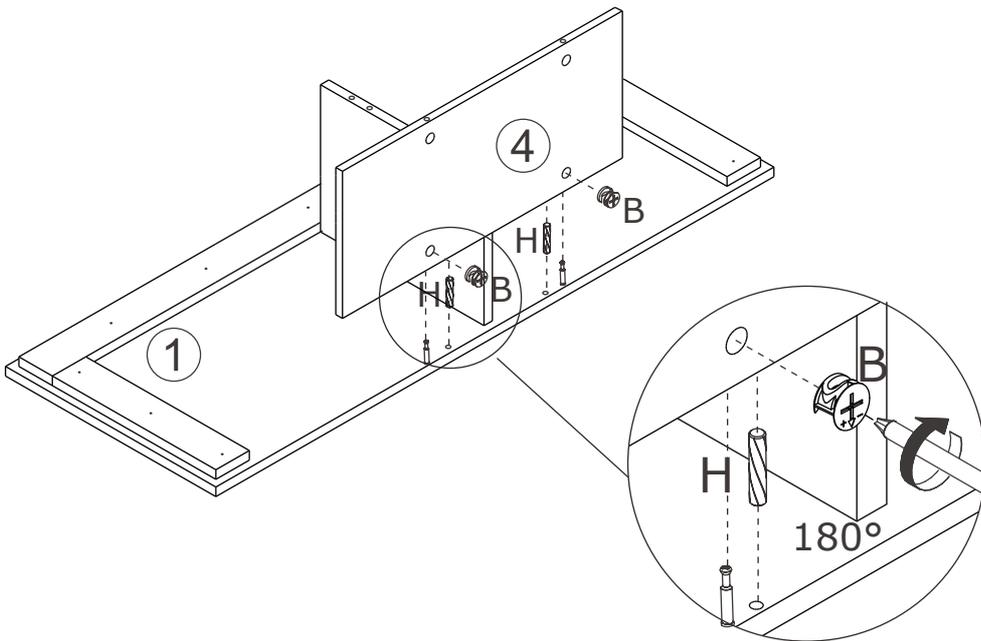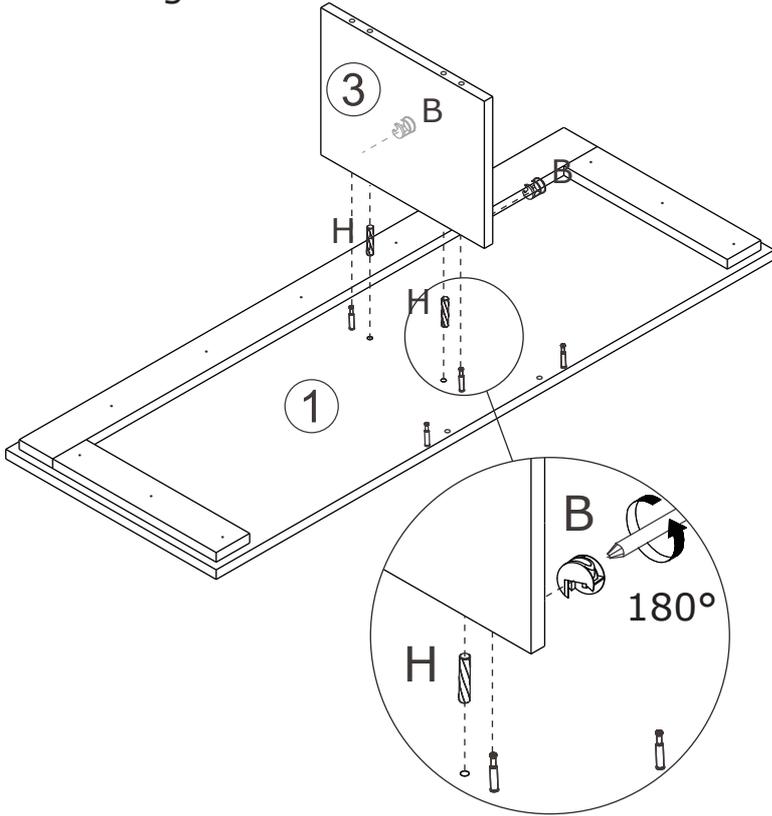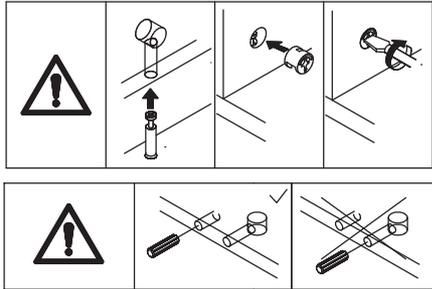

3

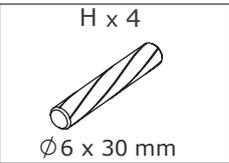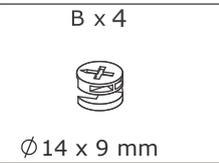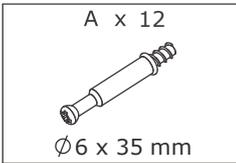



As shown in the picture, insert No. H wooden dowels into the matching holes of No. 3 and No. 4 boards and connect them with No. 2 boards. Put in No. B eccentric wheel and rotate 90-180 degrees clockwise, screw No. A into the corresponding reserved holes on the back of No. 2 board.

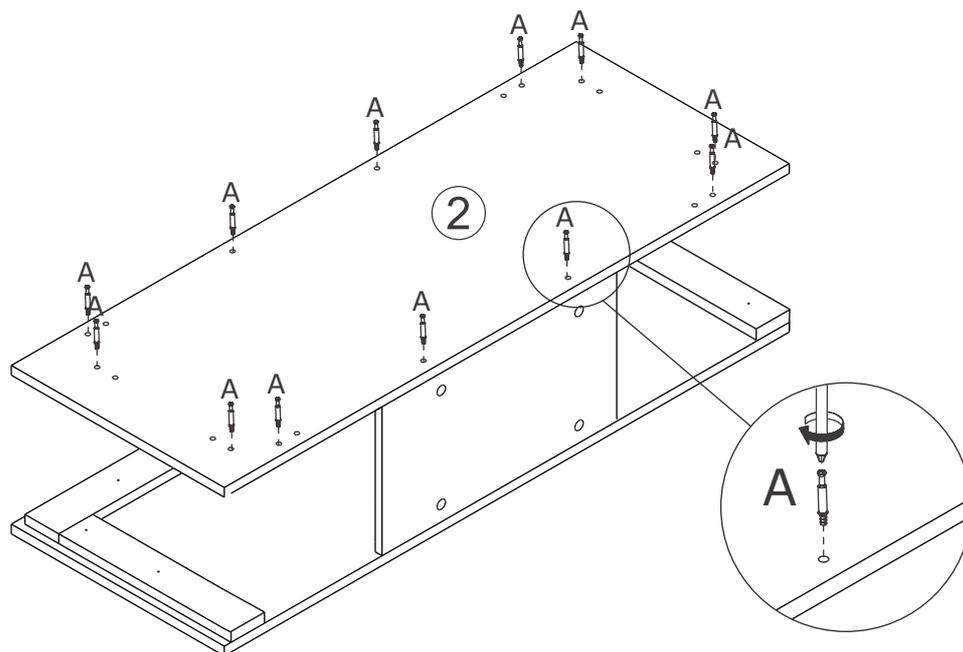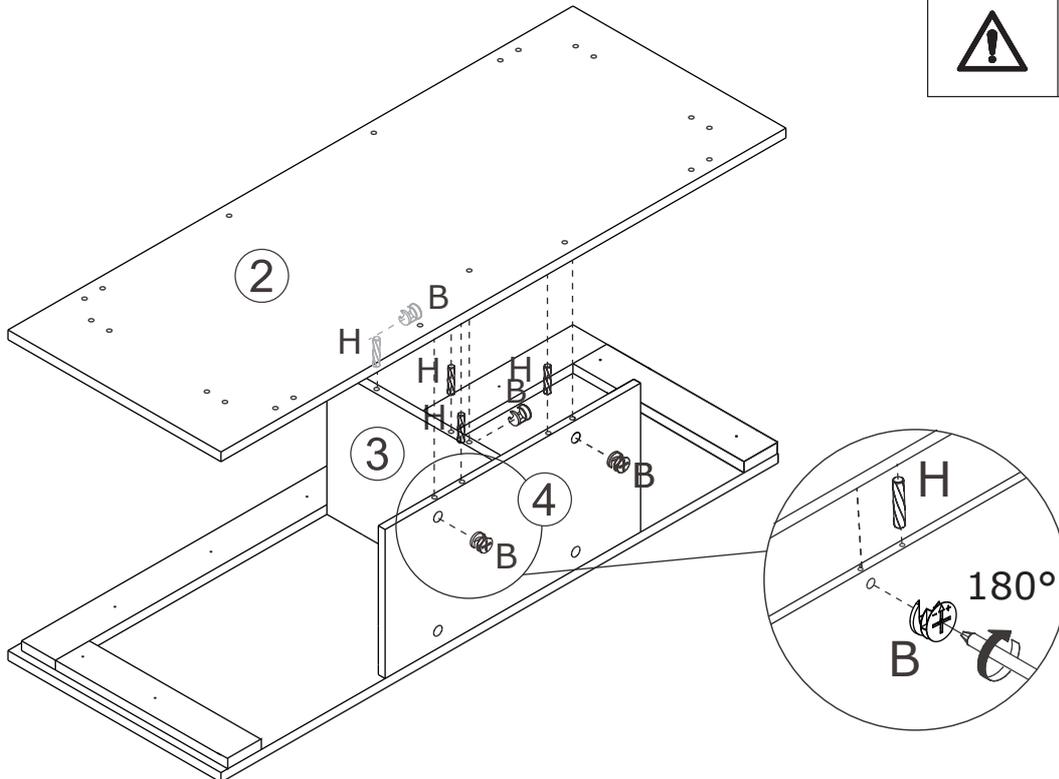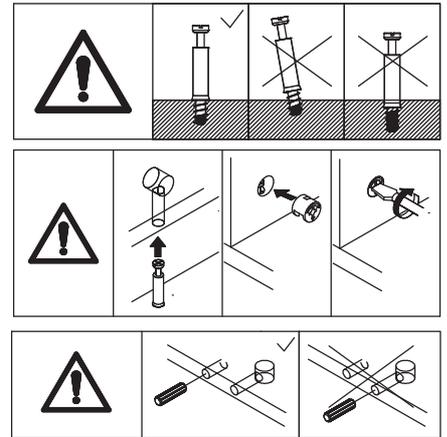


4

| | | | | |
|--|---|---|--|--|
| <p>B x 12</p>  <p>Ø 14 x 9 mm</p> | <p>D x 8</p>  <p>Ø 5 x 45 mm</p> | <p>H x 8</p>  <p>Ø 6 x 30 mm</p> | <p>N x 1</p>  |  |
|--|---|---|--|--|


As shown in the picture, connect No. 7 and No. 8 plates with No. D screw and No. N wrench (please note that the opening side of No. 7 and No. 8 plates faces upward), insert No. H wooden tenon into No. 2 plate and combine it with the wood frame, put in No. B eccentric wheel and rotate it 90-180 degrees clockwise.

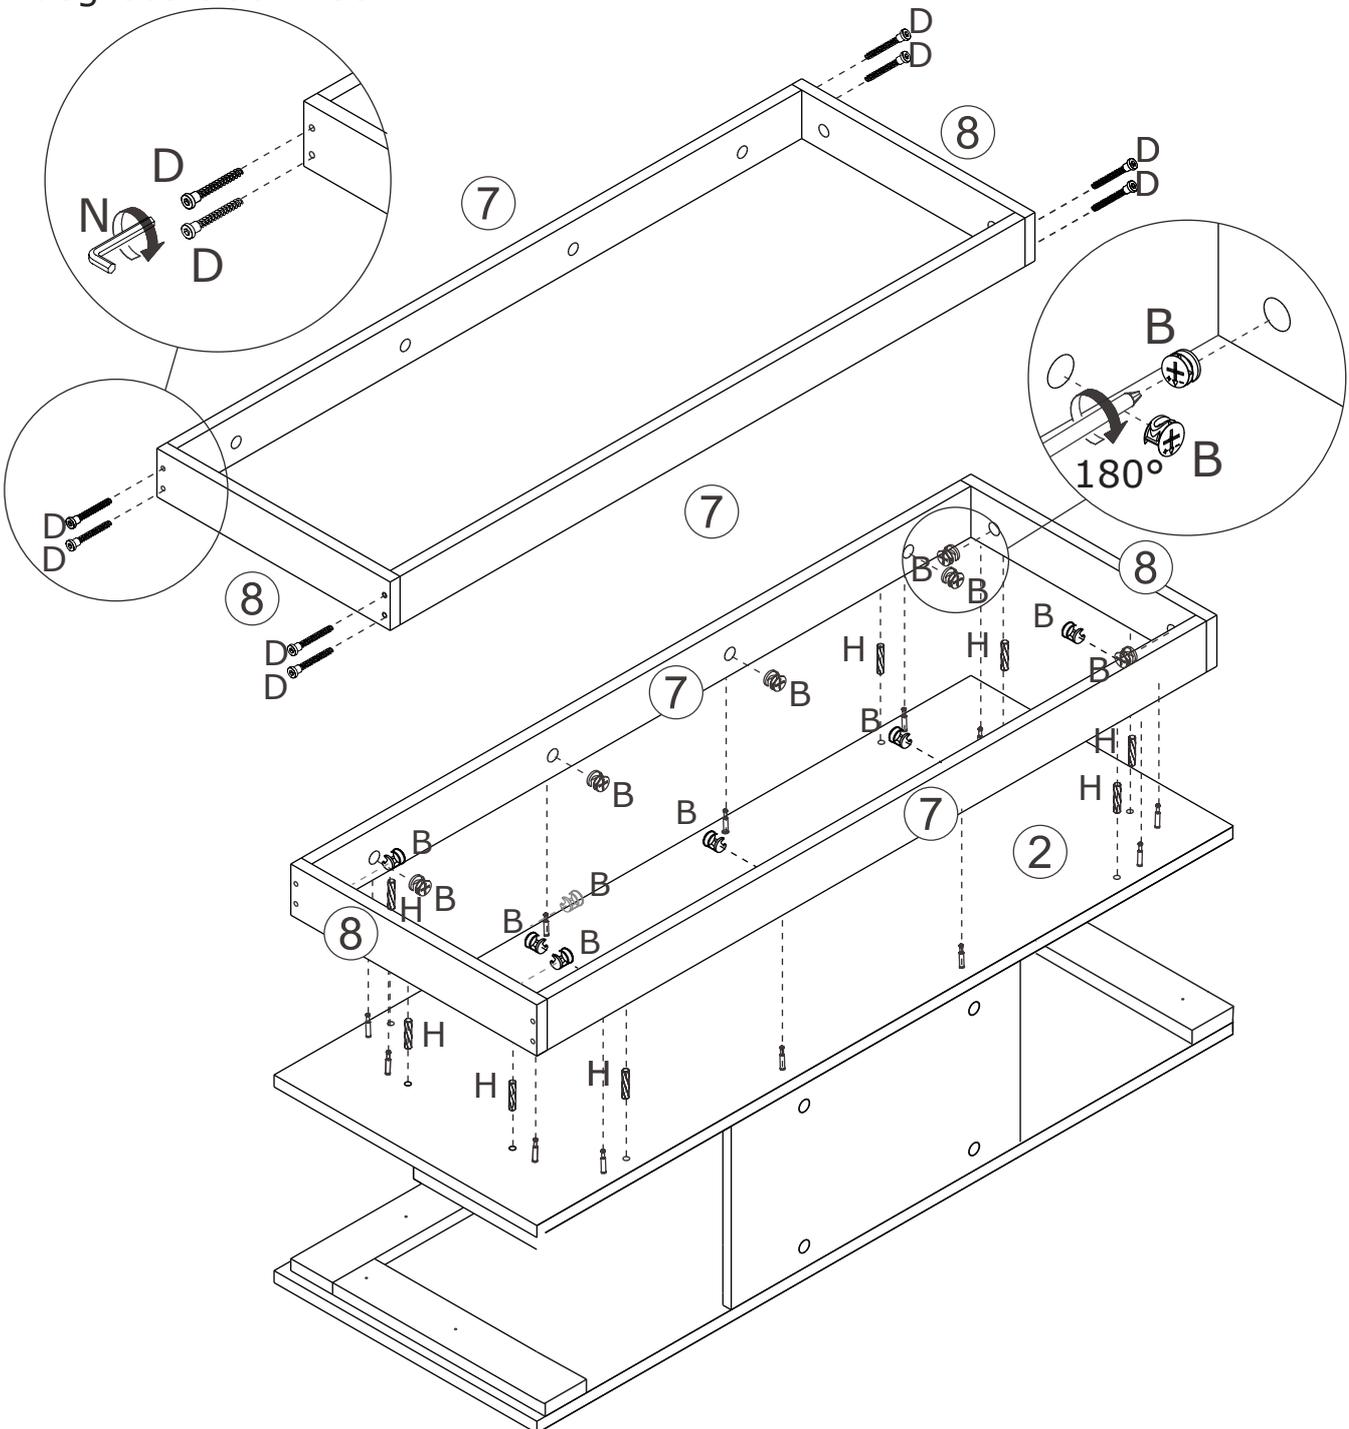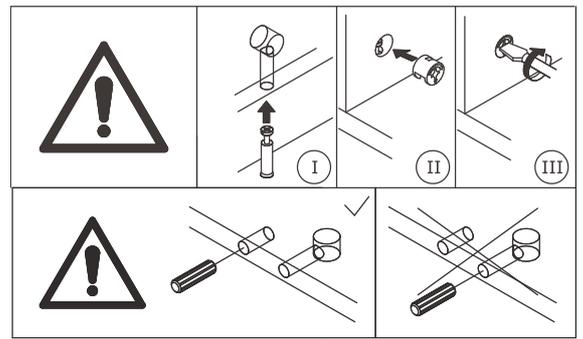


5

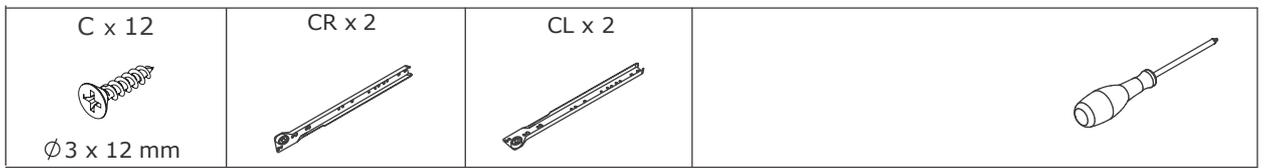


As shown in the figure, install the slide CL and CR on the corresponding positions of the plates No. 11, No. 12 and No. 13 respectively with screws No. C (please note that one end of the roller of the slide is in line with the edge of the plate).

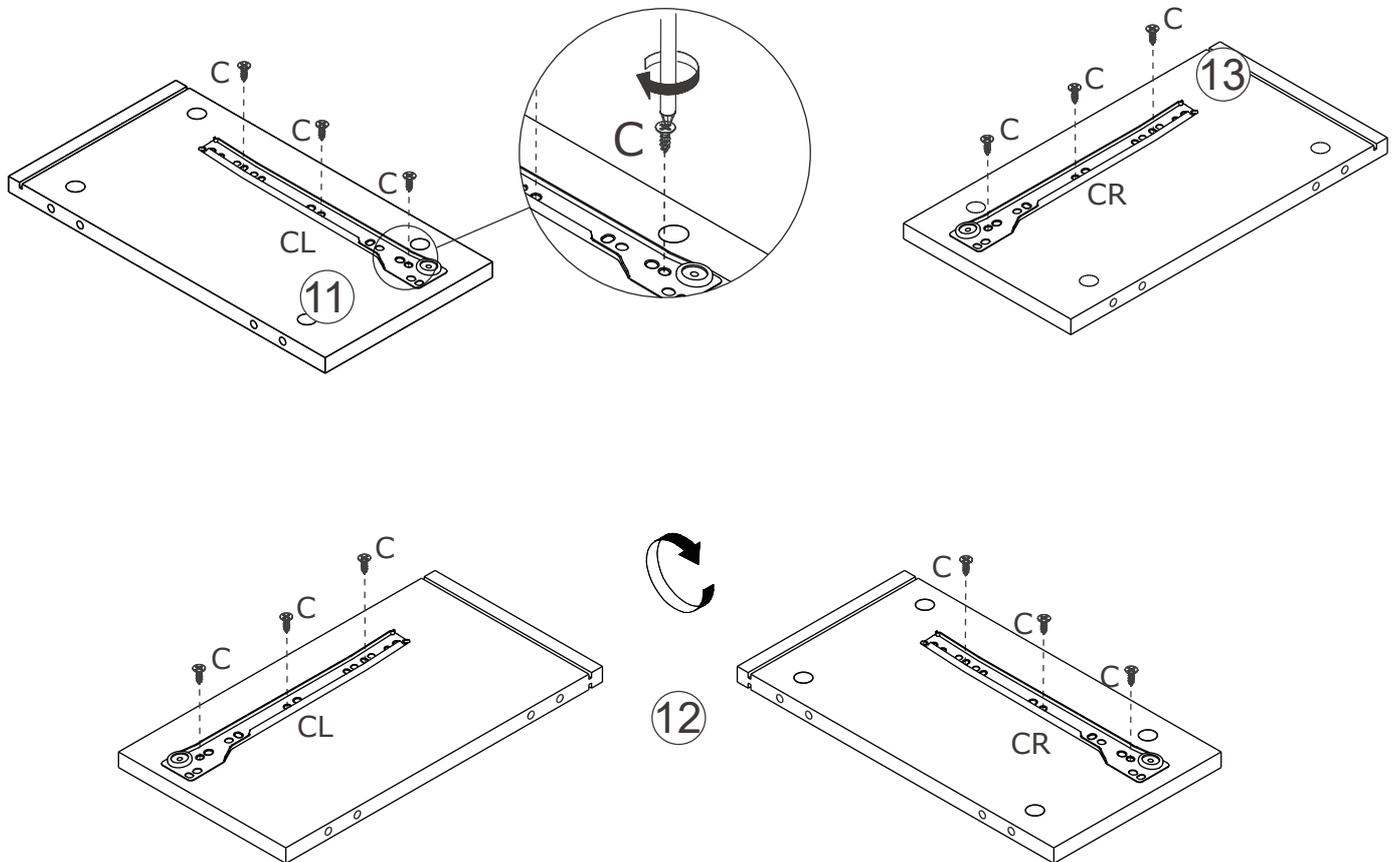



6

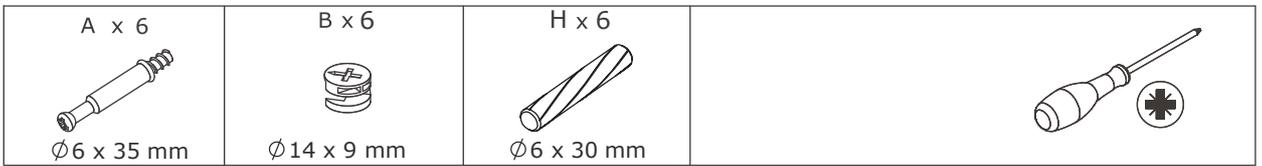




As shown in the picture, fix No. A screw and No. H dowels to the reserved holes on No. 9 board and insert No. 11, No. 12 and No. 13 boards (the grooves are on the same side).

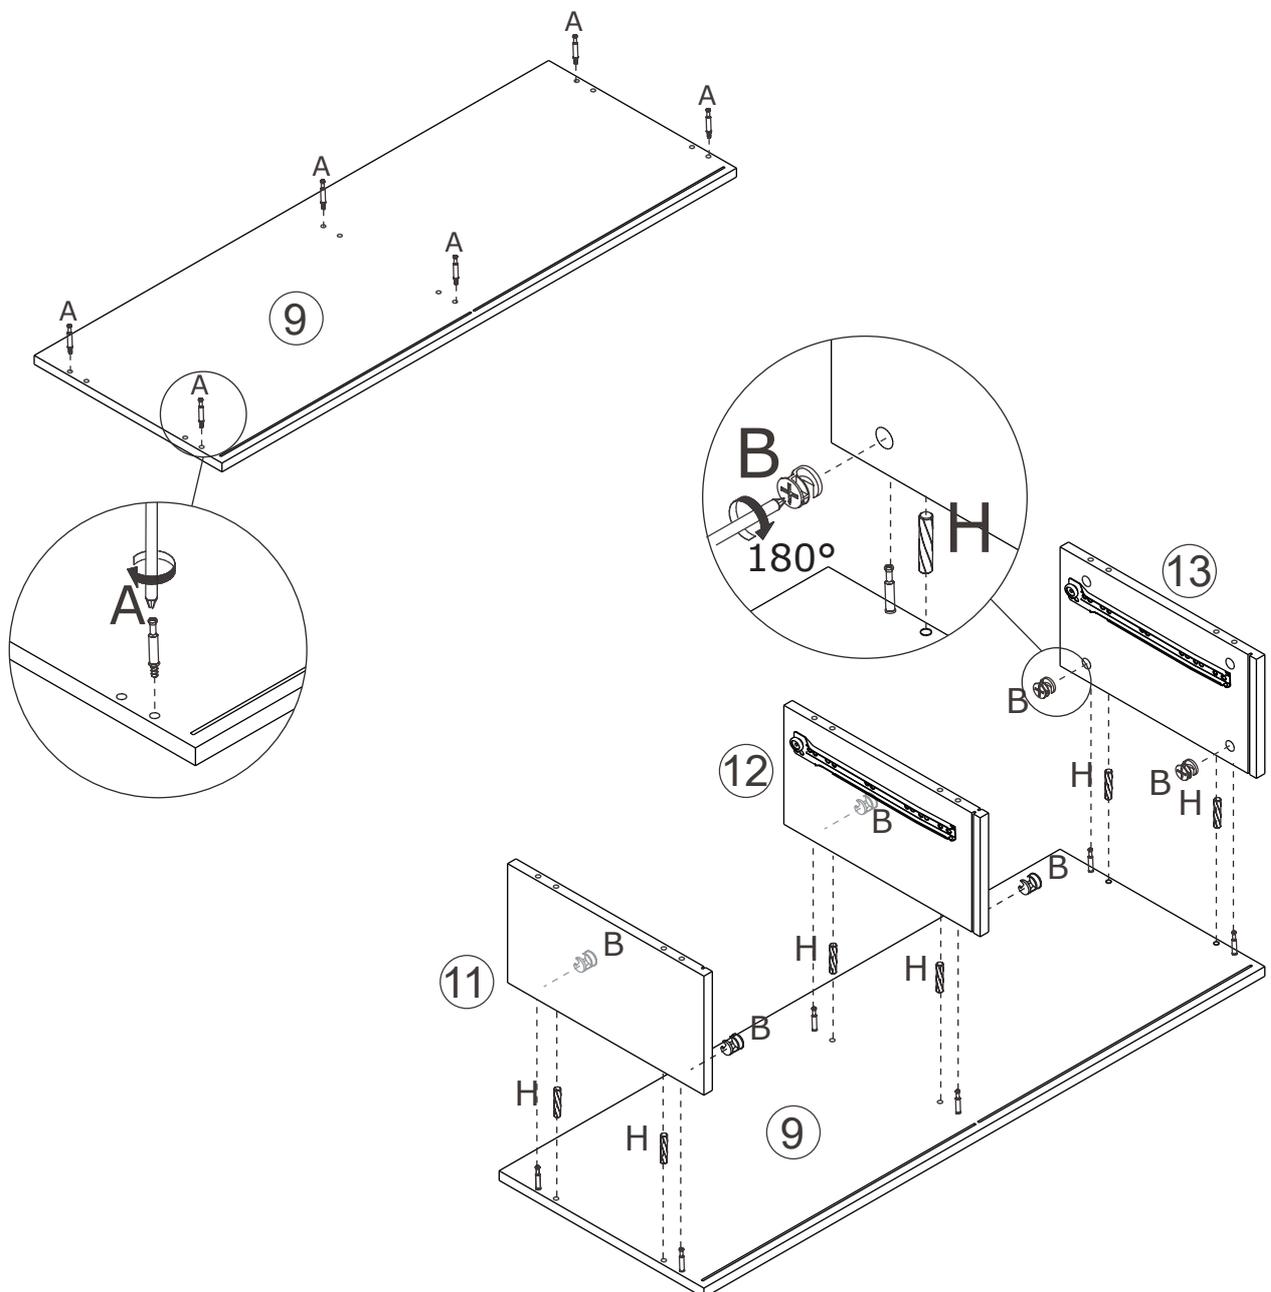

7

 
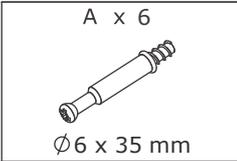


Insert the No. 10 plate as shown in the figure, and fix the No. A screw on the reserved hole position of the No. 15 plate pair.

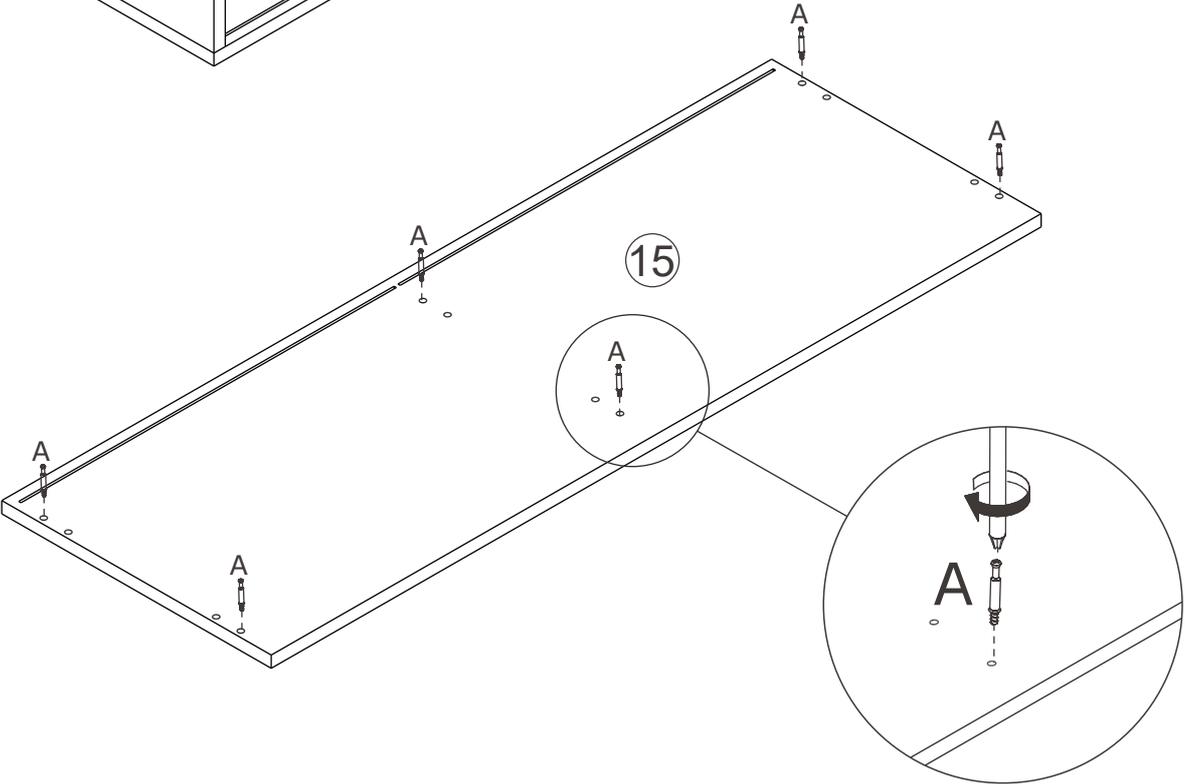
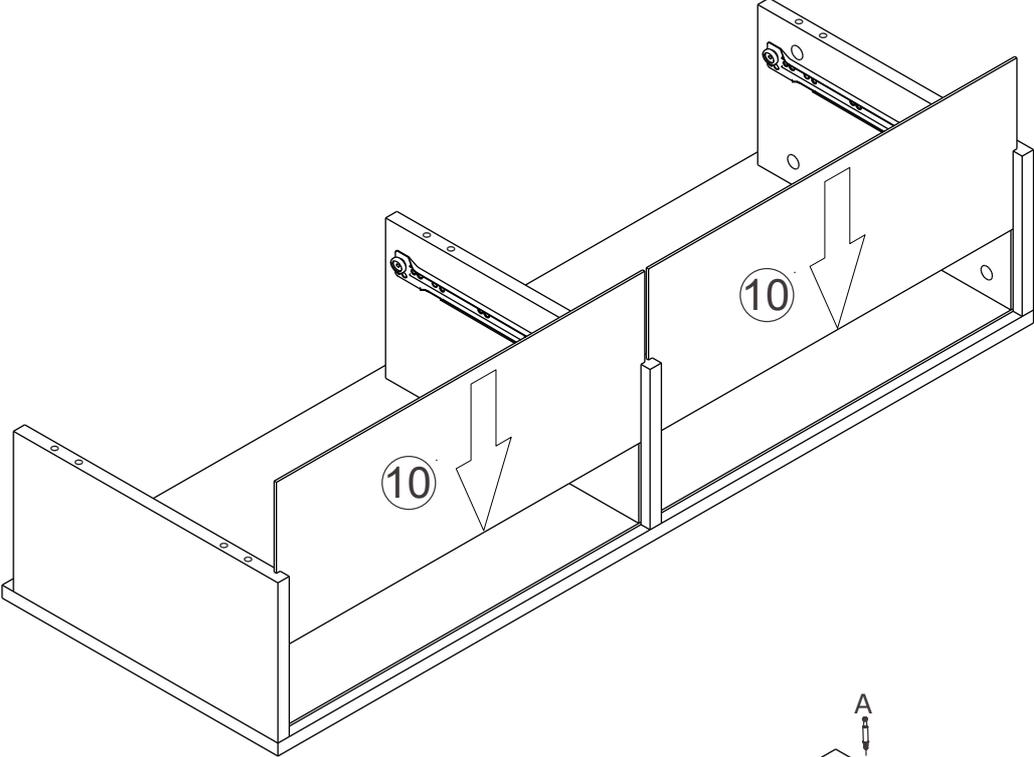
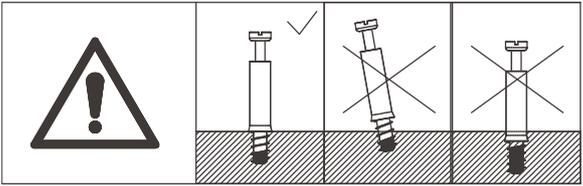


8


| | | |
|---|---|--|
| B x 6  Ø 14 x 9 mm | H x 6  Ø 6 x 30 mm | M x 14  Ø 4 x 12 mm |
|---|---|--|

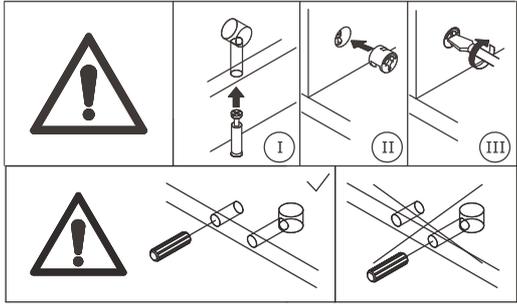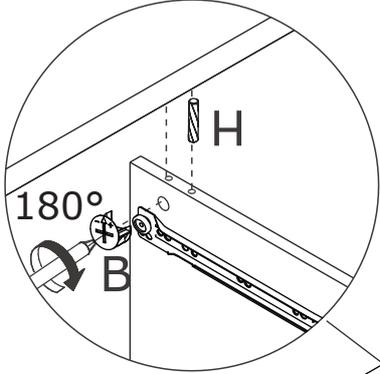


As shown in the figure, insert No. H wooden tenon at the corresponding reserved holes in No. 11, No. 12 and No. 13 plates, then cover No. 15 plate and put in No. B eccentric wheel to rotate 90-180 degrees clockwise; Finally, connect the foot of the TV cabinet to the cabinet body with the M screw.

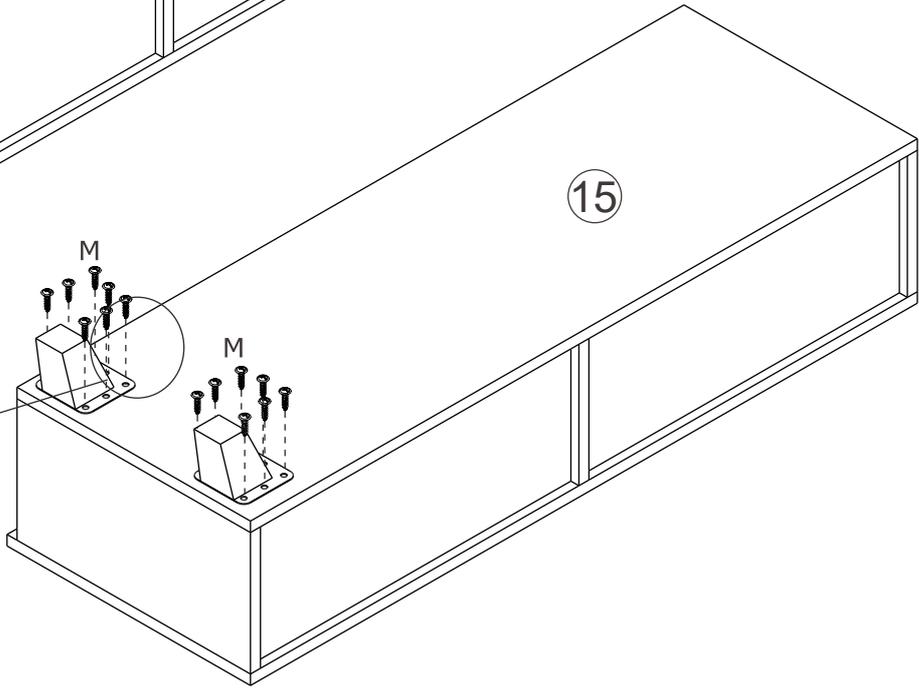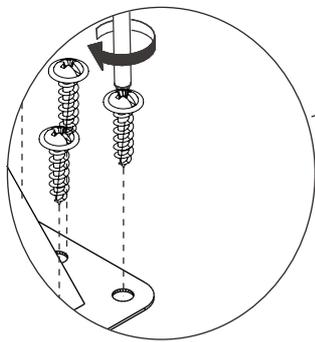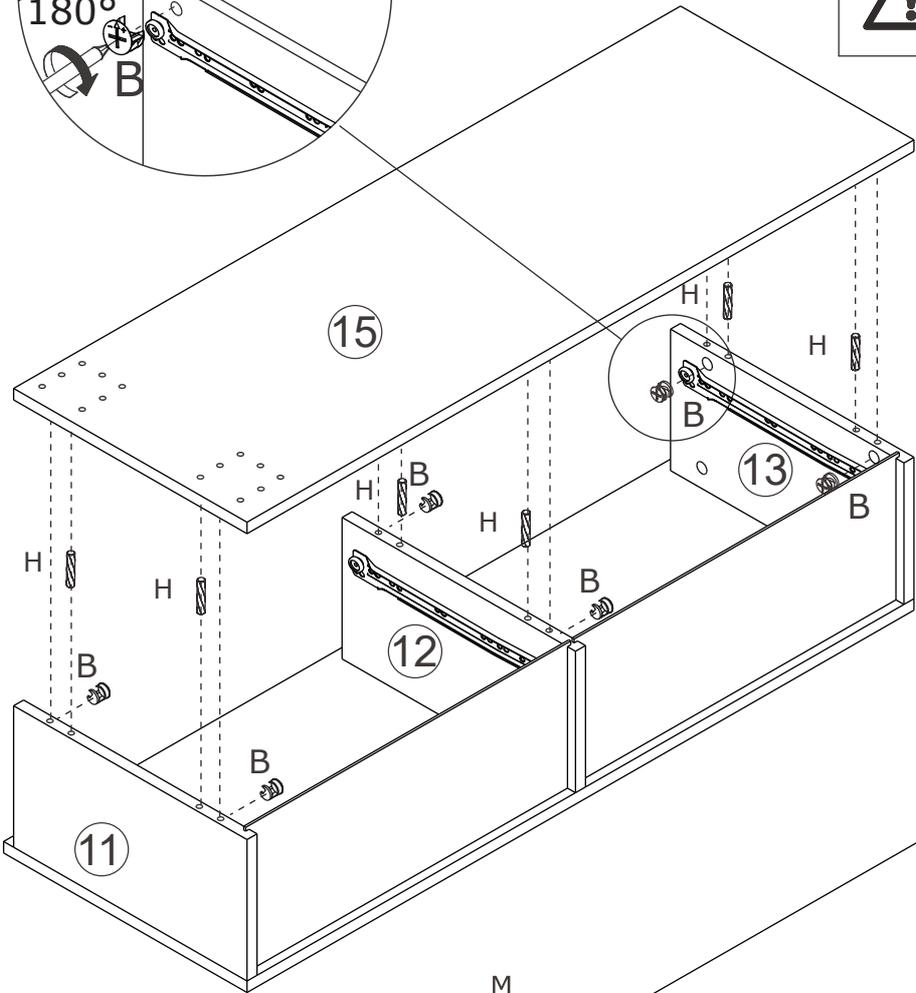


9

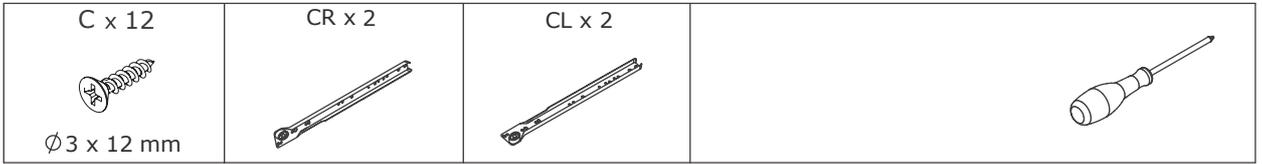



As shown in the figure, install the slide CL and CR on the corresponding positions of the plates No. 11, No. 12 and No. 13 respectively with screws No. C (please note that one end of the roller of the slide is in line with the edge of the plate).

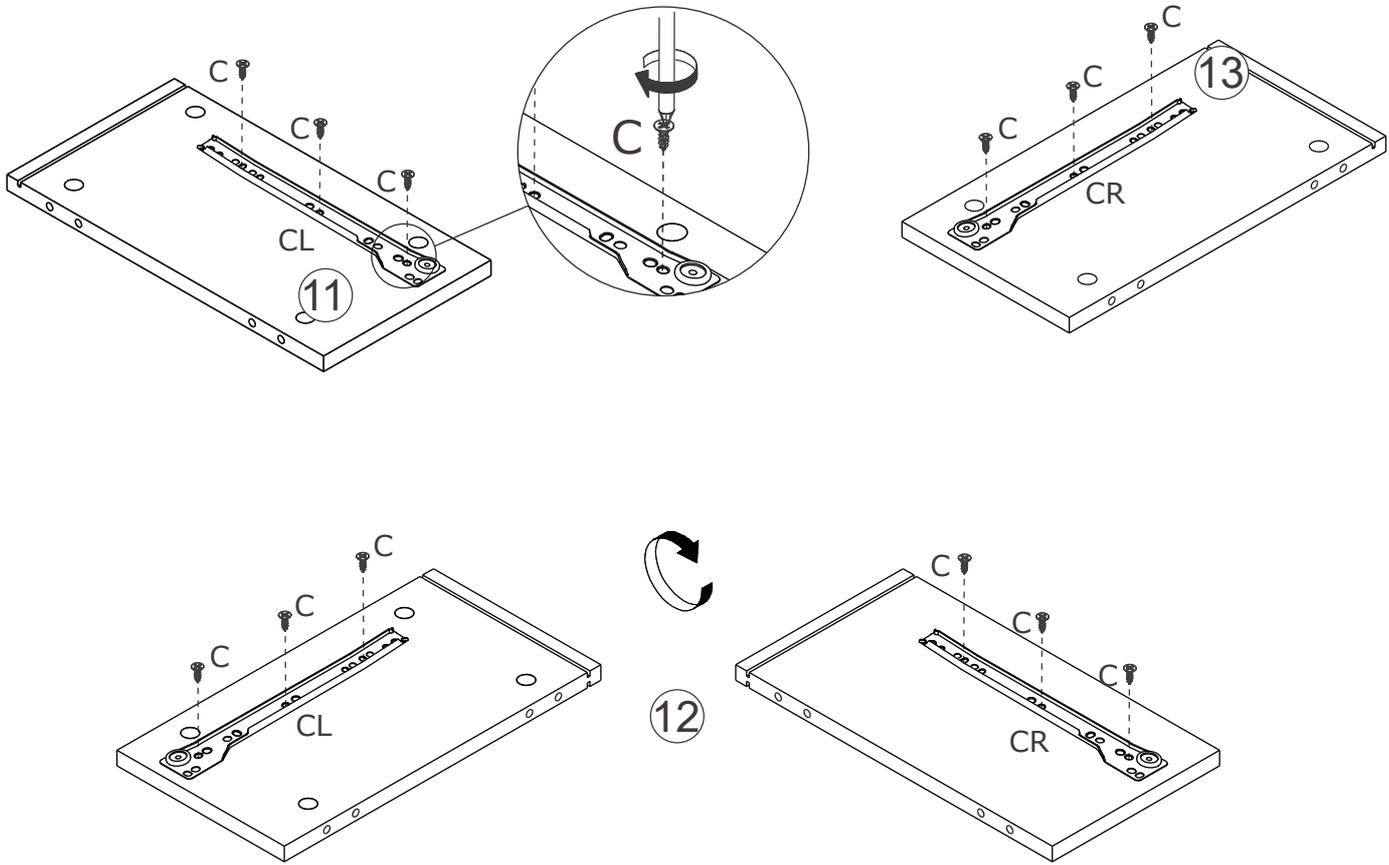



10

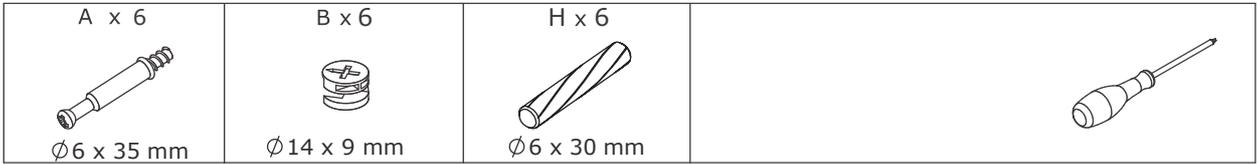



As shown in the picture, fix No. A screw and No. H dowels to the reserved holes on No. 9 board and insert No. 11, No. 12 and No. 13 boards (the grooves are on the same side).

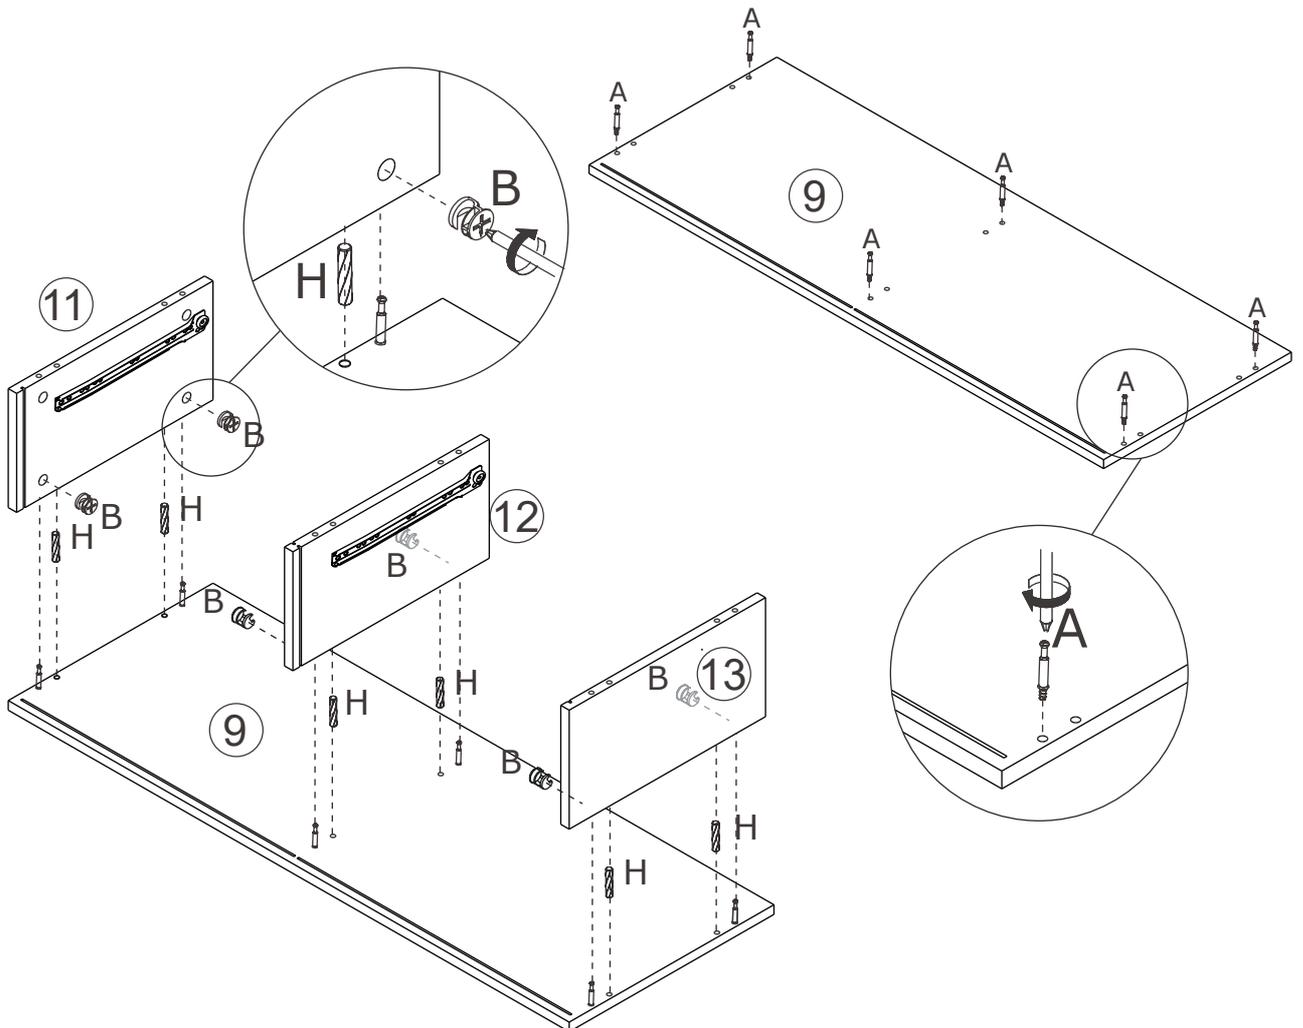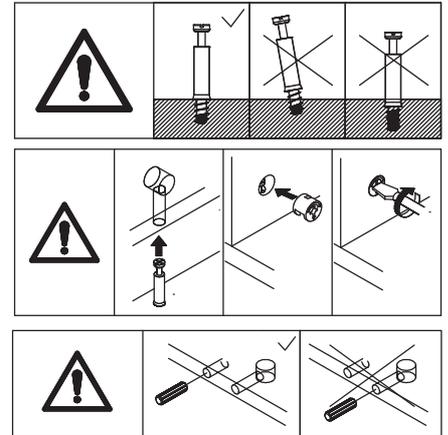

11

 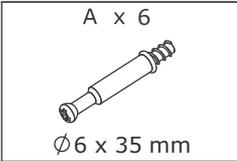

Insert the No. 10 plate as shown in the figure, and fix the No. A screw on the reserved hole position of the No. 14 plate pair.

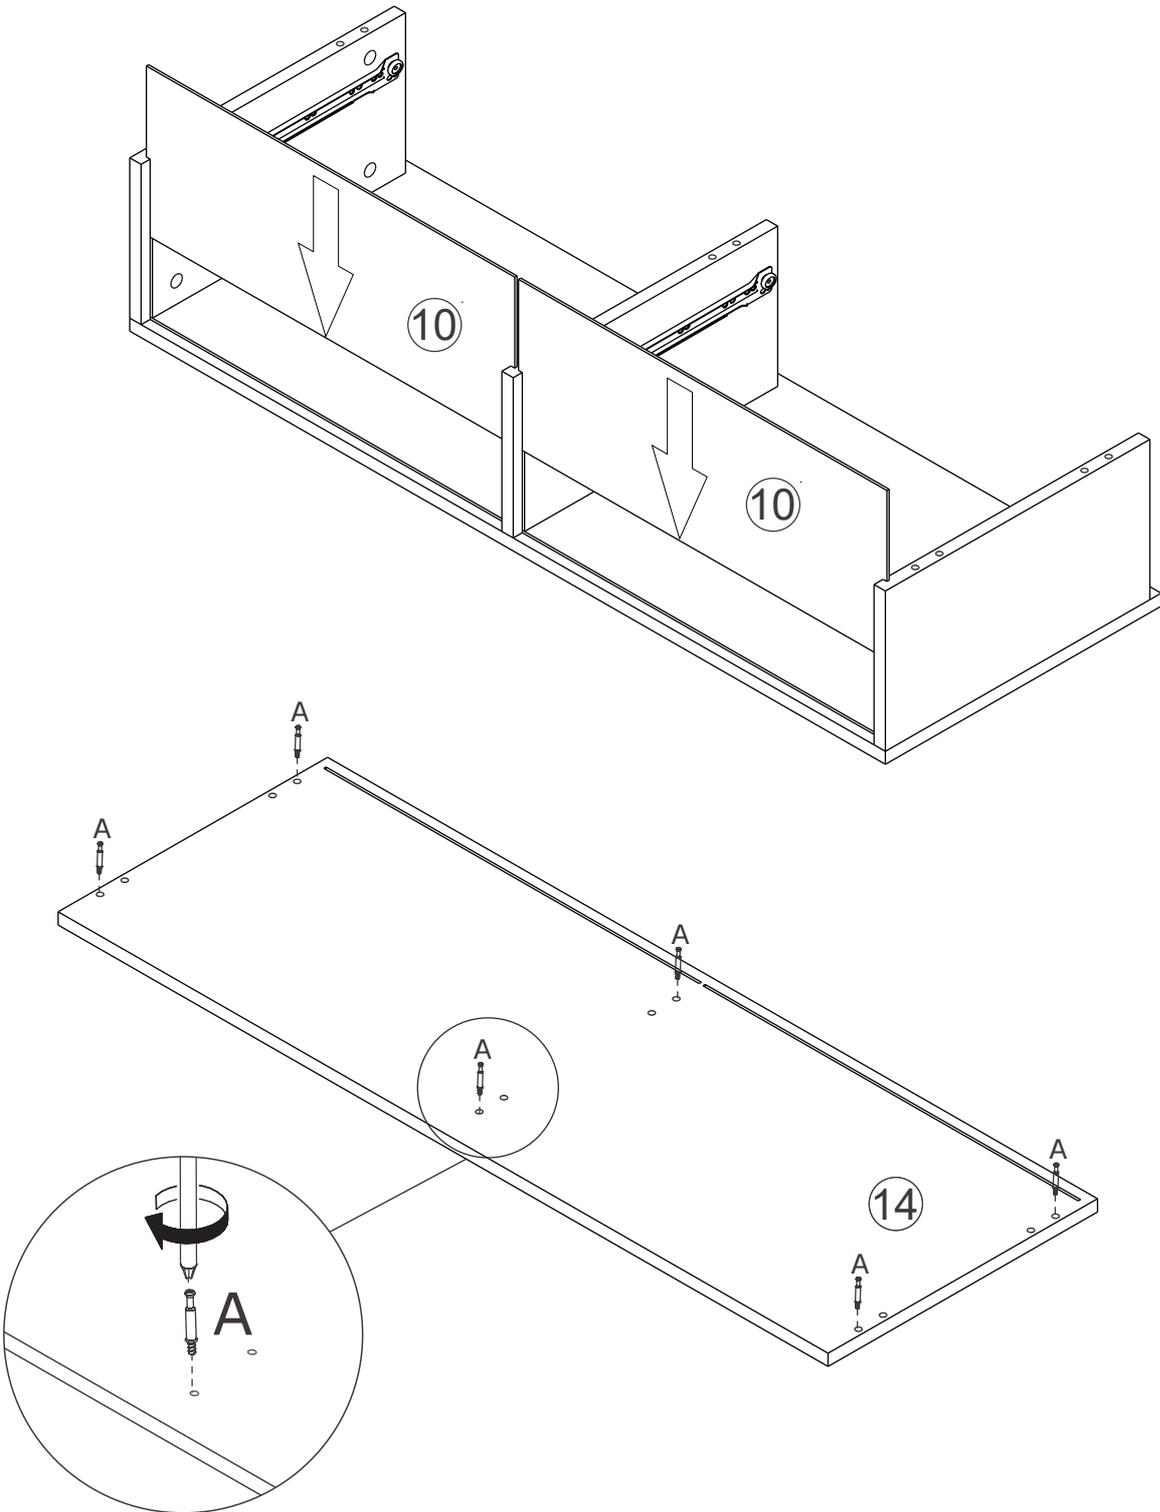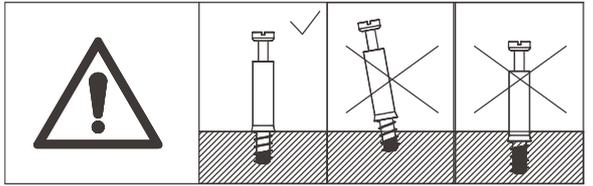

12

B x 6



Ø14 x 9 mm

H x 6





 
 


Ø6 x 30 mm

M x 14






Ø4 x 12 mm

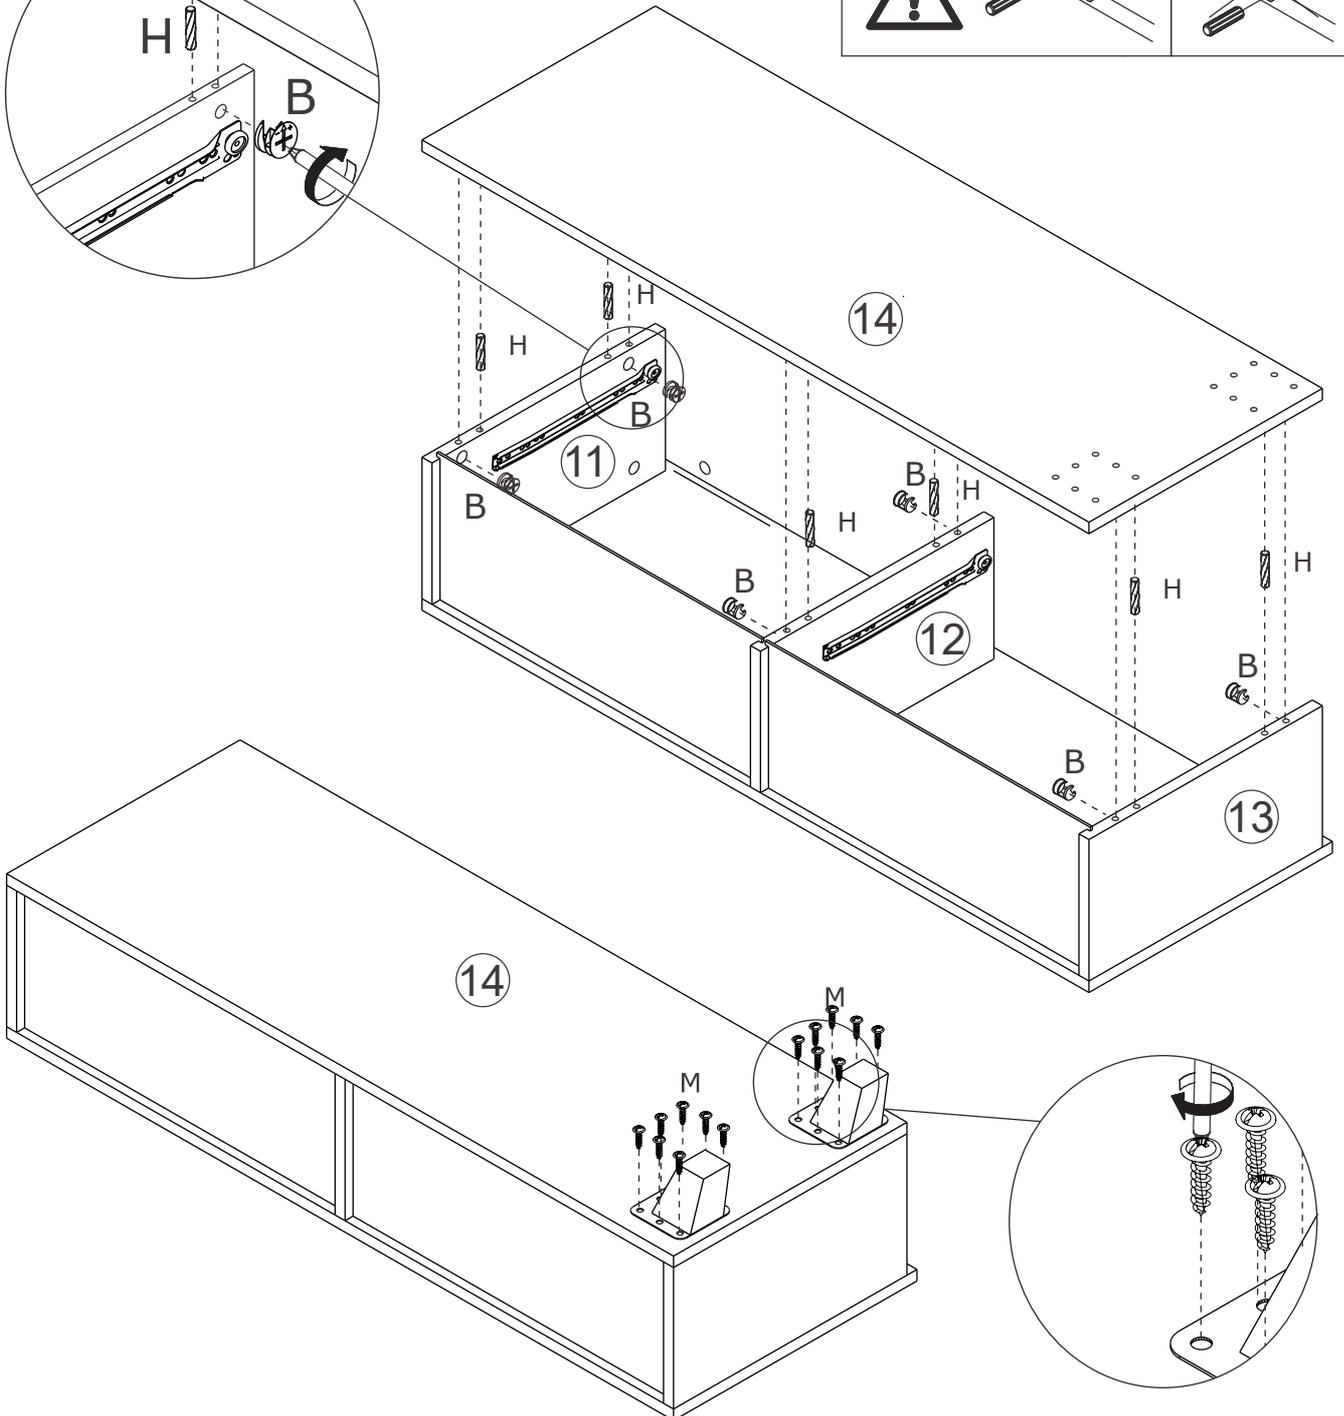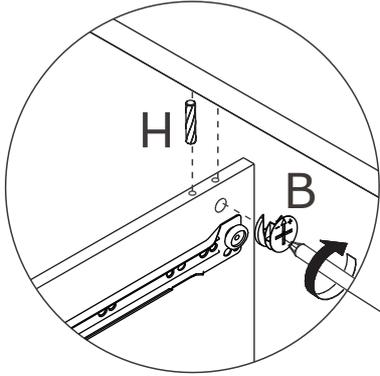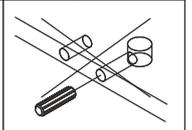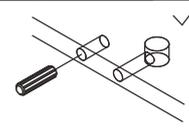

As shown in the figure, insert No. H wooden tenon at the corresponding reserved holes on No. 11, No. 12 and No. 13 plates, cover No. 14 plate, and put in No. B eccentric wheel to rotate 90-180 degrees clockwise; Finally, connect the foot of the TV cabinet to the cabinet body with the M screw.

 

13

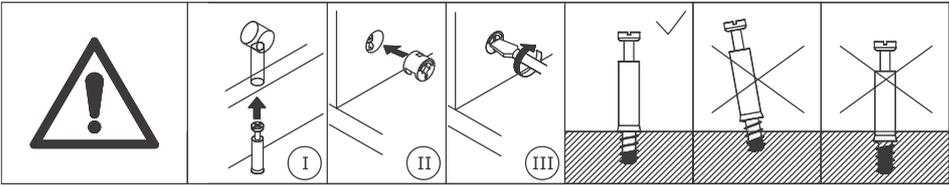
| | | | | |
|--|--|--|--|---|
| <p>A x 8</p>  <p>Ø6 x 35 mm</p> | <p>B x 8</p>  <p>Ø14 x 9 mm</p> | <p>D x 8</p>  <p>Ø5 x 45 mm</p> | <p>H x 8</p>  <p>Ø6 x 30 mm</p> |  |
| <p>N x 1</p>  |  | | | |

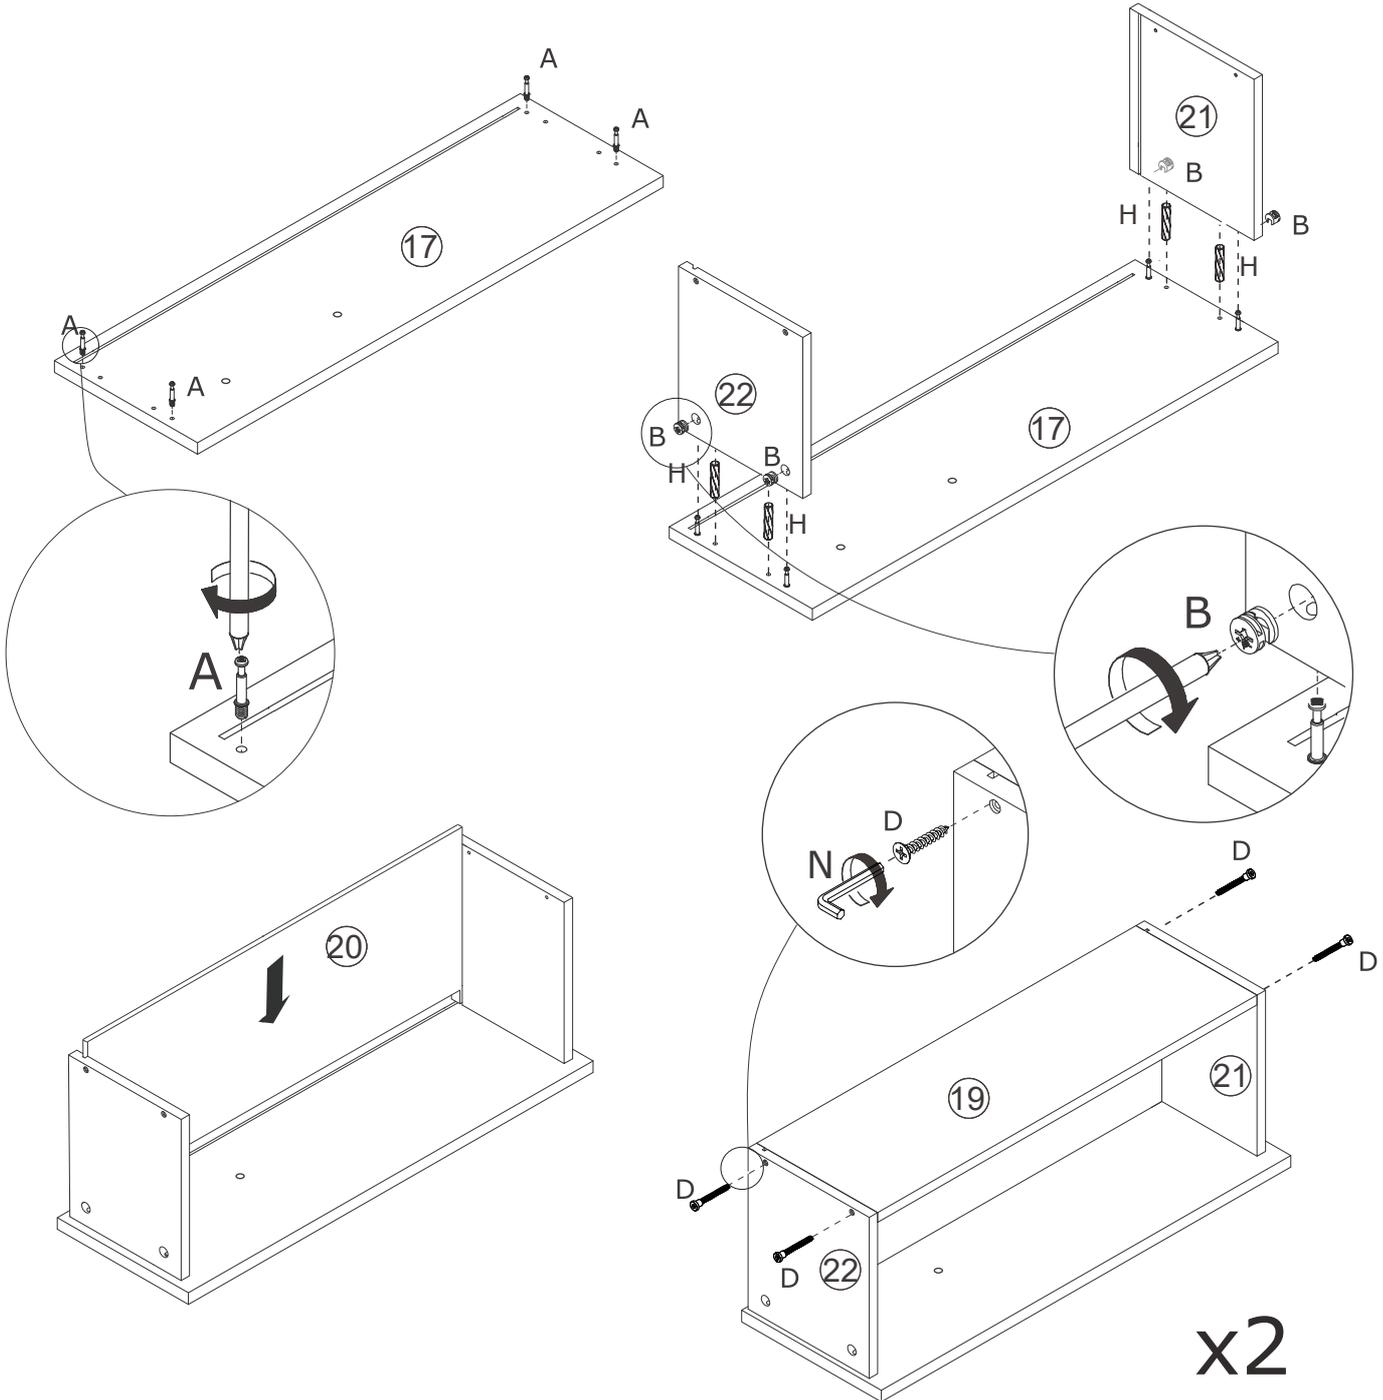

As shown in the picture, fix No. A screw and No. H wooden tenon No. 17, insert No. 21 and No. 22 plates, put in No. B eccentric wheel and rotate clockwise 90-180 degrees; Then insert No. 20 sheet and connect No. 19 plate to No. 21 and No. 22 plate using No. D screw and No. N wrench.

 14
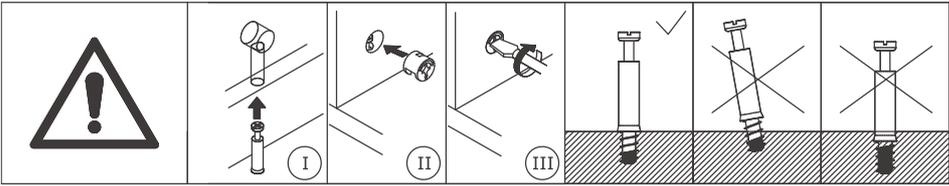
| | | | | |
|--|--|--|--|---|
| <p>A x 8</p>  <p>∅6 x 35 mm</p> | <p>B x 8</p>  <p>∅14 x 9 mm</p> | <p>D x 8</p>  <p>∅5 x 45 mm</p> | <p>H x 8</p>  <p>∅6 x 30 mm</p> |  |
| <p>N x 1</p>  |  | | | |

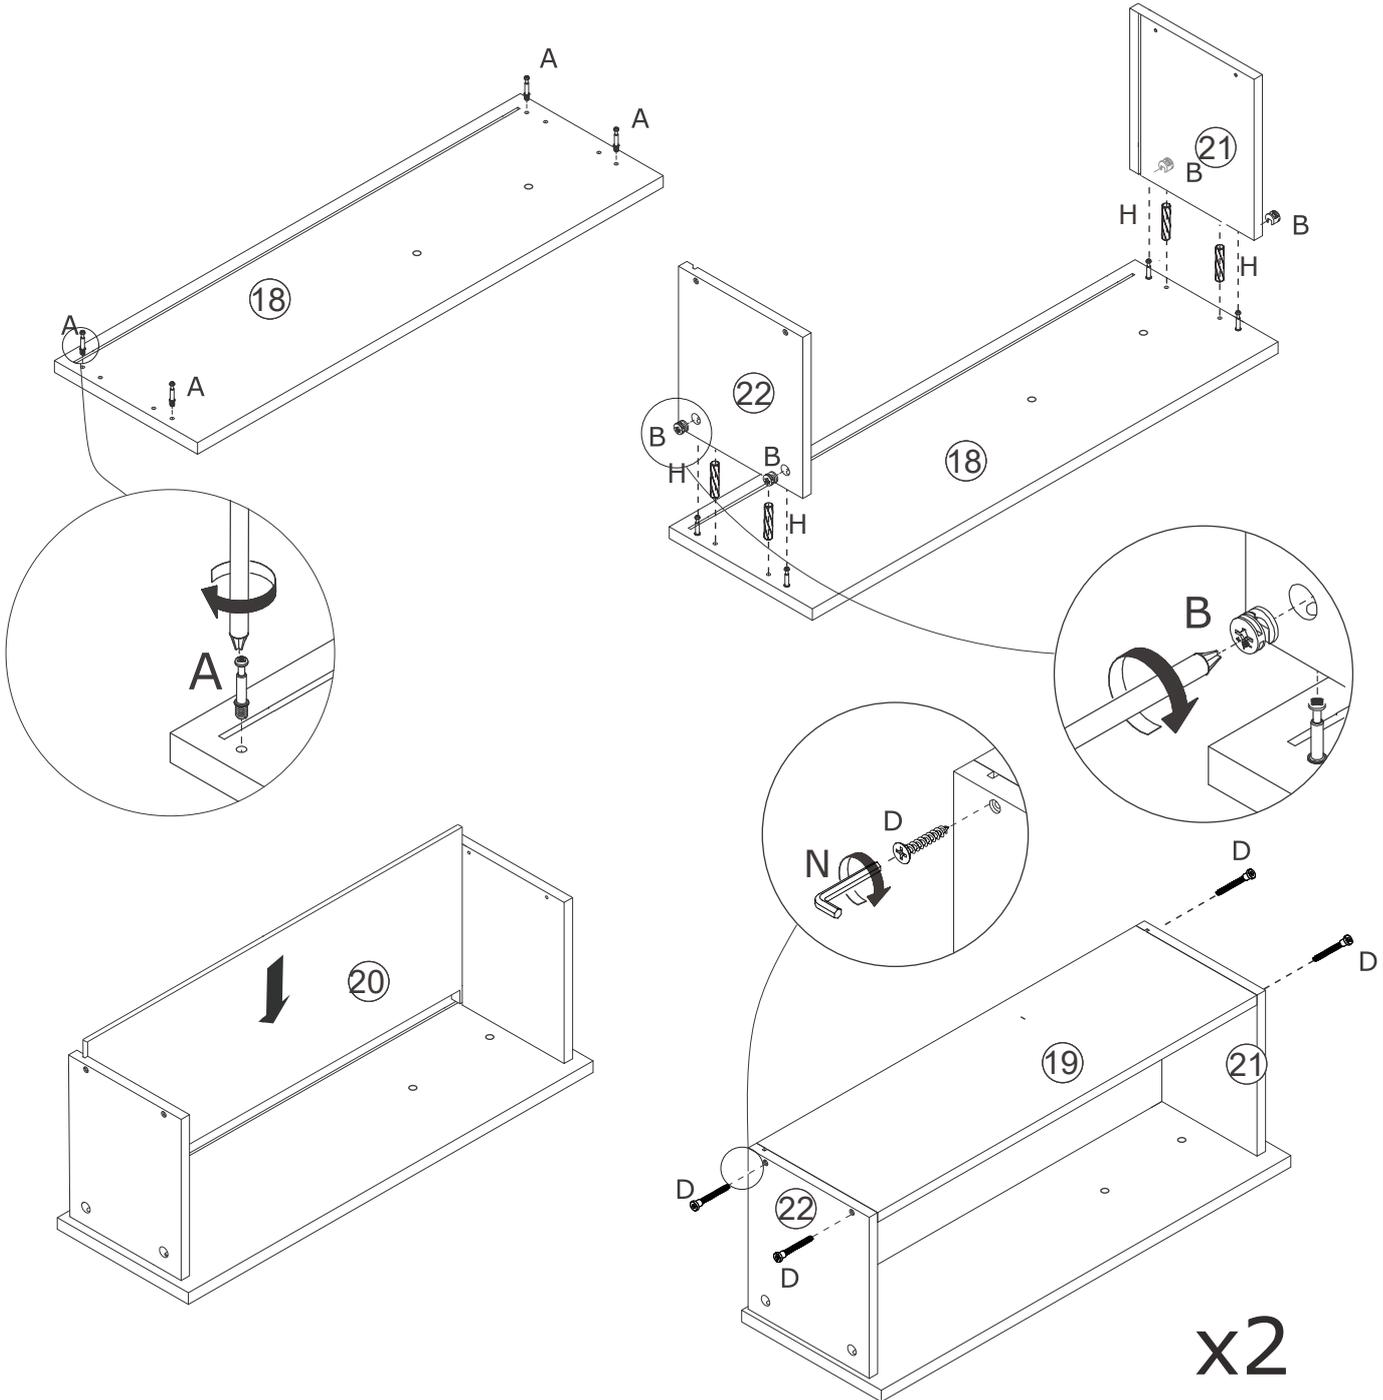

x2

As shown in the picture, fix No. A screw and No. H wooden tenon No. 18, insert No. 21 and No. 22 plates, put in No. B eccentric wheel and rotate clockwise 90-180 degrees; Then insert No. 20 sheet and connect No. 19 plate to No. 21 and No. 22 plate using No. D screw and No. N wrench.

15

A x 12



Ø3 x 12 mm

G x 6



 
E x 2








DL x 2



DR x 2




As shown in the picture, use the G screw to connect the E handle to the 17 drawer plate; Fix the slide DL and DR To the bottom of the drawer using screw No. C.

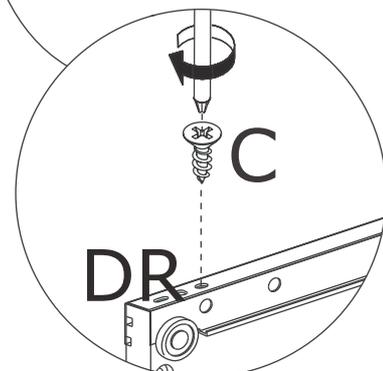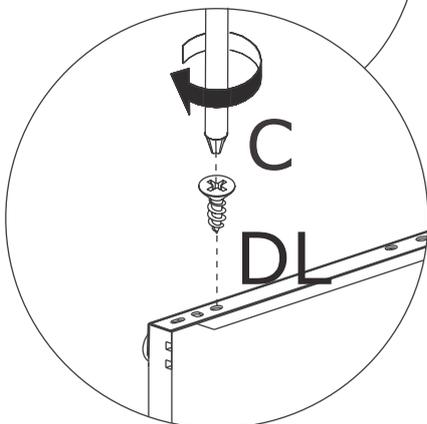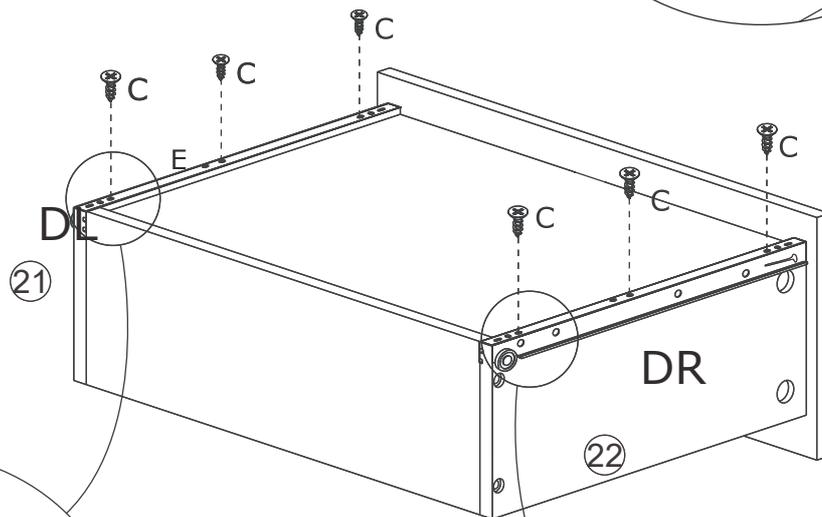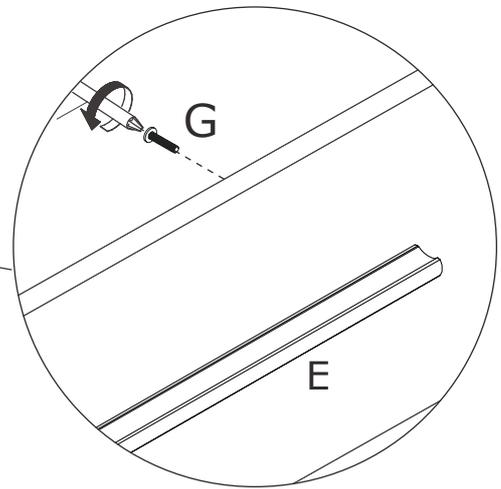
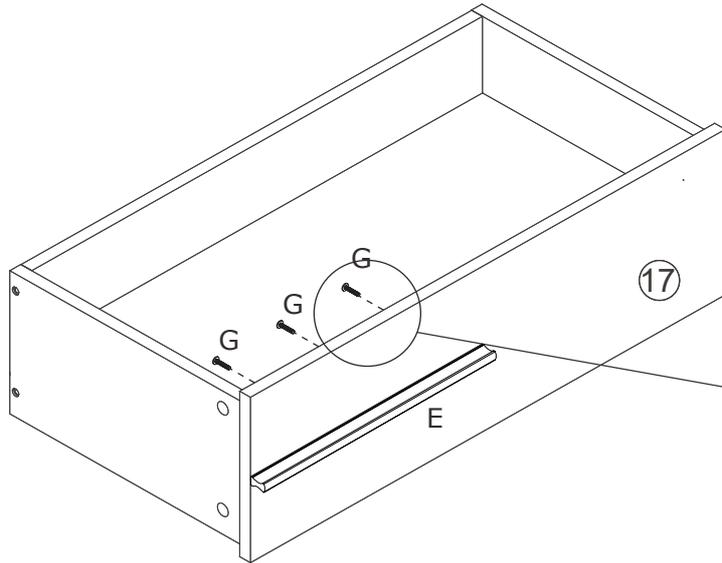


x2

 16

| | | | | |
|---|--|--|---|---|
| A x 12  Ø3 x 12 mm | G x 6  | E x 2  | DL x 2  | DR x 2  |
|  | | | | |


As shown in the picture, use the G screw to connect the E handle to the 18 drawer plate; Fix the slide DL and DR To the bottom of the drawer using screw No. C.

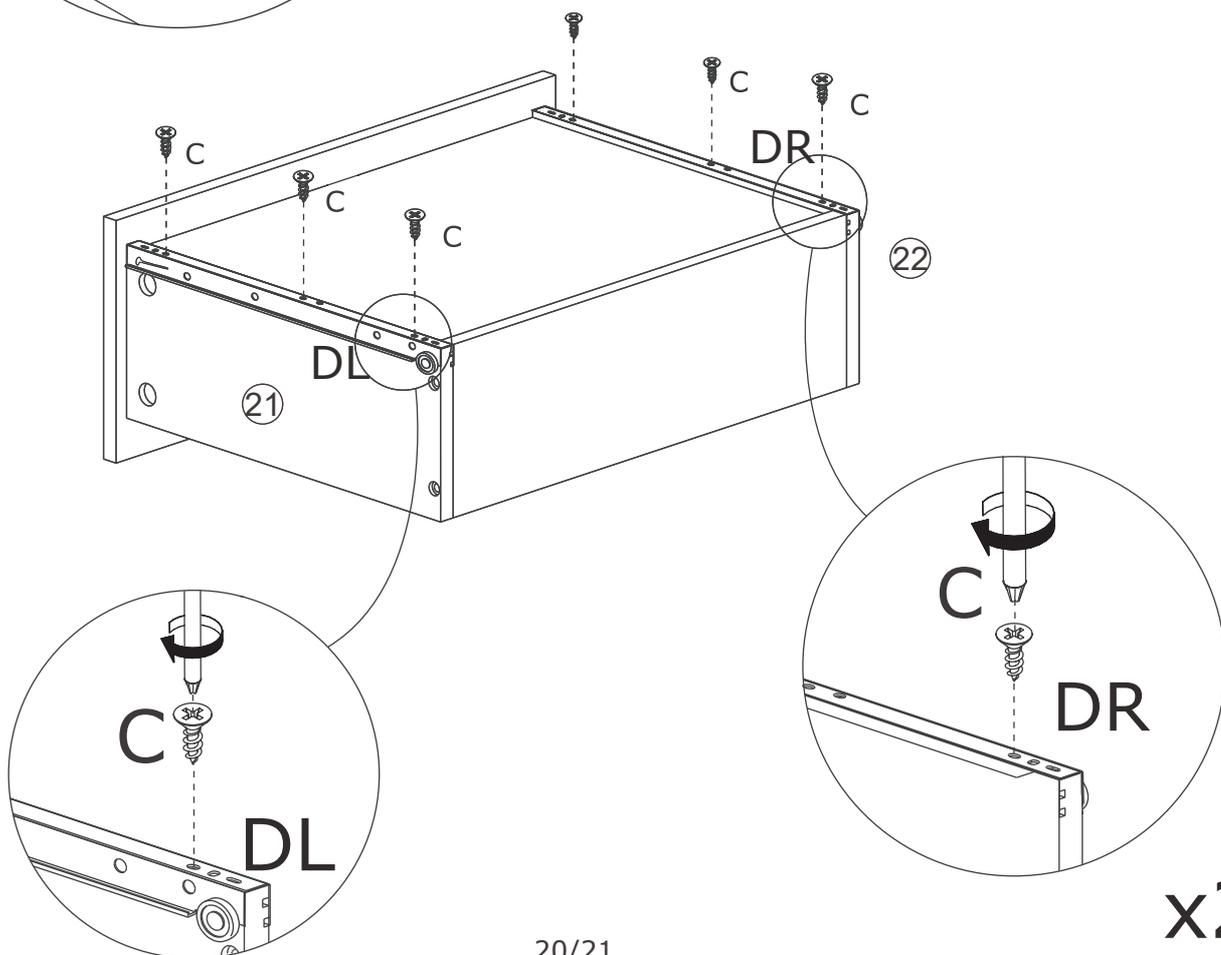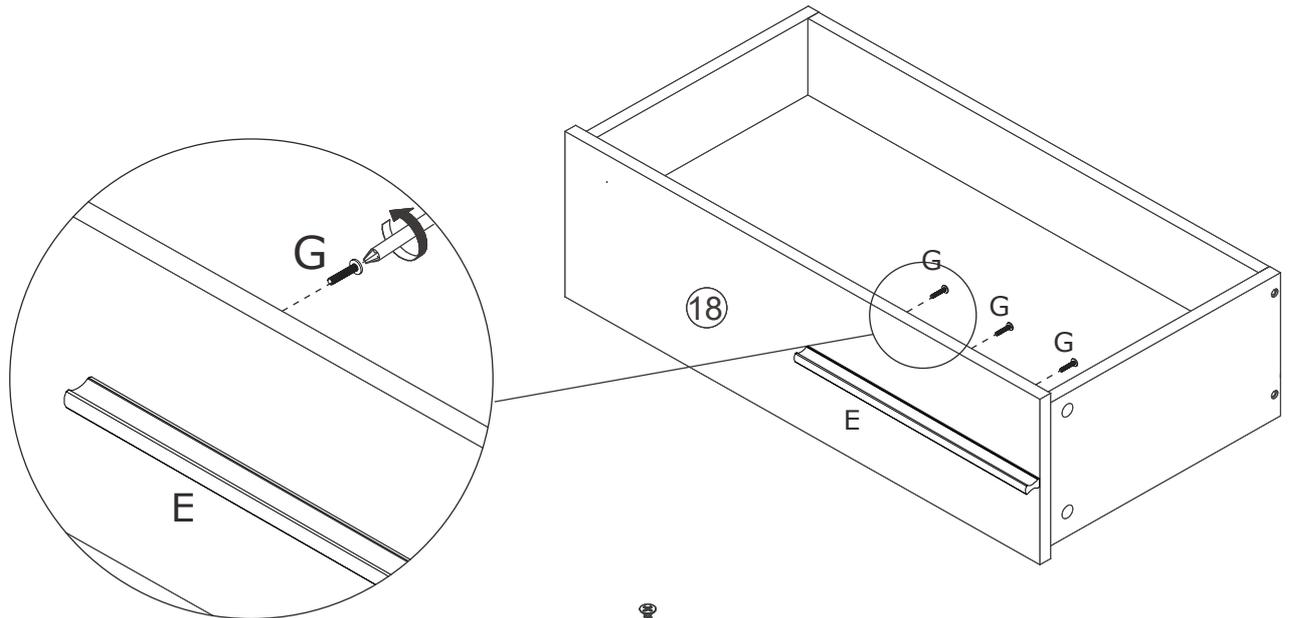

x2

17

As shown in the picture, assemble the assembled three cabinets and put them in the drawer for use.

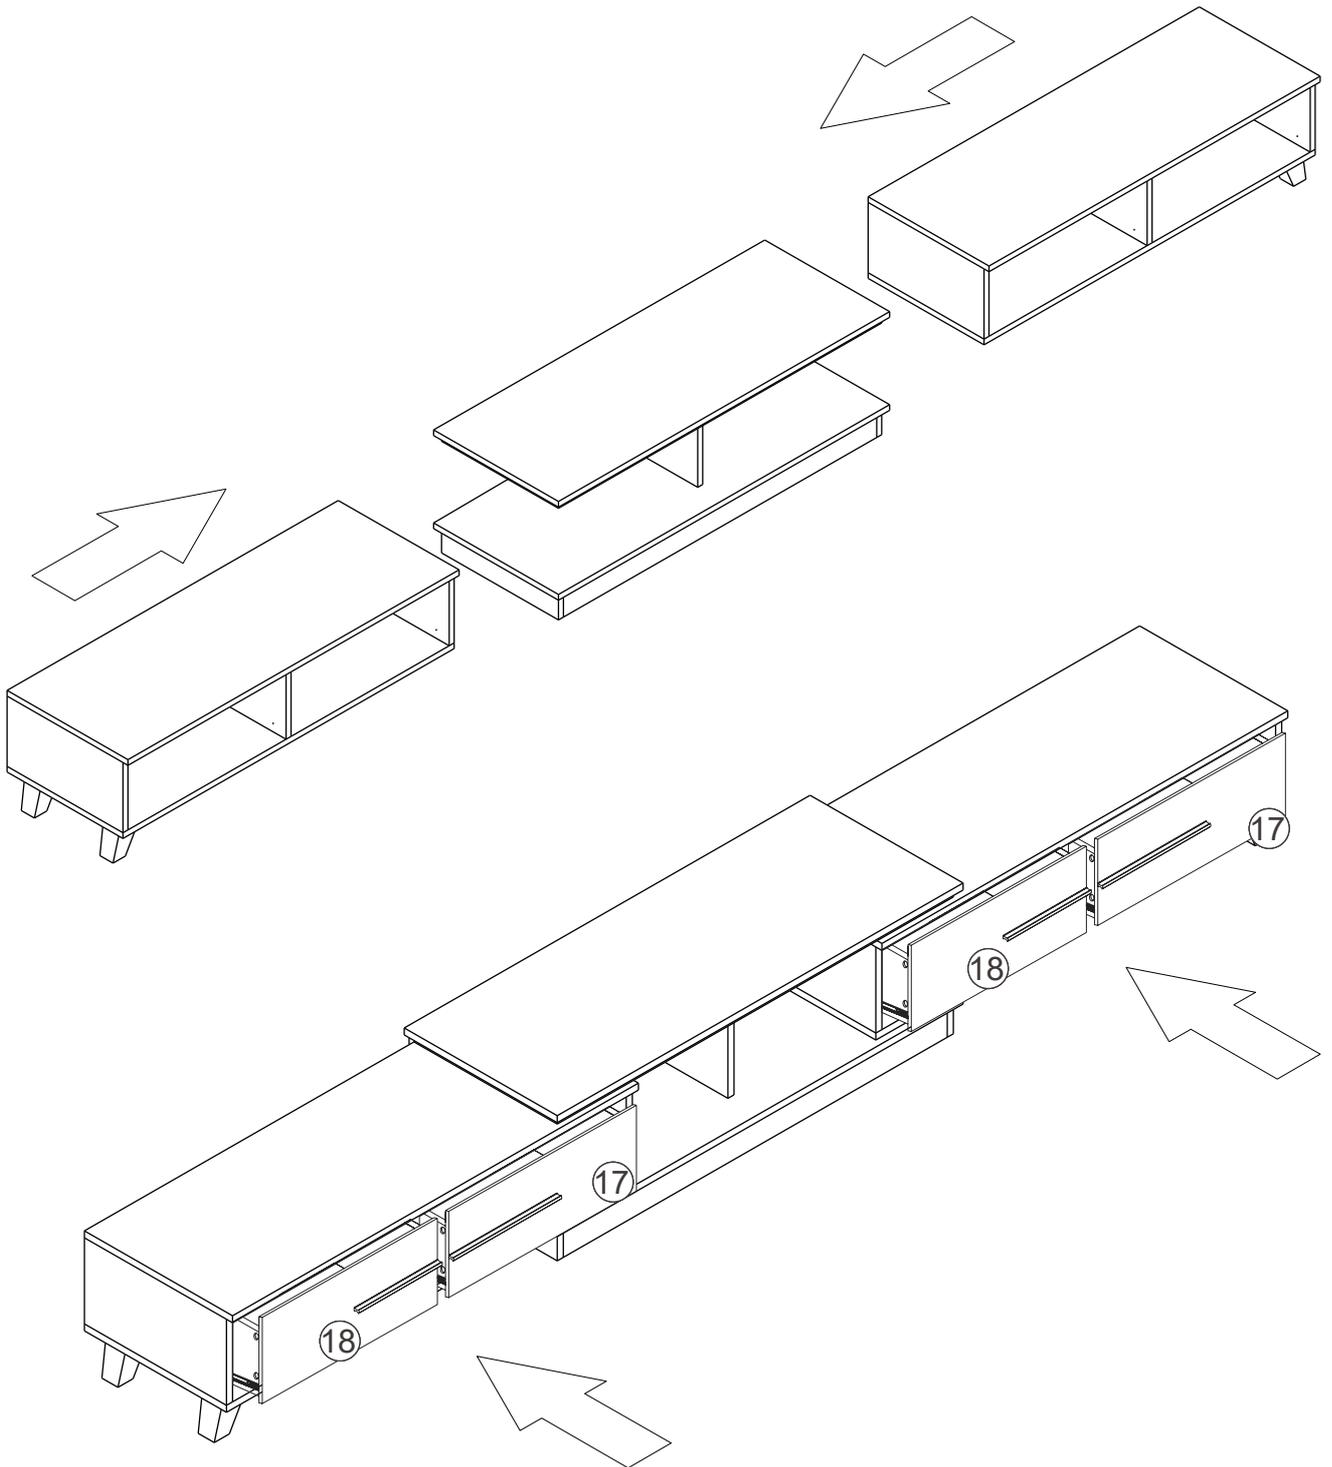

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer. In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.