

 


Ice Maker

Instruction Manual

SKU: IM021-BBL-USZX

SKU: IM021-BGR-USZX

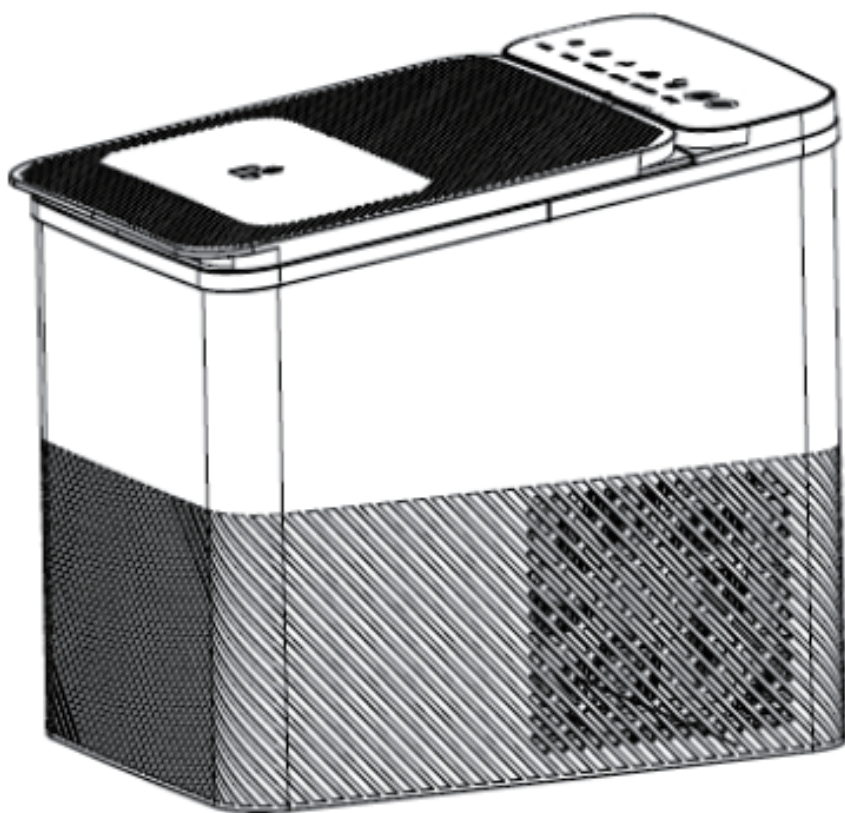

Congratulations

Dear Customer.

Welcome to Our family. Thank you for purchasing one of our products.

Our goal is to provide you with superior service. If there is anything missing from or wrong with your order, or if you have any questions about using our product, PLEASE contact us.

Email: support@homyd.com

Our team is available 24/7 to address your queries, comments, and concerns. Your satisfaction is our ultimate goal. We want to make everything right so you'll share your positive experience with other shoppers.

If you experience any problems, please send an email to support@homyd.com.

Our mission

- * To be the most trusted appliance brand.

- * To create practical, compact appliances that better your life.

Contents

Safety Instructions	01-03
Product Structure	04-05
BEFORE FIRST USE	06
Operation Instructions	07
Cleaning & Maintenance	08-09
Specifications	10
Warranty	11
Troubleshooting(support@homyd.com)	12

Safety Instructions

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, explosion, electric shock, or injury when using your ice maker, follow these important safety instructions:

1. Before using, check and make sure that the voltage and power correspond to the ones shown on the appliance nameplate.
2. Do not remove any safety, warning, or product information labels from your ice maker.
3. Plug the ice maker into an exclusive grounded outlet. No other appliance should be plugged into the same outlet. Be sure that the plug is fully inserted into the receptacle.
4. This appliance must be grounded. It is equipped with a cord having a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.
5. Avoid the use of an extension cord because it may overheat and cause a risk of fire. However, if it is necessary to use an extension cord:
 - (1) Use only extension cords with grounding plug.
 - (2) The marked rating of an extension cord must be equal to or greater than the rating of this appliance.
 - (3) It should be positioned such that it does not drape over the counter or tabletop where it can be pulled on by children intentionally.
6. Do not operate any appliance with a damage cord or plug or after the appliance malfunction or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
7. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
8. **WARNING:** When positioning the appliance, ensure the supply cord is not trapped or damaged.



Warning; Risk of fire/flammable materials

9. **WARNING:** Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.



Warning; Risk of fire/flammable materials

10. Do not let cord hang over edge of table or counter.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. Place power cord in such a way it cannot be pulled on by children or cause a tripping hazard.
13. Place power cord in such a way that it is not in contact with hot surfaces.
14. The use of attachment not recommended or sold by manufacturer may cause fire, electric shock or injury.
15. Do not touch the ice-making parts when using the ice maker or making ice to avoid being suffer from frostbite.
16. Do not immerse any part of the product in water.
17. To disconnect, turn any control to "OFF", then remove plug from wall outlet.
18. Do not plug or unplug the product with wet hands.
19. Unplug the product before cleaning, maintaining and when not in use.
20. Do not use with water that is microbiologically unsafe or of unknown quality.
21. Do not clean your ice maker with any flammable fluids. The fumes may create a fire hazard or explosion.
22. Do not overturn the ice maker. If the ice maker is overturned accidentally, make it stand steadily for 2 hours before power it on again.
23. If the ice maker is brought in from outside in wintertime, do not use for a few hours, allowing the unit to warm up to the room temperature before operating.
24. Never put flammable, explosive and corrosive articles into the ice maker.
25. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
26. Never use the ice maker when there is flammable gas leakage.
27. Never store or use gas and other flammable articles near the ice maker to avoid any fire.
28. Unplug the ice maker before moving it to avoid damaging the refrigerating system.
29. Do not attempt to disassemble, repair, modify, or replace any part of your product.
30. This appliance is not intended for used by persons (including children) with reduced 30.physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
31. Children should be supervised to ensure that they do not play with the appliance.
32. Close supervision is necessary when any appliance is used by or near children.
33. Do not leave the appliance unattended while in use.
34. Do not use the appliance for other than intended use.
35. Do not use outdoors.
36. WARNING: Risk of fire/flammable materials
37. Please abandon the ice maker according to the local regulations as it uses flammable blowing

gas and refrigerant.

38. Please dispose of the flammable refrigerant and blowing gas used in the appliance according to the local regulations.

39. WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

40. WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

41. WARNING: Do not damage the refrigerant circuit.

42. WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

43. Cautionary statements concerning the handling, moving and use of the refrigerator or freezer to avoid either damaging the refrigerant tubing, or increasing the risk of a leak: the appliance shall be handled with care and shall not be moved or installed violently.

44. Component parts such as compressor, condenser, motor and copper pipe etc. shall be replaced with like components and that servicing shall be done by factory authorized service personnel, so as to minimize the risk of possible ignition due to incorrect parts or improper service.

45. It declares that the conformity to the applicable provisions of applicable US Federal requirements, including 21 CFR, Chapter 1, Subchapter J, Radiological Health.

46. The appliance must be powered off before the maintenance is performed to prevent the service personnel from being subject to electric shock.

47. WARNING: Never pour colored drinks or porridge-like drinks into the machine.

48. This appliance is intended to be used in household and similar applications such as

–staff kitchen areas in shops, offices and other working environments;

 
 
 
 
–farm houses and by clients in hotels, motels and other residential type environments;

–bed and breakfast type environments;

–catering and similar non-retail applications.

Product Structure

1) Structure

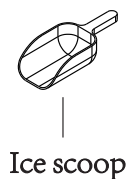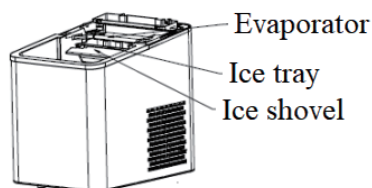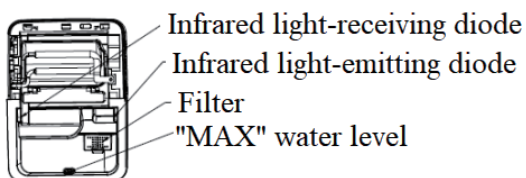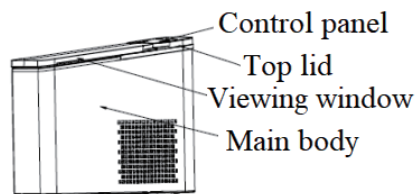

2) Control panel



Key (with indicator)	Function
	Start or stop the appliance
	"  " indicator lights up when the ice basket is full.
	"  " indicator lights up when the water reservoir is lack of water.
	The indicator lights up when select small ice.
	The indicator lights up when select large ice.
	"  " indicator lights up when the appliance is being cleaned
	Can select "S", "L" or "CLEAN" under stan-dby mode, after power on, can select "S" or "L".

BEFORE FIRST USE

1. Unpack the appliance, then check and make sure that all the accessories including ice basket and ice scoop etc. are complete. Please contact with the client service department if some accessories are missed.
2. Please ensure the ice maker is level and on a stable table or platform to avoid malfunction.
3. The incline angle of the ice maker cabinet should not exceed 45° during transportation or use. Do not turn the ice maker upside down. Doing so could cause the compressor or refrigerating system to operate incorrectly. Please allow time for the fluids in the compressor to settle after the ice maker is moved or transported. Before using the ice maker for the first time, please wait for 2 hours after the unit has been leveled and positioned in the proper place.
4. The appliance must be placed on a dry and level surface with sufficient ventilation, far from heat sources such as ovens, heaters and corrosive gases. Leave about a 6-inch (15cm) clearance on all sides of the ice maker for proper ventilation.
5. Do not fill the water reservoir with hot water. This may damage the ice maker. It is best to fill the water reservoir with water of room temperature or lower.
6. Do not use the appliance at a very cold environment (lower than 5 °C).
7. Clean the appliance by following the operation of "CLEANING AND MAINTENANCE" before operate.

Operation Instructions

1. Ensure that the drain plug at the bottom of water reservoir is closed well.

2. Plug the ice maker into the wall outlet, the " " indicator blinks.

NOTE: Please make the ice maker be rested for 30 minutes before plug if it has been moved.

3. Open the top lid and remove the ice basket.

4. Fill the water reservoir with drinking water.

NOTE: Fill with potable water only and do not fill above the MAX water level mark. Replace the ice basket and close the top lid.

5. Press "ON/OFF" key, and the " " indicator lights solidly. At that time, press " " key to select the ice size. If need to clean the appliance, press " " key to select " " function under standby mode.

6. The ice-making cycle will last approximately 7-15 minutes, depending on the ambient temperature and water temperature.

7. The ice-making cycle starts with water being pumped into the ice tray situated below the evaporator. Over the next 7-15 minutes ice forms on the evaporator. Once this has completed, the ice tray will tilt backwards and the remaining water in the ice tray is drained back into the water reservoir. The ice cubes are then dropped from the evaporator and pushed forward into the ice basket by the ice shovel. The ice tray will automatically move back into position under the evaporator and start the next cycle.

8. The " " indicator will light up when the ice basket is full and then the ice maker will stop the ice-making cycle automatically. Gently remove the ice from the ice basket with the ice scoop. About 7.5 seconds later, the ice maker will restart its ice making function automatically.

9. The " " indicator will light up when the water reservoir is lack of water and the ice-making cycle will stop automatically. At that time, remove the ice basket and add water to the water reservoir, and then press " " key again to restart the ice-making cycle. The appliance will start working automatically after about 20 minutes if the operator forgets to restart the appliance after refill.

10. When you have got your desired amount of ice, stop the ice making cycle by pressing the " " key and unplug the unit from the wall outlet.

11. Open the top lid and transfer the ice to a freezer.

12. Allow the ice maker to reach room temperature.

13. Suggest replacing the water every a week. Please empty the water reservoir if the ice maker is not used for a long time.

 
Cleaning & Maintenance

To keep your ice tasting fresh and your ice maker looking great, we recommend cleaning your ice maker once per week.


1. Stop the ice-making cycle by pressing the  " key, unplug the ice maker from the wall outlet and allow it to warm up to room temperature.
2. If residual water is found in the ice tray, gently push the ice tray back so that all water drains into the water reservoir.
3. Move the appliance forward to a place 90mm away from the working table and open the drain plug to drain out excess water (see Fig.1, Fig.2 and Fig.3).
Check and make sure the drain plug must be closed well. Fill the water reservoir with
4. clean water, press  " until the  "indicator flashes, then press the  " key, the pump will start to pump water and keep running for 6 minutes, and it will enter into standby condition after running for 6 minutes, finally, open the drain plug and empty the water.
5. Remove the ice basket.
6. Clean the ice maker interior with a soft cloth soaked with warm water and vinegar, then rinse with clean water and then drain all the water.
7. Replace the drain plug well in position. Wash the ice basket and ice scoop in warm soapy water. Rinse and dry.
8. Clean the exterior of the ice maker with a soft damp cloth. Use a mild dishwashing soap, if necessary.

NOTE:

- 1) Do not use organic solvent, boiled water, detergent, strong acid and strong alkali etc. for cleaning.
- 2) Do not clean the evaporator.
8. Please empty the water reservoir and dry it for storage if the ice maker is not used for a long time.

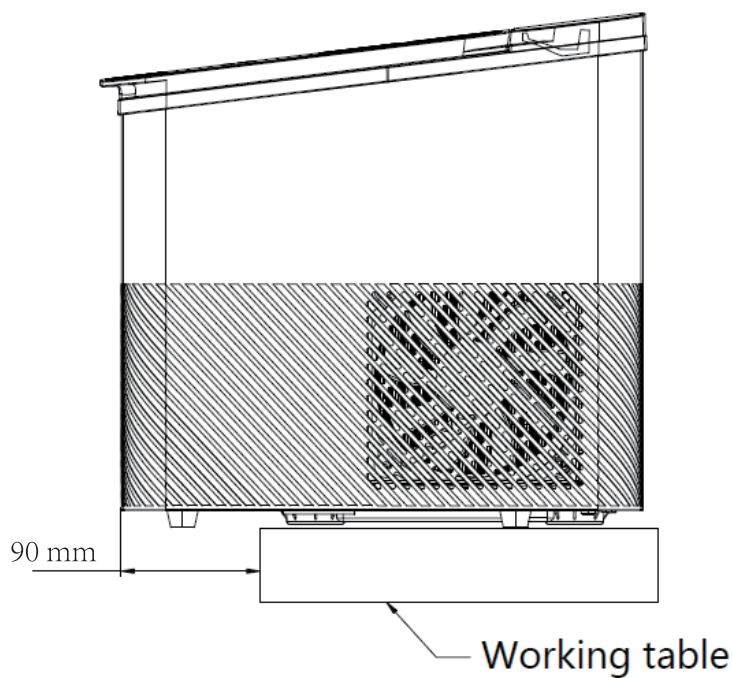


(fig.1)

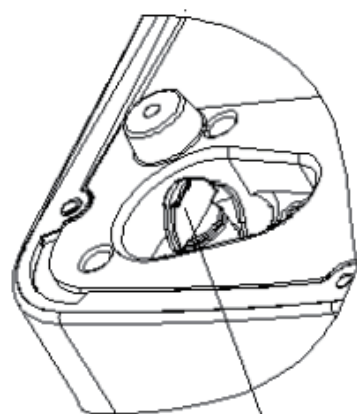 

Drain plug

 (fig.2)

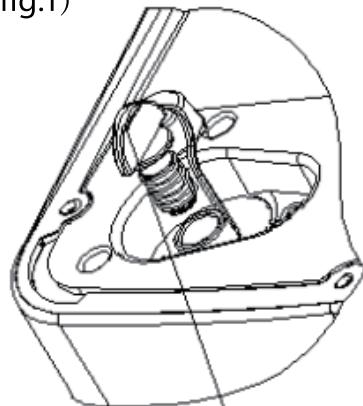

Drain plug

(fig.3)

Specifications

SKU:	IM021-BBL-USZX/IM021-BGR-USZX
Model:	IM021-B
Applicable climate:	ST/SN/N/T
Class:	I
Power source:	120V/60Hz
Rated power:	105W
Refrigerant/Refrigerant amount:	R600a / 13g
Foaming agent:	EPS
Net weight:	13lbs
Housing:	ABS
Unit size (DXWXH):	11.69*8.27*11.02 in

Warranty

We offers a limited 1-year warranty ("warranty period") on all of our products purchased new and unused from our company, with an original proof of purchase and where a defect has arisen, wholly or substantially, as a result of faulty manufacture, parts, or workmanship during the warranty period. The warranty does not apply where damage is caused by other factors, including without limitation:

- (a) normal wear and tear.
- (b) abuse, mishandling, accident, or failure to follow operating instructions;
- (c) exposure to liquid or infiltration of foreign particles;
- (d) servicing or modifications of the product;
- (e) commercial or non-household use.


The warranty covers all costs related to restoring the proven defective product through repair or replacement of any defective part and necessary labor so that it conforms to its original specifications. A replacement product may be provided instead of repairing a defective product. Our exclusive obligation under this warranty is limited to such repair or replacement. A receipt indicating the purchase date is required for any claim, so please keep all receipts in a safe place. Although greatly appreciated, the product registration is not required to activate any warranty and product registration does not eliminate the need for the original proof of purchase. The warranty becomes void if attempts at repair are made by non-authorized third parties and/or if spare parts, other than those provided by us, are used. You may also arrange for service after the warranty expires at an additional cost. These are our general terms for warranty service, but we always urge our customers to reach out to us with any issue, regardless of warranty terms. If you have an issue with a product, please contact us (support@homyd.com), and we will do our best to resolve it for you.

TROUBLESHOOTING

No.	Problem	Possible causes	Solution
1	"  " indicator turns on	1.Low water level or lack of water 2.The water screen at the bottom of water reservoir is blocked. 3 .Pump malfunction.	1.Stop making ice, refill water and then press "  "key to restart ice-making cycle. 2 .Do cleaning 3.Send it to the authorized department for repair.
2	"  " indicator lights up	1.Ice basket is full and the infrared light is blocked by the ice. 2.Infrared light-emitting diode & light-receiving diode do not work	1. Remove the ice from ice basket. 2a. Wipe up the foreign objects on the infrared light-emitting diode & light-receiving diode and restart the ice maker. 2b. Call Customer Service if the infrared light-emitting diode & light-receiving diode still can not work after wiping up the foreign objects on them and restarting the ice maker.
3	The ice collects together.	The ice collects together.	Stop making ice and restart the ice-making cycle after the ice melts.
		The ice collects together.	Stop making ice and restart the ice-making cycle after the ice melts.
4	The ice-making cycle seems normal but no ice is produced.	The ambient temperature or water temperature is too high.	Start the ice-making cycle at a environment with an ambient temperature less than 32°C and fill the water reservoir with some cold water.
		Refrigerating system leaks	Call customer service
		Refrigerating system blocks	Call customer service
5	Poor ice-making result	1.Poor heat dissipation. 2.The water temperature is too high. The ambient temperature is too high.	1.Leave a 6-inch clearance on all sides of the ice maker for proper ventilation. 2.Fill the water reservoir with water ranges between 8 C and 28 C . Operate the ice maker at a environment with an ambient temperature between 10 C and 32 C .
6	Water pump does not work or produces noise.	1. Water pump is damaged. 2.The appliance has not been cleaned for a long time,which has resulted in the formation of mucoid substance at the water inlet of the water pump, so that the water-pumping is not smooth. There is air in the water pipe, so there will be resonance noise produced when pumping water.	1. Contact the after-sales department for replacing the water pump. 2.The appliance should be cleaned in one to two weeks, and some neutral cleaning agents (such as detergent and soapy water etc.) can be added if necessary.

Ice Maker

 specification

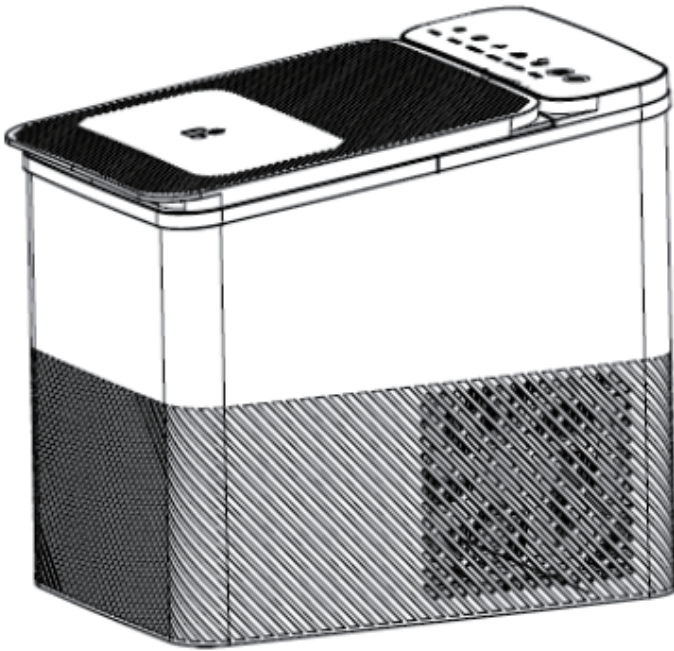

☎ 1-833-632-0897

✉ support @homyd.com