 


ASSEMBLY INSTRUCTIONS

 
ITEM NO. FB3012CST-GY-T-3535
FB3012CST-WA-T-3535

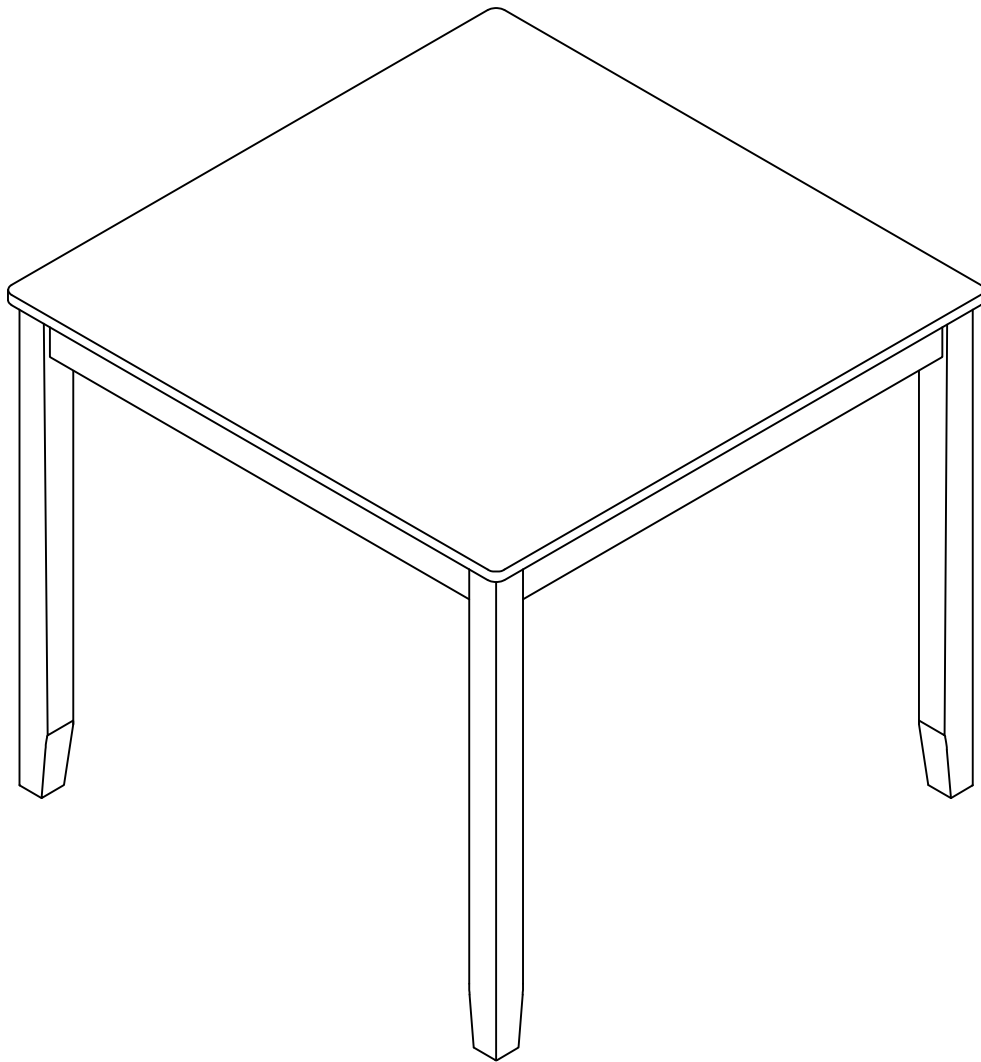


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.


Exploded View

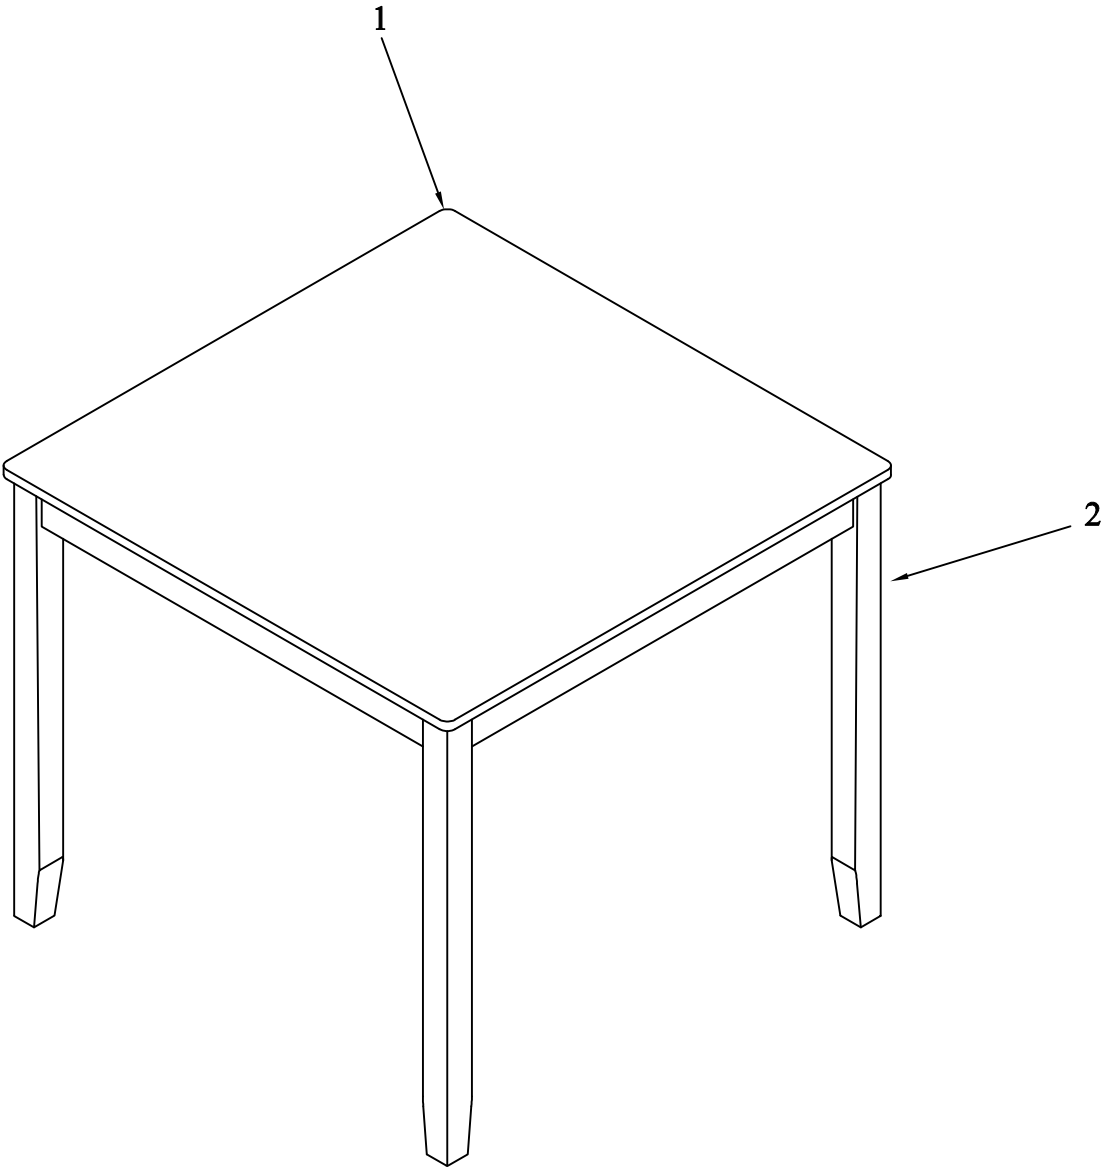


PARTS LIST

 NO.	DIAGRAM	PART NAME	Q'Ty
1		TABLE TOP	1PC
2		LEG	4PCS

 
HARDWARE LIST

NO.	DIAGRAM	PART NAME	Q'Ty
A		BOLT / BOULON Ø5/16" x2-3/8"	8PCS
B		LOCK WASHER Ø5/16"1/16	8PCS
C		FLAT WASHER Ø5/16"x 19mm	8PCS
D		ALLEN KEY 1/6" x 2-1/4"	1PC

 STEP 1:

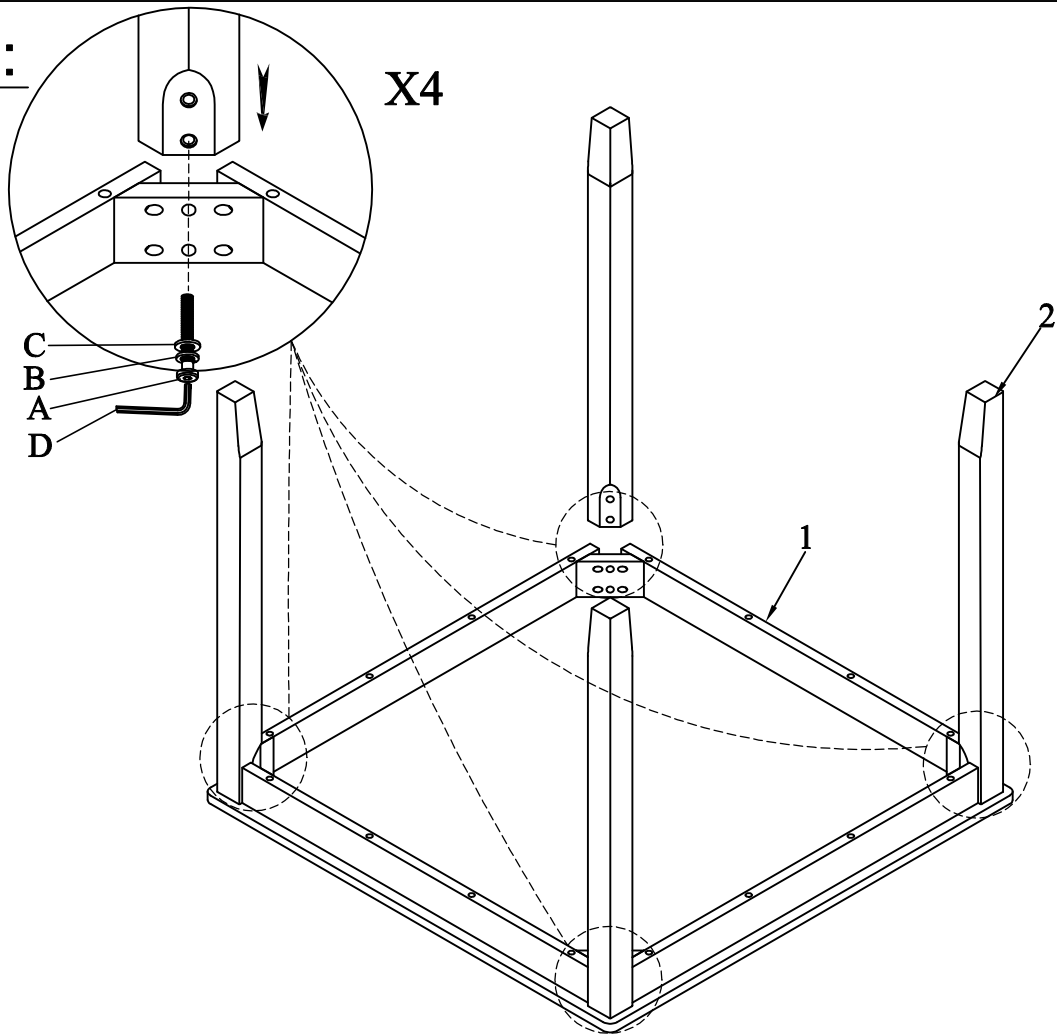


COMPLETED :

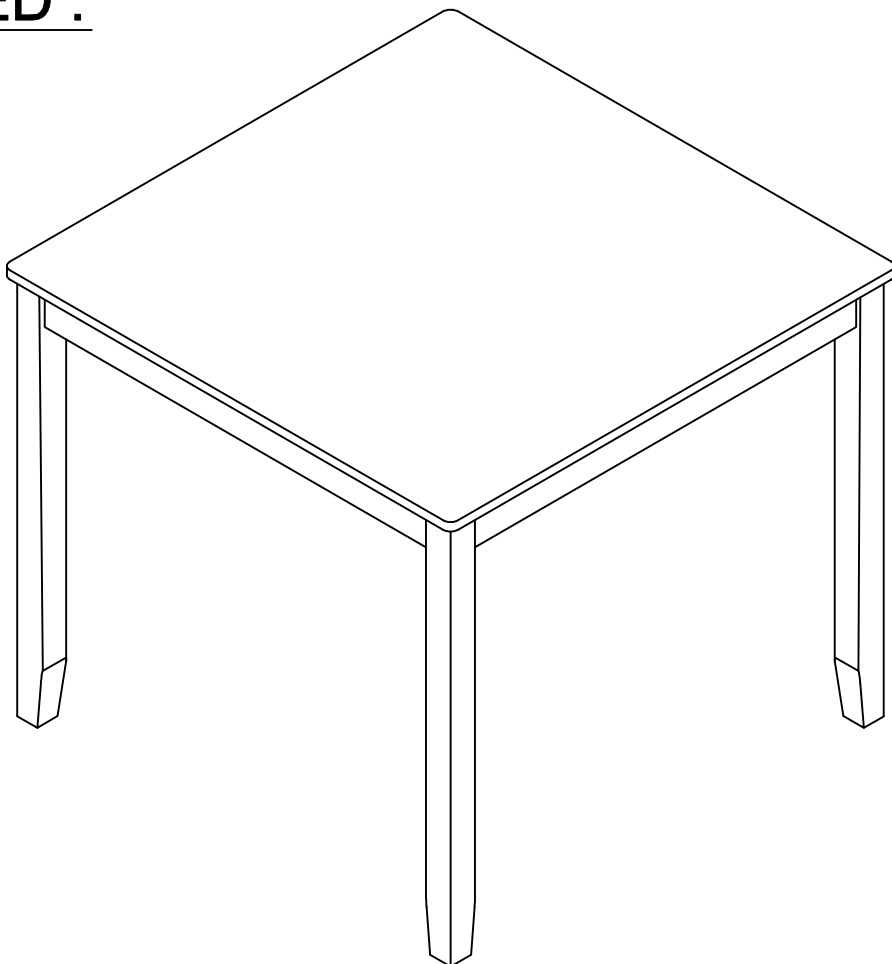 

ASSEMBLY INSTRUCTIONS


 
ITEM NO.FB3052CST-SC-4PK

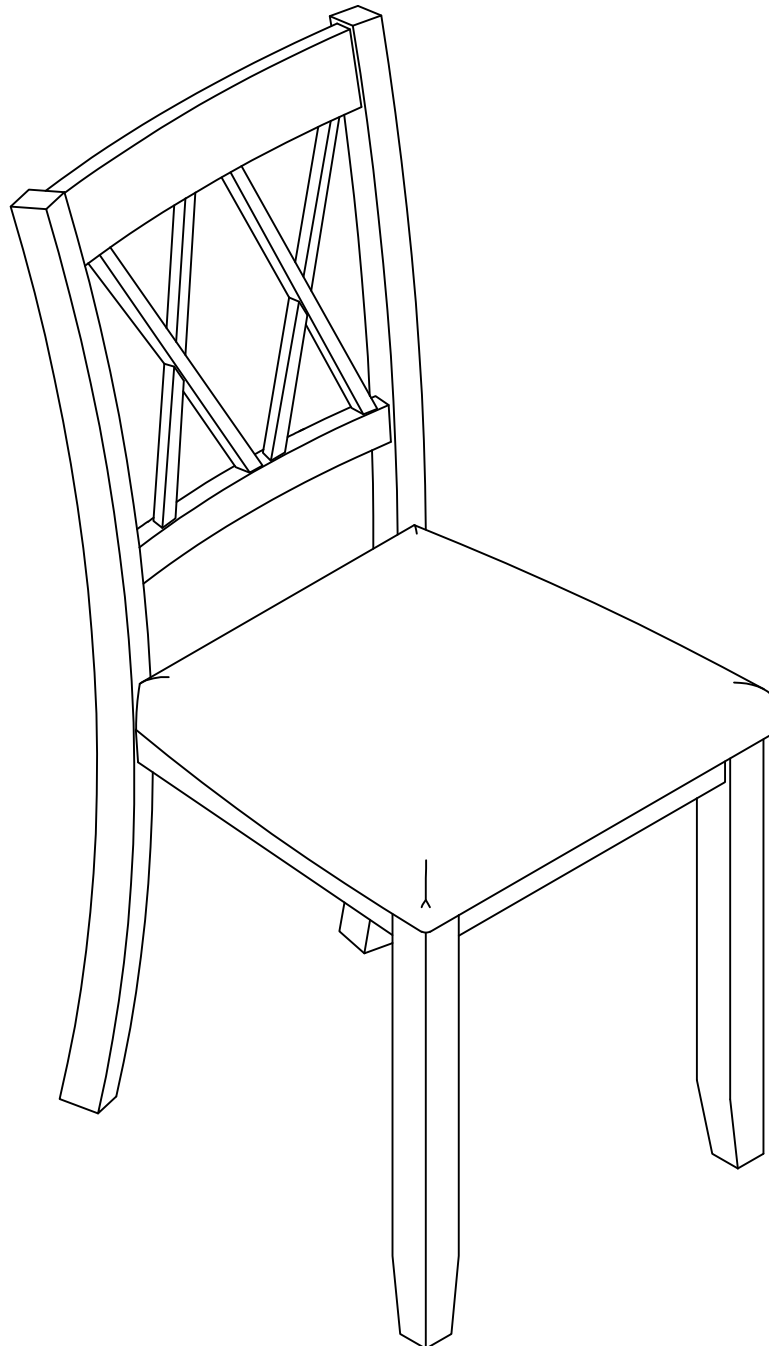


ASSEMBLY TIPS:


1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

  PARTS LIST


NO.	DIAGRAM	PART NAME	Q'Ty
1		CHAIR BACK	1PC
2		WOODEN SEAT	1PC
3		LEG	2PCS

 HARDWARE LIST


NO.	DIAGRAM	PART NAME	Q'Ty
A		BOLT / BOULON Ø1/4" x 1-1/2"	2PCS
B		BOLT / BOULON Ø1/4" x 2-3/8"	4PCS
C		BOLT / BOULON Ø1/4" x 3"	4PCS
D		LOCK WASHER Ø1/4"	10PCS
E		FLAT WASHER Ø1/4" x 19mm	10PCS
F		ALLEN KEY 4mm	1PC

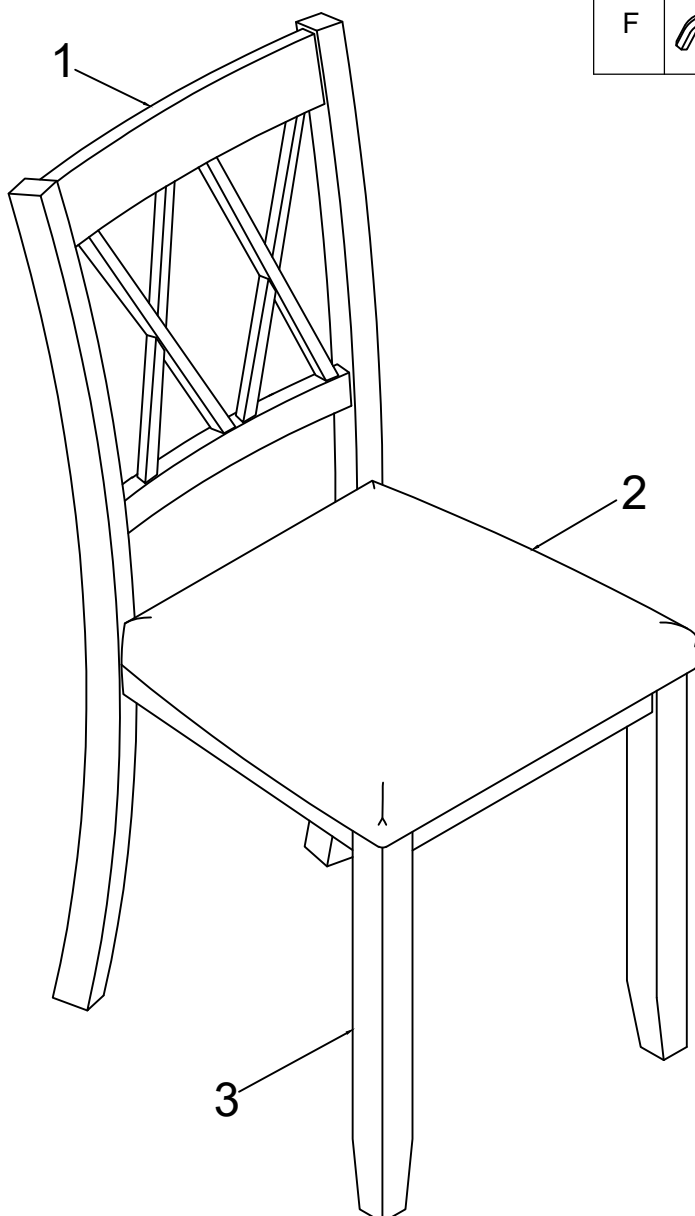 

 STEP 1

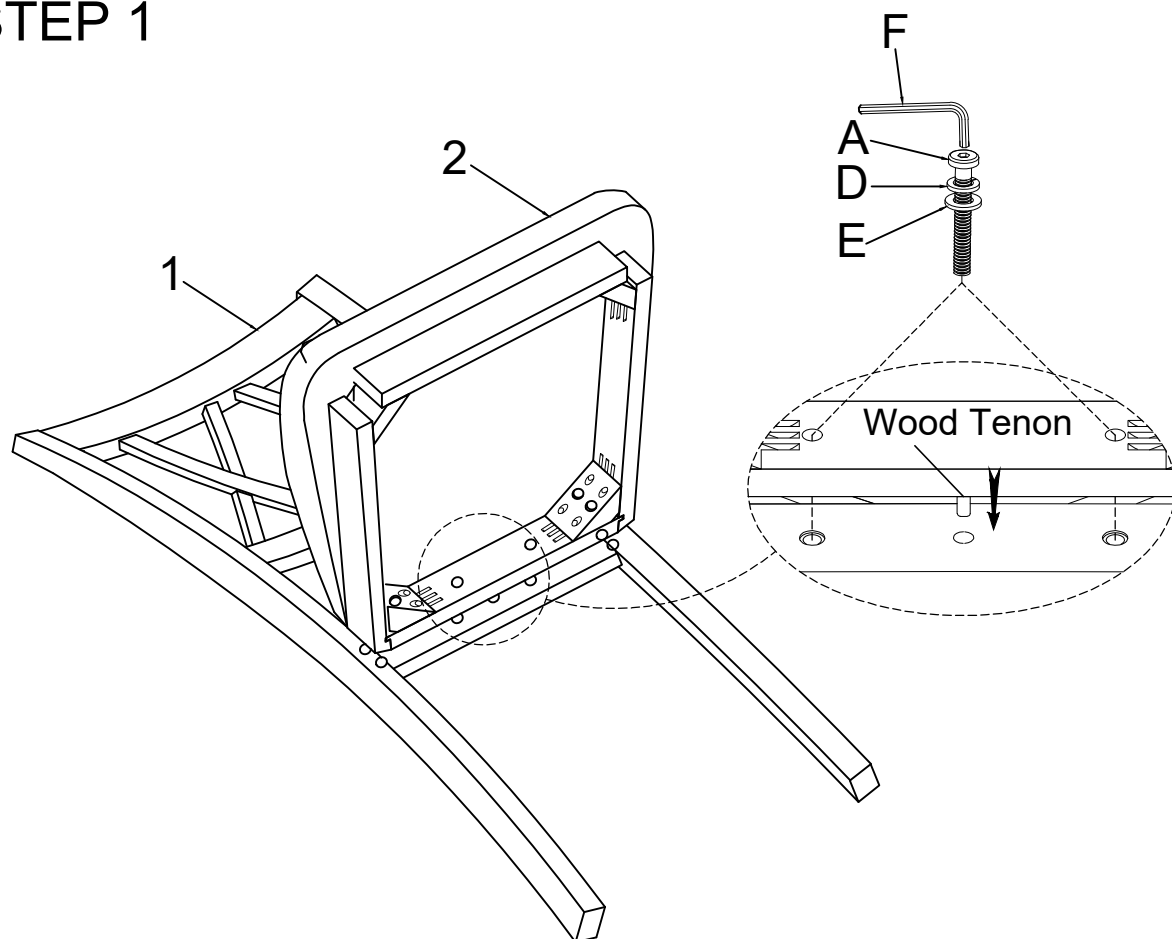


 STEP 2

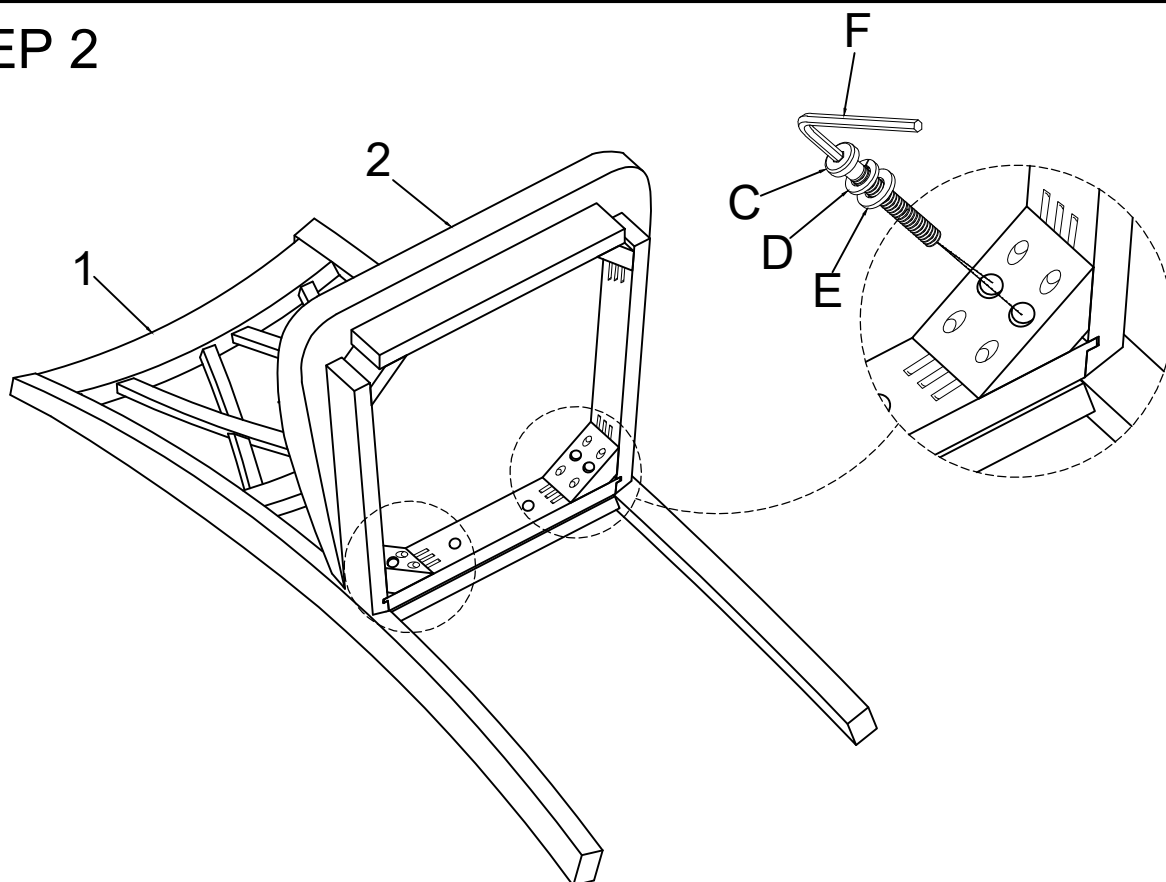


Do not tighten screws until completely assembled.

 STEP 3

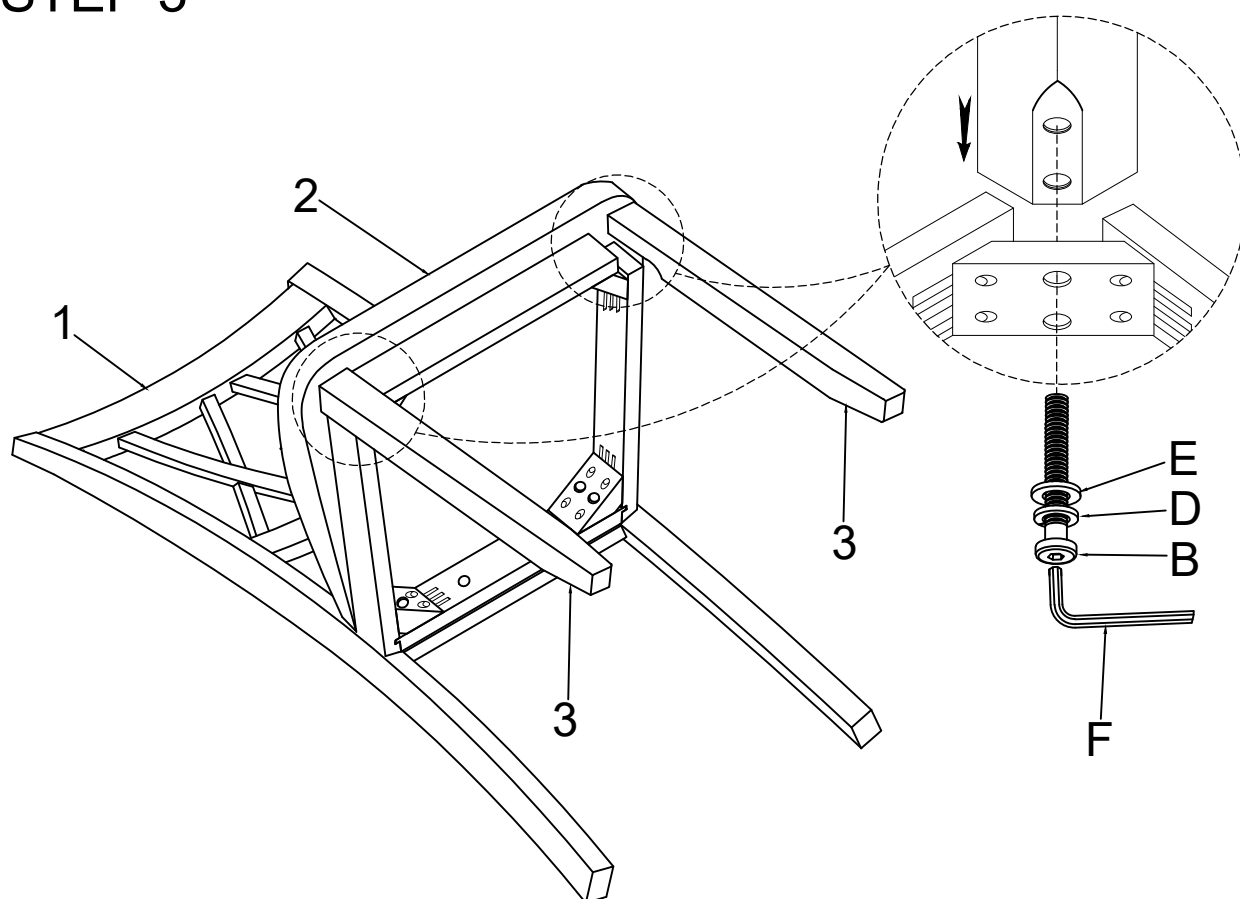

 STEP 4

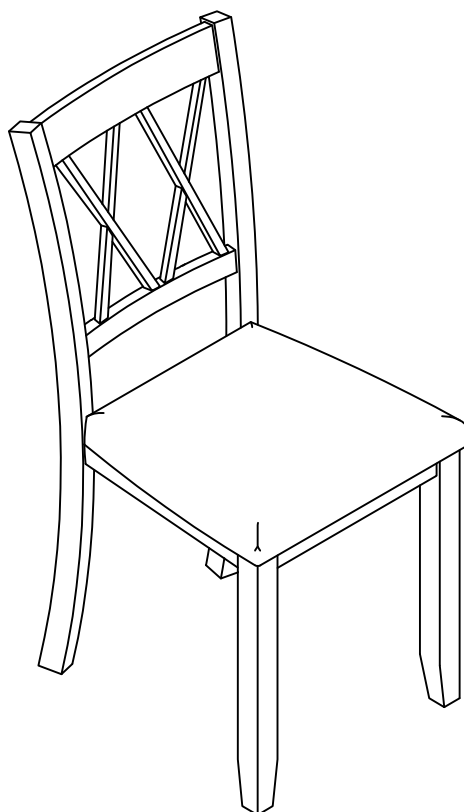

Tighten all screws until completely assembled.