



1. Remove the old sink strainer. Apply plumber's putty around the top of the sink drain hole. Place the strainer body in the sink opening and press down to secure it into position.
2. Place the rubber washer, then the metal washer over the strainer body. Thread on the retainer and tighten the screws.
3. Slide the slip nut onto the flange tailpiece. Place the tailpiece washer on top of the tailpiece and position it under the sink strainer. Tighten the slip nut with a wrench, but do not over tighten it.