


ASSEMBLY INSTRUCTION

N719P293384



 
 
 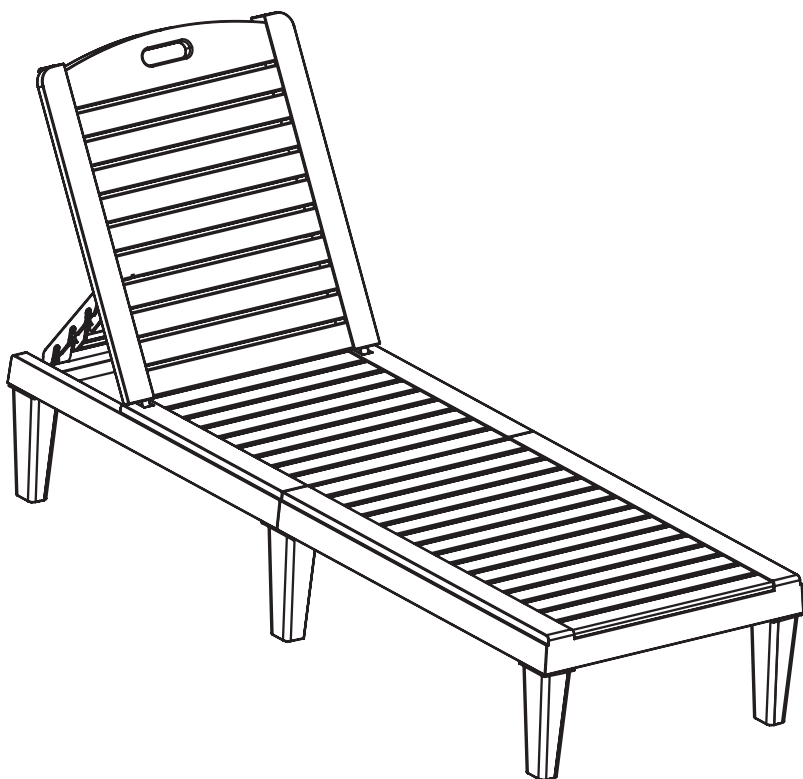


OUTDOOR CHAISE LOUNGE



Warning:


1. Please read these instructions fully before starting assembly. Check you have all the components and tools listed on pages. Keep the instructions for later reference. Parts of the assembly will be easier with 2 people. Seek professional assistance if necessary.
2. Please place all parts on a flat surface. Place a soft blanket or similar underneath to protect against scratches or stains. Avoid dragging or sliding components across the floor.
3. Regularly check all fittings and fastenings to ensure they are secure and to prevent accidents. If any parts are missing, broken, damaged, or worn, discontinue use of the product until repairs have been made using factory authorized parts.
4. Do not allow children to climb on the furniture as this may result in tipping and serious personal injury. Assemble the furniture away from the reach of children.
5. Do not place furniture close to fire sources or high-temperature objects to avoid the risk of fire. Do not place furniture in damp environments to prevent material damage.
6. Clean furniture with a damp cloth or alcohol, avoid using cleaning agents containing corrosive chemicals.
7. This product is equipped with an anti-tilt device. Please be sure to install this device to prevent unnecessary injuries caused by tipping.

PARTS

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
F		X2	CB		X2
B		X2	M1		X8
			M2		X4

ASSEMBLY

 
1




Ⓑ 1pc



ⒸⒷ 1pc

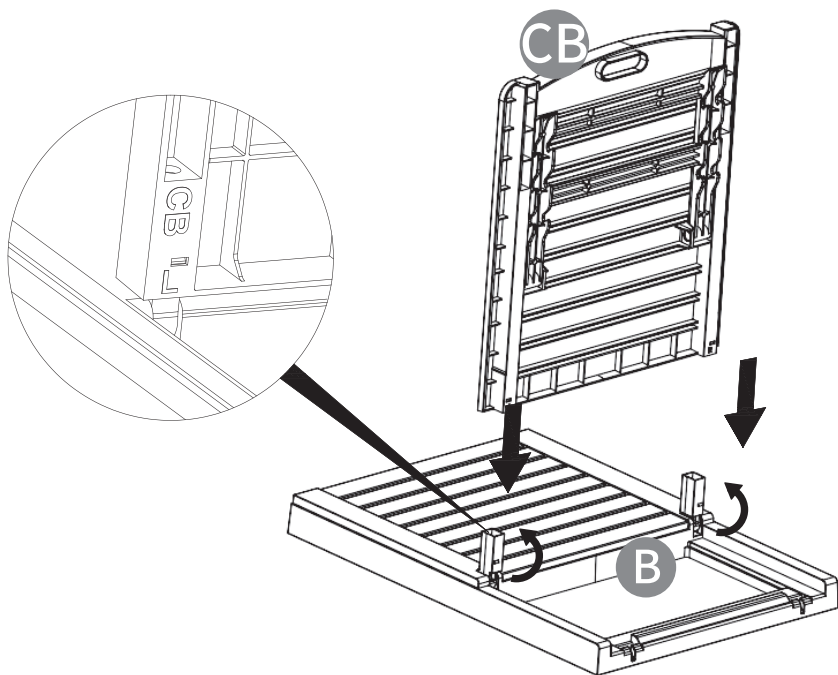

2

 


Ⓕ 1pc



Ⓜ1 4pcs



Ⓜ2 2pcs

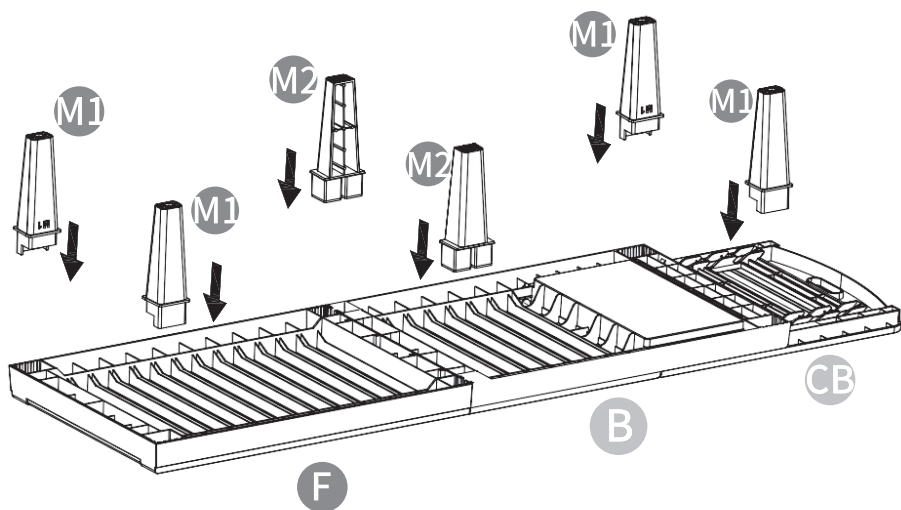


3


X2

Adjust the backrest Angle according to the use requirements.


1

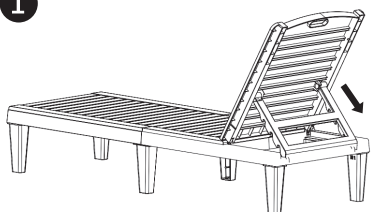


2

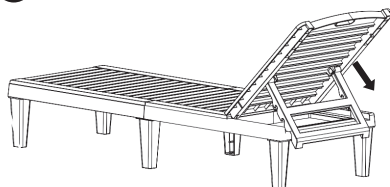

3

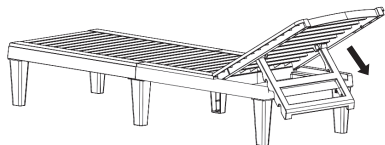

4

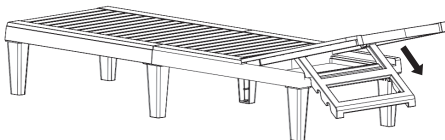

5

