

CARE AND MAINTENANCE

WIPE CLEAN WITH A MILD SOAP AND WATERSOLUTION, RINSE WITH CLEAN WATER,
AND DRY THOROUGHLY.
ALWAYS LET THE UMBRELLA DRY COMPLETELY BEFORE STORING.

NOTICE & IMPORTANT SAFETY INSTRUCTIONS

- *DO NOT use an open umbrella in windy conditions! Close umbrella when not in use.
- *Use a heavy or weighted umbrella base to stabilize the umbrella! Recommended minimum base weight: 66lbs.
- *For your own safety, and to reduce the risk of serious personal injury, the user must read and understand this Use and Care Guide, and assemble each piece only in accordance with these instructions and with the parts and hardware included with the original packaging.
- *Failure to follow these instructions and/or use of tools or hardware not included in the original packaging may lead to improper assembly and/or risk of serious personal injury.

*KEEP PLASTIC BAGS AND SMALL PARTS AWAY FROM CHILDREN. DO NOT USE PRODUCT IF ANY COMPONENT BECOMES DAMAGED.

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Umbrella shade		1X	B	Umbrella pole		1X
C	Umbrella finial		1X				

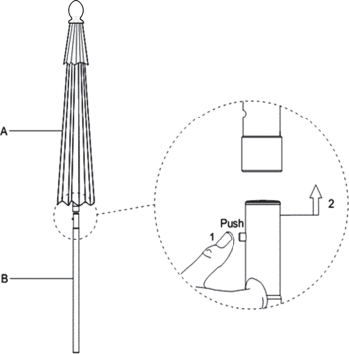
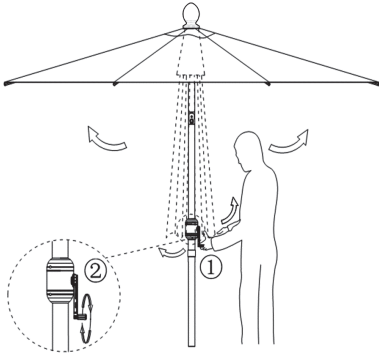
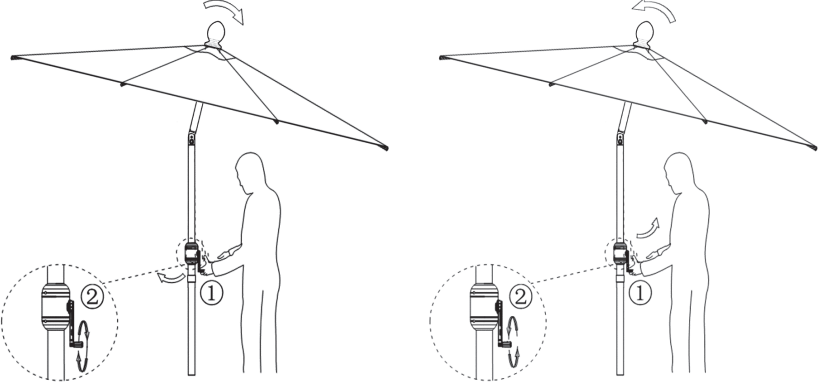
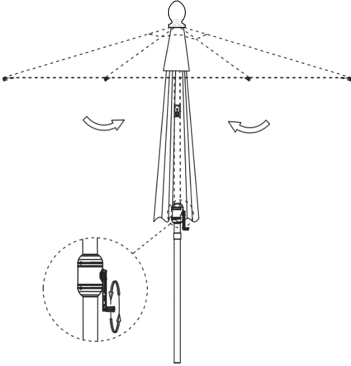


Model# UMB1002
Product Dimensions: 9ft Lx 9ft W x8.3ft L



PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 6 minutes.
If there are any questions relating to defects, missing parts, assembly issues, replacements, or device connectivity issues, please send a detailed email to cs@jonathany.com

		
Step 1: Screw the umbrella finial (C) to the umbrella shade (A)	Step 2: Place the umbrella shade (A) over the umbrella pole (B). Push the tab on the umbrella pole (B) while you slide the umbrella pole (B) into the umbrella shade (A) until the two pieces snap into place.	Step 3 Shake the umbrella fabric before opening the umbrella. Slowly turn the crank clockwise to open the umbrella.
		
Step 4 Continue cranking in clockwise direction to tilt the umbrella shade. Crank counterclockwise to direct the umbrella shade back to the straight-up position.		Step 5 Slowly turn the crank in a counterclockwise direction to close the umbrella.

ENJOY YOUR UMBRELLA