

AFTER INSTALLATION CARE

After your cabinets have been installed, wipe down all exteriors with a damp cloth to remove dust.

Clean Up: Wash WeatherStrong® with water and a soft cloth or sponge. A mild dishwashing liquid can be used if needed. For tougher to clean spots, wash with Simply Green All-Purpose Household Cleaner. A soft bristle brush may be used if needed.

Everyday Care

Salt Water Environments: Oceanfront environments with salt air and sea spray will require regular maintenance and cleaning to prevent rust from forming on the handles, hinges and drawer runners. Clean stainless steel surfaces several times a month to keep the chemical reaction, from the salt, from gaining a foothold on the hardware. With regular cleaning, your cabinets will look like new for many years. To achieve maximum corrosion and stain resistance, the surface of the stainless steel must be kept clean.

Never use abrasive cleaners, scouring pads or powdered cleansers.

Hardware Care

Use mild soap and warm water to clean door, drawer knobs and pulls. Thoroughly dry hardware surfaces after cleaning. Do not use silver or brass polish.

Grill & Side Burner Cabinet Modifications

Grill and side burner cabinets are manufactured with two full upper face plates that will need to be field modified to accept the respective insulated jacket used with the gas grill or side burner.

The second matching panel will be shipped loose for ease of modification and installation. It can be attached with stainless steel screws or a suitable construction grade adhesive. Under no circumstance should a grill or side burner be installed without the appropriate insulated jacket specified by the manufacturer of the appliance.

Heat Appliances

Free-standing grills with adequate space from direct heat are recommended or grills with insulated jacket specified by the grill manufacturer can be installed in WeatherStrong® cabinets.

Insulated jackets are required for heat admitting appliances being installed in WeatherStrong®.

Light Exposure

Cabinet sides and backs that will be exposed to direct sunlight and other weather elements must be covered by a matching end panel in coordinating High-Density Polyethylene (HDPE). Failure to install these protective panels will void the cabinet warranty.

DRAWER REMOVAL



Step 1

Fully open drawer and remove contents.



Step 4

To re-install, align drawer slides and gently push drawer closed. Locking tabs do not need to be pressed.



Step 2

With drawer fully extended, locate slide release tab on left side and push up to release.



Step 5

Open and close drawer several times to ensure proper alignment.



 
Step 3

Locate release tab on right side and push down to release. Pull drawer forward to remove.

ROLL-OUT TRAY RELOCATION/INSTALLATION


Step 1

Install two spacers on each end panel just above the lower hinge. Use two Euro screws per spacer. If applicable, repeat step 1 to install an additional upper roll-out tray above the middle hinge.

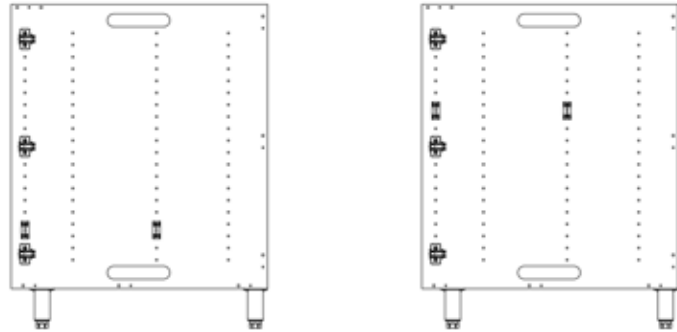


Step 2

 Remove drawer runner from packaging and extend the runners. While pressing down on the white tab pull smaller runner Member (A) apart from larger runner Member (B).

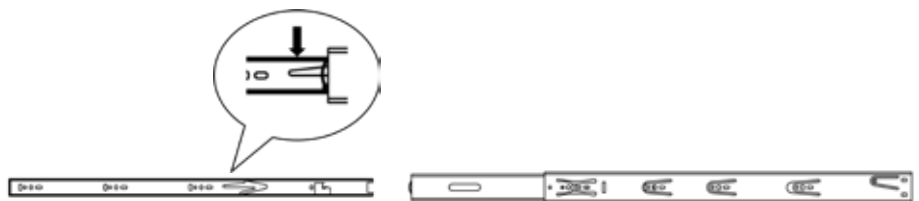


Step 3

 Attach the larger runner Member (B) to the spacers using two Euro screws per runner. Attach the smaller runner Member (A) to the sides of the roll-out tray using two Euro screws. To access the attachment holes, you will need to extend the runner mechanism.

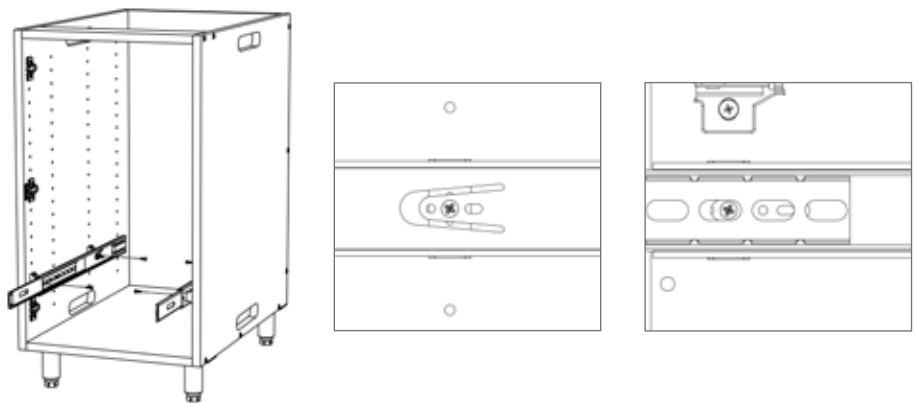

Step 4

 Carefully slide the roll-out tray into the larger runner Members (B) by inserting the smaller Members (A) into the plastic guides at the front of the larger Members. You should hear a 'click' when fully inserted.

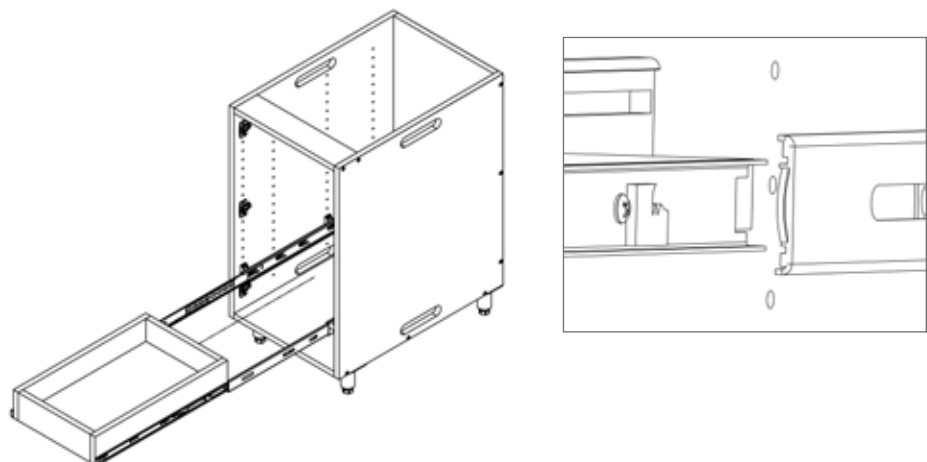

DOOR POSITION ADJUSTMENT



Height

Loosen two screws and adjust door to desired position. Re-tighten all screws.



 
Side to Side

Using a Phillips screwdriver, rotate front screw to move the door to the desired position.




Depth

Using a Phillips screwdriver, rotate back screw to move the door to the desired position.

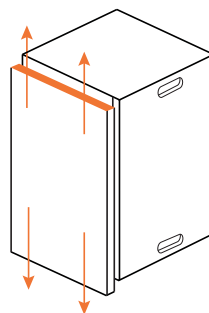


Height

 For vertical door adjustment loosen center screw on each hinge. Set door at desired height. Re-tighten each screw.

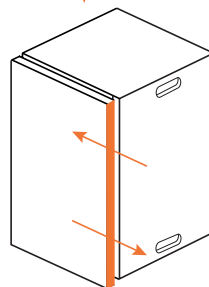

Side to Side

 Rotate front screw for horizontal door adjustment

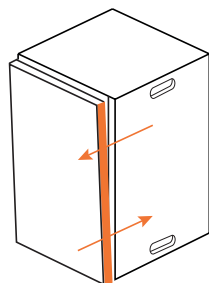


Depth

Rotate back screw for front to back door adjustment



SHELF RESTS

 Adjustable shelves are supported by sturdy, clear polymer shelf rests.

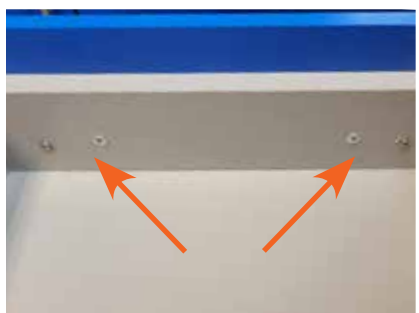

DRAWER FRONT ADJUSTMENT

If additional adjustment is required, loosen screws and twist drawer front for proper alignment. Tighten screws securely.