


KOBALT®

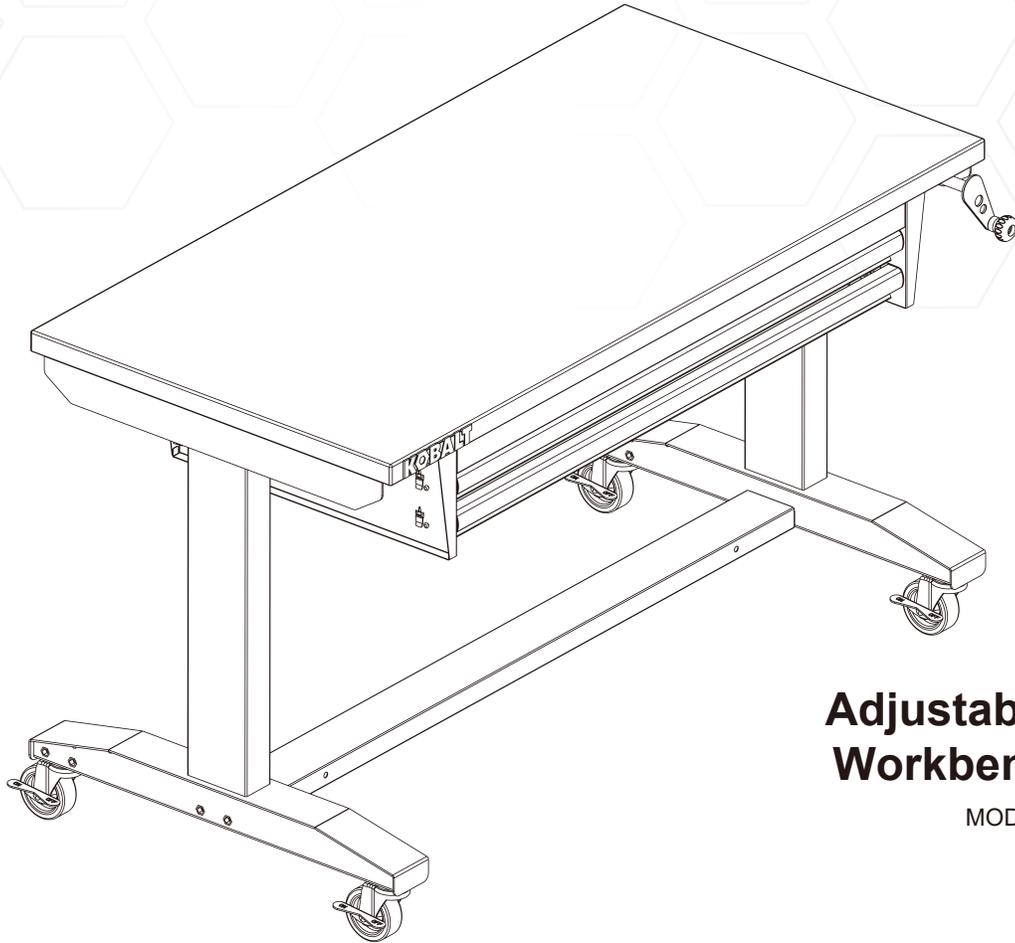

ITEM #6309481

2-Drawer Adjustable Height Workbench Table

MODEL #410-096-0131

Español p. 11

KOBALT and logo design are trademarks or registered trademarks of LF, LLC.
All rights reserved.

ATTACH YOUR RECEIPT HERE

Serial Number _____ Purchase Date _____



Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 888-3KOBALT (888-356-2258), 8 a.m - 8 p.m., EST, Monday - Sunday. You could also contact us at ascs@lowes.com.

TABLE OF CONTENTS

Safety Information	2
Package Contents	3
Hardware Contents	4
Assembly Instructions	5
Operation Instructions	8
Care and Maintenance	9
Replacement Parts List	10

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble or operate this product. Failure to follow may result in serious injury. Save all warnings and instructions for future reference.

WARNING

- Due to the product's weight, it is recommended that 2 or more people help assemble and move this workbench to help reduce the risk of injury.
- Keep the product on a level surface. The product may become unstable and tip if stored or moved on an uneven surface.
- Keep the locking caster brakes set unless you are moving the cart. This will help to prevent the product from rolling.


CAUTION:

- Check screws and bolts periodically for tightness.
- Do not let children approach the tool cart.
- Do not lift this product directly with a forklift or tow with any mechanical devices.
- Do not exceed the maximum product weight, including contents.
Do not exceed the maximum weight for each drawer. See Specifications on page 4.
- Only transport this product when empty. Properly secure when transporting.
- Do not alter this product in any manner as it will void the warranty.

DANGER:

- Do not stand on this product. You may fall or cause the product to tip.
- Do not move the product prior to closing and locking all the drawers. The drawers could come open and make the product unstable and tip.
- Do not mount this product on a truck bed or any other moving object.
- Do not open more than one drawer at a time.

PACKAGE CONTENTS

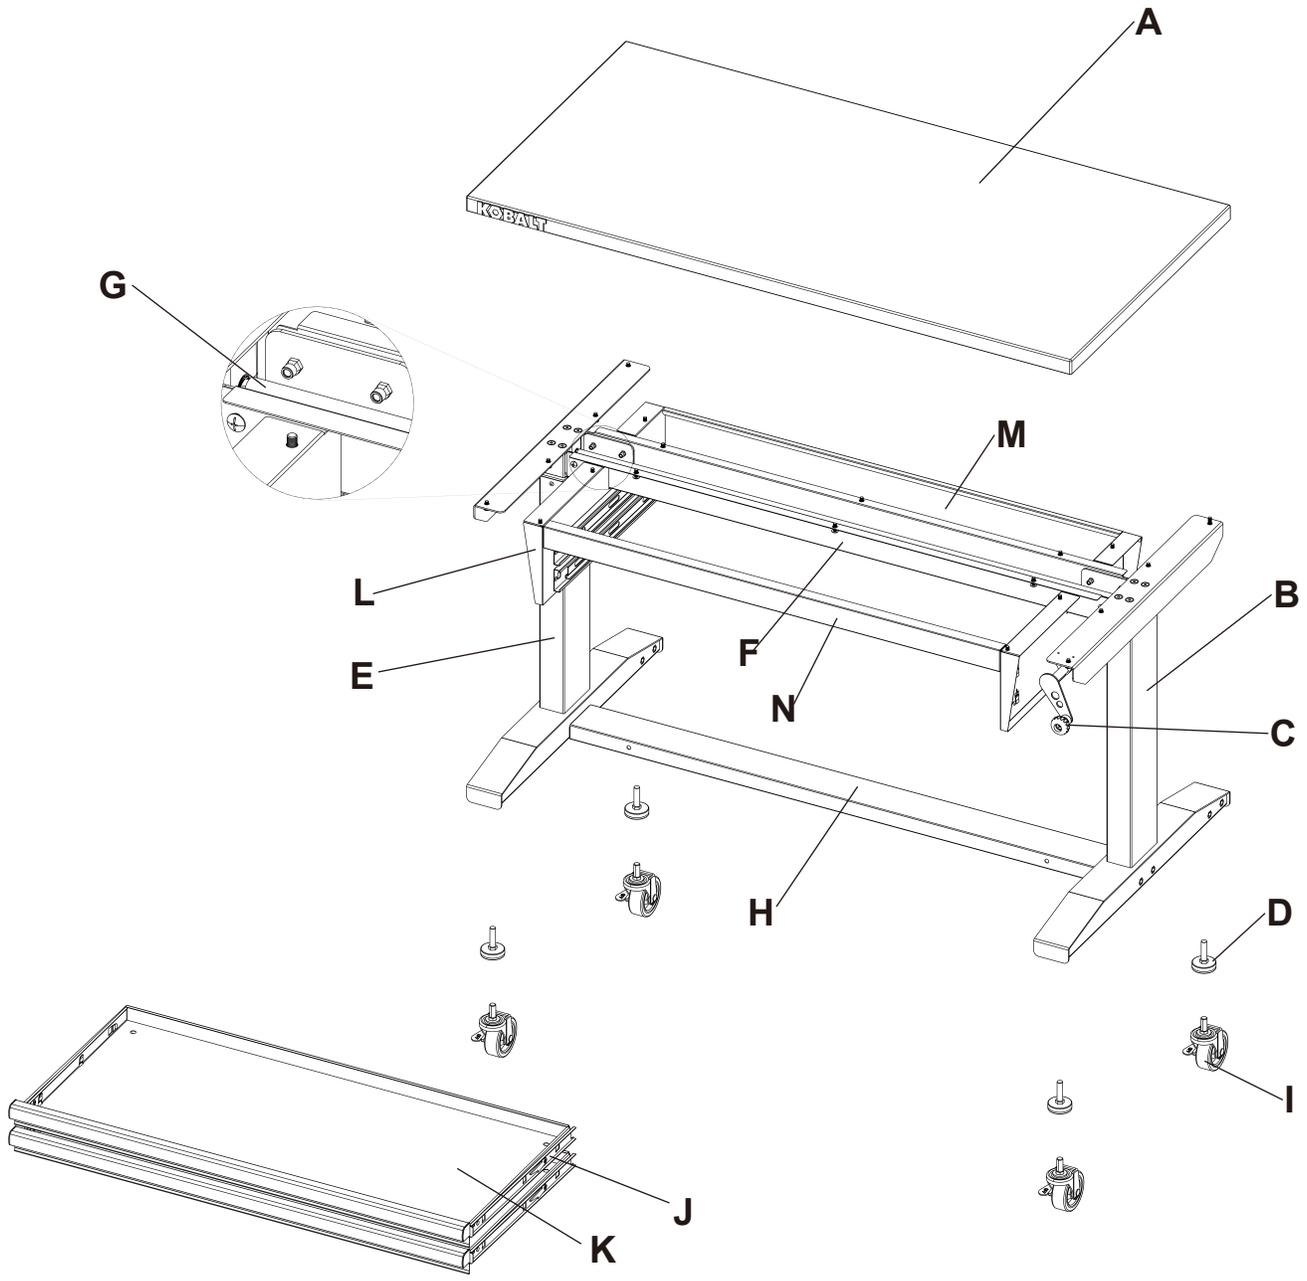

PART	DESCRIPTION	QUANTITY
A	Wood Top	1
B	Leg (Right)	1
C	Crank Handle	1
D	Leveling Feet	4
E	Leg (Left)	1
F	Top Rail	1
G	Rotating Rod	1

PART	DESCRIPTION	QUANTITY
H	Stability Bar	1
I	Caster	4
J	Drawer Slide (Pair)	2
K	Drawer	2
L	Drawer Side Panel	2
M	Back Panel	1
N	Front Panel	1

 
HARDWARE CONTENTS

TOOLS REQUIRED



HARDWARE INCLUDED

NOTE: Hardware not shown to actual size.




PART	DESCRIPTION	QUANTITY
AA	Screw M6 x 15L	38
BB	Bolt M8 x 25L	4
CC	Washer M8	4
DD	10-14mm Wrench	1

PRODUCT SPECIFICATIONS

COMPONENTS	SPECIFICATIONS
Maximum Capacity (Drawer)	35 lbs.
Maximum Capacity	300 lbs.

Note:

Begin product assembly close to the final intended location of your workbench. This product is heavy and may be difficult to move after assembly.

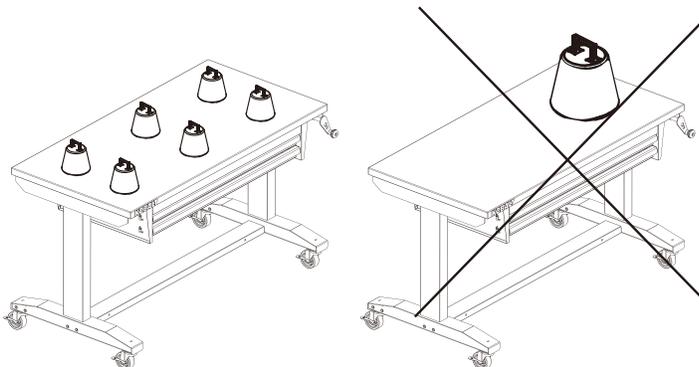


ASSEMBLY INSTRUCTIONS


1. While unpacking the unit, you can leave the workbench wood top (A) inside the original packaging to prevent the top from being scratched during assembly.
2. Determine the front and back of the top before starting. The front of the wood top (A) has the Kobalt badge on the edge.
3. Attach the right leg (B) to the wood top (A) as shown using four M6 x 15L screws (AA). Be sure that the rotating mechanism faces the inside of work table.

Note:

Do not overtighten the screws into the wood top to avoid damaging the wood top.

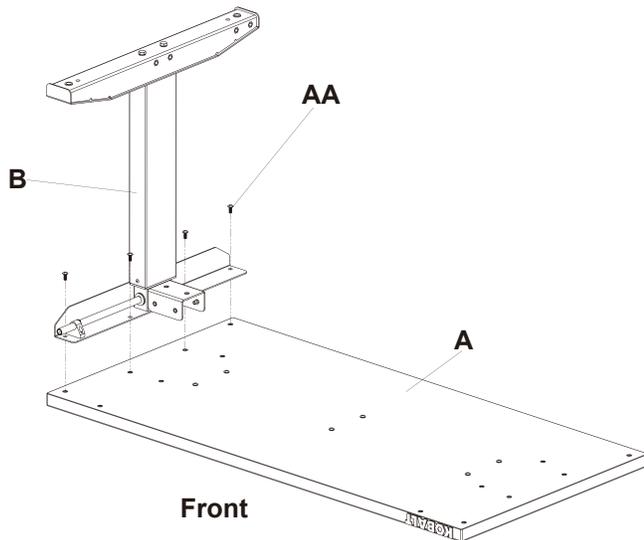


4. Attach the rotating rod (G) to the rotating mechanism in the leg (B).

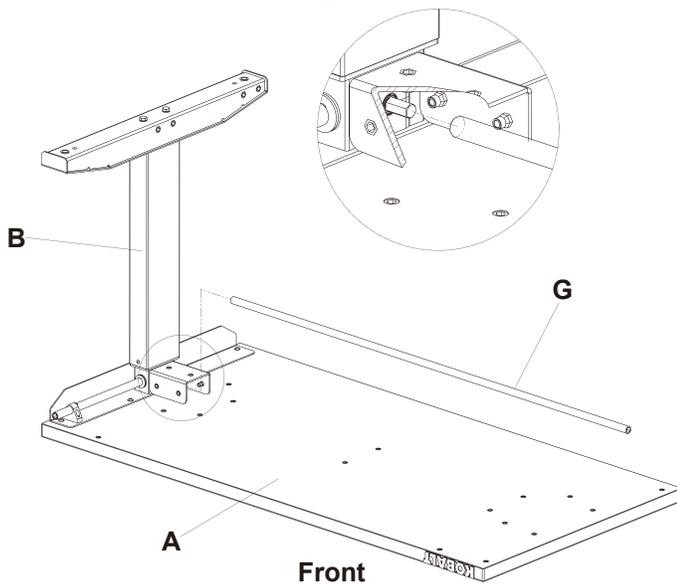


Note:

Do not turn the rotating rod yet to ensure that the leg remains at its lowest level.


5. Attach the left leg (E) to the wood top (A) using four M6 x 15L screws (AA). Finger tighten only. Be sure that the rotating rod (G) clicks into the leg (E).

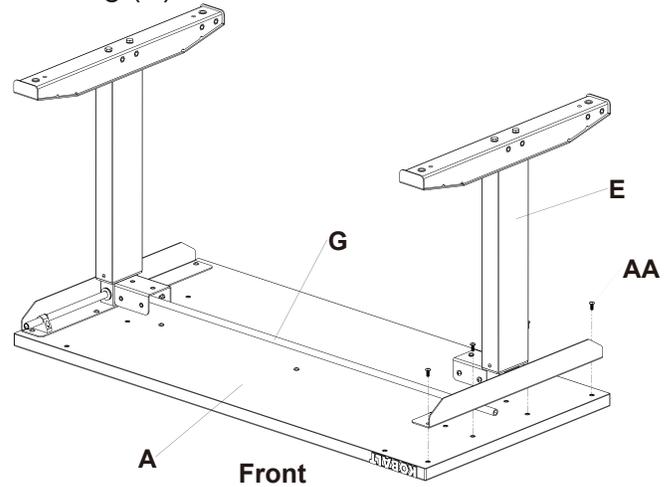

6. Attach the top rail (F) to the wood top (A), leg (B), and leg (E) using eighteen M6 x 15L screws (AA). Do not overtighten the screws.

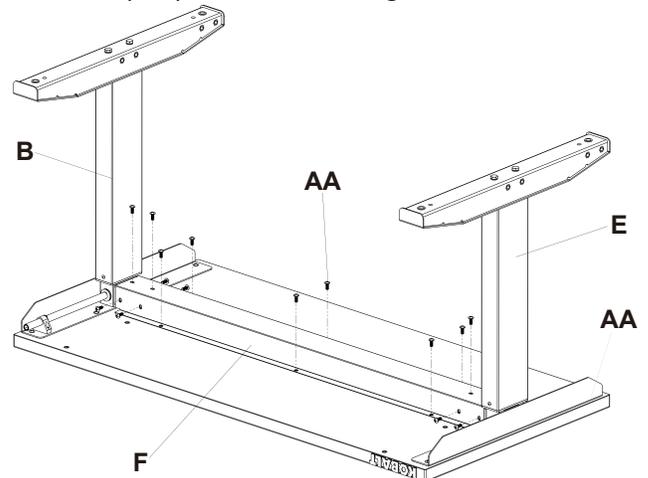


- 7a. Option 1: Attach the stability bar (H) to the bottom of the leg (B) and leg (E) using four M8 x 25L bolts (BB) and four M8 washers (CC). Finger tighten only. The support rail can attach in the middle or rear of the legs. Attach it at your desired position. See step 7b for Option 2.

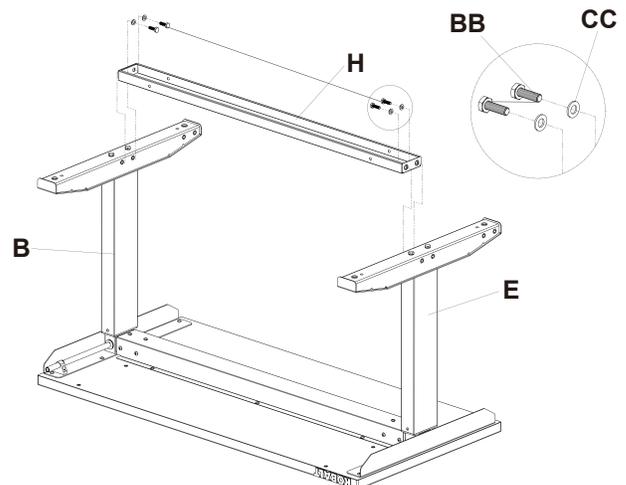

ASSEMBLY INSTRUCTIONS

- 7b. Option 2: Attach the stability bar (H) to the bottom of the leg (B) and leg (E) using four M8 x 25L bolts (BB) and four M8 washers (CC). Finger tighten only.

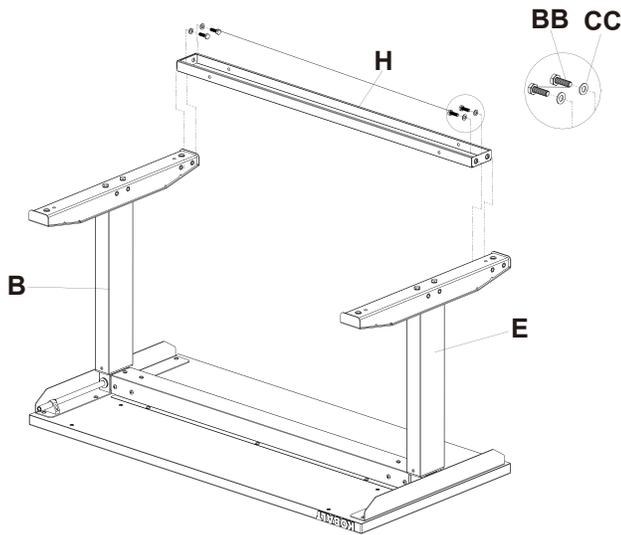


8. Square the workbench and then securely tighten all fasteners with a wrench (DD).


Note: Use caution to not overtighten.

9. Screw the four leveling feet (D) or casters (I) all the way into the leg assemblies to the maximum depth. Some adjustment may be necessary after the workbench is in the desired location to properly level and use the product.


Caster installation

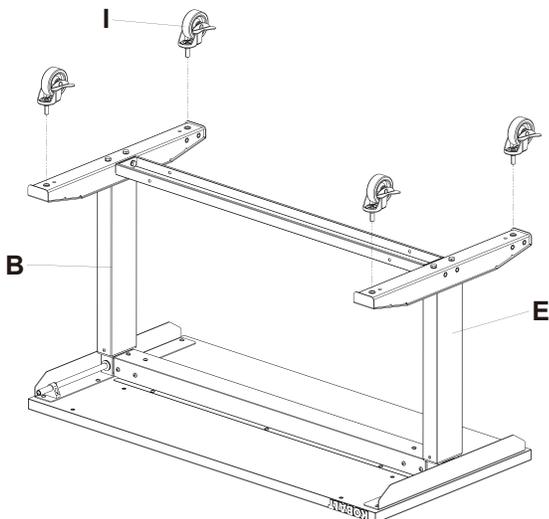


Leveling feet installation

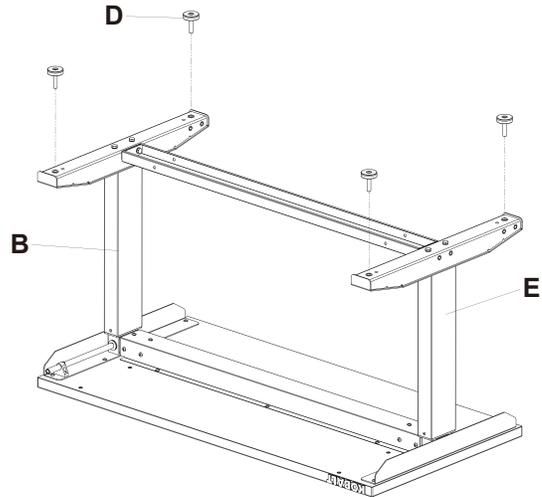

10. Attach the drawer side panel (L) to the wood top (A) for two sides as shown by using three screws (AA) for each side.

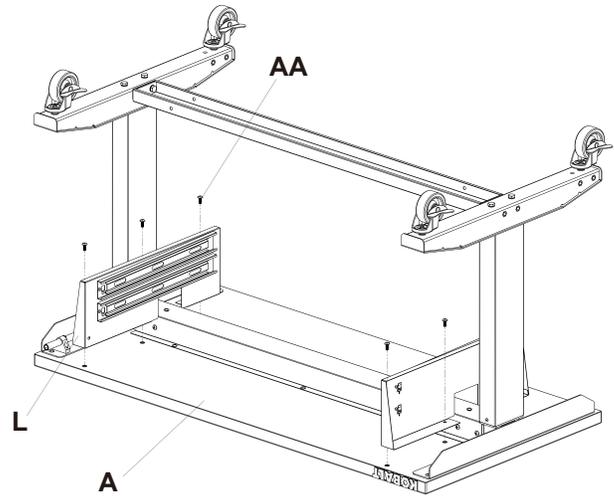


11. Attach the back panel (M) to the drawer side panels (L) by using two screws (AA) for each side.

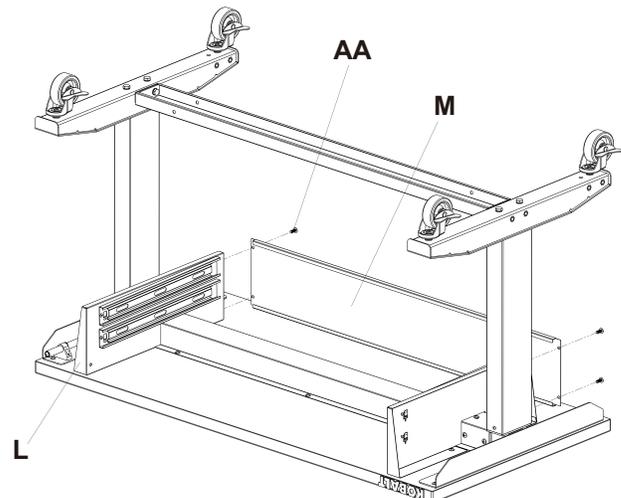

ASSEMBLY INSTRUCTIONS


12. Attach the front panel (N) to the drawer side panels (L) by using one screw (AA) for each side.

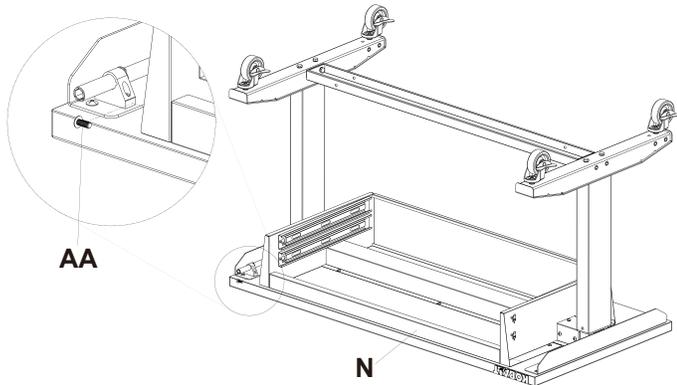

13. Using two or more people, stand the workbench in its upright position.


14. Install the drawers using the steps below

- Pull the slides and slide carrier out until fully extended.
- Hold the slide on the cabinet while aligning it with the slide on the drawer.
- Slightly insert one side and repeat for the other side.
- Slowly push the drawer until it is fully closed to engage the slide.
- Open the drawer and close it to verify proper operation.

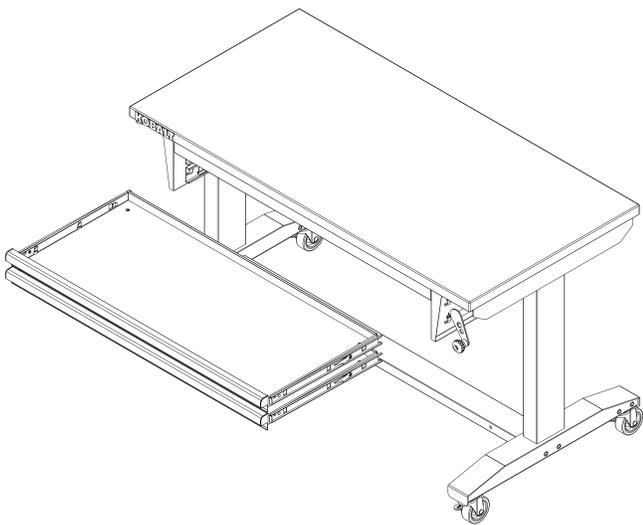


14. Remove the drawers using the steps below

- Fully extend and empty the drawer.
- Depending on the slide, either lift or lower the release lever on both sides so the slides can ride over the stops.
- Pull out to remove.

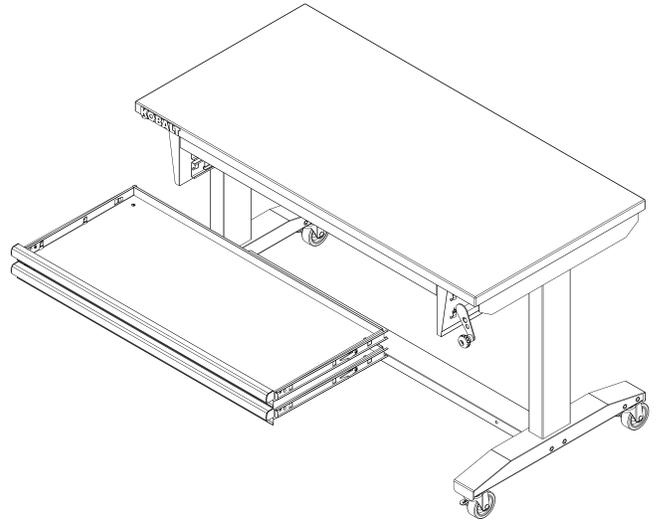

16. Install the crank handle (C) into the shaft in the corner below the wood top as shown.

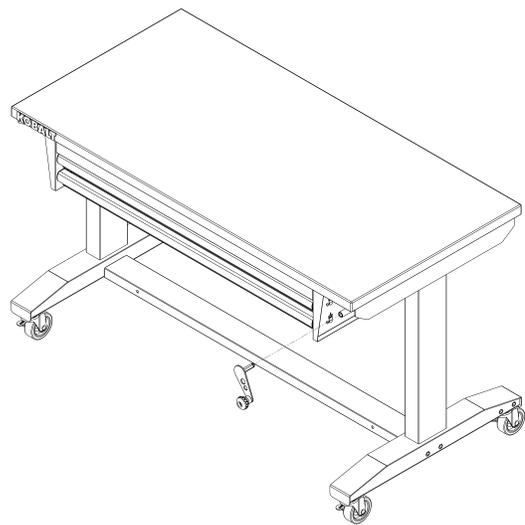


OPERATION INSTRUCTIONS

1. Leveling Foot Adjustment

Important: Ensure there is no weight on top of the workbench when leveling.


- Adjust each leveling foot (D) to the desired elevation with a wrench (DD) as shown.
- Turn the lock nut counterclockwise to elevate and clockwise to lower the leveling foot.

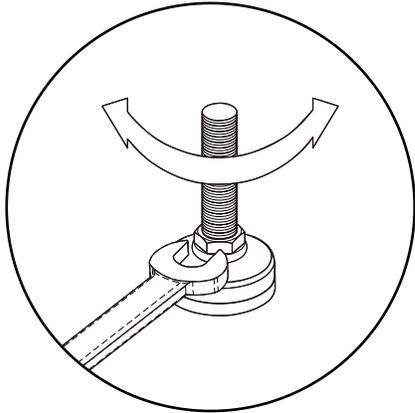

2. Height Adjustment


Note: Some minor squeaking is normal when operating the crank. Lubrication is not needed.

- Insert the crank handle (C) into the shaft and align it in the hole until it is engaged.
- To raise the table, turn the crank handle counterclockwise to the desired height.
- To lower the table, turn the crank handle clockwise until it reaches the desired height.
- To avoid damage, do not keep turning the crank handle once it has rested at its highest or lowest position.

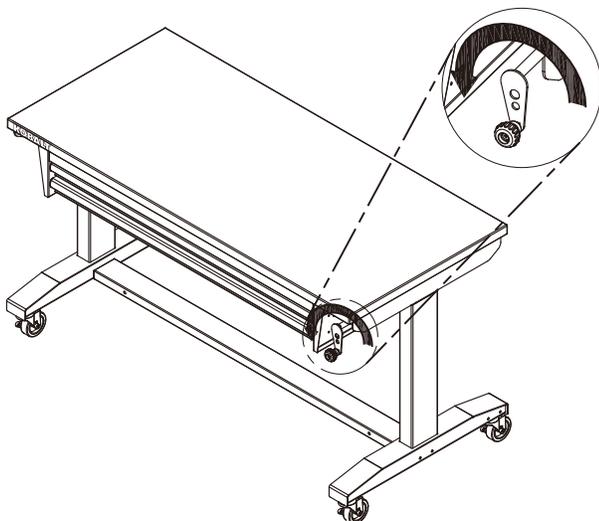

CARE AND MAINTENANCE

- Keep the product in good repair by adopting a regular maintenance program.
- Grease the casters annually using high quality bearing grease.
- Lubricate the slides semi-annually with general purpose grease or equivalent.
- Periodically clean the drawer fronts, drawer trim, and other surfaces with a mild detergent and water.
- Remove grease and oil with a standard nonflammable cleaning fluid.

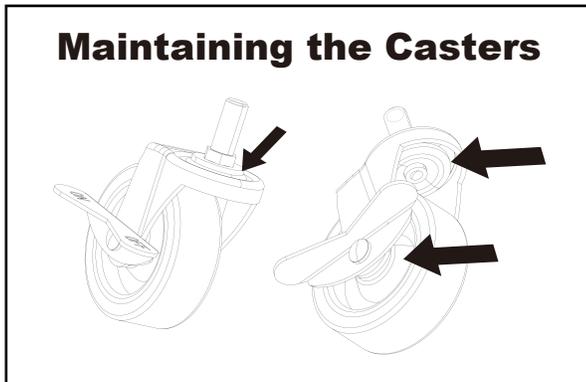


3-YEAR HASSLE-FREE WARRANTY

For 3 years from the date of purchase, this product is warranted for the original purchaser to be free from defects in material and workmanship. This guarantee does not cover damage due to abuse, normal wear, improper maintenance, neglect, unauthorized repair/alteration, or expendable parts and accessories expected to become unusable after a reasonable period of use.

If you think your product meets the above guarantee criteria, please call our customer service department at 888-3KOBALT (888-356-2258), 8 a.m. - 8 p.m., EST, Monday - Sunday. You could also contact us at ascs@lowes.com, or return the item to the place of purchase with a copy of the original sales receipt. The distributor will, at its option, repair or replace the product. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 888-3KOBALT (888-356-2258), 8 a.m. - 8 p.m., EST, Monday - Sunday. You could also contact us at ascs@lowes.com.

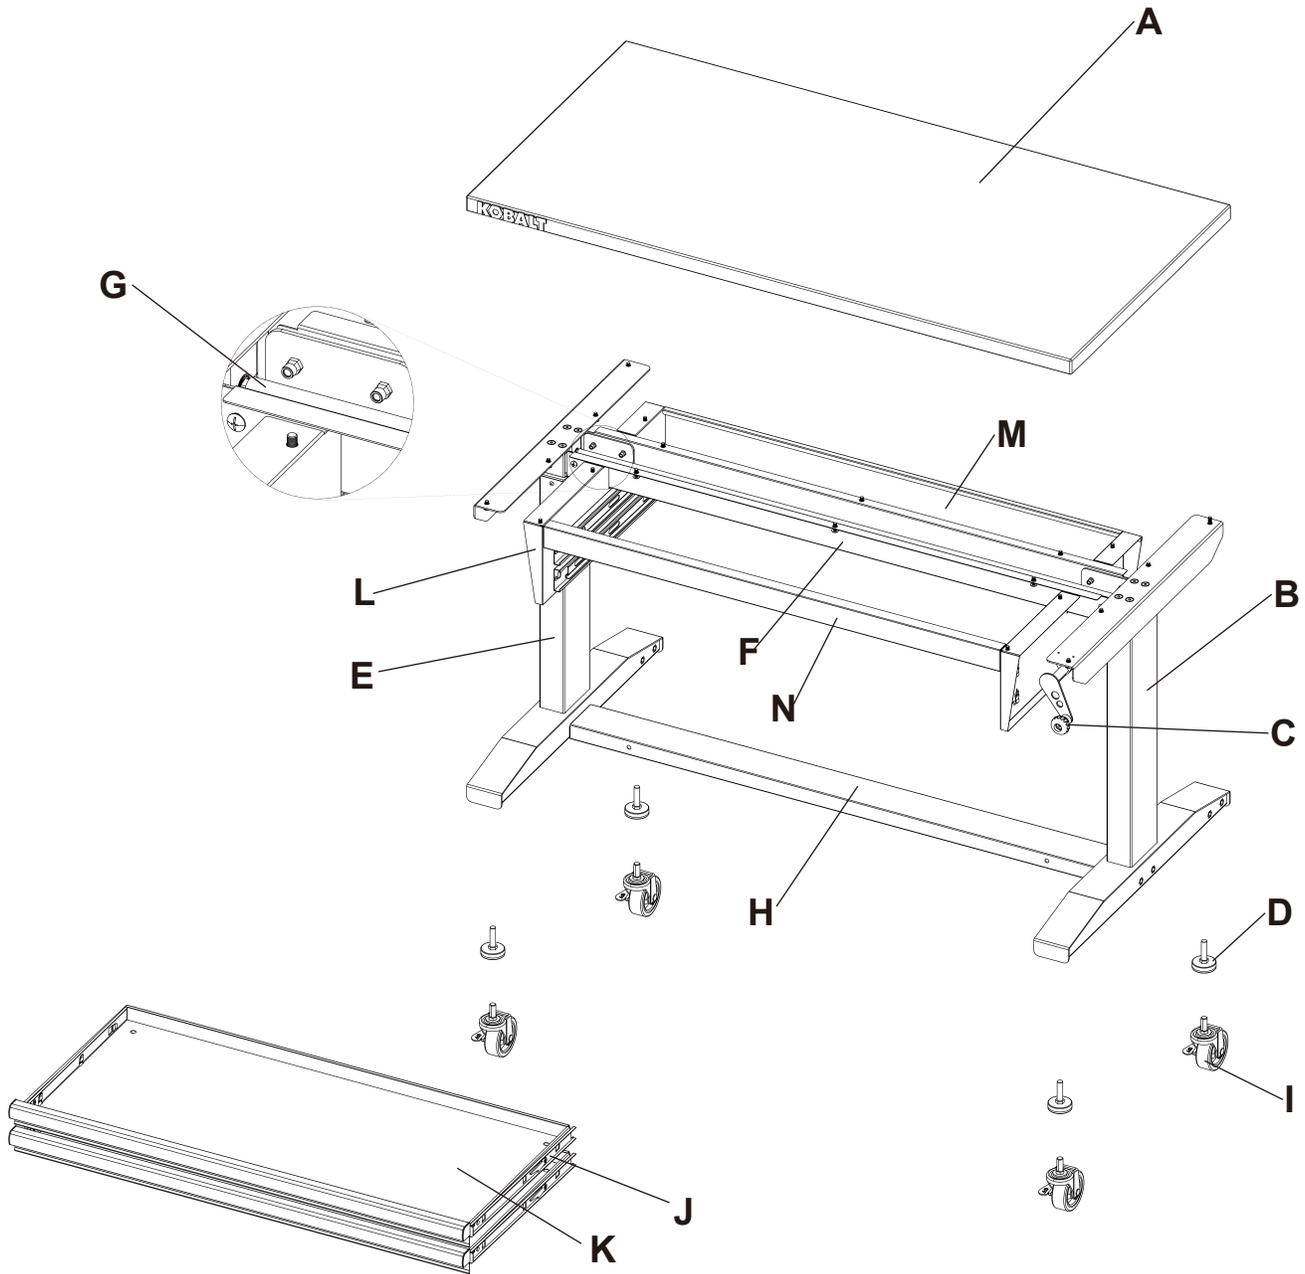

PART	DESCRIPTION	QUANTITY
A	Wood Top	1
B	Leg (Right)	1
C	Crank Handle	1
D	Leveling Feet	4
E	Leg (Left)	1
F	Top Rail	1
G	Rotating Rod	1

PART	DESCRIPTION	QUANTITY
H	Stability Bar	1
I	Caster	4
J	Drawer Slide (Pair)	2
K	Drawer	2
L	Drawer Side Panel	2
M	Back Panel	1
N	Front Panel	1

Printed in Cambodia