 



KLAUS THE DRUMMER NUTCRACKER STATUE FC-247

Read this manual carefully before use and save it for future reference.

TOOLS REQUIRED (NOT INCLUDED)







 REQUIRES (4) 'AA' BATTERIES (BATTERIES NOT INCLUDED)



INSTALLING & CHANGING BATTERIES

    1. Make sure the power buttons are turned to the 'OFF' position.
2. Use a Philips screwdriver to loosen the screws on the battery housing covers.
3. Gently remove the battery housing covers.
4. Paying attention to the positive and negative terminals, gently insert two 'AA' batteries (not included) into each battery housing.
5. Place the covers over the battery housing and fasten the screws.
6. Press the power buttons to turn the lights on.

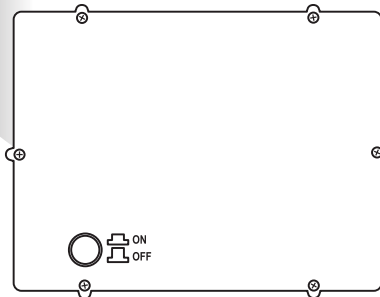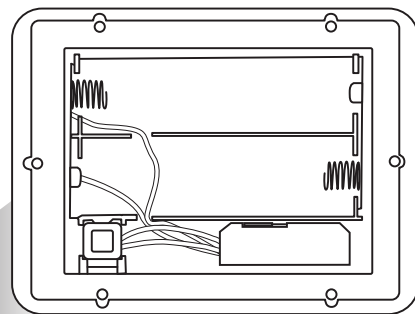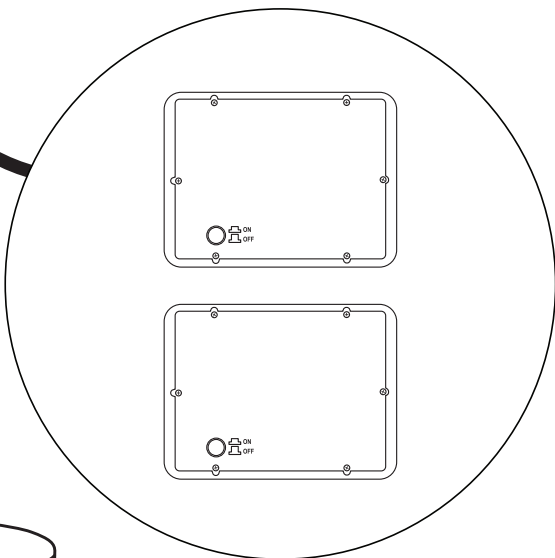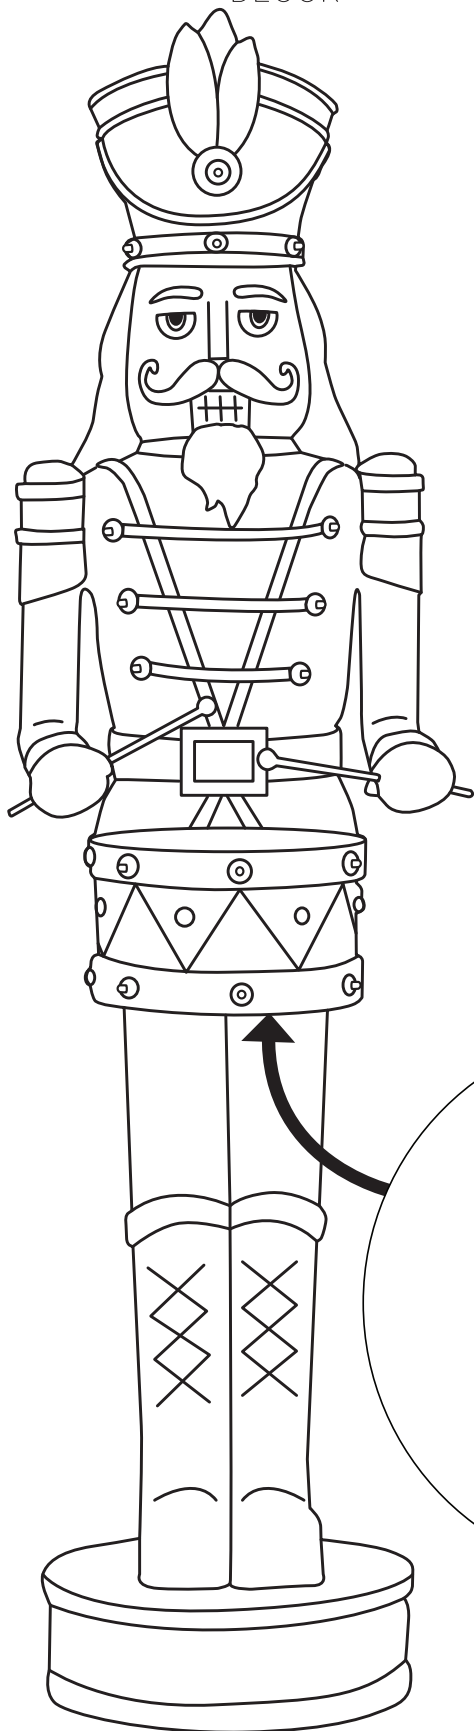

BATTERIES NOT INCLUDED

General Use & Care

SAFE USE: Only use on a flat, level surface. Although the statue is sturdy, avoid locations with high winds that could blow the statue over.

EXPOSURE: Over time, sunlight and weather elements may degrade and change the color of the finish. To preserve the quality of the statue, use indoors or place in a covered outdoor area.

STORAGE: Store indoors in a cool, dry place when not in use. Covering while in storage is recommended to help prevent dust build-up.

CLEANING: Clean the statue every few weeks to keep it dust and debris free.

Cleaning

Do not use harmful additives or abrasive materials to clean any part of this unit.

Do not submerge the unit in water.

- Ensure the power button is turned to the 'OFF' position before cleaning.
- Gently dust with a soft, dry cloth or a clean feather duster.
- Use a slightly damp cloth to wipe away stubborn stains.

Troubleshooting

- Ensure the power button is turned to the 'ON' position.
- Make sure the batteries are installed correctly, observe polarity, and ensure contact is good.
- Install new batteries (not included). Do not mix old and new batteries.
- Do not use rechargeable batteries.

SAFETY STATEMENTS & WARNINGS

- For decorative purposes only. This item is not a toy.
- Do not use harsh chemicals or abrasive materials to clean the statue.
- Remove batteries if unit is being stored or if it will not be used for long periods of time.
- Promptly remove expelled batteries. Do not mix old and new batteries. Mixing batteries could cause leakage of the acid inside batteries, damaging the unit.
- Do not use rechargeable batteries.
- Lights are not replaceable.
- Manufacturer is not liable for damage or personal injury caused by improper use, inadequate maintenance or neglect of this product.

Any modification to the product or failure to follow recommended care will void the product warranty.

WARNING!

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.